



OT-305
OT-505
OT-508

ALCATEL
mobile phones

www.alcatel-mobilephones.com

ALCATEL
mobile phones

Table of contents.....

Safety and use4

General information.....9

1 Your mobile.....11

- 1.1 Keys12
- 1.2 Main screen icons14

2 Getting started16

- 2.1 Set-up16
- 2.2 Power on your phone18
- 2.3 Power off your phone18

3 Calls19

- 3.1 Making a call19
- 3.2 Calling your voicemail19
- 3.3 Receiving a call20
- 3.4 During the call21
- 3.5 Conference calls22
- 3.6 Line switching (ALS)22

4 Menu.....23

5 Directory24

- 5.1 Consulting your directory24
- 5.2 Adding a contact26
- 5.3 Available options26

6 Messages28

- 6.1 Messages: Text/Multimedia message28
- 6.2 Voice message30
- 6.3 Voicemail30
- 6.4 Settings30

7 Settings32

- 7.1 Color32
- 7.2 Display32
- 7.3 Clock33
- 7.4 Keys34
- 7.5 Home screen34
- 7.6 Call register35
- 7.7 More settings...38

8 Bluetooth™41

9 Tools.....43

- 9.1 Calendar43
- 9.2 Alarm43
- 9.3 Calculator43
- 9.4 Converter44
- 9.5 Voice memo44
- 9.6 Fake call45
- 9.7 Memory status45
- 9.8 My shortcuts45

10 WAP.....46

- 10.1 Homepage46
- 10.2 Bookmarks46
- 10.3 Recent pages46
- 10.4 Offline pages46
- 10.5 Go to URL46
- 10.6 Profiles46

11 File manager48

- 11.1 My audios48
- 11.2 My images48
- 11.3 My creations49
- 11.4 Unknown files49
- 11.5 Managing audios and images49
- 11.6 Formats and compatibility50
- 11.7 Memory card51
- 11.8 Memory status51

12 Music Player	52
12.1 Music	52
12.2 Settings	53
13 FUN	54
13.1 Games	54
13.2 FM radio	54
13.3 File manager	55
13.4 Music player	55
14 Camera	56
14.1 Access	56
14.2 Camera	56
15 Profiles	58
15.1 General	58
15.2 Vibration	59
15.3 Outdoor	59
15.4 Silence	59
15.5 Flight mode	59
16 Latin input mode	60
17 Telephone warranty	64
18 Accessories	66
19 Troubleshooting	67

Safety and use

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• **TRAFFIC SAFETY:**

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.

When driving, do not use your phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from mobile phone RF energy.

• **CONDITIONS OF USE:**

You are advised to switch off the telephone from time to time to optimise its performance.

Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the phone, you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" mode because the amplified volume might cause hearing damage.

Do not let children use the phone and/or play with the telephone and accessories without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc). The manufacturer's recommended operating temperature range is -10°C to +55°C.

Over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.

Do not open, dismantle or attempt to repair your mobile phone yourself.

Do not drop, throw or bend your mobile phone.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your phone model (see Accessories List, page 66). TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone.

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders.



Prolonged exposure to music at full volume on the music player may damage the listener's hearing.

Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

• **PRIVACY:**

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your mobile phone regarding taking photographs and recording sounds with your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.

• **BATTERY:**

Before removing the battery from your phone, please make sure that the phone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery,
- Do not burn or dispose of a used battery in household rubbish or store it at temperatures above 60 °C.

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

In European Union countries:

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

• **CHARGERS**

Mains powered chargers will operate within the temperature range of: 0 °C to 40 °C.

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

• RADIO WAVES:

Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/EC (R&TTE) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.

THIS MOBILE PHONE COMPLIES WITH INTERNATIONAL AND EUROPEAN REQUIREMENTS REGARDING EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter/receiver. It was designed and manufactured to comply with the radiofrequency (RF) exposure thresholds recommended by international requirements (ICNIRP) ⁽¹⁾ and by the Council of the European Union (Recommendation 1999/519/EC) ⁽²⁾.

These limits are part of a set of requirements and establish authorised radiofrequency levels for the public. These limits were established by independent groups of experts on the basis of regular and detailed scientific assessments. They include a significant safety margin intended to ensure the safety of all, regardless of age or state of health.

The exposure standard for mobile phones is determined by a measurement unit known as the Specific Absorption Rate or "SAR". The SAR limit is set by international requirements or by the Council of the European Union at 2 watts/kilogram (W/kg) averaged over 10 grams of body tissue. The tests used to determine SAR levels were carried out on the basis of standard usage modes with the phones transmitting at their maximum power level over the entire range of frequency bands.

Although the SAR was established at the highest certified level, the actual SAR level for the mobile phone during use is generally much lower than the maximum values. In fact, since mobile phones are designed to operate at many different power levels, they only use the minimum level of power required to provide a connection to the network. In theory, the closer you are to a base station antenna, the lower the power level required by the mobile phone.

The highest tested SAR value for this mobile phone for use at the ear and compliance against the standard is 1.2 W/kg (OT-305/OT-505). While there may be differences between the SAR levels on various phones and at various positions, they all meet the relevant International guidelines and EU requirements for RF (radio-waves) exposure.

The World Health Organisation (WHO) considers that present scientific information does not indicate the need for any special precautions for use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body (fact sheet n° 193). Additional information about electromagnetic fields and public health are available on the following site: <http://www.who.int/peh-emf>.

Although no danger relating to the use of telephone was ever proved, the World Health Organisation advises as a precautionary measure to use your telephone with a good level of network reception as indicated on the telephone display (4 to 5 bars). It is also advised to keep the telephone, during communications, away from the belly of pregnant women and from the lower abdomen for teenagers.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the phone at least 2cm away from the body.

• LICENCES

Obigo®

is a registered trademark of Obigo AB.



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

OT-505/OT-508 Bluetooth QD ID B013793



zicorporation

eZiText™ and Zi™ are trademarks of Zi Corporation and/or its Affiliates.

⁽¹⁾ The ICNIRP requirements are applicable in the following regions: Central America (except Mexico), South America, North and South Africa, Pacific Asia (except Korea), Australia.

⁽²⁾ The European recommendation (1999/519/EC) is applicable in the following regions: Europe, Israel.

General information

- **Internet address:** www.alcatel-mobilephones.com
- **Hot Line Number:** see "TCT Mobile Services" leaflet or go to our Internet site.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatel-mobilephones.com

Your telephone is a transceiver that operates on GSM networks with 900 and 1800 MHz bands.

CE 1588

This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: www.alcatel-mobilephones.com.

Protection against theft ⁽¹⁾

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering * # 0 6 # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

 
Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.


⁽¹⁾ Contact your network operator to check service availability.

Your mobile

OT-305

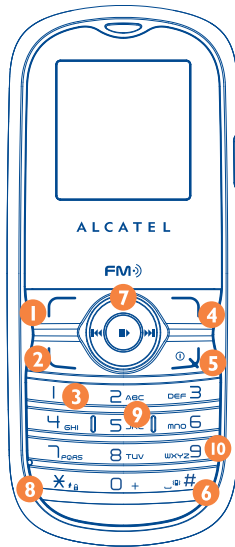

OT-505/OT-508

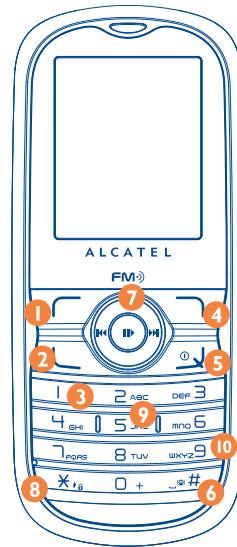 

- 1 Left softkey
- 2 Pick up/Send call
Call memory
- 3 Voicemail
- 4 Right softkey
- 5 Switch on/Switch off
End call
- 6 Vibration alert

- 7 Navigation key ⁽¹⁾ ⁽²⁾:
 - Menu/Confirm an option
 - Directory ▲
 - Profiles ▼
 - Camera
 - Calendar
- 8 Lock/Unlock
- 9 Switch on LED torch (long keypress)
Switch off LED torch (press any key)
- 10 Activate fake call (long keypress)

⁽¹⁾ Depending on your network operator.

⁽²⁾ Disabled when "Homescreen" is on.

1.1 Keys



Navigation key ⁽¹⁾
Confirm an option (press the middle of the key)
Access wallpaper settings (long keypress)



Pick up
Send a call
Access call memory (Redial) (short keypress)



Switch on/Switch off the telephone (long keypress)
End call
Return to the main screen



Left softkey



Right softkey

⁽¹⁾ Depending on your network operator.



Access your voicemail (long keypress)



In Edit mode:

- Short keypress: change input methods
- Long keypress: access the Symbols table



From main screen

- Short keypress: #
- Long keypress: activate/deactivate the vibrator

In Edit mode:

- Short keypress:  (space)
- Long keypress: add a word



Camera key ⁽¹⁾: access "**Camera**" (short keypress)

Music key ⁽²⁾: access "**Music player**" (short keypress)

⁽¹⁾ OT-305 only.

⁽²⁾ OT-505 only.

1.2 Main screen icons ⁽¹⁾



Battery charge level.



Vibration alert: your phone vibrates, but neither rings nor beeps except for the alarms (see page 59).



Bluetooth is active ⁽³⁾.



Bluetooth connected to an audio device ⁽³⁾.



Headset connected.



Call forwarding activated: your calls are forwarded (see page 36).



Alarm clock programmed (see page 43).



Voicemail message arrived.



FM radio is on.



Missed calls.



WAP alerts ⁽²⁾.



Roaming.



Line switching ⁽²⁾: indicates the selected line.



GPRS active connection status (Blue - Activated).



Shown only in no ciphering mode while calling, sending/receiving SMS.

⁽¹⁾ The icons and illustrations in this guide are provided for informational purposes only.

⁽²⁾ Depending on your network operator.

⁽³⁾ OT-505/OT-508 only.



Level of network reception.



Reception of a message in progress.



Sending a message.



Silence mode: your phone neither rings, beeps nor vibrates except for the alarms (see page 59).



Message unread.



Message list is full: your terminal cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.



SIM card unavailable.



Memory card scanning in progress.



Memory card scanning completed.

 


Flight mode.


2 Getting started

2.1 Set-up

Removing/Replacing the back cover

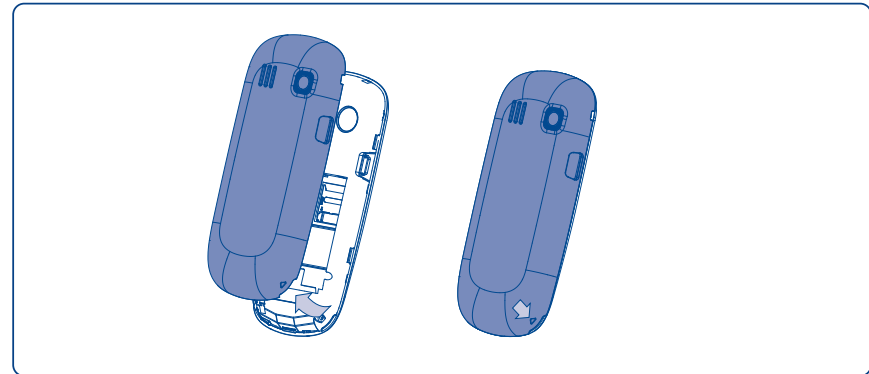


Installing/Removing the battery

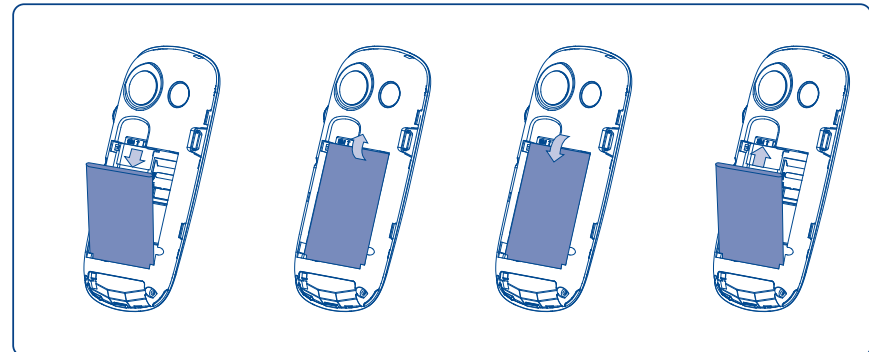 

Insert and click the battery into place, then close the telephone cover.
Unclip the cover, then remove the battery.

Inserting/Removing the the SIM card

 
You must insert your SIM card ⁽¹⁾ to make phone calls.

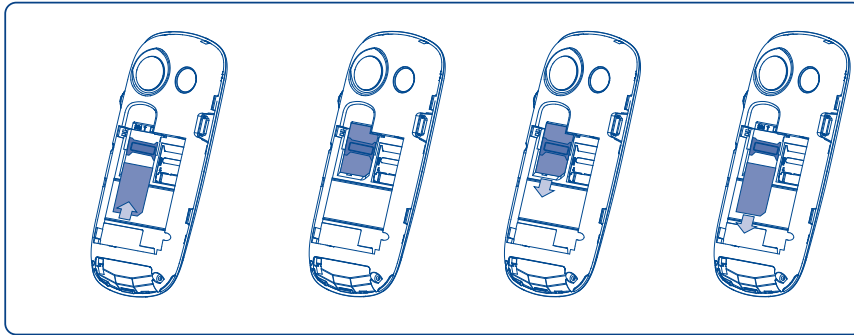

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted.

To remove the card, press it and slide it out.

 Charging the battery

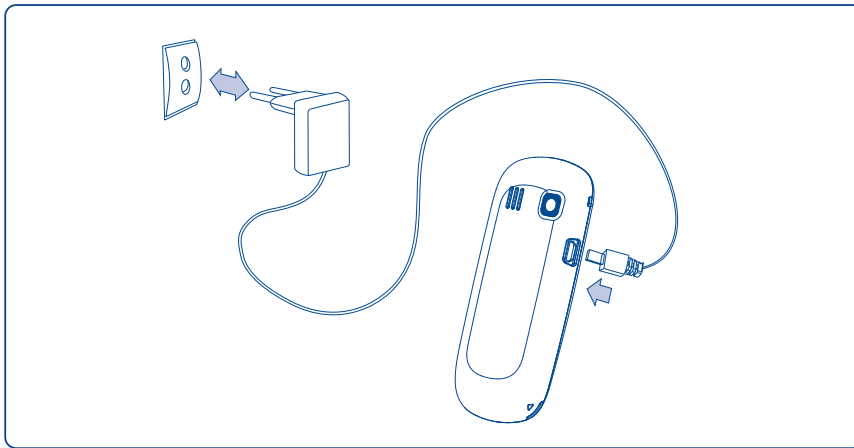

Connect the battery charger

⁽¹⁾ Check with your network operator to make sure that your SIM card is 3V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

- The charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery ().



The charge is complete when the animation stops. Only use Alcatel chargers.

2.2 Power on your phone

Hold down the key until the telephone powers on, type in your PIN code if necessary and then confirm with the key. The main screen is displayed.



If you don't know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code near your telephone, and store your card in a safe place when not in use.

If cell broadcast messages are displayed, use the key to browse through them in full or press the right softkey to return to the main screen.

While the phone is searching for a network, "Searching/Emergency" will be displayed.

2.3 Power off your phone

Hold down the key from the main screen.

3 Calls

3.1 Making a call

Dial the desired number then press the  key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.

To hang up the call, press the  key.



To enter characters "+", "W" (for tonewait) or "P" (used to store a number with extension number), hold down the  + key (the following characters will scroll by: 0, +, P, W).

Making an emergency call

If your phone is covered by the network, dial emergency number and press the  key to make an emergency call. This works even without a SIM card and without typing the PIN code or unlocking the keypad.

3.2 Calling your voicemail ⁽¹⁾

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time. To access your voicemail, hold down the  key.

If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number at a later date, refer to "My numbers" (see page 35).



To use your voicemail service from abroad, contact your network operator before leaving.

3.3 Receiving a call

When you receive an incoming call, press the  key to talk and then hang up using the  key.

If the  icon is displayed, the vibrator is activated and there is no ringtone. If the  icon is displayed, the phone neither rings nor vibrates.



The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

Muting the ringtone

Press the right softkey once while the telephone is ringing. Answer the call by pressing the  key.

Rejecting a call

Press the  key once or the right softkey twice.

⁽¹⁾ Contact your network operator to check service availability.

3.4 During the call

Available functions

During a call, you can use your directory, your diary, short messages, etc. without losing your correspondent by pressing the  key.



Call on hold



Ongoing call



Handsfree

WARNING: move the handset away from your ear while using the "**handsfree**" option because the amplified volume might cause hearing damage.



Directory



Messages



Calendar



Services ⁽¹⁾



Sound recorder (record your current call).

Besides, you can switch the audio speech from handset to BT device when connected.

Adjusting the volume

You can adjust the sound level during a call using the  key.

Handling two calls

- Answering a second call (Ensure that "**Call waiting**" is activated, see page 35).
- To call a second party during a call, dial the number directly.

⁽¹⁾ Contact your network operator to check service availability.

3.5 Conference calls ⁽¹⁾

Your phone allows you to talk to several people at the same time (up to 5). If you are on a double call, press "**Options**" and select "**Conference**" then confirm with the  key. If a third call comes in, answer it by pressing the  key and speak with your new correspondent.

This correspondent becomes a member of the conference if you press "**Options**" and select "**Add to conference**", and then confirm by pressing . Pressing  disconnects the current call.

To end the conference call, press "**Options**" and select "**End conference**".

3.6 Line switching (ALS) ⁽¹⁾

Your SIM card can contain two distinct telephone numbers. Under "**Call register**", choose "**Line switching**" and then select a default line; all your outgoing calls will be made from this number. Incoming calls, however, will continue to use the two lines.



The services programmed on the default line do not impact those selected on the other line.

⁽¹⁾ Contact your network operator to check service availability.

4 Menu ⁽¹⁾

From the menu interface, you may directly access features by pressing the corresponding key (number keys, *₁₂₃ and ₁₂₃# keys.)

OT-305

1. FUN
2. CAMERA
3. TOOLS
4. DIRECTORY
5. MESSAGES
6. PROFILES
7. SERVICES ⁽²⁾
8. WAP
9. SETTINGS

OT-505/OT-508

1. FUN
2. MUSIC PLAYER ⁽³⁾
3. FILE MANAGER ⁽³⁾
4. DIRECTORY
5. MESSAGES
6. WAP
7. PROFILES
8. CAMERA
9. BLUETOOTH ⁽³⁾
- *. SETTINGS
0. SERVICES ⁽²⁾
- #. TOOLS

⁽¹⁾ There may be certain differences between this menu tree and phone's operation, depending on your operator.

⁽²⁾ Contact your network operator to check service availability.

⁽³⁾ OT-505/OT-508 Only.

5 Directory

5.1 Consulting your directory

To access the **directory** from the main screen, press the  key and select the  icon from the menu.

You can also customise a quick access to your contact with the keys' customisation (see page 34).

You have 5 directories:

-  General
-  Most called
-  SIM directory
-  Phone directory
-  Group

In addition to the directories already provided, you can create up to 4 groups (maximum 100 entries per group).

Searching for a contact

You can search for a contact by multi-pressing the keys associated with the first letter and the other ones of his/her name.

Reading a file

Select a name from your directory, then press  to read the file.

Sending Vcard via MMS/Bluetooth ⁽¹⁾

Selecting the Vcard you wish to transfer ("**Options\Send vCard\By MMS**" or "**By Bluetooth**").

Making the call

Press the  key once the name is selected. If several numbers are associated with the name to be called, you must first choose the number from the list (Mobile, Home, Office, etc.) using the  key. Press the  key to make the call.

⁽¹⁾ OT-505/OT-508 only.

5.2 Adding a contact

Select the directory in which you wish to add contact, press the "**Options**" softkey, select "**Add contact**".

When you create a new contact in the product directory, at least one of the following fields must be filled in:  Name,  Group,  Mobile,  Home,  Ringtone,  Image,  Work,  Fax,  Email,  Birthday,  Company.

You can move from one field to another using the  key.



If you use your phone abroad, store the numbers in your directories in international format "+" followed by the country code (see page 19).

5.3 Available options

From the list of names in SIM directory, General directory or Group you can access the following options:

- | | |
|---------------------------------------|--|
| View | <ul style="list-style-type: none"> • View a complete file: name, numbers, address, e-mail, etc. |
| Add contact | <ul style="list-style-type: none"> • Add contact (name, numbers, address, e-mail, etc.) in the desired directory. |
| Create text/multimedia message | <ul style="list-style-type: none"> • Send an SMS/MMS to a contact you selected from the directory. |
| Edit | <ul style="list-style-type: none"> • Modify the contents of a file: name, number, ringtone, image, etc. |
| Delete | <ul style="list-style-type: none"> • Delete the selected file. |
| Set ringtone | <ul style="list-style-type: none"> • Customise the ringtone of incoming call for the contact in "My favorite". |

Move	Move a file from SIM directory to Phone directory, vice versa.
Reset	Reset the contacts in "Most called".
Delete all	Delete all the files in the current directory.
Copy	Copy a file from SIM directory to Phone directory, vice versa.
Copy all	Copy the whole directory from SIM directory to Phone directory, vice versa.
Send vCard	Exchange data via MMS or Bluetooth (see page 41).
Create group	Create a group of files.
Delete group	The group and its files will be completely deleted.
Associate/ Not associate	If the original one in SIM or General directory is modified, the one in a group will be updated accordingly, otherwise not.
Set as My favorite	Set the number as your favourite, whose ringtone could be different.
Send number	Send the number to the others by SMS.
My number	Type in, modify or send the user's own number by SMS.
Memory status	View used & available space in SIM and Phone directory.
Default storage	Set default storage to store new contacts.

6 Messages.....

You can create, edit and receive SMS, MMS with this mobile phone.

MMS is a message whereby you can send video clips, images, photos, animations and sounds to other compatible mobiles and e-mail addresses.

6.1 Messages: Text/Multimedia messages ⁽¹⁾

6.1.1 Create message

From the main menu select "**Messages**" to create text/multimedia message.

You can type a message and you can also modify a predefined message in **Templates** or customise your message by adding pictures, photos, sounds, titles, etc (only available while editing a MMS). While writing a message, select "**Options**" to access all the messaging options.

You can save your messages that you send often to **Drafts** or **Templates** (MMS only).



An SMS message of more than 160 characters (the number of characters depends on the languages you writing in) will be charged as several SMS. An MMS message containing photos and/or sounds may also be billed as more than one message.

⁽¹⁾ Depending on your network operator.

6.1.2 Inbox

All received messages (read and unread) are stored in the same Inbox.

When viewing your messages, you will find the following status icons, depending on the type of message:  unread SMS in phone,  unread SMS in SIM card,  read SMS in phone,  read SMS in SIM card,  unread MMS in phone,  read MMS in phone,  message reception in progress and  message sending in progress.

Receiving and reading SMS/MMS

When you receive a new message, the following message is displayed: "**X new message!**", a beep sounds, the  icon shows up, a line with the number of messages appears on the screen. Select this line and press the  key to read it directly from the main screen.

Once you have read the message, the following options are given: **Reply**, **Forward** the message to another person, **Edit**, **Delete**, **Delete all** and extract number or URL (**Use number/Use URL**).

Group by sender/Group by receiver ⁽¹⁾

Messages can be grouped by sender/receiver ("**Options\Group by sender**"/"**Options\Group by receiver**"). You are able to quick search the messages by pressing the key associated with the first letter of sender/receiver's name.

Timer send (SMS only)

Schedule a SMS/MMS to be sent out at predefined time (**Create SMS/MMS→Add number→Options/Timer send**).

⁽¹⁾ The option of "Group by receiver" is available in Outbox, Sent, and Draft folders only.

6.1.3 Outbox

All failed to be sent messages.

6.1.4 Sent

All sent messages.

6.1.5 Drafts

All drafts messages.

6.1.6 WAP alerts

Store PUSH SI messages.

6.1.7 Empty folder

Delete all messages in "**Inbox/Outbox/Sent/Drafts**".

6.1.8 Templates

A list of predefined messages is available. Select one, edit it if required, and then send it. You can also create your own predefined multimedia text messages.

6.2 Voice message

Record voice and send as MMS.

6.3 Voicemail

View and edit the voice mail number.

6.4 Settings

6.4.1 Help demo

Lively show how SMS works.

6.4.2 Text messages

- Profile settings** • Profiles can be retrieved directly from SIM card. Alternatively, you can create your own profile.
- General** • Delivery report, request for acknowledgement of delivery report On/Off. Reply path ⁽¹⁾ show reply path.
- Alphabet mgmt.** • It enables you to define SMS data coding for SMS sending.
- Memory status** • Memory used on the phone.
- Preferred storage** • Select default message storage, SIM or phone.
- Pref. Bearer** • Bearer preference.

6.4.3 Multimedia messages

- Edit** • Set edit mode, image size and signature.
- Sending** • Set the values for validity period, Read report, etc.
- Retrieve** • Set the values for Home network, Roaming network, etc.
- Filter** • Set criteria for filtering.
- Profiles** • Follow the same procedure as for setting your WAP connection.
- Memory status** • Memory used on the phone.

6.4.4 CB SMS ⁽¹⁾

- Receive mode** • Enable to receive broadcast SMS.
- Read message** • Store the received messages.
- Languages** • Language selection.
- Channel settings** • Select/Add/Edit/Delete channels.

⁽¹⁾ Depending on your network operator.

7 Settings

From the main screen, select the icon menu  and select the function of your choice in order to customise your telephone.

7.1 Color

This function enables you to customise the graphic style and the colours of your telephone.

7.2 Display

7.2.1 Wallpaper

The wallpaper is displayed when you switch on your telephone.

You can access the main functions from the wallpaper either with the navigation key or by pressing  and by selecting the icons displayed on the screen ⁽¹⁾.

By selecting "**Wallpaper**" you can customise it by replacing the default image or animation displayed on your telephone.

Fixed wallpaper • Set down any picture as wallpaper.

Varied wallpaper • Wallpaper vary once an hour, once a day, once a week...



When you receive an event (incoming call, SMS/MMS, notifications, etc.) the icon, type and number of events will be displayed on your wallpaper allowing you to consult them directly.

⁽¹⁾ Depending on the operator.

7.2.2 Power On/Off ⁽¹⁾

You can customise your welcome animation or image that appears when you switch on your phone.

You can also customise your OFF screen with an image or animation.

7.2.3 Menu display ⁽²⁾

Normal • Display with 12 main menus.

Easy • Display with 4 main menus.

7.2.4 Brightness

You may adjust black level with respect to LCD display by pressing the  key.

7.2.5 Zoom ⁽²⁾

This feature allows you to zoom in name or number display in Directory, Dialling and Outgoing/Incoming call, as well as the font of text in message reading.

7.3 Clock

It allows you to have settings of date and time, including 12/24h format. Also you can set the daylight saving adjustment.

⁽¹⁾ Depending on the model.

⁽²⁾ Availability depends on language group.

7.4 Keys

7.4.1 Softkeys & Navigation keys

These keys have predefined functions, which vary from one model to another (operator services, games access, ...). You can customise ⁽¹⁾ them, assign the functions, numbers from directory and URL you wish to each key.

7.4.2 Keys

By customising your keys, you can call someone or access a function/URL directly from the main screen.

7.5 Home screen

From home screen, you can quickly access the features that you use the most.

When activated, press  keys to scroll up/down application shortcuts one by one, and press  keys to access a list of available actions of the selected applications. To close the list, press  key.

This feature is activated by default. To exit this function, you can set it off from "**Settings\Home screen\Off**".

⁽¹⁾ Depending on your network operator.

7.6 Call register

7.6.1 Call memory

You can access your call memory by pressing the  key from the main screen. Choose the icon of the desired list:

-  Missed calls
-  Outgoing calls (Redial)
-  Answered calls

Select a number of the call memory and press the "**Options**" softkey to **View** call details, **Create text/multimedia message**, **Save** or **Delete** the selected number or clear the entire list (**Delete all**).

7.6.2 My numbers

Type in or modify your telephone number or the number to access your voicemail and confirm by pressing . Your telephone number is usually written on your SIM card.

7.6.3 Billing ⁽¹⁾

You can access different items with this option:

- | | |
|----------------------|---|
| Amount | • You can view the total cost of charged calls, modify it or reset it and enter the cost of a Telecom Unit in the currency of your choice. |
| Duration | • You can view the total duration of all outgoing calls or reset it. |
| GPRS counter | • Management of the volume of data communications charged for (in kilobytes). |
| Beep duration | • You can activate or cancel the beep emitted during a call with a specified frequency (enter the frequency and confirm by ). |

⁽¹⁾ Depending on your network operator.

7.6.4 Call settings ⁽¹⁾

You can access a number of items with this option:

7.6.4.1 Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

7.6.4.2 Call forwarding

You can activate, cancel or verify the status of the call forwarding to the voicemail or to a specified number. The following configurations are possible:

- Unconditional: systematic forwarding of all your calls. The  icon is displayed.
- Conditional: if your line is busy, if you don't answer or if you are outside the network range.

7.6.4.3 Call barring

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

- | | |
|-----------------------------|---|
| Outgoing calls | • The following configurations are possible: |
| • All calls | • All outgoing calls are barred. |
| • International calls | • Outgoing international calls are barred. |
| • International except home | • Outgoing international calls except those to your country of subscription are barred. |

⁽¹⁾ Contact your network operator to check service availability.

- Incoming calls**
- The following configurations are possible:
 - All calls
 - All incoming calls are barred.
 - Roaming
 - Incoming calls are barred when you are abroad.
 - Deactivate all call barring.
- Cancel all barring**
- Change barring PW**
- Change the original PW for activating call barring.

7.6.4.4 Caller ID

Activate/deactivate CLIR.

7.6.4.5 Line switching ⁽¹⁾

Line switch between line 1 and line 2.

7.6.4.6 Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not get through the first time.

7.6.5 Call control

The menu serves you the dual purposes of cost monitoring and controlling during a call by the settings of "**By cost**" and "**By duration**".



A new incoming call will be barred during communication if "**Call control**" is activated.

⁽¹⁾ Depending on your SIM card.

7.7 More settings...

7.7.1 Auto lock

Lock the keypad

Your keypad would be locked automatically or you may also lock it manually by holding down the key.

Unlock the keypad

Hold down the key when locked.

7.7.2 Languages ⁽¹⁾

Display language for messages (select using). The "**Automatic**" option selects the language according to the home network (if available).

7.7.3 Backlight

It allows you to reduce brightness for better performance of batteries and save power during periods of expected inactivity. You may also customise its duration, 5s, 10s, 30s and 1min.

7.7.4 Vocabulary

You have a vocabulary to which you can add your own words in addition to those suggested by the predictive input system. When you consult your vocabulary, you can add, modify or erase words by using the "**Options**" softkey.

⁽¹⁾ Contact your network operator to check service availability.

7.7.5 Input mode ⁽¹⁾

Please see chapter "Latin input mode", page 60. In addition to the specific characters table for Cyrillic, Chinese, other data input modes are also available in your telephone. This feature allows you to write short messages and add names with special characters to your directory.

7.7.6 Security

- Activate PIN**
 - The SIM card protection code is requested each time as the phone is powered on if this code is activated.
- Change PIN**
 - Change PIN code.
- Change PIN2**
 - A protection code for certain SIM card features (Billing/Cost/FDN, etc.) will be requested if you attempt to access it, if the code is activated. Select to update it with a new one (between 4 and 8 digits).
- Activate phone code**
 - It is requested each time as the phone is powered on if this code is activated.
- Change phone code**
 - Change phone password, its initial one is 1234.
- Fixed dialed number**
 - It allows the phone to be "locked" so that it can only dial certain numbers, or numbers with certain prefixes. To activate this function, PIN2 code is mandatory.

⁽¹⁾ Depending on the language.

7.7.7 Networks

Network selection

- Preferred networks
- List of networks to which you wish to be connected in order of priority (update this list using ).
- Select network
- The choice of the network connection is left up to the user.
- Search mode
- Network connection switching between "**Manual**" and "**Automatic**".

GPRS connection ⁽¹⁾

- When needed
- GPRS mode active depending on connection requirements.
- Always
- GPRS mode continuously active.

7.7.8 Connectivity

A set of profile settings for messaging (MMS...) and WAP connection.

⁽¹⁾ Depending on network availability.

8 Bluetooth™ (1) (2)



Access this feature by selecting "**Bluetooth**" from the main menu.

To use your phone with a Bluetooth device, you need to proceed in two steps:

- Pair and register the device to your phone,
- Select it to use hands-free communication. Only one Bluetooth audio device (your Bluetooth headset or your Bluetooth car kit) can be connected during the communication.

Pair and register your Bluetooth device

Activate the Bluetooth feature by selecting the "**Bluetooth\Activation\On**" option. Then enter the "**My devices**" menu to search for connectable Bluetooth devices and select the device you want to be paired with in the list. If the bluetooth device has no keyboard, enter its default password to register it with your phone. If the Bluetooth device has keyboard/keypad, enter the same set of password on both handset and the device to get it registered.

From the list, press the "**Options**" softkey to connect/disconnect, rename, search for new devices or delete an unconnected one from the list.



Don't forget to turn on your Bluetooth device and activate the pairing mode while pairing it with your phone.

⁽¹⁾ You're highly recommended to use Alcatel OT-BM82 Bluetooth headset, which has been tested and proved fully compatible with OT-505 and OT-508.

⁽²⁾ OT-505/OT-508 only.

Available functions

- Data transmit** • Exchange files with another bluetooth device.
- Handle a call** • Initiate or receive a phone call with a Bluetooth headset.

Settings

- **Visibility:** Select whether you want to hide ("**Off**") or show to all ("**On**") your phone.
- **Rename device:** you may change your phone name, which is visible to the others.



Always activate Bluetooth in your phone first before connecting it to a Bluetooth device. Be aware that Bluetooth activation will slightly affect battery life of your phone.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within short range. Please make sure that the Bluetooth headset or the Bluetooth car kit and your mobile phone are in this range and set as "**Visibility\On**".

Your phone is Bluetooth™ v1.1, v1.2 and v2.0 compatible.

9 Tools.....

9.1 Calendar

Once you enter this menu from "**Tools**", there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.

Available options:

- Create**
 - Create an appointment.
- View appointments**
 - See today's appointments.
- List all appointments**
 - See all the created appointments.
- Jump to date**
 - Input the required date and it will be immediately highlighted.

9.2 Alarm

Your mobile phone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.

- Repeat**
 - You may select Once (default)/Every day/Days.
- Snooze**
 - The alarm will repeat at regular intervals.

9.3 Calculator

You can use it to perform basic calculations. Hold down the  # key to get the decimal point. Confirm with the  key or the left softkey.

9.4 Converter

9.4.1 Unit

You can use the Weight and Length conversion by selecting the unit you wish to convert via  , then press  to input the digits. Finally confirm with  key or left softkey.

9.4.2 Currency

The currency converter allows you to:

- Convert a currency directly into euros and vice versa ⁽¹⁾.
- Convert between international currencies, both currencies must be selected by   keys. You are requested to input the appropriate exchange rate.

9.5 Voice memo

This feature enables you to record a call by selecting "**Voice memo**" while communicating. To record a sound, select "**Voice memo**", then "**New record**".

⁽¹⁾ For the former European national currencies, the currency converter uses the final Euro conversion rates set on 31/12/1998, which are used in accordance with official conversion rules.

9.6 Fake call

This program enables you to call yourself by simulating a caller number/name, ringtone, contact photo at a scheduled time. It helps you to politely escape from social situations at any time you wish. This call can be rejected by  key.

- Settings**
- Predefined settings of Caller name/number, Call time, Ringtone, Image (Contact photo).
- Activate**
- Activate a fake call by "**Tools\Fake call\ Activate**" or by a long press of the  key on the main screen. The call will then be made at the predetermined time.

9.7 Memory status

It will indicate how much space is used and how much is currently free on your phone and memory card (if any).

9.7.1 Phone

View available memory space.

Your phone's memory is shared among several functions: directory, scheduler, messages, voice messages, images, melodies, games, applications.

9.7.2 Memory card (MicroSD card)

View the memory available on your MicroSD card.

9.8 My shortcuts

Access the shortcuts already programmed.

To programme new shortcuts: select "**My shortcuts**" if you want to create a quick access to a function, Directory, or WAP Bookmarks, etc.

10 WAP

10.1 Homepage

Launch the WAP browser with the homepage of the active profile.

10.2 Bookmarks

Access your favorite sites.

10.3 Recent pages

Pages which you recently browsed.

10.4 Offline pages

Pages available for offline viewing.

10.5 Go to URL

Enter the URL of WAP site.

10.6 Profiles

10.6.1 Edit profile

Edit existing profile or create new profile.

10.6.2 Browser options

Set the value for timeout and auto loading of image.

10.6.3 Push message settings

Enable or disable receiving service message from WAP.

10.6.4 Clear cache

Empty the phone's cache memory.

10.6.5 Clear cookies

Clear cookies from website.

10.6.6 Trusted certificates

Certificates of trusted sites.

File manager ⁽¹⁾.....

You will have an access to all audio and visual files stored in phone or memory card in File manager.

11.1 My audios

Choose an audio for an incoming call, a message alert, power on/off ringtone or an alarm and scheduler.

The "**My audios**" album contains the following folders ⁽²⁾:

- Music: full track music.
- Melodies: melodies that can be set as ringtone.
- Recorded: all recorded sounds,
- General: contains all audio files stored in phone or memory card.



DRM: Digital Rights Management feature allows sounds and images to be played while protecting the associated copyright.

11.2 My images

You can select an image or a photo as wallpaper, the ON/OFF screen, or assign it to a contact in the directory.

⁽¹⁾ OT-505/OT-508 Only.

⁽²⁾ The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.

11.3 My creations

This feature stores all the photos captured by your mobile phone.

Thumbnails are displayed for preview. In addition, you can use "**Mark**" function, to select multiple files.

11.4 Unknown files

Store files of unsupported format.

11.5 Managing audios and images

According to the item chosen, you can access some of the functions below:

- | | |
|------------------|---|
| View | <ul style="list-style-type: none"> • View the selected image. If you want to view all the pictures in your folder in a slideshow hold down  on the current picture. |
| List view | <ul style="list-style-type: none"> • View the file in the type of list. |
| Play | <ul style="list-style-type: none"> • Play the selected items. |
| Send | <ul style="list-style-type: none"> • Send the audio/image. |
| Set as | <ul style="list-style-type: none"> • - Image->wallpaper, switch ON/OFF, assign it to a contact. - Sound->ringtone, message beep, switch ON/OFF, assign it to a contact. |
| Download | <ul style="list-style-type: none"> • Download new items. |

Rename

- Rename the audio/image.

Sort

- Sort the files by name, type, time and size.

Mark/Unmark

- Mark/Unmark a tick on a file for further operation.

Mark all/Unmark all

- Mark/Unmark ticks on all files.

Delete

- Delete the audio/image selected (not applicable for embedded items).

Delete all

- Delete all the files except the embedded ones.

Capture

- Access "**Camera**" function directly.

11.6 Formats and compatibility ⁽¹⁾

- Sounds: midi, amr, MP3, ...
- Images: jpg, gif

⁽¹⁾ Depending on product and market.

 
11.7 Memory card

You will have access to all files stored in memory card here.



When a memory card is inserted for the first time, it will be scanned and the default folders will be created.

Insert the memory card

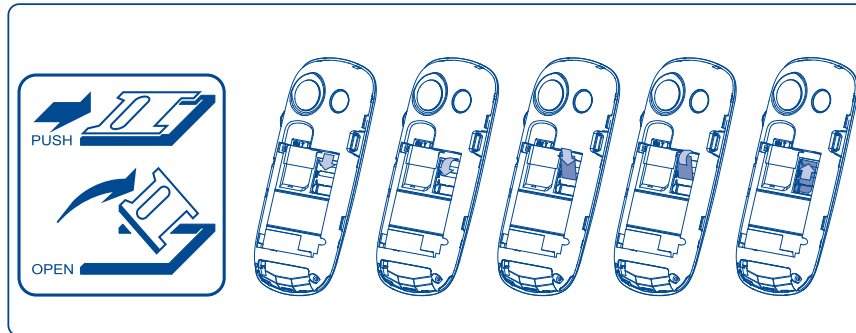

To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.

Available options

- | | |
|----------------------|---|
| New folder | • Create more folders. |
| Delete folder | • Remove folders. |
| Rename folder | • Rename folder's name. |
| Empty folder | • Delete all files in one folder. |
| Memory card | • To format it or to query its memory status. |

11.8 Memory status

See page 45.

12 Music Player ⁽¹⁾



Access this feature from the main menu by selecting "**Music player**" or directly by pressing the Side key. You will have full flexibility of managing music both on your mobile and memory card.

12.1 Music

All songs

- Contains all songs both on phone memory and memory card.

My star list

- You can simply add your favorite songs to "**My star list**" by holding down * during playing music (max 100).

Folders

Album/Artist/Genre

- Category of songs in folder.
- Music files are categorized by Album, Artist or Genre based on information stored in the tags. Those missing such information will be classified as "**Unknown files**".

Update songs

- Update the information of songs saved in memory card.

Use keys to manage the Music player:

⏸ / ⏵ : Pause/Play ⁽²⁾

⏮ ⏭ : Go to previous /next title (short keypress)
Fast play backward/forward (long keypress)

📶 : Switch sound between handset and Phone.

⁽¹⁾ OT-505/OT-508 Only.

⁽²⁾ OT-505 only.

12.2 Settings

Play mode

- Normal, Repeat current, Repeat all, Shuffle and Repeat shuffle. You may also customise it simply by pressing  # during playing music.

Equalizer

- Different music styles preset in the phone. You may also customise it simply by pressing  + during playing music.

13 FUN

13.1 Games

Your Alcatel phone may include some games.

13.1.1 Game settings

It allows you to manage settings, in which you may set background music, sound effect and vibration alert.

13.2 FM radio

Your phone is equipped with an FM radio ⁽¹⁾ with RDS functionality. You can use the application as a traditional FM radio and saved channels or with parallel visual information related to the radio program on the display, if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.



To use it, you must get your headset, which works as an antenna connected with your phone.

Available options:

- | | |
|---------------------|--|
| Channel list | • Open the list of saved stations. |
| Save channel | • Save the current tuned station to the " Channel list ". |
| Auto search | • Start auto search and stations will be automatically saved to " Channel list ". |

⁽¹⁾ The quality of the radio depends on the coverage of the radio station in that particular area.

Enter the frequency

- Enter the frequency manually.

Turn off

- Stop playing the radio.

Record

- Record the radio and files will be automatically saved to "**Tools\Voice memo\List**" and "**File manager\My audios\Recorded**".

Settings

- Use  navigation keys to do settings.

Activate

- Listen to the radio using louderspeaker or headset.

loudspeaker/Play**in headset****Optimise radio**

- Search for a better frequency from the alternative frequency list.

Update station name ⁽¹⁾

- Save RDS information as station name in the channel list.



Hold down the  key to enter the mode of "**Manual tuning**" and go to the previous/next station by pressing the  navigation keys in the interface of Radio.

I 3.3 File manager ⁽²⁾

See page 48.

I 3.4 Music player ⁽²⁾

See page 52.

⁽¹⁾ Availability on RDS information detected.

⁽²⁾ OT-305 only.

**I 4 Camera..... **

Your mobile phone is fitted with a camera for taking photos that you can use in different ways:

- store them in your "**File manager**".
- send them in a multimedia message (MMS) to a mobile phone or an email address.
- customise your main screen (see page 32).
- select them as incoming call image to a contact in your directory.

I 4.1 Access

To access the function from:

- press the  key from main screen.
- press side key ⁽¹⁾.
- access by selecting "**Camera**" from main menu.

I 4.2 Camera**I 4.2.1 Take a photo, save or delete**

The screen acts as the viewfinder. Position the object in the viewfinder and press  to take the picture and the pictures will be automatically saved. But if you don't want it, you may directly delete it by pressing the left softkey "**Delete**".

⁽¹⁾ OT-305 only.

14.2.2 Settings in framing mode

Before taking the photo, you can adjust a number of settings by pressing the **"Options"** softkey to access: **"Image size"**, **"Exposure"**, **"Timer"**, **"Capture mode"**, **"Banding"**, **"Night mode"**, **"Quality"**, **"White balance"**, **"Color mode"**, but also following ones:

- File manager** • Go to the File manager feature.
Restore default • Make all settings recover as default value.

14.2.3 Options available after taking the photo

Four transparent icons available on the photos for your selection:

- ▲: Set as wallpaper
- ▶▶: Assign to a contact
- ▼: Set as Power on/off screen ⁽¹⁾
 Send by Bluetooth ⁽²⁾
- ◀◀: Send by MMS

⁽¹⁾ OT-305 only.

⁽²⁾ OT-505/OT-508 only.

15 Profiles

With this menu, you may personalise ringtones for different events and environments.

15.1 General

To modify the sound settings, press **"Options"** and select **"Edit"** and you will see below functions using ◀◀ ▶▶ key:

-  Select a melody from the list using the ◀▶ key then confirm by pressing .
-  Mode (normal, discreet, vibrate...). You may set your phone ringtone to Normal, Discreet (ring with beep), Vibrate (all sounds are replaced by vibrations except for alarms), Vibrate and ring, Vibrate then ring, Beep and vibrate, Silence (no sounds except for alarms, the  icon will be displayed). Ringtones sound with increasing volume.
-  Adjust the volume using the ◀▶ key.
-  Select the type of key beep.
-  Select a melody for a new incoming message.
-  Select a melody for an alarm or appointment.
-  Power on beep.
-  Power off beep.

15.2 Vibration

Activate it, your cellphone vibrates when new event coming, but neither rings nor beeps except for the alarms.

15.3 Outdoor

It is a profile designed for outdoor user who requires louder ringtones.

15.4 Silence

This profile will turn off all ringtones, even notification sounds.

15.5 Flight mode

Flight mode, under which you will have no voice call, Bluetooth or messaging functions, can be used to increase standby duration.

16 Latin input mode ⁽¹⁾

To write messages, there are two writing methods:

- Normal
- Predictive with the eZi mode

Normal

This mode allows you to type a text by choosing a letter or a sequence of characters associated with a key. Press the key several times until the desired letter is highlighted.

When you release the key the highlighted character is inserted into the text.



⁽¹⁾ For specific languages as Chinese, please see specific input leaflets.

Predictive eZi mode

This mode speeds up the writing of your text.

 
Write the word by pressing a key between **2 ABC** and **9 WXYZ**. Press the key once and the word will be modified each time you press a key. As you go on, the word will keep changing.

Example: For "**Tomorrow**", press on the following keys:


8 TUV, **6 MNO**, **6 MNO** = Too -> **6 MNO** -> tomorrow



OT-305

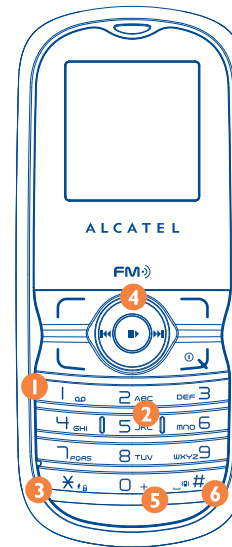

OT-505/OT-508

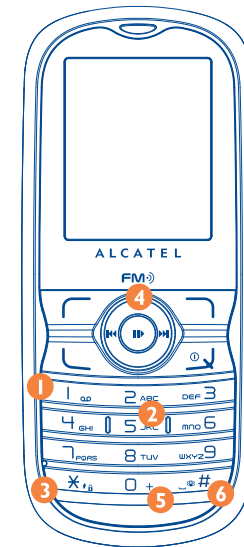 

- | | |
|---|--|
| <p>1 Key 1 ∞</p> <ul style="list-style-type: none"> - Short keypress: insert a smart punctuation - Long keypress: insert I <p>2 Keypad</p> <ul style="list-style-type: none"> - Short keypress: alpha input (a, b) - Long keypress: numeric input (1, 2, 3) <p>3 Key * ∞ #</p> <ul style="list-style-type: none"> - Short keypress: change input methods - Long keypress: access the symbols table | <p>4 Navigation key:</p> <ul style="list-style-type: none"> - ⏮ : validate the word - ⏭ : previous/next word - ⬆ : Page up/down <p>5 Key 0 +</p> <ul style="list-style-type: none"> - Short keypress: access the language list - Long keypress: enter zero <p>6 Key ∞ #</p> <ul style="list-style-type: none"> - Short keypress: insert a space ␣ - Long keypress: add a word ␣ |
|---|--|

Symbol table

Hold down the ***+*** key to display the symbols table; the cursor is positioned in the centre. Use the navigation key to move it and the **10** key to select.



17 Telephone warranty

Your phone is warranted against any defect which may occur in conditions of normal use during the warranty period of twelve (12) months ⁽¹⁾ from the date of purchase as shown on your original invoice.

Batteries ⁽²⁾ and accessories sold with your phone are also warranted against any defect which may occur during the first six (6) months ⁽¹⁾ from the date of purchase as shown on your original invoice.

In case of any defect of your phone which prevents you from normal use thereof, you must immediately inform your vendor and present your phone with your proof of purchase.

If the defect is confirmed, your phone or part thereof will be either replaced or repaired, as appropriate. Repaired Phone and accessories are entitled to a one (1) month warranty for the same defect. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

This warranty covers the cost of parts and labor but excludes any other costs.

⁽¹⁾ The warranty period may vary depending on your country.

⁽²⁾ The life of a rechargeable mobile phone battery in terms of conversation time standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your phone during the first six months after purchase and for approximately 200 more recharges.

This warranty shall not apply to defects to your phone and/or accessory due to (without any limitation):

- 1) Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your phone is used,
- 2) Connection to any equipment not supplied or not recommended by TCT Mobile Limited,
- 3) Modification or repair performed by individuals not authorised by TCT Mobile Limited or its affiliates or your vendor,
- 4) Inclement weather, lightning, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation...

Your phone will not be repaired in case labels or serial numbers (IMEI) have been removed or altered.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your jurisdiction.

In no event shall TCT Mobile Limited or any of its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited commercial loss, to the full extent those damages can be disclaimed by law. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

8 Accessories ⁽¹⁾

 
The latest generation of Alcatel GSM mobile phones offers a built-in handsfree feature that allows you to use the telephone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.




Standard charger



UK charger ⁽²⁾

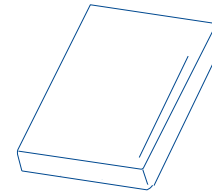

Battery

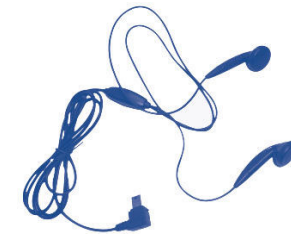 

Stereo headset



Only use your telephone with Alcatel batteries, chargers and accessories compatible in the box.

⁽¹⁾ Pictures for references only.

⁽²⁾ For UK market only.

19 Troubleshooting

Before contacting the aftersales department, you are advised to follow the instructions below:

- You are advised to switch off the telephone from time to time to optimise its performance.
- You are advised to fully charge () the battery for optimal operation.
- Avoid storing large amounts of data in your telephone as this may affect the performance of your telephone.
- USB cable is designed for charging only.

and carry out the following checks:

My mobile phone will not switch on

- Press  until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your telephone back on

My phone has not responded for several minutes

- Press the  key
- Remove the battery and re-insert it, then switch the phone back on

My screen is difficult to read

- Clean your screen
- Use your mobile phone in accordance with the recommended conditions of use

My mobile phone turns off by itself

- Check that your keypad is locked when you are not using your mobile phone
- Check the battery charge level

My mobile phone has a low level of autonomy

- Make sure you respected the complete charge timing (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication

My mobile phone will not charge properly

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet whistling sound
- Make sure charging is carried out under normal conditions (0°C - +40°C)
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an Alcatel battery and charger
- When abroad, check that the electrical current is compatible

My mobile phone will not connect to a network

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 40)
- Try connecting at a later time if the network is overloaded

SIM card error

- Make sure the SIM card has been correctly inserted (see page 17)
- Verify with your operator that your SIM card is 3V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

Unable to make outgoing calls

- Make sure you have dialled a valid number and press the  key
- For international calls, check the country and area codes
- Make sure your mobile phone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls (see page 36)

Unable to receive incoming calls

- Make sure your mobile phone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 36)
- Make sure that you have not barred certain calls

The caller's name does not appear when a call is received

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

The sound quality of the calls is not optimal

- You can adjust the volume during a call by means of the  key
- Check the radio reception icon level 

I am unable to use the features described in the manual

- Check with your operator to make sure that your subscription includes this service
- Make sure this feature does not require an Alcatel accessory

When I select a number from my directory, the number is not dialled

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

I am unable to add contact in my directory

- Make sure that your SIM card directory is not full; delete some files or save the files in the product directory (i.e. your professional or personal directories)

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability

I cannot access my voicemail

- Make sure your operator's voicemail number is correctly entered in "My numbers"
- Try later if the network is busy

I am unable to send and receive MMS

- Check your phone memory available as it might be full
- Contact your network operator to check service availability and check MMS parameters (see page 31)
- Verify the server centre number or your MMS profile with your operator
- The server centre may be saturated; try again later

The icon is displayed on my standby screen

- You have saved too many short messages on your SIM card; delete some of them or archive them in the product memory

"No service" is displayed

- You are outside of the network coverage area

I have already entered 3 incorrect PIN codes

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

I am unable to download new files

- Check for free space
- Delete some files
- Check your subscription status with your operator

The phone can't be detected by others via Bluetooth

- Make sure that Bluetooth is turned on and your mobile phone is visible to other users (see page 41)

My mobile phone is dead, can't power on

- Make sure your battery is not completely used up or damaged
- Remove your battery, remove your SIM card then power it on again
- Hold down  # +  keys at same time to reset it ⁽¹⁾

⁽¹⁾ All user phone data: contacts, photos, messages and files, downloaded applications like Java games will be lost permanently.

ALCATEL is a trademark of Alcatel-Lucent
and used under license by
TCT Mobile Limited.

All rights reserved © Copyright 2010
TCT Mobile Limited.

TCT Mobile Limited reserves
the right to alter material or technical
specification without prior notice.