


1 Your cellphone.....

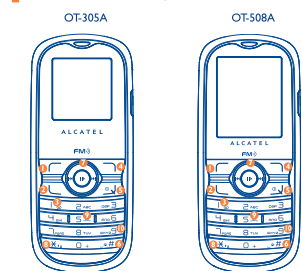

- ① Left softkey
- ② Pick up/Send call
- ③ Call memory
- ④ Voicemail
- ⑤ Right softkey
- ⑥ Switch on/off LED torch (long keypress)
- ⑦ Vibration alert
- ⑧ Navigation key ^{(1) (2)}
- ⑨ Menu/Confirm an option
- ⑩ Directory
- ⑪ Camera
- ⑫ Calendar
- ⑬ Lock/Unlock
- ⑭ Switch on/off LED torch (long keypress)
- ⑮ Activate fake call (long keypress)

⁽¹⁾ Depending on your network operator.
⁽²⁾ Disabled when "Homescreen" is on.

OT-305A
OT-508A
ALCATEL
mobile phones

English - CJB30Y1ALAAB



1.1 Keys

Navigation key ⁽¹⁾
 Confirm an option (press the middle of the key)
 Access wallpaper settings (press and hold)



Pick up
 Send a call
 Access call memory (Redial) (short keypress)



Switch on/Switch off the telephone (press and hold)
 End call
 Return to the main screen



Left softkey



Right softkey



Access your voicemail (press and hold)



In Edit mode:
 - Press: access the language list
 - Press and hold: enter zero



In Edit mode:
 - Press: change input methods
 - Press and hold: access the Symbols table



From main screen
 - Press: #
 - Press and hold: activate/deactivate the vibrator
 In Edit mode:
 - Press: (space)
 - Press and hold: add a word



Camera key ⁽²⁾: access "Camera"
 Music key ⁽²⁾: access "Music player"

⁽¹⁾ Depending on your network operator.
⁽²⁾ OT-305A only.
⁽³⁾ OT-508A only.

1.2 Main screen icons

 
- Battery charge level.**
- Vibration alert:** your phone vibrates, but neither rings nor beeps except for the alarms.
- Bluetooth status** (Blue - Activated) ⁽¹⁾.
- Bluetooth status** (Connected to an audio device) ⁽¹⁾.
- Headset connected.**
- Call forwarding activated:** your calls are forwarded.
- Alarm clock programmed.**
- Voicemail message arrived.**
- FM radio is on.**
- Missed calls.**
- WAP alerts** ⁽²⁾.
- Roaming.**
- Line switching** ⁽³⁾: indicates the selected line.
- GPRS active connection status** (Blue - Activated).
- Shown only in non-encryption mode while calling, sending/receiving SMS.
- Level of network reception.**
- Reception of a message in progress.**
- Sending a message.**
- Silence mode:** your phone neither rings, beeps nor vibrates except for the alarms.
- Message unread.**
- Message list is full:** your phone cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
- SIM card unavailable.**
- Memory card scanning in progress.**
- Memory card scanning completed.**
- Flight mode.**

⁽¹⁾ OT-508A only. ⁽²⁾ Depending on your network operator.

2 Getting started

2.1 Set-up

Removing and installing the back cover



Installing and removing the battery



Inserting and removing the SIM Card



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

2.2 Power on your phone

Hold down the key until the phone powers on.

2.3 Power off your phone

Hold down the key from the main screen.

3 Calls

3.1 Making a call

Dial the desired number then press the key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right soft key.

To hang up the call, press the key.

Making an emergency call

If your phone is covered by the network, dial emergency number and press the key to make an emergency call. This works even without a SIM card and without typing the PIN code or unlocking the keypad.

3.2 Calling your voicemail ⁽¹⁾

To access your voicemail, hold down the key.

3.3 Receiving a call

When you receive an incoming call, press the key to talk and then hang up using the key.

3.4 Available functions during the call

During a call, you can use your directory, your diary, short messages, etc. without losing your caller by pressing the key.

⁽¹⁾ Contact your network operator to check service availability.

6 Settings

From the main screen, select the icon menu and select the function of your choice in order to customize your telephone: Color, Display, Clock, Keys, More settings...

6.1 Home screen

From home screen, you can quickly access the features that you use the most.

When activated, press keys to scroll up/down application shortcuts one by one, and press keys to access a list of available actions of the selected applications. To close the list, press key. This feature is activated by default. To exit this function, you can set it off from "Settings/Home screen/Off".

7 Bluetooth™ ⁽¹⁾

Access this feature by pressing the key to enter the main menu, then selecting "Bluetooth".

8 Tools

8.1 Calendar

Once you enter this menu from "Tools", there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.

8.2 Alarm

Your cellphone has a built-in alarm clock with a snooze feature.

8.3 Calculator

Hold down the key to get the decimal point. Confirm with the key or the left soft key.

8.4 Converter

Unit converter and Currency converter.

8.5 Voice memo

This feature enables you to record a call by selecting "Voice memo" while communicating. To record a sound, select "Voice memo", then "New record".

8.6 Fake call

This program enables you to call yourself by simulating a caller number/name, ringtone, contact photo at a scheduled time. It helps you to politely escape from social situations at any time you wish. This call can be rejected by key.

Settings

- Predefined settings of Caller name/number, Call time, Ringtone, Image (Contact photo).
- Activate a fake call by "Tools/Fake call/Activate" or by a long press of the key on the main screen. The call will then be made at the predetermined time.

8.7 Memory status

It will indicate how much space is used and how much is currently free on your phone or memory card.

8.8 My shortcuts

Access the shortcuts already programmed. To program new shortcuts: select "My shortcuts" if you want to create a quick access to a function, Directory, or WAP Bookmarks, etc.

9 WAP

Access Wap options: Homepage, Bookmarks, Recent pages, Offline pages, Go to URL and Profiles.

10 File manager ⁽¹⁾

You will have access to all audio and visual files stored in phone in File manager.

10.1 My audios

Choose an audio file for an incoming call, a message alert, power on/off ringtone or an alarm and scheduler.

10.2 My images

You can select an image or a photo as wallpaper or the ON/OFF screen.

10.3 My creations

This feature stores all the photos captured by your cellphone.

10.4 Unknown files

Store files of unsupported format.

⁽¹⁾ OT-508A only.

10.5 Formats and compatibility

- Sounds: midi, amr, MP3, ...
- Images: jpg, gif

10.6 Memory card

You will have access to all files stored on memory card here.

Insert the memory card



To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.

11 Music player ⁽¹⁾

Access this feature from the main menu by selecting "Music player" or directly by pressing the Side key.

12 FUN

12.1 Games

Your Alcatel phone may include some games.

⁽¹⁾ OT-508A only.

4 Directory

4.1 Consulting your directory

To access the **directory** from the main screen, press the key and select the icon from the menu.

4.2 Adding a contact

Select the directory in which you wish to add contact, press the "Options" soft key, select "Add contact".

5 Messages

5.1 Create message

From the main menu select "Messages" to create text/multimedia message. You can type a message and you can also modify a predefined message in **Templates** or customize your message by adding pictures, photos, sounds, titles, etc (only available while editing a MMS). While writing a message, select "Options" to access all the messaging options. You can save your messages that you send often to **Drafts** or **Templates** (MMS only).

15 Latin input mode.....

To write messages, there are two writing methods:

- Normal: this mode allows you to type text by choosing a letter or a sequence of characters associated with a key.
- Predictive with the eZi mode: this mode speeds up the writing of your text.
- key in edit mode
 Press: access the language list
 Press and hold: enter zero

ALCATEL is a trademark of
 Alcatel-Lucent and used under license by
 TCT Mobile Limited.

All rights reserved © Copyright 2010
 TCT Mobile Limited.

TCT Mobile Limited reserves the right to alter
 material or technical specification without prior notice.

Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

⁽¹⁾ OT-508A only.

7

8

9

10

11

12

