



Quick Start Guide

For more information about how to use the phone, please go to www.alcatelone-touch.com to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade via PC suite, etc.



This product meets applicable national SAR limits of 2.0 W/kg. This specific maximum SAR value can be found on page 30 of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a headset or otherwise maintain a distance of 15 cm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

ALCATEL onetouch.

English - CJB23D0A1AA1

Notification icons	
	More notifications are hidden
	Call in progress (green)
	Call in progress using Bluetooth headset (blue)
	Missed call
	Call on hold
	Call forwarding is on
	Uploading data
	Downloading data
	Download finished
	An open Wi-Fi network is available
	Phone is connected via USB cable
	Radio is on
	Stream update available

Notification panel

Touch and drag down the Status bar or press **Menu** key and touch **Notifications** to open the notification panel. Touch and drag up to close it. From Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.



Touch **Close** to clear all event-based notifications (other ongoing notifications will remain).

To return to the Home screen, press **Home** key.

The phone provides a Search function which can be used to locate information within applications, the phone or the web.


To protect your phone and privacy you can lock the phone screen by creating a variety of patterns.

To customize recently-used applications, you can press and hold the **Home** key from Home screen. Touch an icon in the window to open the related application.

To adjust the volume (in call mode playing media) or press to adjust the volume (in call mode playing media).

Your mobile.....

1.1 Keys and connectors

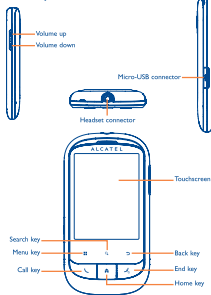

- Pick up/send a call
- Enter Call Log
- Return to ongoing call screen if the user navigates to other applications during call.
- On Home screen, press to quick access to Settings menu or Notification panel to launch quick search to customize your Home screen by adding applications or changing wallpaper theme.
- On other screens, press to view options list.
- Short press Return to the Home screen or back to the current Home screen if it is extended.
- Long press: Enter the recently used applications list.
- Go back to the previous menu or screen.
- Short press: End a call
- Lock the screen
- Light up the screen
- Long press: When phone is off, power on the phone.
- When phone is on, enter Phone options: Silent mode, Airplane mode, Power off.
- Press to adjust the Volume (in call mode playing media)

Open Search bar for searching within an application, the phone or web.

1.2 Getting started

1.2.1 Set-up

Removing or installing the back cover



Inserting or removing the SIM card



Charging the battery



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.

You must insert your SIM card to make phone calls. Please power off your phone and remove battery before inserting or removing the SIM card.

Connect the battery charger to your phone and mains socket respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use, reduce the backlight time, etc.

Insert and click the battery into place, then close the phone cover.

Unclip the cover, then remove the battery.

Installing and removing the memory card (MicroSD card)



To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downwards. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.

You must insert your SIM card to make phone calls. Please power off your phone and remove battery before inserting or removing the SIM card.

Connect the battery charger to your phone and mains socket respectively.

To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use, reduce the backlight time, etc.

Insert and click the battery into place, then close the phone cover.

Unclip the cover, then remove the battery.

1.2.2 Power on your phone

Hold down the **End** key from the Home screen until the phone options appears, select **Power off**.

To access an application, touch it with your finger.

To access the available options for an item, touch and hold the item. For example, select a contact in Contacts, touch and hold the contact, options list will then appear on screen.

Press **Home** key to switch to Home screen.

Place your finger on the screen to drag an object to another location.

Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

Click

Similar to swiping, but clicking makes it more quicker.

Automatically change the screen orientation from portrait to landscape by turning the phone forward to have a better screen view.

From status bar you can view both phone status (on the right side) and notification information (on the left side). When the status bar is lit, it will appear touch to display hidden icons. You can touch twice an empty area on the Home screen to hide/show the status bar.

Touch **Close** to clear all event-based notifications (other ongoing notifications will remain).

To return to the Home screen, press **Home** key.

The phone provides a Search function which can be used to locate information within applications, the phone or the web.

To protect your phone and privacy you can lock the phone screen by creating a variety of patterns.

To customize recently-used applications, you can press and hold the **Home** key from Home screen. Touch an icon in the window to open the related application.

To adjust the volume (in call mode playing media) or press to adjust the volume (in call mode playing media).

1.3 Home screen

You can bring all the Home (applications, shortcuts, folders and widgets) you keep or use most frequently to your home screen for quick access. Press **Home** key to switch to Home screen.

Place your finger on the screen to drag an object to another location.

Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

Click

Similar to swiping, but clicking makes it more quicker.

Automatically change the screen orientation from portrait to landscape by turning the phone forward to have a better screen view.

From status bar you can view both phone status (on the right side) and notification information (on the left side). When the status bar is lit, it will appear touch to display hidden icons. You can touch twice an empty area on the Home screen to hide/show the status bar.

Touch **Close** to clear all event-based notifications (other ongoing notifications will remain).

To return to the Home screen, press **Home** key.

The phone provides a Search function which can be used to locate information within applications, the phone or the web.

To protect your phone and privacy you can lock the phone screen by creating a variety of patterns.

To customize recently-used applications, you can press and hold the **Home** key from Home screen. Touch an icon in the window to open the related application.

To adjust the volume (in call mode playing media) or press to adjust the volume (in call mode playing media).

1.3.1 Using the touchscreen

To access an application, touch it with your finger.

To access the available options for an item, touch and hold the item. For example, select a contact in Contacts, touch and hold the contact, options list will then appear on screen.

Press **Home** key to switch to Home screen.

Place your finger on the screen to drag an object to another location.

Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

Click

Similar to swiping, but clicking makes it more quicker.

Automatically change the screen orientation from portrait to landscape by turning the phone forward to have a better screen view.

From status bar you can view both phone status (on the right side) and notification information (on the left side). When the status bar is lit, it will appear touch to display hidden icons. You can touch twice an empty area on the Home screen to hide/show the status bar.

Touch **Close** to clear all event-based notifications (other ongoing notifications will remain).

To return to the Home screen, press **Home** key.

The phone provides a Search function which can be used to locate information within applications, the phone or the web.

To protect your phone and privacy you can lock the phone screen by creating a variety of patterns.

To customize recently-used applications, you can press and hold the **Home** key from Home screen. Touch an icon in the window to open the related application.

To adjust the volume (in call mode playing media) or press to adjust the volume (in call mode playing media).

Status icons

