

LIFE PURE XL

User Manual

Table of Contents

Safety Information	3
Appearance and Key Function	4
Introduction	5
Call Functions	6
Contacts	7
Messaging	8
Internet Browser	9
Bluetooth & Wi-Fi	10
Camera	12
Gallery	13
Music	14
Sound Recorder	15
Alarm Clock	16
FM Radio	16
Play Store	17
NFC	18
Settings	19
Storage	23

Safety Information

Please carefully read the terms below:

Use Safely

Do not use the phone in situations where it might cause danger.

Transportation Safety

Please observe all transportation laws and regulations.

Please drive with both hands on the wheel.

DO NOT TEXT AND DRIVE

Hospital Safety

Please follow hospital rules and limitations.

Please turn off your mobile phone when near medical instruments.

Airport and Flight Safety

Remember to follow all airport and flight safety regulations.

Please do not use your phone during flight.

Chemical Warning

Do not use your mobile phone around fuels or chemicals.

Temperature Warning

Do not subject your phone to extreme temperature conditions.

Water Hazard

Your phone is not waterproof. Keep it away from water and liquids.

Emergency Calls

Make sure your mobile phone is switched on and in a service area.

In home screen, tap the phone key and dial emergency.

 
Accessories and Batteries

Use only Blu authorized batteries and accessories.

Information Backup

Remember to keep a written record of all important information.

Appearance and Key Function

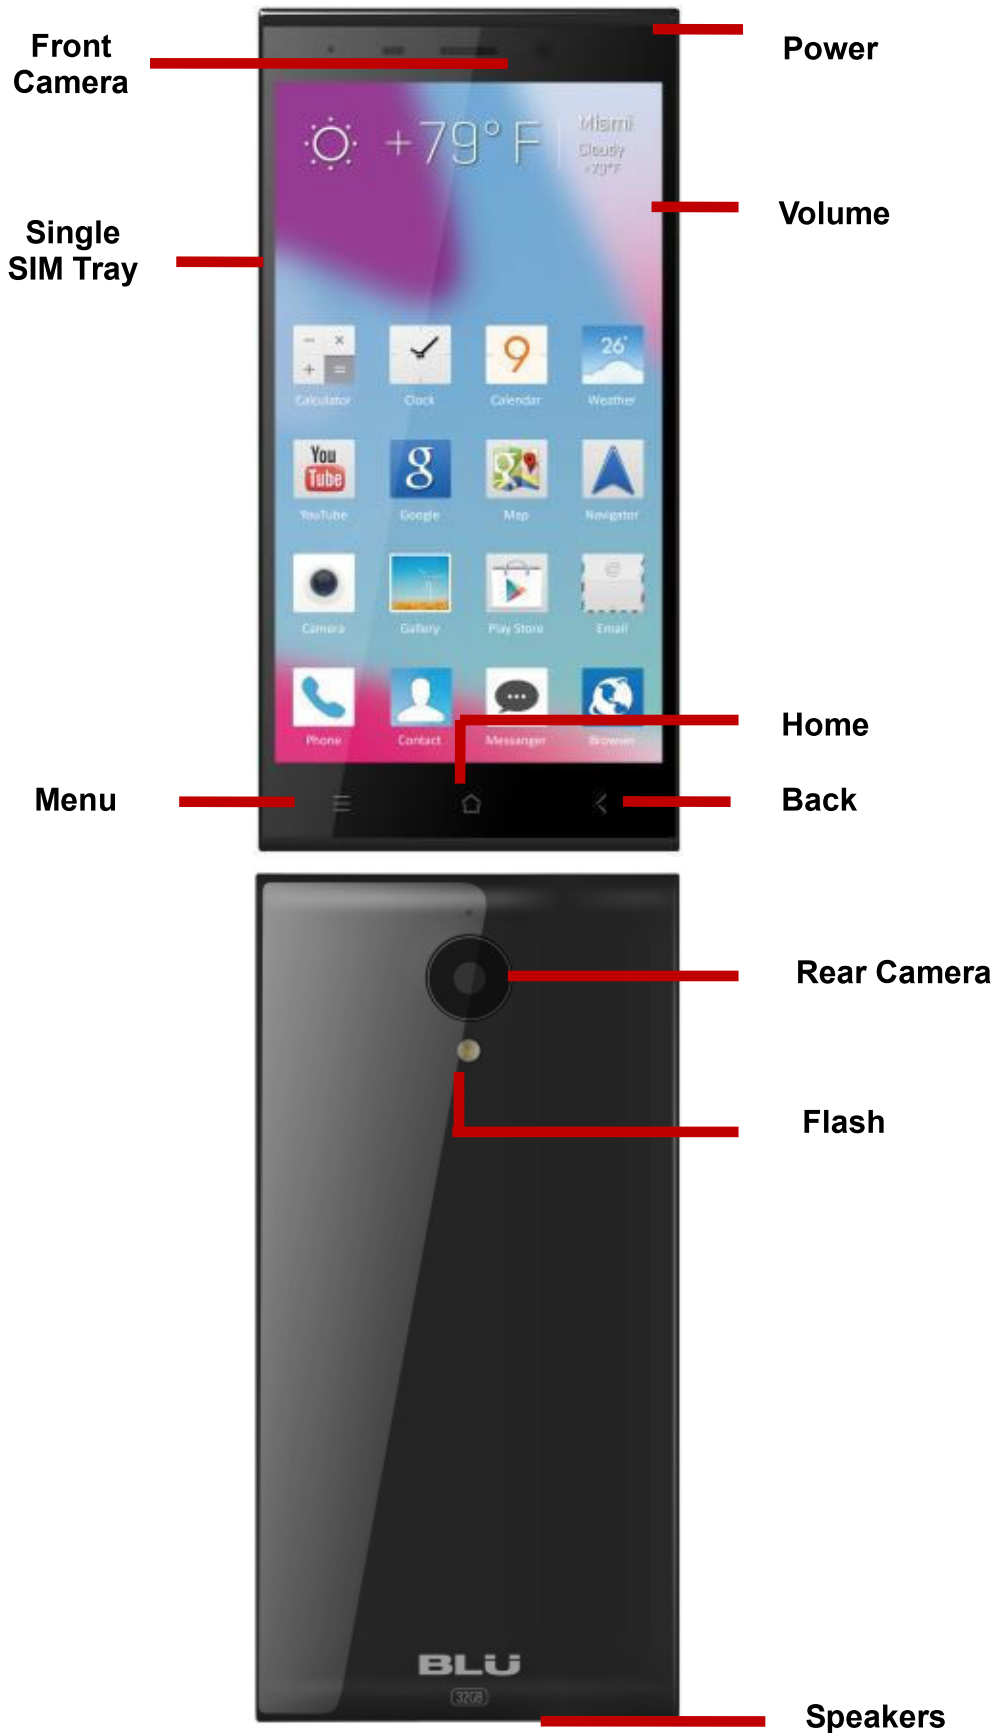

Introduction

Installation of the SIM Card

Please install the SIM card before using your phone.

 
Note: Please keep the SIM card out of the reach of children. The SIM card and its contact are easily damaged due to scratching or bending. Please be cautious when carrying, installing or taking out the SIM card.

To insert SIM card:

1. Switch off the mobile phone and use the SIM tool to open SIM tray.

Note: *The phone uses a Micro SIM card. Please make sure to obtain one from your mobile phone service provider.*

2. Place the SIM card in tray.

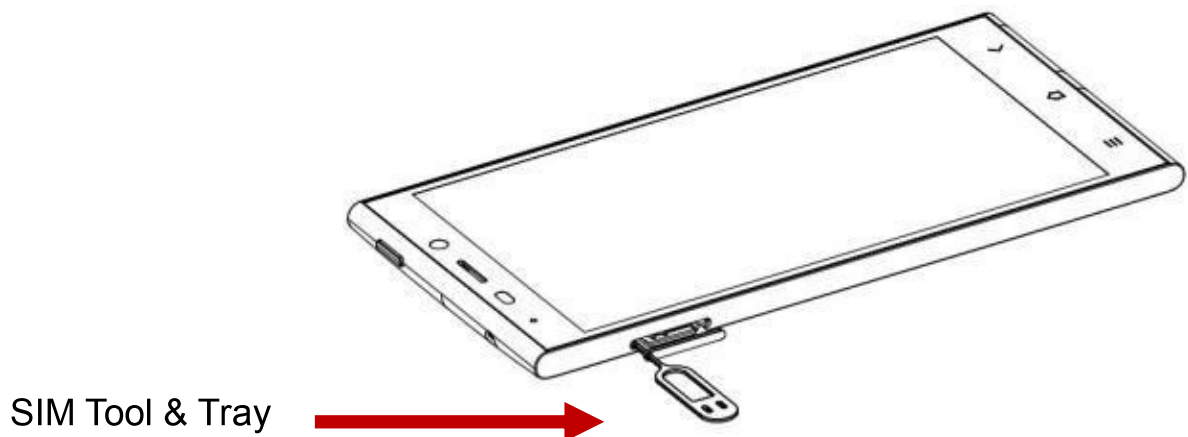

3. Insert the SIM tray and power on.

Power On and Off

On - Please ensure the SIM card has been properly inserted into the phone. Long press the Power key to switch the phone on.

 
Off - In standby mode, long press on Power key until an options menu appears. Select Power Off in the menu and confirm in the pop-up prompt to switch off the phone.

Password Lock

You may set a security lock feature as a security measure for the phone. For further information regarding password locks, password revision and other functions please enter into the security option in system settings.

Call Functions

At the dial keyboard, enter the phone number and then click the dial key. If dialing an extension, you may click the dial pad icon in the bottom of the screen to open the interface and enter the number of the extension. You may also press and hold the 0 key to add a (+) sign when adding an international dialing prefix.

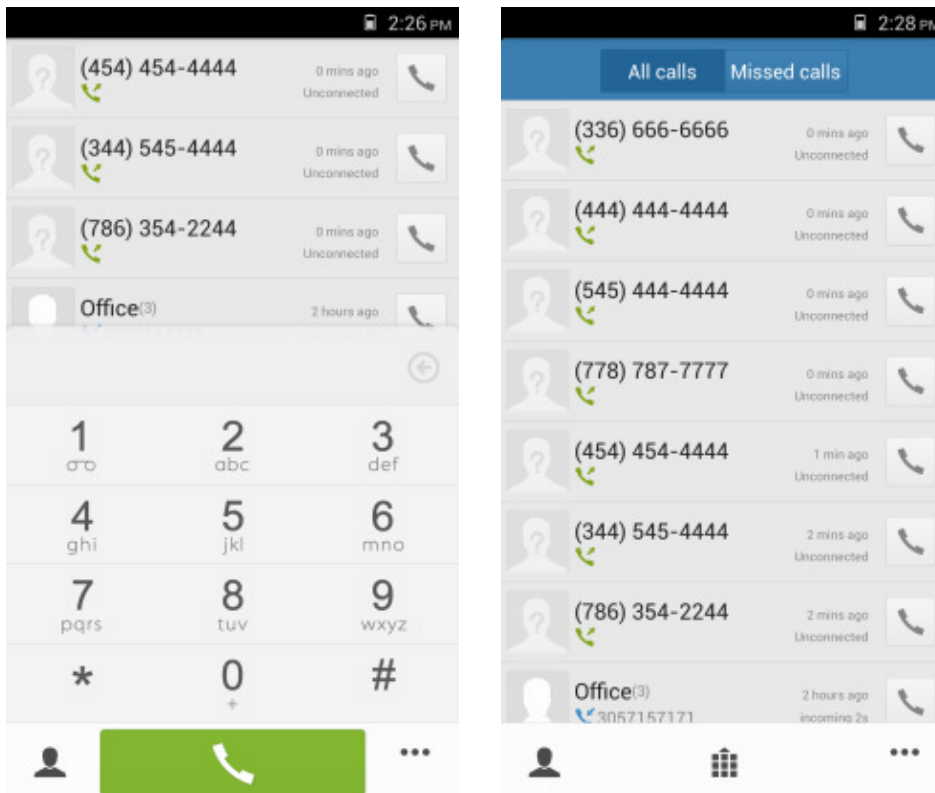

Call Logs

Every telephone number called and received will be saved in the phones call log. All numbers in the call log can be dialed directly by clicking the dial icon on the screen. When the number appears on the list, click it to view details.

 
Call Options

There are different options that can be used in the call log and dialing interface. You may press the menu key while in the dial interface and adjust speed dial and call settings. In the call logs, you may press the contact button to browse through contacts list.

Contacts

Enter: Click on the contacts icon

- The default display is the phone contacts and SIM card contacts
- The contacts are organized alphabetically by default.

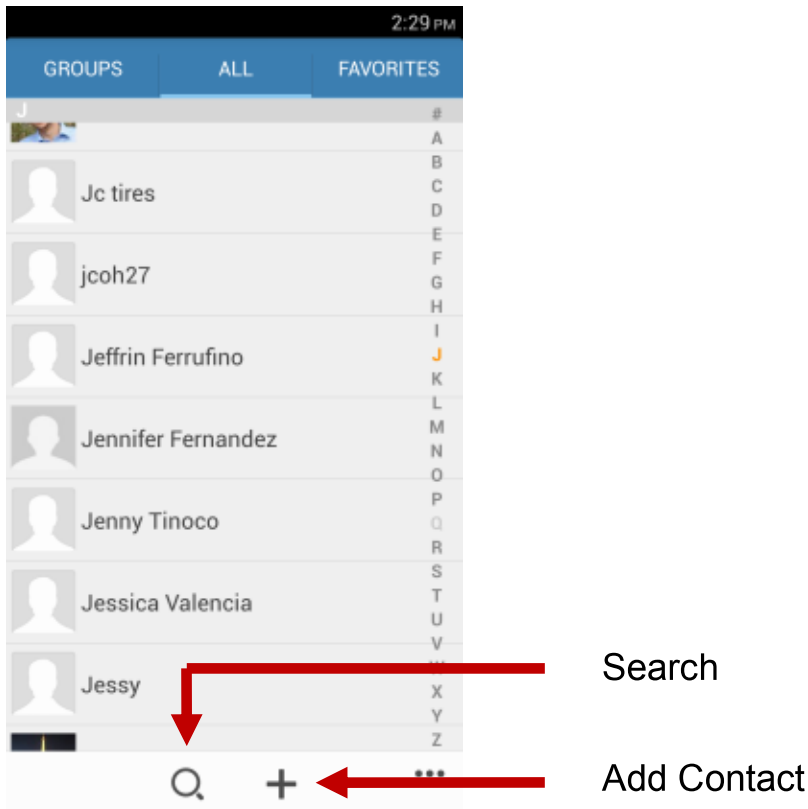


Click the Search icon to enter the contact search interface.

- Any numbers or letters associated with any of the contacts saved in the list will be shown in the search results.

Add New Contact

 1. Click the add contact icon (+) to add contact.
2. Select to save your contacts to the Google account, the phone or the SIM card.
3. You may enter different contact details which include adding a picture, name, telephone number, group, address, and email among other options.
4. Click to finish and save contact.

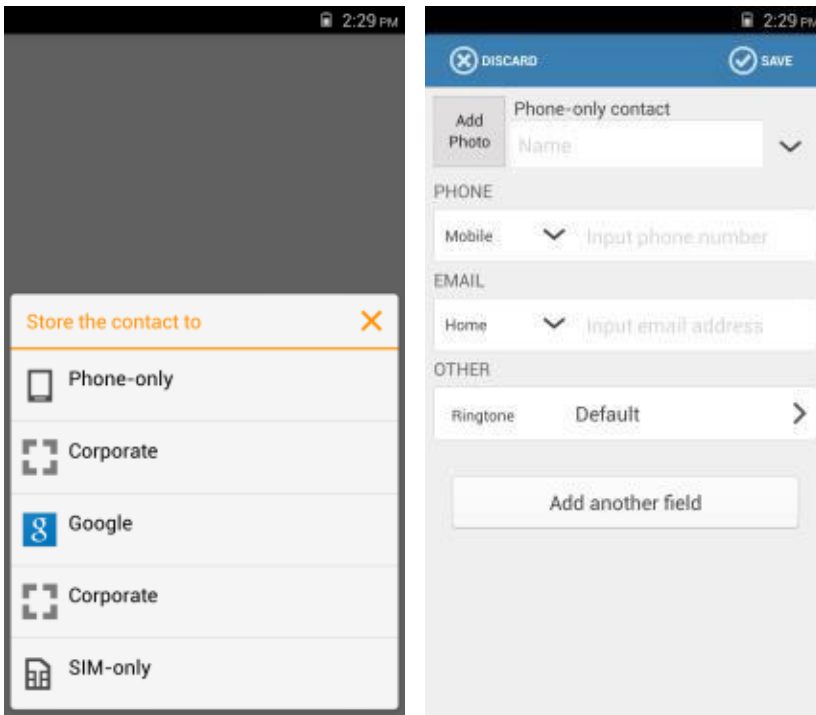

Messaging

You may use this function to exchange text messages and multimedia messages with your family and friends. The messages to and from the same contact or phone number will be saved into a single conversation so you may see the entire message history conveniently.

Send an SMS

 
Click on the Messaging icon and select new message

1. Click to enter recipient
(You may enter contacts from contact book or enter a new number)
2. Compose Message
3. Send

Send an MMS

When creating message, the default message style is SMS. The message will automatically convert to MMS when adding an attachment.

1. Click the attachment icon in the messaging interface.
2. Click to select attachment type and create an MMS message.

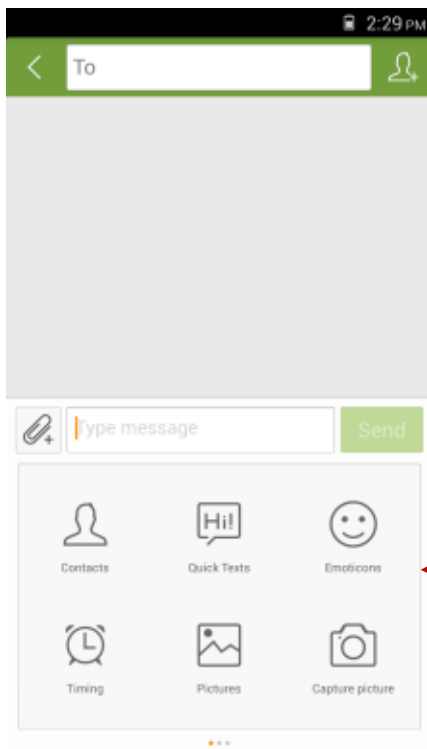

Attachment Type
for MMS
Message

Internet Browser

Menu Functions

Backward

- After browsing through multiple pages, this option will return the user to the previous page.

Forward

- After browsing through multiple pages, this option will move to a web page after the current page.

Windows

- You may view all windows open by clicking the windows icon in the upper right part of the browser.

Bookmarks

- Click the save to Bookmarks option to make the current URL as a saved Bookmark.
- Click Bookmarks/History to opened saved bookmarks.

More

 
Find on page: Search current page.

Share page: Select to share the current page.

Save for offline reading: Saves page for offline reading.

History: Show your browsing history and view the most visited pages.

Settings: Contains a variety of browser settings.

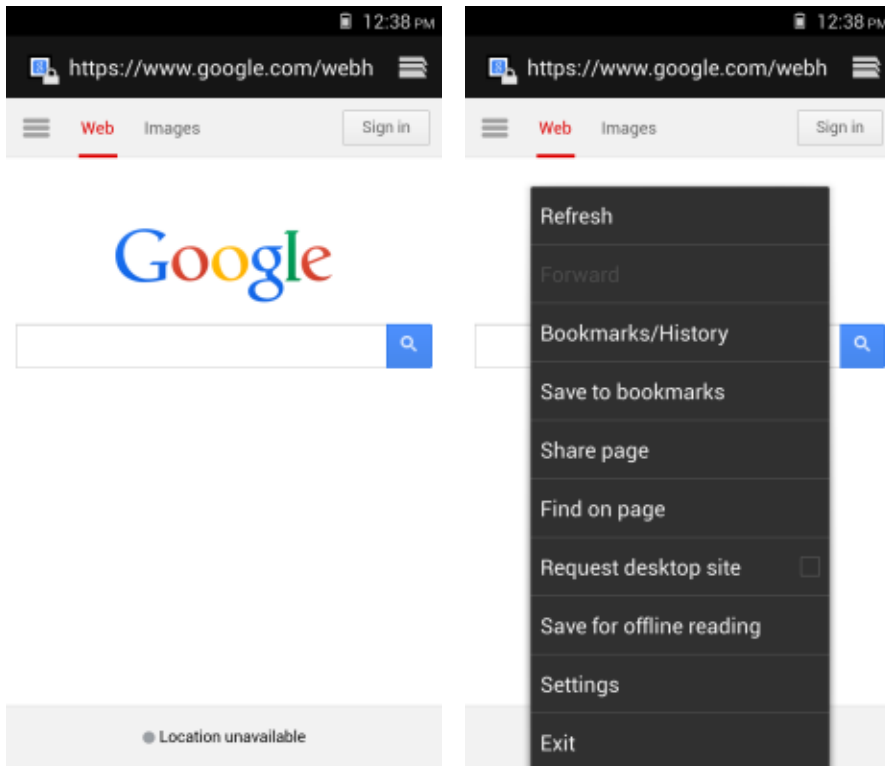


Bluetooth & Wi-Fi

Bluetooth is a short-range wireless communications technology that devices can use to exchange information and connect to different types of devices which include headsets and other devices.

Power on Bluetooth

- 1) Settings » Bluetooth and select to power on Bluetooth.
- 2) The Bluetooth icon will appear in the notification bar. Click “scan for devices” and the phone will start to scan for all devices within range.
- 3) In Bluetooth settings all the devices found will displayed in the list under the icon.

 Note: *The maximum detecting time of the phone is 2 minutes.*

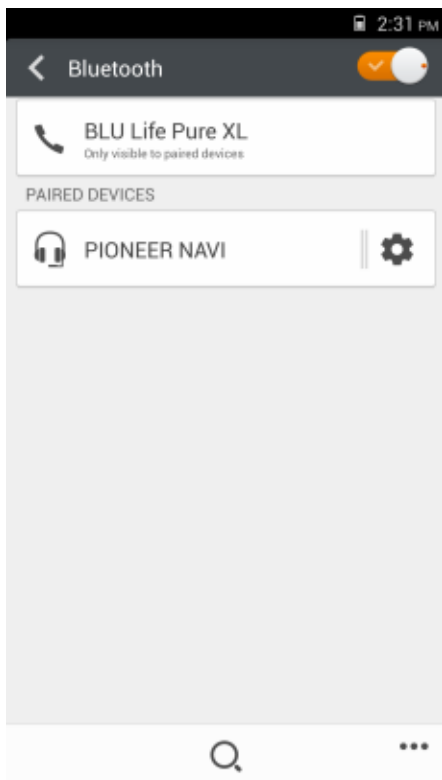


List of available devices

Power on Wi-Fi

1) Settings » Wi-Fi and select ON to power on Wi-Fi

2) Click on the desired Wi-Fi network to be connected.

 Unsecured networks can be connected to directly - secured networks require a password or credentials prior to connection

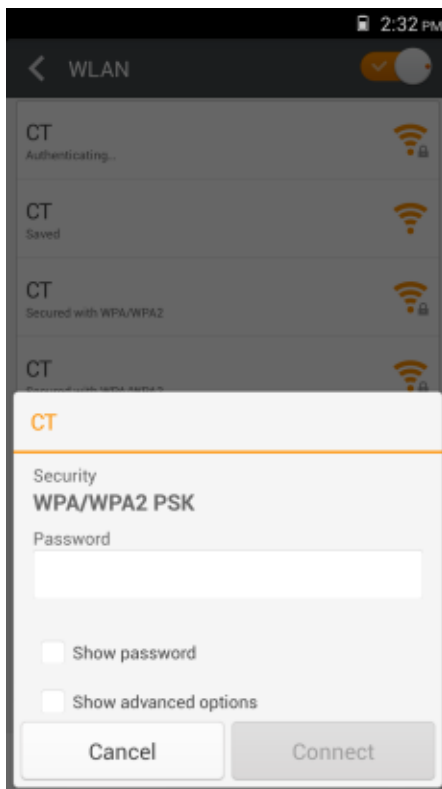

List of available networks and the network connection screen

Camera

Open Camera

 
1. Click on the Camera icon
2. Switch to video mode if you want to record videos.

Note: You may also place a camera shortcut on any of the screens

Take Pictures

1. Aim the object that the picture will be taken.
2. Press the “Shutter” button on the screen.
3. After taking the picture, the file will be saved in the camera’s gallery folder.
4. You can view the photos by clicking the preview box button.


When in the camera viewfinder mode, you can switch to video or photos’ gallery. On the camera viewfinder mode, you will find the display the preview of the previous picture taken. Click the preview box and the photo will display in full screen.

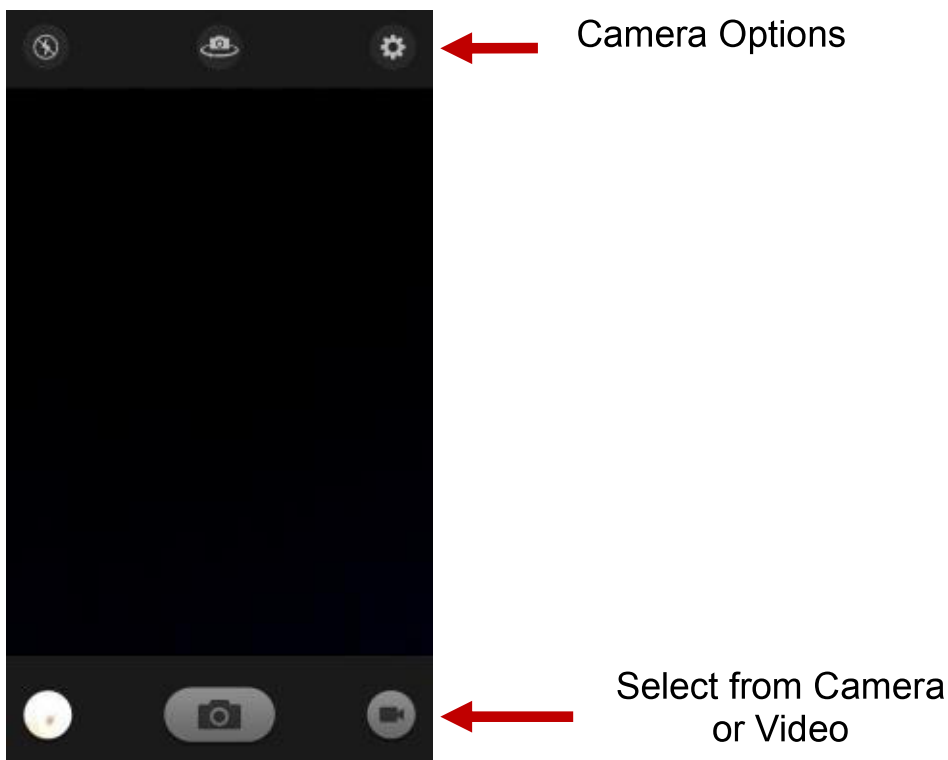

Gallery

Open Images

 Click on the Gallery Icon

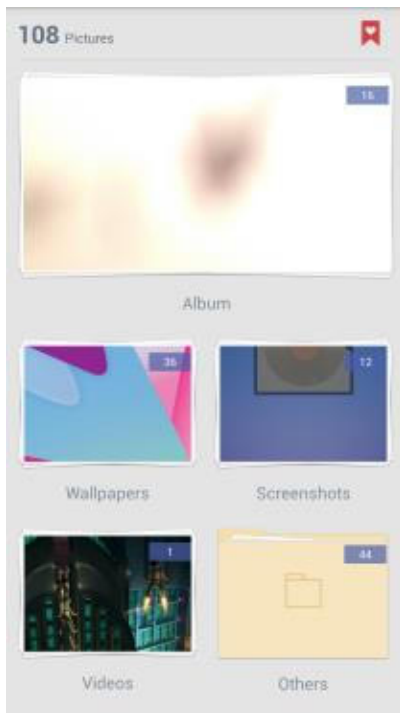

The gallery is organized in different albums

Share Pictures

You may share pictures by sending them through different types of installed applications. You may also send pictures through the MMS message function by composing a message and attaching the picture. Any image can also be sent via the Bluetooth function by selecting Bluetooth equipment that has been paired.

Adjust Image

Press Menu and Edit to adjust images

You may select from different effects that may include: Vintage, Black and White, Instant, Latte, Litho, X-Process, Crop, Rotate, Mirror, Straighten, Vignette, Contrast, Exposure, Auto color, Shadows, Vibrancy, among other settings that can be used to adjust picture images.

View Images

In the picture interface, click on an album to view images

You can choose to display small or large thumbnails. In the photo album, scroll the picture towards left to view the next picture or towards right to view the previous one.

 
Crop Pictures

1. If you want to adjust the size of the picture, use the crop tools. Once the arrow appears, pinch your fingers in or out to adjust the size. If you want to adjust the image and keep its proportion, please hold down any of the four corners of the image and adjust.

Music

Open Music

Click on the Music icon

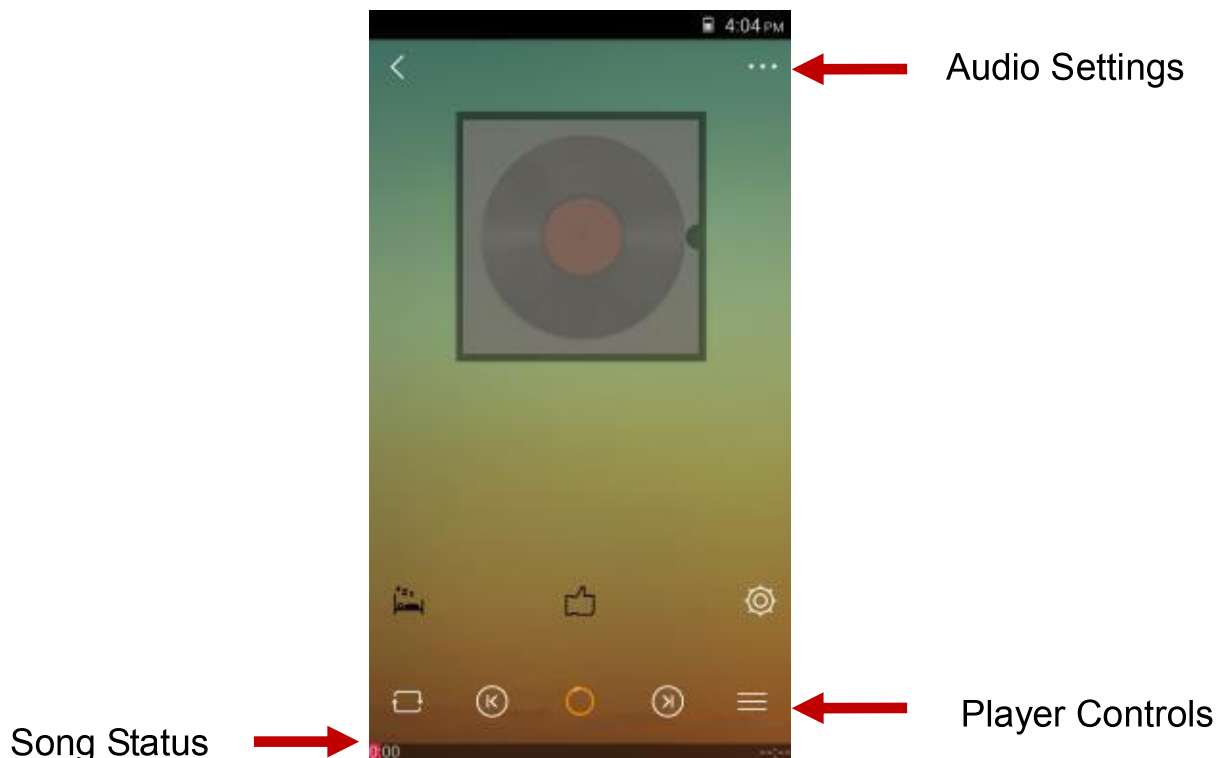

Search Music

You may choose to search for music from media folder through artist name, song name, album name. **The following formats are available:** AMR, MIDI, MP3, WAV, and OGG.

Sound Recorder

 
The Sound Recorder can record voice or any audio.

You may send any recorded audio via Bluetooth or MMS and also have the option to make any recorded audio the phones default ring tone.

The recorder uses AMR, 3GPP, and OGG format.

Record

- Keep the phone's microphone near the voice source.
- Click the record button to record the audio.
- Click the stop button to stop recording the audio.

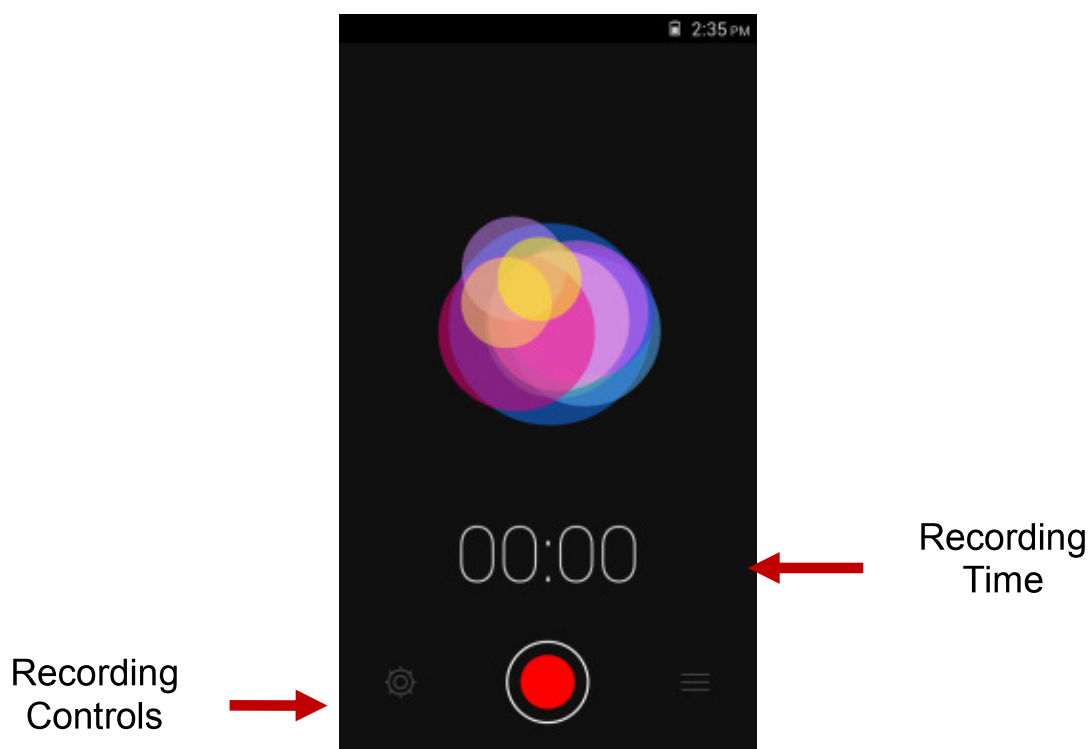

All recordings will be saved in the recording folder in the default music program and can be accessed from the sound recorder application

Alarm Clock

1. Click on the Clock icon
2. Click set alarm button and enter the alarm clock set interface where you may add and edit alarms



Click to add, edit or delete alarms

FM Radio

 
FM Radio

Through this function, you may listen to FM radio on the device. The FM radio uses the wired headphones as an antenna in order to receive signal. Before using this function, connect the original equipment headphones that came with the phone.

Open FM Radio

Press the FM Radio icon.

1. Click "Search" automatic scans of FM channels.
2. Click to add favorite radio stations.

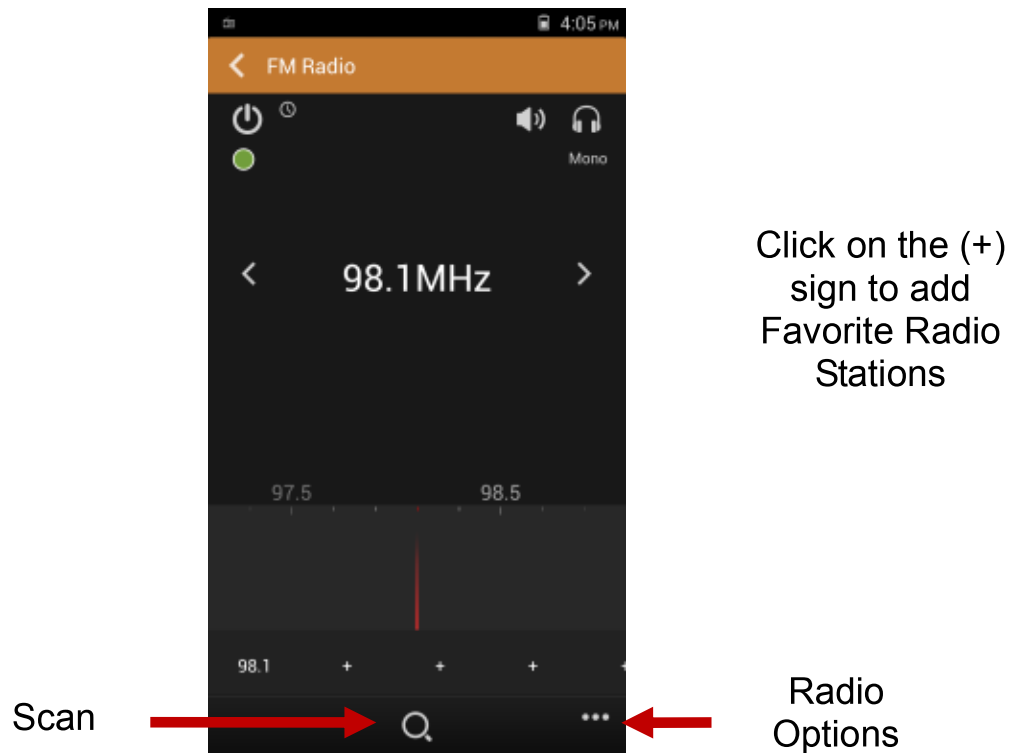


FM Radio as Background

Click on the Home key to move the FM Radio to the background.

Play Store

 
Google Play allows you to download music, movies, and even games. Click the Play icon to sign in with your Google account.

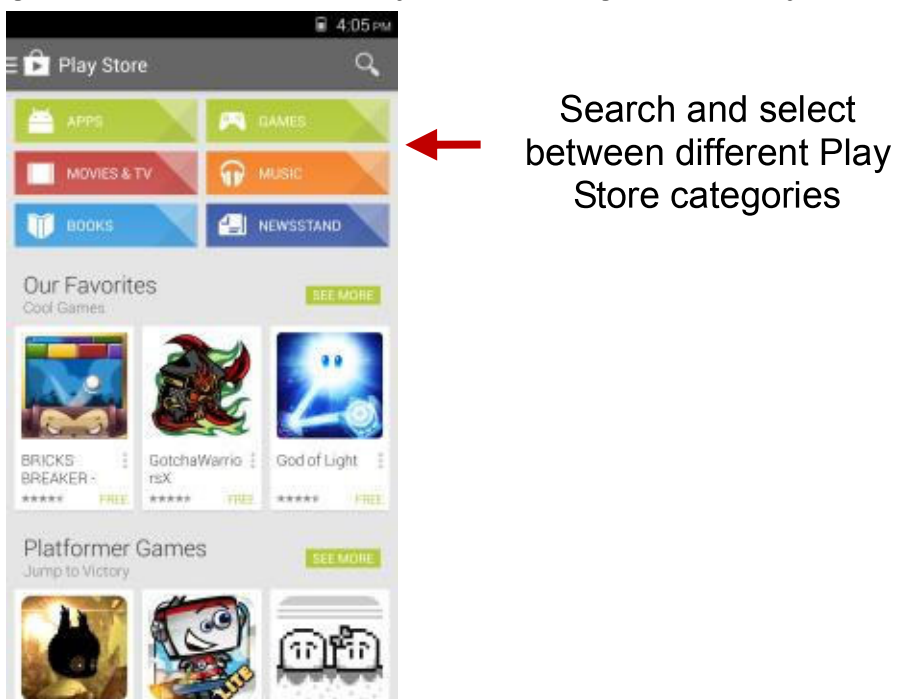

NFC


NFC is a set communication standard that allows sharing of information through a short range wireless signal. You may exchange contacts, pictures, music, videos, webpages, and different files.

 - Click to power on NFC and select NFC Mark to enter the NFC menu. There is some NFC tags setup by default.

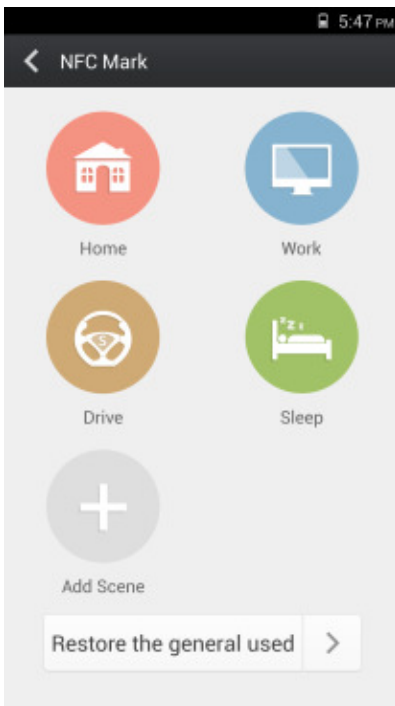


NFC Mark Screen with Default Tags and customizable option

 To Sync a new tag with another phone, touch both phone's backs together. **Note:** Must be within 15mm of each other

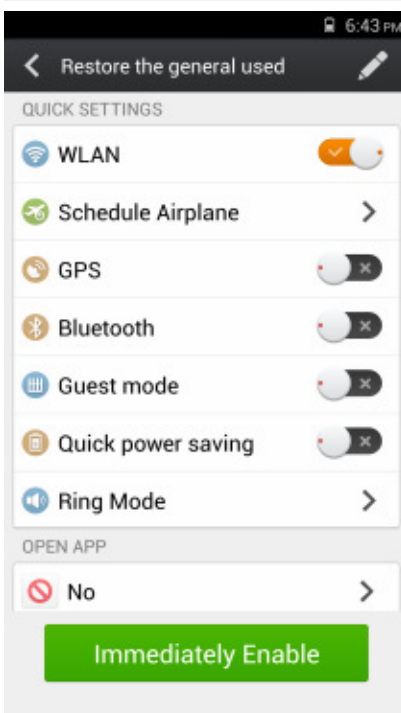

 NFC Quick Settings menu which allows you to set different exchange parameters and notifications

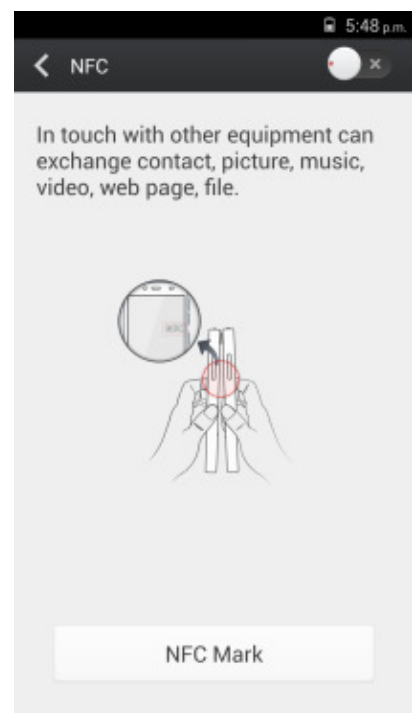

Settings

Airplane Mode

- Turn on Airplane Mode.

***Note:** When in flight mode, all network connections will turn off automatically.*

Mobile Networks

- Select Mobile Data Connection and APN settings.

Wi-Fi / WLAN

- **Settings » Wi-Fi » Click Wi-Fi** to power on. When on, the Wi-Fi will automatically search for available networks. Any unsecured network can be used directly and any secured network requires a password or credentials prior to connection.

NFC

Near Field Communication (NFC) allows transferring of information by touching one phone to another via a short range radio communications.

Bluetooth

- Press the switch to power on Bluetooth. Once on, the Bluetooth will automatically scan for any nearby open equipment.

More Wireless

- Data Usage
- VPN
- Tethering & Portable hotspot

Sound and Vibrate

This option sets the phone tone settings for receiving calls or notifications. Some of the settings include

- Vibrate, volume, ring tones, ring tones notification and

haptic feedback tones



Display

Brightness, Auto rotating screen, Wallpaper, Screen Timeout



Suspend Button

Adds quick access buttons for screen lock, settings, and home menus



Security

Basic screen locks: use a Pattern, PIN or Slide to lock the screen.

- Pattern: The first time there will be simple unlock instructions and examples. Click “next step” to continue the security pattern step.
- PIN: Enter PIN number to unlock the screen.

You may stop the security feature at any time.

Set up SIM card PIN lock

- SIM card PIN (Personal Identification Number) is used to prevent unauthorized use of SIM card.

To change a blocked PIN code, you will need to unlock the SIM lock then go to the Change Password screen. The phone will automatically prompt you enter the old PIN code and ask to enter a new PIN code twice. The phone will then prompt you that the change was successful. If you enter the PIN incorrectly three times, the SIM and PIN codes will be automatically locked. You will need the PUK code to unlock the phone which is available through your service provider. If you enter the PUK code incorrectly 10 times, the SIM card will be permanently locked. Please see your service provider for a new SIM card.

- Password visible – Make the password visible when it's typed.
- Use security credentials - Allow applications to visit security credentials or other credentials.
- Install the encrypted certificate.



Location Access

- Mobile Network - Use wireless services to find locations in applications.
- GPS satellite sets accuracy and positioning to street level



Add Account

- Add Corporate, Email, or other application accounts.



Battery

- General power usage



Storage

- View the phone memory usage.



Apps

- Manage applications - Manage and delete installed applications.
- Running Applications- Press the “Force Stop” button to stop any of the applications listed and removes from the running apps list.



LED Light

- Set LED reminders



Smart Gesture

- Set smart and air gestures.



Date & Time

- Automation - Use date and time provided by Network.
- Date and Time adjustment.
- Time Zone - Select Time Zone according to where your location.
- Select Date Format - There are 3 kinds of formats you can choose from: Month-Day-Year, Day-Month-Year and Year-Month-Day, and Year-Month-Day which is the default setting.



Schedule airplane On/off

- Schedule airplane mode on and off



Language and Input

- Language – Change the language of the phone.
- Custom Dictionary - Add or delete words to the custom dictionary.
- Keyboard Settings – Haptic vibration, Haptic tones, Capitalizing, Speech Input, Inputting words, Predictive text function, Auto-Text, Input keyboard method



System Backup

- Backup Data – Contacts, SMS, Call Log and Email



Backup & Reset

- Backup Data – Will back up all application data, WLAN passwords, and other settings to Google's servers
- Restore to Factory Settings - Clear all data stored on the phone.



Accessibility

- Power button ends call
- Speak Passwords
- Web accessibility



Developer Options

If the phone does not display Developer options, to access: Press “Build number” seven (7) times in the about phone tab in settings.

- The developer options gives access to USB Debugging and other developer options

 


About Device

- You can check the information on status
- Check for software or firmware updates

Storage

Connect the phone with the USB cable provided. Once connected, a connection interface will appear. Once in the connection mode interface, select USB mass storage under File Copy and turn on from the connection screen to be able to transfer files.

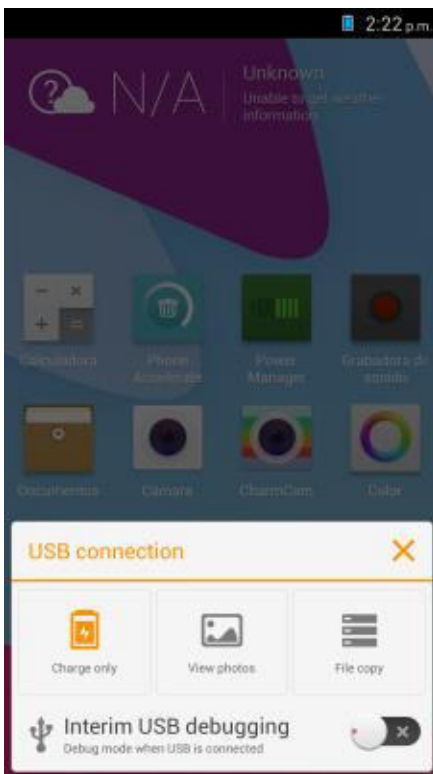

Some system settings and user interface (UI) options may vary depending on SW version.