

IDEOS

 
Quick Start

1. What is in your box

Your phone box contains the following items:

- Mobile phone
- Battery
- Charger
- USB cable
- Headset
- Quick start guide
- Safety information


2. Phone at a glance

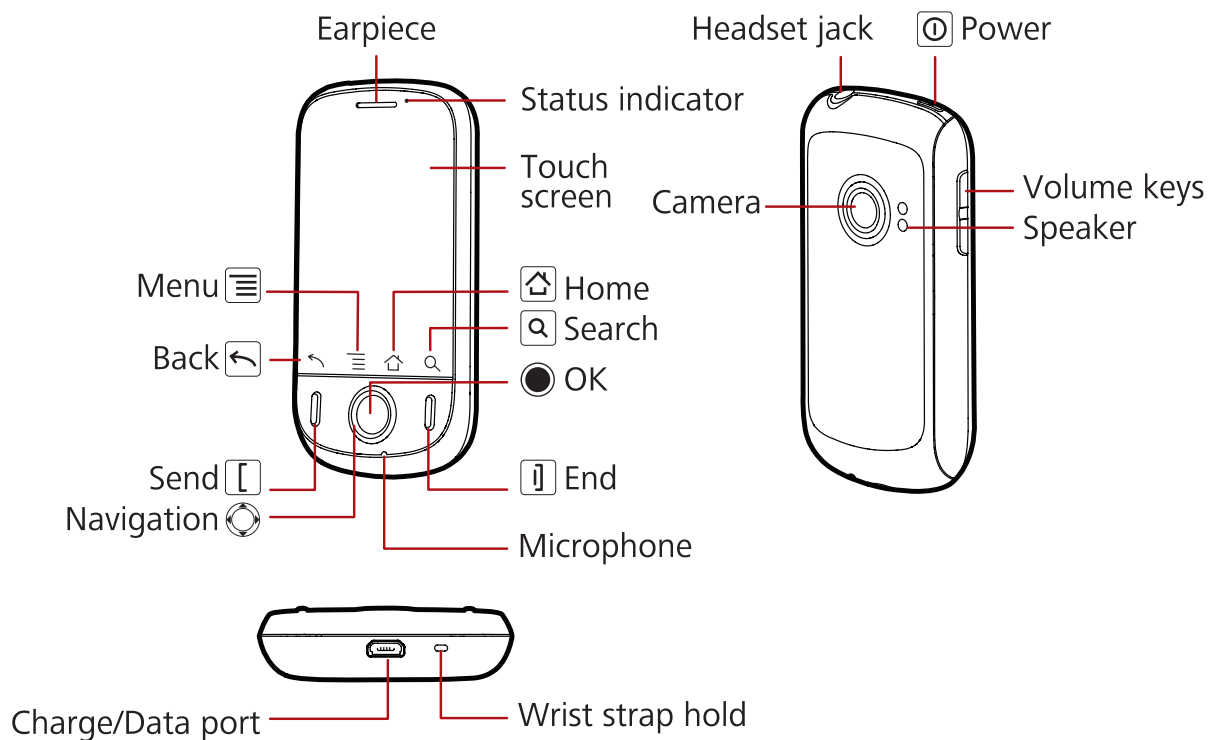


- : Press to open the menu on an active screen.
- : Touch and hold to open the Recent panel.
- : Press to go to the Call log screen.

3. Before getting started

 Installing the SIM card

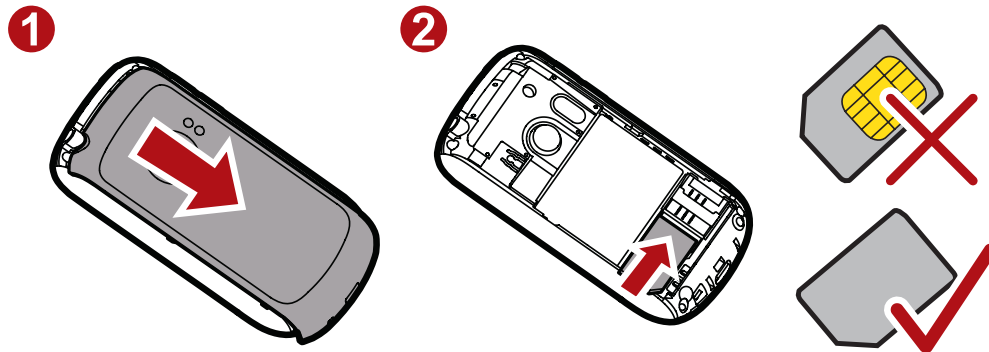


 Installing the microSD card* and the battery

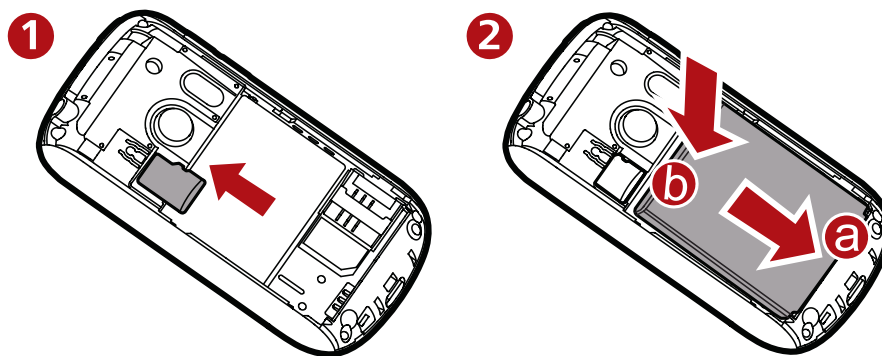

★ *microSD card is optional.

 4. Charging the battery

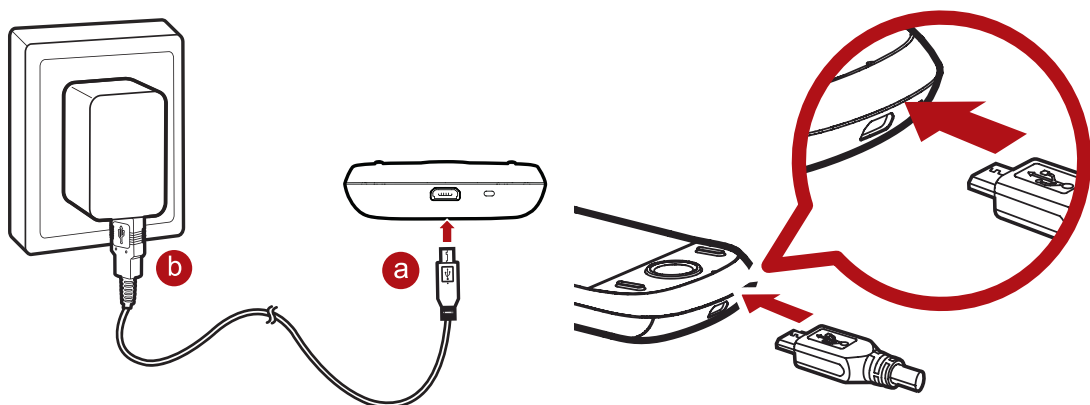

The color of the status indicator tells the battery status of your mobile phone.

- Green: Fully charged (when connected to charger).
- Orange: Charging (when connected to charger).
- Red: Battery low.

5. Powering on or off your mobile phone

Powering on your mobile phone

Press  to power on your mobile phone. The first time you do this, you will be asked to sign in to your account and set up your mobile phone.

 Note: You need an Internet connection to set up accounts.

Powering off your mobile phone

Press and hold  to open the Phone options menu, and then touch Power off.

 
6. Using the Touchscreen

- Touch: Touch a desired item with your finger to confirm your selection or start an application.
- Touch and hold: Touch and hold the screen until your mobile phone responds. For example, you can always touch and hold the screen to open the options menu of the active screen.
- Flick: Flick your finger vertically or horizontally across the screen.
- Drag: Touch and hold your desired item with your finger.

Then, drag the item to any part of the screen to move the item.

7. Home screen

Home screen view

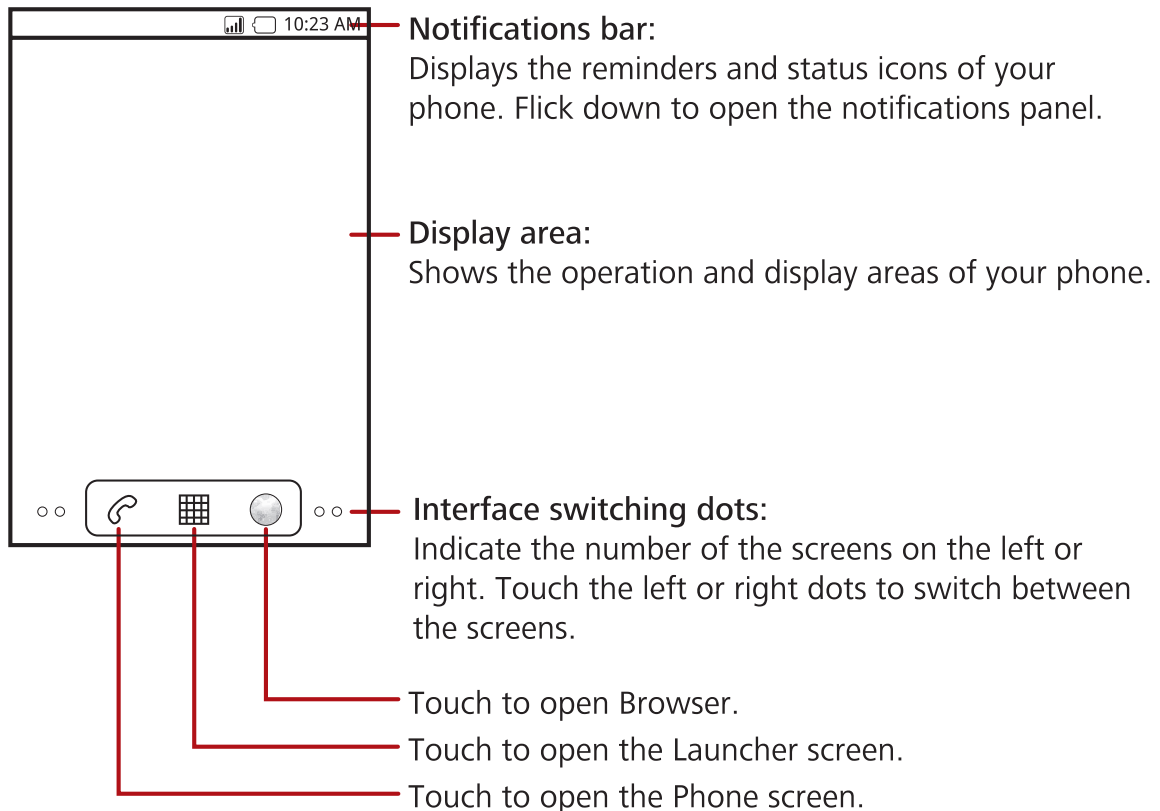


- ★ Touch and hold the small dots on the lower left or right of the screen to view thumbnails of the Home screen and its extensions, which you can touch to open.

Locking the screen

- When your mobile phone is on, press  to lock the screen. When the screen is locked, you can still receive messages and calls.
- If you leave your mobile phone idle for a while, the screen will lock automatically.

Unlocking the screen

 1. Press , ,  or  to wake up the screen.
2. Drag the lock icon from left to right to unlock the screen.

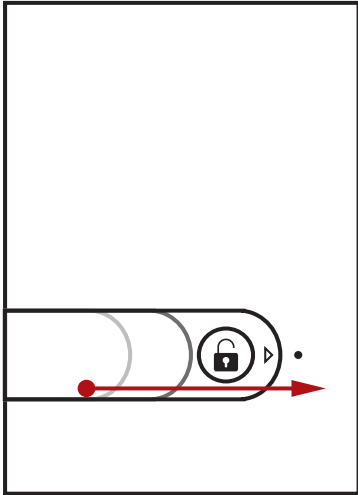

Adding a new screen item

1. Touch and hold a blank area on the Home screen until the Add to Home screen menu is displayed.
2. Select an item to add it to the Home screen.

8. Getting your contacts into the phone

Importing contacts from a SIM card

1. In the contact list, press , and then touch Import/Export.
2. Touch Import from SIM card. Wait for the SIM card contents to be loaded.
3. Select the check boxes of the contacts you want to import.
 - ★ You can press , and then touch **Import all** to import all contacts from SIM card.

 
Adding a contact

1. In the contact list, press , and then touch **New contact**.
2. Enter the contact's name, and then add detailed information such as phone number or address.
3. When you are finished, touch **Done** to save the contact information.

9. Making a call

Making a call with the dialer


1. To make a call, you can use the Phone application.

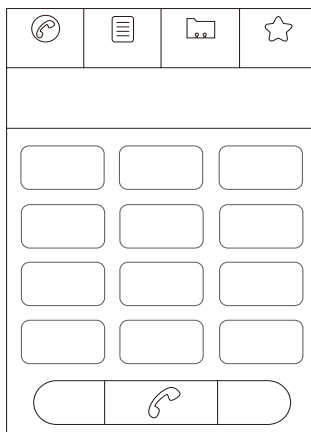

2. Touch the appropriate numeric keys to enter the phone number.
3. Press  or touch  to initiate the call.
4. When finished, press .


Answering an incoming call

 - Press  or drag  to the right to answer the call.

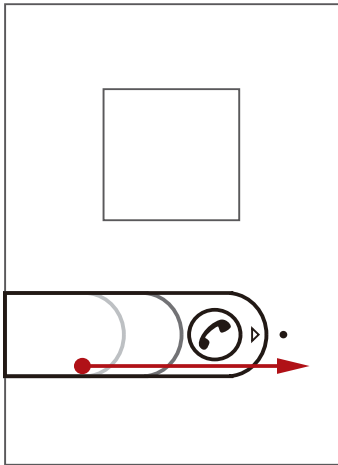

Rejecting an incoming call

 - Press  or drag  to the left to reject a call.

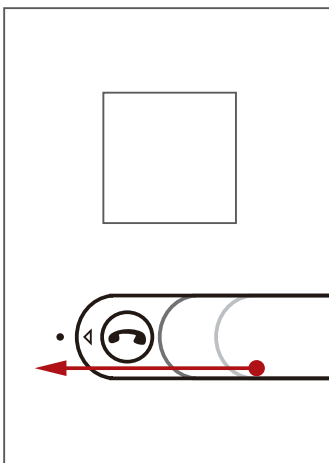

10. Entering text

Using the onscreen keyboard

- Touch the space where you will enter your text to show the keyboard.
- Press  to hide the keyboard.

Switching the input method

Touch and hold the space where you enter your text until the Edit text menu is displayed. Touch Input method.

11. Sending a message

1. Touch Launcher > Messaging > New message.
2. Enter a phone number in the To field.
3. Touch the Type to compose text box to start entering your message.
 - ★ On the edit messages screen, press  to display the options panel. Touch **Add subject** to add the message subject or touch **Attach** to add a picture, music, or video file.
4. When you finished editing message, touch **Send** to send the message.

12. Getting connected

Connecting to a wireless network

1. On the Home screen, press  > **Settings**.
2. Touch **Wireless & networks** > **Mobile networks**, and then select the **Data enabled** check box to turn on data services.
 - ★ If you do not need a wireless network, you can uncheck the **Data enabled** check box to save data traffic costs.

Connecting to a Wi-Fi network

1. On the Home screen, press  > Settings.
2. Touch Wireless & networks, and then select the Wi-Fi check box to turn on Wi-Fi.
3. Touch Wi-Fi settings. You will see a list of detected Wi-Fi networks in the Wi-Fi networks section.
4. Touch a Wi-Fi network to connect to it.

When you connected to a Wi-Fi network,  will display on the notifications bar.

Sharing data connection as a portable Wi-Fi hotspot

1. On the Home screen, press  > Settings.
2. Touch Wireless & networks > Tethering & portable hotspot.
3. Select the Portable Wi-Fi hotspot check box to share your data connection.
 - ★ When **Portable Wi-Fi hotspot** is selected, you can touch **Portable Wi-Fi hotspot settings** to change its network name or secure it.

Opening a web page

On the Home screen, touch  to open the browser.

- ★ When both of the known/open Wi-Fi networks and the wireless networks are available, your phone selects a Wi-Fi network for internet access.

13. Using the microSD card as USB mass storage

To transfer your favorite music and pictures from your PC to your mobile phone's microSD card, set the microSD card as USB mass storage.

1. Connect your mobile phone to your PC with the USB cable. Your PC will detect the microSD card as a removable disk.
2. Open the notifications panel, and then touch USB connected.
3. Touch Turn on USB storage in the dialog box that opens to confirm that you want to transfer files.

You can now transfer files from your PC to your mobile phone's microSD card.

14. Personalizing your phone

Changing the wallpaper

On the Home screen, press , and then touch Wallpaper. In the options menu, select a picture application. Select the wallpaper you want to use.

Changing the ringtone

On the Home screen, press , and then touch Settings > Sound > Phone ringtone. Select the ringtone in the list and then touch OK.

 
Changing the message ringtone

On the Home screen, press **Launcher > Messaging**, and then press **☰ > Settings > Select ringtone**. Select the ringtone in the list and then touch **OK**.

15. Taking a picture or recording a video

Taking a picture

1. On the picture capture screen, frame the picture within the screen.
2. Press  or  to take a picture.
3. You can change picture settings through the settings option.

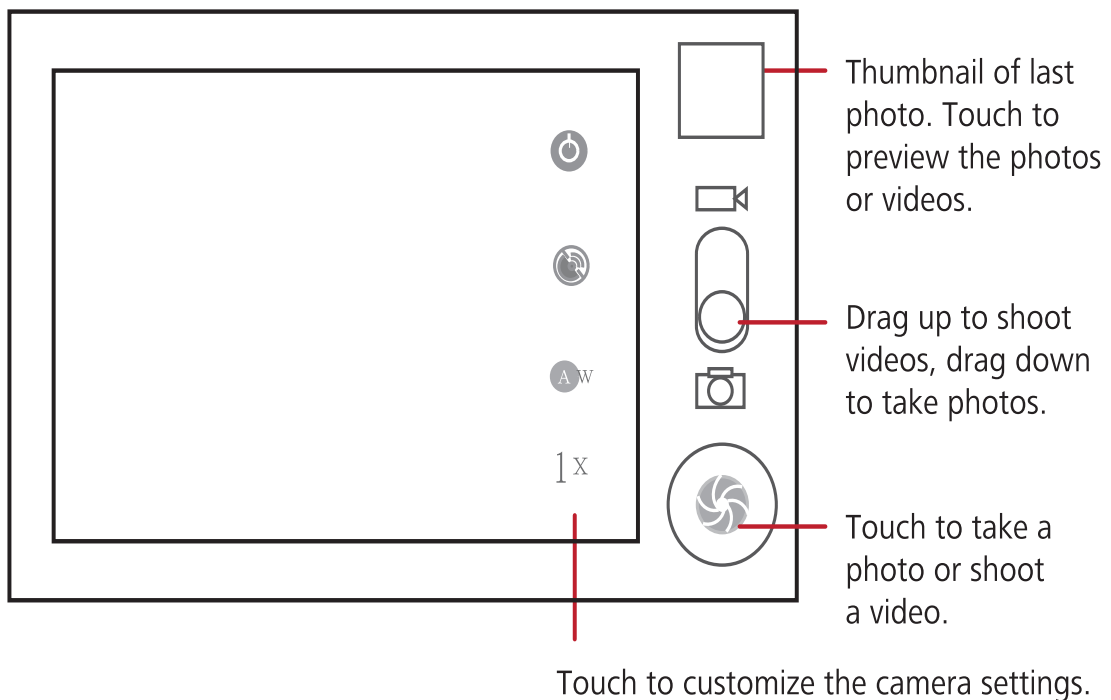

Recording a video

1. Switch from the picture capture mode to the video capture mode.
2. Frame your object.

 
3. Press  or  to start or stop recording a video.

16. Listening to your favourite music

Using your music player

Once you have done this, the player will search for music on the microSD card. After the search is complete, you will be able to view all available music files in the music library.

So before you open **Music**, you must copy music files from your computer to the microSD card.

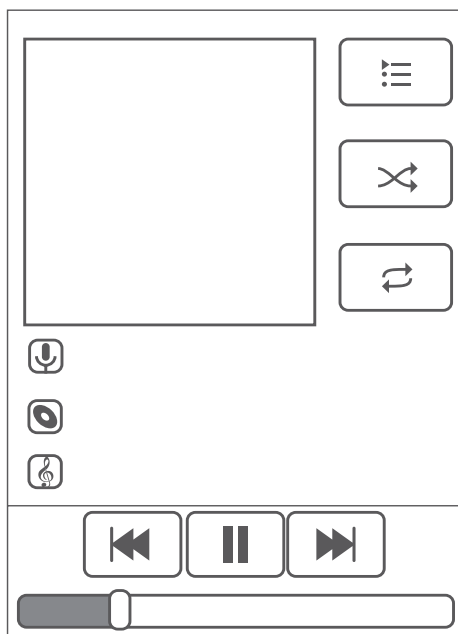

Music widget

When you listening to a music in background, you can control the Music player through the **Music widget**.



17. Market

Opening Market and searching for an applicaiton

1. Touch Launcher > Market. When you open Market for the first time, the Android Market Terms of Service window will appear. Touch Accept to continue.
2. Touch the Search icon at the upper right of the screen or touch . Enter your desired name to search for the application.
3. Touch a search result to see details about the application.

Downloading and installing an application

1. Touch Install or Buy at the bottom of the screen.
2. After the application has been downloaded and installed on your mobile phone, the content download icon appears in the notification bar.
3. You can find the application icon on the Launcher screen.

① Availability of Google applications, services, and features may vary according to your country or carrier.

18. Restoring factory data

If you reset your phone to the settings that were configured at the factory, all of your personal data stored on the phone , including information about your Google Account, any other accounts, your system and application settings, and any applications you have downloaded will be erased.

Resetting the phone does not erase you have downloaded or any files on your microSD card, such as music clips or photos.

- On the Settings screen, touch Privacy > Factory data reset.
- When prompted, touch Reset phone, and then touch Erase everything. The mobile phone resets the settings to the original factory settings, and then restarts.

19. Frequently Ask Questions (FAQ)

How do I disable the function of automatic orientation switching when rotating the phone?

Touch Settings > Display > Auto-rotate screen to disable the function.

How do I set the unlock pattern?

Touch Settings > Location & security > Set up screen lock > Pattern.

How do I change the keyboard mode?

Touch and hold the area where you write text and then select the input method you prefer.

How do I stop the song playing in the background?

Touch the notification bar, flick downwards to open the notifications panel, and then touch the music playing notification to go to the music playing screen.

How do I return to the calling screen?

While on a call, if you are on another screen, you can touch the notification bar, and drag downwards to open the notifications panel. Then touch the current call notification to return to the calling screen. Also you can press  to return to the calling screen.

How do I create an application shortcut on the Home screen?

Touch and hold an application icon on the Launcher screen until the Home screen is displayed. Then drag the icon where you want it to go and release your finger.

How do I hide the keyboard?

Press  to hide the keyboard.

How do I forward a message?

Touch and hold a message in a message window, and then touch Forward in the menu that opens.

Why am I unable to use Navigation?

Navigation is unavailable in some countries or regions. For details, please search in Google.

20. Notice

Copyright © Huawei Technologies Co., Ltd. 2010. All rights reserved.

THIS DOCUMENT IS FOR INFORMATION PURPOSE ONLY, AND DOES NOT CONSTITUTE ANY KIND OF WARRANTIES.

All the pictures in this guide are for your reference only. The actual appearance and display features depend on the mobile phone you purchase.

