



Lenovo A6 Note

User Guide V1.0

Lenovo L19041



Before using this information and the product it supports, be sure to read the following:

 
- *Quick Start Guide*
- *Regulatory Notice*
- [Appendix](#)

The *Quick Start Guide* and the *Regulatory Notice* have been uploaded to the website at <http://support.lenovo.com>.

Note: All pictures and illustrations in this document are for your reference only and may differ from the final product.

Home screen

The home screen is the starting point for using your phone. For your convenience, the home screen is already set up with some useful apps and widgets.

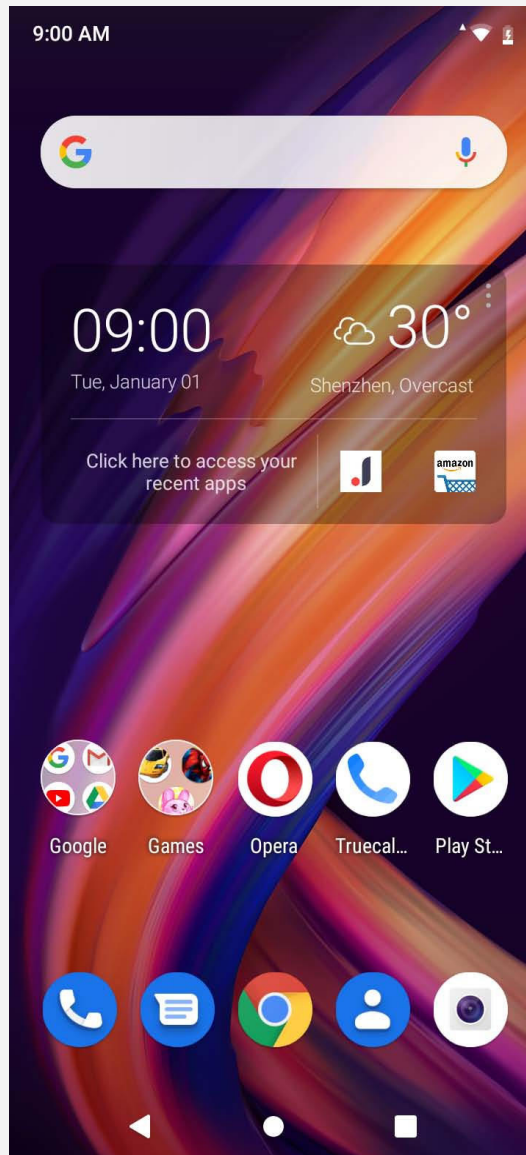

Note: Your phone's features and the home screen may be different depending on your location, language, carrier, and model.

You can customize your home screen at any time.

- To change the settings for the home screen, press and hold anywhere on the home

screen except the icons, select **Home Settings**, and then select the option that you want to make changes.

- To add a widget to the home screen, press and hold anywhere on the home screen except the icons, select **Widgets**, and then swipe up or down to locate the widget that you want, press and hold the widget until it pops out, drag it to where you want to place it, and then release it.
- To change the wallpaper, press and hold anywhere on the home screen except the icons, select **Wallpapers**, and then choose your preferred wallpaper. Also, you can go to **Settings > Display > Wallpaper** and choose your preferred wallpaper.
- To move a widget or an app to another screen, press and hold the widget or app until its icon enlarges slightly, drag it to where you want to place it, and then release it.
- To remove a widget from the home screen, press and hold the widget until its icon enlarges slightly, slide your finger toward the top of the screen, and then drop the widget over ✕.
- To uninstall an app, press and hold the app, slide your finger toward the top of the screen, and then drop the app over 🗑️.

Note: *Some of the system apps cannot be uninstalled.*

Screen buttons

There are three buttons at the bottom of the screen.

- **Back button:** Tap ◀ to return to the previous page or exit the current app.
- **Home button:** Tap ○ to return to the default home screen.
- **Multitask button:** Tap □ to see recent apps. Then you can do the following:
 - Tap an app to open it.
 - Swipe an app window right or left to close it.
 - Tap ✕ to stop running an app.
 - Tap 🗑️ to stop running all the apps.

In app interface, press and hold □ to enter split screen mode.

Note: *Some apps may not support the split screen.*

 
Screen lock

When your phone is on, press the Power button to lock the screen manually. Press the Power button again to display the lock screen, and then swipe up from the bottom of the screen to unlock.

Note: *Swipe is the default screen unlocking method. To change your screen lock, see [Settings](#).*

Notifications and Quick Settings

The Notifications panel informs you of new messages, USB connection, and activities in progress such as file downloading. The Quick Settings panel allows you to access frequently-used settings such as the WLAN switch.

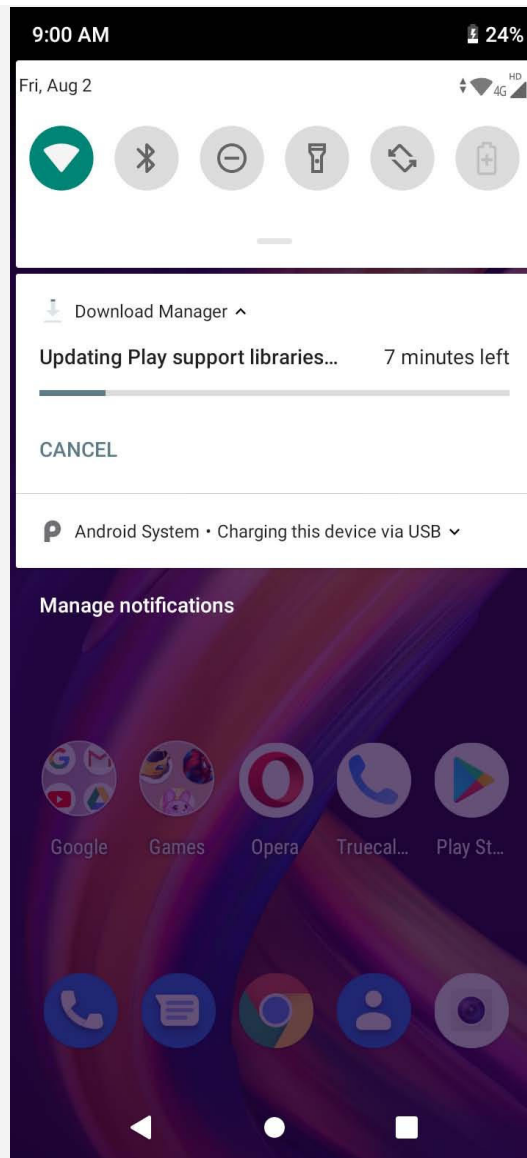

You can do any of the following:

- To see notifications, swipe down from the top of the screen.
- To close the Notifications panel, swipe up from the bottom of the screen.
- To dismiss a notification, swipe left or right across the notification.
- To dismiss all notifications, tap **CLEAR ALL** at the bottom of the Notifications panel.
- To open the Quick Settings panel, swipe down from the top of the screen.
- To close the Quick Settings panel, swipe up from the bottom of the screen.

USB connection

When you connect your phone to a computer using a USB cable, the Notification panel displays a notification such as "Charging this device via USB". You can tap the notification, and then select one of the following options:

- **File Transfer**: Select this mode if you want to transfer any files between your phone and the computer.
- **PTP**: Select this mode if you want to transfer only photos and videos between your phone and the computer.
- **MIDI**: Select this mode if you want MIDI-enabled applications on your phone to work with MIDI software on the computer.
- **No data transfer**: Select this mode if you want to charge your phone only.
- **USB tethering**: Select this mode if you want to share your internet data connection through a USB cable.



Making a call

Dialing a number manually

1. Open the **Phone** app.
2. Tap  to display the dialpad if necessary.
3. Enter the phone number that you want to dial, and then tap .

Calling from the call log

1. Open the **Phone** app.
2. Tap the **Recents** tab.
3. Tap  from a call log entry to make a call.

Calling a contact

1. Open the **Phone** app.
2. Tap the **Contacts** tab.
3. Locate the contact that you want to call, and tap the contact name to display the contact details.
4. Tap the phone number that you want to dial.

Receiving calls

Answering or rejecting a call

When you receive a phone call, the incoming call screen appears. You can do one of the following:

- Swipe up from  to answer the call.
- Swipe down from  to reject the call.

Silencing a call

You have the following ways to silence a call:

- Press the volume up button or the volume down button.
- Press the Power button.

Options during a call

When you are on a call, the following options are available on the screen:

- **Add call**: displays the dialpad so you can call another person.
- **Hold**: puts the current call on hold or resumes the call.
- **Mute**: turns the microphone on or off.
- **Keypad**: displays the keypad.
- **Speaker**: turns the speaker on or off.
- : ends the call.

You can also press the volume button to turn the volume up or down.

Note: The Hold function may be different depending on your carrier.

Using the call log

The call log contains missed, outgoing, and received call history. You can tap a call log

entry then the options menu appears, and you can select an option from the menu. For example, you can tap **Add to contact** option to add the entry to Contacts list.



Creating a contact

1. Open the **Contacts** app.
2. Tap .
3. Enter the contact information.
4. Tap **Save**.

Searching for a contact

1. Open the **Contacts** app.
2. Do one of the following:
 - Scroll the Contacts list up or down to locate the desired contact.
 - Tap **Search contacts**, and then enter the contact name or initials. Matching contacts are displayed as you type.

Editing a contact

1. Open the **Contacts** app.
2. Find and tap the contact that you want to edit.
3. Tap , and then edit the contact information.
4. Tap **Save**.

sharing a contact

1. Open the **Contacts** app.
2. Press and hold the contact name, and select the contact that you want to share with others, and then tap .

Deleting a contact

1. Open the **Contacts** app.
2. Press and hold the contact name, and select the contact that you want to delete, and then tap .

Importing contacts

1. Open the **Contacts** app.
2. Tap  > **Settings** > **Import**.
3. Tap **Import from .vcf file or SIM card**.
4. Tap  to save the contact.

Exporting contacts

1. Open the **Contacts** app.
2. Tap  > **Settings** > **Export**.
3. You can customize the **.vcf** file name.
4. Tap **SAVE**.



Sending a message

You can use the **Messages** app to send text messages and multimedia messages.

1. Open the **Messages** app.
2. Tap **Start chat**.
3. Tap the recipient text box, and then enter a contact name or phone number. Matching contacts are displayed as you type. Select a contact.

Or tap  to add more recipients.

4. Tap the message text box, and then enter a message.

Tip: If you want to send a multimedia message, tap  to select a media object type such as pictures or video clips, and then attach a desired media object to the message.

5. Tap  to send the message.

Searching for a message

1. Open the **Messages** app.
2. Tap , and then enter all or part of the contact name, the phone number, or the message into the search text box.

Deleting messages

1. Open the **Messages** app.
2. In the list of message threads, tap a contact name or phone number to view the message thread.
3. Tap  and then tap **Delete** in the popped up dialog box.
Or in the list of message threads, press and hold a message until it is selected, then tap , and then tap **Delete** in the popped up dialog box.



Camera basics

You can use the **Camera** app to take photos and record videos.



- Tap  to take a photo in Photo mode.
- Tap **Video** to enter Video mode, then tap  to record a video.
- Tap the photo or video thumbnail to view the photo or video in the **Photos** app. For more information, see [Photos](#).
- Tap  to switch between flash modes.
- Tap  to switch between the front-facing camera and the rear-facing camera.
- Tap  to configure the other camera settings.

Taking a screenshot

Press and hold the Power button and the volume down button at the same time to take a screenshot.

By default, the screenshots are stored in your phone's internal storage. To view the screenshots, do one of the following:

- Open the **Photos** app and find the **Screenshots** album.
- Open the **Files** app and tap the **Images > Screenshots** folder.



Viewing photos and videos

1. Open the **Photos** app.
2. Tap a photo or video to view it in full screen mode.
3. Do any of the following:
 - To see the next or previous photo or video, swipe left or right.
 - To zoom in or out of a photo, stretch or pinch the photo. When you zoom in, you can drag to see other parts of the photo.
 - To view a video, tap .

Sharing photos and videos

When you are viewing a photo or video, tap anywhere on the screen, tap , and then select a sharing channel such as Messages or Bluetooth to share the photo or video with others. If you want to share multiple photos and videos at the same time, do all of the following:

1. Open the **Photos** app.
2. When viewing a group of photos or videos, press and hold the photo or video that you want to share until it is selected .
3. Tap and select the photos or videos that you want to share with others.
4. Tap , and then select a sharing channel such as **Messaging** or **Bluetooth** to share the photo or video with others.

Deleting photos and videos

When you are viewing a photo or video, tap anywhere on the screen, and then tap  to delete the photo or video.

If you want to delete multiple photos and videos at the same time, do all of the following:

1. Open the **Photos** app.
2. When viewing a group of photos or videos, press and hold the photo or video that you want to share until it is selected.
3. Tap and select the photo or video you want to delete.
4. Tap , and tap **Delete** in the popped dialog box.



Wi-Fi connection

Turning the Wi-Fi connection on or off

Do one of the following:

- Go to the **Quick Settings** panel, and then tap the **Wi-Fi** switch to turn the Wi-Fi connection on or off.

Tip: When you turn on the Wi-Fi connection, a list of detected Wi-Fi hotspots appears. If the list does not appear, press and hold the Wi-Fi switch in the Quick Settings panel.

- Go to **Settings > Network & internet**, and then tap the switch to turn the Wi-Fi connection on or off.

Tip: When you turn on the Wi-Fi connection, a list of detected Wi-Fi hotspots appears. If the Wi-Fi hotspot that you want to connect to is not listed, tap $+$ and then input the network name to manually add Wi-Fi hotspot .

Connecting to a Wi-Fi network

1. Turn on the Wi-Fi connection and check the list of available Wi-Fi hotspots.
Note: You need to have some valid Wi-Fi hotspots to connect to.
2. Tap the Wi-Fi hotspot that you want to connect to.
3. If you selected a secured network, enter your login name and password, and then tap **Connect**.

Data connection

Turning the data connection on or off

Do one of the following:

- Go to the **Quick Settings** panel, tap the **Mobile Data** switch switch to turn the data connection on or off.
- Go to **Settings > Network & internet > Mobile network**, and then tap the **Mobile Data** switch to turn the data connection on or off.

Note: You need a valid SIM card with a data service. If you do not have a SIM card, contact your carrier.

Selecting a SIM card for data connection

Your phone comes with dual SIM slots. Both slots support 4G/3G/2G data services, but you can enable only one SIM card for data connection at a time. To decide which SIM card to use for data connection, go to **Settings > Network & internet > Mobile networks**, select a SIM card and tap **Mobile Data** switch to turn the data connection on or off.

Setting up a hotspot

You can use a Wi-Fi hotspot to share an Internet connection with another phone or other devices.

1. Go to **Settings > Network & internet > Hotspot & tethering**.

2. Tap **Wi-Fi hotspot**, and then tap the switch to turn it on.

Note: You can also share a network via Bluetooth or USB.

3. If this is your first time to turn on the Wi-Fi hotspot, you can view or change the configuration information.

Note: Tell your friends the Network name and password, and they can connect to your network.



If your phone has been connected to a wireless or a cellular network, you can use the **Chrome** app to surf the Internet. For more information about connecting to a Wi-Fi or a cellular network, see [Network](#).

Visiting websites

1. Open the **Chrome** app.
2. Tap the address box, enter a website address or your search keywords, and then tap .

***Tip:** You do not need to enter a full website address with "http://" to access the website. For example, to visit <http://www.lenovo.com>, enter "www.lenovo.com" in the address box and tap .*

3. When viewing a web page, do any of the following:
 - Tap  >  to refresh the current page.
 - Press the Back button to return to the previous web page.
 - Tap  >  to go forward to a recent web page.
 - Press and hold an image on the web page, and then tap **Download image** to save the image into your phone's internal storage.

Adding a bookmark

When viewing a web page that you want to bookmark, tap  > . The next time you open the **Chrome** app, tap  > **Bookmarks**, and then tap the bookmark to quickly access the web page.

Clearing browser history

1. Open the **Chrome** app.
2. Tap  > **History**.
3. Tap **Clear browsing data...**



 
Fingerprints

Different users can set fingerprints to unlock the phone or switch to their own user interface quickly.

Adding a fingerprint

You can add more than one fingerprint.

Go to **Settings > Security & location > Fingerprint**, follow the instructions on the screen.

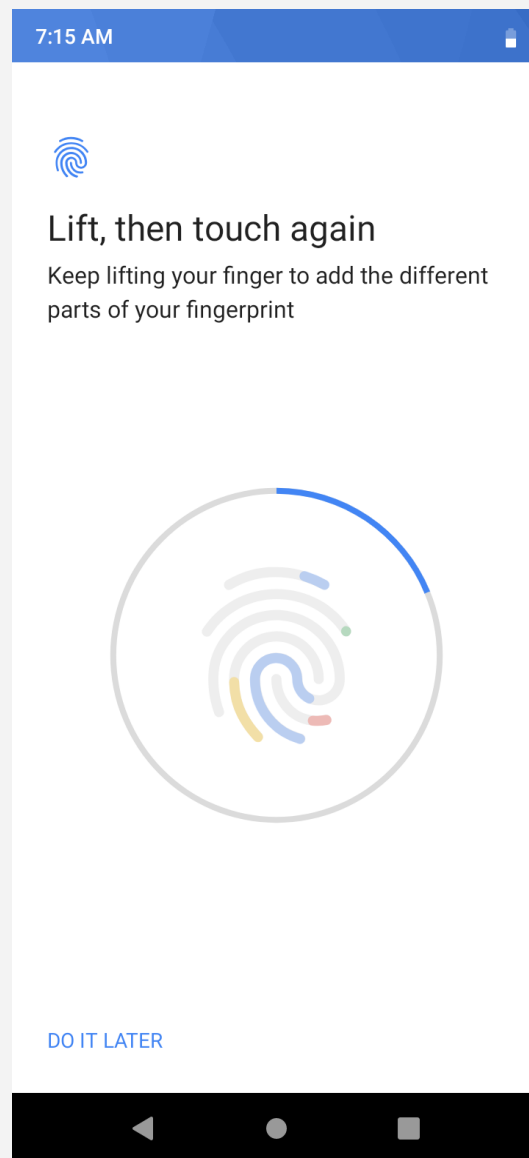

Note: A lock screen pattern, PIN, or password is required to use fingerprint-related functions. Other users can also set individual fingerprints following the above operations. To set screen lock, go to Settings > Security & location > Fingerprint

Delete a fingerprint

- Go to **Settings > Security & location > Fingerprint**.

- Use fingerprint, pattern, PIN or password to unlock the screen.
 - Tap the fingerprint you want to delete, tap **Delete fingerprint**, and then tap **Delete**.
- Note: Other users can delete the fingerprints following the above operations.**



Setting the date and time

1. Go to **Settings > System > Date & time**.
2. Do any of the following:
 - To use the network-provided time, tap **Automatic date & time > Use network-provide time**.
 - To set the date and time manually, tap **Automatic date & time > off**, and then tap **Set date** and **Set time** respectively.
 - To use the network-provided time zone, turn the **Automatic time zone** switch on.
 - To set the time zone manually, turn the **Automatic time zone** switch off, tap **Select time zone**, and then choose a region and time zone.
 - If you want to use locale default time format, turn the **Automatic 24-hour format** switch on.
 - To switch between the 24-hour and 12-hour formats, turn the **Automatic 24-hour format** switch off, then turn the **Use 24-hour format** switch on or off.

Setting the language

1. Go to **Settings > System > Language & input > Language**.
2. Tap and hold the display language that you want to use and move it to the top.

Setting the input method

1. Go to **Settings > System > Language & input > Virtual keyboard**.
2. Select the input method that you want to use.

Setting a screen lock

Go to **Settings > Security & location > Screen lock** to select a screen lock option and set up the screen lock.

Enabling app installation

Before you install apps that you downloaded from unknown sources, do all of the following:

1. Go to **Settings > Apps & notifications > Advanced > Special app access > Install unknown apps**.
2. Select the source that you want, and then tap the **Allow from this source** switch to turn it on.

Setting the ringtone

You can define the default ringtone for incoming calls and notifications. You can also adjust the volume for each sound type.

Go to **Settings > Sound**.

Performing a factory reset

1. Go to **Settings > System > Advanced > Reset options > Erase all data (factory reset)**.

2. Tap **RESET PHONE**, and then tap **ERASE EVERYTHING** in the popped up dialog box.

Appendix

To avoid personal injury, property damage, or accidental damage to the product, read all of the information in this section before using the product.

Important safety info

Handling

Handle the Lenovo Phone with care

Do not drop, bend, or puncture the Lenovo Phone; do not insert foreign objects into or place heavy objects on the Lenovo Phone. Sensitive components inside might become damaged.

Prevent the Lenovo Phone and the adapter from getting wet

Do not immerse the Lenovo Phone in water or leave the Lenovo Phone in a location where it can get saturated with water or other liquids.

Repairing

Do not disassemble or modify the Lenovo Phone. The Lenovo Phone is a sealed unit. There are no end-user serviceable parts inside. All internal repairs must be done by a Lenovo-authorized repair facility or a Lenovo-authorized technician. Attempting to open or modify the Lenovo Phone will void the warranty.

The Lenovo Phone screen is made of glass. The glass might break if the Lenovo Phone is dropped on a hard surface, is the subject of a high impact, or is crushed by a heavy object. If the glass chips or cracks, do not touch the broken glass or attempt to remove it from the Lenovo Phone. Stop using the Lenovo Phone immediately and contact Lenovo authorized service centers for repair, replacement, or disposal information.

Charging

You can use any of the following charging methods to safely recharge the internal battery of the Lenovo Phone.

Charging method	Display on	Display off
ac adapter	Supported, but the battery will charge slowly.	Supported
USB connection between the dc-in connector on the Lenovo Phone and a USB connector on a personal computer or other devices that comply with the USB 2.0 standards.	Supported, but will compensate power consumption and the battery will charge more slowly than usual.	Supported, but the battery will charge slowly.

Notes:

Display on: Device on

Display off: Device off or in screen lock mode

Charging devices might become warm during normal use. Ensure that you have adequate ventilation around the charging device. Unplug the charging device if any of the following occurs:

- The charging device has been exposed to rain, liquid, or excessive moisture.
- The charging device shows signs of physical damage.
- You want to clean the charging device.

Lenovo is not responsible for the performance or safety of products not manufactured or approved by Lenovo. Use only approved Lenovo ac adapters and batteries.

NOTE: Adapter shall be installed near the equipment and shall be easily accessible. Users have to use the connection to USB interfaces with USB 2.0 version or higher.

Distraction

Take care when using the Lenovo Phone in a motor vehicle or on a bicycle. Always prioritize your safety and the safety of others. Follow the law. Local laws and regulations might govern how you can use mobile electronic devices, such as the Lenovo Phone, while you drive a motor vehicle or ride a bicycle.

Choking hazard

Keep the Lenovo Phone and accessories away from small children. The Lenovo Phone contains small parts that can be a choking hazard to small children. Additionally, the glass screen can break or crack if dropped on or thrown against a hard surface.

Explosive atmospheres

Do not charge or use the Lenovo Phone in any area with a potentially explosive atmosphere, such as at a fueling area, or in areas where the air contains chemicals or particles (such as grain, dust, or metal powders). Obey all signs and instructions.

Radio frequency interference

Observe signs and notices that prohibit or restrict the use of mobile phones (for example, in healthcare facilities or blasting areas). Although the Lenovo Phone is designed, tested, and manufactured to comply with regulations governing radio frequency emissions, such emissions from the Lenovo Phone can negatively affect the operation of other electronic equipment, causing them to malfunction. Turn off the Lenovo Phone or use Airplane Mode to turn off the Lenovo Phone wireless transmitters when use is prohibited, such as while traveling in aircraft, or when asked to do so by authorities.

Medical devices

The Lenovo Phone contains radios that emit electromagnetic fields. These electromagnetic fields may interfere with pacemakers or other medical devices. If you wear a pacemaker, maintain at least 15 cm (6 inches) of separation between your pacemaker and the Lenovo Phone. If you suspect the Lenovo Phone is interfering with your pacemaker or any other medical device, stop using the Lenovo Phone and consult your physician for information specific to your medical device.

Important handling info

Cleaning

Clean the Lenovo Phone immediately if it comes in contact with anything that may cause stains, such as dirt, ink, makeup, or lotions. To clean:

- Disconnect all cables and turn off the Lenovo Phone (press and hold the Power button, then select the **Power off** option).
- Use a soft, lint-free cloth.
- Avoid getting moisture in openings.
- Do not use cleaning products or compressed air.

Operating temperature

Be aware of heat generated by the Lenovo Phone. When using the Lenovo Phone, keep it away from hot or high-voltage environments, such as electric appliances, electric heating equipment, or electric cooking equipment.

Ideal operating temperatures are 0 °C to 35 °C. Ideal storage temperatures are -20 °C to +45 °C. Extreme heat or cold may damage your device or accessories.

When the Lenovo Phone is turned on or the battery is charging, some parts might become hot. The temperature that they reach depends on the amount of system activity and the battery charge level. Extended contact with your body, even through clothing, could cause discomfort or even a skin burn. Avoid keeping your hands, your lap, or any other part of your body in contact with a hot section of the Lenovo Phone for any extended time.

Protecting your data and software

Do not delete unknown files or change the name of files or directories that were not created by you; otherwise, the Lenovo Phone software might fail to work.

Be aware that accessing network resources can leave the Lenovo Phone vulnerable to computer viruses, hackers, spyware, and other malicious activities that might damage the Lenovo Phone, software, or data. It is your responsibility to ensure that you have adequate protection in the form of firewalls, antivirus software, and anti-spyware software and keep such software up to date.

Keep electrical appliances away from the Lenovo Phone, such as an electric fan, a radio, high-powered speakers, an air conditioner, and a microwave oven. The strong magnetic fields generated by electrical appliances can damage the screen and the data on the Lenovo Phone.