



CG225

User Guide

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Copyright © 2005 LG Electronics, Inc. ALL RIGHTS RESERVED.

All materials used herein, including but not limited to trademarks, service marks, and all other commercially valuable rights, properties and products are owned by and proprietary to LG Electronics, Inc. and may not be reproduced, republished, redistributed or disseminated, either in whole or in part, without the express written permission of LG Electronics, Inc.

All other marks are proprietary to their respective owners. Features and specifications are subject to change without prior notice.



CG225

User Guide

Table of Contents

Unpacking	7
For Your Safety	8
Your Phone	13
Phone Components	13
Your Phone's Features	14
Display Information	15

Getting Started	17
Installing the SmartChip	17
Charging the Battery	18
Turning Your Phone On and Off	19
Access Codes	20
Barring Password	20

General Functions	21
Making a Call	21
Making a Call by Send Key.....	21
Making International Calls	21
Ending a Call	21
Making a Call From the Contacts	21

Adjusting the Volume	22
Answering a Call	22
Vibrate Mode (Quick)	22
Signal Strength.....	22

Entering Text	22
----------------------------	-----------

Selecting Functions and Options	26
In-Call Menu	27
During a Call	27
Making a Second Call	27
Swapping Between Two Calls.....	27
Answering an Incoming Call.....	27
Rejecting an Incoming Call	27
Muting the Microphone	27
Using the Speakerphone	27

Conference Calls	28
Making a Second Call	28
Setting Up a Conference Call.....	28
Activate the Conference Call on Hold	28
Adding Calls to the Conference Call	28

Private Call in a Conference Call.....	29
Ending a Conference Call	29
Menu Tree.....	30
Games &Apps.....	33
Shop Games.....	33
Games & Apps.....	33
Information	34
Messaging	35
New Message.....	35
Text.....	35
Multimedia	36
Inbox	37
Drafts	37
Outbox	38
Sent	38
IM (Instant Messaging)	38
Voice Mail	38

Chat	39
Templates	39
Text.....	39
Multimedia	39
Business Card	40
Settings	40
Text Message	40
Multimedia Message	41
Voicemail Number	41
Download Message	41
Check Memory	41
Recent Calls	42
Missed Calls.....	42
Dialed Calls	42
Received Calls	42
Delete Recent Calls	42
Call Duration	42
Last Call	42
Dialed Calls	43

Received Calls	43
All Calls	43
Data Information	43
Web Data	43
Data Call	43
Total Data	43
MEdia Net	44
MEdia Net Home.....	44
Favorites.....	44
Go to URL.....	45
Network Profiles	45
Cache Settings	45
Security Certificates	45
Information	45
Cingular Mall	46
Shop Tones	46
Shop Games.....	46
Shop Graphics.....	46

Shop Multimedia	46
Shop Applications	46
MEdia Net Home.....	46
IM	47
My Stuff	51
Favorites.....	51
Games & Apps.....	51
Audio.....	51
Graphics.....	51
Tools	52
Camera	52
Alarm Clock.....	53
Calendar	54
Calculator	55
Notepad.....	55
World Clock	55
Unit Converter	56
Tip Calculator	56
Address Book	57
Contacts	57

New Contact	57
Speed Dial List	57
Caller Groups	57
Copy All Contacts	57
Delete All Contacts	58
Settings	58
Information	58
 Settings	 59
Audio	59
Shop Tones	59
Ringtones	59
Volume	59
Ring Alert Type	59
Message Alert Tones	59
Key Tones.....	59
 Display	 59
Wallpaper.....	59
Backlight Timer	60
Contrast	60
Languages.....	60

Date & Time	60
Set Date	60
Date Format	60
Set Time	60
Time Format	60
Auto Update	60
 Call	 61
Call Forwarding	61
Answer Mode	61
Send My Number	61
Call Waiting.....	61
Minute Minder.....	62
Auto Redial.....	62
TTY.....	62
Send DTMF Tones	63
 Security	 63
Request PIN Code.....	63
Fixed Dial Number (FDN)	64
Change Codes	64

Connection.....	64
GPRS Attach	64
Network Profiles	64
Reset Network Profile	65
 Reset Default.....	 65
 Q & A.....	 66
Accessories.....	68
Safety Guidelines	69
Glossary	85
Index	87

Unpacking

 
Check to make sure that you have all the parts shown below.



Handset



Standard Battery

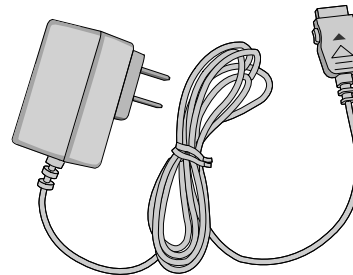

Travel Adapter



User Guide

For Your Safety

Important Information

This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment.

Before You Start

Safety Instructions

WARNING! To reduce the possibility of electric shock, do not expose your phone to high humidity areas, such as the bathroom, swimming pool, etc.

Always store your phone away from heat. Never store your phone in settings that may expose it to temperatures less than 32°F or greater than 104°F, such as outside during extreme weather conditions or in your car on a hot day. Exposure to excessive cold or heat will result in malfunction, damage and/or catastrophic failure.

Be careful when using your phone near other

electronic devices. RF emissions from your mobile phone may affect nearby in adequately shielded electronic equipment. You should consult with manufacturers of any personal medical devices such as pacemakers and hearing aides to determine if they are susceptible to interference from your mobile phone. Turn off your phone in a medical facility or at a gas station. Never place your phone in a microwave oven as this will cause the battery to explode.

IMPORTANT! Please read the TIA SAFETY INFORMATION on page 69 before using your phone.

Safety Information

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

- ▶ Never use an unapproved battery since this could damage the phone and/or battery and could cause the battery to explode.
- ▶ Never place your phone in a microwave oven as it will cause the battery to explode.

- ▶ Do not dispose of your battery by fire or with hazardous or flammable materials.
- ▶ Make sure that no sharp-edged items come into contact with the battery. There is a risk of this causing a fire.
- ▶ Store the battery in a place out of reach of children.
- ▶ Be careful that children do not swallow any parts such as rubber plugs (earphone, connection parts of the phone, etc.). This could cause asphyxiation or suffocation.
- ▶ Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- ▶ When riding in a car, do not leave your phone or set up the hands-free kit near to the air bag. If wireless equipment is improperly installed and the air bag is activated, you may be seriously injured.
- ▶ Do not use a hand-held phone while driving.
- ▶ Do not use the phone in areas where its use is prohibited. (For example: aircraft).
- ▶ Do not expose the battery charger or adapter to direct sunlight or use it in places with high humidity, such as a bathroom.
- ▶ Never store your phone in temperatures less than -4°F or greater than 122°F.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone. There is a risk of this causing a fire.
- ▶ Do not drop, strike, or shake your phone severely. Such actions may harm the internal circuit boards of the phone.
- ▶ Do not use your phone in high explosive areas as the phone may generate sparks.
- ▶ Do not damage the power cord by bending, twisting, pulling, or heating. Do not use the plug if it is loose as it may cause a fire or electric shock.
- ▶ Do not place any heavy items on the power cord. Do not allow the power cord to be crimped as it may cause fire or electric shock.
- ▶ Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- ▶ Do not disassemble the phone.

For Your Safety

- ▶ Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.
- ▶ Only use the batteries, antennas, and chargers provided by LG. The warranty will not be applied to products provided by other suppliers.
- ▶ Only authorized personnel should service the phone and its accessories. Faulty installation or service may result in accidents and consequently invalidate the warranty.
- ▶ Do not hold or let the antenna come in contact with your body during a call.
- ▶ An emergency call can be made only within a service area. For an emergency call, make sure that you are within a service area and that the phone is turned on.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

CAUTION

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with skin, a minor burn may result. Contact your local dealer for a replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.6 inches (1.5cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.6 inches (1.5cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

Vehicle Mounted External Antenna (optional, if available)

A minimum separation distance of 8 inches (20cm) must be maintained between the user/bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements. For more information about RF exposure, visit the FCC website at www.fcc.gov

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions:

(1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Cautions for Battery

- ▶ Do not disassemble.
- ▶ Do not short-circuit.
- ▶ Do not expose to high temperature: 60°C (140°F).]
- ▶ Do not incinerate.

Battery Disposal

- ▶ Please dispose of your battery properly or bring to your local wireless carrier for recycling.
- ▶ Do not dispose in fire or with hazardous or flammable materials.

Adapter (Charger) Cautions

- ▶ Using the wrong battery charger could damage your phone and void your warranty.
- ▶ The adapter or battery charger is intended for indoor use only.

Do not expose the adapter or battery charger to direct sunlight or use it in places with high humidity, such as the bathroom.

Your Phone

Phone Components



Your Phone's Features

1. Earpiece

2,10. Left soft key/Right soft key: Each of these keys performs the functions indicated by the text on the display immediately above them.

3. Side keys: These keys are used to control the volume of ringtone in standby mode and speaker volume during a call.

4. Send key: You can dial a phone number and answer incoming calls. Press this key in standby mode to quickly access the most recent incoming, outgoing and missed calls.

5. Alphanumeric keys: These keys are used to dial a number in standby mode and to enter numbers or characters in edit mode.

6. Microphone: Can be muted during a call for privacy.

7. Display screen: Displays phone status icons, menu items, Web information, pictures and more in full color.

8. Navigation key: Use for quick access to phone functions.

 
9. Message key: Use to retrieve or send text messages.

11. OK key: Long press will launch the WAP browser. Allows you to select and confirm menu options.

12. Camera key: Press this key to use the camera feature or to go directly to the camera mode.

13. End/Power key: Allows you to power the phone on or off, end calls, or return to Standby Mode.


14. Clear key: Allows you to delete the characters entered or return you to the previous screen.

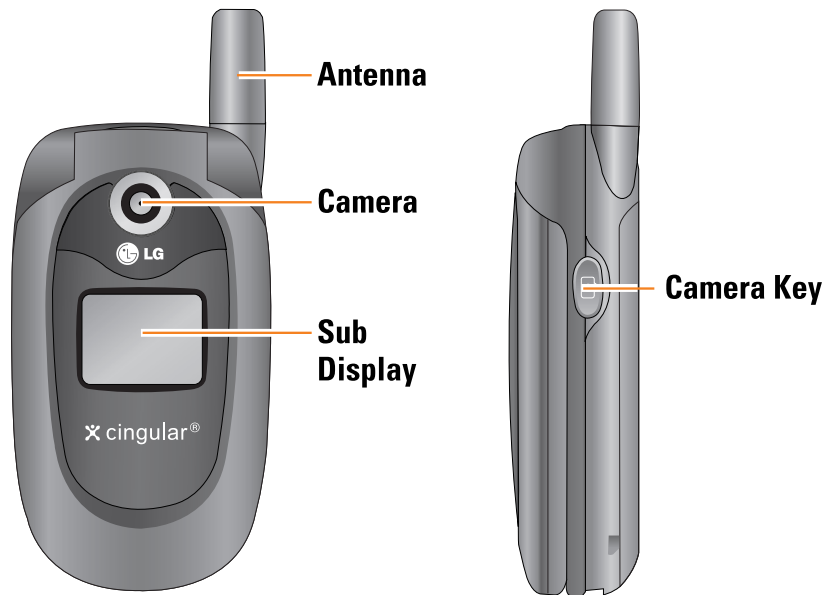

Backlight

A backlight illuminates the display and the keypad. When you press any key or open the flip, the backlight turns on. It turns off if no key is pressed within a given period of time, depending on the **Backlight Timer** menu option. To specify the length of time the backlight is active, set the **Backlight Timer** menu option (Menu 9.2.2).

 Display Information

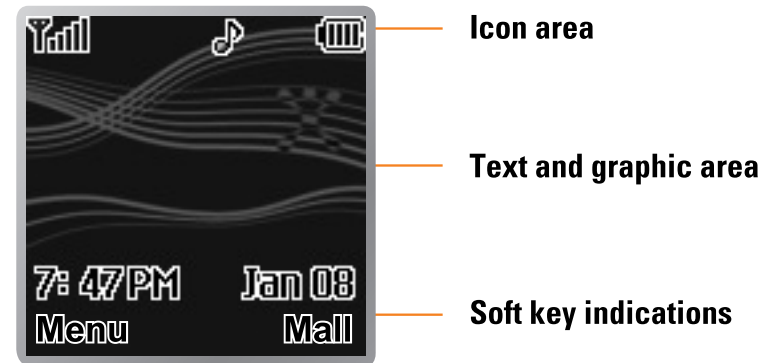

Area	Description
First line	Displays various icons. See page 16
Middle lines	Display messages, instructions and any information that you enter, such as number to be dialed.
Last line	Shows the functions currently assigned to the two soft keys.

On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

Icon	Description
	Indicates the strength of the network signal.
	Indicates that GPRS service is available.
	Indicates the status of the battery charge.
	Indicates a call is in progress.
	Indicates the alarm has been set and is on.
	Indicates the Schedule function.
	Indicates the receipt of a message.
	Indicates the receipt of a voice mail.
	Indicates Ring has been set for alert.
	Indicates Silent has been set for alert.
	Indicates that Vibration has been set for alert.
	Indicates the speakerphone has been activated.
	Indicates the TTY has been set and is on.

Getting Started

 
Installing the SmartChip

When you subscribe to a cellular network, you are provided with a plug-in SmartChip loaded with your subscription details, such as your PIN, any optional services available and many others.


! Important!

The plug-in SmartChip and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SmartChips out of the reach of small children.

1. If necessary, switch off the phone by holding down the  [END] key until the power-off image displays.
2. Remove the battery. To do so:

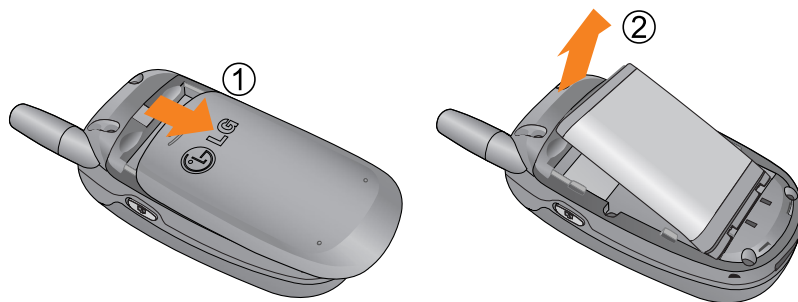


 3. Slide the SmartChip into the SmartChip socket so that it locks the card into place. Make sure that the notched corner is top left and the gold contacts of the card face into the phone.

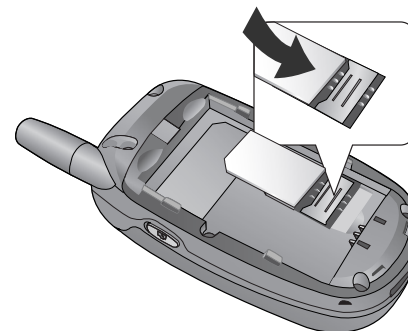


! Note

 When you need to remove the SmartChip, slide it, as shown, and take it out of the socket.

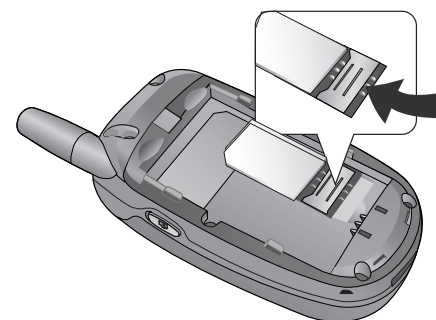


Getting Started

 4. To insert the battery, align the golden contacts of the battery with the corresponding connectors on the battery compartment. Press down on the opposite end of the battery until it snaps into place.

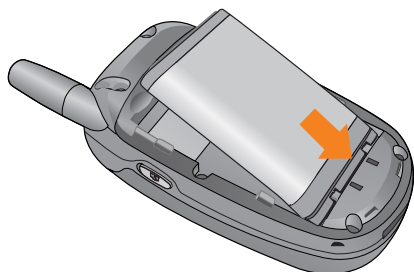

5. Attach the back cover by sliding up into position until it clicks.

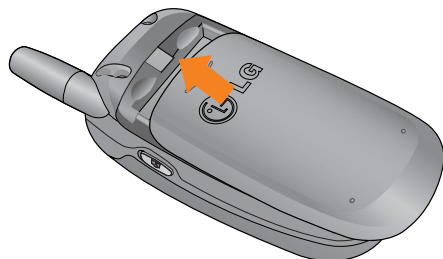 

Charging the Battery

The use of unauthorized accessories could damage your phone and void your warranty.

To use the travel charger provided with your phone:

1. With the battery in position on the phone, connect the lead from the travel charger to the bottom of the phone. Check that the arrow on the lead connector is facing towards the front of the phone.
2. Connect the travel charger to a standard AC wall outlet. Only use the travel charger that comes included with the package.



! Warning

The travel charger must be unplugged before you remove the battery, otherwise, the phone could be damaged.

- When charging is finished, disconnect the travel charger from the phone by pressing on the gray tabs on both sides of the connector while pulling the connector out.



! Notice

- ▶ If your phone is powered on while charging, you'll see the bars in the battery indicator icon cycle. When the battery is fully charged, the bars in the battery indicator icon will flash on and off.

If the battery fails to charge completely:

- ▶ After turning the phone on and off, please attempt to recharge the battery.
- ▶ After detaching and reattaching the battery, please attempt to recharge the battery.

Turning Your Phone On and Off

- Hold down the  [END] key until the phone switches on.
- If the phone asks for a PIN, enter the PIN and press the  key or the  key.

The phone searches for your network and after finding it goes to the idle screen as illustrated below. From the idle screen, you can make or receive a call.



! Note

The display language is preset to Automatic at the factory. To change the language, use the Languages menu option (Menu 9.2.5).

- When you wish to switch the phone off, hold down the  [END] key until the power-off image displays.

Access Codes

You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes can be changed by using the **Change Codes** feature (Menu 9.5.3).

Security code (4 digits)

The security code protects the unauthorized use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the Restore Factory Settings menu. The security code default setting can be modified from the Security Settings menu.

Barring Password

The barring password function is required when you use the Call Barring function.

The password is obtained from the service provider when you subscribe to this function.

General Functions

Making a Call

1. Make sure your phone is powered on.
2. Enter a phone number including the area code. To edit a number on the display screen, simply press the  key to erase one digit at a time.
 - ▶ Press and hold the  key to erase the entire number.
3. Press the  [SEND] key to call the number.
4. When finished, press the  [END] key.

Making a Call by Send Key

1. Press the  [SEND] key, and the most recent incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the navigation key.
3. Press the  [SEND] key.

Making International Calls

1. Press and hold the  key and the international access character '+' will appear.
2. Enter the country code, area code, and the phone number.
3. Press the  [SEND] key.

Ending a Call

When you have finished a call, press the  [END] key.

Making a Call From the Contacts

You can store names and phone numbers dialed frequently in the SmartChip as well as in the phone memory known as the Contacts.

You can dial a number by simply selecting a name in the contacts and pressing the  [SEND] key.

Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the side keys of the phone.

In idle mode, you can adjust the ring volume using the side keys.

Answering a Call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Address Book) is displayed.

1. Open the flip and press the  [SEND] key or the left soft key to answer an incoming call. If **Any Key** has been set as the answer mode (Menu 9.4.2), any key press will answer a call except for the  [END] key or the right soft key.

! Notice

- ▶ To reject an incoming call, press and hold the side keys on the left side of the phone.
- ▶ If **Flip Open** has been set as the Answer Mode (Menu 9.4.2), you do not need to press any key. You can answer the call simply by opening the flip.

2. End the call by closing the phone or pressing the  [END] key.

! Notice

You can answer a call while using the Address Book or other menu features.

Vibrate Mode (Quick)

Vibrate Mode can be activated by pressing and holding down the  [Star] key.

Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator on your phone's display screen.

Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Address Book, writing a message, or creating scheduling events in the calendar all require entering text.

The following text input methods are available in the phone.

T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press  key until 123 mode is displayed.

A long press changes mode to 123.

Symbolic Mode

This mode allows you to enter special characters.

! Notice

The default setting on the phone is T9 disabled mode.

Changing the Text Input Mode

Change the text input mode by pressing . You can check the current text input mode in the upper right corner of the screen.

Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to  press one key per letter.
 - ▶ The word changes as letters are typed - ignore what's on the screen until the word is typed completely.
 - ▶ If the word is still incorrect after typing completely, press the  key once or more to cycle through the other word options.
 - ▶ If the desired word is missing from the word choices list, add it by using the ABC mode.

General Functions

2. Enter the whole word before editing or deleting any keystrokes.
3. Complete each word with a space by pressing the  key or the right navigation  key.

To delete letters, press . Press and hold down  to erase the letters continuously.

In T9 input mode, you can select a different T9 language such as English, Spanish and French by pressing and holding down the  key.

Using the ABC Mode

Use the keypad keys to enter your text.

1. Press the key labeled with the required letter:
 - ▶ Once for the first letter
 - ▶ Twice for the second letter
 - ▶ And so on
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to erase the letters continuously.

! Notice

Refer to the table below for more information on the characters available using the keys.

Key	Characters in Display Order	
	Upper Case	Lower Case
1	. , - ? ! ' @ : 1	. , - ? ! ' @ : 1
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	Space Key, 0 (Long press)	Space Key, 0 (Long press)

Using the 123 (Numbers) Mode

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example) more quickly.

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Using the Symbol Mode

The Symbol Mode enables you to enter various symbols or special characters.

To enter a symbol, press the  key. Use the navigation keys to select the desired symbol and press the **[OK]** key.

 
T9 dictionary

The T9 dictionary is a feature that allows the user to add any unique or personal words to the T9 standard language database. The T9 dictionary function can be selected from the Text Entry Settings sub menu under the Options soft key menu. Within the T9 dictionary function the user can add, modify, delete or reset the personal words.

Selecting Functions and Options

Your phone offers a set of functions that allow you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked the left soft  key and the right soft  key. Each menu and sub-menu allows you to view and alter the settings of a particular function.

The soft key functions vary depending on the mode of the phone. The label on the bottom of the display screen immediately above the soft keys indicates the current function.

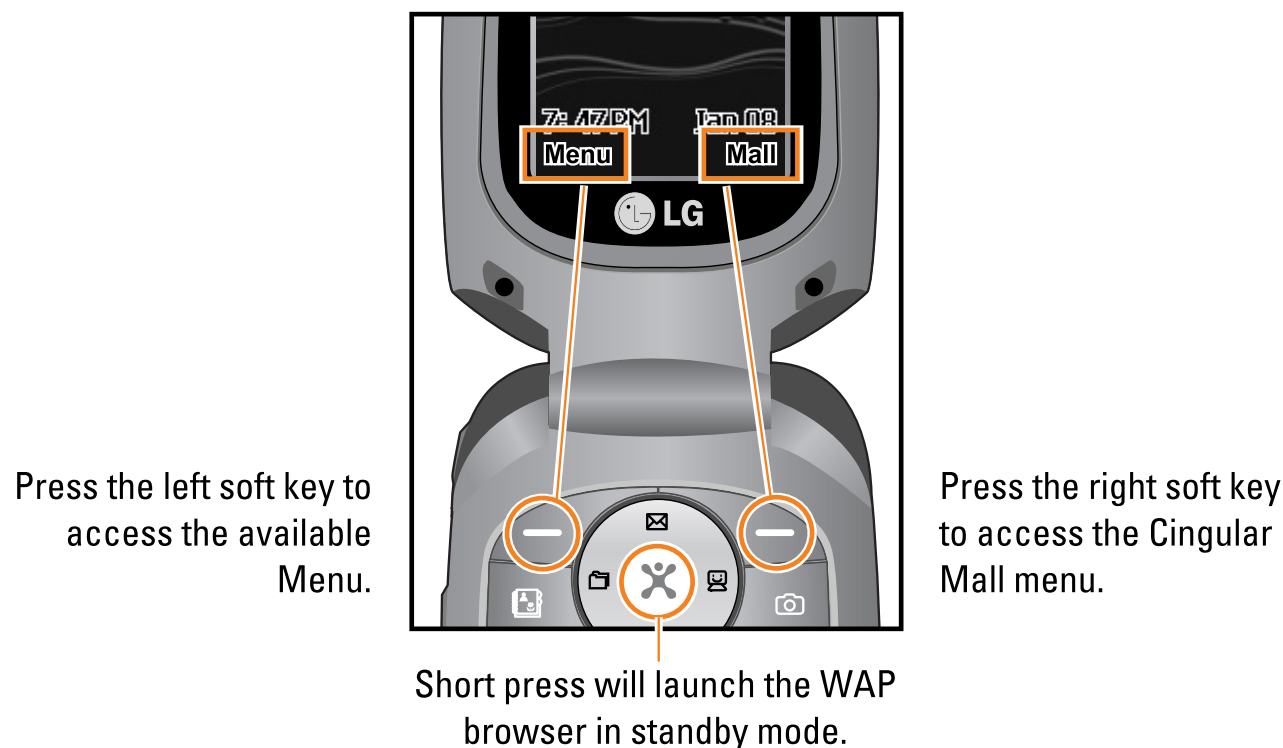

In-Call Menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the right soft key [**Options**].

During a Call

The menu displayed on the handset screen during a call is different than the default main menu displayed when in idle screen, and the options are described below.

Making a Second Call

You can select a number you wish to dial from the Address Book to make a second call. Press the right soft key [Options] then select **Contacts**.

Swapping Between Two Calls

To switch between two calls, press the  [SEND] key.

Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the  [SEND] key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the

earpiece, and the display will show that a second call is waiting. This feature, known as **Call Waiting**, is only available if your network supports it.

If Call Waiting is on, you can put the first call on hold and answer the second call, by pressing the  [SEND] key.

Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the  [END] key.

During a call, you can reject an incoming call by pressing the  [END] key.

Muting the Microphone

You can mute the microphone during a call by pressing the left soft key [**Mute**]. The handset can be unmuted by pressing the left soft key [**Unmute**]. When the handset is muted, the caller cannot hear you, but you can still hear the caller.

Using the Speakerphone

You can use the integrated Speakerphone during a call by pressing the right soft key [Options] then select Speaker On. The speakerphone indicator [] will

display on the display screen. The loudspeaker is automatically deactivated when you end the call.

Warning

Because of the higher volume level, don't place the phone too close your ear while the speakerphone is enabled.

Conference Calls

The conference service provides you with the ability to have a simultaneous conversation with more than one caller. The conference call feature can be used only if your network service provider supports this feature. The conference call can only be set up when you have one call active and one call on hold, meaning both calls must have been answered. Once a conference call is set up, calls may be added, disconnected or separated (that is, removed from the conference call but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu. The maximum number of callers in a conference call is five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

Making a Second Call

You can make a second call while currently on a call simply by entering the second number and pressing the  [SEND] key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls, by pressing the  [SEND] key.

Setting Up a Conference Call

To set up a conference call, place one call on hold, conference in the second active call by pressing the right soft key and select the Join Calls sub menu option from the Conference Call menu.

Activate the Conference Call on Hold

To activate a conference call on hold, press the  [SEND] key.

Adding Calls to the Conference Call

To add a call to an existing conference call, press the right soft key, and then select the Join Calls sub menu from the Conference Call option.

Private Call in a Conference Call

To have a private call with one caller from a conference call, press the right soft key and select the Private Menu from the Conference Call option. When the numbers of the callers are displayed, select the one you wish to speak in private.

Ending a Conference Call

Currently active conference call can be disconnected by pressing the  [END] key.

Menu Tree

The following illustration shows the available menu structure and indicates the:

- ▶ Number assigned to each menu option.
- ▶ Page where you can find the feature description.

1. Games & Apps (see page 33)

1.1 Shop Games

1.2 Games & Apps

1.3 Information

2. Messaging (see page 35)

2.1 New Message

2.1.1 Text

2.1.2 Multimedia

2.2 Inbox

2.3 Drafts

2.4 Outbox

2.5 Sent

2.6 IM (Instant Messaging)

2.7 Voice Mail

2.8 Chat

2.9 Templates

2.9.1 Text

2.9.2 Multimedia

2.9.3 Business Card

2. Messaging (continued)

2.0 Settings

2.* Check Memory

3. Recent Calls (see page 42)

3.1 Missed Calls

3.2 Dialed Calls

3.3 Received Calls

3.4 Delete Recent Calls

3.5 Call Duration

3.5.1 Last Call

3.5.2 Dialed Calls

3.5.3 Received Calls

3.5.4 All Calls

3.6 Data Information

3.6.1 Web Data

3.6.2 Data Call

3.6.3 Total Data

4. MEdia Net (see page 44)**4.1 MEdia Net Home****4.2 Favorites****4.3 Go to URL****4.4 Network Profiles****4.5 Cache Settings****4.5.1 Clear Cache****4.5.2 Allow Cache****4.6 Security Certificates****4.7 Information****5. Cingular Mall (see page 46)****5.1 Shop Tones****5.2 Shop Games****5.3 Shop Graphics****5.4 Shop Multimedia****5.5 Shop Applications****5.6 MEdia Net Home****6. IM (see page 47)****7. My Stuff (see page 51)****7.1 Favorites****7.2 Games & Apps****7.3 Audio****7.4 Graphics****7.5 Tools****7.5.1 Camera****7.5.2 Alarm Clock****7.5.3 Calendar****7.5.4 Calculator****7.5.5 Notepad****7.5.6 World Clock****7.5.7 Unit Converter****7.5.8 Tip Calculator****8. Address Book (see page 57)****8.1 Contacts****8.2 New Contact****8.3 Speed Dial List****8.4 Caller Groups****8.5 Copy All Contacts****8.6 Delete All Contacts****8.7 Settings****8.8 Information**

9. Settings (see page 59)**9.1 Audio**

- 9.1.1 Shop Tones
- 9.1.2 Ringtones
- 9.1.3 Volume
- 9.1.4 Ring Alert Type
- 9.1.5 Message Alert Tones
- 9.1.6 Key Tones

9.2 Display

- 9.2.1 Wallpaper
- 9.2.2 Backlight Timer
- 9.2.3 Contrast
- 9.2.4 Languages

9.3 Date & Time

- 9.3.1 Set Date
- 9.3.2 Date Format
- 9.3.3 Set Time
- 9.3.4 Time Format
- 9.3.5 Auto Update

9. Settings (continued)**9.4 Call**

- 9.4.1 Call Forwarding
- 9.4.2 Answer Mode
- 9.4.3 Send My Number
- 9.4.4 Call Waiting
- 9.4.5 Minute Minder
- 9.4.6 Auto Redial
- 9.4.7 TTY
- 9.4.8 Send DTMF Tones

9.5 Security

- 9.5.1 Request PIN Code
- 9.5.2 Fixed Dial Number (FDN)
- 9.5.3 Change Codes

9.6 Connection

- 9.6.1 GPRS Attach
- 9.6.2 Network Profiles
- 9.6.3 Reset Network Profile

9.7 Reset Default

Games & Apps

Java is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard Netscape or MS Internet Explorer browsers, Java MIDlet can be downloaded using the WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed within the Games & Apps menu where you can select, execute or delete. The Java program files saved in the phone are in .JAD and .JAR formats.

! Note

The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.

! Warning

Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment.
The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.

Shop Games

Menu 1.1

This menu option connects to Cingular's game download site.

Games & Apps

Menu 1.2

The Games & Apps menu displays the list of Java programs downloaded using the WAP. All previous downloaded programs can be selected, deleted or viewed in detail within the Games & Apps menu. From the list within the Application menu, the following options are available:

- ▶ **Delete:** Delete the selected program. Once deleted, you will not be able to restore the program unless it is downloaded again using the WAP.
- ▶ **Rename:** Rename the game.
- ▶ **New Folder:** Create a new folder.

Information

Menu 1.3

The downloaded programs using the WAP are stored in the phone memory. There is a maximum memory capacity in a phone and once you exceed this memory, you will not be able to store any more programs. The View Information menu allows you to check the available memory capacity in a phone.

Check Memory (*Menu 1.3.1*)

Displays maximum memory capacity and total available memory information.

Java Version (*Menu 1.3.2*)

Displays the current Java version.

New Message

Menu 2.1

Text (Menu 2.1.1)

You can write and edit text messages of up to 154 characters.

1. Type in a message using key presses. For details on how to enter text, refer to page 22 (**Entering Text**).
2. After completing the message select the required option by pressing the right soft key [**Options**].

The following options are available.

▶ Insert

- **Symbol:** You can insert symbols ranging from sentence notes to emoticons. Select the one you want by navigating the left/soft keys.
- **Picture:** You can select a graphic image by using the left/right navigation keys. You can preview the selected picture by pressing the center key [View]. If you press [Cancel] on the right key, it allows you to go back to the previous screen.
- **Animation:** You can attach an animation in a message can be done through EMS(Enhanced Messaging Service).
- **Audio:** You can insert various ringtones.

- **Text Template:** You can easily insert the frequently used sentences in the text message.
- **Contact:** You can browse one of your contacts and insert it.
- **Business Card:** Input your own business card created in (Menu 2.9.3). For further details, see page 40.

- ▶ **Save to Drafts:** Saves the selected slide to draft.
- ▶ **Set T9:** You can set on and off for the T9 input mode.
- ▶ **Clear Text:** Deletes the written message.
- ▶ **Cancel:** Exit the text editor.

Press the left soft key [**Send To**]

1. Enter numbers of recipient.
2. Press  key to add more recipients.
3. You can add phone numbers in the address book.
4. Press the  key after entering numbers.

Multimedia (Menu 2.1.2)

! Note

If you select a graphic or an audio file while writing a multimedia message, the file loading time will take about 5 seconds. You will not be able to activate any key during the file loading time. When the file loading is complete, you will be able to write a multimedia message.

You can write and edit multimedia messages, checking message size.

1. Enter the **Messaging** menu by pressing the  [OK].
2. If you want to write a multimedia message, select **Multimedia**.

The following options are available.

▶ Insert

- **Symbol:** You can insert symbols ranging from sentence notes to emoticons. Select the one you want by navigating the left/soft keys.
- **Graphic:** You can insert a graphic image by using the left soft keys [OK]. If you press [Options] on the right soft key, it allows you to preview the selected picture in View mode, and you to take a new picture

in [Take] mode.

- **Audio:** You can insert various ringtones.
- **New Slide:** You can insert a new slide.
- **Text Template:** You can easily insert the frequently used sentences in the text message.
- **Contact:** You can browse one of your contacts and insert it.
- **Business Card:** Input your own business card created in (Menu 2.9.3). For further details, see page 40.
- ▶ **Preview:** You can preview multimedia messages you wrote.
- ▶ **Save:** You can save multimedia messages **To Drafts** or **As Template**.
- ▶ **Move To:** You can move to the selected slide that you've created.
- ▶ **Delete Slide:** You can delete the current slide.
- ▶ **Delete Media:** You can delete the current media.
- ▶ **Set Timer:** You can set timer for slide, text, picture and sound.
- ▶ **Set T9:** Select a T9 input mode.
- ▶ **Cancel:** You can back to the **New Message** menu.

! Note

If you select a photo when writing a multimedia message, the loading duration is about 5 seconds. No key can be activated during that time. After the picture is loaded, you can continue to write the multimedia message.

Inbox

Menu 2.2

You will be alerted when you receive a message. They will be stored in the Inbox.

In the Inbox, you can identify each message by icons. If you are notified that you have received a multimedia message, you can download the whole multimedia message by selecting it in the Receive menu.

The following [Options] are available in the Inbox list.

- ▶ **Delete:** Deletes the selected message from the Inbox.
- ▶ **Reply:** Allows you to reply to the sender of the selected message.
- ▶ **Reply All:** Allows you to reply to all recipients on the selected message (Only for Multimedia message).
- ▶ **Forward:** Forwards a received message to other recipients. After recipients are entered, the message can be forwarded.

- ▶ **Return call:** Call back the sender.
- ▶ **Delete All Read:** Deletes all messages that you have read in the list.
- ▶ **Delete All**
 - **Text Messages:** Deletes only text messages in the list.
 - **Multimedia Messages:** Deletes only multimedia messages in the list.
 - **Download Messages:** Deletes only downloaded messages in the list.
 - **All Messages:** Deletes all messages in the list.

Drafts

Menu 2.3

You can view the messages saved as a draft. The draft messages are listed with the date and time of when the messages were saved.

The following [Options] are available.

- ▶ **Delete:** Deletes the message you choose.
- ▶ **Delete all:** Deletes all messages in the folder.

Outbox

Menu 2.4

If the message transmission fails, you can save the message in the Outbox.

The following [Options] are available in the Outbox list.

- ▶ **Delete:** Deletes the message you choose.
- ▶ **Edit:** Allows you to edit the selected message (Only for Text message).
- ▶ **Resend:** Allows you to send the selected message again (only for multimedia messages).
- ▶ **Delete All:** Deletes all messages in the folder.

Sent

Menu 2.5

This menu allows you to save the sent successfully messages. For sent messages you can see the delivery status.

The following [Options] are available in the Sent list.

- ▶ **Delete:** Deletes the selected message from the Sent list.
- ▶ **Forward:** Forwards the current message to other recipients.
- ▶ **Delete all:** Deletes all messages in the folder.

IM (Instant Messaging)

Menu 2.6

Instant Messaging feature can only be used with the support of the network operator or communities such as AIM, MSN Messenger, Y! Messenger and ICQ. For Instant Messaging users, a valid User ID and Password will be required in order to login and exchange messages as well as checking the online status.

For further details, see page 47.

Voice Mail

Menu 2.7

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).

Before using this feature, you must enter the voice server number obtained from your service provider.

This may already be available; to check the voicemail, press and hold the  key

When new voicemail is received, the symbol  will be displayed on the screen.

! Note

Please check with your network service provider for details of their service in order to configure the handset accordingly.

Chat

Menu 2.8

This menu option connects to Cingular's chat site.

Templates

Menu 2.9

There are 6 predefined messages in the list. You can view and edit the template messages or create new messages.

Text (Menu 2.9.1)

- **Please call me back**
- **I'm late. I will be there at**
- **Where are you now?**
- **I'm on the way.**
- **Urgent! Please contact.**
- **I love you**

The following [Options] are available.

► Send Via

- **Text Message:** Allows you to send the selected template message via SMS.
- **Multimedia Message:** Allows you to send the selected template message via MMS.

- **Delete:** Allows you to delete the selected template message.

Multimedia (Menu 2.9.2)

1. You can add new multimedia templates by pressing the left soft key [Add].
2. The following choices are available under Options.

Options

► Insert

- **Symbol:** You can insert symbols ranging from sentence notes to emoticons. Select the one you want by navigating the left/soft keys.
- **Graphic:** You can insert a graphic image by using the left soft keys[OK]. If you press [Options] on the right soft key, it allows you to preview the selected picture in View mode, and you to take a new picture in [Take] mode.
- **Audio:** You can insert various ringtones.
- **New Slide:** You can insert a new slide.
- **Text Template:** You can easily insert the frequently used sentences in the text message.
- **Contact:** You can browse one of your contacts and insert it.

Messaging

- **Business Card:** Input your own business card created in (Menu 2.9.3).
- ▶ **Preview:** You can preview multimedia messages you have created.
- ▶ **Save:** You can save multimedia messages **To Drafts** or **As Template**.
- ▶ **Move To:** You can move to the selected slide that you've created.
- ▶ **Delete Slide:** You can delete current slide.
- ▶ **Delete Media:** You can delete the current media.
- ▶ **Set Timer:** You can set the timer for slide, text, picture and sound.
- ▶ **Set T9:** Select a T9 input mode.
- ▶ **Cancel:** You can return to the Message menu.

! Note

If you select a photo when writing a multimedia message, the loading duration is about 5 seconds. No key can be activated during that time. After the picture is loaded, you can continue to write the multimedia message.

Business Card *(Menu 2.9.3)*

This feature allows you to create your own name card. You can key in the Name, Mobile number, Office number, Fax number and E-mail address.

▶ Send Via

- **Text Message:** Sends the selected name card by SMS.
- **Multimedia Message:** Sends the selected name card by MMS.

- ▶ **Delete:** Allows you to delete the selected name card.

Settings

Menu 2.0

Text Message *(Menu 2.0.1)*

- ▶ **Message Center Number:** If you want to send a text message, you can receive the address of the SMS center through this menu.
- ▶ **Email Gateway:** You can send the text message to an Email Address via this gateway.
- ▶ **Subject:** You can enter the SMS Subject when this menu is on.

- ▶ **Bearer Setting:** You can select GSM or GPRS. Contact your network operator or service provider for information related to setting a selected bearer, pricing and connection speed.

Multimedia Message *(Menu 2.0.2)*

Via this menu, you can set up default multimedia message information.

The following [Options] are available:

- ▶ **Subject:** You can enter MMS Subject when this menu is on.
- ▶ **Slide Duration:** You can set the duration of each page when writing the message.
- ▶ **Priority:** You can set the priority of the message you choose.
- ▶ **Validity Period:** This network service allows you to set how long your multimedia messages will be stored at the message center.
- ▶ **Delivery Reports:** Allows you to request a delivery confirmation mail for a Multimedia message.
- ▶ **Read Receipts:** Allows you to request a message read confirmation mail for a Multimedia Message.

▶ Auto Download

- **On:** You can always receive multimedia messages automatically.
- **Off:** You receive only notification messages in the inbox and then you can check the notifications.

- ▶ **Network Profile:** For further details, see page 64.

Voicemail Number *(Menu 2.0.3)*

Allows you to change the voice mail server number, if necessary.

! Note

Voice Mail is a network feature. Please contact your service provider for further details.

Download Message *(Menu 2.0.4)*

- ▶ **Receive:** You can set the option whether you want to receive the message or not.

Check Memory

*Menu 2.**

You can check the current memory status of each memory for Text and Multimedia.

Recent Calls

You can check the record of missed, received, and dialed calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time of the call. You can also view call times.

Missed Calls

Menu 3.1

- View the number, if available, and call it or save it in the Address Book
- Enter a new name for the number and save both in the Address Book
- Send a message by this number
- Delete the call from the list

Dialed Calls

Menu 3.2

- View the number, if available, and call it or save it in the Address Book
- Enter new name for the number and save both in the Address Book
- Send a message by this number
- Delete the call from the list

Received Calls

Menu 3.3

- View the number, if available, and call it or save it in the Address Book
- Enter a new name for the number and save both in the Address Book
- Send a message by this number
- Delete the call from the list

Delete Recent Calls

Menu 3.4

This menu allows you to delete **Missed**, **Dialed** and **Received call** lists. You can delete all call lists at one time.

Call Duration

Menu 3.5

This allows you to view the duration of the incoming and outgoing calls. You can also reset the call times. The following timers are available:

Last Call (*Menu 3.5.1*)

Duration of the last call.

Dialed Calls *(Menu 3.5.2)*

Duration of the outgoing calls.

Received Calls *(Menu 3.5.3)*

Duration of the incoming calls.

All Calls *(Menu 3.5.4)*

Total Duration of all calls made and incoming calls since the timer was last reset.

Data Information*Menu 3.6*

You can check the amount of data transferred over the network through the GPRS (General Packet Radio Service) information option. In addition, you can also view how much time you are online.

Web Data *(Menu 3.6.1)*

You can check the data volume and the duration through WAP.

Data Call *(Menu 3.6.2)*

You can check the data volume and the duration through GPRS by using an external device such as a serial port.

Total Data *(Menu 3.6.3)*

You can check the total amount of data through WAP and an external device.

You can access various WAP (Wireless Application Protocol) / Web services such as news, and weather. These services are specially designed for mobile phones and they are maintained by the service providers.

Note

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Please contact your service provider to open an Internet account.

To launch the browser in standby mode, press and hold down the  key.

Once connected, the homepage is displayed. The content depends on the service provider.

To exit the browser at any time, press the  [END] key. The idle screen is displayed.

Menus for the Browser

You can surf the Internet using either the phone keys or the WAP Browser menu.

Using the Navigation Keys

When surfing the Internet, the keys function differently than when in the phone mode.

Key	Description
up/down navigation key	Scroll each line of the content area

Using the WAP Browser Menu

There are various menus available when surfing the Internet.

MEdia Net Home

Menu 4.1

Connect to Cingular's homepage. The homepage is defined in the activated account and cannot be changed.

Favorites

Menu 4.2

This function allows you to store and edit frequently accessed sites. The following [Options] are available.

Note

Your phone may have some pre-installed bookmarks for sites not affiliated with LG. LG does not warrant or endorse these sites. If you choose to access them, you should take the same precautions for security or content as you would with any site.

- ▶ **View:** Display the favorite title and URL
- ▶ **Delete:** Allow you to erase the selected favorite
- ▶ **Edit:** Modify the existing favorite item
- ▶ **Move to Folder:** Move the selected favorite to the folder that you've created.
- ▶ **New Favorite:** Add a new favorite manually
- ▶ **New Folder:** Add a new folder manually
- ▶ **Send URL:** Allows the favorite information to be sent via SMS to another person
- ▶ **Delete All:** Allows you to erase all favorites

Go to URL

Menu 4.3

You can directly connect to the site you want. You need to enter a specific URL.

Network Profiles

Menu 4.4

This menu shows the Network Profile. You can register, delete and edit by using the Option Menu.

Cache Settings

Menu 4.5

The web pages you have accessed are stored in the memory of the phone.

Clear Cache *(Menu 4.5.1)*

Remove all cached data in the memory.

Allow Cache *(Menu 4.5.2)*

Set a value whether a connection attempt is made through cache or not.

! Note

A cache is a buffer memory, which is used to store data temporarily.

Security Certificates

Menu 4.6

You can see the list of certificates and view them in detail.

Information

Menu 4.7

The WAP Browser version is displayed.

Cingular Mall

Shop Tones

Menu 5.1

This menu option connects to Cingular's ringtone download site.

Note

Additional charges may incur when downloading ringtones. Contact your service provider for further information.

Shop Games

Menu 5.2

This menu option connects to Cingular's game download site. This allows users to download the various games by connecting to the Internet.

Note

Additional charges may incur when downloading games. Contact your service provider for further information.

Shop Graphics

Menu 5.3

This menu option connects to Cingular's graphic download site.

Note

Additional charges may incur when downloading graphics. Contact your service provider for further information.

Shop Multimedia

Menu 5.4

This allows you to connect to Cingular's multimedia download site.

Note

Additional charges may incur when downloading ringtones. Contact your service provider for further information.

Shop Applications

Menu 5.5

This menu option connects to Cingular's application download site. This allows users to download the various applications by connecting to the Internet.

Note

Additional charges may incur when downloading ringtones. Contact your service provider for further information.

MEdia Net Home

Menu 5.6

This connects to the homepage. The homepage may be the site which is defined in the activated profile. It will be defined by the Service Provider if you have not defined it in the activated profile.

The Instant Messaging feature can only be used with the support of the network operator or communities such as AIM, MSN Messenger, Y! Messenger and ICQ. For Instant Messaging users, a valid User ID and Password will be required in order to login and exchange messages as well as checking the online status.

There are two ways to use the Instant Messaging feature.

1. Through the Main Menu.
2. Through the IM hotkey (the right navigation key).
Short pressing the hotkey will bring up the available IM clients. The menu items below might not appear since not all IM communities support the various options. Also the menu strings may appear differently based on the selected IM communities. The keywords such as User ID, Login and Contact will be used as general terms in IM menus according to the currently selected communities such as AIM, MSN Messenger, Y! Messenger and ICQ.

Offline Menu

Sign In

This allows users to login by filling in the User ID and Password.

Note

If your phone number is not registered on the SmartChip you will not be able to log into the IM client

You can check your phone number in the My numbers menu (Menu 8.8)

Note

Once the User ID and Password are saved, you will not be required to type them in again during the Login process. This feature is optional.

Saved Conversations

This is where a user can view saved conversations.

Settings

- ▶ **My Status:** Allows you to set your status to Available, Busy or Invisible.
- ▶ **Status Text:** You may set your current status in free text format.

- ▶ **Save Password:** You can save your password in login Input.
- ▶ **Power - on Sing In:** If you set the desired IM community that saved your ID and Password, you will be automatically login to the community when you switch the phone on.

IM Information

This indicates the Instant Messaging Client Information such as Client Name and Version Number.

Online Menu / 1 to 1 conversation

After successful Login, a list of contacts with Screen Names will appear on screen. Depending on the cursor location in the contacts, the menu options will be available.

When cursor is located on a Conversations List

! Note

The Conversations List contains both the active contact where a conversation has taken place as well as unknown contact.

- ▶ **View/Hide Conversation:** This provides the option to view or hide contacts from the selected list.

! Note

When you select the left/right navigation key or the Confirm key on the Conversations List, it offers the ability to view or hide conversations.

- ▶ **Send to Others:** This offers the ability to send a message to an unknown contact. When selected, User ID must be typed in prior to starting an IM session or conversation.
- ▶ **Saved Conversations:** You may view or delete the stored conversation session.
- ▶ **Settings**
 - **My Status:** Allows you to set your status to Available, Busy or Invisible.
 - **Status Text:** You may set your current status in free text format.
 - **Show:** You have the ability to show all contacts or only online contacts.
 - **Display Name:** You may change your display name to be used while in MSN Messenger service.

- ▶ **Logout:** This begins the Logout process.

When the cursor is located on a Conversation

- ▶ **End Conversation:** This closes the selected conversation. If an unknown contact was selected, that contact is deleted.
- ▶ **Block/Unblock Contact:** This allows you to block/unblock the selected Conversations Contact.
- ▶ **View Information:** This allows you to view the User ID and Status Text information.
- ▶ **Refresh Contact:** This refreshes the presence information of the selected contact.
- ▶ **Settings:** Please refer to the previous Settings Menu.
- ▶ **Logout:** This begins the Logout process.

When the cursor is located on a Contact List

- ▶ **View/Hide Conversations:** This provides the option to view or hide contacts from selected list.
- ▶ **Add Contact:** This adds a new contact to the selected contacts list, in the meantime this searches for the contact on the basis of E-mail Address, First Name, or Last Name.

- ▶ **Blocked List:** This allows you to view the blocked list.

- ▶ **Refresh List:** This refreshes the presence information of the contacts within the contacts.
- ▶ **Send to Others:** This offers the ability to send a message to an unknown contact. When selected, the User ID must be typed in prior to starting an IM session or conversation.
- ▶ **Settings:** Please refer to the previous Settings Menu.
- ▶ **Logout:** This begins the Logout process.

When the cursor is located on a Contact

- ▶ **Add Contact:** This adds a new contact to the selected contacts list; in the meantime this searches for the contact on the basis of E-mail Address, First Name, or Last Name.
- ▶ **Delete Contact:** This deletes the selected Contact.
- ▶ **Block/Unblock Contact:** This allows or blocks conversation with the selected Contact.
- ▶ **Refresh Contact:** This refreshes the presence information of the selected contact.

- ▶ **View Information:** This allows you to view information. It provides User ID, Status Text.
- ▶ **Settings:** Please refer to the previous Settings Menu.
- ▶ **Logout:** This begins the Logout process.

Menu options available in the Conversation screen

- ▶ **Send:** This allows you to send the typed message.
- ▶ **Back To List:** This brings the screen back to the contacts.
- ▶ **Insert:** You can insert Symbol, Template and emoticons in the conversation screen.
- ▶ **Block/Unblock Contact:** This allows or blocks conversation with the selected Contact.
- ▶ **Save Conversation:** Stores currently active conversation.
- ▶ **End Conversation:** This ends the active conversation and clears the conversation buffer.
- ▶ **View Information:** This allows you to view the User ID and Status Text information.
- ▶ **Set T9:** This selects the T9 predictive mode Language.

! Note

- Within the conversation screen, you can insert symbols, emoticons and text templates by using the left soft key.
- In the conversation window, you can use the up/down navigation key for scrolling through the conversation.
- Maximum number of characters supported by a message is 400 characters for receiving and 128 characters for sending.
- The presence information might not update in real time so the “Refresh List”/“Refresh Contact” option can be used for most up to date status.

Favorites

Menu 7.1

This function allows you to store and edit frequently accessed sites. For further details, see page 44 (Menu 4.2).

Games & Apps

Menu 7.2

For further details, see page 33 (Menu 1.2).

Audio

Menu 7.3

The right soft key [**Options**] will bring up the following options.

- ▶ **Send Via:** You can send the selected audio file in a Text or a Multimedia Message.
- ▶ **Set as Ringtone:** You can set as the Ringtone with the selected audio file.
- ▶ **Delete:** You can delete the currently selected audio file.
- ▶ **Rename:** You can change the title of the selected audio file.
- ▶ **Delete All:** You can delete all audio files in the list.

! Note

Sounds supplied as default can only be used under the Set as Ringtone mode.

Graphics

Menu 7.4

The right soft key [**Options**] will bring up the following options.

- ▶ **Send Via Multimedia Message:** You can send the selected graphic file in a Multimedia Message.
- ▶ **Set as Wallpaper:** You can set as the Ringtone with the selected audio file.
- ▶ **Delete:** You can delete the currently selected audio file.
- ▶ **Rename:** You can change the title of the selected graphic file.
- ▶ **Delete All:** You can delete all graphic files in the list.
- ▶ **List/Icon View:** You can configure the graphic files to List style or Icon style.

! Note

Pictures supplied as default can only be used under the Set as Wallpaper mode.

Tools

Menu 7.5

Camera (Menu 7.5.1)

The phone supports 3 modes that can be set to capture images and they are 160X120, 320X240 and 640X480.

Note

Built-in VGA camera with zoom and 3 image resolutions (default set to 320 x 240). Increasing resolution will reduce the number of images stored at one time.

You can access the camera feature directly by pressing and holding the  (camera key) about 2 seconds.

Take Photo

Using the camera module built in your phone, you can take pictures of people or events while on the move. Additionally, you can send photos to other people in a multimedia message.

The right soft key [**Options**] will bring up the following options.

- ▶ **Image Size:** Sets the image size to 160X120, 320X240 or 640X480. The selected image size displays on the capture screen.

- ▶ **Brightness:** This adjusts the brightness level of the screen and there are 9 levels of setting.
- ▶ **White Balance:** This adjusts the Light Effect level and you can select from the following options: Auto / Daylight / Incandescent / Cloudy / Fluorescent.
- ▶ **Zoom:** You can zoom in/out by the left/right navigation key except 640X480 (default phone setting).

Note

In Take Photo mode, you can adjust the zoom scale by using the up/down navigation keys. The maximum zoom scale depends on the resolution as follows.

Resolution	Zoom scale
640x480	x1
320x240	x1, x2
160x120	x1, x2, x4

- ▶ **Color Effect:** Allows you to apply special effects to the picture. Press the left or right navigation key to find the tone you want to use the following options: Color, Sepia and Mono.
- ▶ **Self Timer:** Determines the camera timer.

- ▶ **Multishot:** This feature enables the amount of continuous frames that can be taken at one time. The number of frames is determined by the image size setting.
- ▶ **Shutter Sound:** Allows you to select a sound when you press the shutter. Sound 1 / Sound 2 / Sound 3 / Silent
- ▶ **Default Settings:** This restores the default camera settings (Size, Brightness, Zoom, etc.).

Photo Album

In this menu, you can review the pictures you have taken. This feature offers the ability to store all captured photo images in an album. When no images have been captured, the **Empty** message will be displayed. The picture will display the last image viewed. The title of the image will be displayed on top as well as the index number of the displayed image. The left or right navigation key is used to view previous or next image.

- ▶ **Send Photo:** Allows you to send a multimedia message using the taken picture. For further details about sending multimedia messages, see page 35.
- ▶ **Set as Wallpaper:** Allows you to set the selected photo image as a wallpaper.

- ▶ **Set as Photo ID:** You can add the selected image to a address book contact to use the Photo Caller ID feature.
- ▶ **Delete:** You can delete the selected image file.
- ▶ **Slideshow:** The Slide Show mode will display the images in slide show format. The images are shown every 1.5 second intervals.
- ▶ **Rename:** You can change the title of the selected graphic file.
- ▶ **Delete All:** You can delete all pictures in the album.
- ▶ **Information:** Displays Title, Size, Date and Time information on selected image.

Check Memory

This indicates the available memory capacity. The total available memory is 300KB and the remaining capacity is displayed.

Alarm Clock *(Menu 7.5.2)*

Set the alarm to ring at a specific time. In the **Alarm Clock** menu, the following options are available:

On: Set the time(hour and minute) for activating the alarm.

1. Enter the menu.
 2. Select [**On**] by pressing the right/left navigation keys.
 3. If you want to set the time for activating the alarm, press the down navigation key.
 4. Enter the required time, press the down navigation key.
 5. The following options are available.
 - **Once:** The alarm rings only once and is then deactivated.
 - **Daily:** The alarm rings every day at the same time.
 - **Weekly:** The alarm rings every week on the same day and at the same time.
 - **Monthly:** The alarm rings every month on the same day and at the same time.
 6. Allows you to select the alarm melody by using the right/left navigation keys.
 7. Press the left soft key [**Save**].
- Off:** Cancel the alarm setting.

! Notice

If this option is set to **On**, the alarm will ring at the specified time, even when the phone is switched off.

To stop the alarm when it rings, open the phone and press the right soft key [**Quit**].

Calendar (Menu 7.5.3)

When you enter this menu a calendar will be displayed. The square cursor is used to locate a particular day. The under bar on the calendar indicates schedule(s) on for that day. This function helps to remind you of the schedule. The phone will sound an alarm tone if it has been set for a specific schedule item.

For changing the day, month, and year.

Key	Description
up/down navigation key	Weekly
left/right navigation key	Daily
 key /  key	Yearly
 key /  key	Monthly

- ▶ **Delete:** Allows you to delete the selected schedule.
- ▶ **New Schedule:** You can edit a maximum of 30 characters and create up to 30 notes.
- ▶ **Edit:** Allows you to edit the selected schedule.
- ▶ **Calendar:** Allows you to consult the calendar.
- ▶ **Scheduler Tone:** The phone can sound an alarm tone when the scheduled date for an event has been reached with this option.

- ▶ **All Schedules:** Shows the notes that are set for all days. Use the up/down navigation keys to browse through the note lists. You can use the menu by press the right soft key [**Options**].
- ▶ **Go to Date:** Allows you to jump to a specific date.
- ▶ **Delete Old:** Delete the past schedule event that has already been notified.
- ▶ **Delete All:** Delete all schedules. You are asked to confirm your action.

Calculator (Menu 7.5.4)

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

Using the Calculator

1. Enter the first number using the numeric keys.
2. Use the navigation keys to select a sign for calculation.

! Note

To input a decimal point, press the  key.

3. To calculate the result, press the  key.

Notepad (Menu 7.5.5)

You can create up to a maximum of 30 memos.

1. Select a memo pad to edit.
2. Press the left soft key [New] to create a new memo.
3. Input the memo and press the left soft key [Save] to save.

World Clock (Menu 7.5.6)

Allows you to check the current Greenwich Mean Time(GMT) and major cities around the world, using the left/right navigation keys.

The screen shows the city name, current date and time.

To select the time zone in which you are located, proceed as follows:

1. Select the city corresponding to your time zone by pressing the left/right navigation keys one or more times. The local date and time are displayed.
2. If you want to set, press the left soft key.
3. If you want to set Daylight Savings, press the right soft key.

Note

The time zone setting of each city in World time menu may be affected by network condition.

Unit Converter (*Menu 7.5.7*)

This function converts any measurement into the unit you want.

There are 4 types that can be converted into units:

Length, Surface, Weight, and Volume.

1. You can select one of four unit types by pressing the left soft key [**Unit**].
2. Select the standard value by using the left/right navigation keys.
3. Select the unit you want to convert by pressing the up/down navigation keys.
4. You can check the converted value for the unit you want. Also, you can input a decimal number by pressing the  key.

Tip Calculator (*Menu 7.5.8*)

This feature allows you to quickly and easily calculate the tip amount based on the total bill as well as the split of the total bill based on the number of people.

Address Book

Contacts

Menu 8.1

This menu allows you to save and manage contact address information. The Contacts functions allow you to add a new address or search saved contact addresses by name.

New Contact

Menu 8.2

This menu allows you to add a new contact address. You can input contact address information including name, phone numbers, email addresses, group information items, memos, and image (photograph).

Speed Dial List

Menu 8.3

This menu allows you to configure the speed dial numbers. You can select a number as a speed dial from 2 to 9. You can configure speed dial numbers for any of the 8 numbers for a specific contact address so that a contact address may have multiple speed dial numbers.

Caller Groups

Menu 8.4

1. Scroll to **Caller Groups** then press the left soft key [OK] to enter this menu.

2. Every Group list will be displayed: **Family, VIP, Friends, Colleague, Group 1, Group 2, No Group**.

3. Select the Group name that you want to manage by pressing the right soft key [Options].

4. You will see the following submenus under the predefined groups except for the **No Group** group.

- **Group Ringtone:** Allows you to select the ringtone to be used when you receive a voice phone call from a person in the group.
- **Group Icon:** Allows you to select the graphic icon to be displayed when you receive a call from a person in the group.
- **Add Member:** Allows you to add the member to the group.
- **Remove Member:** Allows you to delete the member in the group.
- **Rename:** Allows you to assign a name to the group.

Copy All Contacts

Menu 8.5

This menu allows you to copy all of the information from your SmartChip, e.g. name, handset number, etc., to your handset. If a name is duplicated during the copying operation, the information is also duplicated.

- ▶ **SmartChip to Phone:** You can copy the entry from the SmartChip card to the phone memory.
- ▶ **Phone to SmartChip:** You can copy the entry from the handset memory to the SmartChip card (not all the data will be copied).

Delete All Contacts

Menu 8.6

You can delete all entries in the **SmartChip** and the **Phone**.

Press the  [END] key to return to standby mode.

Settings

Menu 8.7

Set Save Location (Menu 8.7.1)

- ▶ If you select **Ask Always** when adding entry, the phone will ask where to store.
- ▶ If you select **SmartChip** or **Phone**, the phone will store an entry to the SmartChip or the phone.

Set View Detail (Menu 8.7.2)

- ▶ If you select **On**, you can view the information of each member in details (Menu 8.4).
- ▶ If you select **Off**, you can view only name of each member (Menu 8.4).

Information

Menu 8.8

Service Dial Number (Menu 8.8.1)

You can view the list of Service Dialing Numbers (SDN) assigned by your network provider (If supported by the SIM card). Such numbers include the emergency, directory assistance and voice mail numbers.

1. Select the Service dial number option.
2. The names of the available services will be shown.
3. Use the up/down navigation keys to select a service.
Press the  [SEND] key.

Check Memory (Menu 8.8.2)

You can check how many names and numbers are stored in the Address Book (SIM card and phone memories).

My Numbers (Menu 8.8.3)

Allows you to display your phone number in the SIM card.

Audio

Menu 9.1

There are 4 sound modes: General, Vibrate All, Silent and Ear Mic. General, Vibrate All and Silent modes can be changed from the Volume menu under Ringtone. In addition, pressing and holding the  key on idle screen mode can swap Normal and Manner mode. Ear Mic is available when respective instruments are attached.

Shop Tones *(Menu 9.1.1)*

Connects to Cingular Ringtone shops.

Ringtones *(Menu 9.1.2)*

Shows and plays ringtones. These can be downloaded ringtones from Ringtone shops.

Volume *(Menu 9.1.3)*

This menu controls Ringtone, Key Tone, Earpiece and Headset volume. It is available on Ringtone volume level 1~5.

Ring Alert Type *(Menu 9.1.4)*

Supports 3 ring alert types. **Ring**, **Ring and Vibrate**, and **Vibrate then Ring**.

Message Alert Tones *(Menu 9.1.5)*

Allows you to select an alert tone which is played when a message is received. You can select any one from 5 message alert tones.

Key Tones *(Menu 9.1.6)*

This menu option allows you to select a tone that the phone sounds when a key is pressed.

Display

Menu 9.2

Wallpaper *(Menu 9.2.1)*

This option allows you to change the background image (wallpaper) to be displayed in idle mode.

1. Scroll through the list by pressing the left or right navigation key.

You have various preset images available. You can also select the blank background and any images downloaded from the Internet.

2. Press the left soft key [**View**] when the required image is highlighted.

3. Press the left soft key [**Set**], then the selected image will be displayed in standby mode.

Backlight Timer *(Menu 9.2.2)*

You can select whether or not the phone uses the backlight.

- **10 Seconds** turns the backlight off 10 seconds after the last key was pressed.
- **30 Seconds** turns the backlight off 30 seconds after the last key was pressed.
- **60 Seconds** turns the backlight off 60 seconds after the last key was pressed.
- **180 Seconds** turns the backlight off 180 seconds after the last key was pressed.

Contrast *(Menu 9.2.3)*

This option allows you to adjust the contrast of the LCD screen by pressing the navigation key.

Languages *(Menu 9.2.4)*

You can change the language for the the display text in your phone. This feature also change the Language Input mode.

Date & Time

Menu 9.3

Set Date *(Menu 9.3.1)*

This allows you to enter the day, month and year. You can change the date format via the **Date Format** menu option.

Date Format *(Menu 9.3.2)*

YYYY/MM/DD(year/month/day)

DD/MM/YYYY(day/month/year)

MM/DD/YYYY(month/day/year)

Set Time *(Menu 9.3.3)*

This allows you to enter the current time. You can choose the time format via the Time Format menu option.

Time Format *(Menu 9.3.4)*

24 Hours/12 Hours

Auto Update *(Menu 9.3.5)*

Select **On** to set the phone to automatically update the time and date according to the current time zone.

Call

Menu 9.4

Call Forwarding (Menu 9.4.1)

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your service provider. Select one of the divert options, for example, select **If busy** to divert voice calls when your number is busy or when you reject incoming calls.

The following options are available:

- ▶ **All Voice Calls:** Diverts voice calls unconditionally.
- ▶ **If Busy:** Diverts voice calls when the phone is in use.
- ▶ **If No Reply:** Diverts voice calls which you do not answer.
- ▶ **If Out Of Reach:** Diverts voice calls when the phone is switched off or out of coverage.
- ▶ **All Data Calls:** Diverts to a number with a PC connection unconditionally.
- ▶ **All Fax Calls:** Diverts to a number with a fax connection unconditionally.
- ▶ **Cancel All:** Cancels all call divert service.

Answer Mode (Menu 9.4.2)

This allows you to determine when to answer the phone.

- ▶ **Flip Open:** This option allows you to answer a call simply by opening the flip.
- ▶ **Any Key:** You can answer an incoming call by pressing any key, except the  [END] key.
- ▶ **Send Key Only:** You can answer an incoming call by only pressing the  [SEND] key.

Send My Number (Menu 9.4.3)

This network service allows you to set your phone number to be displayed **On** or hidden **Off** from the person to whom you are calling. You can select **Set by Network** if you prefer to have different settings for different service provider.

Call Waiting (Menu 9.4.4)

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **View Status**, to check if the function is active or not.

Minute Minder (Menu 9.4.5)

This option allows you to specify whether the phone must beep every minute during an outgoing call to keep you informed of the length of the call.

Auto Redial (Menu 9.4.6)

Select **On**, your phone redials the number you're trying to call up to 10 times after you hear a quick, busy signal. Press  [END] key to stop the call attempts.

This feature attempts to redial numbers that are busy due to the wireless network. It does not redial numbers to a busy party.

TTY (Menu 9.4.7)

Allows you to attach a TTY device enabling you to communicate with parties also using a TTY device.

A phone with TTY support is able to translate typed characters to voice. Voice can also be translated into characters and then displayed on the TTY.

TTY mode (Tele Type writer)

TTY modes are as follows :

1. TTY Full:

- Users who cannot talk and hear send and receive a text message through TTY equipment.

2. TTY Talk:

- Users who can talk but cannot hear receive a text message and send voice through TTY equipment.

3. TTY Hear:

- Users who can hear but cannot talk send a text message and receive voice through TTY equipment.

Menu	User	Feature	Transmission /Receiving Mode	When making communications with a normal terminal
TTY Full	For hearing- /verbally- impaired		text message transmission, text message receiving	operator required
TTY+TALK	For hearing-impaired	talkable	voice transmission, text message receiving	operator required
TTY+HEAR	For verbally-impaired	audible	text message transmission, voice receiving	operator required

Connecting TTY Equipment and a Terminal

1. Connect a TTY cable to TTY connection on the terminal. (TTY connection location is same as a hands free ear jack)
2. Enter the phone menu and set up the desired TTY mode. (For a TTY mode, see the following)
3. After setting a TTY mode, check the LCD screen of the phone for the TTY icon.
4. Connect the TTY equipment to the power source and turn it on.
5. Make a phone connection to the desired number.
6. When connection is made, use the TTY equipment to type in and send a text message or send voice.
7. The voice or text message from the receiver end displays on the TTY equipment display.

Send DTMF Tones (Menu 9.4.8)

You can send the DTMF (dual tone multi-frequency) tones of the number on the display during a call.

This option is helpful for entering a password or account number when you call an automated system, like a banking service.

Security

Menu 9.5

Various codes and passwords are used to protect the features of your phone. They are described in the following sections (see pages 20)

Request PIN Code (Menu 9.5.1)

When the PIN code request feature is set to 'Enable', you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

! Note

Before disabling the PIN code request feature, you must enter your PIN

The following options are available:

- ▶ **Enable:** You must enter the PIN each time the phone is switched on.
- ▶ **Disable:** The phone connects directly to the network when you switch it on.

Fixed Dial Number (FDN) *(Menu 9.5.2)*

This allows you to restrict your outgoing calls to selected phone numbers, if this function is supported by your SmartChip. The PIN2 code is required.

The following options are available:

- ▶ **Enable:** You can only call phone numbers stored in the Address Book. You must enter your PIN2.
- ▶ **Disable:** You can call any number.
- ▶ **Number List:** You can view the number list saved as fixed dial number.

! **Note**

Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

Change Codes *(Menu 9.5.3)*

The Change codes feature allows you to change your current password to a new one. You must enter the current password before you can specify a new one.

You can change the access codes for: **Security Code**, **PIN1 Code**, **PIN2 Code**

! **Note**

PIN: Personal Identification Number.

Connection

Menu 9.6

GPRS Attach *(Menu 9.6.1)*

If you select **Power On** and you are in a network that supports packet data, the phone registers to the GPRS network and sending short messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker. If you select **When Needed**, the phone will use a packet data connection only if you start an application or action that needs it. The GPRS connection is closed after it is not used by any application.

! **Note**

If there is no GPRS coverage and you have chosen **Power on**, the phone will periodically try to establish a packet data connection.

Network Profiles *(Menu 9.6.2)*

This feature sets the Profile during the WAP and MMS connections. The Profile menu under the Access Point feature will display Add, Delete and Editor options, but the reason why Activate option is not available is because there is no way of knowing whether WAP or MMS will be used to activate the content.

Reset Network profile *(Menu 9.6.3)*

This allows Profile information to be restored to original setting. For example, this option will restore the Profile that has been deleted by the Delete All selection from the Network Profiles (Menu 4.4) submenu.

Reset Default

Menu 9.7

You can easily reset your phone to its default configuration. To do so, proceed, as follows.

1. Select the Reset Settings menu option.
2. Enter the 4-digit phone password.

! Note The password is preset to **0000**.

Please check to see if any problems you have encountered with the phone are described in this section before taking the phone in for a service or calling a service engineer.

Q How do I view the list of outgoing calls, incoming calls and missed calls?

A Press the  [SEND] key.

Q How do I view all numbers stored in memory?

A Press the down navigation key.

Q Why is the connection inconsistent or not audible in certain areas?

A When frequency environment is unstable in a certain area, connection may be inconsistent and not audible. Relocate to another area and try again.

Q Why is the connection not consistent abruptly disconnects even when established?

A When frequency is unstable or weak or if there are too many users, connection may be cut off even after it was established. Please try again later or attempt after relocating to other areas.

Q Why does the LCD not turn on?

A Remove the battery and turn on the power after placing it back on. If there is no change, fully charge the battery and try again.

Q Why is there an echo when a connection is made with certain telephones in a certain area?

A This is called the 'Echo Phenomenon', where it occurs if connection volume is too high or caused by special properties (semi electronic telephone exchange) of the equipment on the other end.

Q Why does the phone heat up?

A The phone may get hot when there is a very long call duration or when games are played or even when surfing the Internet for a long time. This has no effect upon the life of the product or performance.

Q Why does the battery life get shorter in standby mode?

A The battery is worn out. As time passes, the battery life gradually becomes shorter. If the battery lasts about half the amount of time as when first purchased, it's time to purchase a new battery.

Q Why does the battery run out so quickly during normal use?

A It is due to the user environment or a large number of calls or weak signal.

Q Why is no number dialed when you recall a Address Book entry?

A Check that the number has been stored correctly by using the Address book Search feature. Re-store them, if necessary.

Q I cannot find the lock, PIN, or PUK code. What is my password?

 
A The default lock code is '0000'. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.

Accessories

There are a variety of accessories available for your mobile phone. You can select these options according to your personal communication requirements. Consult your local dealer for availability.


Travel Adapter

This adapter allows you to charge the battery. It supports standard U.S. 120 Volt 60Hz outlets. It takes under 4 hours to charge a completely discharged battery.

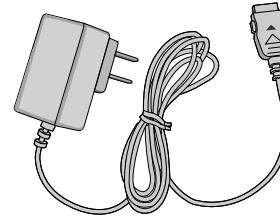

Battery

 
Standard battery is available.

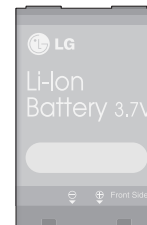

Vehicle Power Adapter

You can operate the phone and trickle charge the phone battery from your vehicle by using the vehicle power adapter.

 It takes 5 hours to charge a completely discharged battery.

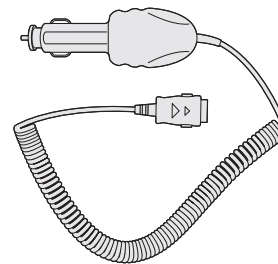

Safety Guidelines

TIA Safety Information

Provided herein is the complete TIA Safety Information for Wireless Handheld phones. Inclusion of the text covering Pacemakers, Hearing Aids, and Other Medical Devices is required in the owner's manual for CTIA Certification. Use of the remaining TIA language is encouraged when appropriate.

Exposure to Radio Frequency Signal

Your wireless handheld portable telephone is a lowpower radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

Those standards were based on comprehensive and

periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

- ▶ Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- ▶ Give full attention to driving - driving safely is your first responsibility;
- ▶ Use hands-free operation, if available;
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6') inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- ▶ Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- ▶ Should not carry the phone in a breast pocket.
- ▶ Should use the ear opposite the pacemaker to minimize the potential for interference.
- ▶ If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a 'blasting areas or in areas posted: 'Turn off two-way radio'. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

Safety Guidelines

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

Charger and Adapter Safety

- ▶ The charger and adapter are intended for indoor use only.

Battery Information and Care

- ▶ Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- ▶ The battery does not need to be fully discharged before recharging.

- ▶ Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- ▶ Do not disassemble or impact the battery as it may cause electric shock, short-circuit, and fire. Store the battery in a place out of reach of children.
- ▶ Keep the battery's metal contacts clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- ▶ Recharge the battery after long periods of non-use to maximize battery life.
- ▶ Battery life will vary due to usage patterns and environmental conditions.
- ▶ Use of extended backlighting, MEdia Net Browsing, and data connectivity kits affect battery life and talk/standby times.
- ▶ The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- ▶ Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- ▶ Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- ▶ When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- ▶ If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- ▶ Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- ▶ Using a damaged battery or placing a battery in your mouth may cause serious injury.

- ▶ Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- ▶ Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- ▶ When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- ▶ Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- ▶ Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Center to replace the damaged antenna.
- ▶ Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Center.
- ▶ Do not paint your phone.

Safety Guidelines

- ▶ The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- ▶ When you use the phone in public places, set the ring tone to vibration so as not to disturb others.
- ▶ Do not turn your phone on or off when putting it in your ear.

FDA Consumer Update

The U.S. Food and Drug Administration Center for Devices and Radiological Health Consumer Update on Mobile Phones.

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF)

in the microwave range while being used. They also emit very low levels of RF when in the standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard

and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- ▶ Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- ▶ Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- ▶ Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- ▶ National Institute for Occupational Safety and Health
- ▶ Environmental Protection Agency

- ▶ Occupational Safety and Health Administration (Administración de la seguridad y salud laborales)
- ▶ Occupational Safety and Health Administration
- ▶ National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term 'wireless phone' refers here to handheld wireless phones with built-in antennas, often called 'cell', 'mobile', or 'PCS' phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called 'cordless phones,' which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments

investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the

average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do- may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues. The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and

studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must

report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/oet/rfsafety>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, 'Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques,' sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissuesimulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements

made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote

antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by

children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and

wireless phones so that no interference occurs when a person uses a 'compatible' phone and a 'compatible' hearing aid at the same time. This standard was approved by the IEEE in 2000. The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cdrh/phones/index.html>)

Federal Communications Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project
(<http://www.who.int/emf>)

National Radiological Protection Board (UK)
(<http://www.nrpb.org.uk/>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility.

When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
2. When available, use a hands-free device. A number of hands-free wireless phone accessories are

readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.

3. Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
4. Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.
5. Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a "to-do" list while driving a car, you are not watching where you are going. It is common sense. Don't get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.

Safety Guidelines

6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip— dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations — with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a “Good Samaritan” in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

For more information, please call to 888-901-SAFE, or visit our website www.wow-com.com

Consumer Information on SAR (Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. * Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is

determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.85 W/kg and when worn on the body, as described in this user's manual, is 0.35 W/kg. (Body-worn measurements differ among phones models, depending upon available accessories and FCC requirements.) While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for

Safety Guidelines

this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID BEJCG225.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Glossary

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the feature on your mobile phone, here are a few definitions.

Call Barring

Ability to restrict outgoing and incoming calls.

Call Divert

Ability to reroute calls to another number.

Call waiting

Ability to inform users that they have an incoming call when engaged on another call.

GPRS (General Packet Radio Service)

GPRS guarantees continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM) circuit-switched cellular phone connections and the Short Message Service (SMS).

GSM (Global System for Mobile Communication)

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

Java

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification. It has been promoted for and geared heavily to the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a Java applet. When it is run on a mobile phone or pager, it is called a MIDlet.

Line Identification Services (Caller ID)

Service allowing subscribers to view or block the telephone numbers of callers.

Multiparty Calls

Ability to establish a conference call involving up to five additional parties.

Phone Password

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

Roaming

Use of your phone when you are outside your home area (when traveling for example).

SDN (Service Dial Number)

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support and emergency services.

SIM (Subscriber Identification Module)

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.

SMS (Short Message Service)

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received (up to 160 characters long) can be displayed, received, edited or sent.

Patent Information

This product was manufactured under one or more of the following U.S.

patents: 5276765 5749067 6061647

Index

A

Accessories	68
Add Member	57
Address Book	57
Adjusting the Volume	22
Alarm Clock.....	53
All Calls	43
Answering a Call	22
Answer Mode	61
Auto Redial	62

B

Backlight.....	15
Backlight Timer	60
Battery	7,68
Bearer Setting	41
Business Card.....	40

C

Calculator	55
Calendar	54
Caller Groups	57
Call Waiting.....	61
Cancel All	61
Clear Cache.....	45
Clear key.....	13,14
Conference Calls.....	28
Copy All Contacts.....	57

D

Data Call	43
Delete Recent Calls	42
Dialed Calls	42,43
Display screen.....	13,14
Display Information.....	15

E

End key.....	13,14
Ending a Call	21
Entering Text.....	22

F

Favorites	44,51
Fixed Dial Number.....	64

G

Games & Apps.....	33
Go to URL.....	45
GPRS Attach	64
Group Icon.....	57
Group Ringtone:.....	57

H

Headset.....	68
--------------	----

I

Inbox.....	37
In-Call Menu	27

L

Languages.....	60
Last Call	42
Lower Case	24

M

Making a Call	21
Making International Calls	21
Menu Tree	30
Message key.....	13,14
Microphone.....	13,14
Minute Minder	62
Missed Calls.....	42
Muting the Microphone	27
My Numbers	58

N

Navigation key	13,14
Network Profile	41,45
Notepad	55

O

Outbox.....	38
-------------	----

P

Power key.....	13,14
Private Call	29

R

Received Calls	42,43
----------------------	-------

S

Security code.....	20
Send key	13,14
Send My Number	61
Sent	38
Service Dial Number	58,86
Set Save Location	58
Scheduler Tone	54
Speakerphone	27
Side keys	13,14
Signal Strength	22

T

Templates.....	39
Text.....	35
Tip Calculator.....	56
Time Format	60
Travel Adapter.....	7,68
TTY	62

U

Unit Converter.....	56
Upper Case.....	24

V

Vibrate Mode	22
--------------------	----

W

Wallpaper	59
WAP Browser	44
Web Data.....	43
World Clock.....	55