



ENGLISH



User Guide

LG-A258



CE 0168

P/N : MFL67214124(1.0)

www.lg.com

English

LG-A258 User Guide

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Getting to know your phone

Main screen

Soft keys

Each of these keys performs the functions indicated by the text on the display immediately above them.

OK key

Performs the function indicated by the text shown on the display immediately above the key.

Music key

Go to Music function directly.

Call key

Access the call logs, call a dialed phone number and answer incoming call.

Navigation keys

Use for quick access to phone functions.

Camera key

Go to Camera function directly.

 
 
End/Power key

Ends or rejects a call. Turns the phone on/off. Returns to the home screen when you use the menu.




TIP!

A variety of widget applications is already set to your home screen. On the home screen, press the up navigation key and select the widget you want using the left and right navigation keys. If you access the SNS application by selecting the widget on your home screen, you will be required to sign in with your SNS account.

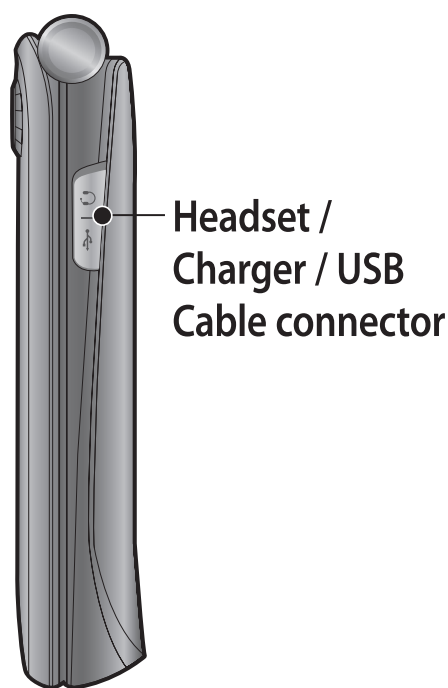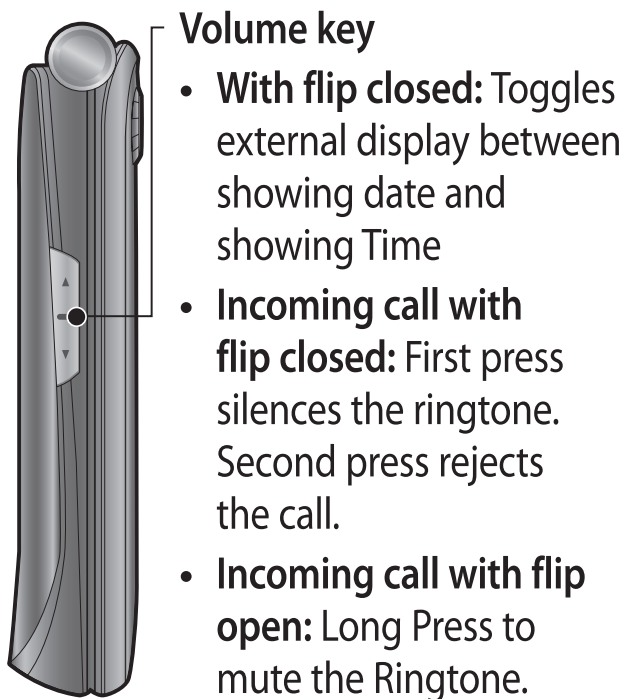

Installing a memory card

 - 1 Remove the battery cover.
- 2 Slide the microSD card slot to release lock.
- 3 Flip up the slot.
- 4 Put the microSD card on the card tray. Make sure the gold colour contact area is facing downwards.
- 5 Flip down then push the slot to lock.

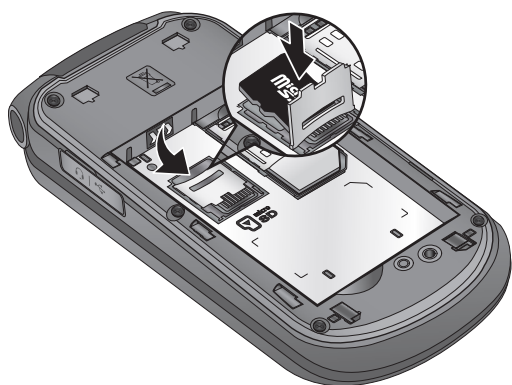

Note: A memory card is an optional accessory. The maximum supported memory card is 8GB.

Formatting the memory card

From your home screen, press **Menu** and select **Settings**. Choose **Memory info**, select **External memory** and press **Format**, and insert security code.

WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

› The SIM card can be easily damaged by scratches or bending, so be careful when handling, inserting or

removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- 1 Open battery cover.
- 2 Remove the battery.
- 3 Insert your SIM.
- 4 Insert your battery.
- 5 Close the battery cover.
- 6 Charge your battery.



WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Turning Your Phone On and Off

You can power the phone on and off by pressing and holding the power key.

Calls

Making a call

- 1 Key in the number using the keypad. To delete a digit press **Clear**.
- 2 Press  to initiate the call.
- 3 To end the call, press .

TIP! To enter + when making an international call, press and hold 0.

TIP! To control the volume during a call, press the up and down Volume keys.

TIP! You can record a voice memo during a call. Press RSK Record. Also when one call is in hold then Press **Options** and select **Record**.

Making a call from your contacts

- 1 Select **Names** from the home screen.
- 2 Using the keypad, enter the first letter of the contact you want to call.
- 3 Press  to initiate the call.

TIP! To scroll through your contacts, use the up and down navigation keys.

Answering and rejecting a call

When your phone rings, press  to answer the call.

While your phone is ringing, select **Silent** to mute the ringing.

This is useful if you have forgotten to change your profile to **Silent** for a meeting.

Press  or select **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different

ways. Press **Menu**, select **Settings** and choose **Call**. Select **Answer mode** and choose from **Press send key**, **Open flip** or **Press any key**.

Using the speakerphone

During a call, you can activate speakerphone by pressing  key and you can use the handset in hands-free.

If the speakerphone is active, press  key again to resume normal handset conversation mode.

Speed dialing

Press **Menu** and select **Contacts**, then choose **Speed dials**.

You can assign a speed dial number to a contact you call frequently.

Speed dial 1 is set to your voice mail and 9 is set to SOS mode so you can not change the both.

Once you have assigned a speed dial, you can initiate a call by pressing and holding the speed dial number in the idle screen.

Viewing your call logs

Press  to view your call logs. You can also check the call record of missed, received, and dialled calls by using the left and right navigation keys.

Changing the call settings

You can set the menu relevant to a call. Press **Menu**, select **Settings** and choose **Call**.

Contacts

Searching for a contact

- 1 Select **Names** from the home screen.
- 2 Using the keypad enter the first letter of the contact you want to call.
- 3 To scroll through the contacts.

Adding a new contact

- 1 Select **Names** from the home screen. Press **Options** and **Add new contact**.
- 2 Enter the first and last name of your new contact. You do not have to enter both.
- 3 Enter the number and select **Options** then choose **Done**.

Note: If you want to add more information, press **Options** and choose **Add detail** then select options you want.

Adding a contact to a group

You can save your contacts into groups, for example, keeping your work colleagues and family separate. There are a number of groups including **Colleagues, Family, Friends, School** and **VIP** already set up on the phone.

Messaging

Sending a message

- 1 Press **Menu**, select **Messaging**, and choose **Write** to send an SMS or MMS.
- 2 A new message editor will open. The message editor combines text message and multimedia messages into one intuitive and easy to switch between editor. The default setting of the message editor is text message.
- 3 Enter your message using either the T9 predictive mode or Abc manual mode or 123 mode. You can switch text input modes by pressing the # key.
- 4 Enter the phone number or press **Options** and select **Send**, to add a contact from the list of your contacts. You can even add multiple contacts marking the contacts.

Note: Message can be sent to a group also. Edit the message then press send and select contact groups and select the group you want.

5 Enter your message.

6 Select Options and choose Insert. Use the left and right navigation keys and add an **Image, Video clip, Sound clip, Schedule, Business card, Note, Text field, To-do,** or a **Text template**.

7 Press **Send** to send the message.

Your message is displayed and responses appear in the same window, creating a message thread with that contact.

TIP! You can select your message type as SMS or MMS when you enter a text longer than 1 page in the message field. If you want to change the type of message to send, press **Menu > Messaging > Options > Settings > Text message**, and choose **Send long text as**.

Note: Image, Video clip, Sound clip, Schedule, Business card, Text field or Subject is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. The following text input methods are available in the phone: T9 mode, Abc mode and 123 mode.

To change modes, press the # key.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 mode

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you press. Simply press the number key associated with the letter

you want to enter, and the dictionary will recognise the word once all the letters are entered.

Using the T9 Mode

- 1 When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
 - If the word is still incorrect after typing completely, press the  key once or more to cycle through the other word options.
 - If the desired word is missing from the word choices list, add it by using the Abc mode.
- 2 Enter the whole word before editing or deleting any keystrokes.
 - To delete letters, press **Clear**.
 - Complete each word with a space by pressing the  key.

Abc mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

Inserting symbols

If you want to insert symbols, press the * key, then you can choose a symbol. Or you can press **Options** and then choose **Insert symbol**.

Changing the language

LG-A258 supports various languages.

There are two ways to change the writing language from the writing screen. You can press

Options, go to Writing language and then set the language you want. Or, you can simply press and hold the * key. The writing options may differ depending on the language you choose.

Message folders

Press **Menu**, select **Messaging**. Choose **Options** and select the folder you want.

Drafts - If you don't have time to finish writing a message, you can save what you have written so far in here.

Outbox - This is a temporary storage folder used while messages are being sent.

Saved Items - You can access your **Saved messages**, **Text templates** and **Multimedia templates**.

Emoticons - A list of useful emoticons already written for a quick reply. You can add, edit and delete emoticons. You can insert the emoticon which you preferred on writing a message.

Settings - Your message settings are pre-defined so that you can send messages immediately. If you would like to change the settings, you can do this using the settings options.

E-mail

Setting up your e-mail

You can stay in touch on the move using e-mail on your LG-A258. It's quick and simple to set up a POP3 or IMAP4 e-mail account.

- 1 Press **Menu** and choose **E-mail**.
- 2 The first time you open the **E-mail**, you need to setup an email account. A setup wizard opens to help you add an e-mail account.
- 3 Follow the pop up instruction and enter the information required.

Sending an e-mail using your new account

To send/receive an e-mail, you should set up an e-mail account.

- 1 Select **Menu**, select **E-mail** and choose **Options**.
- 2 Choose **Write e-mail** and a new e-mail will open.
- 3 Enter the recipient's address and write a subject.
- 4 Enter your message.
- 5 Press **Options**, select **Attach** to add an **Image, Video, Sound, Name & number** or **More**.
- 6 Press **Send** and your e-mail will be sent.

Camera

Taking a quick photo

- 1 Press **Menu** and select **Media**. Select **Camera** to open the viewfinder.
- 2 Holding the phone and, point the lens towards the subject of the photo.
- 3 Press  key to take a photo.

Video camera

Shooting a quick video

- 1 Press **Menu** and select **Media**, then choose **Video camera**.
- 2 Point the camera lens towards the subject of the video.
- 3 Press  key to start recording.
- 4 **Rec** will appear in the viewfinder and a timer will show the length of your video.
- 5 Select **Stop** to stop recording.

Music

Your LG-A258 has a built-in music player so you can play all your favourite music.

Playing a song

- 1 Press **Menu** and select **Media**, then choose **Music**.
- 2 Choose **All songs** then select the song you want to play.
- 3 Select **||** to pause the song.
- 4 Select **▶▶** to skip to the next song.
- 5 Select **◀◀** to skip to the previous song.
- 6 Select **Back** to return to music player menu.

Note: Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or licence to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such materials.

FM radio

Your LG-A258 has an FM radio feature so you can tune into your favourite stations and listen on the move.

During listening to the FM radio, you can also record a short clip and save it.

Note: You will need to insert your headset in order to listen to the radio. Insert the plug into the headset connector in order to listen to the radio and keep the good radio reception.

Searching for stations

- 1 Press **Menu** and select **Media**, then choose **FM radio**.
- 2 Select **Option** and choose **Auto scan** then select **Set**. You can also use the left and right navigation keys to search for stations.

Listening to the radio

- 1 Press **Menu** and select **Media**, then choose **FM radio**.

- 2 Select the channel number of the station you would like to listen to.

TIP! You can listen to the radio via built-in speaker. Press **Options**, select **Listen via speaker**.

Recording your radio

- 1 Press  key during listening to the radio.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press **Stop**. If recording is done, the recorded contents will be saved in **Gallery** as mp3 file.

Note: After recording your radio, you can listen to all of the radio recordings you have saved by selecting **Options** and **Go to Radio recordings**.

TIP! To configure your recording settings such as the saved memory, record type or Pre-recording, press **Options** and select **Recording settings**.

TIP! Pre-recording

lets you record from some seconds before you press the record button.

Voice recorder

Use your Voice recorder to record voice memos or other sounds.

Recording your voice memo

- 1 Press **Menu** and select **Media**, then choose **Voice recorder**.
- 2 Press  key to begin recording.
- 3 Choose **Stop** to end the recording.
- 4 Press **Options** and select **Play last recorded** to listen to the recording.

Gallery

You can store any media files into your phone's memory so that you have easy access to all

of your images, sounds, videos, others and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **Gallery**. Press **Menu** then select **Gallery** to open a list of folders.

Applications

Your LG-A258 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder. Press **Menu** and select **Applications**. Choose **My games & apps**.

Note: An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

Organiser

Setting your alarm (Menu > Organiser > Alarm clock)

You can set up to 5 alarm clocks to go off at a specified time.

Using the calendar (Menu > Organiser > Calendar)

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys.

Adding an item to your to do list (Menu > Organiser > To-do list)

You can view, edit and add tasks to do.

Adding a note (Menu > Organiser > Notes)

You can register your own notes here.

Secret notes

(Menu > Organiser > Secret notes)

You can write the private memo to protect your privacy. You enter the security code to use this menu.

Adding a city to your world time (Menu > Organiser > World time)

You can add a required city to the list of world clock. You can also check the current time of major cities around the world.

Using your calculator (Menu > Organiser > Calculator)

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication, division and Scientific applications also.

Date finder (Menu > Organiser > Date finder)

Date finder is a handy tool to help you calculate what the

date will be after a certain amount of days has passed.

Converting a unit (Menu > Organiser > Converter)

This converts many measurements into a unit you want.

Using the stopwatch (Menu > Organiser > Stopwatch)

This option allows you to use the function of a stopwatch.

Go to (Menu > Organiser > Go to)

It helps you to go to the menu you search for. You can set the item as Go to.

SIM services (Menu > Organiser > SIM services)

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the

operator specific service name stored on the SIM card.

Internet

Accessing the internet browser

You can launch the wap browser and access the homepage of the activated profile on Internet Profiles. You can also manually enter an URL address and access the associated wap page. Press **Menu** and select **Internet**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Settings

Personalising your profiles (Menu > Settings > Profiles)

You can personalise each profile setting. Choose the profile you

want and select **Options** and choose **Edit**.

Using flight mode (Menu > Settings > Profiles > Flight mode)

Use this function to switch the flight mode on. You will not be able to make calls, connect to the Internet, send messages and play FM radio when flight mode is switched on.

Changing your display settings (Menu > Settings > Display)

You can change the settings for the phone display.

Changing your date & time (Menu > Settings > Date & Time)

You can set functions relating to the date and time.

Changing your connectivity settings (Menu > Settings > Connectivity)

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from switch on. If you want to change any settings, use this menu. You can configure the network setting and data access profiles in this menu.

Changing your Bluetooth settings

- 1 Press **Menu** and select **Settings** then choose **Bluetooth**.
- 2 Select **Settings**
Make your changes to:
 - **My device visibility** - Choose whether to **Visible**, **Hidden** or **Visible for 1 min** your device to others.
 - **My device name** - Enter a name for your LG-A258.

- **Supported services** - Shows what it supports.
- **My address** - View your Bluetooth address.

Pairing with another Bluetooth device

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth Settings** menu, by selecting **My device visibility**, then **Visible**.
- 2 Select Search new device from the Bluetooth menu.
- 3 Your LG-A258 will search for devices. When the search is completed **Add** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, then handset create passcode by default everytime you connect.
- 5 Your phone will then connect to the other device.
- 6 Your passcode protected Bluetooth connection is now ready.

TIP!

- 1** When you use a Bluetooth headset, A2DP and AVRCP profiles are not supported while you play video. It means you will not listen video sound if you use Bluetooth headset.
- 2** Bluetooth file transferring function will be blocked under some applications running. (Voice call, Camera/Video camera, MediaPlayer, UMS/PCSync)

Changing your phone settings

(Menu > Settings > Phone)

Enjoy the freedom of adapting how your LG-A258 works for your own style.

My navi key - You can change the shortcuts of 4 navigation keys.

Language - You can change the language for the display texts in your phone. This change will also affect the language input mode.

Battery status - Choose to switch the power save settings **Auto**, **Always on** or **Off**. If you set **Always on**, you can save the battery power.

Handset information - View the technical information for your LG-A258.

Changing your security settings

(Menu > Settings > Security)

Change your security settings to keep your LG-A258 and the important information safe.

- **PIN code request** - Choose a PIN code to be requested when you turn your phone on.
- **Handset lock** - Choose to lock your handset.

- **Application lock** - Choose the application menu to lock from the list.
- **Lock if SIM is changed** - If you activate this option, your phone will request a security code when you change your SIM card.
- **Change codes** - Change your PIN code, PIN2 code or **Security code**.

SOS mode

In an emergency situation, press and hold '9' to send SOS message when SOS mode is On. This will send to the assigned receivers. If they call you back, your phone will be automatically accepted. At that time, all notification sound will be muted. And other menus will be unavailable. To exit the SOS mode, press the End key in home screen.

Viewing memory status (Menu > Settings > Memory info.)

You can use the memory manager to determine how each memory is used and see how much space is available: common, reserved, SIM and external memory and also set the primary storage when the memory card is inserted.

Resetting your phone (Menu > Settings > Restore factory settings)

Use **Restore factory settings** to reset all the settings to their factory definitions. You need the security code to activate this function. The default security code is set to "0000".

PC Suite

You can synchronise your phone with your PC to make sure all your important details and dates match, but also to

backup your files to put your mind at ease.

Installing LG PC Suite on your PC

Go to <http://www.lg.com> and select your region, country & language to download LG PC Suite. When you complete the download, unpack the file and install the PC Suite. Follow the instructions on screen to complete the LG PC Suite Installer wizard. Once installation is complete, the LG PC Suite icon will appear on your desktop.

Viewing your phone files on your PC

- 1** Connect the USB cable to your phone and your PC.
- 2** Select the PC suite mode from the popup menu in your phone. And run PC Suite Program in your PC.
- 3** After searching the phone it will be connected automatically.

TIP! Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

Software Upgrade

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country and language.

This feature allows you to update the firmware of your phone to the newer version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each

step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage your mobile phone.

Guidelines for Safe and Efficient Use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-A258 has been designed to comply with applicable safety requirements for exposure to radio waves.

These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone

transmitting at its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.574 W/kg (10 g) and when worn on the body is 0.823 W/kg(10 g).
- The SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may void any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Repairs under warranty, at LG's option, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock which could cause injury or damage your phone
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).

Guidelines for Safe and Efficient Use (Continued)

- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronic devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Your mobile phone may cause interference with some hearing aids.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit.
- Pull off the road and park before making or answering a call if driving conditions allow you to do so.

- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- If your vehicle is equipped with an airbag, ensure it is not obstructed by your mobile device or accessories. It may fail or cause a serious injury if obstructed when deployed.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly important when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. Therefore we recommend not to turn the phone on or off while holding the handset close to your ear. We also recommend

that music and call volumes are set to a reasonable level.

NOTE: Excessive sound pressure from earphones can cause hearing loss.

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives substantial impact. If the glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Guidelines for Safe and Efficient Use (Continued)

Potentially explosive atmospheres

- Do not use the phone at a petrol station.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls.

Use your mobile phone to call emergency services for yourself or others in the case of fire, traffic accident or medical emergencies;

- Australia Dial (0-0-0)
- New Zealand Dial (1-1-1)
- International Dial (1-1-2)
- other local emergency number.

Remember, it is a free call when dialling emergency services from your mobile phone in Australia.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike older batteries, there is no memory effect that could

compromise the battery's performance.

- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery.
- Keep the metal contacts of the battery clean.
- Replace the battery when it no longer provides acceptable performance.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- Replacing with an incorrect battery increases the chance of explosion.
- Dispose of used batteries in accordance with your local council regulations. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to prevent unnecessary power consumption of the charger.
- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Driver Safety Tips

Your mobile telephone gives you the powerful ability to communicate almost anywhere, anytime. But an important responsibility accompanies the benefits of mobile phones, one that every user must uphold.

Guidelines for Safe and Efficient Use (Continued)

When driving a car, driving is your first responsibility. When using your mobile phone behind the wheel of a car, practice good common sense and remember the following tips:

- Use a hands free device to add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Typing up a “to do” list or flipping through your address book takes attention away from your primary responsibility of driving safely.
- Place calls when you are not moving or before pulling into traffic. Try to plan calls when you will not be driving.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
- Use your mobile phone to call emergency services for yourself or others in the case of fire, traffic accident or medical emergencies;
 - Australia Dial (0-0-0)
 - New Zealand Dial (1-1-1)
 - International Dial (1-1-2)
 - other local emergency number.Remember, it is a free call when dialling emergency services from your mobile phone in Australia.
- Use your mobile phone to help others in emergencies.

 
If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.

- If you see a broken down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance, local traffic authority or police station.

Accessories

These accessories are available for use with the LG-A258.
(Items described below may be optional.)


Charger

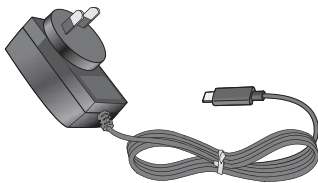

Battery



 Stereo headset

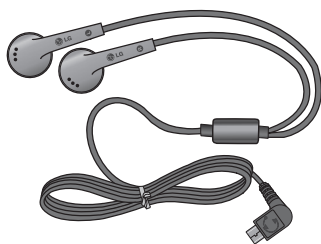

User Guide

Learn more about your
LG-A258.



NOTE:

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Technical Data

Ambient Temperatures

Max.: +55°C (discharging)

+45°C (charging)

Min.: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad band Terminal Equipment

Model Name

LG-A250, LG-A258

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 V1.8.1 / EN 301 489-07 V1.3.1 / EN 301 489-17 V2.1.1

EN 300 328 V1.7.1

EN 60950-1:2006+A11:2009

EN 50360:2001/AC:2006 / EN 62209-1:2006 / EN 62209-2:2010

EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom

Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards, regulation and directives

Name

Doo Haeng Lee / Director

Issued Date

6.May 2011

LG Electronics Inc. – EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands


Signature of representative

