



User Guide



at&t

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider. AT&T marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies. © 2009 AT&T Intellectual Property. All rights reserved.

Actual color of the phone may vary.

Your phone is designed to make it easy for you to access a wide variety of content. For your protection, we want you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through AT&T, we offer privacy controls that let you decide how an application may use the location of your phone and other phones on your account. However, the AT&T privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected. In addition, your AT&T phone may be used to access the Internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS :

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

1. The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
2. The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
3. This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
4. The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
5. Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
6. The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER :

1. Defects or damages resulting from use of the product in other than its normal and customary manner.
2. Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
3. Breakage or damage to antennas unless caused directly by defects in material or workmanship.
4. That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
5. Products which have had the serial number removed or made illegible.
6. This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
7. Damage resulting from use of non-LG approved accessories.
8. All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.

9. Products operated outside published maximum ratings.
10. Products used or obtained in a rental program..
11. Consumables (such as fuses).

3. WHAT LG WILL DO :

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent reconditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS :

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG INFOCOMM INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE :

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit www.lgeservice.com.

Correspondence may also be mailed to:

LG Electronics MobileComm U.S.A., Inc.

201 James Record Road Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.

Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.



LG Shine II™

User Guide

Table of Contents

Your Phone	6	Video Share Calling	23
Phone Components	6	Making and Answering a Video Share Call. . .	23
Rear view	8	Making a Video Share Call from the Camera, Camcorder or Video Gallery	27
Getting Started	10	Conference Calls	28
Installing the SIM card and battery	10	Making a Second Call	28
Installing a memory card	13	Setting Up a Conference Call	28
General Functions	15	Place the Conference Call on Hold	29
Making a Call	15	Adding Calls to the Conference Call	29
Adjusting the Volume	16	Private Call in a Conference Call	29
Answering a Call	16	Ending a Conference Call	29
Entering Text	17	Menu Tree	30
In-Call Menu	22	AT&T GPS	34
During a Call	22	Messaging	36
Making a Second Call	22	Create Message	36
Swapping Between Two Calls	22	Inbox	39
Answering an Incoming Call	22	Drafts	40
Rejecting an Incoming Call	22		
Muting the Microphone	23		
Using the Speakerphone	23		

Outbox	41
Voicemail	42
Message Settings	42
Message Alert	42
Save To	42
Signature	42
Text Message	42
Multimedia Message	43
Voicemail Number	44
Service Message	44
YPmobile	45
Mobile Web	46
AT&T Music	48
Music Player	48
Additional Music Services	54
IM	55
Address Book	60
Contact List	60
New Contact	60

Caller Groups	60
Speed Dial List	60
Contact Management	61
Service Dial Numbers	61
My Numbers	61
Mobile Email	62
My Stuff	63
Audio	63
Games	63
Picture	63
Video	64
Applications	64
Tools	64
Voice Command	64
Recent Calls	66
Alarm Clock	66
Calendar	67
Notepad	67
Calculator	68
World Clock	68
Tasks	68
Stop Watch	69

Tip Calculator	69
Unit Converter.....	69

Camera & Recordings 70

Take Photo.....	70
Record Video.....	71
Camera Album	72
Record Voice.....	72

Web Pages 73

RSS Reader.....	73
Bookmarks.....	73
Saved Pages	74
Recent Pages	74

Other Files..... 74

Memory Card 75

Mobile Video 76

Settings 77

Audio & Ringtones 77

Shop Tones	77
Volume	77
Ringtone	77
Message Tone.....	77
Alert Tone	78
Keypad Tone	78

Power On/Off Tones.....	78
-------------------------	----

Phone Settings..... 78

Date & Time	78
Languages.....	79
Set Hotkeys.....	79
Auto Key Lock.....	79
Set Flight Mode	79
Security.....	79
Reset Settings	80

Display..... 80

Shop Graphics.....	80
Wallpapers	80
Fonts	80
Clocks & Calendar	81
Brightness.....	81
Backlight Timer.....	81
Color Schemes	81
Menu Styles	81

Call..... 81

Call Forwarding.....	81
Send My Number	82
Auto Redial	82
Answer Mode	82
Minute Minder	82
Call Waiting	83

Call Reject.....	83
Send DTMF Tones.....	83
TTY	83
Time & Cost	83
Connection	84
Bluetooth®	84
USB Connection Mode.....	86
Internet Profiles	86
Access Points	86
Memory	86
Used Space.....	86
Set Storage Defaults	87
Application Settings.....	87
Video Share.....	87
Messaging	87
Browser.....	88
Voice Command	90
Software Update	91
Phone Information.....	92
 Q&A	 93
 Accessories	 94
 For Your Safety.....	 96

 
Safety Guidelines	101
--------------------------------	------------

Glossary	122
-----------------------	------------

Index	124
--------------------	------------

Your Phone


Phone Components

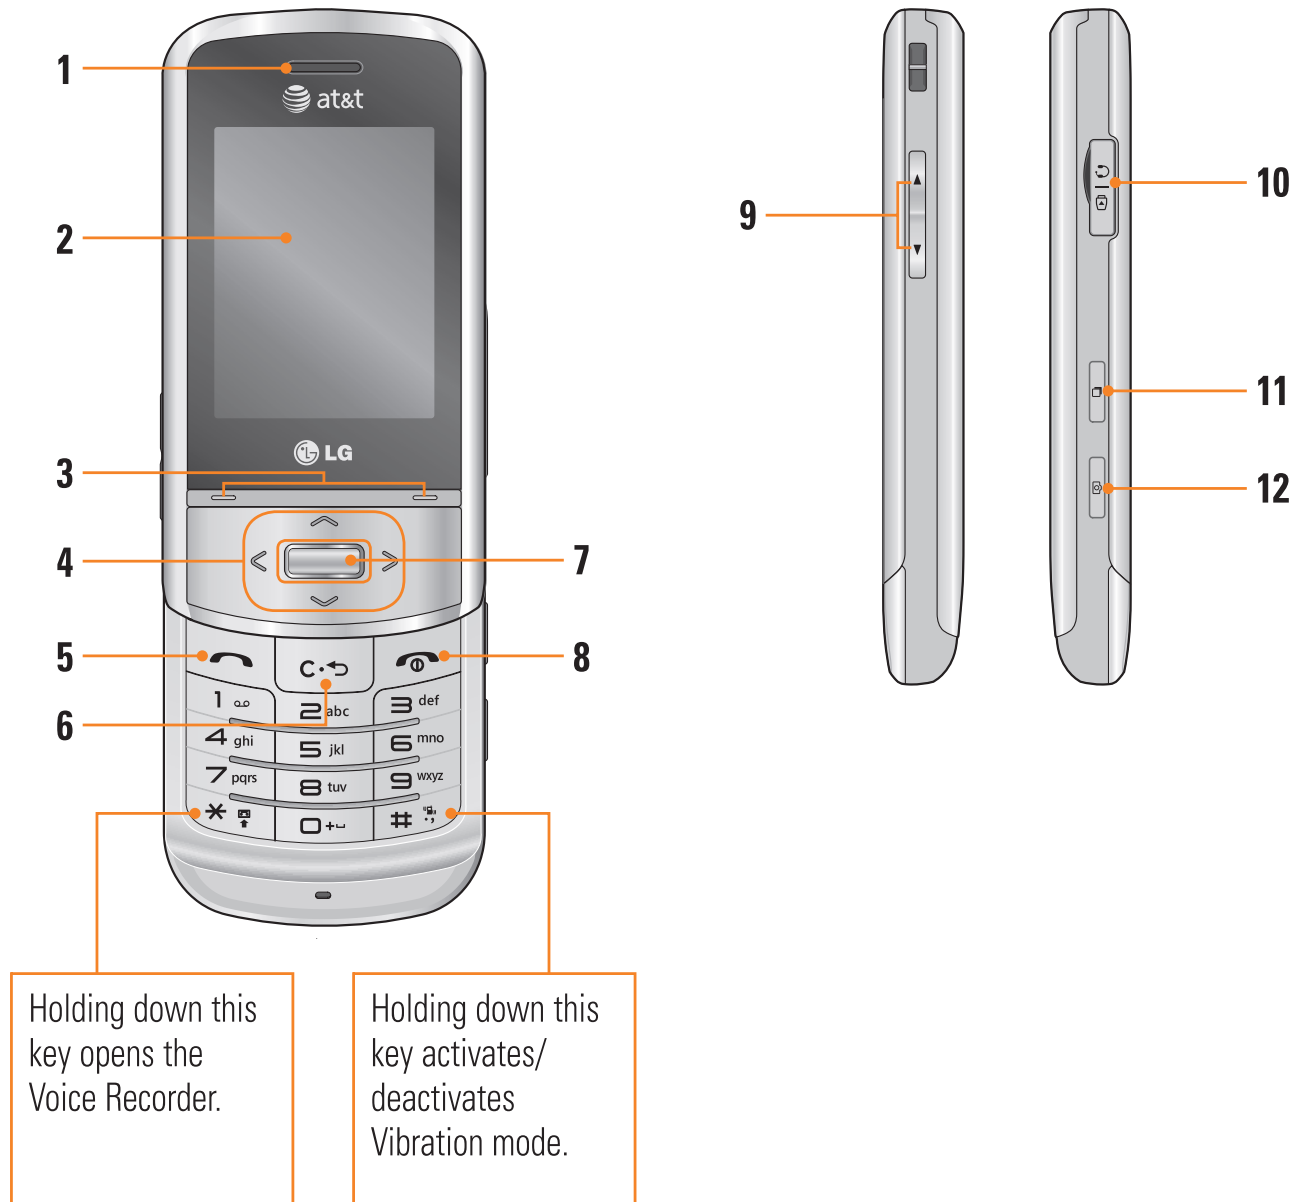

- 1. Earpiece:** Lets you hear the caller and automated prompts.
- 2. Main LCD:** Displays phone status icons, menu items, web items, web information, pictures and more in full color.
- 3. Left soft key/Right soft key:** Each of these keys perform the functions indicated by the text on the display immediately above them.
- 4. Navigation Keys**
 - In standby mode:
 - ⏏ Contact List
 - ⏏ New Message
 - ⏏ IM
 - ⏏ My Stuff
 - In a menu: Navigates between menus.
- 5. Send key:** Press this key in standby mode to quickly access the most recent incoming, outgoing and missed calls.
- 6. Clear key:** Allows you to return to the previous screen. Holding down the Clear Key will also activate the Voice Command function.
- 7. Center [OK] key**
- 8. End/Power key:** Allows you to power the phone on or off, end calls, or return to Standby Mode.
- 9. Volume keys:** These keys are used to control the volume of ringtones in standby mode and Earpiece volume during a call.
- 10. The Charger Port/USB connector**
- 11. Opens the multitasking menu**
- 12. Camera Key:** Hold down the button to activate the camcorder function.

Your Phone

 Rear view

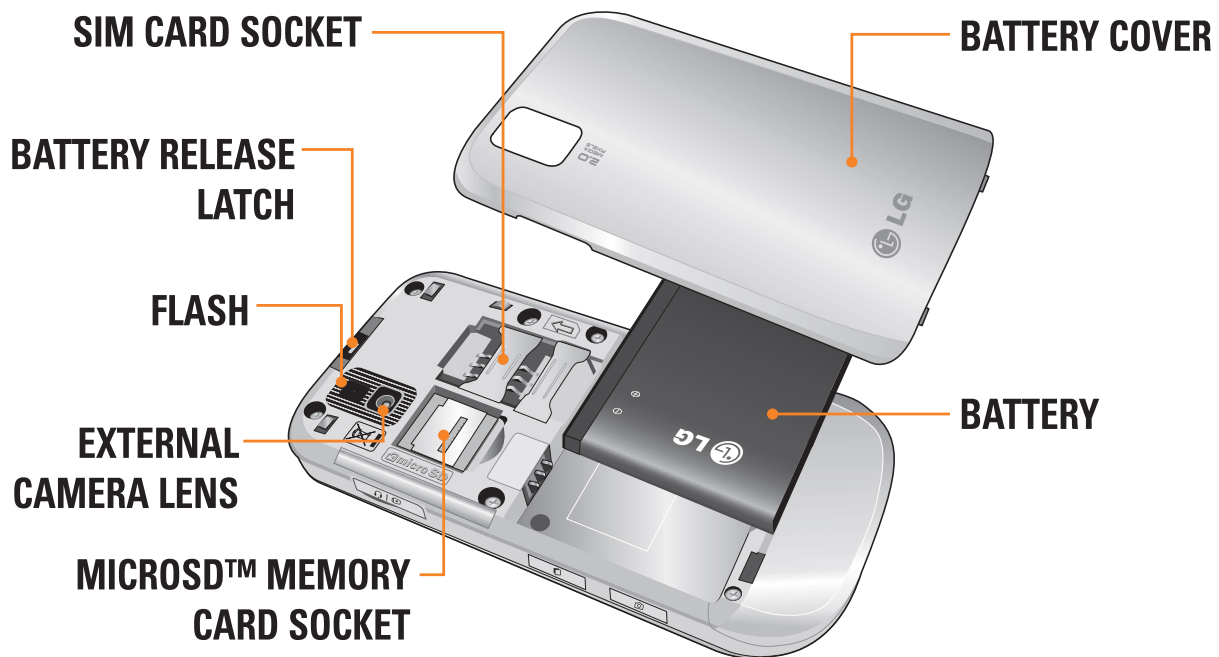

Advice to the customer

Please do not remove the battery cover during using the GPS. It may not work.



Advice to the customer

In order to improve antenna sensitivity, LG suggests that you hold the handset as shown below.



 
Please do not cover the antenna area with your hand during a call and when using a bluetooth® connection. It may degrade speech quality.

Getting Started

Installing the SIM card and battery


1. Remove the battery cover

Press and hold down the battery release button at the top of the phone, and lift off the battery cover.

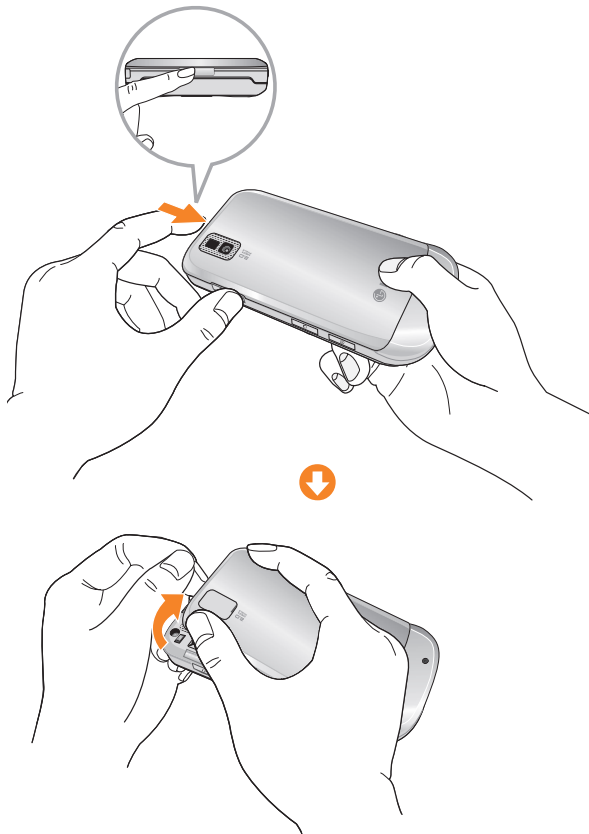

2. Remove the battery

 Hold the top edge of the battery and, using the battery cover, lift it from the battery compartment.

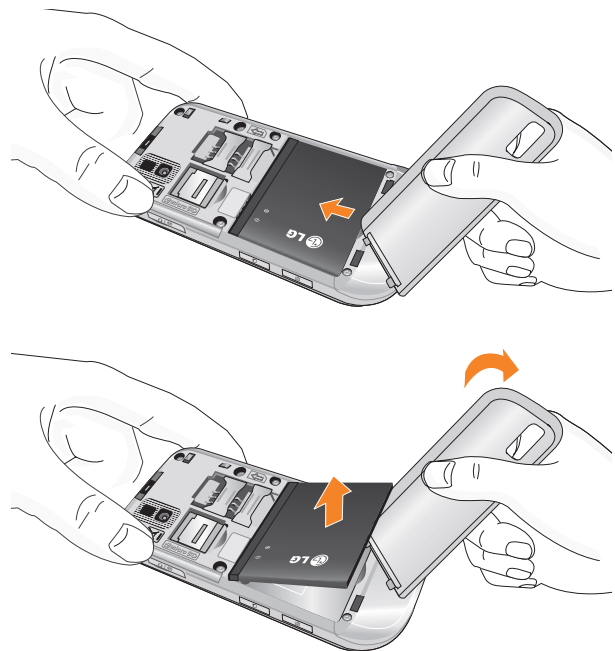

! Note

For your convenience, we recommend that you use the battery cover to remove the battery instead of your fingernail.

! Warning

Do not remove the battery when the phone is turned on, this can damage the phone.

3. Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the opposite direction.



4. Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it clips into place.



Getting Started

5. Charging your phone

Unfasten the cover of the charger socket on the side of your LG Shine II. Insert the charger connector to the phone ('B' side of the connector has to be facing up when connecting to the phone) and then plug into the wall socket. Your LG Shine II will need to be charged until a message reading "Battery full. Please unplug charger to save energy" appears on the screen.

Important!

You should insert the battery before charging.



Warning

Use of unauthorized accessories could damage your phone and void your warranty.

To use the travel charger provided with your phone.

Installing a memory card

You can expand the memory available on your phone by using a microSD™ memory card. The LG Shine II will support up to a 16 GB microSD™ memory card.

! Tip

A memory card is an optional accessory.

1. Remove the battery cover as before.
2. Unlock the microSD™ compartment by sliding it into the 'Open' position (as printed on the microSD™ compartment cover). This will allow the cover to open so that you can add a microSD™ card to your phone. Insert a microSD™ card with the gold contact area facing downwards. Close the memory card cover so that it clicks shut.
3. Replace the phone cover back on to the phone.



! Note

If your memory card has existing content it will automatically be filed in the correct folder. For example, videos will be accessible from the Videos folder.

Getting Started

On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

ICON/ INDICATOR	DESCRIPTION
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Low Battery
	New text message
	New email
	An alarm is set
	Ring profile in use
	Silent All profile in use
	EDGE available
	Bluetooth® is active
	3G available

ICON/ INDICATOR	DESCRIPTION
	The browser is active
	Vibrating Mode On
	Speakerphone
	Call in Progress
	Voicemail
	Battery Full
	Battery Charging
	Flight Mode On

General Functions

Making a Call

1. Make sure your phone is powered on.
2. Enter a phone number including the area code. To edit a number on the display screen, simply press the  key to erase one digit at a time.
 - ▶ Press and hold the  key to erase the entire number.
3. Press the  [SEND] key to call the number.
4. When finished, press the  [END] key.

Making a Call with the Send Key

1. Press the  [SEND] key, and the most recent missed, dialed and received call histories will be displayed.
2. Select the desired number by using the navigation touch pad.
3. Press the  [SEND] key.

Making International Calls

1. Press and hold the  key and the international access character '+' will appear.
2. Enter the country code, area code and the phone number.
3. Press the  [SEND] key.

General Functions

Ending a Call

To finish a call, press the  [END] key.

Making a Call from the Contacts

You can store frequently called names and phone numbers in the SIM card as well as in the phone memory known as the Contacts.

You can dial a number by simply selecting a name in the contacts and pressing the  [SEND] key.

1. Press the  [Down] key to access the Contact List.
2. Highlight the Contact and press the  [SEND] key.

Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the side volume keys of the phone.

In idle mode, you can adjust the ring volume using the side volume keys.

Answering a Call

When you receive a call, the phone displays an icon on the screen and rings and/or vibrates. If the caller can be identified, the caller's phone number (or name if stored in your Address Book) is displayed.

1. Press the  [SEND] key or the left soft key to answer an incoming call.
If the Answer Mode has been set as **Any Key** (Menu > # > 4 > 4), any key press will answer a call, except for the  [END] key or the right soft key.

2. End the call by pressing the  [END] key.

Note

You can answer a call while using other menu features.

Vibrating Mode (Quick)

Vibrating Mode can be activated by pressing and holding down the  [Pound] key.

Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator on your phone's display screen.

Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Address Book, writing a message or scheduling events in the calendar all require text to be entered.

Changing the Text Input Mode

Change the text input mode by holding down  when in a text entry field.

You can check the current text input mode in the upper right corner of the screen.

The following text input modes are available on the phone.

T9 Mode

This mode allows you to enter words with only one keystroke per letter.

Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

General Functions

Note

You can select a different T9 language from the Options menu (Right soft key Options > Text Entry Settings > Text Entry Language).

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed in the upper right corner.

Symbol Mode

The Symbol Mode enables you to enter various symbols or special characters. To enter a symbol, press the  [Pound] key. Use the navigation touch pad to select the desired symbol and press the [OK] key.

Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, begin entering a word by pressing keys  to . Press one key per letter.
 - ▶ The word changes as letters are typed - ignore what is displayed on the screen until the word is typed completely.
 - ▶ If the word is still incorrect after typing completely, press the  key or the right soft key [Next] once, or more if needed, to cycle through the other word options.
 - ▶ If the desired word is missing from the word choices list, add it by using the ABC mode.
2. Enter the whole word before editing or deleting any keystrokes.
3. Complete each word with a space by pressing the  key or the right navigation key.

To delete letters, press . Press and hold down  to erase all of the entered text.

Using the ABC Mode

Use the keypad keys to enter your text.

1. Press the key labeled with the required letter:
 - ▶ Once for the first letter
 - ▶ Twice for the second letter
 - ▶ And so on
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to erase all of the entered text.

Note

Refer to the table below for more information on the characters available using the keys.

General Functions

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	. , ' @ ? ! - : / 1	. , ' @ ? ! - : / 1
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	Space Key, 0 (Long press)	Space Key, 0 (Long press)

Using the 123 (Numbers) Mode

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example) more quickly. Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

T9 dictionary

The T9 dictionary is a feature that allows the user to add any unique or personal words to the T9 standard language database. The T9 dictionary function can be found in the Options menu (Options > Text Entry Settings > T9 Dictionary). Within the T9 dictionary function, the user can add, modify, delete or reset personal words.

Using the Korean Mode

Allows you to type in Korean when you set the language to Korean.

Key	Characters in the Order Display
ㄱ	1 ao
ㅋ	1 ao ▶ * ㅏ
ㆁ	1 ao ▶ # ㅑ
ㄴ	2 abc
ㄷ	2 abc ▶ * ㅓ
ㄹ	2 abc ▶ * ㅕ ▶ * ㅗ
ㄷ	2 abc ▶ * ㅓ ▶ # ㅑ
ㄹ	4 ghi
ㅇ	5 jkl
ㅈ	5 jkl ▶ * ㅓ
ㅊ	5 jkl ▶ * ㅓ ▶ * ㅗ
ㅊ	5 jkl ▶ * ㅓ ▶ # ㅑ
ㅅ	7 pqrs
ㅆ	7 pqrs ▶ * ㅓ
ㅈ	7 pqrs ▶ * ㅓ ▶ * ㅗ
ㅊ	7 pqrs ▶ # ㅑ
ㅈ	7 pqrs ▶ * ㅓ ▶ # ㅑ
ㅇ	8 tuv
ㅎ	8 tuv ▶ * ㅓ

Key	Characters in the Order Display
ㅌ	3 def
ㅍ	3 def ▶ * ㅓ
ㅍ	3 def ▶ 3 def
ㅍ	3 def ▶ 3 def ▶ * ㅓ
ㅍ	6 mno
ㅍ	6 mno ▶ * ㅓ
ㅍ	6 mno ▶ 6 mno
ㅍ	6 mno ▶ 6 mno ▶ * ㅓ
ㅡ	0 +~
ㅣ	9 wxyz
ㅍ	3 def ▶ 9 wxyz
ㅍ	3 def ▶ * ㅓ ▶ 9 wxyz
ㅍ	3 def ▶ 3 def ▶ 9 wxyz
ㅍ	3 def ▶ 3 def ▶ * ㅓ ▶ 9 wxyz
ㅍ	6 mno ▶ 3 def ▶ 9 wxyz
ㅍ	6 mno ▶ 9 wxyz
ㅍ	6 mno ▶ 6 mno ▶ 3 def ▶ 9 wxyz
ㅍ	6 mno ▶ 6 mno ▶ 9 wxyz
ㅍ	0 +~ ▶ 9 wxyz

In-Call Menu

During a Call

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the right soft key **[Options]**.

Making a Second Call

You can select a number you wish to dial from the Address Book, to make a second call. Press the right soft key  **[Options]**, then select **Address Book**. Highlight the contact, then press the  **[SEND]** key to make a second call.

Swapping Between Two Calls

When two calls are active. You can switch between the calls by using one of the following three methods:

- ▶ Press the  **[SEND]** key.
- ▶ Press the right soft key and then select "Swap Calls".
- ▶ Press Up/Down on the navigation touchpad.

Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the  **[SEND]** key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting. This feature, known as **Call Waiting**, is only available if your network supports it.

If Call Waiting is turned on, you can put the first call on hold and answer the second call by pressing the  **[SEND]** key.

Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the  **[END]** key.

Muting the Microphone

You can mute the microphone during a call by pressing the left soft key [**Mute**]. The handset can be unmuted by pressing the left soft key [**Unmute**]. When the handset is muted, the caller cannot hear you, but you can still hear the caller.

Using the Speakerphone

You can use the integrated Speakerphone during a call by pressing the  [OK] key. The loudspeaker is automatically deactivated when you end the call.

Warning

Due to increased volume levels, do not place the phone near your ear while the speakerphone is enabled.

Video Share Calling

Making and Answering a Video Share Call

You can make or answer a Video Share call with other 3G video phones. In order to start a Video Share call, both sides must have a 3G Video Share capable phone and both must be in a 3G coverage area.

Note

Before you start a Video Share Call you must check the following:

- Phone must be in an AT&T 3G service area.

In-Call Menu

To initiate Video Share follow these steps:

1. Make a phone call by dialing a number, or selecting a number either from the Contact List or Recent Call List. From the Recent Call or Contact List, you can also directly make a Video Share call by selecting [Options] > [Video Share] and selecting Video Type (Live or Recorded). In this case skip steps 2-3.
2. A few seconds after the connection is established, a "Video Share Ready" prompt will appear on the screen once the other party is ready to use the Video Share service. If Audio alert in Video Share setting (See Application Setting) is set to 'ON', the auditory alert will sound along with prompt.
3. To Share Video with another party, you can press the left soft key [Video] or Camera key and select Video type (Live or Recorded).

! Note

The Speakerphone will be automatically activated when a Video Share session begins, unless a hands-free device (Bluetooth® or stereo headset) is connected.

▶ **Live:** You can share a real-time video stream with the other party while having a conversation.

▶ **Recorded:** You can share a pre-recorded video clip with the other party while having a conversation.
(Note that H.263 video format in 176x144 size is supported)

4. If the other party accepts the Video Share invitation, the Video Share session will begin. (After accepting, it may take several seconds before actual Video Share starts) During the Video Share, you can do the following via the [Options].

During the Video Share session, you can navigate the [Options] menu items using the right soft key.

- ▶ **Spk. On:** You can turn the integrated Speakerphone on while you are using Bluetooth.
- ▶ **Mute/Unmute:** You can mute/unmute the microphone by selecting mute/unmute.
- ▶ **Stop Video Share:** You can stop video sharing and proceed with the voice call only by selecting 'Stop Video Share'.
- ▶ **Brightness:** You can adjust the brightness of the screen by selecting Brightness.
- ▶ **Zoom:** You can zoom in/out the video by selecting Zoom.
- ▶ **Audio to Bluetooth®/Audio to Phone:** When 'Audio to Bluetooth®' is selected, you can have a conversation using Bluetooth®. When 'Audio to Phone' is selected, you can have a conversation using either speakerphone or headset.
- ▶ **Record Video Share/Stop Recording:** You can start recording the live video by selecting 'Record Video Share'. Once you are recording the video, you can stop recording by selecting 'Stop Recording'.
- ▶ **End Call:** You can end the phone call by selecting 'End Call'. (Note: Video Share will stop as well)
- ▶ **Hold Call:** You can place the phone call on hold by selecting 'Hold Call'. (Note: Video Share will stop when you select 'Hold Call')

In-Call Menu

During the Video Share session, you can turn the speakerphone on/off using the 'Spk. off'/'Spk. on' key (OK key).

You can record a current video clip via Options menu, and the recorded video will be saved in [My stuff] – [Video].

5.1. You can stop a Video Share call and proceed to a voice call by

1. Press [Stop] Key (Left soft key)
2. Selecting [Option] > [Stop Video share]

5.2. You can end a voice call along with the Video Share call by

1. Press [End] Key
2. Selecting [Option] > [End Call]

Note

1. A Video Share Call will be unavailable or terminated in the following cases:

- When trying to make a conference call/ second call during a Video Share Call.
- When the voice call is placed on hold.
- When the voice call is disconnected.
- When either party moves out of an AT&T 3G service area.
- When the network connection is poor.

2. If you receive a Video Share request during a call, select the left soft key [Accept] to start the Video Share Call. If you don't want to accept the request, press the right soft key [Decline] to decline the request. (Note that after accepting the call, it may take several seconds before the Video Share session starts.)

Making a Video Share Call from the Camera, Camcorder or Video Gallery

When you are in the Camera or Video Recording mode, you can easily make a Video Share Call to a person in your Contact List.

1. Start Video Share call as follows:

- ▶ In Take a Photo mode, switch to Record Video mode.
- ▶ In 'Record Video' mode, select the first icon from the bottom [Video Share].
- ▶ During an active phone call with someone that has a Video Share capable phone, a prompt will automatically ask you if you want to initiate a Video Share call. Selecting 'Yes' will initiate the Video Share function.

! Note

This menu item is active only in 3G coverage.

! Note

If the other party is not ready for Video Share, the call will proceed to an ordinary voice call.

Saving your Video Share

The sender can record video during the Video Share session by

- 1.** Selecting [Option] > [Record Video Share] during a live Video Share call.
- 2.** Setting Auto Record to 'ON' (See Application Settings).

Sender can save the recorded video by

- 1.** Selecting [Option] > [Stop Recording] during a live Video Share call.
- 2.** Ending Video Share call.

Recorded video will be saved in [My Stuff] > [Video] folder in the phone.

In-Call Menu

Conference Calls

The conference service provides you with the ability to have a simultaneous conversation with more than one caller. The conference call feature can be used only if your network service provider supports this feature.

A conference call can only be set up when you have one call active and one call on hold, meaning both calls must have been answered. Once a conference call is set up, calls may be added, disconnected (**Exclude Call** is an option that allows you to select a call to disconnect from the conference call), or separated (the **Private Call** option allows you to separate a call from the conference call, but that is still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu.

The maximum number of callers in a conference call is five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

Making a Second Call

You can make a second call while currently on a call simply by entering the second number and pressing the  [SEND] key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the  [SEND] key.

Setting Up a Conference Call

To set up a conference call, place one call on hold, then conference in the second active call by pressing the right soft key [Options], selecting **Conference Call** and then selecting **Join Calls**.

Place the Conference Call on Hold

To place a conference call on hold, press the  [SEND] key.

Adding Calls to the Conference Call

To add a call to an existing conference call, press the right soft key, and then select the **Join Calls** sub menu from the **Conference Call** option.

Private Call in a Conference Call

To have a private call with one of the callers in the conference call, press the right soft key and select **Private Call** from the **Conference Call** option. When the numbers of the callers are displayed, select the one with which you wish to speak in private.

Ending a Conference Call

An active conference call can be disconnected by pressing the  [END] key.

Menu Tree

- 1. AT&T GPS (see page 34)**
- 2. Messaging (see page 36)**
 - 2.1 Create Message**
 - 2.2 Inbox**
 - 2.3 Drafts**
 - 2.4 Outbox**
 - 2.5 Voicemail**
 - 2.6 Message Settings**
- 3. YPmobile (see page 45)**
- 4. Mobile Web (see page 46)**
- 5. AppCenter**
- 6. AT&T Music (see page 48)**
 - 6.1 Music Player**
 - 6.2 Shop Music**
 - 6.3 MusicID**
 - 6.4 XM Radio**
 - 6.5 Music Videos**
 - 6.6 Make UR Tones**
 - 6.7 Community**
 - 6.8 Music Apps**
- 7. IM (see page 55)**
- 8. Address Book (see page 60)**
 - 8.1 Contact List**
 - 8.2 New Contact**
 - 8.3 Caller Groups**
 - 8.4 Speed Dial Lists**
 - 8.5 Contact Management**
 - 8.6 Service Dial Numbers**
 - 8.7 My Numbers**



9. Mobile Email (see page 62)

***. My Stuff (see page 63)**

- *.1 Audio**
- *.2 Games**
- *.3 Picture**
- *.4 Video**
- *.5 Applications**
- *.6 Tools**
- *.7 Camera & Recordings**
- *.8 Web Pages**
- *.9 Other Files**
- *.0 Memory Card**

0. Mobile Video (see page 76)

#. Settings (see page 77)

#.1 Audio & Ringtones

- #.1.1 Shop Tones**
- #.1.2 Volume**
- #.1.3 Ringtone**
- #.1.4 Message Tone**
- #.1.5 Alert Tone**
- #.1.6 Keypad Tone**
- #.1.7 Power On/Off Tones**



Menu Tree

#. Settings (continued)

#.2 Phone Settings

- #.2.1 Date & Time
- #.2.2 Languages
- #.2.3 Set Hotkeys
- #.2.4 Auto Key Lock
- #.2.5 Set Flight Mode
- #.2.6 Security
- #.2.7 Reset Settings

#.3 Display

- #.3.1 Shop Graphics
- #.3.2 Wallpapers
- #.3.3 Fonts
- #.3.4 Clocks & Calendar
- #.3.5 Brightness
- #.3.6 Backlight Timer
- #.3.7 Color Schemes
- #.3.8 Menu Styles

#. Settings (continued)

#.4 Call

- #.4.1 Call Forwarding
- #.4.2 Send My Number
- #.4.3 Auto Redial
- #.4.4 Answer Mode
- #.4.5 Minute Minder
- #.4.6 Call Waiting
- #.4.7 Call Reject
- #.4.8 Send DTMF Tones
- #.4.9 TTY
- #.4.0 Time & Cost

#.5 Connection

- #.5.1 Bluetooth®
- #.5.2 USB Connection Mode
- #.5.3 Internet Profiles
- #.5.4 Access Points



#. Settings (continued)

#.6 Memory

- #.6.1 Used Space
- #.6.2 Set Storage Defaults

#.7 Application Settings

- #.7.1 Video Share
- #.7.2 Messaging
- #.7.3 Browser
- #.7.4 Voice Command

#.8 Software Update

- #.8.1 Check for Update

#.9 Phone Information

AT&T GPS

The AT&T Navigator application on your device uses GPS position determination technology and access to your carrier's data network to provide you with driving directions and a host of other services, including:

- ▶ GPS navigation that gives you turn-by-turn directions to any destination address in the continental United States. If you miss a turn or get off-track, AT&T Navigator will calculate a new route for you. You can enter a destination address by using AT&T Navigator's automatic voice recognition system or by typing on the device's keypad.
- ▶ Audio and visual traffic alerts while driving or viewing maps, as well as traffic re-routing capabilities to minimize delays on your trip.
- ▶ A Search feature that allows you to find businesses or points of interest near your current location, an airport, a waypoint, or any other entered address. You can read ratings and reviews for businesses and easily call the business that you have found to check on the availability of an item or to make a reservation. You can navigate to the business location now or save the address for later use.
- ▶ Maps of the area around your current location, around a marked waypoint, or around an address that you had previously entered. You can pan the map (adjust left, right, up, or down) and zoom in or out. You can also mark a point under the cursor as a waypoint.
- ▶ A compass-like indicator presenting your direction of travel, location, and speed.

- ▶ The ability to personalize your application preferences by selecting U.S. customary or metric distance units, the language for audible guidance, and so on.

You can also use many of AT&T Navigator's features on the TeleNav website, such as getting driving directions (Route Planning) and using the Search function to find businesses, churches, schools, and government offices. You can also use the TeleNav website to add an address to your My Favorites list, manage your My Favorites and Recent Places lists, and shop at the TeleNav Store.

Note

For best GPS performance

- ▶ In order to improve GPS antenna sensitivity, do not cover the GPS antenna area of the device.
- ▶ Your GPS antenna sensitivity might be weakened if you are in a high rise building, underground, or location surrounded by metal or concrete.
- ▶ Use near the window indoors for better GPS antenna sensitivity.
- ▶ For battery durability, please use a vehicle power adapter in your car.
- ▶ It could take 2~3 minutes to get your GPS position depending on the condition of the environment or network.

Messaging

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), voice mail as well as the network's service messages.

Create Message Menu 2.1

In the Standby screen, select **Menu > Messaging > Create Message**. Or, you can simply press the **Up** navigation key from Standby mode to create a new message.

Note

If you insert a Picture, Audio or Video file while writing a multimedia message, the file loading time will take about 5 seconds. You will not be able to activate any key during the file loading time. When the file loading is complete, you will be able to write a multimedia message.

Editing a message

The following options are available when Editing a Message. (Press the left soft key [**Insert**])

- ▶ **Symbol:** You can insert various symbols into your message. Pressing the left and right soft keys scrolls through the pages. Using the navigation key highlights symbols.
- ▶ **Picture:** You can select a picture to insert by using the navigation keys. You can preview the selected picture by pressing the left soft key [**View**].
- ▶ **Audio:** You can insert an audio file from your saved audio files.
- ▶ **Video:** You can insert a video clip.
- ▶ **Take New Picture:** You can insert a new image taken from the camera by pressing [**Capture**].

For Camera options, see page 70.

- ▶ **Record New Audio:** You can record a new audio clip by pressing the center key [**Record**]. Press the right soft key [**Options**] before you begin recording to set the options (below). After recording a new audio clip, you can delete it by pressing the right key [**Delete**].
 - **Quality:** Set the audio's quality to Fine, Normal or Economy.
 - **Select Storage Defaults:** You can assign the default storage to **Phone Memory** or **Memory Card**.
 - **Cancel:** Cancels the Audio recording and returns to the New Message screen. When finished recording, press [**Insert**].
- ▶ **Record New Video:** You can record a new video by pressing the center key [**Record**]. When finished recording, press the center key [**Insert**].
- ▶ **Template**
 - **Text:** You can easily insert frequently used sentences in the text message.
 - **Multimedia:** Preset multimedia templates can be created (Menu > Messaging > Message Settings > Multimedia Settings > Multimedia Templates > New).
 - **Signature:** Insert your own created signature. For further details, see page 42.
- ▶ **More:** Allows you to insert Subject, vCard, vCalendar, vNote, vTask or Contact (vCard).
- ❗ **Note**

vCard, vCalendar, vNote and vTask are created by the Address Book, Calendar, Notepad and Tasks functions, respectively. Go to the Tools and Address Book sections in this Manual for more detailed information.

Messaging

Using Options

While entering text, press the right soft key [**Options**].

- **Text Entry Mode:** Sets the text input mode. For more details, refer to Entering Text (page 17).
- **Text Entry Settings: Text Entry Language** allows you to set the text entry language to English, Spanish, French or Korean. You can set to use **T9 Word Candidate List**. Also, **T9 Next Word Prediction** is available when it is set to On. Use **T9 Dictionary** to add words or delete/reset/modify words.
- **Delivery Options**
 - **Delivery Receipt:** If this is set to **On** in this menu, you can receive notification that your message was sent successfully. Delivery Receipt may not be compatible with all carriers.
 - **Request Read Receipt:** You can set On or Off.

- **Save to Drafts:** Saves the message to Drafts.
- **Cancel Message:** Allows you to exit the text input mode without saving your message.

Sending a Message

After completing a message, using **Insert** and/or **Options**, press the OK key [**Send To**] to select a recipient.

Press the right soft key [Options].

- Enter the recipient(s). For more options, press the right soft key [**Options**]. In this menu you can choose an option item below.
 - **Enter Number**
 - **Enter Email:** You can enter Email address instead of phone number.
 - **Insert Symbol**

- **Caller Groups:** Shows Contacts in the saved Groups.
- **Recent Messages:** Choose a contact from recent messages.
- **Recent Calls:** Choose a contact from recent calls.
- **Delivery Options:** Options of Delivery Receipt, Request Read Receipt Center, Add Cc, and Add Bcc.
- **Edit Message:** Go back to the message editing mode.
- **Save to Draft:** Saves the selected message to Drafts.
- **Text Entry Mode**
- **Text Entry Settings:** Text Entry Language, T9 Word Candidate List, T9 Next Word Prediction and T9 Dictionary.
- **Cancel Message:** You can cancel the message.

Inbox

Menu 2.2

You will be alerted when you receive a message. New messages are stored in the Inbox. In the Inbox, you can identify each message by icons. If you are notified that you have received a multimedia message, you can download the whole multimedia message by selecting it in the Inbox menu. To reach the Inbox, from the standby screen, select **Menu > Messaging > Inbox**.

The following [**Options**] are available in the Inbox list. The options (below) vary depending on the View mode set (Conversational or Standard).

- ▶ **Call:** Allows you to call the contact.
- ▶ **Add to Address Book:** You can save the sender's phone number in the Contact List.
- ▶ **Delete:** You can delete the current message.

Messaging

- ▶ **Standard view:** Switches the Inbox view mode.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Copy to Phone/Copy to SIM:** You can copy to Phone or SIM depending on where the text message is stored.
- ▶ **Select Multiple:** You can select multiple messages.
- ▶ **Message Details:** You can view information about received messages; message Type, Subject, Sender's address, and message Time.
- ▶ **Delete All Read Messages:** You can delete all read messages.
- ▶ **Conversation view:** Switches the Inbox view mode.
- ▶ **Cancel:** Returns to the Messaging menu.

Drafts

Menu 2.3

You can view the messages saved as drafts. To see the Drafts, in the Standby screen, select **Menu > Messaging > Drafts**. The following Options are available.

- ▶ **Call:** Allows you to call the contact.
- ▶ **Select Multiple:** Allows you to delete multiple messages you select from the folder.
- ▶ **Message Details:** Allows you to view the information on the message.
- ▶ **Cancel:** Returns to the Messaging menu.

Outbox

Menu 2.4

Outbox is the storage place for recently sent messages. When you press the  [SEND] key, you can make a call to the number of the recipient number of the selected message.

If the message is not sent from the Outbox, you will receive a sound alert along with a Message Sending Failure notice on the screen. Another attempt will be made to send the failed message and after two unsuccessful attempts, the message will no longer be sent automatically. In order to send the message that has failed, you must press the left soft key [**Resend**] to resend the message.

After the maximum number of Send attempts has been reached, the [**Send**] function has failed. If you were trying to send a text message, open the message and check that the Sending options are correct.

When the message Send has failed, the following [**Options**] are available in the Outbox list.

- ▶ **Call:** Allows you to call the contact.
- ▶ **View Status:** Shows the status of each message.
- ▶ **Delete:** Deletes the selected message which has failed.
- ▶ **Edit:** Allows you to edit the selected message.
- ▶ **Select Multiple:** Allows you to select multiple messages from the list.
- ▶ **Message Details:** Allows you to view the information on the message.
- ▶ **Cancel:** Returns to the Messaging menu.

Messaging

Voicemail

Menu 2.5

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).

Another shortcut is available. To quickly check your voicemail when in Standby mode, press and hold the  key.

! Note

Please check with your network service provider for details of their service in order to configure the handset accordingly.

Message Settings

Menu 2.6

To access and configure your Message Settings, go to **Menu > Messaging > Message Settings**.

Message Alert (Menu 2.6.1)

Allows you to set the Sounds and Alert Type.

Save To (Menu 2.6.2)

Allows you to choose whether to save to the SIM Card or the Phone.

Signature (Menu 2.6.3)

This feature allows you to create your Text signature. You can use symbols, templates and contacts as part of the signature.

Text Message (Menu 2.6.4)

Allows you to set preferences for when you create a new outgoing message.

The following [**Options**] are available.

- ▶ **Text Templates:** Predefined messages that can quickly be sent. To send it, or access the other available options (below), press the right soft key [**Options**].
 - **Send:** Allows you to send the selected template via Message.
 - **Delete:** Allows you to delete the selected template message.
 - **Edit:** Allows you to edit the selected template message.
 - **Delete All:** Deletes all messages in the folder.
 - **Cancel:** Returns to the previous menu.
- ▶ **Message Center Number:** If you want to send a text message, you can get the address of the SMS center by using this menu.
- ▶ **E-mail Gateway:** You can send the text message to an Email Address via this gateway.

- ▶ **Message Subject:** You can enter the SMS Subject when this menu is selected.
- ▶ **Insert Signature:** You can insert your own created signature.

Multimedia Message (Menu 2.6.5)

- ▶ **Multimedia Templates:** The preset multimedia templates are available.
- ▶ **Priority:** You can choose to set the priority of the message.
- ▶ **Message Subject:** You can enter the MMS Subject when this option is selected.
- ▶ **Validity Period:** This network service allows you to decide how long your multimedia messages will be stored at the message center.
- ▶ **Send Delivery Receipt:** Allows you to send a delivery confirmation mail for a Multimedia Message.

Messaging

- ▶ **Send Read Receipt:** Allows you to send a message read confirmation mail for a Multimedia Message.
- ▶ **Download Options**
 - **Download Without Ask:** Allows Multimedia Messages to be downloaded automatically.
 - **Ask Always:** You are prompted when a Multimedia message is received.
 - **Discard:** Setting this option to On will block incoming Multimedia messages from being received.
- ▶ **Message Center:** The details for the Multimedia gateway are pre-loaded onto your handset and should not be changed.

Voicemail Number (Menu 2.6.6)

This menu allows you to set the voicemail center number if this feature is supported by AT&T. Please check with AT&T for details of their service in order to configure the handset correctly.

Service Message (Menu 2.6.7)

You can set the Service option to determine whether or not you will receive service messages.



YPmobile

Unleash the power of YELLOWPAGES.COM
local search on your mobile phone.

Find a business, get maps and directions,
and save your favorites: our mobile app gives
you what you need, whenever and wherever
you need it.

- ▶ Search for local businesses.
- ▶ View ratings and call businesses.
- ▶ Save businesses for future access.
- ▶ Get maps and view step-by-step directions.

* For more information, refer to the
www.yellowpage.com

Mobile Web

This application connects you to the Internet. By default, the account connects you to AT&T's homepage.

This menu shows how to access the Internet by launching the WAP browser.

Mobile Web is one of the services provided by AT&T and it gives you access to all the cool things you can do with your wireless phone.

Note

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Please contact your service provider to open an Internet account.

Launch the Browser

To launch the browser in standby mode, hold down the  center key. You can also, while in standby mode, press the left soft key [**Menu**] and then select Mobile Web.

Once connected, the homepage is displayed.

To exit the browser at any time, press the  [END] key.

Menus for the Browser

You can surf the Internet using either the phone keys or the Browser menu.

Using the Navigation Keys

When surfing the Internet, the navigation keys function similarly from when the phone is on Standby Mode.

Using the WAP Browser Menu

Online menu

Once you are connected to the Internet, the following menu options are available when you press the left soft key [**Options**]:

- ▶ **Back:** Moves to the previous page.
- ▶ **Forward:** Moves to the next page.
- ▶ **Refresh:** Loads the current page again.
- ▶ **Home:** Moves to the initial homepage.
- ▶ **Windows:** Allows you to open a second window/tab for the browser.
- ▶ **EnterURL:** Connects to the specific URL after editing.
- ▶ **Bookmarks:** You can add or save the current page to Bookmark or view the list saved under Bookmark.
- ▶ **Search Text:** You can search the text what you want to find.
- ▶ **Recent Pages:** You can manage the list of the Internet pages you visited.
- ▶ **Settings:** Allows you to set options such as Full Screen View, Cache, Cookie, Qpass and other Browser Settings.

AT&T Music

Music Player

Menu 6.1

- ▶ **All Songs:** You can view all the songs in your music library.
- ▶ **Playlists:** You can make your own playlists by choosing songs from the All songs menu list.
- ▶ **Artists:** Shows the list of artists of all the songs in your music library, and shows all the songs by a chosen artist.
- ▶ **Albums:** Shows the list of albums of all the songs in your music library, and shows all the songs on a chosen album.
- ▶ **Genres:** Shows the list of genres of all the songs in your music library, and shows all songs of a specific genre.
- ▶ **Shuffle Songs:** Shuffles playing order of songs in your library at random. You can listen to the songs in random order.

Tip!

The music player plays formats such as MP3, AAC, AAC+, and WMA.

! Note

Copyrights of music files may be protected by copyright and intellectual property laws. Please ensure that you adhere to the applicable Terms of Use of materials laws prior to downloading or copying files.

Playing Music

To listen to music that you have transferred to your phone, follow these quick easy steps:

Playing Music with the Slide Open

1. Press the left soft key [**Menu**] to open the Main Menu.
 2. Select **AT&T Music**.
 3. Select Music Player (1) to view your options. You can select from Now Playing, All Songs, Playlists, Artists, Albums and Genres to select your Music or you can just select Shuffle Songs to shuffle your collection.
- Press the [OK] key to **Play/Pause** a selected song. While playing, press the up or down navigation keys to change the volume, and left or right keys to go to the previous or next song.
 - While playing music, press the Left Soft Key [**Minimize**] to Minimize the music player and access other phone functions while music is playing.

Note

Files under 300kb are stored as ringtone files.

Adding Music To Your Handset

Music files can be added to your handset by using one or more of the following methods:

- Download music and ringtones over the AT&T network directly to your device via the **Shop Music** (Menu 6.2) link in the AT&T Music Folder or the **Shop Tones** (Menu 5.1) link in the AT&T MEdia Mall folder
- From your existing digital media collection on your PC via Windows Media® Player and/or Windows Explorer.
- From your PC using other music subscription services, such as Napster or eMusic.

AT&T Music

Purchasing and downloading Music directly to your Device

1. With Slide open, press Left Soft Key [Menu] to open the Main Menu.
2. Press (6) or use the Navigation Keys to select **AT&T Music**.
3. Select **Shop Music** (2).
4. Navigate the **Shop Music** page to download today's hottest music, ringtones and other personalized content directly to your phone.

! Note

Some sites are data intensive (i.e. previews via streaming) so the user should be enrolled in an unlimited data plan before using these services to avoid per-use data charges.

! Note

Additional charges may apply when downloading music, ringtones etc.

Transferring Music using your PC

Before You Get Started

To transfer music from your PC to your device, you will need the following:

- Windows Media® Player 10 (or above) or other digital music management software such as Napster or eMusic
- Music on your PC in one of these formats: MP3, .AAC, AAC+ or WMA
- A MicroSD™ card* (supports up to 16GB cards)
- USB data cable*

* MicroSD™ card and USB data cable sold separately; go to att.com/wireless for details.

! Note

This device is not compatible with iTunes and/or iTunes files.

Transferring Music from the Digital Music Service (such as Napster or eMusic)

1. Using your computer, open your preferred PC music management client.
2. Download the selected song to your library.
3. Make sure the microSD™ card is inserted properly into the handset.
4. Use the USB adapter cable to connect the handset to the PC.
5. Once the USB connection has been established, the handset displays "Connected as Music Sync Mode". The PC screen will display a pop-up message announcing the detection of the LG Shine II device. If the detection does not occur, the USB connection settings may need to be changed. For more information, go to the **Changing USB Connection Settings** section on page 53.

6. Follow the music service instructions to transfer music to your handset.

Note

If you have a USB hub, connect the handset directly to your computer rather than through the hub.

Transferring Music using Windows Media Player

1. Open Windows Media® Player on your computer (version 10.0 or higher).
2. Use the USB adapter cable to connect the handset to the PC.
3. Once the USB connection has been established, the handset displays "Connected as Music Sync Mode". The PC screen will display a pop-up message announcing the detection of the LG Shine II device.

AT&T Music

! Note

If you have a USB hub, connect the handset directly to your computer rather than through the hub. If the target computer does not detect the newly connected handset or provide an MTP Player dialog window on the PC screen, or if the detection does not occur, skip to **Changing USB Connection Settings** section on page 53.

4. From within the Windows Media® Player application, click on the Sync tab.
5. Choose the destination location for the media files. The LG Shine II Music Sync Player appears in a drop-down list on the right side of the screen.

! Note

If there are no items present in the playlist, click the Edit Playlist button and begin adding the music files from among the various media categories.

6. Click on the checkmark boxes (to the left of the song entry) to select the song you want to synchronize to your handset.

7. Click the Start Sync button at the lower right corner of the application to download the selected songs to your handset. Do not unplug the handset during this process.
8. Once synchronization is complete, it will be safe to unplug the USB connector from the handset.

Drag and Drop Music Using LG Shine II As A Mass Storage Device

1. Insert a microSD™ memory card.
2. Power on the phone.
3. Connect the device to a PC using a LG Shine II USB data cable.
4. Access My Computer on the PC.
5. The phone's memory card will be listed under "Devices with Removable Storage" in the same location as an optical drive.

! Note

The PC will automatically assign a drive letter.

6. Explore files in a new window for desired music files.
7. Drag and drop the desired music content from the PC window to the “Storage Card” window.
8. Disconnect the device from the cable.
9. Access the Music Player on the phone.

 Note

If the target computer does not detect the newly connected handset as Mass Storage, skip to the **Changing USB Connection Settings** section below.

Changing USB Connection Settings

1. When the Idle screen displays, go to the Main Menu by pressing the left soft key [**Menu**].
2. Select **Settings**.
3. Select **Connection**.
4. Use the **Up** or **Down** Navigation key to highlight and select **USB Connection Mode**.
5. Use the **Up** or **Down** Navigation key to highlight Music Sync (if using Windows Media® Player or other Digital Music Services) or Mass Storage (if you are going to drag or drop files) and press the [OK] key.
6. Reconnect the device to a PC.

Deleting Music Files

When you have transferred files with the Music Sync feature and you want to delete them from your phone, you should connect the phone to your PC and delete using the method with which you first added the music. The following are the four options available to delete Music from your Phone:

- A. Delete a file using Mass Storage, but not using Music sync function.
- B. Delete a file by directly inserting the microSD™ external memory onto the PC.
- C. Delete a file using delete function on the phone.
- D. Delete the files by using the Master Clear option on your Memory Card.

! Note

Be aware that all of the existing data will be erased on microSD™ card if you use the Master Clear option.

Access the **Master Clear** function in the Settings menu (Menu #.2.7.2.2).

Additional Music Services

Menu 6.2-6.8

There may be other AT&T music applications preloaded or available for your phone that allow you to:

- Identify the name, artist and album to a song from a song sample.
- Listen to the latest Hip Hop, R&B, Rock, Jazz, or Country streaming commercial-free radio channels, anywhere you go.
- View the latest music videos.
- View music news and information.
- Cut custom-made ringtones from the favorite parts of your favorite songs, etc.

! Note

Some sites are data intensive (i.e. previews via streaming) so the user should be enrolled in an unlimited data plan before using these services to avoid per-use data charges.

! Note

Additional charges may apply for downloading content or use of these services.

IM

The Instant Messaging feature can only be used with the support of the network operator or communities such as AIM, Windows Live and Y! Messenger. For Instant Messaging users, a valid User ID and Password will be required in order to login and exchange messages as well as checking the online status.

To access the IM feature

1. Press the left soft key [**Menu**], then select **IM**.
2. You can also access IM from Standby mode by using the IM hotkey (the right navigation key). Quickly pressing the hotkey from the standby screen will bring up the available IM clients.

The menu items below might not appear as not all IM communities support the various options. In addition, the menu strings may appear differently. This depends on the selected IM communities. The keywords such as User ID, Login and Contact will be used as general terms in IM menus according to the currently selected communities such as AIM, Windows Live and Yahoo! Messenger.

Offline Menu

Sign In

This allows users to login by filling in the User ID and Password.

! Note

Once the User ID and Password are saved, you will not be required to type them in again during the Login process. This feature is optional.

Saved Conversations

This is where a user can view saved conversations.

Offline Conversations

Settings/Preferences

- ▶ **Set Sound:** Allows you to turn **On/Off** an alert for the Contact when they have activity on their session.
- ▶ **Network:** You may check your Network Profiles or Server Address information.

IM Information

This displays the Instant Messaging Client Information such as Client Name and Version Number.

Online Menu / 1-to-1 conversation

After a successful Login, a list of contacts with Screen Names will appear on screen. Depending on the cursor location in the contacts, the following menu options will be available.

When cursor is located on the Conversations List

- ▶ **My Status**
- ▶ **Send Message to:** Allows you to send a message to someone by inputting an email address.
- ▶ **Saved Conversations:** This is where a user can view saved conversations.

▶ Settings:

- **My Status:** Allows you to set your status to Available, Busy or Invisible.
- **Set Sound:** Allows you to turn on/off an alert for the Contact when they have activity on their session.

- ▶ **Sign Out:** This begins the Logout process.

! Note

The Conversations List contains both the active contact where a conversation has taken place, as well as an unknown contact.

When cursor is located on a Conversation

- ▶ **My Status**
- ▶ **End Conversation:** This closes the selected conversation. If an unknown contact was selected, that contact is deleted.
- ▶ **Block/Unblock Contact:** This allows you to block/unblock the selected Conversations Contact.

- ▶ **Contact Info:** This allows you to view the User ID and Status Text information.
 - ▶ **Settings:**
 - **Display Name**
 - **My Status:** Allows you to set your status to Available, Busy or Invisible.
 - **Offline Contacts**
 - **Set Sound:** Allows you to turn on/off an alert for the Contact when they have activity on their session.
 - **Auto Sign In**
 - ▶ **Sign Out:** This begins the Logout process.
- ### When cursor is located on a Contact List
- ▶ **My Status**
 - ▶ **Add a Contact:** This adds a new contact to the selected contacts list; contacts are searched on the basis of Email Address, First Name or Last Name.
 - ▶ **Send Message to:** Allows you to send a message to someone by inputting an email address.
 - ▶ **Refresh Contact List:** This refreshes the current information on the contacts within the list.
 - ▶ **Block List:** Displays the list of all blocked Contacts.
 - ▶ **Saved Conversations:** This is where a user can view saved conversations.
 - ▶ **Settings:**
 - **Display Name**
 - **My Status:** Allows you to set your status to Available, Busy or Invisible.
 - **Offline Contacts**
 - **Set Sound:** Allows you to turn on/off an alert for the Contact when they have activity on their session.
 - **Auto Sign In**
 - ▶ **Sign Out:** This begins the Logout process.

When cursor is located on a Contact

▶ **My Status**

▶ **Add a Contact:** This adds a new contact to the selected contacts list; contacts are searched on the basis of Email Address, First Name or Last Name.

▶ **Delete Contact:** This deletes the selected Contact.

▶ **Move Contact:** Allows you to move a Contact to another Contact List.

▶ **Block/Unblock Contact:** This allows you to block/unblock a conversation with the selected Contact.

▶ **Contact Info:** This allows you to view information. It provides User ID, Status Text.

▶ **Settings:**

- **Display Name**

- **My Status:** Allows you to set your status to Available, Busy or Invisible.

- **Offline Contacts**

- **Set Sound:** Allows you to turn on/off an alert for the Contact when they have activity on their session.

- **Auto Sign In**

▶ **Sign Out:** This begins the Logout process.

Menu options available in the Conversation screen

▶ **Insert:** You can insert a Symbol, Template and emoticons in the conversation screen. This feature is accessed by pressing the left soft key.

▶ **Back to Contacts:** This brings the screen back to the contacts.

▶ **My Communities:** Displays the list of Email providers.

▶ **Block/Unblock Contact:** This allows you to block/unblock a conversation with the selected Contact.

▶ **Add to Contact List:** Allows you to add the person you are currently having a conversation with to a Contact List.

- ▶ **Save Conversation:** Stores the currently active conversation.
 - ▶ **End Conversation:** This ends the active conversation and clears the conversation buffer.
 - ▶ **Settings:**
 - **Display Name**
 - **My Status:** Allows you to set your status to Available, Busy or Invisible.
 - **Offline Contacts**
 - **Set Sound:** Allows you to turn on/off an alert for the Contact when they have activity on their session.
 - **Auto Sign In**
 - ▶ **Text Entry Mode:** Sets the text input mode such as abc, Abc, ABC, T9 abc, T9 Abc, T9 ABC and 123.
 - ▶ **Text Entry Mode Settings:** This selects the T9 predictive mode Language. This feature also allows you to turn T9 mode on or off, and to access the T9 Dictionary, Text Entry Language.
 - ▶ **Minimize:** Minimizes the IM window and returns to the standby screen.
 - ▶ **Sign Out:** This begins the logout process.
- ❗ **Note**
- In the conversation window, you can use the up/down navigation key for scrolling through the conversation.
 - The maximum number of characters supported by a message is 800 characters, for receiving, and 127 characters for sending.
 - The current information might not update in real time so the “Refresh List”/“Refresh Contact” option can be used for the most up to date status.

Address Book

Contact List

Menu 8.1

This menu allows you to save and manage contact address information. The Contact List's functions allow you to add a new address or search saved contact addresses by name.

New Contact

Menu 8.2

This menu allows you to add a new contact to the Contact List. You can enter contact address information including name, phone numbers, email addresses, group information items, memos, ring tones and a contact Picture ID.

Caller Groups

Menu 8.3

This menu allows you to manage group information. By default, there are 4 groups: family, friends, colleagues and school. You can also configure a ring tone for a group so that the group ring tone sounds when a call from a specific contact address within that group is received and there is no ring tone configured for the specific contact address.

Speed Dial List

Menu 8.4

This menu allows you to configure the speed dial numbers. You can select a number from 2 to 9 as a speed dial. You can configure speed dial numbers for up to 8 numbers.

Contact Management

Menu 8.5

This menu allows you to copy all of the information from your SIM card, e.g. name, handset number, etc. to your handset. If a name is duplicated during the copying operation, the information is also duplicated.

You can copy the entry from the SIM card to the phone memory. You can copy the entry from the handset memory to the SIM card (though not all the data will be copied).

You can delete all entries in the SIM card or the Handset. Press the  [END] key to return to standby mode.

Service Dial Numbers **Menu 8.6**

You can view the list of Service Dialing Numbers (SDN) assigned by your network provider. Such numbers could include the emergency services, directory assistance and voice mail numbers.

1. Select the Service dial number option.
2. The names of the available services will be shown.
3. Use the up/down navigation touch keys to select a service. Press the  [SEND] key.

My Numbers

Menu 8.7

This displays your phone numbers stored in the SIM card.

Mobile Email

Mobile Email allows you to access your Yahoo! Mail, AOL Mail, AIM Mail, Windows Live Hotmail, AT&T Mail, Gmail and Other providers accounts on your phone. So, now you can quickly and easily check your email while you are away from your computer.

To Set Up Mobile Email:

- 1. Open Mobile Email:** From the Standby screen, press the left soft key [**Menu**], then choose **Mobile Email**.
- 2. Select an Email Provider:** Use the navigation key to highlight the email provider you wish to use and press **Select**.
- 3. Log In:**
 - 1.** Highlight the ID entry field, press the center key, and then type in your existing email ID.
 - 2.** Scroll down and highlight the Password field, press the center key, and enter your password.

Quick Tip: Your password is case sensitive. Press the  button on the keypad to change to lower case or upper case.

- 3.** To save your password scroll down to Remember Me and press down on the navigation key to check the box.

- 4.** Select **Sign In**.

- ▶ **Opening an Email:** Just scroll down and highlight the email subject line you want to open and press down on the center key. When the email is open, select **Options** to Reply, Forward, Delete, Reply to All, View All Recipients or Mark Unread.
- ▶ **Deleting an Email:** Scroll down to the email you want to delete, press **Options**, then Delete.

My Stuff

Audio

Menu *.1

- ▶ **Shop Tones:** This menu option connects to AT&T's ringtone download site.
- ▶ **Ringback Tones:** This menu option shows the list of the sites which is related with AT&T's answer tone.
- ▶ **Record Voice:** You can record your own audio by pressing the center [**Record**] key.
- ▶ Saved audio files are displayed in the list.

Games

Menu *.2

! Note

The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.

! Warning

Only J2ME (Java 2 Micro Edition) based programs will run on a phone.

J2SE (Java 2 Standard Edition) based programs will only run on a PC.

- ▶ **Shop Games:** This menu option connects to AT&T's game download site.

You download games from the list that appears.

Picture

Menu *.3

- ▶ **Shop Wallpapers:** Connects to AT&T's wallpapers download site.
- ▶ **Take Picture:** Takes you to the camera function, from where you can take pictures.
- ▶ **Make Animated GIF:** Allows you to create an animated GIF file with the images in your phone.
- ▶ The picture files saved on your phone and memory card (if inserted) are displayed.

My Stuff

Video

Menu *.4

- ▶ **Shop Videos:** You can download videos.
- ▶ **Record Video:** Takes you to the camcorder function, from where you can record a new video.
- ▶ The video files saved on your phone and memory card (if inserted) are displayed.

! Note

DRM sometimes restricts some functions, such as send and edit.

Applications

Menu *.5

This menu displays the list of Java programs on your phone. All previously downloaded programs can be selected, deleted or viewed in detail within the Application menu.

- ▶ **Shop Applications:** This menu option connects to AT&T's application download site.
- ▶ The applications on your phone will be displayed in the list.

Tools

Menu *.6

Voice Command (Menu *.6.1)

Voice command is the function whereby your phone's voice recognition engine identifies the voice of the user and carries out the requested commands. When the user operates the voice command function, there are five possible commands, call <name or number>, Listen to voicemail, missed calls, messages and time and date. To activate the Voice Command function, hold down the **C •↔ Clear Key** while the phone is in Standby Mode.

- 1. Call <Name or Number>:** This function is activated only when the user says the command "Call" followed by the name stored in the address book or say the phone number. Please note that interfering noise might cause a problem displaying candidates. Additionally, the user has the option to select a number type at the end, such as "mobile", "home" or "office".
- 2. Listen Voicemail:** this command is activated when the user says "Listen Voicemail". The user will then be automatically connected to voicemail.

3. Missed Calls: this command is activated when the user says the words “Missed Calls”. The mobile phone presents missed call lists.

- **Follow-up Commands Available**

- **yes:** make the phone call.
- **no:** moves to the next result.
- **cancel:** go back to the main voice command menu.
- **exit:** terminate voice command.

4. Messages: this command is activated when the user says “Messages”. Mobile phone displays details of unread SMS or MMS messages.

- **Follow-up Commands Available**

- **yes:** make the phone call
- **no:** moves to the next unread message
- **cancel:** go back to the main voice command menu
- **exit:** terminate voice command

5. Time & Date: this command is activated when the user says “time and date”. The phone displays the current local time and date.

Voice Command Options

When the Voice Command option is activated, you can press the right soft key [**Options**] for the following options:

- **Mode**

- **speed:** with this setting, you no longer receive voice prompts from the phone when Voice Command is activated.
- **normal:** voice command prompts you when Voice Command is activated.

- **Best Match**

- **1 match:** the most likely match will be displayed when finding a number from the address book.
- **4 matches:** the four most likely matched names will be displayed when finding a name from the address book.

- **Sensitivity**

- **High**
- **Medium**
- **Low**

My Stuff

• Speakerphone mode

- **Automatic On:** When this option is selected, sound is loud enough so you can hear the output when the phone is away from the ear, at a distance
- **Off:** When this option is selected, sound is quieter, and cannot be heard when the phone is away from the ear, at a distance

• Call Alert

- **Ring only:** The phone rings during an incoming call.
- **Ring After Name:** The phone announces the name or number of the incoming call, then rings.
- **Name Repeat:** The phone announces an incoming call by repeating the name or number of the caller repeatedly.

Recent Calls (Menu *.6.2)

This shows recent calls categorized as **All/Missed/Dialed/Received** by tab.

Alarm Clock (Menu *.6.3)

The alarm function allows you to set up multiple separate alarms. You can also set the time, repetition interval and alarm sound. If there is no alarm setting, press the left soft key [**New**] to add a new alarm.

Alarm Options

- ▶ **Time:** Select the desired set time mode using the keypad.
- ▶ **Repeat:** Select the desired repeat mode using the left/right navigation keys.
- ▶ **Alarm Tone:** Press the center key  to access the list of available Alarm Tones.
- ▶ **Memo:** Input alarm name.

Press the right soft key [Save] to save your new Alarm.

Calendar (Menu *.6.4)

When you enter this menu, a calendar will be displayed. The square cursor is used to locate a particular day. The bottom bar on the calendar indicates save schedules (if any) for that day. This function helps you keep track of your schedule. The phone can sound an alarm tone if it has been set for a specific schedule item.

The chart below shows the keys that can be used to navigate the Calendar:

Key	Description
up/down navigation key	Weekly
left/right navigation key	Daily
 key/  key	Annually
 key/  key	Monthly

The following [**Options**] are available when a Calendar event is selected from the Calendar menu.

- ▶ **Search:** Allows you to search the saved schedule(s).
- ▶ **Delete:** Allows you to delete the selected schedule.

- ▶ **Send Schedule Via:** Sends the selected schedule by Text Message, Multimedia Message or Bluetooth®.
- ▶ **Set Holiday:** Allows you to set specific dates to display as Holidays on your calendar.
- ▶ **Selective Delete:** Allows you to delete Old Schedules or All Schedules selectively.
- ▶ **View All:** Allows you to view all saved schedules.
- ▶ **Go to Date:** Allows you to jump to a specific date.
- ▶ **Select Multiple:** Allows you to select multiple schedules in the same day.

Notepad (Menu *.6.5)

You can create up to a maximum of 30 memos.

1. Press the left soft key [**New**] to create a new memo.
2. Input the memo and press the  center key to save.

My Stuff

Calculator (Menu *.6.6)

The calculator function allows you to add, subtract, multiply and divide. You can input numbers using the number keys, and input operators using the navigation keys: the up key for "+", down key for "-", left key for "÷" and right key for "x". You can see the result by pressing the center key "=".

You can input a decimal point by pressing the  [Star] key.

Use the **C**•↶ key to delete numbers.

World Clock (Menu *.6.7)

The World clock function provides time information for major cities worldwide.

1. You will be asked to enter the name of your current city. Enter the name, then press the left soft key [**Save**].
2. View the time in another city. Press the left soft key [**New**], find the city and set the Daylight Savings Time (on or off). Then press [**Save**].

You will then see the new city's time and date information.

Tasks (Menu *.6.8)

This feature allows you to save and manage a task.

1. To add a new To Do item, select the left soft key [**New**] in the Task enquiry screen.
2. Input Due Date, Note, Priority and Status information for the new Task.
3. Press the left soft key [**Save**] to save the Task item.

The following [Options] are available in the Task list.

- ▶ **Mark 'Complete'**: Allows you to change the status of the selected task as Completed.
- ▶ **Edit**: Allows you to edit a saved task.
- ▶ **Delete**: Deletes the selected task.
- ▶ **Selective Delete**: Allows you to delete All Completed/All Past Tasks selectively.
- ▶ **Send Task Via**: Enables the selected task to be sent via Text Message/Multimedia Message/Bluetooth®.

- ▶ **Select Multiple:** Allows you to select multiple Tasks.
- ▶ **View Calendar:** The calendar pop-up window will display, from there you will be able to create New Tasks.

Stop Watch (Menu *.6.9)

This menu allows you to record the elapsed time of an event. The duration of an individual lap time (up to 20 times) and the total time can also be displayed.

▶ New Time

1. To start timing, press the center key  [**Start**]. The running time is displayed as HH.MM.SS.hh (hours, minutes, seconds, hundredths of a second).
2. During the timing, you can record an individual lap time by pressing the right soft key [**Lap**]. Up to 20 lap times can be recorded.
3. You can stop or restart timing by pressing the center key  again.
4. To reset the stop watch, press the left soft key [**Reset**].

- ▶ **Saved Times:** You can see the saved recorded times.

Tip Calculator (Menu *.6.0)

This feature allows you to quickly and easily calculate the tip amount based on the total bill as well as the split of the total bill based on the number of people.

Unit Converter (Menu *.6.*)

This function allows you to convert units of measurement.

There are 6 types of units that can be converted: Area, Length, Weight, Temperature, Volume and Velocity.

! Note

You can input a decimal by pressing the  [Star] key.

Camera & Recordings Menu *.7

Take Photo (Menu *.7.1)

Using the camera module built into your phone, you can take pictures of people or events while on the move. Additionally, you can send photos to other people in a picture message.

The following options will appear (as icons) on the right side of the screen.

- ▶ **Album:** You can see saved image files.
- ▶ **Video:** Go to the video application, enabling you to record a video clip.
- ▶ **Capture:** You can capture the image.
- ▶ **Flash:** You can set the flash mode.
- ▶ **Video Share:** If available, this will allow you to initiate a Video Share call. You must be in a 3G area to use this feature.

The right soft key [**Settings**] will bring up the following options:

Preview tab

- ▶ **Image Size:** The resolution of the image can be captured in 1600*1200/1280*960/640*480/320*240/160*120.

- ▶ **Brightness:** Adjust brightness with a slider by using the navigation key.
- ▶ **Color Effects:** Includes options of Color/Mono/Sepia/Negative/Blue.
- ▶ **White Balance:** Set the White Balance as Auto/Daylight/Cloudy/Illuminate/Indoors.
- ▶ **Night Mode**
- ▶ **Timer:** Timer can be set to Off/3 Seconds/5 Seconds/10 Seconds.
- ▶ **Image Quality:** The quality of the captured image can be Super Fine/Fine/Normal.

Others tab

- ▶ **Hide Icons:** Select from Auto/Manual.
- ▶ **Shutter Tones:** Can be set to Tone 1/Tone 2/Tone 3/Off.
- ▶ **Reset Settings:** Allows you to set to the default settings.
- ▶ **Video Share settings**

Using Zoom

In Take Photo mode, you can Zoom in/out by using the up/down side keys. The maximum zoom scale depends on the resolution as follows.

Resolution	Zoom scale
1600*1200	Not Available
1280*690	Not Available
640*480	Level 1 ~ Level 10
320*240	Level 1 ~ Level 10
160*120	Level 1 ~ Level 10

Record Video (Menu *.7.2)

You can record a video clip with your phone. Before starting to record, press the right soft key [**Settings**] to configure your settings.

The following options will appear (as icons) on the right side of the screen.

- ▶ **Album:** You can see saved video files.
- ▶ **Photo:** Switches to the Camera function, allowing you to take a picture.

- ▶ **Record:** Begins recording the video.
- ▶ **Flash:** You can set the flash mode.
- ▶ **Video Share:** You can make a Video Share Call. For more details, refer to '**Video Share Calling**' (page 23).

The right soft key [**Settings**] will bring up the following options:

Preview Tab

- ▶ **Video Size:** Allows you to select a video size between 320*240 or 176*144.
- ▶ **Brightness:** Adjust brightness with a slider by using the navigation key.
- ▶ **Color Effects:** Includes options of Color/Mono/Sepia/Negative/Blue.
- ▶ **White Balance:** Set the White Balance as Auto/Daylight/Cloudy/Illuminate/Indoors.
- ▶ **Night Mode**
- ▶ **Video Quality:** Allows you to set video quality. Includes options for Super Fine/Fine/Normal.
- ▶ **Duration:** Set the recording duration between General Mode/Video Share Mode/MMS Video Mode.

My Stuff

Others Tab

- ▶ **Hide Icons:** Select from Auto/Manual.
- ▶ **Voice:** Mute or unmute the voice.
- ▶ **Recording Tones**
- ▶ **Reset Settings:** Allows you to set to the default settings.
- ▶ **Video Share settings**

! Note

In Video Record mode, you can adjust the zoom scale by using the up/down side volume keys. The maximum zoom scale depends on the resolution as follows.

Resolution	Zoom scale
320*240	Level 1~Level 10
176*144	Level 1~Level 10

Camera Album (Menu *.7.3)

You can view the pictures and videos that are captured with the camera. When a file is highlighted, the following options are available when you press the left soft key [**Options**] (fewer options are available for video files). **Send Via/Use As/Print/Delete/Slide Show/Edit/Display Date/Information.**

Record Voice (Menu *.7.4)

You can record an audio clip in this menu. The recorded audio file is saved automatically in the Audio menu (Menu *.1).

The right soft key [**Options**] will bring up the following options.

- ▶ **Record Mode:** Sets the recording mode to either MMS or General.
- ▶ **Quality:** Determines the quality of an audio clip.
- ▶ **Set Storage Defaults:** You can set the default storage of the recorded audio to the Handset Memory or the Memory Card.
- ▶ **Cancel:** Takes you back to the previous menu.

The left soft key [**Gallery**] takes you to the Audio & Ringtones gallery.

Web Pages

Menu *.8

RSS Reader (Menu *.8.1)

With this program, you can open and view files created in the format with RSS. The following [**Options**] are available.

- ▶ **Update:** You can update one RSS feed if you can access the network.
- ▶ **Update all:** You can update RSS feeds with just one click
- ▶ **New RSS Feed:** You can add an RSS feed manually.
- ▶ **Edit:** Modify the existing RSS feed.
- ▶ **Delete:** Allows you to erase the selected RSS feed.
- ▶ **Send URL:** Allows the RSS information to be sent via SMS to another person.
- ▶ **New Folder:** Add a new folder manually.

- ▶ **Update Schedule:** You can configure the automatic RSS Feed update intervals.
- ▶ **Select Multiple:** Allows you to select multiple RSS feeds for moving or deleting.

Bookmarks (Menu *.8.2)

This function allows you to store and edit frequently accessed sites.

The following [**Options**] are available.

- ▶ **New Bookmark:** Add a new bookmark manually.
- ▶ **Edit:** Modify the existing bookmark item.
- ▶ **Delete:** Allows you to erase the selected bookmark.
- ▶ **Move:** Move a bookmark to another folder which you added manually.
- ▶ **Send URL:** Allows the bookmark information to be sent via SMS to another person.

My Stuff

- ▶ **New Folder:** Add a new folder manually.
- ▶ **Select Multiple:** Allows you to select multiple bookmarks for moving or deleting.
- ▶ **Cancel:** Takes you to the previous menu.

! Note

Pre-installed bookmarks cannot be deleted or edited by users.

In order to change the text input mode for symbol input, please refer to the General Functions section.

Saved Pages (Menu *.8.3)

Pages saved using the Browser (Menu > My Stuff > Applications > Browser) are saved in this menu.

Recent Pages (Menu *.8.4)

Recent Pages visited, using the Browser (Menu > My Stuff > Applications > Browser), are saved in this menu.

Other Files

Menu *.9

When you receive files of an undefined format (such as .vcs, .vcf, etc.) via email, the files are saved in this folder.

The following [**Options**] are available.

- ▶ **Send Via:** Send the selected file via Bluetooth® or MMS.
- ▶ **Delete:** Allows you to delete the selected file.
- ▶ **Move To Another Folder:** You can move the selected file.
- ▶ **Copy To Another Folder:** You can copy the selected file.
- ▶ **Rename:** You can edit the name of the selected file.
- ▶ **Select Multiple:** You can delete, copy, move, Send Via Message or Send via Bluetooth® multiple files at once.



- ▶ **New Folder:** Allows you to make a new folder.
- ▶ **Sort by:** You can sort the folders by name, date and type.
- ▶ **Information:** You can view information about the selected file.
- ▶ **Cancel:** Takes you to the previous menu.

Memory Card

Menu *.0

This menu allows you to view the items in your memory card (if inserted).



Mobile Video

Mobile Video brings you quick, on-demand access to news, sports, weather and entertainment video clips. Catch up on TV's hottest shows, funniest comedians, biggest headlines and latest sports scores. You can even personalize your homepage for quick access to your favorites. In addition, the Mobile Video service automatically streams localized weather information to your personalized "News & Weather" page each and every day.

Settings

Audio & Ringtones

Menu #.1

There are 5 sound modes: General, Vibrate All, Alarm Only, and Silent All. Preferences can be set in the Audio & Ringtones menu. In addition, pressing and holding the  [Star] key while on the standby screen switches between Normal mode and Vibrating mode. Ear Mic is available when respective instruments are attached.

Shop Tones (Menu #.1.1)

Connects to the AT&T Ringtone store.

Volume (Menu #.1.2)

This menu allows you to control your Ringtone & Alerts, Multimedia, Call and Keypad volumes.

Ringtone (Menu #.1.3)

- ▶ **Sounds:** Allows you to access and play your ringtones. These can be downloaded ringtones from Ringtone shops.
- ▶ **Alert Type:** Supports 3 ring alert types. Ring, Ring and Vibration and Ring after Vibration.
- ▶ **Increasing Ringtone:** Allows you to select an Increasing Ringtone type which is played when you receive an incoming call. You can select to turn this On or Off.

! Note

Full length music tracks cannot be set as either ringtones or message tones.

Message Tone (Menu #.1.4)

- ▶ **Sounds:** Allows you to access and play your message tones. These can be downloaded ringtones from Ringtone shops.
- ▶ **Alert Type:** Supports 6 message alert types: Ring Once, Ring Every 2 Min., Ring Every 15 Min., Ring & Vibrate, Vibrate and Silent.

Settings

Alert Tone (Menu #.1.5)

- ▶ **Sounds:** Allows you to select a set of alert tones. Supports 2 alert tone types, Alert Tone 1 and Alert Tone 2.
- ▶ **Alert Type:** You can select to turn Alert Tones to Ring or Silent.

Keypad Tone (Menu #.1.6)

This menu option allows you to select a tone that the phone sounds when a key is pressed on the dialpad screen. You can select an option from **Melody**, **Voice** and **Silent**.

Power On/Off Tones (Menu #.1.7)

You can select to turn Power On/Off Tones to **Ring** or **Silent**.

Phone Settings

Menu #.2

Date & Time (Menu #.2.1)

- ▶ **Set Date:** This allows you to enter the day, month and year. You can set back to Auto Update with the Auto Update menu (below).
- ▶ **Date Format:**
 - ddd, MMM DD (day, month date)
 - MM/DD/YYYY (month/date/year)
 - DD/MM/YYYY (date/month/year)
 - YYYY/MM/DD (year/month/date)
- ▶ **Set Time:** This allows you to enter the current time. You can choose the time format via the Time Format menu option.
- ▶ **Time Format:** 12 Hours/24 Hours
- ▶ **Auto Update:** Select On to set the phone to automatically update the time and date according to the current local time zone.

Languages (Menu #.2.2)

You can change the language for the display text on your phone. This change will also affect the Language Input mode.

Set Hotkeys (Menu #.2.3)

You can change the preferences on the Hotkeys that are currently assigned for your navigation keys (when in Standby mode).

Auto Key Lock (Menu #.2.4)

This allows you to set the amount of time before your Keys lock automatically.

Set Flight Mode (Menu #.2.5)

This allows you to use only the phone's features that do not require the use of the wireless network when you are in an airplane or in places where the wireless network is prohibited. If you set the flight mode on, the icon will be displayed on the screen instead of the network signal icon.

- ▶ **On:** You cannot make (or receive) any calls, including emergency calls or use other features that require network coverage.
- ▶ **Off:** You can deactivate the flight mode to access the network.

Security (Menu #.2.6)

Various codes and passwords are used to protect the features and settings of your phone.

Settings

Reset Settings (Menu #.2.7)

This function allows you to restore factory settings. To do this, you need the security code.

- ▶ **Master Reset:** Restores the handset settings (e.g.: Audio, Display, Language, Date & Time, Bluetooth® Settings) to default values.
- ▶ **Master Clear:** Deletes downloaded/user created contents (e.g.: images, videos) from Handset content and the External Memory card. More information below on what the Master Clear option does:
- **Phone**
 - Deletes all downloaded/user created Images, Videos & Audios from the Handset Memory.
 - Restores Deletes Personal Information stored in the handset memory (e.g.: address book, messages, tasks, alarm, Calendar schedules) to default values.
 - Restores the settings stored in the handset memory to the default values.

- **Memory Card:** Deletes all contents from the External Memory Card.

Display

Menu #.3

Shop Graphics (Menu #.3.1)

Connects to AT&T's graphics download site.

Wallpapers (Menu #.3.2)

From this menu you can choose to have an image, solid colors or Alert Avatars for a wallpaper.

Fonts (Menu #.3.3)

You can configure the font size and color of the fonts your phone uses.



Clocks & Calendar (Menu #.3.4)

This feature allows you to select a Clock or Calendar to display on the standby screen.

Brightness (Menu #.3.5)

You can set the brightness of the display screen and the keypad.

Backlight Timer (Menu #.3.6)

Use this to set the duration of the display backlight and keypad.

Color Schemes (Menu #.3.7)

You can change the color of the menu, soft key area, title bar area and cursor by changing the Color Schemes. You can select Black or White Schemes.

Menu Styles (Menu #.3.8)

You can set the main menu style to Icon or List.

Call

Menu #.4

Call Forwarding (Menu #.4.1)

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact AT&T. Select one of the forwarding options, for example, select If Busy to forward voice calls when your number is busy or when you reject an incoming call.

The following options are available:

- ▶ **All Voice Calls:** Diverts voice calls unconditionally.
- ▶ **If Busy:** Diverts voice calls when the phone is in use.
- ▶ **If No Answer:** Diverts voice calls which you do not answer.
- ▶ **If Out of Reach:** Diverts voice calls when the phone is switched off or out of coverage.

Settings

Send My Number (Menu #.4.2)

This network service allows you to set your phone number to be displayed or hidden Off from the person you are calling. You can select Set by Network if you prefer to have different settings for different service providers.

Auto Redial (Menu #.4.3)

Select On, your phone redials the number you're trying to call up to 10 times after you hear a quick, busy signal. Press  [END] to stop the call attempts.

This feature attempts to redial numbers that are engaged due to the wireless network. It does not redial numbers to an engaged party.

Note

There will be no alert indicating the call has been connected. You must stay on the line to hear when the call is connected.

Answer Mode (Menu #.4.4)

This allows you to determine how to answer the phone.

- ▶ **Any Key:** You can answer an incoming call by pressing any key, except the  [END] key, side volume keys, Camera key, or the right soft key [Silent].
- ▶ **Send Key Only:** You can only answer an incoming call by pressing the  [SEND] key.
- ▶ **Slide Up:** You can slide open the phone to answer an incoming call.

Minute Minder (Menu #.4.5)

This option allows you to specify whether the phone will beep every minute during an outgoing call to keep you informed of the length of the call.

Call Waiting (Menu #.4.6)

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Deactivate** to request the network to deactivate call waiting or **View Status**, to check if the function is active or not.

Call Reject (Menu #.4.7)

This menu allows you to enable or disable call reject for all numbers or just the numbers on the Call Reject List.

- ▶ **Call Reject On/Off:** Allows you to activate or deactivate Call Reject. When the **Reject All Calls** option is set, all incoming calls are routed directly to Voicemail. **Reject on List** allows you to enable Call Reject for the numbers saved on your Call Reject List (Menu #.4.7.2).

- ▶ **Call Reject List:** Configures conditional call reject mode. After tapping [New], you can add to the call reject list by selecting [Contact List] or [New Number]. When you add a number to the list, you can add the number by entering it directly or by searching for the number in the Contact List.

Send DTMF Tones (Menu #.4.8)

Select from On/Off.

TTY (Menu #.4.9)

Select from TTY Full/TTY Talk/TTY Hear/TTY Off.

Time & Cost (Menu #.4.0)

You can check Call Duration and Data Counter.

Connection

Menu #.5

Bluetooth® (Menu #.5.1)

Your phone has built-in Bluetooth® wireless technology, which makes it possible for you to connect your phone wirelessly to other Bluetooth® devices such as a hands-free device, PC, PDA, a remote screen or other phones. The devices registered in your phone can only be connected one at a time. (To make a connection to the same type of device or change Bluetooth® preferences, disconnect the existing device first.)

You can have a conversation via a cordless Bluetooth® hands-free phone or browse the Internet, wirelessly connected, via a mobile phone.

You can also exchange, for example, business cards, calendar items and pictures.

MobiTV, XMRadio or Music Playing is supported through a Bluetooth® headset.



Hands-free profile

This icon appears when the hands-free profile is used between the hands-free device. This allows you to call using a Bluetooth® connection.



A2DP profile

This icon appears when the A2DP profile is used between the stereo headset device and the phone. This allows you to listen to an audio clip. A2DP is the Advanced Audio Distribution Profile, which provides support for streaming either mono or stereo audio using Bluetooth®.



Hands-free + A2DP profile

This icon appears when both profiles of the hands-free and the A2DP are used between the compatible device and the phone. This allows you to call and listen to an audio clip using a Bluetooth® connection.

When using each device, see the manual that comes with the device.

! Note

We recommend that your phone and the Bluetooth® device you are communicating with should be no more than 10 meters apart. The connection may be improved if there are no solid objects between your phone and the other Bluetooth® device.

▶ **Turn On/Off:** This menu sets the Bluetooth® on or off.

▶ **My Visibility On/Off**

- Selecting the On option exposes your phone to other Bluetooth® devices.
- Selecting Off shows your phone to already-paired devices only.

▶ **Search New Device:** This function allows you to search for and add new devices.

▶ **My Devices:** This function allows you to view the list of all devices that are paired with your phone.

1. Select the [Options] > [Add new device] key to search for the device that can be connected, and which is also within range.
2. If you want to stop searching, press the right soft key [Cancel].
3. All of the devices found are displayed.

Select the desired device by pressing the  [OK] key and entering the password.

▶ **My Bluetooth® Info:** This menu allows you to configure the profile for Bluetooth®.

- **Enter My Name:** Allows you to change the handset's name, this can be seen by other Bluetooth® devices.
- **Supported Services:** Shows you all services that the handset supports.

Settings

- **Primary storage:** Allows you can assign the default storage to Phone Memory or Memory Card when you receive files via Bluetooth.

USB Connection Mode (Menu #.5.2)

You can transfer files from a compatible PC to the memory in your phone using the Mass Storage. When you connect the phone to a PC using the USB cable, this will be displayed as a removable disk through Windows Explorer.

The USB Connection Mode determines how your Phone will communicate with other USB devices when they are connected with a USB cable.

Internet Profiles (Menu #.5.3)

This menu shows the Internet Profiles. You can add, delete and edit Internet Profiles by using the Options Menu. However, you cannot delete or edit default configurations provided by AT&T.

Access Points (Menu #.5.4)

This menu shows the Access Points. You can register, delete and edit by using the Options Menu. However, you cannot delete or edit default configurations provided by AT&T.

Memory

Menu #.6

Used Space (Menu #.6.1)

This function shows the status of the user memory of the handset.

Phone Common

This function shows the Memory Status of the phone and the memory being used by Audio, Image, Video, Multimedia Message, Java and Others Files.

Phone Reserved

This function shows the status of the reserved memory for the user (Text Message, Contact List, Calendar, Tasks, Memo).



Memory Card

If your phone has a multimedia memory card in the card slot, you can save images, sounds and videos on the memory card. You can check the current status of the external memory card in the Memory status menu.

SIM Card

This function shows the status of the SIM Card user memory.

Set Storage Defaults (Menu #.6.2)

Application Settings **Menu #.7**

This Menu allows you to adjust the settings to the following features on the phone:

Video Share (Menu #.7.1)

- ▶ **Audio Alert:** Enable/Disable auditory alert when Video Share is available.
- ▶ **Auto Record:** Enable/Disable automatic video clip recording when live Video Share starts.

Messaging (Menu #.7.2)

Settings

Browser (Menu #.7.3)

Accounts

This includes the network information used to connect the browser to the Internet. Select the desired account by tapping the screen, then tap [Activate]. This will activate the account that will be used for future connections. Mobile Web is the predefined account that is set as default.

- ▶ **Activate:** Select the account among the list of accounts, so it can be used for future connections.
- ▶ **View:** Allows you to see the specific account information.

The following options will be available when you press on the right soft key [Options]:

- ▶ **Edit:** Allows you to change the account information.
- ▶ **Delete:** Allows you to delete the account.
- ▶ **New:** Allows you to create a maximum of 20 new accounts.

! Note

You cannot edit and delete pre-installed accounts.

In order to create a new account, please fill in the network information.

1. **Account Name:** Name associated with new account.
2. **Homepage:** Homepage URL.
3. **Internet Profile:** You can choose one from the Internet profiles.

Note you can choose a Internet profile by selecting the list option on the center key.

! Note

1. AT&T has provided default settings regarding account information.
2. Creating or editing an account requires caution. The browser cannot connect to the Internet if the account information is incorrect.

Appearance

You can choose the settings of the browser appearance (Text size, Character Encoding, Scrolling Control, Show Image, Java Script).

Cache

The web pages you have accessed are stored in the memory of the phone.

- ▶ **Clear Cache:** Remove all cached data in the memory.
- ▶ **Allow Cache:** Set a value to determine whether a connection attempt is made through the cache or not.

! Note

A cache is a buffer memory, which is used to store data temporarily, especially when it is online.

Cookies

The information of services you have accessed are stored in what is called a Cookie.

From this Menu you can choose to Allow Cookies, or not, or to Delete Cookies that are already on your phone.

Screen Settings

You can change the settings of browser screen (Rendering mode, Zoom, Mini-Map).

Security

A list of the available certificates is shown.

- ▶ **Certificates:** You can see the list of certificates and view them in detail.
- ▶ **Clear Session:** Removes the secure session.

Settings

Navigation Mode

You can change the methods of browser navigation.

- ▶ **4 Way Navigation:** The cursor of the browser moves scroll amounts or follows hyperlinks.
- ▶ **Mouse Pointer:** You can move the cursor like a mouse pointer.

Secure Pop-up

You can control the pop-up which indicates a secure page or not.

Browser Shortcut

If this is set to On, you can use the browser more quickly and conveniently with the key pad in the phone. If Shortcut is on, the following number of buttons is available.

- | | |
|-------------------|-------------------|
| 1. Enter URL | 2. Recent Page |
| 3. Add This Page | 4. Page up |
| 5. Full Screen | 6. Page Overview |
| 7. Page Down | 8. New Window/Tab |
| 9. Search Text | 0. Zoom In |
| *. View Bookmarks | #. Zoom Out |

Voice Command (Menu #.7.4)

• Mode

- **Speed:** Voice command is abbreviated.
- **Normal:** Voice command is played normally.

• Best Match

- **1 Match:** The most likely match will be displayed, finding a number from the address book.
- **4 Matches:** The four most likely matched names will be displayed, finding a name from the address book.

• Sensitivity

- **High:** Operation and performance of the voice recognition engine is rarely affected by the user's voice command and surrounding sound.
- **Medium:** Operation of voice recognition engine is normally affected by user's voice command and surrounding sound.
- **Low:** Operation of voice recognition engine is strongly affected by user's voice command and surrounding sound.



- **Speakerphone Mode**

- **Automatic On:** When this option is selected, sound is loud enough so you can hear the output when the phone is away from the ear, at a distance.
- **Off:** When this option is selected, sound is quieter, and cannot be heard when the phone is away from the ear, at a distance.

- **Call Alert**

- **Ring only:** Ring repeatedly when you receive a call.
- **Ring After Name:** Tells name of the contact you saved once and then ring repeatedly when you receive a call.
- **Name Repeat:** Tells name of the contact you saved repeatedly when you receive a call.

Software Update

Menu #.8

If new software exists, the AT&T server notifies devices using a WAP push message. Also the user can check for the software update using the menu "Check for Update". If the new software does not exist the user can not use this feature in 24 hours. Before updating new software after downloading it from the AT&T server, users can decide whether they would like to postpone the operation. Reminder times can be set to 30 minutes, 1 hour and 4 hours. When the time is \up, users are prompted again or users can resume the postponed operation using this menu at any time. The software update can only be postponed three times and will automatically start after the third postpone period expires.



Settings

Phone Information **Menu #.9**

This menu is used to view My Numbers, Manufacturer, Model Name, Device ID, Hardware Version, Software Version, Language and DM Client Version.

Q&A

Please check to see if any problems you have encountered with the phone are described in this section before taking the phone in for a service or calling a service engineer.

Q How do I view the list of outgoing calls, incoming calls and missed calls?

A Press the  [SEND] key.

Q Why is the connection inconsistent or not audible in certain areas?

A When the frequency environment is unstable in a certain area, connection may be inconsistent and inaudible. Relocate to another area and try again.

Q Why is the connection inconsistent or abruptly disconnects even when established?

A When frequency is unstable or weak, or if there are too many users, a connection may be cut off even after it was established. Please try again later or attempt again after relocating to other areas.

Q Why won't the LCD turn on?

A Remove the battery, then replace it. Then turn on the power. If there is no change, fully charge the battery and try again.

Q Why does the phone heat up?

A The phone may get hot when there is a very long call duration, when games are played or even when surfing the Internet for a long time. This has no effect upon the life of the product or performance.

Q Why does the battery run out so quickly during normal use?

A This may be due to the user environment, a large number of calls or a weak signal.

Q Why is no number dialed when an Address Book entry is recalled?

A Check that the number has been stored correctly by using the Address book Search feature. Re-store them, if necessary.

Accessories

There are a variety of accessories available for your mobile phone, some of which may be sold separately. You can select these options according to your personal communication requirements. Consult your local dealer for availability.

Travel Adapter

This adapter allows you to charge the battery. It supports standard US 120Volt 60Hz outlets.



 
Battery

Standard battery is available.




Vehicle Power Adapter

Allows hands-free operation. Includes earpiece and microphone.

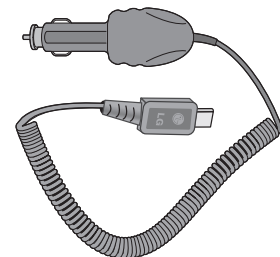

USB Cable

 Allows you to connect your phone to your PC.

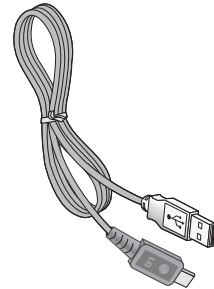

Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

For Your Safety

Important Information

This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Before You Start

Safety Instructions

WARNING! To reduce the possibility of electric shock, do not expose your phone to high humidity areas, such as the bathroom, swimming pool, etc.

Always store your phone away from heat. Never store your phone in settings that may expose it to temperatures less than 32°F or greater than 104°F, such as outside during extreme weather conditions or in your car on a hot day. Exposure to excessive cold or heat

will result in malfunction, damage and/or catastrophic failure.

Be careful when using your phone near other electronic devices. RF emissions from your mobile phone may affect nearby in adequately shielded electronic equipment. You should consult with manufacturers of any personal medical devices such as pacemakers and hearing aides to determine if they are susceptible to interference from your mobile phone. Turn off your phone in a medical facility or at a gas station. Never place your phone in a microwave oven as this will cause the battery to explode.

IMPORTANT! Please read the TIA SAFETY INFORMATION on page 101 before using your phone.

Safety Information

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as TVs, radios, and personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- ▶ Do not subject this unit to excessive smoke or dust.

- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.

Memory card information and care

- ▶ The memory card cannot be used for recording copyright-protected data.
- ▶ Keep the memory card out of the small children's reach.
- ▶ Do not leave the memory card in extremely hot location.
- ▶ Do not disassemble or modify the memory card.

For Your Safety

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

CAUTION

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with skin, a minor burn may result. Contact your local dealer for a replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 0.6 inches (1.5cm) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 0.6 inches (1.5cm) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 0.6 inches (1.5cm) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

Cautions for Battery

- ▶ Do not disassemble.
- ▶ Do not short-circuit.
- ▶ Do not expose to high temperature: 60°C (140°F).
- ▶ Do not incinerate.

For Your Safety

Battery Disposal

- ▶ Please dispose of your battery properly or bring to your local wireless carrier for recycling.
- ▶ Do not dispose in fire or with hazardous or flammable materials.

Adapter (Charger) Cautions

- ▶ Using the wrong battery charger could damage your phone and void your warranty.
- ▶ The adapter or battery charger is intended for indoor use only.

Do not expose the adapter or battery charger to direct sunlight or use it in places with high humidity, such as the bathroom.

Avoid damage to your hearing

- ▶ Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.
- ▶ If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Safety Guidelines

TIA Safety Information

Provided herein is the complete TIA Safety Information for Wireless Handheld phones. Inclusion of the text covering Pacemakers, Hearing Aids, and Other Medical Devices is required in the owner's manual for CTIA Certification. Use of the remaining TIA language is encouraged when appropriate.

Exposure to Radio Frequency Signal

Your wireless handheld portable telephone is a lowpower radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

* American National Standards Institute; National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

The design of your phone complies with the FCC guidelines (and those standards).

Safety Guidelines

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

- ▶ Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- ▶ Give full attention to driving - driving safely is your first responsibility;
- ▶ Use hands-free operation, if available;
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of six (6') inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- ▶ Should ALWAYS keep the phone more than six inches from their pacemaker when the phone is turned ON;
- ▶ Should not carry the phone in a breast pocket.
- ▶ Should use the ear opposite the pacemaker to minimize the potential for interference.
- ▶ If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult AT&T.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.



Safety Guidelines

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a 'blasting areas or in areas posted: 'Turn off two-way radio'. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

- ▶ Do not disassemble or open crush, bend or deform, puncture or shred.
- ▶ Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- ▶ Only use the battery for the system for which it is specified.
- ▶ Only use the battery with a charging system that has been qualified with the system per IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- ▶ Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.

Safety Guidelines

- ▶ Replace the battery only with another battery that has been qualified with the system per IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- ▶ Promptly dispose of used batteries in accordance with local regulations.
- ▶ Battery usage by children should be supervised.
- ▶ Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- ▶ Improper battery use may result in a fire, explosion or other hazard.
- ▶ The phone shall only be connected to USB products that bear the USB-IF logo or have completed the USB-IF compliance program.

Charger and Adapter Safety

- ▶ The charger and adapter are intended for indoor use only.

Battery Information and Care

- ▶ Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- ▶ The battery does not need to be fully discharged before recharging.
- ▶ Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- ▶ Do not disassemble or impact the battery as it may cause electric shock, short-circuit, and fire. Store the battery in a place out of reach of children.
- ▶ Keep the battery's metal contacts clean.

- ▶ Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- ▶ Recharge the battery after long periods of non-use to maximize battery life.
- ▶ Battery life will vary due to usage patterns and environmental conditions.
- ▶ Use of extended backlighting, Mobile Web Browsing, and data connectivity kits affect battery life and talk/standby times.
- ▶ The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- ▶ Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- ▶ Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- ▶ When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- ▶ If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.

Safety Guidelines

- ▶ Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- ▶ Using a damaged battery or placing a battery in your mouth may cause serious injury.
- ▶ Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- ▶ Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- ▶ When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- ▶ Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- ▶ Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Centre to replace the damaged antenna.
- ▶ Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Centre.
- ▶ Do not paint your phone.
- ▶ The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- ▶ When you use the phone in public places, set the ring tone to vibration so as not to disturb others.
- ▶ Do not turn your phone on or off when putting it in your ear.

FDA Consumer Update

The U.S. Food and Drug Administration Centre for Devices and Radiological Health Consumer Update on Mobile Phones.

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- ▶ Support needed research into possible biological effects of RF of the type emitted by wireless phones;

Safety Guidelines

- ▶ Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- ▶ Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- ▶ National Institute for Occupational Safety and Health
- ▶ Environmental Protection Agency
- ▶ Occupational Safety and Health Administration (Administración de la seguridad y salud laborales)
- ▶ Occupational Safety and Health Administration
- ▶ National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term 'wireless phone' refers here to handheld wireless phones with built-in antennas, often called 'cell', 'mobile', or 'PCS' phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called 'cordless phones', which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day.

Safety Guidelines

These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do- may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues. The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded

research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to

Safety Guidelines

remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, 'Recommended Practice for Determining the Spatial- Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques', sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test

method uses a tissuesimulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body

and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example,

the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe

Safety Guidelines

from wireless phone EMI. The FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a 'compatible' phone and a 'compatible' hearing aid at the same time. This standard was approved by the IEEE in 2000. The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/cdrh/phones/index.html>)

Federal Communications Commission (FCC) RF Safety Program (<http://www.fcc.gov/>)

International Commission on Non-Ionizing Radiation Protection (<http://www.icnirp.de>)

World Health Organization (WHO)
International EMF Project
(<http://www.icnirp.de>)

National Radiological Protection Board (UK)
(<http://www.nrpb.org.uk>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility.

When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- 1.** Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
- 2.** When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
- 3.** Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- 4.** Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

Safety Guidelines

5. Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a “to-do” list while driving a car, you are not watching where you are going. It is common sense. Don’t get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip— dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations — with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a “Good Samaritan” in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

For more information, please call to 888-901-SAFE, or visit our website www.wow-com.com

Consumer Information on SAR (Specific Absorption Rate)

This Model Phone Meets the Government’s Requirements for Exposure to Radio Waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Safety Guidelines

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg.

* Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.761 W/kg and when worn on the body, as described in this user's manual, is 0.59 W/kg. (Body-worn measurements differ among phones models, depending upon available accessories and FCC requirements.) While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/> after searching on FCC ID BEJGD710.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.wow-com.com>

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Glossary

To help you understand the main technical terms and abbreviations used in this booklet and to take full advantage of the features on your mobile phone, here are a few definitions.

Call Barring

The ability to restrict outgoing and incoming calls.

Call Divert

The ability to reroute calls to another number.

Call Waiting

The ability to inform users that they have an incoming call when engaged on another call.

GPRS (General Packet Radio Service)

GPRS guarantees continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM) circuit-switched cellular phone connections and the Short Message Service (SMS).

GSM (Global System for Mobile Communication)

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

Java

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification.

It has been promoted for and geared heavily towards the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a Java applet. When it is run on a mobile phone or pager, it is called a MIDlet.



Line Identification Services (Caller ID)

Service allowing subscribers to view or block the telephone numbers of callers.

Conference Calls

Ability to establish a conference call involving up to five additional parties.

Phone Password

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

Roaming

Use of your phone when you are outside your home area (for example, when traveling).

SDN (Service Dial Number)

Telephone numbers supplied by your network provider and giving access to special services such as voice mail, directory inquiries, customer support and emergency services.

SIM card

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.

SMS (Short Message Service)

Network service sending and receiving text messages to and from another subscriber, without the need to speak to the correspondent. The message created or received (up to 160 characters long) can be displayed, received, edited or sent.

Patent Information

This product was manufactured under one or more of the following US patents:
5276765, 5749067, 6061647

Index

A

Address Book	60
Answering a Call	16
Answer Mode	82
Audio & Ringtones	77
Auto Redial	82

B

Backlight Timer	81
Battery Disposal	100
Bluetooth®	84

C

Calculator	68
Calendar	67
Caller Groups	60
Call Forwarding	81
Charging your phone	12

D

Date & Time	78
Drafts	40
During a Call	22

G

GPRS	122
------------	-----

I

IM	55
Inbox	39

M

Making a Call	15
Minute Minder	82
Mobile Email	62
Music Player	48
My Numbers	61

N

Notepad	67
---------------	----

O

Outbox	41
--------------	----

P

Playing Music	49
---------------------	----

R

Record Video	71
--------------------	----

S

Security	79, 89
Service Dial Numbers	61
Set Flight Mode	79



Shop Games	63
Shop Tones	63, 77
Software Update	91
Speed Dial List	60
Stop Watch	69

T

Take Photo	70
Tasks	68
Tip Calculator	69

U

Unit Converter	69
----------------------	----

V

Video	64
Video Share Calling	23
Voicemail	42

W

Wallpapers	80
World Clock	68

MEMO

Bluetooth QD ID B014683