


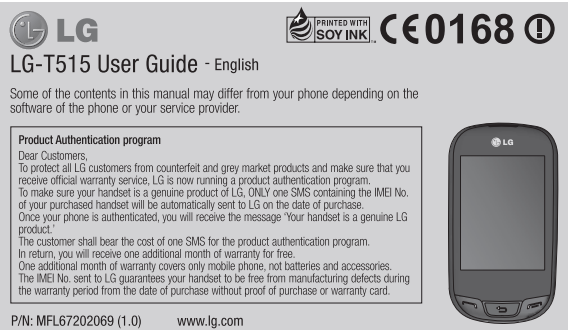

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T515 is not in use, it will return to the lock screen.

Control the touch screen

The controls on the LG-T515 touch screen change dynamically depending on the task you are carrying out.

- **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.
- **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
- **Back up contacts/ Restore contacts** - Save or restore the contacts data to the other storage.
- **Delete all contacts** - Delete all your contacts. Touch Yes if you are sure you want to delete all your contacts.

Messaging

Your LG-T515 combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

- 1 Touch **Messages** in menu and touch **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.

Camera

Taking a quick photo

- 1 Touch **Camera** menu.
- 2 When the camera has focused on your subject, touch the on the right-center of the screen to take a photo.

TIP: To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

Calls

Making a Call

- 1 Touch to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch to initiate the call.

NOTE: To make a call from SIM2 touch the forward arrow mark on icon.

TIP! To enter + for making an international call, press and hold .

Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the home screen touch to open the **Contacts**.

- 3 Touch **To** at the top of the screen to enter the recipients, then enter the number or touch to select a contact. You can even add multiple contacts.
- 4 Touch when ready.

NOTE: To send a message from SIM2 touch the forward arrow mark on icon.

WARNING: If an image, video, sound, New slide and so on is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

Entering Text

You can choose your input method by tapping and **Input method**.

- Touch to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.
- Touch to change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

After taking a photo

Your captured photo will appear on the screen. The following options are available.

- Touch .
- Upload** - Touch to upload the photo.
- Send Via** - Touch to send the photo as a **Message**, **Email** or via **Bluetooth**.
- Set as** - Touch to set as **Homescreen wallpaper**, **Lockscreen wallpaper**, **Contacts image**.
- Edit** - Touch to edit the photo.
- Touch to delete the image.
- Touch to take another photo immediately.
- Touch to view a gallery of your saved photos.

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!
The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.



Changing the call setting

- 1 Touch **Call settings** in the **Settings** menu.
 - 2 From the screen touch SIM1/SIM2.
- **Call reject** - Slide the switch left for ON. You can touch the Reject list to choose All calls, Contacts, Groups, All unknown callers and All unknown numbers.
 - **Send my number** - Choose whether to display your number on an outgoing call.
 - **Auto-redial** - Slide the switch left for ON or right for OFF.
 - **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.
 - **Save new number** - Select ON or OFF to save a new number.

Changing the common call setting

- **Answer mode**

Press send key: Allows you to only answer an incoming call by pressing the key.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text**, **Voice**, **Fax**, **X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch **Messages** and, touch **Settings** and **Multimedia message**.

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Show captured image - Choose On to check the picture you took right away.

Shutter sound - Select shutter sound on/off.

Reset settings - Restore all camera default settings.


Video camera

Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot .
- 3 **REC** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 4 To pause the video, touch and resume by selecting .
- 5 Touch on screen to stop video recording.

Phone Components

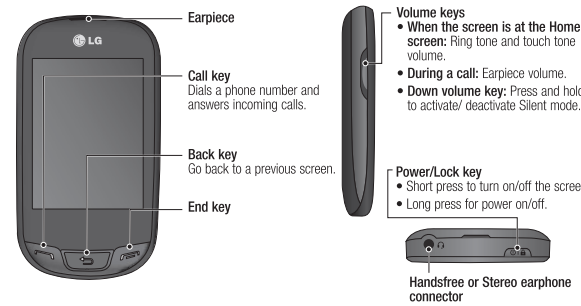

Press any key: Allows you to answer an incoming call by pressing any key, except the side volume keys and key.

- **BT answer mode** - Select Handsfree to be able to answer a call using a Bluetooth headset, or select Handset to press a handset key to answer a call.

Contacts

Searching for a contact

- 1 Touch **Contacts**.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Search field will jump the menu to that alphabetical area of the list.

Adding a new contact

- 1 Touch **Contacts** and touch **Add**.
- 2 Choose whether to save the contact to your **Internal memory** or **SIM1** or **SIM2**.
- 3 Enter your first and last name.

Read receipt - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.

Unsupported attachment - Choose whether the unsupported attachment is restricted or not.

Delivery time - Choose how long to wait before a message is delivered.

MMS centre - Choose one from the list or add a new message centre.

NOTE: Info. Service is only used for SIM1.

Social network services (SNS)

Your LG-T515 has SNS that lets you enjoy and manage your social network.

After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with icons down the left and right sides.

- Touch to play the video.

The following options are available.

Touch .

Send Via - Touch to send the video as a **Message**, **Email** or via **Bluetooth**.

- Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

- Touch to shoot another video immediately. Your current video will be saved.

- Touch to view a gallery of saved videos and images.

Volume keys

- **When the screen is at the Home screen:** Ring tone and touch tone volume.
- **During a call:** Earpiece volume.
- **Down volume key:** Press and hold to activate/ deactivate Silent mode.

Power/Lock key

- Short press to turn on/off the screen.
- Long press for power on/off.

Handsfree or Stereo earphone connector

- 4 You can enter up to five different numbers per contact.

- 5 Add an email addresses. You can enter up to two different email addresses per contact.

- 6 Assign the contact to one or more groups.

- 7 Touch **Save** to save the contact.

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suits your own preferences.

Touch **Options key** and touch **Settings**.

• **Display name** - Choose whether to display the first or last name of a contact first.

• **Contacts view** - Choose whether to display **Name** or **Name & number**.

• **Copy** - Copy your contacts from your SIM1 to your handset, SIM2 to your handset or vice versa, SIM1 to SIM2 or vice versa. You can do this one contact at a time, or all at once.

NOTE: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Facebook (Continued SNS)

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others.

Profile: You can select the **Wall > Status updates** and write the current status. See your info detail and see your uploaded photos.

Friends: Search your friends in facebook by selecting Search field.

Message: You can see the Inbox, Sent Folder and Updates.

Twitter

Twitter is a social networking service which enables its users to send and read other users' messages called tweets.

Using the advanced settings

From the viewfinder, touch to open all advanced settings options. You can change the video camera setting after selecting the option, touch the **OK** button.

Colour Effect - Choose a colour tone to use for your new view.

White balance - The white balance ensures any white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Duration - Set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.

Reset settings - Reset all the video camera settings.

5 Your file will be sent.

2. Bluetooth file transferring function will be blocked under some applications running. (Voice call, Camera, MediaPlayer, IMS/PCSync)

3 Touch Add.

Use your voice recorder to record voice memos or other audio files.

6 Your passcode protected Bluetooth connection is

Browser gives you a fast, colourful world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

How to install On-Screen Phone on your PC
Visit LG Home (<http://www.lg.com>) and go to Support > Mobile Phone Support > Download LG Mobile Support Tool to PC.

is particularly important when near roads.

To obtain the corresponding source code under GPL, LGPL, MPL and other open source licences, please visit <http://opensource.lge.com/>. All referred licence terms, disclaimers and notices are available for download with the source code.

Emergency calls may not be available with all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Declaration of Conformity		 L3 Electronics	
Product Details			
Name: LG Electronics Inc. Address: 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 795, 796, 797, 798, 799, 800, 801, 802, 803, 804, 805, 806, 807, 808, 809, 810, 811, 812, 813, 814, 815, 816, 817, 818, 819, 820, 821, 822, 823, 824, 825, 826, 827, 828, 829, 830, 831, 832, 833, 834, 835, 836, 837, 838, 839, 840, 841, 842, 843, 844, 845, 846, 847, 848, 849, 850, 851, 852, 853, 854, 855, 856, 857, 858, 859, 860, 861, 862, 863, 864, 865, 866, 867, 868, 869, 870, 871, 872, 873, 874, 875, 876, 877, 878, 879, 880, 881, 882, 883, 884, 885, 886, 887			