




MMBB0206001(1.0)

U890



 CE 0889

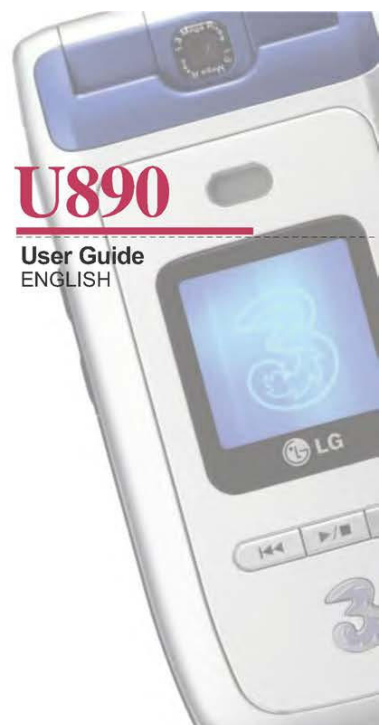

U890

User Guide
ENGLISH

Disposal of your old appliance



1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

LIMITED WARRANTY

LG Electronics warrants to the original purchaser (end user) that the cellular product and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

1. WHAT THIS WARRANTY COVERS:

- (1) The limited warranty for the handset remains in effect for a period of 12 (twelve) months based on the date of purchase (except for the battery, where the Warranty Period shall be 6 months).
- (2) The limited warranty extends only to the original purchaser (end user) and is not assignable or transferable to any subsequent purchaser/end user.
- (3) During the warranty period LG or officially appointed service agent will repair or replace any defective product or parts thereof at its discretion.
- (4) This limited warranty is applicable to the customer/end user that purchased the product from an official dealer in the United Kingdom.
- (5) The purchaser (end user) must retain the original purchase invoice/till slip in order to enforce this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damages resulting from the misuse of this product.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized repair, neglect, abuse, accident, alteration, improper installation, blown fuses, food or liquid spillage, acts of God and shipping damage.
- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) The cost of delivery or transportation of the product to the dealer or officially appointed service center will be borne by the purchaser (end user).

- (5)** Products received for repair by the dealer or authorized service center after the product warranty has expired.
- (6)** Products that have had the serial number removed or defaced.
- (7)** THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED IN TERMS OF MARKETABILITY OR FITNESS FOR A PARTICULAR USE. SPECIFICALLY THE COMPANY WILL ACCEPT NO RESPONSIBILITY OR LIABILITY FOR CONSEQUENTIAL, INDIRECT, INCIDENTAL AND SPECIAL LOSS OR DAMAGE CAUSED BY OR DUE TO FAILURE OF OPERATION OR MALFUNCTION OF THE PRODUCT, OR ARISING FROM THE USE OR INABILITY TO USE THE PRODUCT.
- (8)** Damage resulting from the use of non-LG approved accessories.
- (9)** Scratches and damage caused by normal use.
- (10)** Products used outside published maximum ratings.
- (11)** Consumables such as fuses.
- (12)** Products that have been subject to an unauthorised removal or deactivation of the network operator-lock function.

Thank you for purchasing this LG U890 handset. In the unlikely event that your handset needs to be repaired, please contact 3 Customer Services for information on how to return your handset for repair by dialing 0870.7330.333 or 333. Please have your IMEI number ready when you call (this can be found under the battery).

Welcome to your LG U890 handset

User guides can be daunting things, can't they?
But don't worry, we've made this one as
simple as possible.



U890 User Guide



Your guide is designed to do two things.

First, there's an explanation on how to use your new LG U890, so finding your way around the handset will soon become the second nature.

Then there's an introduction to the wide range of services offered, to make sure you get the best from them. If all you want to do is power up and get going, that's fine.

Table of Contents

Emergency Services and Safety Precautions.....	10	Making and Answering calls	27
Getting Started	14	Making and Answering a video call.....	27
Using the Battery, Charger and USIM Card.....	14	Making a voice/video call	28
Installing the Battery.....	14	Making a voice/video call from Contacts	28
Removing the Battery	15	Making International Calls.....	28
Charging the Battery	16	Adjusting the Volume	29
Disconnecting the Charger.....	17	Answering a Call.....	29
Battery Information and Care.....	17	Signal Strength.....	29
Memory Information and Care	18	Entering Text	30
Installing the USIM card	19	Changing the Text Input Mode.....	30
 		Using the T9 Mode.....	30
Getting to know your LG U890	20	Using the ABC Mode.....	31
Familiarise yourself with its features.....	20	Using the 123 (Number) Mode	31
Your handset's home screen	22	Using the Symbol Mode.....	31
Display Information	23	Character chart.....	32
Your handset's keys and navigation.....	24	 	
Function of keys when phone is idle	25	Menu tree	33
 		Screen.....	40
General Functions	26	Screen theme	40
Turning your handset on.....	26	Home screen	40
Turning your handset off	26	Outgoing call	40
Access Codes	26	Switch on	40
PIN code (4 to 8 digits).....	26	Switch off	40
PIN2 code (4 to 8 digits).....	26	Front screen theme.....	40
PUK code (4 to 8 digits)	26	Home screen	40
PUK2 code (4 to 8 digits)	26	Outgoing call	40
Security code (4 to 8 digits).....	27	Menu style	41
Barring Password.....	27	Font.....	41

Backlight	41
Handset theme	42
Greeting message	42
Profiles	44
Settings	48
Date & time	48
Time.....	48
Date	48
Auto update date/time.....	48
Daylight saving	49
Network	49
Select network	49
Location mode	49
Preferred lists	49
Access points	49
Security	50
PIN code request	50
Handset lock	50
Change codes	50
Language	51
Memory status	51
Common memory	52
Reserved memory	52
USIM memory	52

External Memory	52
Format External Memory	52
Handset information	52
Reset settings	52
Browser	54
Home	54
Bookmarks	55
Connect	55
Send	55
Add new	55
Edit	55
Mark/Unmark.....	55
Delete	55
Saved pages	55
Go to URL	55
Security	56
Settings	56
Profiles.....	56
Character encoding	56
Scrolling control	56
Show Image.....	56
Cache	57
Cookies	57
Clear cache	57
Clear cookie	57

Table of Contents

Messages	60	My memory card	77
Create new message	60	Play lists	78
Text message	60		
Multimedia message	60	Multimedia	80
Email	63	Video camera	80
		Camera	81
Inbox	64	Voice recorder	82
Mailbox	65		
Drafts	66	Contacts	84
Outbox	66	Add new	84
Sent items	66	Search	84
Templates	67	Speed dials	84
Emoticons	67	Groups	85
Settings	67	Service dial numbers	85
Text message	67	Own number	85
Multimedia message	68	Settings	85
Email	69	Display data	85
Videomail	70	Show image/avatar	85
Voicemail	70	Copy all	85
ExpressLink	70	Move all	86
Info. Service	70	Clear contacts	86
My stuff	72	Applications	88
My images	72	My games & apps	88
My videos	73	Download games & apps	88
My sounds	76	Settings	88
Applications	77		
My bluetooth files	77	Organiser	92

Calendar	92
To do	94
To do Enquiry	94
Adding To do Items	95
To do Delete	95
Finished/Not finished.....	95
Mark/Unmark.....	95
To do Detailed View	95
Memo	96
Secret memo	96
Date finder	97
Dateulator	97
Settings	98
Calendar	98
Memory info... ..	98
Clear all.....	98
Tools	100
Quick menu	100
Alarm clock	101
Connectivity	102
Bluetooth	102
Server synchronisation.....	103
Dial-up network	104
Calculator	104
World time	105
Unit converter	105

Currency	105
Surface	105
Length	106
Weight	106
Temperature	106
Volume.....	107
Velocity	107

Calling..... **110**

Video calls

My picture size	110
My picture position	110
Hide my picture	110
Mirror	110
Substitute picture	110

Call history

Missed calls.....	111
Received calls	111
Dialled calls	111
All calls	111

Call duration.....

Last call	111
Received calls	111
Dialled calls	111
All calls	112

Table of Contents

Call divert	112
Voice calls	112
Video calls	112
Deactivate all	113
 Call barring	 113
Voice calls	113
Video calls	113
Deactivate all	114
 Fixed dial numbers	 114
Call waiting	114
Settings	114
Call reject.....	114
Send my number	115
Auto redial	115
Answer mode	115
Minute minder	115
BT answer mode	115
 Troubleshooting	 118
Accessories	120
Glossary	122
Index	126



Guidelines for safe and efficient use

Read these simple guidelines. Breaking the rules may be dangerous or illegal.
Further detailed information is given in this manual.

Emergency Services and Safety Precautions

- Do not allow battery to come into direct contact with an electric outlet or car cigarette lighter socket
- Do not pierce battery with sharp objects
- Do not drop or subject the phone to physical shock
- When the battery has reached the end of its life, dispose of it in accordance with local environmental regulations. Do not dispose of your battery in household rubbish.
- Do not immerse in water
- Do not disassemble or modify the battery
- Stop using the battery if abnormal heat, odour, discolouration, deformation, or abnormal conditions are detected during use, charge, or storage
- Do not use damaged or deformed batteries. In the unlikely event of a battery leak, take care to keep the battery discharge away from your eyes or skin.
- If the leakage does come into contact with the eyes or skin, please wash thoroughly in clean water and consult with a doctor
- The earpiece may become warm during normal use. The handset itself may become warm while the battery is being charged
- Use a damp or anti-static cloth to clean the handset. Do not use a dry cloth or electrostatically charged cloth. Do not use chemical or abrasive cleaners as these could damage the phone
- Retain the cardboard packing supplied with this handset. It should be used if the phone has to be returned for service. This packaging can be recycled when no longer required
- Remember to make backup copies of all important data on your handset
- Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.

Aircraft safety

In accordance with CAA regulations, you must switch off your phone on aircraft. Mobile phone signals can interfere with aircraft equipment. Follow the instructions given by airline staff at all times

Hospital safety

Switch off your phone in areas where the use of handsets is prohibited. Follow the instructions given by the respective medical facility regarding the use of handsets on their premises

General safety

- Observe 'Turn off 2-way radio' signs, such as those near petrol stations, chemicals or explosives, and turn off your handset
- Do not allow children to play with the handset, charger or batteries
- Do not use the handset where blasting is in progress
- The operation of some medical electronic devices, such as hearing aids and pacemakers, may be affected if a handset is used next to them. Observe any warning signs and the manufacturer's recommendations

Avoid damage to your hearing

- Damage to your hearing can occur if you are exposed to loud sound for long periods of

time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Road safety

- You MUST exercise the proper control of your vehicle at all times. Give your full attention to driving
- Observe all laws in respect to the use of mobile phones when driving
- Pull off the road and park before making or answering a call where it is safe to do so. UK law prohibits the use of hand held mobile phones when driving
- You MUST NOT stop on the hard shoulder of a motorway to answer or make a call, except in an emergency

Emergency Services and Safety Precautions

- Switch off your handset at refueling points and petrol stations, even if you are not refueling your own car
- Do not store or carry flammable or explosive materials near your handset
- Electronic vehicle systems, such as anti-lock brakes, speed control and fuel injection systems are not normally affected by radio transmissions
- The manufacturers of such equipment can advise if it is adequately shielded from radio transmissions. Consult your dealer and do not switch on the handset until it has been checked by qualified installers

Vehicles equipped with an air bag

An air bag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result

Third party equipment

The use of third party equipment, cables or accessories, not made or authorised by LG, may invalidate the warranty of your handset and also adversely affect the handset's safety or operation

Service

The handset, batteries and charger contain no user-serviceable parts. LG recommend that your LG U890 handset is serviced or repaired by an LG authorised service centre

Efficient use

The handset has an antenna. For optimum performance with minimum power consumption, please do not cover the antenna area with your hand. Covering the antenna affects call quality and may cause the handset to operate at a higher power level than required. This decreases talk and standby time.

Radio frequency energy

Your handset is a low-power radio transmitter and receiver. When it is turned on, it receives and transmits radio frequency (RF) energy (radio waves). The system that handles the call (the network) controls the power level at which the handset transmits.

- Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

- This handset model U890 has been designed to comply with safety requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health
- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using a standardised method with

the phone transmitting at its highest certified power level in all used frequency bands

 
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves
- The SAR limit recommended by the International Commission on Non ionising Radiation Protection (ICNIRP), is 2W/kg averaged over ten (10) gramme of tissue
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.616 W/kg (10g)
- The SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gramme of tissue (for example USA, Canada, Australia and Taiwan).

Getting Started

Using the Battery, Charger and USIM Card


Installing the Battery

To install the battery, insert the bottom of the battery (1) into the opening on the back of the phone, making sure that the references on the videophone (2) coincide. Push the battery (3) until the battery latch on the back of the videophone (3) clicks.

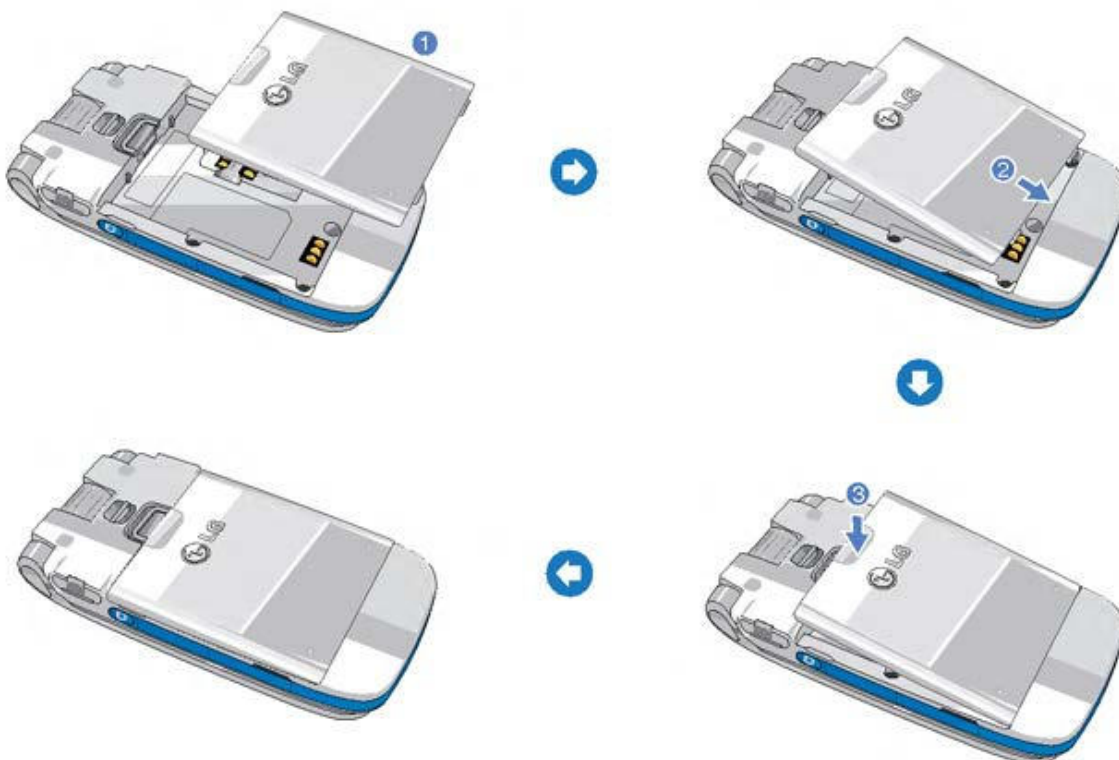

Removing the Battery

 Turn the power off. (If power is left on, there is a chance you could lose the stored telephone numbers and messages.) Press the latches ① and open the battery ②. Then remove the battery.

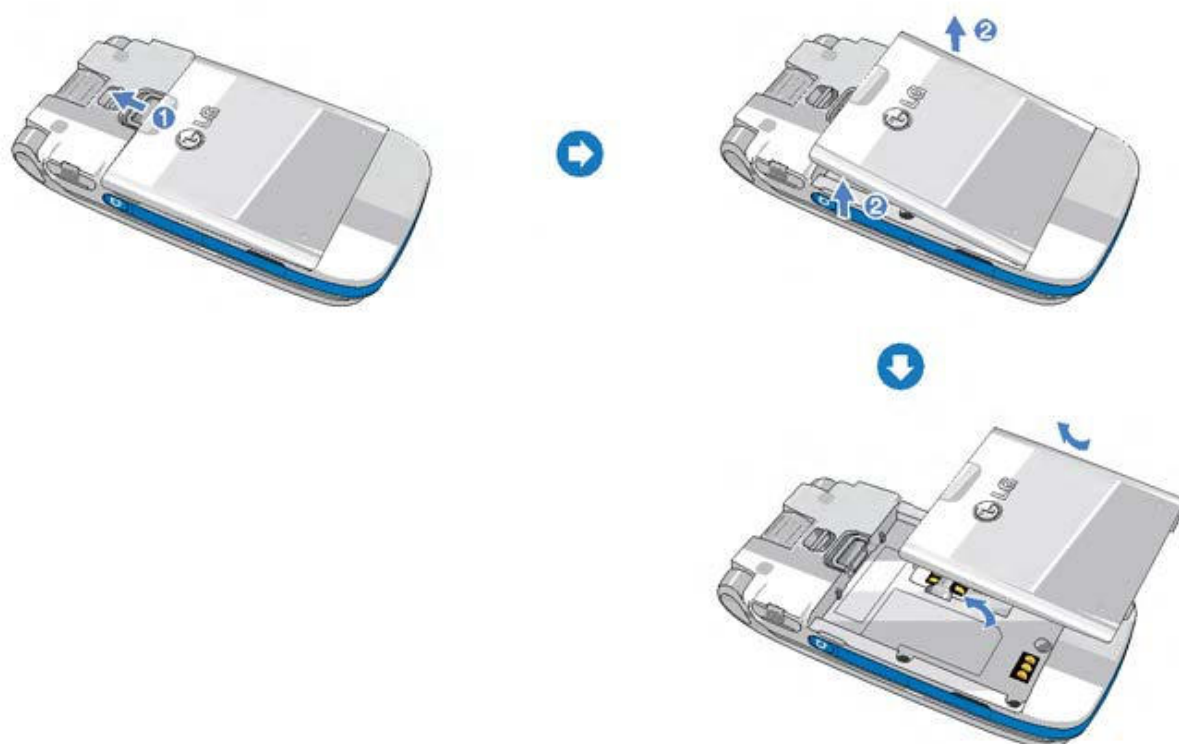

Getting Started

The battery is fully discharged, it will take approximately (under 30 minutes) to charge the battery to minimum operating level. When the red light is on, the handset can not be powered on. The red light will be off when the battery is charged to minimum operating level.

Warning

You can make video call with charger connected.

But if the battery capacity is under 10% the battery can be discharged when you use video call even though the charger is connected.

Charging the Battery

To use the charger provided with your phone:

1. With the battery in position on the phone, connect the lead from the charger to the side of the phone. Check that the arrow on the lead connector is facing towards the front of the phone.

2. Connect the charger to a standard AC wall outlet. Only use the charger that comes included with the package.



Warning

Do not force the connector as this may damage the phone and/or the charger.

Disconnecting the Charger

When charging is finished, disconnect the charger from the power outlet and from the phone by pressing on the grey tabs on both sides of the connector while pulling the connector out.



Notice

The battery delivered with your phone has to be fully charged before using it. Do not remove the battery or the USIM card while charging.

If your phone is being charged, the display will show the charging status.

If the battery fails to charge completely:

After turning the phone on and off, please attempt to recharge the battery.

After detaching and reattaching the battery, please attempt to recharge the battery.

Battery Information and Care

1. Never use a non LG approved battery as this could damage the phone and / or battery and could cause the battery to explode.
2. The battery does not need to be fully discharged before recharging.
3. Use only LG approved chargers specific to your phone model since they are designed to maximise battery life.
4. Do not disassemble or short-circuit the battery.
5. Keep the battery's metal contacts clean.
6. Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.

Getting Started

7. Recharge the battery after long periods of non-use to maximise battery life.
8. Do not expose the battery charger to direct sunlight or use it in areas of high humidity such as a bathroom.
9. Battery life will decrease if exposed to extremely hot or cold temperatures.
10. Battery life will vary due to usage patterns and environmental conditions.
11. The use of extended backlighting, Browser, and data connectivity kits affect battery life and talk/standby time.
4. When setting the theme of the idle screen, do not set the theme stored on the external memory directly to the idle screen, but only after copying it to the phone memory.
5. When setting pictures or photos stored on the external memory as the main theme, please perform the normal turning off procedure before removing external memory.

Memory Information and Care

 
1. Please be very careful to turn off the power before removing the battery while the phone or the external memory is being used.
2. Do not remove memory while listening to music or displaying pictures stored on the external memory.
3. When formatting on the PC, format on FAT types. The external memory only supports FAT (FAT12, FAT 16) format and not FAT32.

Installing the USIM card

Your USIM card contains your phone number, service details and contacts and must be inserted into your handset.


If your USIM card is removed then your handset becomes unusable until a valid one is inserted. Always disconnect the charger and other accessories from your handset before inserting and removing your USIM card.

Your USIM card may only be used in handsets which are enabled for 3 services. Any attempt to use the USIM card in other handsets may result in serious damage to the handset and may prevent you from being able to use it, including the making of emergency calls.

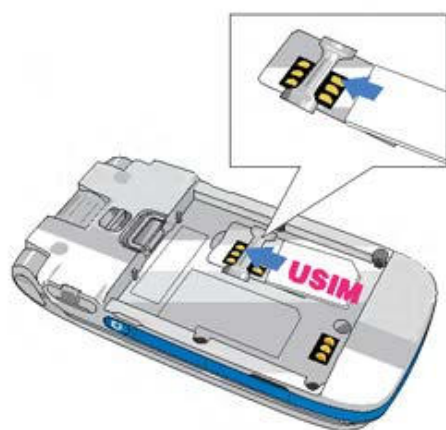

Notice

 When you need to remove the USIM card, slide it towards the top of the phone and take it out of the holder.

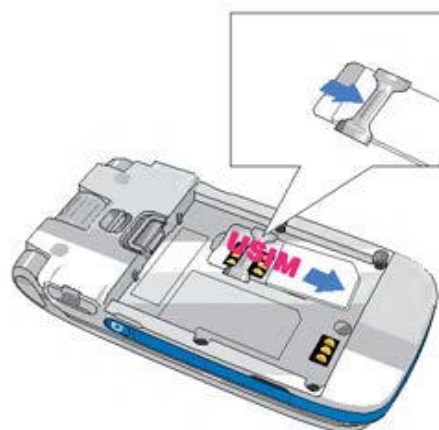


Notice

Before installing always make sure that the phone is switched off and remove the battery. The metal contact of the USIM card can be easily damaged by scratches. Pay special attention to the USIM card while handling and installing. Follow the instructions supplied with the USIM card.

Getting to know your LG U890

 Familiarise yourself with its features



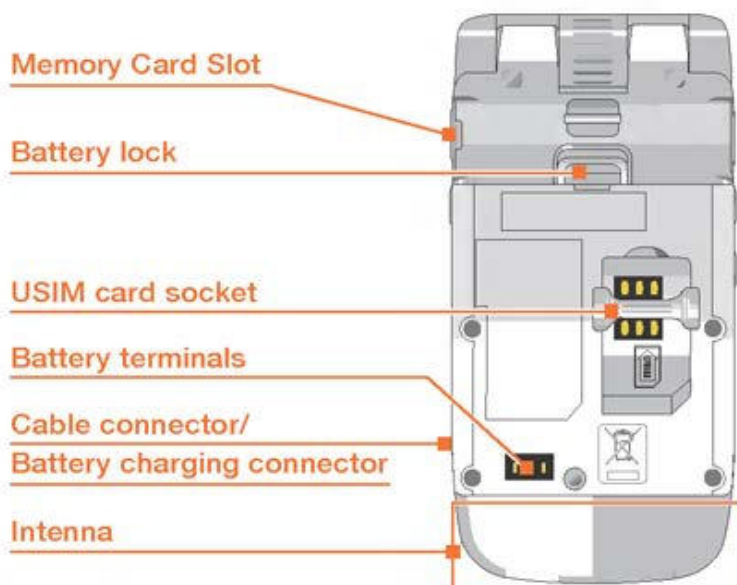

Advice to the customer

In order to allow better antenna sensitivity LG suggest that you hold the handset as depicted in the figure below.



please do not cover the antenna area with your hand during a call and using a bluetooth connection. It may degrade speech quality.

Getting to know your LG U890

Your handset's home screen

Your handset's home screen is divided into three basic displays: the icon indicator bar; a central window that includes the home screen; and the prompt bar. Each of these is described below:



The icon indicator bar

The icon indicator bar shows what operations are currently taking place, it also displays the status of the battery and signal strength. This appears through all activities. The table below gives a brief explanation of the icons and their function.

The home screen

The central window of your start screen displays an image of your choice, when in use, this screen will display all of your functions and services.

The prompt bar

The prompt bar displays in the soft boxes. These are activated by pressing the appropriate soft key under each one.

Instant Viewer

When the Instant Viewer is enabled, you can view some graphic information supplied by the network provider in the lower part of the idle screen - refer to page 40 for more information.

Display Information

The table below describes various display indicators or icons that appear on the phone's display screen.

On-Screen Icons

Icon	Description	Icon	Description
	Battery level - indicates the amount of power in your battery. The greater the amount of solid colour the greater the power.		2G network - indicates the strength of your handset's connection with a 2G network.
	Call diverting - indicates call divert option has been selected.		No-service area - indicates you are in the no-service area.
	Call reject - indicates call reject option has been selected.		Roaming service - indicates that you are using a roaming service.
	Voice message - indicates when you have a new voice message (This symbol may not appear in your 3 region).		ExpressLink message - indicates that there is new ExpressLink content.
	Text - indicates when you have a new text message.		Indicates the Bluetooth connection is activated.
	Multimedia - indicates when you have a new Multimedia message.		Alarm - indicates an Alarm.
	3G network - indicates whether you are in the 3 video service area.		Normal - indicates the General profile is activated
	When you leave the 3 video service area, your handset roams onto the voice & picture network or when abroad onto another network(2G/3G)		Silent - indicates the silent menu in Profile.
			Vibrate only - indicates whether the vibrate function is on or off.
			Headset - indicates the headset menu in Profile.
			Outdoor - Indicates the loud profile is activated.
			Indicates activation of the Multitasking function.

Getting to know your LG U890

Your handset's keys and navigation



(1) The Menu key

This key takes you to the main menu from any screen.

(2) The navigation key

Use for quick access to phone functions.

(3) The OK key

The button in the centre of the Navigation key allows you to select objects on the screen. Once you have scrolled to your desired choice use the OK key to select it. This function can be used in the majority of screens.

(4) The Triangle key

This key is your one-touch access to Today on 3, a world of communications, information and entertainment.

(long press) Try to register on 3 network.

(5) The Send key

This key is used to make and answer voice calls.

(6) The End key (On/Off)

This key is used to end calls and close down applications.

(7) The Clear key

This key has three functions. It will take you back to your previous screen and when in a text entry screen, it acts as a delete key. You can use the integrated Speakerphone during a call by press hold the  key. For further details, see the page 29.

(8) The soft keys

The left and right soft keys activate the prompts that appear in the soft boxes directly above them. These prompts change according to the screen content.

(9) The Video call key

 
To make and answer a video call.

(10) The Back key

This key takes you back to the previous screen.

Function of keys when phone is idle

Side of handset Keys

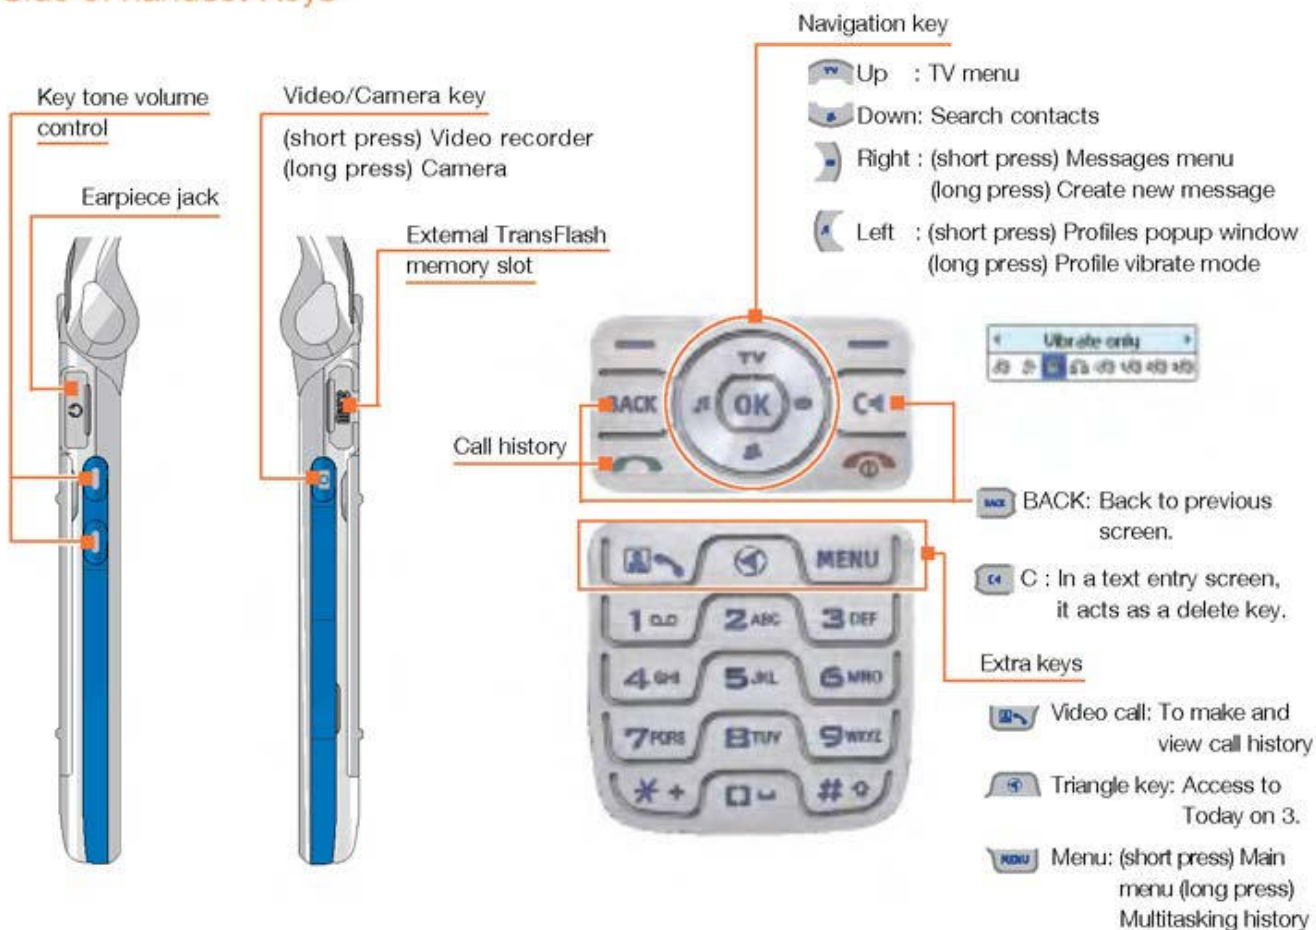

General Functions

Turning your handset on

Ensure that your USIM card is in your handset and the battery is charged.

Press the  key.

Enter the USIM PIN code that was supplied with your USIM card if PIN code setting is on.

After a few seconds you will be registered on the network.

Turning your handset off

Press and hold the  key until power is off.

There may be some delay while the handset powers down.

Do not re-power the handset during this time.

Access Codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu 3.4.3].

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your USIM card against unauthorised use. The PIN code is usually supplied with the USIM card. When the PIN Code Request is set to Enable, your phone will request the PIN code every time it is switched on. When the PIN Code Request is set to Disable, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some USIM cards, is required to access functions such as Fixed Dial Number. These functions are only available if supported by your USIM card.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to unlock a blocked PIN code. Contact 3 Customer Services for the code.

PUK2 code (4 to 8 digits)

The PUK2 code, is required to unlock a blocked PIN2 code. Contact 3 Customer Services.

Security code (4 to 8 digits)

The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to restore the handset to factory setting.

Barring Password

The barring password is required when you use the call barring function. The password is obtained from the 3 Customer Services when you subscribe to this function.

Making and Answering calls

Ensure you tell the other party before recording a voice call.

Making and Answering a video call

You can make/answer a video call to a 3G video phone the other party must have a 3G video phone and be in a video service area.

To make/answer a video call, do the following.



1. Input the phone number using the keypad, or select the phone number from the calls made/received lists.

Note

To correct mistakes, press the  key briefly to delete the last number, or press and hold the  key to delete all numbers.

2. If you do not want to use the speakerphone, ensure you have the headset plugged in.

General Functions

Note

The video call may take some time to connect. Please be patient. The connection time will also depend on how quickly the other party answers the call. While the video call is connecting, you will see your own images; after the other party has answered, their image will be displayed on screen.

3. Adjust the camera position if necessary.
4. Press the end key to finish the call, or close the handset.

Making a voice/video call

1. Make sure your handset is powered on.
2. Enter the number including the full area code.
 - To delete a digit press the  key.
 - To delete all digits press and hold the  key.
3. Press the  key to make a voice call.
Press the  key to make a video call.
4. Press the  key to finish the call, or close the handset.

Note

To activate the speakerphone during a Voice call, you have to press and hold the  key for at least 2 secs.

Making a voice/video call from Contacts

It is easy to call anyone whose number you have stored in your Contacts.

Press the down navigation key to access contact list.

Scroll to your chosen contact and press the  key. To make a voice call press the  key.

To make a video call press the  key. Press the  key to finish the call.

Making International Calls

1. Press and hold the  key for the international prefix. The '+' character can be replaced with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press the  key.

Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the side keys of the handset. In idle mode with the flip cover open, you can adjust the key volume using the side keys.

Answering a Call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if stored in your Contacts) is displayed.

1. Open the flip and press the  key to answer an incoming call.
If the **Press any key** menu option has been set to  key, **Press any key** will answer a call except for the  key.

Notice

- To reject an incoming call, press and hold down the side key on the left side twice of the handset without opening the flip (See page 115). If the flip is open, press the  key or the right soft key twice.
- If the **Open flip** menu option ((Menu #.9.4) is

simply by opening) is on , you can answer the call simply by opening the flip.

2. End the call by closing the handset or pressing the  key.

Notice

You can answer a call while using the Contacts or other menu features.

Using the Speakerphone

You can use the integrated Speakerphone during a call by press hold the  key. The loudspeaker is automatically deactivated when you end the call.

Warning

Due to higher volume levels, don't place the phone near your ear while the speakerphone is enabled.

Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator see the strength () on your handset's display screen.

General Functions

Entering Text

You can enter alphanumeric characters using the keypad.

For example, storing names in the Contacts, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text.

Following text input methods are available in the handset.

Changing the Text Input Mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the display.
2. Short pressing the  key cycles between , , ,  and .

Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the handset begins to display the characters that it thinks you are typing based on a built-in

dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
- The word changes as letters are typed - ignore what's on the screen until the word is typed completely.
- If the word is still incorrect after typing completely, press the  key once or more to cycle through the other word options.

Example

Press     to type Good

Press the  key to get Home

- If the desired word is missing from the word choices list, add it by using the ABC mode.
2. Enter the whole word before editing or deleting any keystrokes.
3. Complete each word with a space by pressing the  key.

To delete letters, press the  key.
Press and hold down the  key to erase entire words.

Using the ABC Mode

Use the  to  keys to enter your text.

1. Press the key labeled with the required letter:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. To insert a space, press the  key once.
To delete letters, press the  key. Press and hold down the  key to clear the display.

Using the 123 (Number) Mode

The 123 Mode enables you to enter numbers in a text message(a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Using the Symbol Mode

The symbol mode enables you to enter various symbols or special characters.

To enter a symbol, press the  key. Use the navigation and numeric keys to select the desired symbol and press the  key.



General Functions

Character chart

General text entry rules for use with the abc mode.

Use the keypad to enter letters, numbers, symbols, and other characters with the abc mode. Press the same key repeatedly to cycle through available characters.

If you do not press a key for 2 seconds, the character in the block cursor is accepted, and the cursor moves to the next position.

Notice

Refer to the table below for more information on the characters available using the keys.

Key	Characters in the Order Display	
	Lower case	Upper case
	@:/.	@:/.
1	.,?!' "1-()@/:_	.,?!' "1-()@/:_
2	abc2àáâãäåæç	ABC2ÀÁÂÃÄÅÆÇ
3	def3èéêë	DEF3ÈÉÊË
4	ghi4ìíîï	GHI4ÌÍÎÏ
5	jkl5Ĳ	JKL5Ĳ
6	mno6ñòóôõöøœ	MNO6ÑÒÓÔÕÖØŒ
7	pqr7ß\$	PQR7ß\$
8	tuv8ùúûü	TUV8ÙÚÛÜ
9	wxyz9	WXYZ9
0	space0	space0

Menu tree

Your handset offers a set of functions that allow you to use and customise the handset. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked left soft key  and right soft key .

Each menu and sub-menu allows you to view and alter the settings of a particular function. The roles of the soft keys vary according to the applications and services; the label on the bottom line of the display just above each key indicates its current role.



Press the left soft key to access the available 3Player.

Press the right soft key to access the available internet.

Menu tree

1. Screen (see page 40)

1.1 Screen theme

- 1.1.1 Home screen
- 1.1.2 Outgoing call
- 1.1.3 Switch on
- 1.1.4 Switch off

1.2 Front screen theme

- 1.2.1 Home screen
- 1.2.2 Outgoing call

1.3 Menu style

1.4 Font

1.5 Backlight

1.6 Handset theme

- 1.6.1 Normal
- 1.6.2 Extreme

1.7 Greeting message

2. Profiles (see page 44)

2.1 Normal

2.2 Silent

2.3 Vibrate only

2.4 Outdoor

2.5 Headset

2.6 Customised 1

2.7 Customised 2

2.8 Customised 3

3. Settings (see page 48)

3.1 Date & time

- 3.1.1 Time
- 3.1.2 Date
- 3.1.3 Auto update date/time
- 3.1.4 Daylight saving

3.2 Network

- 3.2.1 Select network
- 3.2.2 Location mode
- 3.2.3 Preferred lists

3.3 Access points

3.4 Security

- 3.4.1 PIN code request
- 3.4.2 Handset lock
- 3.4.3 Change codes

3.5 Language

3.6 Memory status

3.7 Handset information

3.8 Reset settings

- 3.8.1 Clear memory
- 3.8.2 Default setting

Example: Accessing the Font menu.

1. Press the  (Menu) key.
2. Press the  key for Screen.
3. Press the  key for Font.

4. Browser (see page 54)

4.1 Home

4.2 Bookmarks

4.3 Saved pages

4.4 Go to URL

4.4.1 Enter address

4.4.2 Recent pages

4.5 Security

4.5.1 Certificates

4.5.2 Session clear

4.6 Settings

4.6.1 Profiles

4.6.2 Character encoding

4.6.3 Scrolling control

4.6.4 Show Image

4.6.5 Cache

4.6.6 Cookies

4.6.7 Clear cache

4.6.8 Clear cookie

5. Messages (see page 60)

5.1 Create new message

5.1.1 Text message

5.1.2 Multimedia message

5.1.3 Email

5.2 Inbox

5.3 Mailbox

5.4 Drafts

5.5 Outbox

5.6 Sent items

5.7 Templates

5.8 Emoticons

5.9 Settings

5.9.1 Text message

5.9.2 Multimedia message

5.9.3 Email

5.9.4 Videomail

5.9.5 Voicemail

5.9.6 ExpressLink

5.9.7 Info. Service

6. My stuff (see page 72)

6.1 My images

6.2 My videos

6.3 My sounds

6.4 Applications

6.5 My bluetooth files

6.6 My memory card

6.7 Play lists

7. Multimedia (see page 80)

7.1 Video camera

7.2 Camera

7.3 Voice recorder

Menu tree

8. Contacts (see page 84)

- 8.1 Add new
- 8.2 Search
- 8.3 Speed dials
- 8.4 Groups
- 8.5 Service dial numbers
- 8.6 Own number
- 8.7 Settings
 - 8.7.1 Display data
 - 8.7.2 Show image/avatar
 - 8.7.3 Copy all
 - 8.7.4 Move all
 - 8.7.5 Clear contacts

*. Organiser (see page 92)

- *.1 Calendar
- *.2 To do
- *.3 Memo
- *.4 Secret memo
- *.5 Date finder
- *.6 Dateulator
- *.7 Settings
 - *.7.1 Calendar
 - *.7.2 Memory info.
 - *.7.3 Clear all

0. Tools (see page 100)

- 0.1 Quick menu
- 0.2 Alarm clock
- 0.3 Connectivity
 - 0.3.1 Bluetooth
 - 0.3.2 Server synchronisation
 - 0.3.3 Dial-up network
- 0.4 Calculator
- 0.5 World time
- 0.6 Unit converter

9. Applications (see page 88)

- 9.1 My games & apps
- 9.2 Download games & apps
- 9.3 Settings

#. Calling (see page 110)

#.1 Video calls

#.2 Call history

#.2.1 Missed calls

#.2.2 Received calls

#.2.3 Dialed calls

#.2.4 All calls

#.3 Call duration

#.4 Call costs

#.5 Call divert

#.5.1 Voice calls

#.5.2 Video calls

#.5.3 Deactivate all

#.6 Call barring

#.6.1 Voice calls

#.6.2 Video calls

#.6.3 Deactivate all

#.7 Fixed dial numbers

#.8 Call waiting

#.8.1 Activate

#.8.2 Deactivate

#.8.3 View status

#.9 Settings

#.9.1 Call reject

#.9.2 Send my number

#.9.3 Auto redial

#.9.4 Answer mode

#.9.5 Minute minder

#.9.6 BT answer mode

Screen

1

1. Press the  (Menu) key.
2. Press the  key for Screen.



Screen

This menu allows you to personalise the display options of the screens and of the menus' entire graphic interface.

Screen theme

Home screen

- **Instant Viewer:** Select "ON" to activate the active desktop's display function.

Instant Viewer

When the **Instant Viewer** is enabled, you can view some graphic information supplied by the network provider in the lower part of the idle screen.

In order to enable **Instant Viewer**, press the OK key, then scroll contents using the right/left navigation keys.

After selecting desired contents, press the OK key in order to directly access published content.

- **Wallpaper:** You can select an image to set up as a background.

- **Display items:** You can select what items to display on the screen: date and time, date, clock or dual clock.

Outgoing call

You can select the image to be displayed while dialling a number.

Switch on

You can select the image to be displayed while the videophone is being switched on.

Switch off

You can select the image to be displayed while the videophone is being switched off.

Front screen theme

Home screen

- **Wallpaper:** You can select an image to be displayed on the external display.
- **Clock type:** You can choose whether or not to display the clock on the screen, or between small and large type clock.

- **Clock font color:** If you choose the small clock display, you can select from among 16 available colours.

Outgoing call

You can select the image to be displayed while dialling a number.

Menu style

- **Grid:** The main menu will display all the menu items/icons at once.
- **One by one:** The main menu will display all the menu items in rotation, one at a time.

Font

- **Font style:** Allows you to set the character style, choosing between classic and the more modern Fun Style.
- **Dialing font size:** Allows you to set the character size, choosing between Large and small.
- **Dialing font color:** Allows you to select from among 16 available character colours.

Backlight

Allows you to set backlight duration, selecting from the following options: 5, 10, 15, 30 seconds, 1, 2, 3 minutes, On, and no always Off.

- **Main screen duration**
- **Front screen duration**
- **Keypad duration**

Item	Default Value
Main screen duration	Off 5 seconds 10 seconds 15 seconds 30 seconds 1 minute 2 minutes 3 minutes On
Front screen duration	Off 5 seconds 10 seconds 15 seconds 30 seconds 1 minute 2 minutes 3 minutes
Keypad duration	Off 5 seconds 10 seconds 15 seconds 20 seconds On

Screen

Handset theme

Normal

Classic videophone theme.

Extreme

Modern, extremely catchy theme.

Greeting message

You can write a text message to be displayed when the videophone is switched on.



Profiles 2

1. Press the  (Menu) key.
2. Press the  key for Profiles.



Profiles

The profiles menu allows you to personalise and set call tones, message tones, and videophone event tones.

The General and Loud profiles are preset by the manufacturer, but may be personalised.

The Silent and Vibration profiles are preset and CANNOT be personalised by the User.

User define menus 1,2, and 3 are completely available to users for all their needs.

1. Normal
2. Silent
3. Vibrate only
4. Outdoor
5. Headset
6. Customised 1
7. Customised 2
8. Customised 3

The profiles may be personalised in the following menus:



- **Alert by:** You can personalise the type of signal made by the Videophone, choosing between Ring, Vibration, Silent, Ring & Vibration, Ring after vibration and Max Ring & Vibration.
- **Voice ringtone:** You can select a file from among your own personal files or from the default files, to be played by the videophone when receiving a voice call.
- **Video ringtone:** You can select a file from among your own personal files or from the default files, to be played by the videophone when receiving a video call.

- **Volume:** You can set the ring tone volume, choosing from 7 available levels.
- **Message alert:** You can set how often the videophone is to inform you of a received message until it is read.
- **Message tone:** You can select a file from among your own personal files or from the default files, to be played by the videophone upon receiving a message.
- **Key tone:** You can set the effect to be played when pressing the keys.
- **Key tone volume:** You can set the volume of the chosen effect, choosing from 7 available levels.
- **Flip tone:** You can select one of the available files, to be played by the videophone when flipped open.
- **Confirmation tone:** You can set the confirmation tone to be played by the videophone to confirm actions.
- **Switch on sound:** You can set the effect to be played when the videophone is switched on.
- **Switch on file:** You can select which file will be played when the videophone is switched on.
- **Switch off sound:** You can set the effect to be played when the videophone is switched off.
- **Switch off file:** You can select which file will be played when the videophone is switched off.



Settings 3

1. Press the  (Menu) key.
2. Press the  key for Settings.

Settings

Date & time

 
You can change the format of the time and date display as well as the actual time and date using the Time settings menu.

Time

1. Select the Time item from the handset settings list and then press the **OK** key.
2. Input the current time using the numeric keys.
3. Select the time format using the left and right navigation keys.
4. Press the **Save** key to save the time.

Date

1. Select the Date item from the handset settings list, and then press the **OK** key.
2. Input the date using the numeric keys.
3. Select the date format using the left and right navigation keys.
4. Press the **Save** key to save the date.

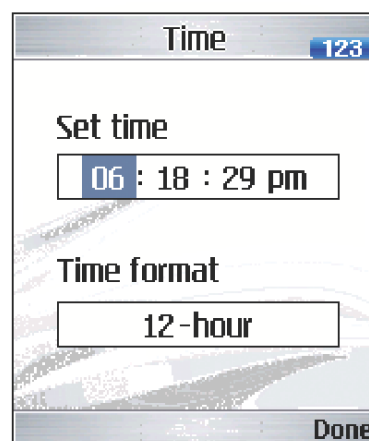

Note

Please make sure that you set the exact date and time to ensure that all 3 services operate correctly.

Auto update date/time

When Auto Update is configured to On, the time and date are automatically updated according to the current time zone. If Confirm first is selected, time and date update are confirmed before the automatic update.

Daylight saving

This function enables Summer time. Configuring Daylight saving to On immediately applies summer time for the cities which observe daylight saving and currently daylight saving period is running. (For example, if the current time is 04:53 and daylight saving is running in the currently selected home city in World time then time will change to 05:53).

Network

Select network

- **Automatic:** This function automatically searches for the network and registers the handset to the network.
- **Manual:** This function enables you to search the network list and specify which network to attempt registration with.

Location mode

You may have multiple data connections active at the same time when you are using your phone in 3G only, 3G/GSM and GSM networks.



Preferred lists

You can select preferred lists to display it saved in the current USIM card and can edit the current preferred list.

Access points

This menu shows the Access Point List. Select the **OK** key [Edit]. Access Point has the following items.

- **Connection title:** Profile Name
- **Bearer:** UMTS/CSD/GPRS
- **Authentication:** No auth/PAP/CHAP

Settings

- **Username:** User name
- **Password:** Password
- **APN:** APN information of the service provider

To modify these settings please call 3 Customer Service.

Security

You can set a PIN code. When it is activated, a window asking you to enter the PIN code appears when you turn on the handset so as to prevent unauthorised use of the handset.

PIN code request

You can activate a PIN (Personal Identification Numeric).

1. Select PIN code request from the security menu and press the **OK** key.
2. Configure this item to On or Off. If it is On, a PIN code will be required whenever the handset is turned on.
3. Input the current PIN code and press the **OK** key.

4. Entering an incorrect PIN code 3 times in the PIN code input window invalidates the PIN code. In this case, the PUK code must be entered in order to reset the PIN code.
5. The maximum number of attempts at PUK code input permitted is 10. Entering an incorrect PUK code 10 times will restrict use of the handset. In this case, ask 3 Customer Service to unlock your handset.

Press the Back key in the PIN code input window to return to the previous step.

Handset lock

You can use security code to avoid unauthorised use of your handset.

When you switch on your handset, your handset will request security code always if you set phone lock to "Power on".

You can select the menu from **When switching on, If USIM changed, Immediate**, and **None**.

Change codes

You can change PIN, PIN2 and the security code.

Note

If you change the code and then forget it you will need to contact your place of purchase to unlock it or solve this problem.

■ **PIN/PIN 2 code:** This menu allows you to change the PIN or PIN2 code.

1. Select Change codes from the Security Settings List and press the **OK** key.
2. Select PIN or PIN2 Code and press the **OK** key.
3. Input the current PIN or PIN2 code, and then a new PIN or PIN2 code. Entering an incorrect PIN code 3 times invalidates the PIN code. In this case, you will need to enter the PUK or PUK2 code in order to reset the PIN code.
4. Entering an incorrect PUK code 10 times will restrict use of the handset. In this case, ask 3 Customer Service to unlock your phone.

■ **Security code:** This menu allows you to change the handset password. The maximum allowed numeric of attempts of security code input is not limited like PIN and PIN2.

Language

This function allows you to set the language used in the handset.

Memory status

This menu is used to view the memory use of the phone and USIM card. You can obtain information about the amount of memory used by the contacts, the calendar, to do, memos, secret memos and text message and multimedia messages.

Settings

Common memory

This function shows the status of the user memory of the handset.

Reserved memory

This function shows the available memory for the user.

USIM memory

This function shows the status of the USIM card user memory.

External Memory

 
This function shows the status of the external memory card.

Format External Memory

This function will format the external memory.

Handset information

This menu is used to view phone number,model number and software version information.

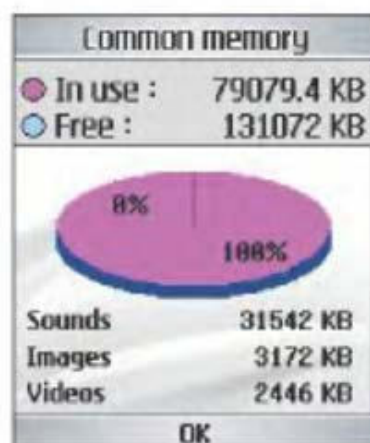

Reset settings

This function allows you to restore factory settings.

Browser 4

1. Press the  (Menu) key.
2. Press the  key for Browser.



Browser

3 brings you a whole world of communications, information and entertainment services.

You can ask for directions within major cities, get the latest news, keep up to date with sports action and much, much more.

The browser is available in the 3G coverage area.

To launch the browser in standby mode, press the  key.

Home

Select Home in the Internet Menu and then press the  key.

If you want to reload current page, press the right soft key [Reload].

The following options are available. Press the left soft key [Options].

-  **Back:** Moves to the previous page.
-  **Forward:** Moves to the previous page.
-  **Reload:** Loads the current page again.
-  **Home:** Moves to the initial homepage.

-  **Go to URL:** Connect to the specific URL after editing.
-  **Bookmark:** You can add or save the current page to the Bookmark or view the list saved under Bookmark.
-  **Settings:** You can set the Browser related options such as Clear cache, Session info., Clear cookies, etc.

The following example shows the functionality of browser menu 'Forward'.

1. Navigation Page A → Page B → Page C → Page D
2. On Page D, select a menu 'Back', it will place a user in Page C.
3. On Page C, if select a menu 'Back', move to Page B. Else if select a menu 'Forward', move to Page D again.

Bookmarks

This function allows you to store and edit frequently accessed sites.

The following options are available. Press the left soft key [Options].

Connect

Allows you to access the selected site.

Send

Selected bookmark URL can be sent via text message or multimedia message.

Add new

Adds a new site to the bookmarks list.

Edit

You can edit and save the name and address of the selected bookmark.

Mark/Unmark

Allows you to mark or unmark the selected site.



Delete

Delete the selected bookmark.

Saved pages

Saves the page on display as an off-line file. A maximum of 20 pages can be saved.

Go to URL

Connect to the specific URL after editing.

Browser

Security

- **Certificates:** A list of the available certificates is shown.
- **Session clear:** Allows you to close the security connection.

Settings

Profiles

Select the appropriate profile by pressing the **OK** key. This will activate the profile to initiate browser launch.

Character encoding

Sets the browser default character set to one of the following.

: Automatic, English(ASCII), English(ISO), English(LATIN), Unicode(UCS2 BE), Unicode(UCS2 LE), Unicode(UCS2 Auto), Unicode(UTF-16 BE), Unicode(UTF-16 LE), Unicode(UTF-16 Auto), Unicode(UTF-8).



Scrolling control

Allows you to set the scroll speed by selecting the number of lines to scroll. Select from **1 line**, **2 lines** and **3 lines**.

Show Image

Allows you to enable or disable image display during browsing.

Note

Enabling this function will delay displaying of images until the completion of transmission. Disabling this function will prevent the browser

from downloading images from the server, thus allowing faster transmission.

Cache

Enabling Cache allows you to store accessed pages to your phone. Once a page has been stored in cache it will greatly enhance the page loading speed on subsequent browsing of the same page.

Cookies

Enabling Cookies allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on your phone.

Clear cache

Deletes all web pages previously stored in cache.

Clear cookie

Deletes all previously stored cookies.

Live Streaming

This application plays streaming in live. To have a pleasure time with this, you must launch browser first, access to entertainment services and find the live streaming menu.

When you press streaming icon, the mobile terminal shows a live streaming automatically

VCR Control

If the streaming is in live, the mobile terminal shows VCR control skin with live bar.

 : Play and Pause alternately.

OPTION

Press the left soft key [Options] to display the following popup menu items.

1. File info.: Shows information about the current content provided by streaming server
2. Wide view: Normal/Landscape (for normal video) or Normal/Zoom/Landscape (for small size video)
3. Mute/ Unmute key : Mute/unmute the sound temporarily.

Browser

Normal Streaming

Normal streaming is very similar to live streaming. To enjoy this service , you must launch the browser, access to entertainment services and select the normal streaming menu such as news, stock, music, weather etc.

3. Mute/ UnMute key: Mute/unmute the sound temporarily.

The **OPTION** is same as live streaming.

VCR Control

If the streaming is not in live, the mobile terminal shows VCR control skin with current play time

1.  : Play and Pause alternately.
2. Navigation left/right key: You can go forward/backward with this key more rapidly. The following example shows the functionality of streaming menu "FF/REW"
 - press FF/REW Key during the streaming, the mobile terminal makes video paused.
 - press more FF/REW Key , the mobile terminal display the new time and progress bar immediately. (user can select new time with FF/REW Key)
 - if there is no press Key more, then the mobile terminal start streaming with new time.

A black and white photograph of two men sitting on a boat. The man on the left is older, with white hair, wearing a white t-shirt and jeans, and is smiling while holding a small object. The man on the right is younger, with dark hair, wearing a polo shirt and shorts, and is also smiling. They are both looking towards the right. The background shows a body of water and some trees in the distance.

Messages 5

1. Press the  (Menu) key.
2. Press the  key for Messages.

Messages

Create new message

Text message

Press the Message shortcut key to display Messages menu, select **Create new message** and then select **Text message**.

You can write and edit a single text message up to 160 characters. You can write and edit up to 7 concatenated messages.

1. Press the left soft key [Options]/ [Add contacts] or use the **OK** key [Contacts] to specify the recipient from Contacts.
2. When you input content, a new window allowing you to input content appears. By using the left soft key [Options]/[Insert], you can input emoticons, templates, and phone numbers through the Contacts. By using the **OK** key on the bottom, you can input various symbols.
3. When the message has been sent, it will be saved in the Sent items automatically. If the message has not been sent, it will stay in the Outbox with fail status.



Multimedia message

Creating a Multimedia message

Select Messages from the top menu or pressing the Message shortcut key displays the message menu. In the menu, select New message, and then select Multimedia message and create a Multimedia message.

You can simply send picture with a Multimedia message attaching the picture from your album or directly from the multimedia menu.

Multimedia message

1. You can create a Multimedia message.
2. Select **Multimedia message** from the **Create new message** menu and then press the **OK** key.
3. You can edit a Multimedia message field using the Down navigation Key.
4. Move the highlight to the **To** field, and input the recipient of the message. You can specify the recipient by either phone number or Email address. You can search the Contacts by pressing the left soft key [Options] or the **OK** key [Contacts]. When a recipient has been specified, another field appears where you can add more recipients.
5. Move the highlight to the subject field, and write a title. You can select and input a template or emoticon by pressing the left soft key [Options] or use the **OK** key [Insert].
6. You can add, delete, or edit each slide by moving the highlight to the text field.
7. You can save the message in the Drafts by using the left soft key [Options] while creating a message.
8. You can preview the message by using the left soft key [Options] while creating a message.
9. You can send the message by selecting the right soft key [Send].
10. You can select the following functions using the left soft key [Options].
 - **Insert:** You can insert New slide, Symbol, Template, Emoticon, Contacts, Image, Video, Sound, New image, New video or New sound.
 - **Send:** Sends the created Multimedia message at the time you wanted.
 - **Save to drafts:** Saves the created Multimedia message to Drafts
 - **Preview:** Shows the created Multimedia message before sending it
 - **View objects:** Views the attachment file list.
 - **Set slide:** Changes the slide duration, Text color, Background color of each slide.
 - **Remove:** Removes attachment file or slide in the selected slide.

Messages

- **Move to Slide:** Directly moves to the chosen slide.
- **Dictionary:** Selects dictionary mode.
- **Add to dictionary:** Adds the writing string in dictionary.

Viewing Multimedia messages in the Preview and Drafts

1. You can preview a created Multimedia message.
2. If the message is too long to be displayed on screen, you can scroll the contents of the message by using the up and down navigation key.
3. Press the **OK** key to pause playback of the message, and press the **OK** key to resume playing the message.
4. If an audio or video file is attached to a Multimedia message, press the right soft key [Mute] to cancel the unmute function.

Viewing Multimedia messages in the Inbox and Sent items



1. Select a Multimedia message to view its contents.
2. If the message is too long to be displayed on a screen, you can scroll the contents of the message by using the up and down navigation key.
3. Press the **OK** key to pause playback of the message, and press the **OK** key to resume playing the message.
4. If an audio or video file is attached to a Multimedia message, press the right soft key [Mute] to activate the mute function. Press the right soft key [Mute] to cancel the unmute function.

When the multimedia message includes URL, you can try to connect the site. If the slide includes URL, you can connect the URL by long press **OK** key.

On the other hand, when you try to press the up or down navigation key, the slide show is paused automatically, and the right soft key menu option changes to "Link" if a URL is included in the slide. You can connect to the URL for browsing, downloading, and streaming.

5. Move to a desired message by using the left and right navigation keys.

6. Press the **OK** key to reply to the message.

7. You can select the following functions using the left soft key [Options].

- **Pause/Play:** Pauses/Plays the selected message.
- **Reply:** Creates reply to the selected message.
- **Forward:** Forwards the selected message.
- **Save address:** Saves the telephone number to Contacts.
- **Create new message:** Creates a new message.

■ **Use:** Extracts the phone number, Email address or web address included in the text of the message.

■ **View objects:** Shows the attachment file list.

■ **Delete:** Deletes the selected message.

■ **Move to Slide:** Moves to the desired slide.

■ **View detail:** Displays information about the selected message.

Email

To send an email, you should first set up an email account (For further details on how to set up an email account, see the page 69).

Message edit

1. Select **Email** from the Create new Message menu.
2. You can input up to 20 addresses in the To, Cc fields and up to 10 addresses in the Bcc field.

Messages

Tip

To input @, select the  key [Symbol], and then press 9 numeric key pad to input or press video call key.

3. Input the title of the mail to be sent in the Subject field.
4. Input the content of the mail to be sent in the Message field.
5. You can attach up to 4 files in a message.
6. When you have finished writing a message, press the  key. You can send the message to outbox for Background sending.

Inbox

1. You can view saved messages. Select a message and then press the  key to view the message.
2. You can view the previous or next message by using the left and right navigation keys.
3. To view a Multimedia message, select **Retrieve** in the message view screen. The message will begin downloading and will be displayed when it is finished.



4. You can use the following functions by using the left soft key [Options].
 - **Reply:** Creates reply to the selected message.
 - **Forward:** Forwards a selected message.
 - **View:** Views a selected message.
 - **Create new message:** Creates a new message.
 - **Mark/Unmark:** Marks or unmarks the selected message.
 - **Filter:** Views the filtered messages.
 - **Delete:** Deletes a selected message.

- **Move:** Moves a selected message.
- **Copy:** Copies a selected message.
- **Message Info.:** Displays information about the selected message.

Mailbox

1. Select Mailbox.
2. Select 3mail to retrieve messages from the Server List.
3. To retrieve new messages in the Mail Header screen, select Retrieve to retrieve the new Mail Header List.
4. Select your desired message from the retrieved mail headers to retrieve the mail contents from the server.

You can use the following functions by using the left soft key [Options].

- **Reply:** You can reply to a selected message.
- **Forward:** Forwards a selected message.
- **Save address:** Saves the sender's address to the contacts.



- **Create new message:** You can write a new message via SMS, MMS and Email.
- **Use**
 - Number: Extracts the phone number included in the text of the message.
 - Email address: View up to 10 email addresses contained in the text of the message. You can send a message or save as a contact by selected number.
 - Web address: View up to 10 URLs contained in the text of the message. You can connect to the URL or save it as a bookmark.

Messages

- **View objects:** Shows the attachment file list.
- **View to address:** Shows information in To/Cc/Bcc field.
- **Delete:** Deletes a selected message.

Drafts

1. You can edit saved messages. Select a message and then press the **OK** key to edit the message.
2. You can use the following functions by using the left soft key [Options].
 - **Edit:** You can edit a selected message.
 - **Create new message:** You can write a new message.
 - **Mark/Unmark:** You can mark or unmark the selected message.
 - **Filter:** Views the filtered messages.
 - **Delete:** You can delete a selected message.

Outbox - messages waiting to be sent

Outbox is a temporary storage place for messages waiting to be sent. When you press the Send, the message moves to the Outbox and from there the message is sent. If the message fails to be sent from the Outbox, another attempt will be made. After three attempts the message will no longer be sent automatically. In order to send the message that has failed three times, you must press the Resend from the Options menu.

Failed : The maximum number of sending attempts has been reached. Sending has failed. If you were trying to send a text message, open the message and check that the Sending options are correct.

Sent items

1. You can view sent messages. Select a message and then press the **OK** key to view the message.
2. You can view the previous or next message by using the left and right navigation keys.
3. You can use the following functions by using the left soft key [Options].

- **Reply:** Creates reply to the selected message.
- **Forward:** You can forward a selected message.
- **View:** You can view a selected message.
- **Edit:** You can edit a selected message.
- **Create new message:** You can write a new message.
- **Save address:** You can save the sender's address to the contacts.
- **Mark/Unmark:** You can mark or unmark the selected message.
- **Filter:** Views the filtered messages.
- **Delete:** You can delete a selected message.
- **Move:** Moves a selected message.
- **Copy:** Copies a selected message.
- **Message Info.:** Displays information about the selected message.

Templates

You can add, edit, and delete frequently-used phrases.

Emoticons

You can add, edit, and delete frequently used emoticons.

You can save emoticons that are frequently used in the input window in advance.

Settings

Text message

Text message centre

The number of the Text message gateway is pre-loaded in your 3 handset and you should not change this. If you delete or change this by mistake contact 3 Customer Services for support.

Delivery report

Allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.

Messages

Validity period

Allows you to set the length of time for which your text messages will be stored at the Text message centre while attempts are made to deliver them to the recipient.

Multimedia message

Select Multimedia message from the Settings menu to configure Multimedia message related options.

Delivery report

This menu allows you to determine whether to request a delivery confirmation mail to a recipient, and whether to allow sending delivery confirmation mail to a sender.

- Request report: Determines whether to request a delivery confirmation mail for a Multimedia message.
- Allow report: Determines whether to allow sending a delivery confirmation mail for a delivery confirmation mail request.

Read reply

This menu allows you to determine whether to

request a read confirmation mail to a recipient, and whether to allow sending read confirmation mail to a sender.

- Request reply: Determines whether to request a read confirmation mail for a Multimedia message.
- Allow reply: Determines whether to allow sending a read confirmation mail for a read confirmation mail request.

Priority

You can select the priority level of the messages (Low, Normal and High).

Validity period

This menu allows you to configure the term of validity for a message when transmitting a Multimedia message. The message will be saved in the Multimedia server only for the configured term.

Slide duration

This menu allows you to configure the duration of each page when writing the message.

Multi. msg centre

The details for the Multimedia gateway are pre-loaded onto your handset and should not be changed. If you change or delete these by mistake contact 3 customer services for support.

You can add or edit the profile of multimedia message except the default profile.

Email

This menu allows you to edit, delete and add an Email account.

To set up an Email account, do the following.

1. Select Messages/Settings/Email/Email accounts after pressing the  key in the idle screen.
2. Press the right soft key [Edit].
3. Enter details **Username** (your phone number with Country code without + eg 447782227302), **Password**, **Email address**, **Reply email address**, etc.
4. You can authenticate by pressing the right soft key [Done].



Once you have set up details of your other accounts, you can collect mail from those accounts by retrieving from Mailbox.

To retrieve an email, do the following:

1. Select the mail server you want to retrieve in the Mailbox.
2. Choose the email by using the navigation key.
3. Press the right soft key [Retrieve] or [Synch].
4. Press the  key.

