


HELLOMOTO

Introducing your new **MOTOKRZR K1** GSM wireless phone. Here's a quick anatomy lesson.

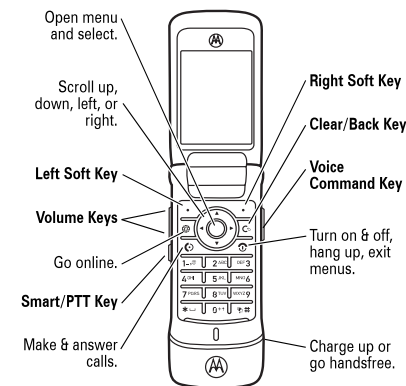

1

Home Screen



- 1 Press and hold the **Power Key** (⏻) for a few seconds or until the display lights up to turn on your phone.
- 2 Press the Centre Key (⬆) to open the **Main Menu**.

Main Menu



- 3 Press the Navigation Key **up, down, left, or right** (⬆) to highlight a menu feature.
- 4 Press the Centre Key (⬆) to select it.

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylised M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their

proprietor and used by Motorola, Inc. under licence. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. Microsoft, Windows and Windows Me are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation.

© Motorola, Inc., 2006.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for

copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any licence under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free licence to use that arises by operation of law in the sale of a product.

While Products specifications and features may be subject to change without notice, we are making every possible effort to ensure that user manuals are updated on a regular basis to reflect product functionality revisions. However, in the unlikely event that your manual version does not fully reflect the

core functionality of your product, please let us know. You may also be able to access up-to-date versions of our manuals in the consumer section of our Motorola web site, at <http://www.motorola.com>.

contents

menu map	7	essentials	21	main attractions	27
Safety Information	9	about this guide	21	take & send a photo . . .	27
Use and Care	18	SIM card	21	record & send a video . .	30
EU Conformance	19	battery	22	text messages	31
Recycling Information . . .	20	turn the phone on		Bluetooth™ wireless . . .	33
		& off	24	audio player	36
		make a call	25	memory card	36
		answer a call	25	cable connections	38
		store a phone		phone updates	40
		number	25		
		call a stored phone			
		number	26		
		your phone number . . .	26		

basics	41	calls	58	other features	68
display	41	turn off a call alert . . .	58	advanced calling	68
text entry	44	delay answering	58	phonebook	72
volume	47	recent calls	58	messages	78
navigation key	48	redial	60	instant messaging	81
smart key	48	return a call	60	personalising	82
voice commands	48	caller ID	60	call times & costs	84
external display	51	emergency calls	61	handsfree	85
handsfree speaker	51	voicemail	61	data & fax calls	86
codes & passwords . . .	52	push to talk (PTT) . . .	62	network	87
lock & unlock phone . . .	52			personal organiser	88
customise	53			security	90
ring style	53			fun & games	91
time & date	54			SAR Data	96
wallpaper	54			WHO Information	98
screen saver	55			index	99
themes	55				
display appearance . . .	56				
answer options	57				

menu map

main menu

Phonebook



Recent Calls

* (press the or to scroll through the call lists)



Messages

- New Message
- Email Msgs
- Message Inbox
- Voicemail
- Browser Msgs
- Info Services *
- Outbox
- Drafts
- Templates



Tools

- SIM Applications *
- Calculator
- Datebook
- Alarm Clock
- Dialling Services
 - Fixed Dial *
 - Service Dial *
 - Quick Dial
- Activation List *
- World Clock



Games & Apps



Web Access *

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions *



Multimedia

- Themes
- Voice Records
- Camera
- Video Camera
- Pictures
- Sounds
- Videos



Connection *

- Bluetooth™ Link
- USB Settings
- MOTOSYNC™ *



Settings

- (see next page)

* optional features

This is the standard main menu layout. **Your phone's menu may be different.**

Tip: Press to exit the current menu, or to exit all menus.

menu map 7

settings menu



Personalise

- Home Screen
- Main Menu
- Voice Dial Setup
- Skin
- Greeting
- Wallpaper
- Screen Saver



Ring Styles

- Style
- (style) Detail



Call Divert *

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Divert Status



In-Call Setup

- In-Call Timer
- Call Cost Setup *
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- Speed Dial
- Auto Redial
- Display Timeout
- Backlight
- Scroll
- Text Marquee
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Credit Info/Available *
- Software Update *
- Active Line *
- Battery Meter
- Download Location
- Storage Devices
- Software Update *
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Airplane Mode

- Airplane Mode
- Prompt at Power Up



Network

- New Network
- Network Setup
- Available Networks
- My Network List *
- Service Tone *
- Network Jingle *
- Call Drop Tone



Security

- Phone Lock
- Lock PTT Key *
- Lock Application
- Fixed Dial *
- Restrict Calls *
- SIM PIN
- New Passwords
- Certificate Mgmt *



PTT Settings *

- PTT Service



Java™ Settings

- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Priority *
- App Backlight

* optional features

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.¹

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following instructions.

External Antenna Care

If your phone has an external antenna, use only the supplied or Motorola-approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the phone and/or may result in non-compliance with local regulatory requirements in your country.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline phone.

Body-Worn Operation: Voice Communication

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting voice communications, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines.

If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 2.5 centimetres (1 inch) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 2.5 centimetres (1 inch) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

Turn off your wireless device whenever instructed to do so by airline staff. If your device offers a flight mode or similar feature, consult airline staff about use in flight. If your device offers a feature that automatically turns on the phone, then turn off this feature before boarding an aeroplane or entering an area where the use of wireless devices is restricted.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 centimetres (6 inches) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 15 centimetres (6 inches) from your pacemaker when the phone is turned ON.

- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimise the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your doctor may be able to assist you in obtaining this information.

Damaged Products

If your phone or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorised Service Centre to determine if it has been damaged. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewellery, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become hot. Take care when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original™ batteries and chargers.**

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road. Using a phone may be distracting in certain circumstances. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices can be found in the "Wireless Phone Safety Tips" at the end of this guide and/or at the Motorola website: www.motorola.com/callsmart.

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Gas or Petrol Stations

Obey all posted signs with respect to the use of radio equipment in gas or petrol stations. Turn off your wireless device if instructed by authorised staff.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fuelling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Choking Hazards

Your phone or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your phone and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service centre.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone (the flashing-light feature is not available on all products).

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Caution About High Volume Usage



Listening at full volume to music or voice through a headset may damage your hearing.

Repetitive Motion Injuries

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.

- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.

1. The information provided in this document supersedes the general safety information in user's guides published prior to January 28, 2005.

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind

Do not expose your phone to water, rain, extreme humidity, sweat, or other moisture.



extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



microwaves

Do not try to dry your phone in a microwave oven.



dust and dirt

Do not expose your phone to dust, dirt, sand, food, or other inappropriate materials.



cleaning solutions

To clean your phone, use only a dry soft cloth. Do not use alcohol or other cleaning solutions.




the ground

Do not drop your phone.

European Union Directives Conformance Statement

CE Hereby, Motorola declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

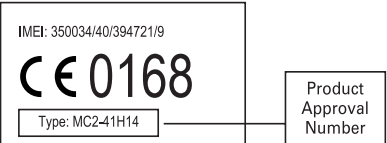

The above gives an example of a typical Product Approval Number.

You can view your product’s Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product’s label in the “Search” bar on the Web site.

Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose of the product with household waste.

Recycling Mobile Phones and Accessories

Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

about this guide

This guide shows how to open a menu feature as follows:

Find it:  >  **Messages** > **New Message**

This means that, from the home screen:

- 1 Press the *centre key*  to open the menu.
- 2 Press the *navigation key*  to scroll to **Messages**, and press the *centre key*  to select it.
- 3 Press the *navigation key*  to scroll to **New Message**, and press the *centre key*  to select it.

symbols	
	This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.


SIM card

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries.


To insert and use a **memory card**, see page 36.

Turn off your phone and remove your battery before you install or remove a SIM card.

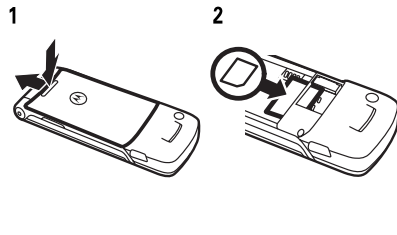

battery

battery installation

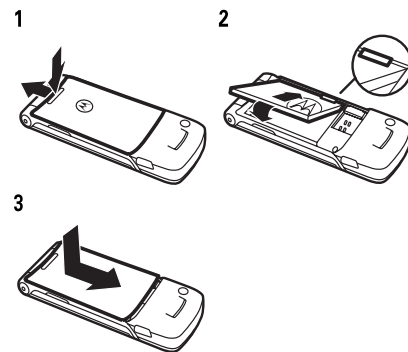


battery charging

New batteries are not fully charged. Plug the battery charger into your phone and an electrical outlet. Your phone might take several seconds to start charging the battery. Your display shows **Charge Complete** when finished.

Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

You can charge your battery by connecting a cable from your phone's mini-USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct

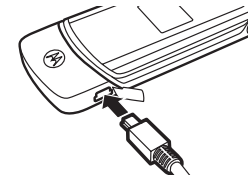

software drivers installed. Cables and software drivers are available in Motorola Original data kits, sold separately.

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.





- When charging your battery, keep it near room temperature.
When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.

Contact your local recycling centre for proper battery disposal.

Warning: Never dispose of batteries in a fire because they may explode.

- Your phonebook can show you the entries stored in your phone's memory or on your SIM card. To choose which entries you see, press > **Phonebook**, then press **Options** > **View**. You can select **Phone & SIM Card**, **SIM Card**, or **Phone Contacts**.
- To choose whether your phone stores entries in your phone's memory or on your SIM card, go to the home screen and press > **Phonebook**, then press **Options** > **Setup** > **Default Storage** > **Phone** or **SIM Card**.

call a stored phone number

Find it: > **Phonebook**

- 1 Scroll to the phonebook entry.

Before using your phone, read the battery safety information in the "Safety and General Information" section included in this guide.

turn the phone on & off

Caution: Some phones ask for your SIM card PIN code when you turn them on. If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled, and your display shows **SIM Blocked**. Contact your service provider.

To turn on your phone, press and hold for a few seconds or until the keypad or display lights up. If



prompted, enter your eight-digit SIM card PIN code and/or four-digit unlock code.

To turn off your phone, press and hold for a few seconds.

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want.

- 2 Press to call the entry.

To use voice commands for calling, see page 48.

your phone number

From the home screen, press *the clear key* then to see your number.

Tip: Want to see your phone number while you're on a call? Press **Options** > **My Tel. Number**.

You can edit the name and phone number stored on your SIM card. From the home screen, press , select an entry, press the **View** key, press the **Options** key, and select **Edit**. If you don't know your phone number, contact your service provider.

make a call

Enter a phone number and press to make a call.

To "hang up," close the flip or press .

To use voice commands for calling, see page 48.

answer a call

When your phone rings and/or vibrates, just open the flip or press to answer.

To "hang up," close the flip or press .

Note: Your phone cannot receive data over an EDGE network while it is playing videos or some sound files. The EDGE status indicator appears at the top of your display when you can receive data over an EDGE network.

store a phone number

You can store a phone number in your **Phonebook**:

Find it: > **Phonebook**, then press **Options** > **Create New** > **Phone Contact**

- 1 Enter a name and other details for the phone number. To select a highlighted item, press the *centre key* .
- 2 Press the **Done** key to store the number.

To edit or delete a **Phonebook** entry, see page 73.

To store an email address from the home screen, press > **Phonebook** > **Create New** > **Phone Contact**. Enter the new contact's name and **Email** information.

Notes about entries on your SIM card:

- Phonebook entries stored on the SIM card only have a **Name** and **Number**.

main attractions


You can do much more with your phone than make and receive calls!

take & send a photo

To edit the appearance of photos you've taken, see page 92. You can change settings such as **Brightness** and **Contrast**, or add effects such as **Blur** and **Mirror**.

Your camera lens is on the back of your phone when the flip is open.

- 1 Press **☎** > **Multimedia** > **Camera** to see the camera viewfinder.

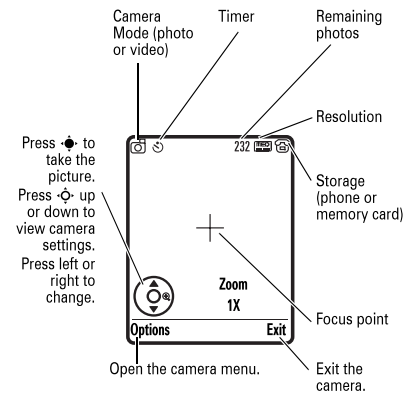

Note: Adjusting the exposure affects the brightness of both the viewfinder display and the captured photo.

- 2 Press the *centre key* **☎** to take the photo in the viewfinder. You can:
- Press the **Options** key to store or discard the photo.
 - Press the **Send** key to send the photo in a message.

Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press the **Yes** key to send the message.

- Press **☎** to discard the photo and return to the active viewfinder.

Before you capture the photo, you can press **Options** to open the camera menu:

options	
Go To Pictures	See stored pictures and photos.
Go To Video Mode	Switch to the video camera.
Auto-Timed Capture	Set a timer for the camera to take a photo.
Camera Setup	Open the setup menu to adjust photo settings.
Switch Storage Device	Choose to store videos on your phone or a memory card.

options	
Free Space	See how much memory remains.
Note: Your service provider may store some content in user memory before you receive the phone.	

self portrait

If you close your phone while the viewfinder is active, the external display shows the image. Press the volume keys to zoom, or press the smart key to capture and store the image.

send a stored photo in a message

Find it: **☎** > **Messages** > **New Message** > **Message**, then press **Options** > **Insert** > **Picture**

- 1 Scroll to the picture you want and press **Insert**.
- 2 Enter the message text and press **Send To**.
- 3 Scroll to a recipient address and press the *centre key* **☎**.
- 4 Press the **Send** key to send the message.


Your phone might tell you that this is a **Multimedia Msg**, since it has a picture in it. Some other phones or networks do not support picture messages. Press the **Yes** key to send the message.

record & send a video

To view, edit, or delete videos you've recorded, see page 92.

Your camera lens is on the back of your phone, when the flip is open.

Press **•••** > **Multimedia** > **Video Camera** to see the video viewfinder.

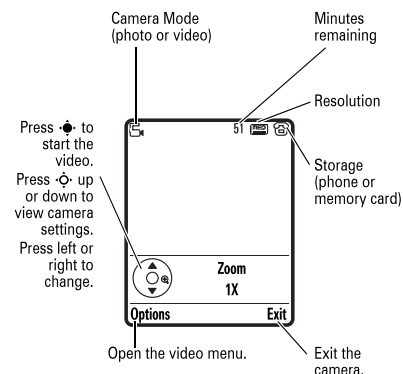

Note: The number of minutes remaining is an estimate.

If you want to send your video in a message, the video length must be set to **MMS**. To set length, press **Options** > **Video Camera Setup** > **Video Length**.

1 Press the **centre key** **•••** to start recording the video in the viewfinder.

2 Press the **Stop** key to stop recording the video. You can:

- Press the **Options** key to store or discard the video.
- Press the **Send** key to send the video in a message.

Enter text and press **Send To**, then scroll to a recipient address and press the **centre key** **•••** to select it. Press the **Options** key to enter a new number. To send the message, press the **Send** key.

Note: Some other phones or networks do not support messages with videos.

- Press **•••** to discard the video and return to the active viewfinder.

text messages

To create a group mailing list, see page 76. For more message features, see page 78.

send a text message

A text message can contain text and pictures, sounds, or other media objects. You can add multiple pages to a message, and you can put text and media objects on each page. You can send a message to other compatible phones, or to email addresses.

Find it: **•••** > **Messages** > **New Message** > **Message**

1 Press keypad keys to enter text on the page (for details about text entry, see page 44).

To insert a **picture, sound, or other object** on the page, press **Options** > **Insert**. Select the file type and the file.

To insert **another page** in the message, enter text or objects on the current page and press **Options** > **Insert** > **New Page**. You can enter more text and objects on the new page.

2 When you finish the message, press the **Send To** key.

3 Scroll to a recipient and press the **centre key** **•••**. Repeat to add other recipients.

To enter a **new** number or email address, press the **Options** key and select **Enter Number** or **Enter Email**.

4 Before you send a message, you can press **Options** to choose **Save to Drafts**, **Cancel Message**, or open **Sending Options** (such as message **Subject** or **CC** addresses).

5 To **send** the message, press the **Send** key.

Your phone might tell you that this is a **Multimedia Msg**, if it has multiple pages or media objects in it. Some other phones or networks do not support multimedia messages. Press the **Yes** key to send the message.

receive a text message

When you receive a message, your phone plays an alert, and the display shows **New Message** with a message indicator, such as .

Press the **Read** key to open the message.

If a multimedia message contains media objects:

- Photos, pictures, and animations show as you read the message.
- A sound file plays when its slide shows. Use the volume keys to adjust the sound volume.
- Attached files are added to the end of the message. To open an attachment, scroll to the file indicator/filename and press the **View** key (image), **Play** key (sound), or **Open** key (phonebook vCard, datebook vCalendar entry, or unknown file type).

Bluetooth™ wireless

Your phone supports Bluetooth wireless connections. You can connect your phone with a Bluetooth headset or car kit to make handsfree calls. You can also connect your phone with a phone or computer that

supports Bluetooth connections to exchange files.

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

For maximum Bluetooth security, you should always connect Bluetooth devices in a safe, private environment.

use a headset or handsfree car kit

Before you try to connect your phone with a handsfree device, make sure the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device). You can

connect your phone with only one device at a time.

Find it: > **Connection** > **Bluetooth Link** > **Audio Devices** > **[Look For Devices]**

Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list and press the **centre key** .
- 2 Press the **Yes** or **OK** key to connect to the device.
- 3 If necessary, enter the device passkey (such as 0000) and press the **OK** key.

When your phone is connected, the Bluetooth indicator shows in the home screen.

 
Shortcut: When Bluetooth power is on, your phone can automatically connect to a handsfree device you have used before. Just turn on the device or move it near the phone.

audio player

Your phone can play song files:

Find it: > **Multimedia** > **Sounds** and select the file you want to play.

Press up to play or pause. Press down to stop. Press right or left to go forward or back.



To download songs to your phone, see page 93. To copy files between your phone and a computer, see page 38.

Note: Your phone may not play MP3 files that have a bit rate higher than 128 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

Tip: Want to know more about your headset or car kit? For specific information about a device, refer to the instructions that came with it.

copy files to another device

You can copy a media file, phonebook entry, datebook event, or Web shortcut from your phone to a computer or other device.

Note: You can't copy some copyrighted objects.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press **Options**, then select:
 - **Manage** > **Copy** for media files.
 - **Share Phonebook Entry** for phonebook entries.
 - **Send** for datebook events.

Tip: You can listen to tunes on your way. Use *airplane mode* to make your phone safe to use even while you're on a plane. See page 95.

memory card

You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds).

Your phone supports memory cards up to 1 GB.

Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

- 3 Select a recognised device name, or **[Look For Devices]** to search for the device where you want to copy the file.

If your phone could not copy the file to the other device, make sure the device is **on** and **ready** in *discoverable* mode (see the user's guide for the device). Also, make sure the device is not busy with another similar Bluetooth connection.

Note: Once you connect your phone to a Bluetooth device, that device can start similar Bluetooth connections with your phone. Your display shows the Bluetooth indicator at the top when there is a Bluetooth connection.

receive files from another device

If you do not see the Bluetooth indicator at the top of your phone display, turn on your phone's

Bluetooth feature by pressing > **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On**.

- 1 Place your phone near the device, and send the file from the device.

If your phone and the sending device don't recognise each other, place your phone in discoverable mode so the sending device can locate it. Press > **Connection** > **Bluetooth Link** > **Find Me**.
- 2 Press the **Accept** key on your phone to accept the file from the other device.

Your phone notifies you when file transfer is complete. If necessary, press the **Save** key to save the file.

install a memory card

- 1 Remove the battery door.
- 2 Make sure the memory card's metal contacts are facing down, and slide the top of the memory card under the metal band.



- 3 Replace the battery door.

Do not remove your memory card while your phone is using it or writing files on it.

see and change memory card information

To **see the files** stored on your memory card and on your phone, open a file list such as **Pictures** (see page 91). Icons can indicate if a

file is stored in your phone memory () or on your memory card (). To copy or move a file from your phone to your memory card, highlight it in the list and press and press **Options** > **Manage** > **Copy** or **Move** > **Memory Card**. You cannot copy or move some copyrighted files.

To **copy files** between your memory card and a computer, you can use a cable connection (see page 38) or a Bluetooth connection (see page 34).

To see your **memory card name, available memory**, and other information about the card:

Find it: > **Settings** > **Phone Status** > **Storage Devices**

- 1 Press to scroll to the memory card that is installed.


- 2 Press the *centre key*  to see the memory card information. Your phone stores any content that you add, like ring tones or games, in *user memory*. Your service provider may store some content in user memory before you receive the phone.

or

Press **Options** to see the **Storage Device menu**, which lets you **Format** or **Rename** the memory card.

cable connections

 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

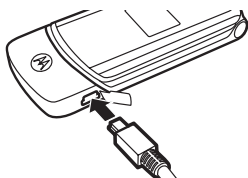

38 main attractions

phone updates

Sometimes we think of ways to make your phone's software faster or more efficient after you've purchased your phone. You can find out if your phone can be updated and register for free update notifications at: <http://www.hellomoto.com/support/update>



Note: Software updates do not affect your phonebook entries or other personal entries. If you receive a software update but choose to install it later, see page 88.

Note: Motorola Original USB data cables and supporting software are sold separately. Check your computer or hand-held device to determine the type of cable you need. To **transfer data** between your phone and computer, you must install the software included with the Motorola Original data kit. See the data kit user's guide for more information. To make **data calls** through a connected computer, see page 86.



connect your memory card to a computer

You can use a cable connection to access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Press  >  **Connection** > **USB Settings** > **Default Connection** > **Memory Card**.

This directs the USB connection to your memory card. Attach the Motorola Original USB cable to the accessory port on your phone and to an available USB port on your computer. Then follow these steps:



On your computer:

- 1 Open your "My Computer" window, where your phone's memory card shows as a "Removable Disk" icon.
- 2 Click on the "Removable Disk" icon to access the files on your phone's memory card.

- 3 To store the desired files onto the memory card, drag and drop them as follows:

MP3 or AAC files: > mobile > audio

screen savers: > mobile > picture

wallpapers: > mobile > picture

video clips: > mobile > video

- 4 When you finish, remove the device by selecting the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen. Then select "USB Mass Storage Devices" and "Stop".
- 5 Select "USB Mass Storage Device" then "OK".

On your phone:

To return to **Data** as your USB default connection, press  >  **Connection** > **USB Settings** > **Default Connection** > **Data Connection**.


main attractions 39

basics

See page 1 for a basic phone diagram.

display

The *home screen* shows when you turn on the phone.

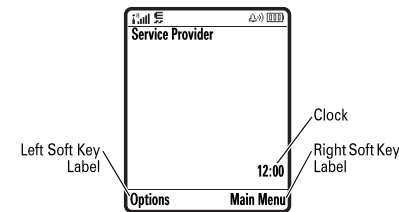


Note: Your home screen might look different from the one shown, depending on your service provider.

To dial a number from the home screen, press number keys and .

Press up, down, left, or right in the home screen to open basic menu features.

Press the *centre key* to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

Status indicators can show at the top of the home screen:

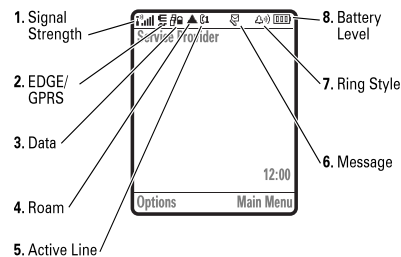

- 1 **Signal Strength Indicator** – Vertical bars show the strength of the network connection. You can't make or receive calls when or shows.
- 2 **EDGE/GPRS Indicator** – Shows when your phone is using a high-speed *Enhanced Data for GSM Evolution* (EDGE) or *General Packet Radio*

Service (GPRS) network connection. Indicators can include:

= GPRS PDP context active
 = EDGE active
 = GPRS packet data available

- 3 **Data Indicator** – Shows connection status.

= secure packet data transfer
 = unsecure packet data transfer
 = secure application connection
 = unsecure application connection
 = secure *Circuit Switch Data* (CSD) call
 = unsecure CSD call
 = Bluetooth™ connection is active

- 4 **Roam Indicator** – Shows when your phone is seeking or using a network outside your home network.
- 5 **PTT / Active Line Indicator** – Shows when you can make and receive PTT calls () or both PTT calls and Instant Messages (). This also shows to indicate an active phone call, or to indicate when call diverting is on. Indicators for dual-line-enabled SIM cards can include:

= line 1 active
 = line 2 active
 = line 1 active, call divert on
 = line 2 active, call divert on

- 6 **Message Indicator** – Shows when you receive a new message. Indicators can include:

= text message
 = voice message
 = voice & text message
 = IM message


- 7 **Ring Style Indicator** – Shows the ring style setting.

= loud ring
 = soft ring
 = vibrate & ring
 = vibrate then ring
 = vibrate
 = silent

- 8 **Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

text entry

Some features let you enter text.

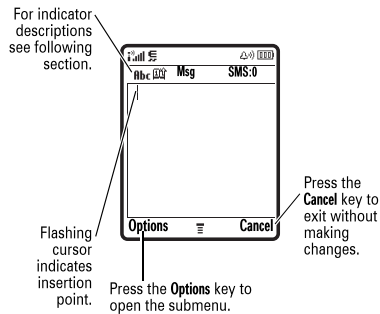

Press **[#]** in a text entry view to select an entry mode:

entry modes	
or 1	Your Primary text entry mode can be set to any iTAP™ or tap 1 mode.
or 2	Your Secondary text entry mode can be set to any iTAP or tap z mode, or set to None if you don't want a secondary entry mode.
123	Numeric mode enters numbers only.
	Symbol mode enters symbols only.

To set your primary and secondary text entry modes, press **Options > Text Setup** in a text entry view and select **Primary Setup** or **Secondary Setup**.

iTAP™ and Tap mode tips

- Press **[0]** in a text entry view to change text case to all capital letters (**ABC**), no capitals (**abc**), or next letter capital (**Abc**).

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.


Tip: Don't worry if you forget how iTAP works. In a text entry display, you can press **Options > Text Setup > Text Tutorial** to see an explanation.

tap and tap extended modes

Press **[#]** in a text entry view to switch to tap mode. If you don't see **Abc 1** or **Abc 2**, press **Options > Text Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in **Tap** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter. The **Tap Extended** mode works the same way, but includes more special characters and symbols.

For example, if you press **[7]** one time, your display shows:

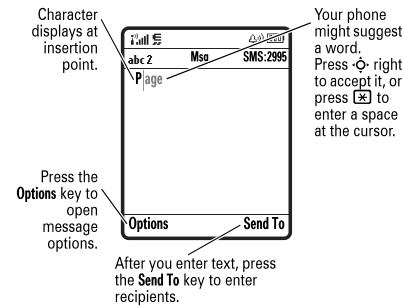

The first character of every sentence is capitalised. If necessary, press **->** down to change the character to lowercase before the cursor moves to the next position.


- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP or Tap mode.
- Press **[1]** to enter punctuation or other characters.
- Press **->** to move the flashing cursor to enter or edit message text.
- Press **[<]** to delete the character to the left of the cursor. Hold **[<]** to delete the word.
- To cancel your message, press **[X]**.

iTAP™ mode

Press **[#]** in a text entry view to switch to iTAP mode. If you don't see or , press **Options > Text Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words, and predicts each word as you enter it.

For example, if you press **[7] [7] [6] [4]**, your display shows:

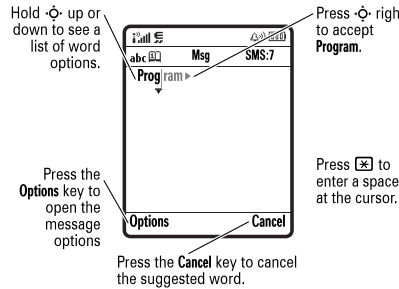

numeric mode

Press **[#]** in a text entry view until you see **123**. Press the number keys to enter the numbers you want.

Shortcut: You can press and hold a number key to temporarily switch to numeric mode from iTAP™ or Tap modes. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.


symbol mode

Press **[#]** in a text entry view until your phone shows a list of symbols. Scroll to the symbol you want, then press the *centre key* **[<=>]**.

volume

Press the volume keys to:


- turn off an incoming call alert
- change the earpiece volume during calls
- change the ringer volume from the home screen

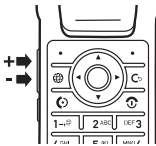

Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by holding the down volume key while you are in the home screen. You can also switch to **Silent** or back by holding **[#]** in the home screen.

navigation key

 Press the navigation key  up, down, left, or right to scroll to items in the display. When you scroll to an item, press the centre key  to select it.



smart key

The smart key gives you another way to do things. For example, when you scroll to a menu item, you can press the smart key to select it (instead of pressing the centre key ). The smart key usually does the same thing as pressing the centre key . To find the smart key, see page 1. To change what the smart key does in the home screen, see page 83.

- Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Don't pause between digits.
- For voice command help, press the **voice command key**, then press the **Help** key.

voice command setup

You can change voice command settings.

- 1 Press and release the **voice command key** on the right side of the phone.
- 2 Press the **Settings** key.
- 3 Choose one of the settings below:

voice commands

You can use voice commands to tell your phone what to do. To find the Voice Command Key refer to page 1.

Note: This option is available only when the phone language supports voice commands. Voice names will be used when voice commands are not supported.

- 1 Press and release the **voice command key** on the right side of your phone.

Your phone says "Say a command."
- 2 Say a voice command from the list (replace 555-1212 with a phone number, and replace John Smith with a phonebook entry name):

voice commands
"Call 555-1212"
"Call John Smith"

voice command settings	
Choice Lists	Turn choice lists on or off. Your phone uses choice lists to confirm voice commands by asking "Did you say..." followed by a choice list item.
Sensitivity	Make your phone more or less likely to reject a voice command.
Digit Dialling	Train your phone to recognise how you say digits.
Sound	Adjust the sound settings for your voice commands.
About	See voice command software information.

voice commands
"Send Email John Smith"
"Send Voice Note 555-1212"
"Send Voice Note John Smith"
"Send Message 555-1212"
"Send Message John Smith"
"Lookup John Smith"
"PTT Connect John Smith"
"Go to Voicemail"
"Go to Camera"
"Go to Redial"
"Go to Received Calls"
"Check Status"
Your phone tells you its battery strength, network signal strength, and whether its coverage is normal or roaming.
"Check Battery"

record a voice name

To add a **Voice Name** scroll to the desired contact, press the **Options** key and select **Add to Voice Dial**. Press the **Record** key and say the contact's name (within six seconds).

Note: The **Voice Name** option isn't available for entries stored on the SIM card.

You can use voice dial to call an entry in your phonebook.

- 1 Press and release the voice command key on the right side of your phone.

Your phone says "Say a name in your phonebook".
- 2 Say the entry's voice dial name.

voice commands
"Check Signal"
"Check Network"
"Check My Phone Number"
"Turn Prompts Off"
Your phone turns off the sound on your voice command prompts (such as "Say a command."). To turn prompts on again, say "Turn Prompts On." Your phone confirms by saying "Voice prompts on."

Tip:

- You can say a phonebook entry's name and number type together. For example, say "Call John Smith Mobile" to call the Mobile number stored for John Smith.

external display

When your phone is closed, the external display shows the time, date, status indicators, and notifications for incoming calls and other events. For a list of phone status indicators, see page 42.

handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **Speaker** key to turn the handsfree speaker on. Your display shows **Spkrphone On** until you turn it off or end the call.

Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

Find it:  >  **Settings** > **Security**
> **New Passwords**

You can also change your **SIM PIN** password.

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone:

Press  >  **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  >  **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 61). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Change** key to change it.
- 2 Scroll to the alert you want, then press the **centre key** .
- 3 Press the **Back** key to save the alert setting.

time & date

Your phone can automatically update your time zone, time and date. It uses the time and date for the datebook.

To **synchronise** the time zone, time, and date with the network: Press  >  **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate** > **Time & Time Zone**. If you don't want your phone to automatically update your time zone and date, choose **Time Only** instead.



To **manually** set the time zone, time, and date, turn off **Autoupdate**, then: Press  >  **Settings** > **Initial Setup** > **Time and Date** > **Time Zone**, *time* or *date*. To jump to a city in the time zone list, enter the first letter of its name by pressing keypad keys.

Tip: To choose three time zones for easier access, press  >  **Tools** > **World Clock**. When you open **World Clock**, you can press the **Options** key to see the **Map View** of time zones.

To choose an **analogue** or **digital** clock for your home screen, press  >  **Settings** > **Personalise** > **Home Screen** > **Clock**.

wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Find it:  >  **Settings** > **Personalise** > **Wallpaper**

customise

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

-  **Loud**  **Vibrate**  **Vibe Then Ring**
-  **Soft**  **Vibe & Ring**  **Silent**

The ring style profile's indicator shows at the top of your home screen. To choose your profile:

Find it:  >  **Settings** > **Ring Styles** > **Style:** *style name*

Shortcut: In the **home screen**, press the volume keys up or down to quickly change your ring style profile. With your **phone closed**, press a volume key to see your ring style profile, press the smart key to change it, then press a volume key to store the change.

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it:  >  **Settings** > **Ring Styles** > *style* **Detail**

Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

options	
Picture	Press  up or down to select a picture, or select None for no wallpaper.
Layout	Select Centre to centre the image in the display, Tile to repeat the image across the display, or Fit-to-screen to stretch the image across the display.

screen saver

Set a photo, picture, or animation as a screen saver. The screen saver shows when the flip is open and no activity is detected for a specified time.

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

Find it:  >  **Settings** > **Personalise** > **Screen Saver**

options	
Picture	Press  up or down to select a picture or animation, or select None for no screen saver.
Delay	Select the length of inactivity before the screen saver shows.

themes

A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and ring tone. Your phone may come with some themes, and you can download more.

To **apply** a theme, press  >  **Multimedia** > **Themes** > *theme*.

To **download** a theme, see page 93.



To **delete** a theme, press > **Multimedia** > **Themes**, scroll to the theme, and press **Options** > **Delete** or **Delete All**.

Note: You can delete only downloaded themes.

display appearance

To choose a phone **skin** that sets the look and feel of your phone's display: Press > **Settings** > **Personalise** > **Skin**.

To set your display **brightness**: Press > **Settings** > **Initial Setup** > **Brightness**.

To save battery life, your keypad **backlight** turns off when you're not using your phone. The backlight turns on when you open the flip or press any key. To set how long your phone waits before the backlight turns off:

Press > **Settings** > **Initial Setup** > **Backlight**.

Note: To turn the backlight on or off for Java™ applications, press > **Settings** > **Java Settings** > **App Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you open the flip or press any key. To set how long your phone waits before the display turns off:

Press > **Settings** > **Initial Setup** > **Display Timeout**.

answer options

You can use different ways to answer an incoming call. To turn on or turn off an answer option:

Find it: > **Settings** > **In-Call Setup** > **Answer Options**

options	
Multi-Key	Answer by pressing any key.
Open to Answer	Answer by opening the flip.
Delayed Answer	Set up your delayed answering option (see page 58).

calls

To make and answer calls, see page 25.

turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.

delay answering

If you want to answer a call, but need to step outside first, you can delay answering the call. When your phone rings, press the **Delay** key or your voice command key. Your phone stops ringing and plays a brief message for the caller, such as "Please hold, your call will be answered in a moment." The call remains on hold until you press the **Talk** key.

options	
Talk then Fax	Talk and then send a fax in the same call (see page 86).
Filter by	Select dialled or received calls.
Notepad	Open the number in a text editor.

redial

- 1 Press from the home screen to see a list of recent calls.
- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal**, and you see **Call Failed**, you can press or the **Retry** key to redial the number. When the call goes through, your phone rings or vibrates one

To turn **Delayed Answer** on, or record your **Delayed Answer** message (up to 10 seconds), press > **Settings** > **In-Call Setup** > **Answer Options** > **Delayed Answer**

Note: When **Delayed Answer** is on, the **Open to Answer** feature is disabled.

recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added. **Shortcut:** Press from the home screen to see a list of dialled calls.

time, shows **Redial Successful**, and connects the call.

return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where X is the number of missed calls.

- 1 Press the **View** key to see the received calls list.
- 2 Scroll to the call you want to return, then press .

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your external and internal displays.

Find it: > **Recent Calls**, press or to select > **Received Calls**, **Dialled Calls** or **Missed Calls**

Scroll to a call. A next to a call means the call connected.

- To call the number, press .
- To see call details (like time and date), press the *centre key* .
- To see the **Last Calls Menu**, press **Options**. This menu can include:

options	
Store	Create a phonebook entry with the number in the No. field. Store does not appear if the number is already stored.
Delete	Delete the entry.
Delete All	Delete all entries in the list.

Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.

You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 73).

To show or hide **your phone number** from the next person you call, enter the phone number and press **Options** > **Hide ID/Show ID**.

emergency calls

Your service provider programs one or more emergency phone numbers, such as 999, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and

options	
Show ID	Show your caller ID for the next call.
Hide ID	Hide your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Send Voice Message	Start a voice recording that you can send to the number.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. This option shows only during a call.

sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press to call the emergency number.

voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.

Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator and **New Voicemail**. Press the **Call** key to listen to the message.

To **check** voicemail messages:

Find it: ☎ > ✉ **Messages** > **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

Note: You can't do the following: **Insert Pause** (pause), **Insert Wait** (wait), or **Insert 'n'** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then you can use the entry to call your voicemail.

To **change** your voicemail number or turn off voicemail notification, press ☎ > ✉ **Messages**, then press the **Options** key and select **Setup** > **Voicemail Setup**.

push to talk (PTT)

Push to Talk (PTT) lets you talk walkie-talkie style with other PTT subscribers. You can talk to one person or a group.

PTT and the other related features indicated are network and subscription dependent features, and are not available in all areas. PTT connectivity requires PTT-compatible phones.

Note: To lock your PTT key or turn PTT on or off, see page 66.

make a PTT call

When [PTT] shows at the top of your home screen, you can make and receive PTT calls. To make a PTT call:

- 1 Enter a PTT subscriber's phone number in your home screen, or select a contact or group from a list:

- **PTT Contacts** (press the PTT key to open the list)

Note: If you change your **Open To** setting, your PTT key does not open the contacts list (see page 66).

- **PTT Quick Group** (press the PTT key and **Options** > **Quick Group**) This lets you select more than one contact for the call.

- **PTT Groups** (press the PTT key and **Options** > **Go To Groups**)

- 2 Hold the PTT key and speak after you hear the tone. Release the PTT key to let others speak.

To speak during a PTT call, hold your PTT key and speak after the tone. Only one person can speak at a time.

To end the call, press [End Call]. If nobody speaks for 20 seconds, the call ends (actual timing varies between PTT servers).

To send a PTT alert instead of a standard PTT call, scroll to a PTT contact in **PTT Contacts** and press the **Alert** key. The contact's phone rings or vibrates, and the contact can speak first. If the contact does not respond, the call ends. You cannot send alerts to groups.

answer a PTT call

Note: Your phone cannot receive PTT calls while it is recording videos, and may not receive PTT calls while it is playing videos or some sound files. The PTT indicator [PTT] appears at the top of your display when you can receive PTT calls.

When you receive a PTT call, you hear a tone or alert followed by conversation from the caller.

- **To speak** when the caller stops speaking, hold your PTT key and speak after the tone. Only one person can speak at a time.
- **To end the call**, press [End Call].

If you change your **My Answer Mode** setting to **Manual**, your phone does not automatically answer as described (see page 66).

When you receive a PTT alert, press the PTT key and speak after the tone. You can also press the **Ignore** key to cancel the call.

Your phone shows **Missed Call** if you miss a PTT alert. It does not show **Missed Call** when you miss a standard PTT call unless you set **My Answer Mode** to **Manual** (see page 66).

send a picture with push to view (PTV)

You can send a picture during a PTT call, or you can open a picture and start a PTT call to send it.

Note: You cannot send pictures in group calls or while someone is speaking. You can send pictures only to phones with push to view (PTV) capability.

To send a picture during a PTT call, press **Options**, then select **Camera** to capture a new picture or **Pictures** to send a stored picture.

To send a stored picture, press ☎ > 📷 **Multimedia** > **Pictures**, scroll to the picture, and press the PTT key.

To take a photo and send it, press ☎ > 📷 **Multimedia** > **Camera**, **Capture** the photo, and press the PTT key.

Your phone plays a tone when the picture transfer completes. To speak after the picture transfers, hold the PTT key and speak after the tone.

PTT contacts and groups


You can store PTT **Contacts** to make one-to-one calls, or you can store PTT **Groups** to make group calls.

To store a contact, press **PTT key**, then **Options** > **Add New Contact**. Enter the contact's **Name** and phone number (**No.**), then press the **Done** key. Your network stores the contact and your phone returns to the **PTT Contacts** list with the new contact shown.

To create a group of contacts that you can call at the same time, press **PTT key**, then **Options** > **Go To Groups**, then **Options** > **Add New Group**. Enter the group's **Name** and select the **Members**, then press the **Done** key. Your network

stores the group and your phone returns to the **PTT Groups** list with the new group shown.

To see PTT contacts, press the PTT key. Scroll to a contact and press **Options** to **View**, **Edit**, or **Delete** it.

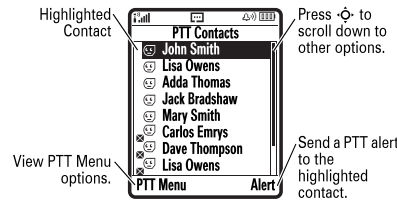

To see PTT groups, press the PTT key and **Options** > **Go To Groups**. Scroll to a group and press **Options** to **View** or **Delete** it. You cannot edit a group, but you can delete it and create a new one with the members you want.

Icons in the PTT contact and group lists indicate if someone is online (🟢, 🟡) or offline (🔴, 🟠). They also tell you if a contact is blocked (🔒).

To **block** a contact, scroll to the contact and press **Options > Edit > Block Mode > On**. To unblock the contact, scroll to it and press the **Unblock** key.

To set an **online alert** 🔔 to tell you when a contact comes online, scroll to the contact and press **Options > Enable Online Alert**. You can turn online alert tones on or off in your **PTT Setup** menu (see page 66).

To refresh the contact or group list from your network, press **Options > Refresh List**.

To see only your frequently used contacts or groups, press **Options > Frequently Used**.

PTT settings

To **turn PTT on or off** from your home screen, press 📶 > ⚙️ **Settings > PTT Settings > PTT Service > On/Off**.

To prevent accidental PTT calls, you can set your phone to **lock the PTT key** automatically when you haven't pressed it for a few minutes and your phone is closed. Press 📶 > ⚙️ **Settings > Security > Lock PTT Key**, and select how long your phone should wait before it locks the key. To unlock the key, hold it for two seconds or open the phone. The PTT key unlocks when you receive a PTT call.

You can change your PTT menu and call preferences.

Find it: Press **PTT key**. In the **PTT Menu**, select **PTT Setup > Personalise**

options	
Open To	From the home screen, the PTT key can open the PTT menu (PTT Menu), or your contacts list sorted by name (Contacts), or most recent call (Last Contact Call).
Sort by	Sort your contacts and groups by Name , online Status , or call Frequency .
My Answer Mode	Set the mode for incoming PTT calls to Manual (press the PTT key to answer), Auto-Accept (standard mode that accepts all calls), or Do Not Disturb (accepts no calls).
Tone Volume	Set the volume for the tone you hear when it is your turn to speak.

options	
PTT Speaker	Turn the speakerphone On or Off for PTT calls.
Set Online Alert Tone	You can set an online alert to tell you when a contact or group comes online (scroll to the entry in your PTT Contacts or PTT Groups and press Options > Enable Online Alert). This setting tells your phone whether to play these alert tones (On) or not (Off).

other features

advanced calling

To use voice commands for calling, see page 48.

features

1-touch dial

To call phonebook entries with **Speed No.** 1 to 9, hold the key for the entry (1 to 9).

Note: To speed dial phonebook entries 10 and above, see “speed dial” on page 69.

To add a new phonebook entry, see page 25. To edit the **Speed No.** for a phonebook entry, see page 75.

features

set 1-touch dial list

You can set 1-touch dial to call the entries in your phone’s phonebook or Fixed Dial list: Press > **Settings** > **Initial Setup** > **Speed Dial** > **Phone Memory** or **Fixed Dial**.

features

international calls

If your phone service includes international dialling, press and hold 0 to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

hold a call

Press **Options** > **Hold** to put all active calls on hold.

mute a call

Press the **Mute** key (if available) or **Options** > **Mute** to put all active calls on mute.

features

call waiting

When you’re on a call, you’ll hear an alert if you receive a second call.

Press to answer the new call.

- To switch between calls, press the **Switch** key.
- To connect the two calls, press the **Link** key.
- To end the call on hold, press **Options** > **End Call On Hold**.

To turn the call waiting feature on or off, press > **Settings** > **In-Call Setup** > **Call Waiting** > **On** or **Off**.

conference call

During a call:

Dial next number, press , press the **Link** key.

features

speed dial

Speed dial a phonebook entry:

Enter the speed dial number, press , then press .

Note: To 1-touch dial phonebook entries 1 to 9, see “1-touch dial” on page 68.

To add a new phonebook entry, see page 25. To edit the **Speed No.** for a phonebook entry, see page 75.

Tip: If you forget Aunt Mildred’s speed dial number, press > **Phonebook**, scroll to her entry, and press the *centre key* .

set speed dial list

You can set speed dial to call the entries in your phone memory phonebook or your Fixed Dial list: Press > **Settings** > **Initial Setup** > **Speed Dial** > **Phone Memory** or **Fixed Dial**.

features

attach a phone number

Dial an area code or prefix for a phonebook number, then press **Options** > **Attach Number**.

notepad

The last number you entered is stored in the *notepad*. You can use the notepad to “jot down” a number during a call for later use. To see the notepad:

Press > **Recent Calls**, press the **Options** key, then > **Notepad**.

- To call the number, press .
- To create a phonebook entry with the number in the **No.** field, press the **Store** key.
- To open the **Dialling Menu** to attach a number or insert a special character, press **Options**.

features

transfer a call

During a call:

Options > **Transfer**, dial transfer number, press .

call diverting

Set up or cancel call diverting:

> **Settings** > **Call Divert**

restrict calls

Restrict outgoing or incoming calls:

> **Settings** > **Security** > **Restrict Calls**

call barring

Restrict outgoing or incoming calls:

> **Settings** > **Security** > **Call Barring**

features

change phone line

If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number.

> **Settings** > **Phone Status** > **Active Line**

fixed dial

When you turn on fixed dialling, you can call only numbers stored in the fixed dial list.

Turn fixed dialling on or off:

> **Settings** > **Security** > **Fixed Dial**

Use the fixed dial list:

> **Tools** > **Dialling Services** > **Fixed Dial**

features
quick dial Dial preprogrammed phone numbers: ☎ >  Tools > Dialling Services > Quick Dial
DTMF tones Activate DTMF tones: ☎ >  Settings > Initial Setup > DTMF To send DTMF tones during a call, just press number keys or scroll to a number in the phonebook or recent calls lists and press Options > Send Tones .

phonebook

Note: Your phonebook can show you the entries stored in your phone’s memory or on your SIM card. To choose which entries you see, press ☎ >  **Phonebook**, then press

Options > View . You can select Phone & SIM Card , SIM Card , or Phone Contacts .
features speed dial a phonebook entry You can assign the keys  to  to phonebook entries. Then, when you press and hold a key, your phone calls the entry. Note: Your service provider might have assigned some keys, such as  for your voicemail number. You can only speed dial phonebook entries that are stored on your phone (not on your SIM card). To assign a speed dial key , press ☎ >  Phonebook and scroll to the phonebook entry. Then, press Options > Add to Speed Dial and pick a speed dial key. To use a speed dial key , just press and hold the key in your home screen.

features
set picture ID for a phonebook entry Assign a photo or picture to show when you receive a call from an entry: ☎ >  Phonebook > <i>entry</i> , then press Options > Edit Contact > Picture > <i>picture name</i> Note: The Picture option isn’t available for entries stored on the SIM card.
set picture ID view for phonebook Show entries as a text list, or with picture caller ID photos: ☎ >  Phonebook , then press Options > Setup > View by > <i>view name</i>

features
edit or delete a phonebook entry Edit a number stored in the phonebook: ☎ >  Phonebook , scroll to the phonebook entry, and press Options . You can select Edit Contact , Delete Contact , or other options. Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry you want. You can also press  and  to see the entries you use frequently, or entries in other categories.

features
set ringer ID for a phonebook entry Assign a ring alert (ringer ID) to an entry: ☎ >  Phonebook > <i>entry</i> , then press Options > Edit Contact > Ringer ID > <i>ringer name</i> Note: The Ringer ID option isn’t available for entries stored on the SIM card. Activate ringer IDs: ☎ >  Settings > Ring Styles > <i>style Detail</i> > Ringer IDs

features
create a new category ☎ >  Phonebook , then press Options > Manage Contacts > Edit Categories > [New Category] Enter the category name, and select its members from your phonebook entries.
edit a category ☎ >  Phonebook , then press Options > Manage Contacts > Edit Categories Scroll to the category name and press Options > Edit Category . You can edit the category name, members, ringer ID, or picture. Your phone uses the ringer ID and picture whenever you receive calls from numbers in the category.

features
set speed number for a phonebook entry Set the Speed No. for an entry: ☎ >  Phonebook , scroll to the entry, and press Options > Edit Contact > Speed No. To speed dial an entry, enter the speed dial number, press  , then press  . To use 1-touch dial, see page 68.

features
set primary number or address for a phonebook entry Set the primary number for an entry with multiple numbers: • > ☞ Phonebook , scroll to the entry, press Options > Set Primary > <i>number</i> or <i>address</i> Note: The Set Primary option isn't available for entries stored on the SIM card. Tip: In Primary number view mode, you can still peek at other numbers stored for the same name. Scroll to the name and press • left or right to see the other numbers.

features
create group mailing list You can put several phonebook entries in a group mailing list, then send a message to the list. To create a list: • > ☞ Phonebook , then press Options > Create New > Message List You can select the list name as an address for multimedia messages. Note: A Message List cannot include entries stored on the SIM card.
sort phonebook list Set the order in which entries are listed: • > ☞ Phonebook , then press Options > Setup > Sort by > <i>sort order</i> You can sort the phonebook list by First Name or Last Name .

features
copy one phonebook entry Copy an entry from the phone to the SIM card, or from the SIM card to the phone: • > ☞ Phonebook , scroll to the entry, press Options > Copy to SIM Card or Copy to Phone
copy multiple phonebook entries Copy multiple phonebook entries between the phone and SIM card: • > ☞ Phonebook , scroll to one entry, press Options > Select Multiple to , then select Copy to SIM Card or Copy to Phone
send phonebook entry in a text message Send a phonebook entry in a text or email message: • > ☞ Phonebook , scroll to the entry, press Options > Send Contact

features
send phonebook entry in a multimedia message Send a phonebook entry in a multimedia message: • > ☞ Phonebook , scroll to the entry, press Options > Share Phonebook Entry > Multimedia Msg
send phonebook entry to another device Send a phonebook entry to another phone, computer, or device: • > ☞ Phonebook , scroll to the entry, press Options > Share Phonebook Entry

features
print phonebook entry over Bluetooth™ connection  You can use a Bluetooth wireless connection to send a phonebook entry from your phone to a printer. • > ☞ Phonebook Scroll to the entry you want to print, and press Options > Print . You cannot print a Mailing List . For more about Bluetooth connections, see page 33.

messages

features
send text message  • > ☞ Messages > New Message

features
send email  • > ☞ Messages > New Message > New Email
send voice message  • > ☞ Messages > New Message > New Voice Msg To record the voice message, press the Record key, speak, then press the Stop key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to receive the message.
use a multimedia template  Open a multimedia message with preloaded animations: • > ☞ Messages > New Message > Multimedia Templates

features
read and manage messages  • > ☞ Messages > Message Inbox Icons next to each message indicate if it is read ☐ or unread ☐. Icons can also indicate if the message is locked 🔒, urgent !, or low priority ↓, or if it has an attachment 📎. To Reply , Forward , Lock , or Delete a message, scroll to it and press Options . To open a message, press •. Then, you can press Options to use or store any phone numbers, email addresses, Web sites, or files in the message.

features
read and manage email  • > ☞ Messages > Email Msgs To Reply , Forward , Lock , or Delete a message, scroll to it and press Options . To open a message, press •. Then, you can press Options to use or store any phone numbers, email addresses, Web sites, or files in the message.
store message objects  Go to a multimedia message page, or scroll to an object in a message, then: Options > Store

features

print message over Bluetooth™ connection

You can use a Bluetooth wireless connection to send a message from your phone to a printer.

• > Messages > Message Inbox, Email Msgs, Outbox, or Drafts

Scroll to the message you want to print and press **Options** > **Print**.

You cannot print message **Templates**. For more about Bluetooth connections, see page 33.

features

store text messages on your SIM card

To store incoming text messages on your SIM card, press:

• > Messages, then press **Options** > **Setup** > **Message Setup** > **Text Msg Setup** > **Default Storage** > **SIM Card**

features

edit email settings

You can edit the settings for your Email connections. To use email, you need to store your email **User ID** and **Password**.

• > Messages, then press **Options** > **Setup** > **Email Msg Setup** > **Account Settings**

If you have more than one email account, select an account to edit.

Your phone shows a list of email settings. Here is where you store your email **User ID** and **Password**.

Note: To create a new account, select **New Entry** in the **Account Settings** list. Your display shows a folder for each email account under • > Messages > **Email Msgs**.

features

browser messages

Read messages received by your micro-browser:

• > Messages > **Browser Msgs**

info services

Read subscription-based information services messages:

• > Messages > **Info Services**

instant messaging

features

log in

• > IM

Select an IM account, or select **[New Account]** to set up an IM account.

features

log in automatically

• > IM, press the **Options** key, then > **Offline Settings**

Turn on **Auto-Login** to start the IM login whenever you select • > **IM**. Turn on **Power-On Login** to start the IM login whenever you turn on your phone.

set IM ring style

Select a ring or vibration for new IM messages and contact alerts.

• > Settings > **Ring Styles** > *style Detail* > **IM**

personalising

features

language

Set menu language:

• > Settings > **Initial Setup** > **Language**

scroll

Set the scroll bar to **Up/Down** or **Wrap Around** in menu lists:

• > Settings > **Initial Setup** > **Scroll**

activate ringer IDs

Activate ringer IDs assigned to phonebook entries and categories:

• > Settings > **Ring Styles** > *style Detail* > **Ringer IDs**

ring volume

• > Settings > **Ring Styles** > *style Detail* > **Ring Volume**

features

keypad volume

• > Settings > **Ring Styles** > *style Detail* > **Key Volume**

reminders

Set reminder alerts for messages that you receive:

• > Settings > **Ring Styles** > *style Detail* > **Reminders**

menu view

Show the main menu as graphic icons or as a text-based list:

• > Settings > **Personalise** > **Main Menu** > **View**

main menu

Reorder your phone's main menu:

• > Settings > **Personalise** > **Main Menu** > **Reorder**

features

show/hide menu icons

Show or hide menu feature icons in the home screen:

• > Settings > **Personalise** > **Home Screen** > **Home Keys** > **Icons**

change home keys

Change features for the soft keys, navigation key, and smart key in the home screen:

• > Settings > **Personalise** > **Home Screen** > **Home Keys**

master reset

Reset all options **except** unlock code, security code, and lifetime timer:

• > Settings > **Initial Setup** > **Master Reset**

features

master clear

Caution: Master clear **erases all information you have entered** (including phonebook and datebook entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

☎ > ⚙ Settings > Initial Setup > Master Clear

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing [End]. This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times

Show call timers:

☎ > 📞 Recent Calls > Call Times

in-call timer

Show time or cost information during a call:

☎ > ⚙ Settings > In-Call Setup > In-Call Timer

call cost

Show call cost trackers:

☎ > 📞 Recent Calls, press the Options key, then > Call Cost

data & fax calls

To connect your phone with a USB cable, see page 38.

features

send data or fax

Connect your phone to the device, then place the call through the device application.

receive data or fax

Connect your phone to the device, then answer the call through the device application.

talk then fax

Connect your phone to the device, enter fax number, press Options > Talk then Fax, then press [End] to make the call.

features

using sync

You can call a SyncML Internet server and synchronise your phonebook and datebook entries with the server.

To **set up** an Internet sync partner, press ☎ > 📶 Connection > MOTOSYNC > Sync > [New Entry]. Enter the server details, including **Server URL** (you can omit **http://**) and **Data Path** (the folder below the URL where your data is stored).

To **synchronise files** with a partner you set up, select the partner from the list in

☎ > 📶 Connection > MOTOSYNC > Sync.

handsfree

Note: The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features

speakerphone

Activate the speakerphone during a call:

Press the **Speaker** key (if available, or Options > Spkrphone On).

features

auto answer (car kit or headset)

Automatically answer calls when connected to a car kit or headset:

☎ > ⚙ Settings > Car Settings or Headset > Auto Answer

voice dial (headset)

Enable voice dial with headset send/end key:

☎ > ⚙ Settings > Headset > Voice Dial

auto handsfree (car kit)

Automatically route calls to a car kit when connected:

☎ > ⚙ Settings > Car Settings > Auto Handsfree

features

setting up Exchange ActiveSync

You can use the Internet to synchronise your phone's phonebook and datebook entries with an email account on a Microsoft® Exchange 2003 Server.

You need to know the email account's **user name** and **password**, the Microsoft® Exchange **server name**, and the **user domain name**. Confirm that the **Mobility** option is enabled on the email account, and that **data service** is activated with your phone service provider.

To **set up** an ActiveSync partner, press ☎ > 📶 Connection > MOTOSYNC > Exchange, press the Options key, then > Setup. Enter the server details, including **Server Name**, **Domain**, and the **Web Session** to use. To set up a **Web Session**, see page 93.

features

using Exchange ActiveSync

Once you set up an Exchange ActiveSync partner, you can schedule your phone to synchronise with the account automatically.

To **schedule** synchronisation, press ☎ > 📶 Connection > MOTOSYNC > Exchange, press the Options key, then > Auto Sync Setup. Enter the time and days you want your phone to synchronise.

network

features

network settings

See network information and adjust network settings:

☎ > ⚙ Settings > Network

features
software update  Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to install it later. To install the software update later: • >  Settings > Phone Status > Software Update > Install Now

personal organiser

features
set alarm • >  Tools > Alarm Clock

features
create voice record Create a voice record: Press and hold the voice command key, speak into the phone, release the voice command key. Note: Recording phone calls is subject to varying Laws regarding privacy and recording of conversations. Always obey the laws and regulations on the use of this feature.
play voice record Play back a voice record: • >  Multimedia > Voice Records
calculator • >  Tools > Calculator

features
turn off alarm When an alarm happens: To turn off the alarm, press the Disable key or  . To set an eight-minute delay, press the Snooze key. Note: The Snooze key is available only if the phone is already powered on when the alarm sounds.
add new datebook event • >  Tools > Datebook , scroll to the day, press •, press Options > Create New Event
see datebook event See or edit event details: • >  Tools > Datebook , scroll to the day, press •, press the View key

security

features
currency converter • >  Tools > Calculator , then press Options > Exchange Rate Enter exchange rate, press the OK key, enter amount, and press Options > Convert Currency .
SIM PIN Caution: If you enter an incorrect PIN code three times before the correct code, your SIM card is disabled and your display shows SIM Blocked . Lock or unlock the SIM card: • >  Settings > Security > SIM PIN

features
event reminder When an event reminder happens: To see reminder details, press the View key. To close the reminder, press the Exit key.
send datebook event to another device Send a datebook event to another phone, computer, or device: • >  Tools > Datebook , scroll to the day, press •, scroll to the event, press Options > Send

features
print datebook month, week, or day over Bluetooth™ connection  You can use a Bluetooth wireless connection to send a datebook month, week, or day from your phone to a printer. • >  Tools > Datebook Go to the month, week, or day view and press Options > Print . For more about Bluetooth connections, see page 33.

fun & games

For basic information on the camera, see page 27.

features
view, delete, or manage pictures Manage photos, pictures, and animations: • >  Multimedia > Pictures To copy or move a file from your memory card () to your phone memory () , highlight it in the list and press and press Options > Manage > Copy or Move > Memory Card . You cannot copy or move some copyrighted files. 

features
edit photos  Edit the appearance of your photos: • >  Multimedia > Pictures Scroll to the photo you want to edit, and press Options > Edit . You can choose settings such as Brightness and Contrast , or effects such as Blur and Mirror . Use the navigation key to scroll through the different settings. You cannot edit some copyrighted files.
view, delete, or manage video clips • >  Multimedia > Videos To copy or move a file from your memory card () to your phone memory () highlight it in the list and press and press Options > Manage > Copy or Move > Memory Card . You cannot copy or move some copyrighted files. 

features
hear, delete, or manage sounds Manage ring tones and music that you have downloaded or composed: • >  Multimedia > Sounds Note: Your phone cannot receive PTT calls or data over an EDGE network while it is playing some sound files. Indicators appear at the top of your display when you can receive PTT  or EDGE  data. To copy or move a file from your memory card () to your phone memory () highlight it in the list and press and press Options > Manage > Copy or Move > Memory Card . You cannot copy or move some copyrighted files. 

features
create ring tones Create ring tones that you can use with your phone: • >  Multimedia > Sounds > [New Melody]
start micro-browser  Just press  .
download objects from Web page  Download a picture, sound, or other object from a Web page: Press  , go to the page that links to the file, scroll to the link, and select it. Note: Normal airtime and/or carrier usage charges apply. To activate downloaded copyrighted files, press • >  Tools > Activation List > file type > file . You can see file's Status , Type , Activation , and 999 Remaining .

features
store downloaded files in your phone or memory card You can choose to store your downloaded files on your phone or your memory card. To choose where to store the files you download: • >  Settings > Phone Status > Download Location > Memory Card or Phone To see how much memory is available on your phone or memory card, see page 37.
Web sessions  A <i>Web Session</i> stores settings that your phone uses to access the Internet. To select or create a Web session: • >  Web Access > Web Sessions

features
clear micro-browser history  Clear the micro-browser's history, cache, or cookies: • >  Web Access > Browser Setup > Clear History , Reset Cache , or Clear Cookie
download game or application  You can download a Java™ game or application the same way you download pictures or other objects: Press  , go to the page that links to the file, scroll to the link, and select it. Note: Normal airtime and/or carrier usage charges apply.

features
start game or application  Start a Java™ game or application: • >  Games & Apps , scroll to the game or application, press the <i>centre key</i> • Note: To install and run games stored on your memory card, press • >  Games & Apps > [Install New] .

features
airplane mode You can switch your phone to airplane mode to prevent it from communicating with the network. This lets you use games or other applications while you are on an aeroplane, without interfering with aeroplane communications. • >  Settings > Airplane Mode > Airplane Mode > On You can make the airplane mode option appear whenever you turn on your phone: • >  Settings > Airplane Mode > Prompt At Power Up > On

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobiles devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.59 W/kg.¹ As

mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is 0.84 W/kg.¹

As SAR is measured utilising the device’s highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a “hands-free” device to keep the mobile phone away from the head and body.

Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>) or Motorola, Inc. (<http://www.motorola.com/rfhealth>).

1. The tests are carried out in accordance with international guidelines for testing. The limit incorporates a substantial margin for safety to give additional protection for the public and to account for any variations in measurements. Additional related information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.
2. Please see the Safety and General Information section about body worn operation.

Information from the World Health Organisation

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information:

<http://www.who.int./peh-emf>

caller ID 59, 60, 74
 camera 27
 car kit 85
 categories 74, 75
 centre key 1, 48
 centre select key 21
 certificate management 91
 clock 54
 codes 52
 conference call 70
 contrast photo setting 92
 copy files 34
 copyrighted files, activating 93
 costs, tracking 84

D

data call 86
 data indicator 42
 date, setting 54
 datebook 88, 89
 delayed answer 58

dial a phone number 25, 71, 72
 dialled calls 58
 digital audio 36
 display 2, 41, 56
 divert calls 71
 downloaded files
 activating 93
 from Web pages 93
 in messages 79
 storage location 93
 drafts folder 32
 DTMF tones 59, 72

E

earpiece volume 47
 EDGE indicator 42
 email
 reading and managing 79
 sending 78
 settings 81
 emergency number 61

end a call 25
 end key 1, 25
 Enter Unlock Code message 52
 external display 29, 51

F

fax call 60, 86
 fixed dial 71
 flip 25, 57

G

games 94
 GPRS indicator 42
 group mailing list 76

H

handsfree speaker 51
 headset 85
 headset jack 1
 hold a call 70

index

A

accessories 21, 85
 accessory connector port 1
 activation list 93
 active line indicator 43
 active line, changing 71
 airplane mode 95
 alarm clock 88
 alert
 set 47, 53
 turn off 47, 58
 animation 91
 answer a call 25, 57
 attach a number 59, 69
 audio player 36

B

backlight 56
 battery 22, 23
 extending battery life 23
 battery indicator 43
 battery life, extending 55, 56
 Bluetooth connection
 datebook entry, printing 89
 datebook entry, sending 89
 description 33
 messages, printing 80
 phonebook entries, printing 78
 phonebook entries, sending 77
 blur photo setting 92

brightness 56
 brightness photo setting 92
 browser messages 81
 browser. See micro-browser

C

cables 38
 calculator 90
 call
 answering 25, 57
 barring 71
 diverting 71
 end 25
 ending 25
 making 25
 timers 84
 waiting 70
 call divert indicator 43

home screen 2, 41, 83

I

IM 81
 in-call indicator 43
 Incoming Call message 61
 information services 81
 instant messaging. See IM
 international access code 70
 iTAP text entry mode 45

J

Java applications 94

K

keypad 57, 83

L

language 82
 linking. See Bluetooth connection

lock

application 91
 phone 52
 SIM card 90
 Low Battery message 43

M

make a call 25
 master clear 84
 master reset 83
 memory card 36
 menu 2, 21, 41, 82, 83
 menu icons 41, 83
 message 78, 79, 80
 message indicator 32, 43
 message reminders 83
 micro-browser 81, 93, 94
 mirror photo setting 92
 Missed Calls message 60
 MMS, defined 31
 MP3 sound files 36

multimedia message 31, 78, 79, 80
 music 92
 mute a call 70

N

navigation key 1, 21, 48
 network settings 87
 notepad 69
 number. See phone number
 numeric entry mode 47

O

object exchange 34
 1-touch dial 68, 75
 open to answer 57
 optional accessory 21
 optional feature 21

- P**
- pairing. See Bluetooth connection
 - passwords. See codes
 - personalise 82
 - phone number 26, 71
 - phonebook 59, 68, 69, 72, 75
 - photo 27, 91, 92
 - picture 91
 - picture ID 61, 74
 - PIN code 24, 52, 90
 - PIN2 code 52
 - power key 1, 24
 - PTT 62
 - calls, answering 63
 - calls, making 62
 - contacts and groups 65
 - icons 66
 - indicator 43
 - locking key 66
 - Quick Groups 63
 - PTV 64
 - Push to Talk. See PTT
 - quick dial 72
 - receiving pictures 64
 - settings 66
 - turning on or off 66
- Q**
- quick dial 72
- R**
- received calls 58
 - recent calls 58
 - redial 60
 - reminders 83
 - restrict calls 71
 - return a call 60
 - ring style indicator 43
 - ring style, setting 47, 53
 - ring tone 92, 93
 - ringer ID 61, 73, 82
 - ringer volume 47, 82
- S**
- screen saver 55
 - scrolling 82
 - security code 52
 - send key 1, 25
 - signal strength indicator 42
 - silent answer 58
 - SIM 80
 - SIM Blocked message 24, 90
 - SIM card 21, 24, 52, 90
 - skin 56
 - smart key 48, 83
 - soft keys 1, 41, 83
 - software update 88
 - speakerphone 85
 - speed dial 69, 72
 - store your number 26
 - symbol entry mode 47
 - synchronising 86, 87
 - roam indicator 43
- T**
- tap text entry mode 46
 - telephone number. See phone number
 - text entry 44
 - text message 78, 79, 80
 - theme 55
 - time zone 54
 - time, setting 54
 - timers 84
 - transfer a call 71
 - turn on/off 24
- U**
- unlock
 - application 91
 - phone 24, 52
 - SIM card 90
 - unlock code 52
 - USB cables 38
- V**
- video clip 92
 - videos 30
 - voice commands 48
 - voice dial 48, 85
 - voice message 78
 - voice record 90
 - voicemail 61
 - voicemail message indicator 43, 61
 - volume 47, 82, 83
- W**
- wallpaper 54
 - Web pages 93
 - Web sessions 93
 - WHO information 98
- Y**
- your phone number 26