



P680

User Guide

www.micromaxinfo.com

Table of Contents

 
Welcome.....	3
Understand Your Device	4
Insert SIM and Memory Card.....	5
Adjust the Volume	8
Charging the Battery	8
Basic Features	9
Google Account.....	9
Use Google Search	10
Notifications	11
Quick Settings	12
Screen Unlocking Techniques	12
Settings, Networks, and Applications	15
Connect to the Internet	15
Tethering & Portability	16
Pair With Bluetooth Devices.....	17
USB OTG (On the Go) for Data Transfer	17
Configuring E-Mail	17
Google Maps	18
Play Store	18
Device Specifications	19

Safety Precautions.....	20
Taking Care of your device	21
Recycle your Device.....	22
Disclaimer	22
Copyright.....	23

Welcome



Thank you for purchasing the Micromax P680. You are now the proud owner of the P680 tablet which offers you a wide range of exciting features designed to give you a rich and fulfilling tablet PC experience.

Understand Your Device

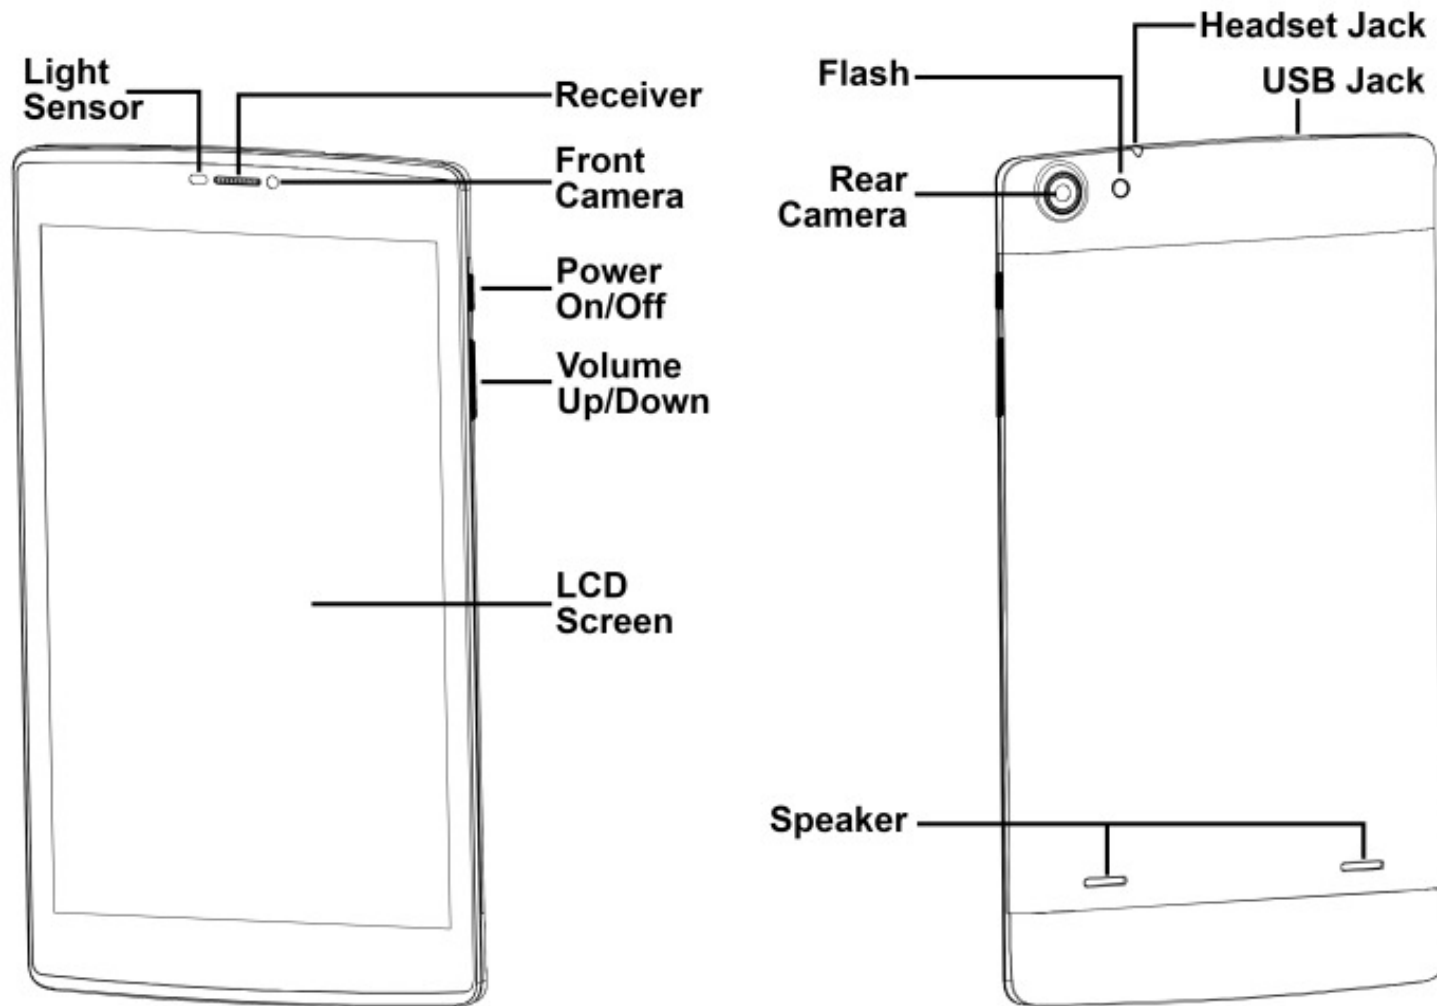


Insert SIM and Memory Card

  1. Switch off the device and remove the rear cover as shown.

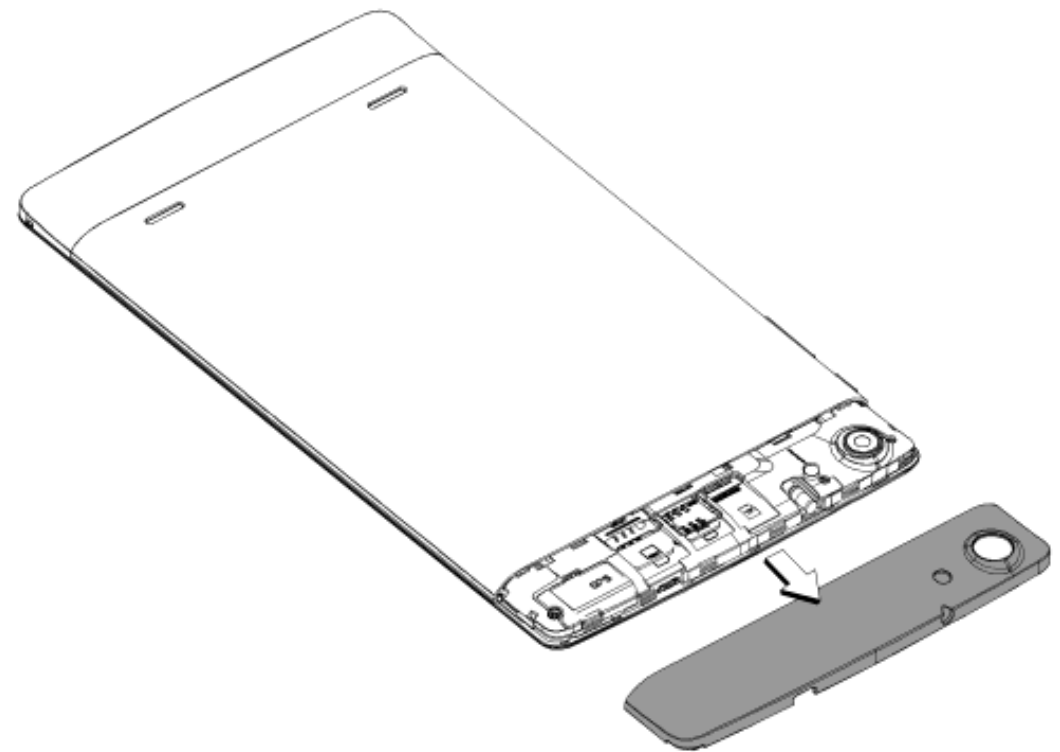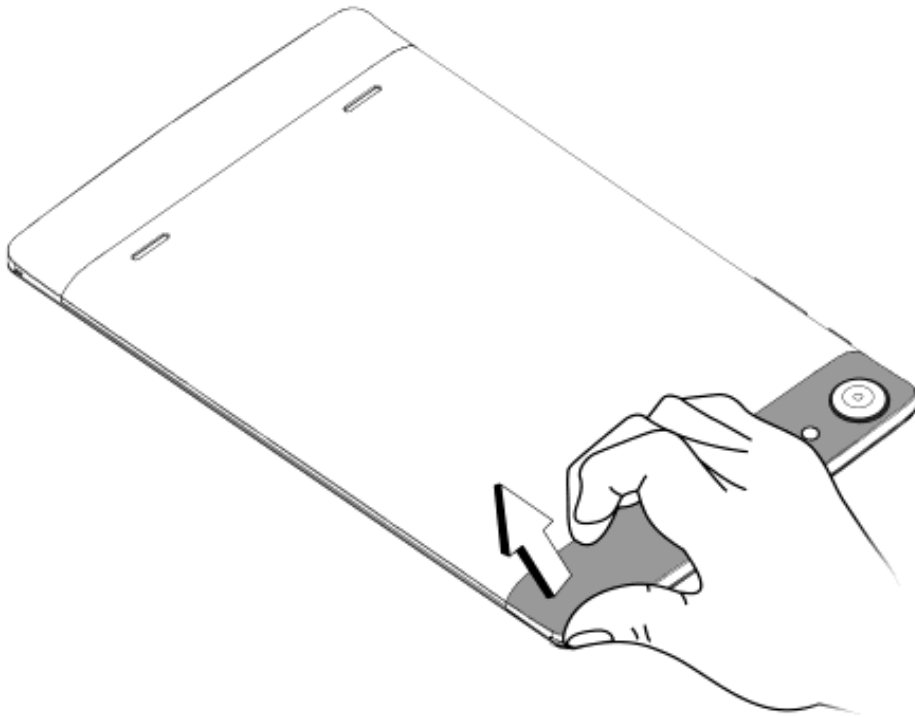


 2. Insert SIM card and Memory card correctly in the card slot(s), as shown:

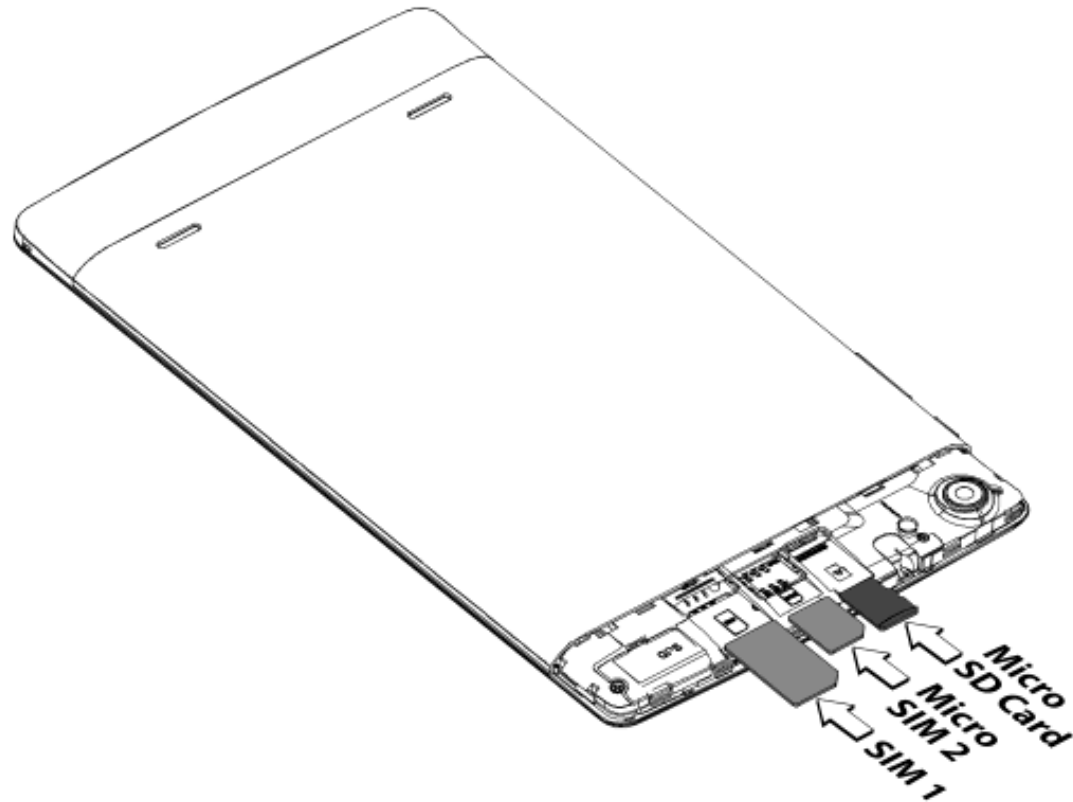


Use only compatible memory cards. Incompatible memory cards may damage the device and corrupt the data stored in the card.

 Switch on/off the Device

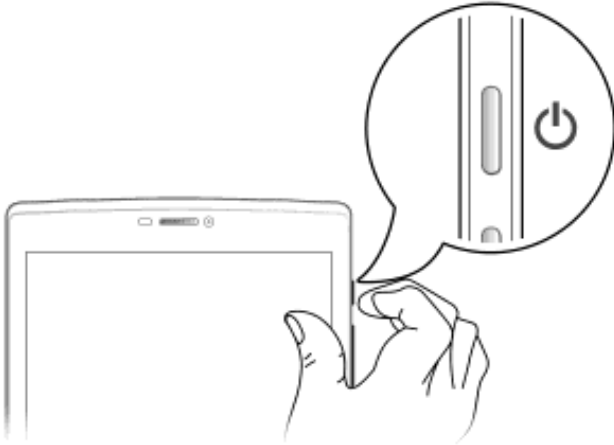

- Long press to switch on or switch off the tablet.
- Press once to turn off the screen or to wake up the screen.
- Press for 2 seconds to view quick options to turn off the tablet, switch to airplane mode or adjust the sound profile.

 Adjust the Volume

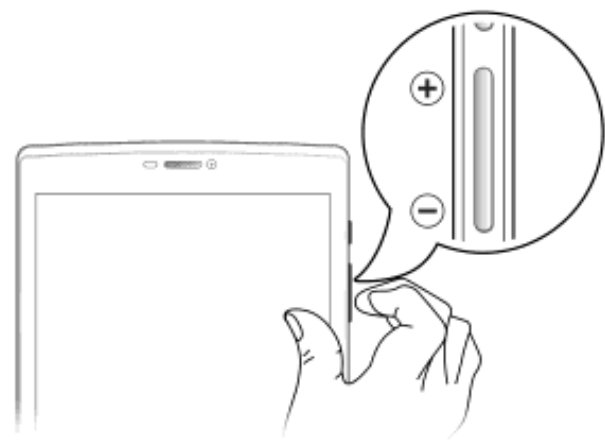


- Use the volume to adjust the volume.

Onscreen Keys	Functions
	Opens the most recently used applications
	Opens the home screen. If you are viewing the left or right extended home screen, opens the central home screen.
	Opens the previous screen you were working on.

Charging the Battery

 Before using the device for the first time, we recommend you to fully charge the battery.

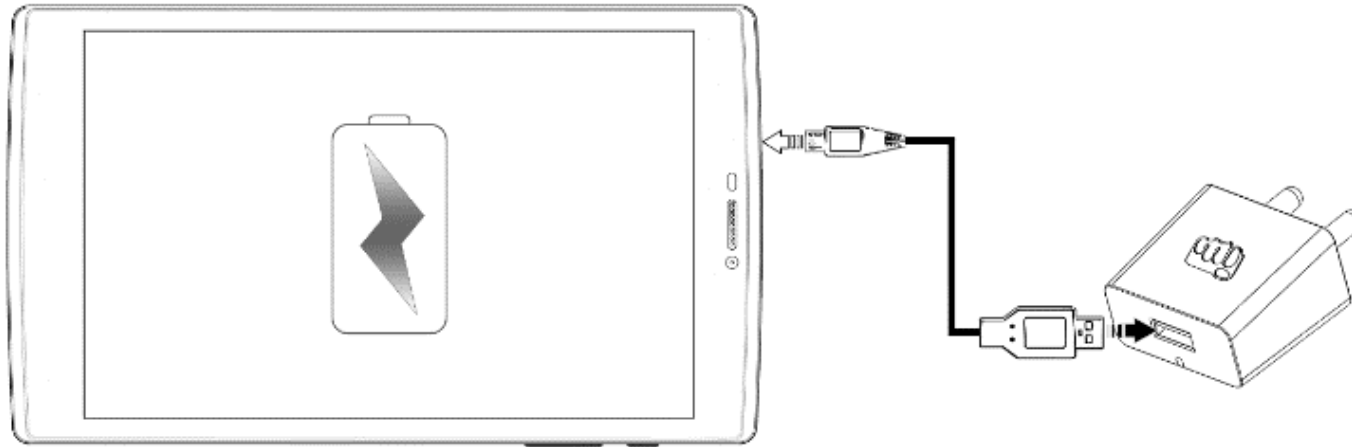

Use only Micromax chargers and cables. Other chargers or cables may damage the battery or your device. This will invalidate your device warranty.

Basic Features

Google Account

Your Google Account lets you take full advantage of applications and services offered by Google. Configure your Google account on this device to get access to your Gmail, Google Play Store, Google Maps, and much more.

When you turn on your device for the first time, Google account setup will display, allowing you to set up your Google account.



Internet connection is required for the Google account setup to appear.

However, you may configure your Google account at any later stage from  →  → **Accounts** → **Google**. Follow the registration steps to successfully configure your mail account on the device.

 If you do not have an existing Google account, you may create one from the account configuring step.

 You may add various other accounts, depending on your applications.


Use Google Search

You can search for anything on your device or on the internet using Google Search by simply typing the search keywords.

Google Search is available on the home screen. To use Google voice search, tap  and speak your search keywords. The tablet will return the Google search results based on your input.

Notifications


Notification icons inform you of new messages and events as and when it appears in the device.

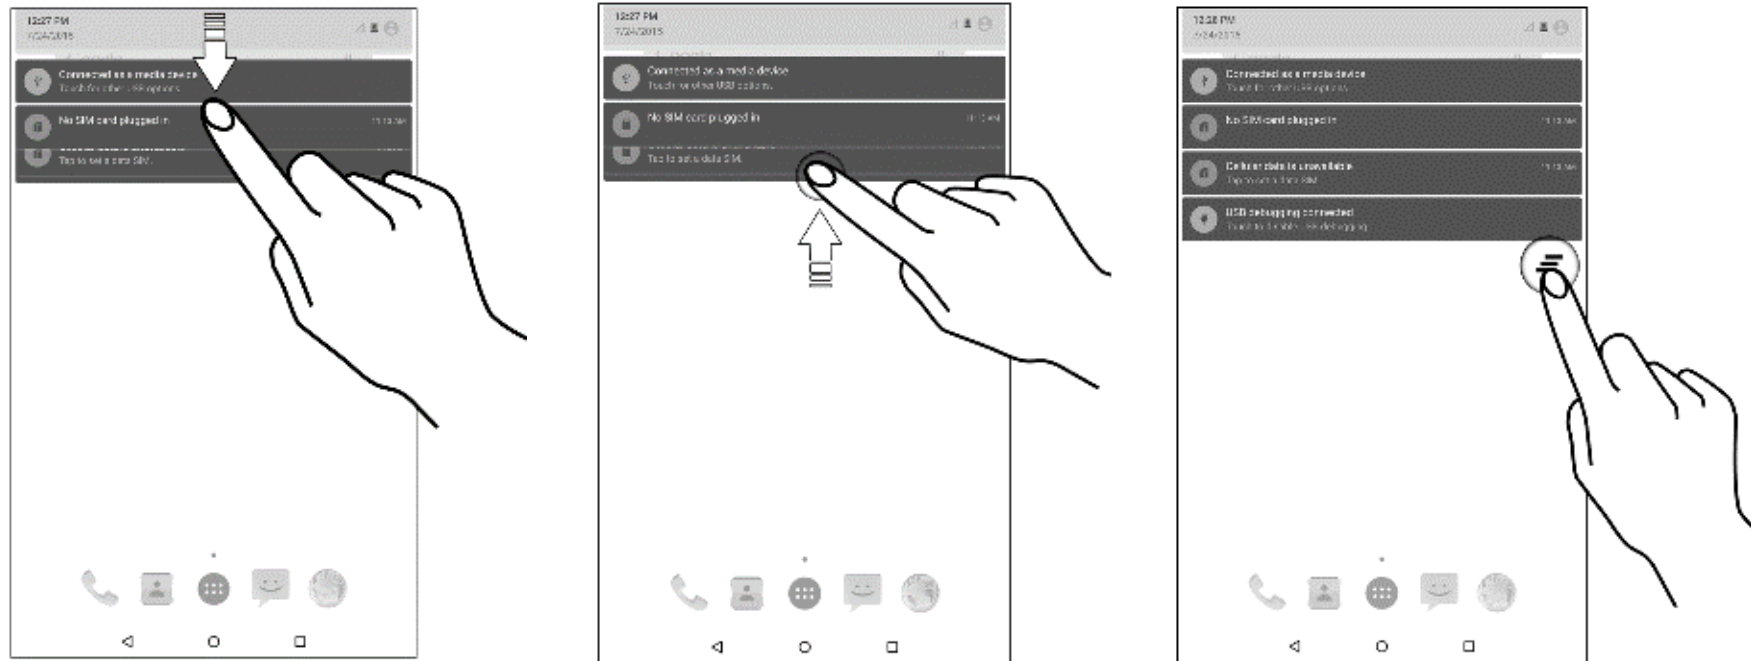 

When you receive a notification, its icon appears in the status bar, along with a brief summary. You may clear each notification separately by swiping it towards the left or right, or, clear all notifications by tapping  icon.

Quick Settings

 Quick Settings give you quick access to basic features such as Airplane Mode, Wi-Fi, Display Brightness, and many more.

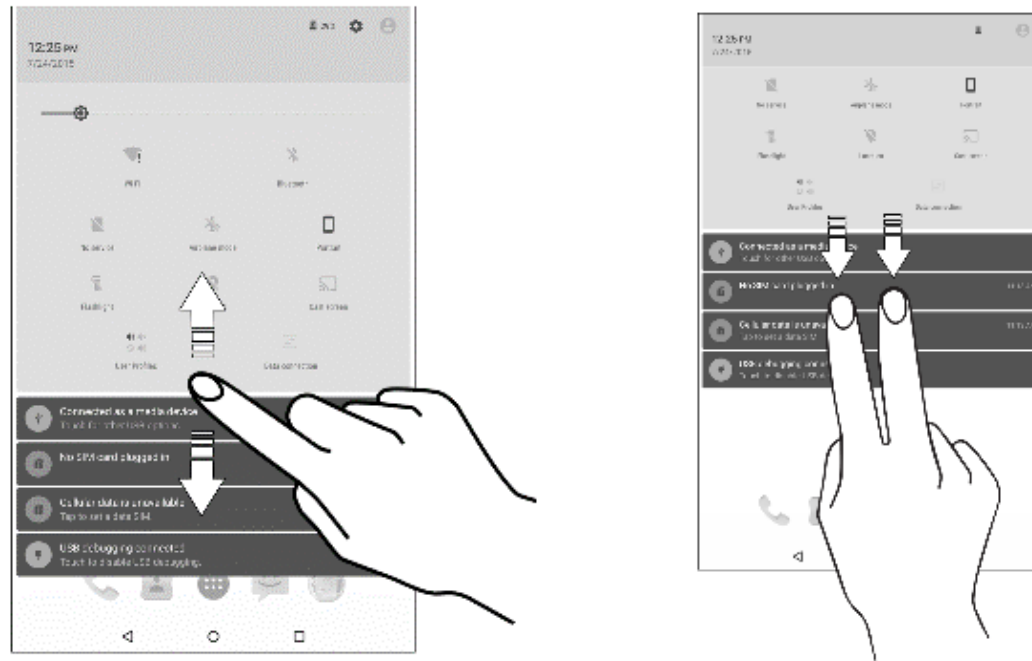


Screen Unlocking Techniques

You can unlock your device using a variety of methods.

The default unlock method is swipe. To unlock the screen, just swipe up on the lock screen.

 Voice unlock

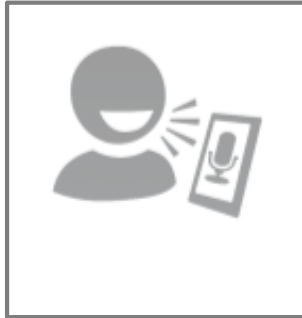

Speak your password to unlock

You need to speak something for the device to recognize your voice and unlock the screen.

 
PIN



Enter your PIN to unlock your tablet

You may enter a PIN and set it as your screen unlocking password.

Pattern

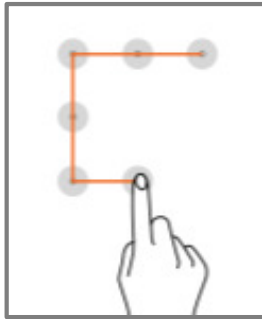

Set and draw your desired pattern

You can set your own pattern by connecting the dots to prevent your tablet from unauthorized access.

Password



Enter your password to unlock

You may enter any desired password and set it as your screen unlocking password.



You may set any desired unlocking technique from  →  → **Security** → **Screen lock**.

You can disable all unlocking methods from your handset by selecting the **None** option.

Settings, Networks, and Applications

Your tablet can connect to a variety of networks and devices, including Internet, Wi-Fi, Bluetooth, devices, such as headsets. You can also transfer files to/from your PC through the data cable.

Connect to the Internet

Connect Via SIM

1. Go to  →  → **SIM cards** and select the SIM which you want to use for cellular data.
2. Go to  →  → **Data usage**. Select the required SIM and turn on Cellular data.

You may also need to configure the access point name for the data connection to work. To configure the access point name:

Go to  →  → **More** → **Cellular networks** → **Access Point Names**. Select the required SIM and then select the access point name from the list.



By default, the access point name gets configured once you insert the SIM, Or, your network provider sends the access point name settings via SMS. You may need to install these settings. If the access point names are not listed by default, please contact your network provider for the same.

Connect Via Wi-Fi

Go to  →  → **Wi-Fi**.

1. If Wi-Fi is turned off, turn it on and tap Wi-Fi. Your device scans and displays the Wi-Fi networks in range.

2. Tap the Wi-Fi network you want to connect to.
3. If the selected Wi-Fi network is password protected, you need to enter the password and connect to it.

Tethering & Portability

You can use your device as a modem and connect your PC/laptop to the Internet. You need to have an active Internet connection on your tablet to use these features.

Go to  →  → **More** → **Tethering & portable hotspot**.

USB Tethering

1. Connect your tablet with your PC/Laptop via USB cable.
1. Select the **USB tethering** option.
2. Select your tablet network as the network connection in your PC/laptop and get access to the Internet.

Wi-Fi Hotspot

1. Switch on **Wi-Fi hotspot** option in your tablet.
2. On the other Wi-Fi enabled PC/laptop/handset, choose your tablet as a Wi-Fi network to connect with it.
3. View and configure Wi-Fi hotspot settings by tapping the **Set up Wi-Fi hotspot** option.

Bluetooth Tethering

1. Pair your device with the Bluetooth enabled PC/laptop via Bluetooth pairing option.
2. Select the **Bluetooth tethering** option in your device.
3. On the paired PC/laptop, select the Bluetooth device (your device) and choose to connect to the internet.

Pair With Bluetooth Devices

Go to  →  → **Bluetooth**

1. If Bluetooth is off, turn it on. Your phone scans and displays the Bluetooth devices in range.
2. Tap the ID of the other device in the list to pair with it.
3. You will be prompted to confirm passkey on both devices.
4. Tap **Pair** to confirm the passkey and pair the devices. On successful pairing, your phone connects to the device.



If the device you want to pair with is not in the list, make sure the Bluetooth on that device is turned on, then tap  and select **Refresh** to search again.

USB OTG (On the Go) for Data Transfer

Your device supports USB OTG, which allows you to directly transfer data between your device and a flash drive / pen drive, using an OTG cable.

Configuring E-Mail

You can check and reply to your emails from your P680 from anywhere and anytime. Apart from the Gmail account, you can configure other accounts too on this device.

1. Go to  →  → **Accounts** → **Add account**. Select the type of account you want to create.
2. Enter the required details to successfully configure your account on the device

The server will check for online settings automatically and your account will be set up. If not, please check your Internet settings

before proceeding.

Google Maps

Google Maps is a web based service offered by Google Inc. which offers you access to various map based services. You can view various streets, landmarks and can even plan your routes with the help of Google Maps. It comes with a navigation system (GPS required) which gives step-by-step route guidance while driving or walking. You can even download maps for offline usage. This serves as a useful application for your day-to-day usage.

- Enable location access from  →  → **Location**.
- Go to  →  to start using Google Maps.

 Internet connection is required for using Google Maps.

 The Google Maps application may not be available in every street, country or region.

 Micromax does not guarantee the accuracy of any directional services.

Play Store

Your Android tablet lets you access unlimited entertainment sources. You can download applications, games, movies, and books from the ever increasing Play Store. New items get added almost daily to the market to give users a never ending fun experience.

To view and manage the list of all inbuilt, downloaded, and running applications go to  →  → **Apps**.

To download applications, games, movies, and books from the Play Store, go to  →  to access the Google Play Store.



Not all items are free of cost in the Play Store.



You need to enable internet connection and configure Google account on your device to get access to the Play Store.

Device Specifications

Battery and Charger	
Voltage	Battery 3.8V
Battery Capacity	4000mAh
AC-DC adaptor I/P & O/P	100-240/5V, 2A
Environmental Rating	45°C max
Humidity Range	75%

Safety Precautions



Switch off your device in any area with potential explosive atmosphere. Sparks arising out of radio frequency may cause fire or explosion. Therefore switch off your device at refueling stations, fuel depots, chemical plants or places where blasting operation is in progress. Remember to comply with legal requirements and local restrictions when using the device.



Your device's radio waves may interfere with inadequately shielded medical devices. Consult a physician or manufacturer of the medical device to know whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations require you to do so.



Always keep the device and accessories out of reach of small children. Small parts such as the SIM card or micro SD card can be dismantled and swallowed by small children.



Do not place the device near electromagnetic data carriers such as credit/Debit cards. Information stored on them could be lost.



Permanent damage to hearing may occur if you use earphones at high volume for prolonged periods. Set your volume to a safe level. If you experience discomfort in your ears, reduce the volume or discontinue the use of your earphones.



Manufacturers of medical devices recommend a minimum distance of 15.3 cm (6 inches) between a wireless device and an implanted medical device such as pacemaker or cardioverter defibrillator to avoid issues arising out of radio frequency interference.



The mains voltage (V) specified on the power supply unit must not be exceeded to prevent damage to the charging device. The power supply must be plugged into an easily accessible AC power socket when charging the battery.



You may only open the device to replace the battery (if not inbuilt), SIM card and micro SD card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the warranty.



The device may cause interference in the vicinity of TV sets, radios and PCs.



Do not use the device while driving. When you have to use the device, please use the earpiece.
Do not put it onto any passenger seat or any place from which it may fall down during collision or emergency braking.



Flight is influenced by interference caused by the device. It is illegal to use the device on the airplane. Please turn off your device during a flight.



The device must be repaired by Micromax authorized personnel only. Repairing this device by yourself other than our authorized service agents/centers goes against the warranty rules.

Taking Care of your device

Your device is a product of superior design and craftsmanship and should be handled with care. The following suggestions will help you protect your device:

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can rust the electronic circuits. If your device gets wet, wipe it with a dry cloth and take it to an authorized service center.
- Do not store the device in high or cold temperature. Extreme temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can get damaged.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Recycle your Device



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipment at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.micromaxinfo.com/weee.php.

Note: Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the device.

Disclaimer

- The colors, specifications, functions and graphics shown/mentioned in the user manual may differ from the actual product. In such a case, the latter shall govern. Images shown are for representation purpose only. Specifications are subject to change without prior notice. Micromax keeps the right to modify the content in this user guide without prior notice.
- Upon first use of your device, your device will send information related to your mobile, IMEI numbers, location details and other software details through SMS* automatically. This information may be used as further specified in Micromax privacy policy**.
- Talk and standby times are affected by network preferences, type of SIM cards, connected accessories and individual usage patterns. Services and some features may be dependent on the network, service/content providers, SIM cards, compatibility of the devices used and the content formats supported.
- Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

*Operator tariff shall be applicable for SMS.

**Micromax privacy policy is available at www.micromaxinfo.com.

Copyright

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.