

Q7 User Manual

INTRODUCTION

Thank you for purchasing this mobile phone. To obtain the best performance of your phone, please read this user manual carefully.

User manual

Table of Contents

1	Safety	5
1.1	Safety Precautions	5
2	Introduction	6
2.1	Phone and Accessories	6
2.2	Parts of the Phone	6
2.3	Description of Display Contents	7
2.4	About SIM Card and the Battery	7
2.5	To switch ON and OFF	9
3	Phonebook.....	9
3.1	To add a Contact.....	9
3.2	To search contact	9
3.3	To dial a number from the Phonebook	10
3.4	To view a Contact	10
3.5	To edit a Contact	10
3.6	To delete a Contact.....	10
3.7	To copy / move.....	10
3.8	Speed dial	10
3.9	Send vCard	10
3.10	Caller groups	11
3.11	To view memory status of Phonebook.....	11
3.12	Add to Blacklist.....	11
3.13	Multi Operation	11
3.14	Import and Export	11
3.15	Phonebook Settings	11
4	Calling	12
4.1	To dial from the Phonebook	12
4.2	To activate 'mute' during a call	12
4.3	To view contacts during a call	12
4.4	DTMF (Dual Tone MultiFrequency) tone	12
4.5	Call divert.....	12
4.6	Call waiting.....	12
4.7	Conference Call	13
4.8	Call Barring.....	13
5	Call history	14
5.1	Missed calls/dialed calls/received calls	14
5.2	Delete call logs	14
6	Messages.....	14
6.1	Write SMS	14
6.2	SMS Inbox	14
6.3	SMS Draftbox	15
6.4	SMS Outbox	15

User manual

6.5	Templates.....	15
6.6	SMS Settings	15
6.7	SMS counter.....	16
6.8	Send MMS.....	16
6.9	MMS Inbox.....	16
6.10	MMS Outbox.....	17
6.11	MMS Draftbox.....	17
6.12	MMS Settings.....	17
6.13	Templates.....	17
6.14	Voice Mail Server	17
6.15	EMAIL.....	18
6.16	Broadcast Message.....	19
7	Settings	20
7.1	Customized Phone Settings	20
7.2	Profile Setup	21
7.3	Safety	21
8	Multimedia and Entertainment	23
8.1	Camera	23
8.2	Image Viewer	23
8.3	Video Recorder	23
8.4	Video Player.....	24
8.5	Audio Player.....	24
8.6	Sound Recorder.....	24
8.7	FM Radio.....	25
9	Fun & Games.....	25
9.1	Games.....	25
9.2	Java	26
10	Bluetooth	26
10.1	To Activate/deactivate Bluetooth Connectivity	26
10.2	To Search/Inquire Audio Device.....	26
10.3	To Search My (new) device	26
11	Organizer.....	27
12	File Manager	28
13	WAP Services	29
13.1	WAP Browser	29
13.2	WAP Setup	29
14	STK	30
14.1	STK Services	30
15	Maintenance	31
16	Taking Care of your Device	32
17	After Services	33

1.1 Safety Precautions

-  Please read through the following briefings carefully, and act in accordance with these rules, so as to prevent causing any danger or violating any law.
-  **Safe driving**
- 1) Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
 - 2) Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.
-  **Turn off during a flight:** Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.
-  **Turn off the phone when within an area where blasting takes place:** Be sure to strictly observe the related laws and statutes by turning off the phone when you are within, or in the vicinity of, an area where blasting takes place.
-  **Turn off the phone when any dangerous goods are in vicinity:** Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.
-  **In hospital:** Please obey the related rules or bylaws of the hospital when using your phone in a hospital. Be sure to turn off your phone when near any medical equipment. Your use of any wireless transmission equipment, inclusive of the phone, will interfere with any medical equipment that is not protected fully, and other electronic equipment items, too. Should you have any question in this regard, please consult a related physician or medical equipment supplier.
-  **Interference:** Each and every phone's performance may be affected due to radio interference.
-  **Professional service:** The phone must be installed or repaired by no other personnel than professionals. You are likely to suffer a huge risk when you install or repair this phone by yourself, which also goes against the warranty rules.
-  **Fittings and battery:** You shall use the fittings and battery acknowledged by the phone manufacturer only. Using unauthorized accessories may tamper the warranty of the device.
-  **Proper use:** Please use the phone in the normal way. Do not touch the antenna unnecessarily after the phone is turned on.
-  **Emergency call:** You may enter a telephone number (112, etc.) to ask for emergency help after making sure that the phone has been turned on and is in the service status. Press the Send Key to call out.

Disclaimer: Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the mobile phone. Our company keeps the right to make modifications to any of the content here in this user guide without public

User manual

 
announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such case, the latter shall govern.

2 Introduction

2.1 Phone and Accessories

Open the packing box of the phone and check that you have the phone, charger, battery, USB cable, earphone and user manual.

2.2 Parts of the Phone

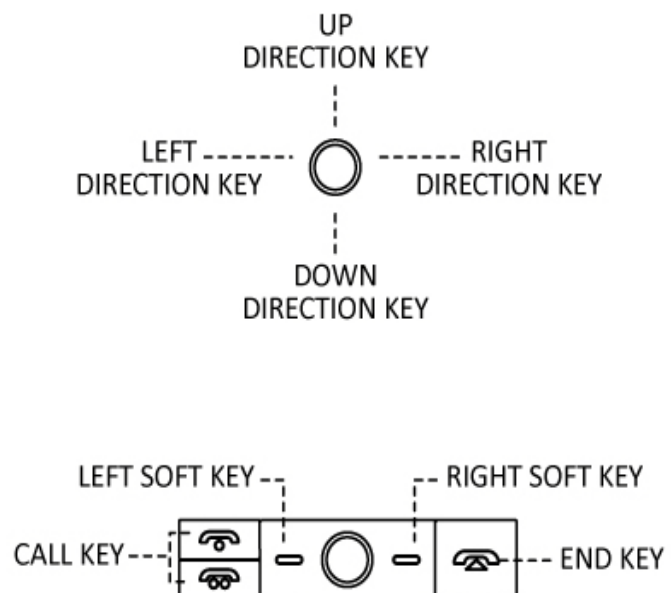

2.3 Description of Display Contents

The table below lists the icons that may appear on the status bar according to the current priority of the phone.

	Icons	Description
1		It appears the phone is in related service area. The signal strength is divided into 5 grades, and the specific display content depends on the signal strength of the area where the phone set is located.
2		Indicates the current residual battery power:
		The power is full.
		The power is moderate.
		The power is low.
		The power is to be used up.
3		It appears when the phone is set to mute during a call.
4		It appears when the phone is in roaming status. The function needs the support from the network operator.
5		It appears when the GSM Divert All Calls function is activated.
6		Indicates you have unread SMS. If the message capacity is full, it will blink.
7		Indicates you have unread MMS. If the message capacity is full, it will blink
8		Indicates the current profile:
		The means of prompt is "Ringtone".
		The means of prompt is "Vibrating Alert".
		The means of prompt is "Vibrating and Ringtone".
		The means of prompt is "Vibrating then Ringtone".
10		It appears when the earphones are plugged in.
11		It appears when the alarm is activated.
12		It appears when the key lock is activated.
13		There are any missed numbers.
14		Indicates you have unread voice messages in the voice mailbox.
18		Audio Player is activated.
19		Bluetooth is activated.
20		WIFI is activated

2.4 About SIM Card and the Battery

 
Please store the cards out of childrens reach.

The card and the contacts are vulnerable to damages due to scratching or bending. Therefore, be careful when using, inserting or removing the cards.


Be sure to switch off the phone before you insert or remove the battery or the card, otherwise, the phone may be damaged.

User manual

Inserting SIM card and battery

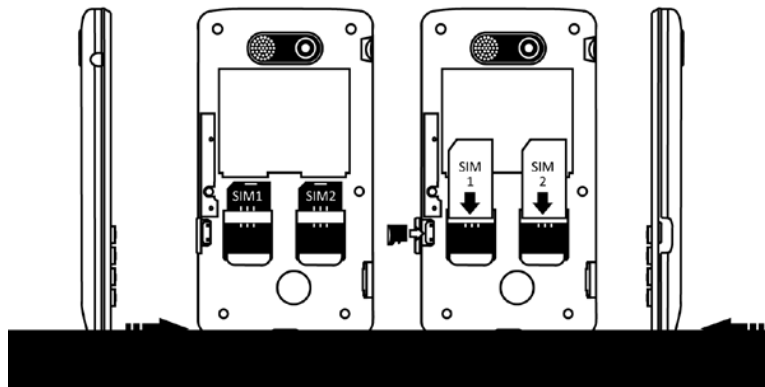

Charging the battery

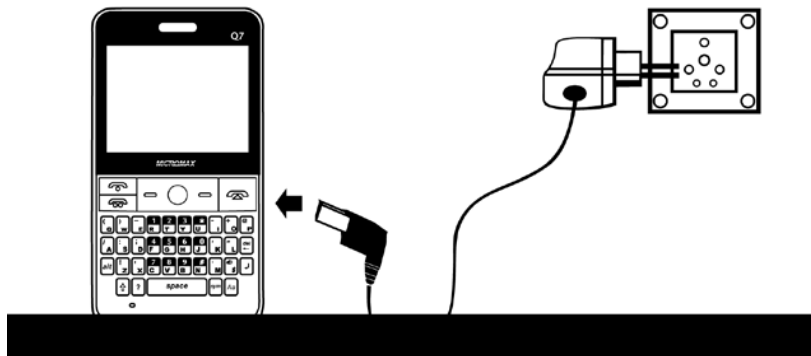 

1. Insert the plug of the charger into the interface of the phone, and insert the charger into the power socket carefully. The battery icon will blink.
2. The red light is lit during charging. When the battery icon stops blinking or the green light is lit, it indicates that the charging is finished.
3. After the charging, unplug the charger from the socket, and press and hold the left and right buttons on the plug of the charger to pull out the plug from the phone.

Tips:


The battery icon  displayed on the screen indicates that the battery power is low. Please charge the battery following the steps above.

Please charge the battery before you use the newly purchased phone. We suggest you charge the battery for 4 hours continuously for the first time.

Charging when the phone is in the ON mode will not influence the normal dialing and answering, but this needs to consume power, thus the time of charging will increase.

We suggest you recharge the battery when the power is used up so as to prolong the life of the battery.

 Connecting the Hands-free Kit



2.5 To switch ON and OFF

To switch on: Long press **End key** when the phone is in the OFF mode.

If the phone lock has been activated, you need to enter the 4-digit password to unlock. (The preset unlock code is 0000.)

If the SIM card has been inserted in the phone, and the related PIN code protection is activated, you need to enter the 4-8 digit password to unlock.

Warning: If you enter three wrong PIN codes in a row, the SIM card will be locked and you need to enter the PUK code to unlock. Both the PIN code and PUK code are provided by the network operator.

To switch off: In the standby mode, long press **End key**.

3 Phonebook

You can store names and phone numbers in the memory of the phone or SIM card. The phone memory stores up to 500 entries, each of which contains name, 4 phone numbers (mobile, home, office and fax), company name, e-mail address and birthday. You can set photo caller ID, ringtone and groups for each.

Menu > Phonebook

3.1 To add a Contact

In idle, enter phone numbers.

Options > Save > Select the location for saving

Or: **Menu > Phonebook > Add new contact >** Select the location for saving

You can edit the name, mobile phone number, home phone number, company name, e-mail address, office phone number, fax number, birthday, photo caller ID, ringtone and group of each contact. (The number of columns may be set by you in the **[Fields]** in the **[Settings]**).

3.2 To search contact

Menu > Phonebook > Search contact > Enter characters

Options > Search

3.3 To dial a number from the Phonebook

Or **Menu > Phonebook > Search contact > Input characters**

Options > Search

The desired contact will be highlighted. Press **Send key** to make a call.

Tip: If the entry contains more than one numbers, the number selection screen will be displayed. You can select one and press **Send key** to dial.

3.4 To view a Contact

In the contact list of the Phonebook, select the required name card:

Options > View

3.5 To edit a Contact

In the contact list of the phonebook, select the name card to be modified:

Options > Edit

3.6 To delete a Contact

In Contacts list, select the entry you want to delete: **Options > Delete**

You can delete all entries from SIM card or Phone by:

Menu > Phonebook > Delete > From SIM/From phone.

And, you can also delete the name one by one:

Menu > Phonebook > Delete > One by one.

3.7 To copy / move

In the contact list of the Phonebook, select the name card to be copied/moved:

Options > Copy / Move

Tip: "Copy" means copying to other storage location. You can copy all entries stored in the SIM card to the phone memory: Select **Menu > Phonebook > Copy all > From SIM / From phone.**

3.8 Speed dial

You can specify speed dial numbers to frequently used phone numbers.

Long press the number keys **2-9** on the dial plate to display a corresponding phone number on the screen, and press **Send key** to dial the phone number. (The **1 key** correspond with Voice Mailbox.)

Tip: You must have set a speed dial number for that number key, and the Speed Dial function has been activated.

3.9 Send vCard

Open the Phonebook; select one you want to send:

Options > Send vCard

Send by SMS: Send this vCard by SMS.

Send by Bluetooth : Send this vCard by Bluetooth to Bluetooth equipment.

Save as file : Send this name to **File manager**.

3.10 Caller groups

Menu > Phonebook > Caller groups

Select the group to be set:

To edit the name: Highlight the name and select **Edit**.

To select a ringtone: Press **Navigation key (Left/Right)** to select a ringtone for this group. If you select **none**, when a call from the number of a group comes in, the default ringtone designated by system will be played.

To select a picture: Press **Navigation key (Left/Right)** to select a picture for this group. If you select **none**, when a call from the number of a group comes in, the default picture designated by system will be displayed.

To select a group member: Enter the list of group members, and select **Options > Ok**.

Tip: You can select group members from the entries stored in the phone only.

3.11 To view memory status of Phonebook

Menu > Phonebook > Settings > Memory status

The screen will display the current memory status of the Phonebooks of the SIM card and the phone memory.

3.12 Add to Blacklist

Menu > Phonebook > Add a contact> Options > Add to Blacklist

Allows you to ignore calls by adding a desired number to the blacklist.

3.13 Multi Operation

Menu > Phonebook > Add a contact> Options > Multi Operation

Allows you to mark a single or mark all enteries from the phonebook and perform functions like: send text message, delete selected and add to blacklist/whitelist)

3.14 Import and Export

Menu > Phonebook > Add a contact> Options > Impor&Export

This feature allows you to Import and Export contacts from your phone to the PC and vice-vera.

3.15 Phonebook Settings

Menu >Phonebook> Phonebook Settings > Preferred storage

Under this feature you can view the following options:

- Preferred Storage
- Speed Dial
- Myvcard
- Extra Numbers

- Save contact notify
- Memory Status

4.1 To dial from the Phonebook

Enter the **Phonebook**, select an entry from the entry list and press **Send key** to dial.

Tip: If the entry contains more than one numbers, the number selection screen will be displayed. You can select one and press **Send key** to dial.

4.2 To activate 'mute' during a call

During a call, you can prevent the other party from hearing you:

While on call> Press the Righ Soft Key (RSK)

4.3 To view contacts during a call

You can search a phone number from the Phonebook during a call:

Options > Phonebook

4.4 DTMF (Dual Tone MultiFrequency) tone

During a call, you can select to turn ON or turn OFF the DTMF tone. When the DTMF tone is turned off, the digits entered will not be regarded as a DTMF signal response.

During a call:

4.5 Call divert

With the Call Divert function (needs network support), you may divert incoming calls to another mobile phone or a direct line telephone, but not to any extensions of a fixed telephone.

Menu > Settings > Call settings > SIM1 call settings>Call divert

4.6 Call waiting

This function allows you to put the current call on hold and then answer a second one.

If, during a call, a new call comes in, you will hear a special alert sound and the screen will display the number of the new incoming call, which indicates that a third-party call is coming in and waiting for to answer.

To answer the new call: Press Send key or select Options > Answer

To reject the new call: Press Reject or press End key

To end the current call: Select Options > End active

If you answer the new call, the first call will be held and you will hear the hold alert sound.

To switch between calls: Press Send key or select Options > Swap

To end the select call : Select Options > End Single call

To end the current call: Press End key

Menu > Settings > Call settings > SIM1 call settings>Call Waiting

The function needs the support from the local network. In some districts, you can use the

function only after you apply to the local network operator.

Menu > Settings > General call settings > Call waiting

4.7 Conference Call

The phone supports Three-party Calling. A Three-party Calling, also called a multiparty call or a conference call, is a service based on call waiting. It is applicable to dual standby with GSM network.

The function needs the support from the local network. In some districts, you can use the function only after you apply with the local network operator.

During a call, you may dial other numbers without hanging up the current call, and use the functions provided during the call to connect to new parties and make a three-way calling. You may conduct a three-way calling containing up to five parties.

Ask the other party of the current call not to disconnect, and select Options > Pause to hold the current call.

Select Options > **New call** to enter and dial a new number, then talk with him/her after he/she answers your call.

Select Options > Conference to connect all the parties and form a conference.

1. Continue to dial new numbers, and repeat the steps above to add more parties to the conference.

Tip: After a conference is formed, if you press End key, you will end all the calls.

4.8 Call Barring

The function is a GSM network service and can restrict outgoing and incoming calls selectively. If you need to change the settings of Restrict Calls, please contact your network operator to obtain the password for opening this service.

Menu > Settings > Call settings > SIM1 call settings>Call Barring

5 Call history

5.1 Missed calls/dialed calls/received calls

Press the top Calling Key to view> Dialed calls / Received calls/ Missed calls/ Rejected Calls

You may select

View: View the desired entry

Call: Call the desired entry

Save to Phonebook: to save the number to the Phonebook

Edit: to edit the number to dial or save to the phonebook.

Send SMS: to write SMS to send to the number.

Send MMS: to write MMS to send to the number.

Add to blacklist: add a number you wish to avoid/ignore under blacklist

Add to whitelist: add a number to the whitelist

Delete: to delete the entry.

Delete All: delete all the registered entry in one go.

Advanced:

5.2 Delete call logs

Press the top calling key> Options>Delete call logs

You may select to delete **Missed, Dialed, Received** or **All** calls.

6 Messages

6.1 Write SMS

Menu > Messages > Write SMS

Write the content of the SMS, **Options >**

Input Method: select Multitap abc/Numeric/Insert Symbol

Insert template: select a phrase from the list and insert it into the SMS.

Advanced: Insert object/Insert contact/Format text (embellish the characters of text)/ Insert bookmark.

Save to Drafts: Allows you to save a message that you wish to send later to 'drafts'

6.2 SMS Inbox

Menu > Messages > SMS > Inbox

To read a message, move to the entry and press **OK**

When reading a SMS, you can select **Options >**

View: Allows you to view the SMS received.

Reply: Allows you to reply to the SMS received.

Call Sender: Allows you to call the number from which the SMS was received.

Forward: forward the entry to others.

Delete: delete the message.

Delete all: delete all the messages from the Inbox.

Save to Phonebook: Allows you to save the number from which the sms was received to the phonebook.

Mark Several: Allows you to mark one or several messages to either delete or copy/move from one destination to another.

Mark as Unread: Allows you to mark the message as 'unread'.

Advanced

- Copy to phone/SIM: copy the SMS stored in SIM/phone to the phone/SIM.
- Move to phone/SIM: move the SMS stored in SIM/phone to the phone/SIM.
- Copy all: copy all the messages stored in SIM to the phone memory, or copy all the messages stored in the phone memory to SIM.
- Move all: move all the messages stored in SIM to the phone memory, or move all the messages stored in the phone memory to SIM.

6.3 SMS Draftbox

Menu > Messages > SMS > Drafts

This allows you to read the Messages that failed to send and those saved during editing, the same available operations as Outbox in 6.3 above.

6.4 SMS Outbox

SMS that have been sent and saved are stored in Outbox.

Menu > Messages > SMS > Outbox

To read a message, move to the entry and press **OK**

When reading an SMS, you can select **Options >**

Send: select how to send.

Edit: edit the message.

Delete: delete the message.

Copy to phone/SIM: copy the SMS stored in SIM/phone to the phone/SIM.

Move to phone/SIM: move the SMS stored in SIM/phone to the phone/SIM.

Delete all: delete all the messages from the Outbox.

Copy all: copy all the messages stored in SIM to the phone memory, or copy all the messages stored in the phone memory to SIM.

Move all: move all the messages stored in SIM to the phone memory, or move all the messages stored in the phone memory to SIM.

Use number: extract the number of the receiver and the number(s) contained in the SMS into a list (up to 6 numbers), and select to dial or save it/them in the Phonebook.

6.5 Templates

The phone has preset frequently used phrases which may be selected and added to the text when you are editing SMS. Preset phrases may be modified.

Menu > Messages > SMS > Templates

6.6 SMS Settings

Menu > Messages > SMS > SMS settings

Profile settings

Voicemail Server

Common settings

- **Delivery Report:** Get the delivery report when the message is successfully delivered to the recipient.
- **Reply Path:** Whether to use the service center which send the message to reply.
- **Save sent message:** Allows you to choose the option of saving the sent messages.

Memory status

- **Check the message memory status of the SIM and the phone.**

Preferred storage

- **Select preferred storage.**

6.7 SMS counter

Menu > SMS > SIM1 / 2 text message counter

6.8 Send MMS

MMS, which contains text, picture, video and ringtone, is sent through the MMS center to another mobile phone or an e-mail account.

The phone supports sending and receiving MMS by EDGE, and multiple-sending.

Menu > Messages > MMS > Write MMS

Select **Option**:

Add Text: write text.

Add Audio: select an Audio from **File Manager** and add to the MMS.

Add Image: select an image from **File Manager** and add to the MMS.

Add Video: select a Video from **File Manager** and add to the MMS.

Edit Number: enter the number edit screen.

Send: send the MMS.

Tip: The phone supports multiple-sending (up to 20 numbers). You can also send MMS on Email.

6.9 MMS Inbox

Menu > Messages > MMS > Inbox > Option

View: read the highlighted MMS.

Delete: delete the highlighted MMS.

Select and Delete: select MMS to delete.

Delete All: delete all the MMS from the Inbox.

When reading a MMS, you can select **Option >**

Previous/Next Frame: view previous/next frame.

Auto Play: To activate or deactivate the auto play function.

Reply: reply the MMS.

Call Back: dial the number of the sender.

Forward: forward the MMS to others.

View Objects: view, play and save the objects contained in the MMS.

Save Phone Number: save the number of the sender in the Phonebook.

Delete: delete the MMS.

6.10 MMS Outbox

MMS which have been sent or can't be sent are stored in the Outbox.

Menu > Messages > MMS > Outbox > Option

View: read the highlighted MMS.

Delete: delete the highlighted MMS.

Select and Delete: select MMS to delete.

Delete All: delete all the MMS from the Outbox.

When reading a MMS, you can select **Option >**

Previous/Next Frame: View Previous/next frame.

Resend: send the MMS again.

Forward: edit and forward the MMS to others.

Delete: delete the MMS.

View Objects: view the objects contained in the MMS.

View to: view the detailed information on the sender.

6.11 MMS Draftbox

MMS saved during editing are stored in the Draft.

Menu > Messages > MMS > MMS Draftbox > Option

View: read the highlighted MMS.

Delete: delete the highlighted MMS.

Select and Delete: select MMS to delete.

Delete All: delete all the MMS from the Draft.

When reading a MMS, you can select **Option >**

Previous/Next Slide: view Previous/next slide.

Edit: edit the MMS.

Delete: delete the MMS.

View Objects: view the objects contained in the MMS.

6.12 MMS Settings

Menu > Messages > MMS > MMS Setting

1. Server Profile.
2. Common Settings

6.13 Templates

The phone has preset frequently used phrases which may be selected and added to the text when you are editing SMS. Preset phrases may be modified.

Menu > Messages > SMS > Templates

6.14 Voice Mail Server

The phone supports Voice Mail.

Menu > Messages > SMS Settings > SIM1/ 2 Message Settings > Voice mail server

Set the voice mail numbers. When connecting, you can call and listen to the voice mail.

Tip: If you have set the voice mail number, press and hold **1 key** on idle screen to dial the corresponding number.

6.15 EMAIL

E-Mail

Before use, you need to set the e-mail in the “E-mail accounts” menu. Via this menu, you can receive and send e-mail.

- Send and Receive: You can send/receive the e-mail from the specified mailbox.
- Write Email: You can edit e-mails.
- Inbox: You can see the received e-mails.
- Outbox: You can see the sent e-mails.
- Sent: You can view send e-mails.
- Drafts: You can see the drafts in the specified mailbox.
- Clear mailbox: You can clear the e-mails in the specified mailbox, including inbox, outbox, sent e-mail backup and drafts, or clear all e-mails.
- Delete marked emails: You can change the status of all e-mails to deleting status.
- Email accounts: You can set up you new account.
- Templates: you can pre-edit some common phrases, which is convenient for quick editing.
 - Incoming Server: You can set the server parameters for the received e-mails, including Incoming server, Incoming port, user name and password etc.
 - Signature: You can set it On or Off and edit the signature.

The first step in using email on your mobile phone is to define your email account’s settings so that your mobile phone knows which server to contact and to login using the correct credentials.

TO CONFIGURE A NEW EMAIL ACCOUNT:

Go to:

- Email >Email accounts> Options >New Account> Start to create account >Email address >Options >Next > Select email protocol (‘POP3’ or ‘IMAP- as per the account settings).
- Next >Select Data account (as per the SIM connection) > Incoming Server (edit email incoming server as per the account standard settings).
- Next > Outgoing Server (edit email outgoing server as per the account standard settings) >User Name > Password > Account Name > Options > Done (email account is created)
- Go to- Created email account >Options > Edit (user can edit email account settings if required)
 - Advance Settings > Outgoing Sever > Outgoing Port (Input correct outgoing port according to the email configuration).
 - Advance Settings > Incoming Server > Incoming Port (Input correct incoming port according to the email configuration)
- Go to- Configured email account > Options > Activate

You email account is now created!

6.16 Broadcast Message

Menu > Messages > Broadcast Message

The phone supports Broadcast Message. It is supported by GSM network. Broadcast messages are single-way messages sent to the users of the network operators by the message service center. For the contents and channel setup of broadcast messages, consult your network operator.

You need to set Receive Broadcast Message to **On** before you can use Broadcast Message.

Tip: If you have opened and turned on Broadcast Message, you can select **Read Message** to browse the broadcast messages received. The phone will display 5 broadcast messages at most, since old messages will be replaced by the messages newly received.

7.1 Customized Phone Settings

Functions	Description
Set time and date	Menu > Settings > Phone setup > Time and date
Schedule power on/off	Menu > Settings > Phone setup > Schedule power on/off To disable and enable status; to activate/deactivate, switch on/off, and time in turn.
Select language	Menu > Settings > Phone setup > Language
Set Display characteristics	Menu > Settings > Phone setup > Display Setup > Wallpaper/Screen saver/Show date and time/ Show owner number/Clock type/Screen switch effect.
Set greeting text	Menu > Settings > Phone setup > Greeting Text
Specify the dedicated key	Menu > Settings > Phone setup > Dedicated key By default: Up > Audio player Down > Write SMS Left > Inbox Right > Camera
Auto update of date and time On/Off	Menu > Settings > Phone setup > Auto update of date and time
Set LCD Backlight	Menu > Settings > Phone setup > LCD backlight
Caller ID- Set by Network	Menu > Settings > Call settings > SIM1/2 call settings>Caller ID
Set call waiting	Menu > Settings > Call settings > SIM1 call settings>Call waiting
Set call divert	Menu > Settings > Call settings > SIM1 call settings> Call Divert Tip: You can select Cancel all divert to cancel all the divert settings.
Set Call barring	Menu > Settings > Call settings > SIM1 call settings> Call Barring. Restrict Calls is a GSM network service. Please contact your network operator to obtain the password for opening this service.
Set the black list	Menu > Settings > General call settings > Black List
Activate / deactivate the Call times display	Menu > Settings > General call settings > Call time display > On / Off
Activate / deactivate the Call time alert	Menu > Settings > General call settings > Call time reminder You can select Single or Periodic .
Select network	Menu > Settings > Network Setup > Network selection New Search: The phone will select a new network automatically. Select Network: The phone will search and display the list of known networks for you to select the desired one, after which, the phone will try to log in the selected network. If the selected network is registered successfully, it will prompt so. Selection Mode: To switch search methods.

User manual

Select preferred network	Menu > Settings > Network setup > Preferred networks
Set information of GPRS Connection	Menu > Connectivity> Data account>GPRS/GSM Data
Restore factory default	Menu > Settings > Restore factory settings Tip: You need to enter the phone password when you want to restore factory default. The preset phone password is 1234 . Please bear your password in mind. Incase you forget it, contact the local dealer or an authorized service center.
To Enter Shorcuts and WIFI	Short press the 'space bar' to view the shortcuts. Long Press the 'space bar' to enter WIFI

7.2 Profile Setup

Functions	Description
Activate the profile mode	Menu > Settings> User profiles > Desired mode>Options > Activate
Activate 'vibration mode' in idle condition	Long press the \$ key on your keypad to activate the vibration mode
Set the ringtone for incoming calls	Menu > Settings > User profiles > SIM1 1 Incoming call-Options > Customize> Tone setup> Incoming call
Set the ringtone for messages	Menu > User profiles > Desired mode>Options > Customize > Tone setup > Message tone
Set the ringtone for key pad tone	Menu > User profiles > Desired mode>Options > Customize > Tone setup > Keypad tone
Adjust the volume of Ring Tone / Key Tone	Menu > User profiles > Desired mode>Options > Customize > Volume
Set Alert Type of ringing	Menu>User profiles>Desiredmode>Options> Customize >Alert type
Set the ringtone type	Menu > User profiles > Desired mode>Options > Customize > Tone setup
Set the Extra Tone	Menu > User profiles > Desired mode>Options > Customize > Extra tone
Set the answer mode	Menu > User profiles > Desired mode>Options > Customize > Answer mode

7.3 Safety

Functions	Description
PIN code request	Menu > Settings > Security center>Security setup>SIM lock Warning: If you enter three wrong PIN codes in a row, you need to enter the PUK code to unlock. PIN code and PUK code are provided by the network operator.
Phone lock	Menu > Settings > Security center > Phone lock The preset password is 0000
Auto keypad lock	Menu > Settings > Security center> Phone lock > Auto keypad lock > Select the time for the auto keylock.

User manual

	Note: Long press the  key on your keypad to lock/unlock the phone.
Change password	Menu > Settings > Security Center> SIM1Security setup > Change password

8 Multimedia and Entertainment

8.1 Camera

Menu > Multimedia > Camera:

When the camera is activated, the phone enters the view finding status.

On the view finding screen, press **Ok Key** to capture.

Tip: If in weak light, such as night or indoor scene, the ISO Sensitivity may increase, which will cause noise or mottle.

Before shooting, you can set the following as needed. Select **Options >**

Photos: enter the photos.

Camera settings: set EV, Banding, delay timer, shutter sound, contrast and cont. shot,

Image settings: set the size and quality of photos.

White balance: set White Balance.

Scene mode: set scene mode.

Effect settings: set the special effects of photos, such as Grayscale, Sepia, Sepia Green and Colour Invert.

Storage: select phone or memory card.

Restore default: restore default settings.

8.2 Image Viewer

Menu > Multimedia > Image viewer

Or on the view finding screen, select **Options > Photos**

The phone will automatically read the entries with the format supported by the phone under the folder **Photos** of **File manager** and display a list of entries. If there is no entry, the list is blank.

On the Image viewer list screen, select **Options>**

View: view the highlighted photo.

Slide show: view images as a slide show.

Browse style: select the style of viewing.

Use: set the highlighted photo as wallpaper, screen saver, or the photo caller ID of a Phonebook entry.

Send: send the photo by MMS or Bluetooth, Email

Rename: rename the highlighted file.

Delete: delete the highlighted file.

Delete all files: delete all the files from the list.

Sort by: sort the files in the list.

Storage: select phone or memory card.

8.3 Video Recorder

Menu > Multimedia > Video recorder

•Press **Ok Key** to record. When recording, press **Ok Key** to pause the recording, and press

Ok Key again to resume recording.

Tip: If in weak light, such as night or indoor scene, the ISO Sensitivity may increase, which will cause noise or mottle.

Before recording, you can set the following as needed. Select **Options >**

To player: enter video player.

Camcorder settings: set White Balance, EV, Night Mode and Banding.

Video settings: set the Video Quality, File size limit, Rec time limit, and record audio.

Effect settings: set the special effects, such as Grayscale, Sepia, and Sepia Green etc.

Restore default: restore default settings.

8.4 Video Player

Menu > Multimedia > Video player

Or, on the view finding screen, select **Options > To player**

The phone will automatically read the entries with the format supported by the phone under the folder **Videos** of the **File manager** and display a list of entries. If there is no entry, the list is blank.

On the video player list screen, select **Options >**

Play: enter the play screen of the highlighted file. Select **Ok Key** to begin/pause playing; press **Navigation key (Up/Down)** to adjust the speed, press **Navigation key (Left/Right)** to adjust the progress.

Send: send the video by MMS or Bluetooth.

Rename: rename the highlighted file.

Delete: delete the highlighted file.

Delete all files: delete all the files from the list.

Sort by: sort the files in the list.

Storage: select phone or memory card.

8.5 Audio Player

The music player supports these formats: MP3, Midi, WAV, AWB, AMR and IMY.

Menu > Multimedia > Audio player

Create Play list

Before you start to enjoy the music for the first time, you need to create a play list.

You can create a play list automatically.

1. In Settings, activate List Auto Gen.

2. On the play list screen, select **Options > Refresh List**.

3. The phone will add the tracks with the format supported by the phone under the folder **My music** of the **File Manager** to the play list automatically.

Add to Rings

Rings are the list of ringtones selectable in the profile mode setup. You can select a single track and add it to the Rings.

On the 'play list' screen, select a track and select **Options > Add to ringtones**

8.6 Sound Recorder

Menu > Multimedia > Sound recorder

On the Sound Recorder list screen, you can select:

New Record: begin recording. The recordings will be saved in the folder **Audio** under the **File Manager** automatically.

Play: play the highlighted recording.

Append: continue to record the highlighted recording. (The format must be AMR or AWB).

Rename: rename the highlighted recording.

Delete: delete the highlighted recording.

Delete all files: delete all the recordings from the list.

Settings: set the format of the recording.

Use: send the highlighted record to the ringtone list for profiles.

Send: send the highlighted record by MMS, Bluetooth or Email.

8.7 FM Radio

Menu > Multimedia > FM radio

Edit the channel list manually:

Options > Channel list

Options > Edit

Edit the channel list automatically:

Options > Auto search

Play on the background play

Options > Settings

Set the function **On** or **Off**.

Listen in by Loud Speaker:

Options > Settings

Set the speaker **On** or **Off**.

When Playing :

Navigation key (UP): Set the search mode **On** or **Off**.

Navigation key (Down): Play/Stop.

Navigation key (Left/Right): search for the previous/next channel on search mode or adjust the frequency length by length.

9 Fun & Games

9.1 Games

Menu > Games

9.2 Java

Menu > Applications> Java

You can install Java applications to enhance the multimedia function. Allows you to connect to Facebook and Operamini as well.

Run JAVA

Menu > JAVA > Run JAVA

10 Bluetooth

Tip:

1. You can connect wirelessly to other compatible device with Bluetooth technology. Compatible devices may include computers, mobile phones. You can use Bluetooth connectivity to send images, music and sound clips, video clips, and notes.
2. Since devices with Bluetooth wireless technology communicate using radio waves, your devices and the other devices only need to be within 10 meters of each other, but the connection may be subject to interference or could face obstruction from stuff such as wall or from other electronic devices. Use the wireless technology of blue-tooth to be able to consume battery quantity of electric charge. If you are restricted by something when using blue-tooth technology, Consult local authorities please.

10.1 To Activate/deactivate Bluetooth Connectivity

Menu > Connectivity >Bluetooth > Power (On/Off)

10.2 To Search/Inquire Audio Device

Menu > Connectivity> Bluetooth > Inquiry audio device

Tip: Please activate the Bluetooth first.

10.3 To Search My (new) device

Menu > Connectivity> Bluetooth > My device > Inquiry new device

Tip: Please activate the Bluetooth first.

11 Orgnizer

Functions	Description
View the calendar	Menu > Organizer > Calendar
Add to do	Menu > Organizer > To do Options > Add Or: Menu > Organizer > Calendar Options > Add task
View the events in the to do	Menu > Organizer > To do Options > View Or: Menu > Organizer > Calendar Options > View tasks
Set the alarm	Menu > Organizer > Alarm > Edit
World clock	Menu > Organizer > World clock
Stopwatch	Menu > Appllications > Stopwatch > Typical stopwatch > Split timing/Lap timing / View record Press Start to start timing, and press Split / Lap continuously to record more than one time. Press Done to save the time. Menu > Extra > Stopwatch > nWay stopwatch Press Start to start timing, and press the corresponding Navigation key to activate the sub-timing. The main timing will continue to add. Select Stop to stop the main timing and the sub-timing. Press Reset to clear all the time.
Calculator	Menu > Applications > Calculator
Currency converter	Menu > Applications > Currency converter Input the exchange rate and Press OK . Select the exchange rate, input the figure and press OK .
E-Book reader	Menu > Applications > E-Book reader

12 File Manager

When an USB cable is connected, you can use the phone as a USB mass storage.

Functions	Description
View folders	Menu > File manager> Options > Open
Create folders	Menu > File manager > Options > New folder
View detailed information	Menu > File manager > Options > Open Options > Detail
Format	Menu > File manager > Options > Format Tip: The Format function will delete the data you have created and saved. Please back up important data and keep them properly.

13.1 WAP Browser

Menu > Connectivity > WAP

You need to make the relevant settings in WAP Setup before you use the WAP browser to surf the web.

When the WAP browser is activated, if a homepage is set in WAP Setup, the phone will link the website indicated by the homepage; otherwise, you may enter a website and the phone will connect to it.

When surfing the web, select **Options >**

Refresh: To refresh the web page.

Homepage: To link the homepage.

Input URL: input a website address.

Add Bookmark: Add to bookmark.

Set Homepage: set the URL as homepage.

Forward/Backward: To turn to the next /previous page.

Advance: Show URL info, Bookmark, Save item.

Exit: To exit the browser.

13.2 WAP Setup

WAP settings are required for surfing the web with WAP. Follow the steps below to set up a WAP account:

- Connectivity > Data Account > GPRS > Add account > Add account name/ APN/ Username & password > Save.

Then go to:

- Menu >Connectivity > WAP >Settings > Profiles > Add new > Account Name/ Homepage/ Data Account (select the previously created data account) > Select connection type (HTTP/WAP- Indise HTTP & WAP ener the correct proxy address & port > Done > Save the account >Go to the created account & activate.

Menu > Connectivity> WAP> Settings>Profile

You can set the following:

Account: To select from the GPRS connection list.

Connection type: To set WAP or HTTP connection mode.

Home page: To set the address of the homepage. The phone has a default and you can modify it.

14.1 STK Services

If your SIM card supports STK, you may use the corresponding value-added services.

Menu > Connectivity

15 Maintenance

Use a dry soft cloth to wipe general dirt.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of colour.

16 Taking Care of your Device

- Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:
- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use chargers indoors

For details, see the After Service Guide supplied with the phone.

18 Inputting Text

You can enter text in English and digit.