 
 


Getting Started

 
Understand Your Phone

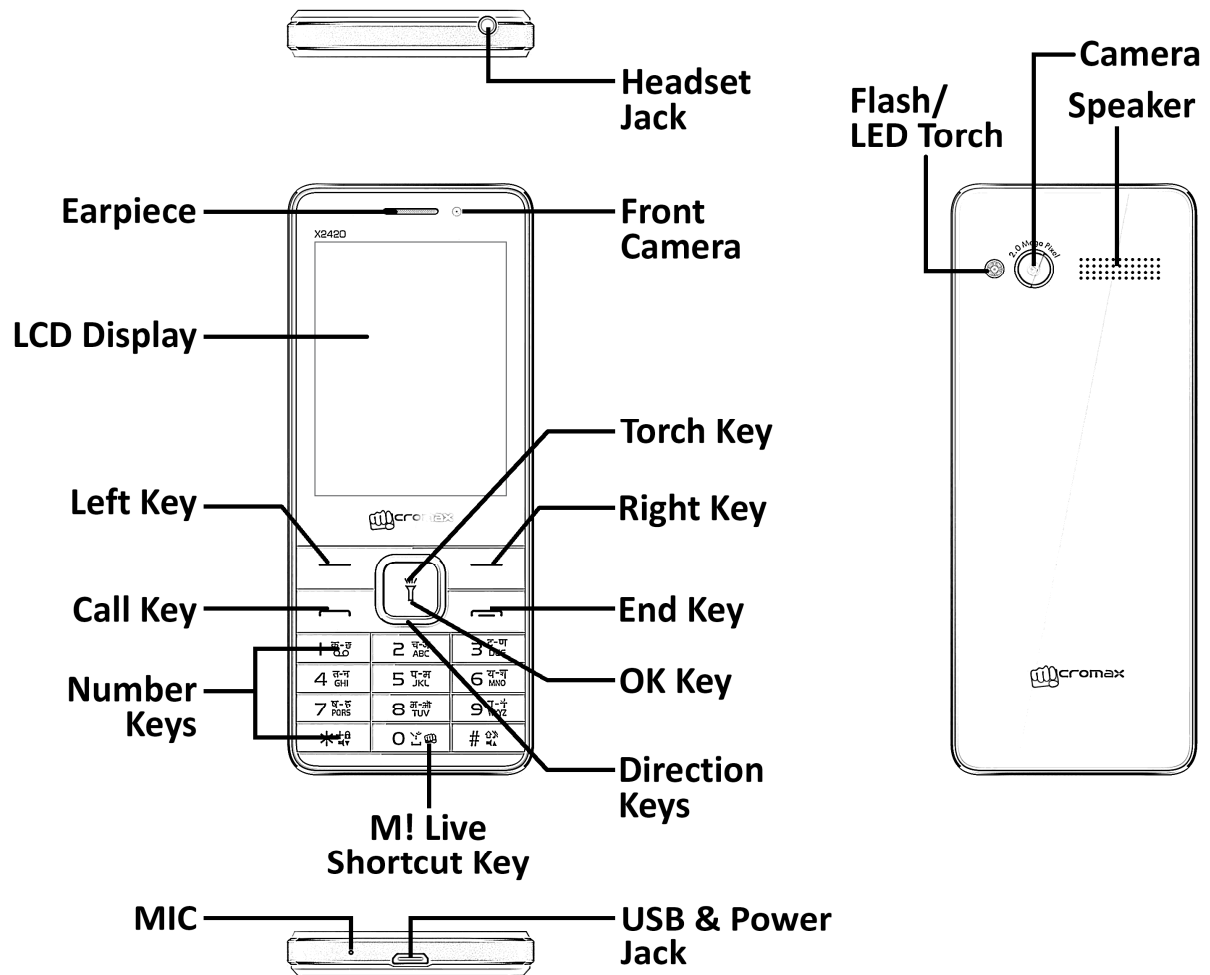


SIM Card Insertion

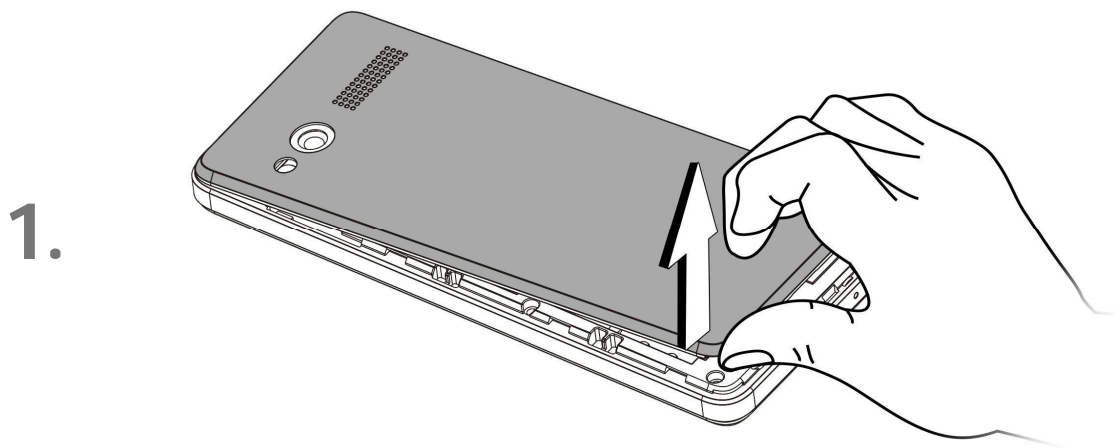

2.

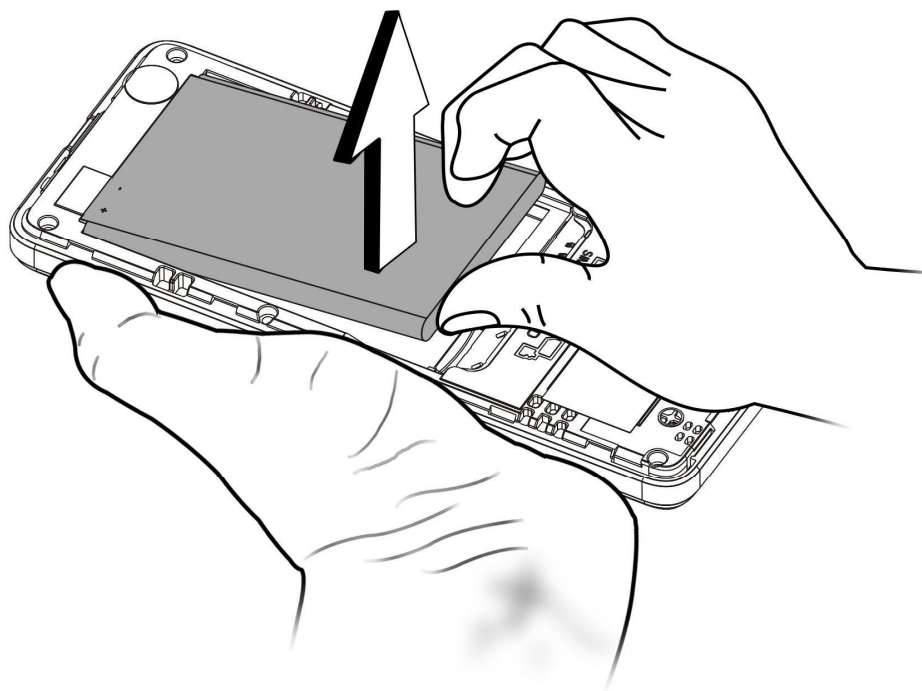

 3.

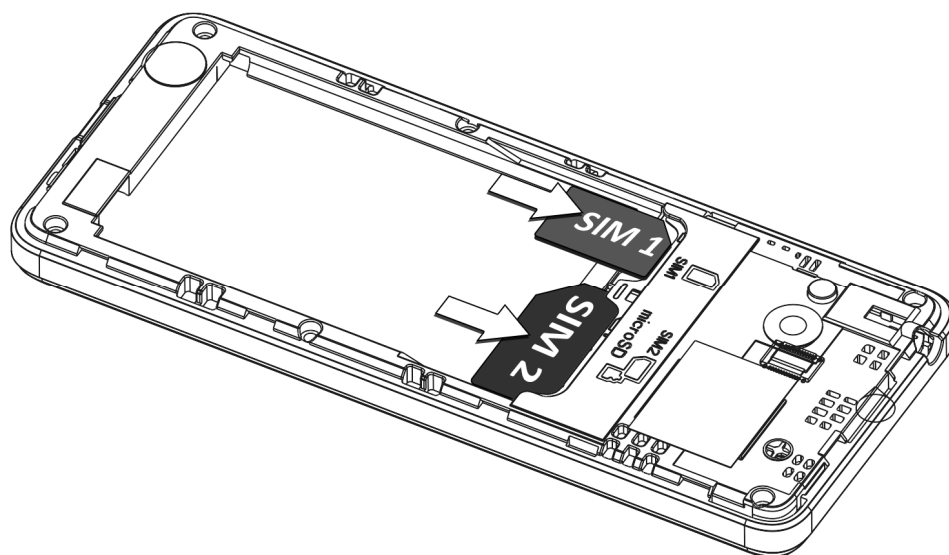


Keep the SIM card out of the reach of children.



The card and the contacts are vulnerable to damage due to scratching or bending. Therefore, be careful when using, inserting, or removing the card.

Insert Memory Card

 To insert memory card, switch off the phone and remove the rear cover and the battery. Insert the memory card in the card slot, as shown in the following image:

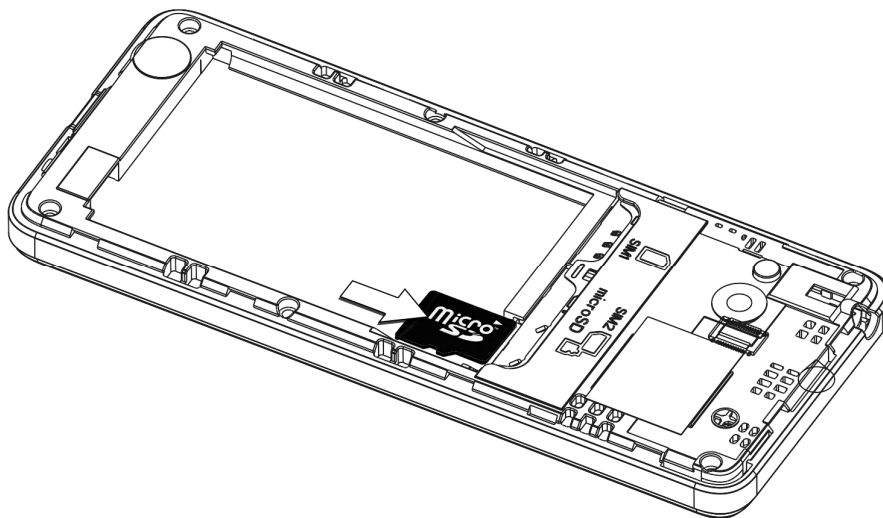

After inserting the memory card, place back the battery and the rear cover of the mobile phone.



 
Use only compatible memory cards with this device. Incompatible memory cards may damage the device and corrupt the data stored in the card.



All existing files in the memory card will be deleted if you format the memory card.


Switch Your Phone On/ Off

Long press the End/Power key to switch on and off your phone.

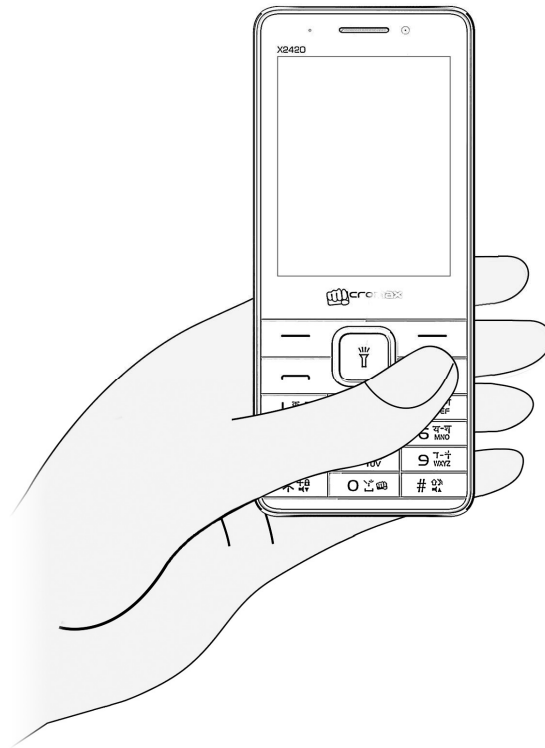

Charging the Battery

 Before using the device for the first time, you must charge the battery. You can charge the device with a travel adapter or connecting the device to a PC with a USB cable.

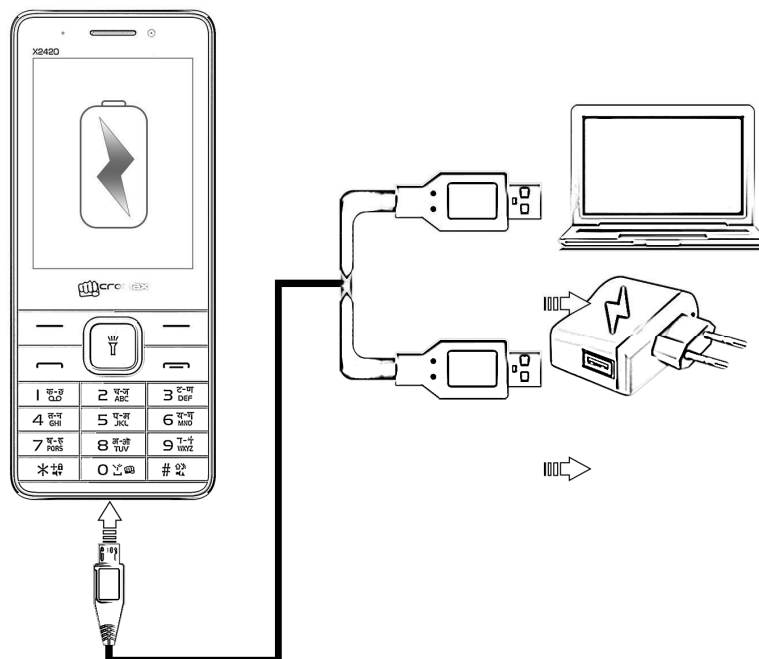




You can also use a compatible USB charger to charge your battery.

Using Your Phone

Lock/Unlock the phone

 
Press the End key twice to lock the phone. From the home screen press the Left key and then immediately press * to lock/unlock the phone, as shown in the following image:

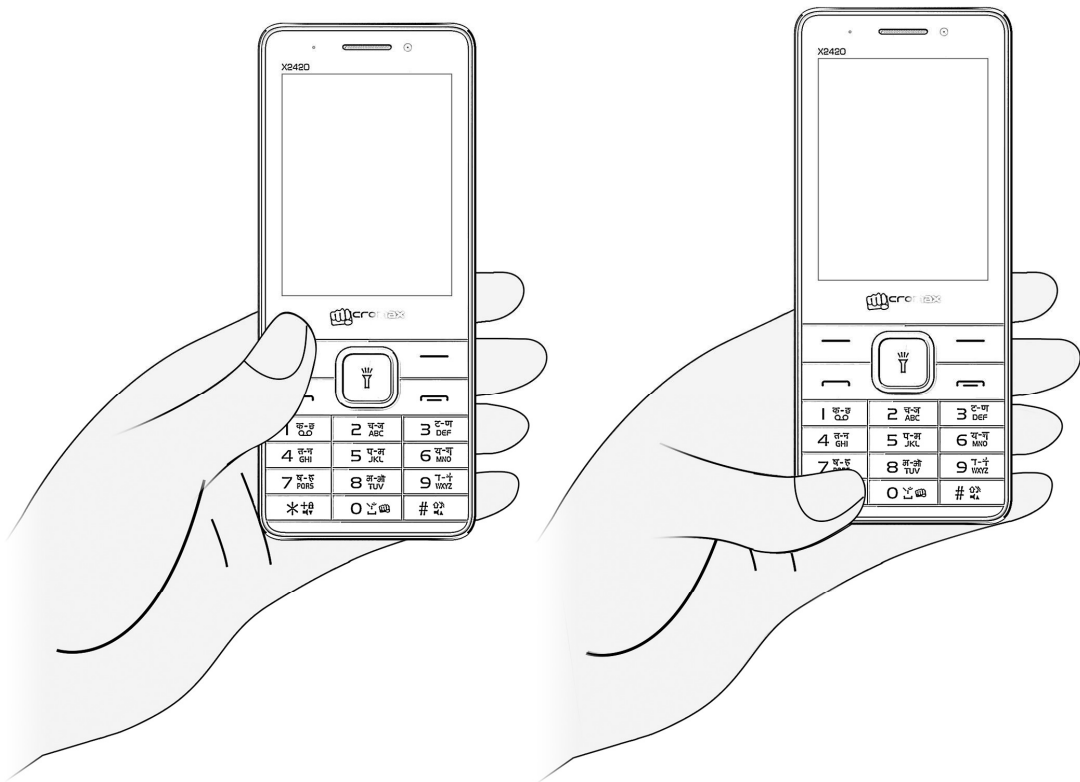


Make a Call

- Dial a number and press the call key to make a call.
- You can also call a number from the phonebook or call log in the same way.
- To change the in-call volume, press the up and down navigation keys.

 Answer/Reject a call

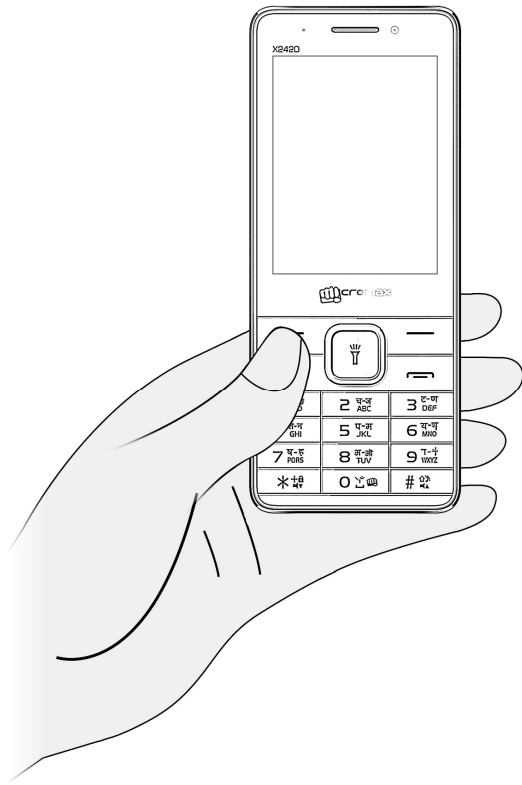

To answer a call, press the call key.

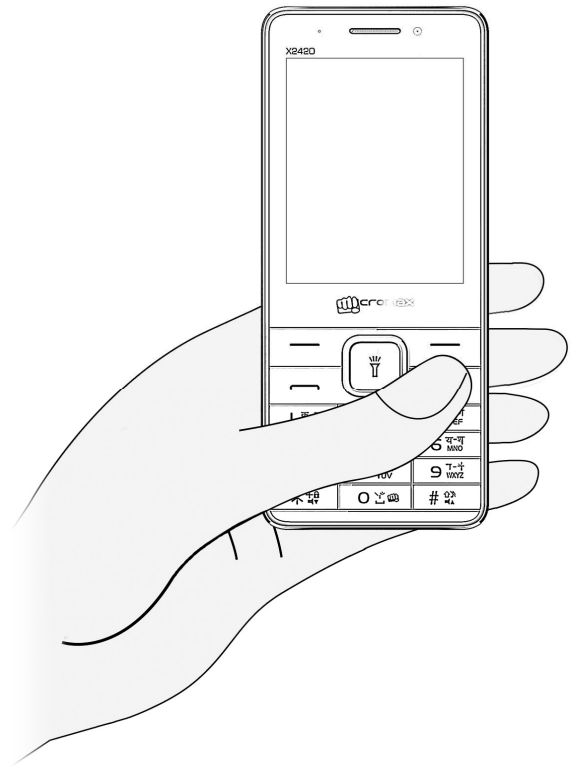 

To reject a call, press End/Power key.

Make an International call

On the home screen, press the * key twice for + to appear on screen. Enter the desired international code and the phone number and then press the call key to make the call.

Send Messages

Menu → Messages

You can compose a new message or reply to existing messages in the list.

Phonebook

Menu → Phonebook

You can add and use contacts in your phonebook at any time. To add a new contact number, you can either dial the number from the home screen directly and then press the Left key and select **Save to Phonebook** to save it or you can open the phonebook, and select **Add new contact** to add the contact details.

Install Games and Applications

Your handset supports Java, which means that you can download and install games and applications (in the form of .jar files) from the Internet.



Your handset comes with a 64MB RAM. To download and install greater size applications/games, insert a memory card of an appropriate storage capacity.

Use Multimedia Features

Camera

Menu → Camera

Your phone comes with a 2.0MP rear camera with flash and front VGA camera. Your X2420 also supports front and rear camera video recording. With the X2420, you can record videos with continuous flash ON. Press the Left key in camera mode to choose from the various camera options. Press the OK key to take photos.

Multimedia

Menu → Multimedia

You can use Image viewer, Video recorder, Video player, Music Player,

Sound recorder, and FM Radio from the Multimedia section.

FM Radio

Menu → Multimedia → FM radio

You can listen to your favorite FM channels using the inbuilt FM receiver of your phone.

You need to plug-in an earphone into the handset, as shown in the following image to enable the FM radio:



Use the navigation keys and OK key to use various features in the FM radio interface.

Music Player

Menu → Multimedia → Music Player

The phone comes with an inbuilt music player that plays all your favorite songs stored in the memory card. Now store and listen to your favorite songs any time with your X2420. X2420 comes with an easy-to-use interface. You can operate the music player with the player

keys, as required.

- Press the Left key to view the playlist.
- Play/Stop: Press OK Key.
- Shift Music: Press left and right navigation keys.
- Adjust Volume: Press * and # keys.

Sound Recorder

Menu → Multimedia → Sound recorder

Record any sound from the sound recorder with ease. Open the sound recorder and press the Left key to start a new recording by selecting **New record** option. You can pause and resume the recording by pressing the Left key and stop the recording by pressing the Right key during the recording. You can view the list of other options available for the sound recorder by pressing the Left key.

File Manager

Menu → File manager

Allows you to view and manage files available in your phone or memory card.

Notable Features

Notification Light

Menu > Settings > LED

Your phone gives you LED notification for alerts such as missed calls, text messages, power on/off, etc.

You can turn on / off these notifications, as required.

Torch Light

Long press the OK key to switch the torch on/off, or you can go to

Menu → Organizer → Torch to switch the torch on/off.

Phone Language

Menu → Settings → Phone settings → Language

You can change the phone language according to your preference. Your device supports Hindi and English language.

Phone Lock

Menu → Settings → Security settings → Phone security → Phone lock

You can turn on or off phone lock and set your desired password to lock the phone. Default password is 0000.

Privacy Protection

Menu → Settings → Security settings → Privacy Protection

You can set the privacy lock for desired phone sections to protect them. Each time you access any protected section, you will be asked for a password. Default password is 0000.

Mobile Tracker

Menu → Settings → Security settings → Mobile Tracker

You can track your phone in case of loss or theft by activating the Mobile Tracker mode and configuring an alternate number and message to be received from the unauthorized user. The default password to use this feature is 0000.

Blacklist

Menu → Call logs → Call settings → Advanced settings → Blacklist

Use this feature to stop receiving calls from the specific numbers.

Auto Call Record

Menu → Call logs → Call settings → Advanced settings → Auto call Record

This feature allows you to automatically record incoming and outgoing calls.



You may configure other settings from the respective setting sections.

Useful Tips

Tips	Description
IMEI Number	You can find the IMEI Number of your phone by pressing *#06#.
SAR Value	You can find the SAR values by pressing *#07# (applicable to India users only).

Safety Precautions



Switch off your device in any area with potential explosive atmosphere. Sparks arising out of radio frequency may cause fire or explosion. Therefore, switch off your device at refueling stations, fuel depots, chemical plants or places where blasting operation is in progress. Remember to comply with legal requirements and local restrictions when using the phone.



Your phone's radio waves may interfere with inadequately shielded medical devices. Consult a physician or manufacturer of the medical device to know whether they are adequately shielded from external Radio Frequency. Switch off your device when regulations require you to do so.



Always keep the phone and accessories out of reach of small children. Small parts such as the SIM card or micro SD card can be dismantled and swallowed by small children.



Do not place the phone near electromagnetic data carriers such as credit/Debit cards. Information stored on them could be lost.



Permanent damage to hearing may occur if you use earphones at high volume for prolonged periods. Set your volume to a safe level. If you experience discomfort in your ears, reduce the volume or discontinue the use of your earphones.



Manufacturers of medical devices recommend a minimum distance of 15.3 cm (6 inches) between a wireless device and an implanted medical device such as pacemaker or cardioverter defibrillator to avoid issues arising out of radio frequency interference.



The mains voltage (V) specified on the power supply unit must not be exceeded to prevent damage to the charging device. The power supply must be plugged into an easily accessible AC power socket when charging the battery.



You may only open the phone to replace the battery (if not inbuilt), SIM card and micro SD card. You must not open the battery under any circumstances. All other changes to this device are strictly prohibited and will invalidate the warranty.



The phone may cause interference in the vicinity of TV sets, radios and PCs.



Only use Micromax specified batteries and charging devices. The battery may cause damage, injury or burns if a conductive material closes the circuit of the terminals. Exercise care in handling any charged battery, particularly when placing it inside your pocket, purse or other container with metal objects. Do not dispose off batteries in fire as they may explode.



Do not use the phone while driving. When you have to use the phone, please use the earpiece.

Please put the phone safely in the phone stand. Do not put it onto the passenger seat or any place from where it may fall down during collision or emergency braking.



Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please switch off your phone during a flight.



The phone must be repaired by Micromax authorized personnel only. Repair of this phone by anyone other than our authorized service agents/centers goes against the warranty rules.

Taking Care of your device

Your device is a product of superior design and craftsmanship and should be handled with care. The following suggestions will help you protect your phone.

- Keep the device dry. Precipitation, humidity, and all types of liquids or

moisture can rust the electronic circuits. If your device gets wet, remove the battery, wipe it with a dry cloth and take it to an authorized service center.

- Do not store the device in high or low temperatures. Extreme temperatures can shorten the life of electronic devices and damage batteries.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components may get damaged.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.

Battery Recommendations

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. After a full charge, if the power reserve of the battery tends to deplete inordinately faster than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.
- Do not discard the battery with household trash. Please dispose off used battery according to your local environmental laws and guidelines.

Recycle your Phone



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of

disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.micromaxinfo.com/weee.php.

Note: Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the mobile phone.

Disclaimer

- The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.
- Specifications are subject to change without prior notice.
- The functions explained or listed in this manual may differ from the actual functions appearing in the mobile phone. In such a case, the latter shall govern. Micromax keeps the right to make modifications to the content in this user guide without any prior notice.
- Upon first use of your device, your device will send information related to your mobile number, IMEI numbers, location details and other software details through SMS automatically*. This information may be used as further specified in Micromax privacy policy**.
- Talk and standby times are affected by network preferences, type of SIM/SIM cards, connected accessories and individual usage patterns. Services and some features may be dependent on the network, service/content providers, SIM/SIM cards, compatibility of the devices used and the content formats supported.

*Operator tariff shall be applicable for SMS.

**Micromax privacy policy is available at www.micromaxinfo.com.

Copyright

All rights reserved. Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Micromax is strictly prohibited.