

PHONE MANUAL

3330



We create for you.

Thank you for choosing **myPhone 3330** device. Please read the manual carefully. Without prior written consent of the manufacturer, no part of this manual may be photocopied, reproduced, translated or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or storing in any systems of storing and sharing information.

The use of the manual

Please read the precautions and phone user's manual before use. The descriptions contained in this manual are based on the default settings of the phone. The latest manual or its more detailed version is also available on the product website:

www.mypPhone-mobile.com

Depending on the installed version of the software, service provider, SIM card or country, some of the descriptions in this manual may not match your phone. Depending on the country, service provider, SIM card or device version, the phone and its accessories may differ from the illustrations included in manual. The descriptions contained in this manual are based on the default settings of the phone.

Safety

Read these guidelines carefully. Not following them may be dangerous or illegal.

–DO NOT RISK–

Do not switch on the device in places which are prohibited from using cell phones, or when it may cause interferences or other dangers.

–INTERFERENCES–

All wireless devices may cause interferences, which could affect the quality of other connections.

–RESTRICTED AREAS–

Switch OFF the device in an airplane since it may disturb the operation of other equipment located therein. The telephone may interfere with operation of the medical equipment in hospitals and health protection entities. Abide by any kinds of prohibitions, regulations and warnings conveyed by the staff.

QUALIFIED SERVICE

This product can be repaired or updated only by a qualified myPhone service center or an authorized service. Repairing by an unauthorized or unqualified service may cause phone damage and warranty loss.

ROAD SAFETY

Do not use this phone while driving any kind of vehicle.

CHILDREN

This phone is not a toy. Keep the device and its accessories out of reach of children.

–ALARM CALLS–

Making alarm calls may not be possible in some areas or circumstances. It is recommended to find an alternative way to notify emergency services if you are going to undeveloped or remote areas.

WATER RESISTANCE

This device is not water resistant. Protect it from liquids and moisture.

BATTERY AND ACCESSORIES

Avoid exposing the battery to very high/low temperatures (below 0°C/32°F and over 40°C/104°F). Extreme temperatures may influence capacity and battery life. Avoid contact with liquids and metal objects as it may cause partial or complete battery damage. Do not destroy, impair or throw the battery into flames - it is dangerous and may cause fire. Installing an incorrect battery type can cause an explosion. Never open

the battery. Please dispose of battery according to the instructions. Worn-out or impaired battery should be placed in a dedicated container. The battery should be used according to its purpose. Disconnect an unused charger from power grid. Excessive charging the battery can cause damage. Therefore a single battery charge should not last longer than 12 hours (1 day an absolute max.). Use only the original myPhone accessories that are included in your device set.

FUEL STATION SAFETY

Always turn off the phone while refueling your car on petrol station. Do not use your device close to chemicals.

–HEARING–



To avoid hearing damage, do not use the device at high volume levels for a long period of time, do not put operating device directly to the ear.

Manufacturer:

mPTech Sp. z o.o.
Nowogrodzka 31 street
00-511 Warszawa, Polska

Website:

www.myphone.mobile.com

Made in China

Table of Contents

Table of Contents	3
Package content	4
Technical Specifications	5
1. Appearance of the phone, its functions and buttons.....	6
2. Introduction.....	7
Turning the phone on/off	7
Installation of the SIM card and microSD card.....	7
Charging the battery.....	7
Battery discharge indicator.....	8
3. Using the basic functions	8
Keypad lock.....	8
Phone menu access	8
Customize your phone	8
Turning the „silent” mode on and off	8
Sounds and user profiles	8
Call handling functions	8
Calling.....	8
Answering.....	9
Text messages	9
Writing and sending messages.....	9
Messages display.....	9
Phonebook.....	9
Adding a new contact.....	9
Search for a contact.....	9
Editing contacts	10
Deleting contacts	10
4. Advanced phone features	10
Calling a contact from the phone book.....	10
Missed calls.....	10

Speakerphone mode.....	10
Speed dial	10
Dual SIM open	11
Connecting your phone to the computer	11
International calls	11
5. Other phone features.....	11
Time and date settings	11
Menu language settings	11
Displays setting	11
Call settings	12
Configuration of the alarm.....	12
Calculator	12
Factory settings.....	12
Torch	12
Call history	12
Audio Player	12
Radio	13
Calendar.....	13
Bluetooth.....	13
Pairing bluetooth devices.....	14
Sending files via Bluetooth.....	14
Camera.....	14
Taking pictures	14
Recording videos	14
Phone icons.....	14
Troubleshooting	15
6. Proper phone maintenance.	15
Proper use of the battery	15
Device maintenance	15
Safety information	16
Road safety.....	16
Surroundings security	16
Technological criteria	16
Information on certificates (SAR)	17
Correct disposal of used equipment.	17
Correct disposal of used batteries.....	17
Declaration of conformity with European Union Directives	18

Package content

Before you start using your phone, make sure all of the following items are included in the box:

- myPhone Halo 3330 phone,
- battery,
- charger (adapter + microUSB - USB cable),
- user manual.



If any of the above items is missing or damaged, please contact your dealer.



It is recommended to keep the packaging in case of any complaint. Keep the container out of reach of children.

Technical Specifications

- Dual SIM 2G 900/1800 MHz
- Clear, colourful 1.8 " display 128x160 pixels.
- Audio Player, FM Radio, Torch
- Camera
- MicroSD card reader - up to 16 GB.
- Battery: 800 mAh Li-Io, 3.7 V 
- Charger input parameters: 100-240 V~ 0.2 A, 50/60 Hz
- Parametry wyjściowe ładowarki: 5V , 0.35 mA
- Phone dimensions: 115 x 50 x 14.8 mm/ 4.5 x 1.9 x 0.6 in
- Phone weight: 75 g/ 2.6 oz

Depending on the installed version of the software, service provider, SIM card or country, some of the descriptions in this manual may not match your phone.

Depending on the country, service provider, SIM card or device version, the phone and its accessories may differ from the illustrations included in manual.

The descriptions contained in this manual are based on the default settings of the phone.



The current manual or a more detailed version of this manual is also available on the manufacturer's website:

www.myphone.pl/qr/myphone-3330

1. Appearance of the phone, its functions and buttons



1	Display	LCD display
2	Speaker	Loudspeaker for system sounds, ringtones, music, calls.
3	LED	Diode is used as a torch.
4	Camera	Camera lens
5	Buttons <up>, <down>, <left>, <right>, and <OK>	While in menu enables navigating around the menu. On the home screen Up - new SMS message, Down - contacts, Left - alarm/alarm clock, Right - calendar, OK acts as a Menu button and on the home screen turns on/off the flashlight after a long press.
6	<Contacts> button	On the Mainscreen, launch the Phonebook. While in the menu you can exit or opt out.
7	<Menu> button	While on the main screen enables entering the Menu, and confirms choice while in the Menu.
8	<Red handset> button	Allows you to reject an incoming call. While in the menu allows you to return to the main screen. When held for a long time, it turns off the phone or, if it is switched off, turns it on.

9	<Green handset> button	Allows you to receive an incoming call or look through the list of all calls.
10	Phone keypad	Buttons allowing you to dial a phone number and, in the text message mode, type letters and digits.
11	<*> button	Press the Menu key to lock or unlock the phone. When writing an SMS, it displays symbols for insertion into the content.
12	<#> button	Allows you to switch between sound modes and character input modes when writing text messages.
13	Gap	Allows to take off a cover of the phone.
14	<0> (zero) button	On the main screen, it turns on/off the power saving mode after a long press.
15	MicroUSB port	When connected, the charger enables recharging the battery. You can transfer data (photos, videos, music) when you connect it to your computer.
16	Headphone jack	Allows you to connect headphones to your phone so you can listen to radio (act as an extra antenna), music, and conversations with headphones equipped with a microphone.
17	Microphone	Do not cover it while on the phone.

2. Introduction

Turning the phone on/off

To turn the phone on/off press the <Red handset> button. If directly after turning the phone on you will see the code request, (in form of "****") type the code and press <OK>.

Installation of the SIM card and microSD card.

If the phone is switched on - switch it off. Lift the back cover with your fingernail and gently remove it from the case. Take the battery out. Insert the SIM card (s) - SIM card must be placed in a slot, according to the embossment in the phone. If you also want to insert a microSD memory card, gently slide the metal protection of the slot to the right, insert the card with the gold contacts down into the slot and gently slide the metal protection by pushing it against the card to the left.

Insert the battery - so that its three gold contacts touch the triple connector in the phone bay. Replace the battery cover and press lightly until the latches are engaged.

Charging the battery

Plug the USB cable into a suitable charger socket and the microUSB plug into the microUSB cable socket on your phone and plug the charger into a power outlet.



***Attention:** Improper connection of the charger can cause serious damage to the phone. Damages caused by an improper use of the phone are not covered by the warranty.

While charging, a static icon of battery state located in upper right corner of the screen will become animated. When charging is complete unplug the charger from the power outlet. Unplug the cable from the socket on the phone.

Battery discharge indicator

When the battery gets discharged, a message of the need to charge it will be displayed. Battery icon will be "empty". If the charge level is too low, the phone will turn off automatically. To use the phone one has to charge the battery.

3. Using the basic functions

Keypad lock

The keypad locks itself automatically after the time set by the user. It can also be locked manually. To do this, press **<Menu>** and then press **<*>**. To unlock the keyboard (when the display is blanked) one should press any button to activate the screen then press **<unlock>** button (located at the bottom left corner of the display), followed by the **<*>** button. The keypad is unlocked.

Phone menu access

To gain access to the phone menu one should press **<Menu>** or **<OK>** button, while on phone display. By pressing navigation buttons **<up>**, **<down>**, **<left>** or **<right>**, move to the wanted menu icon. Press **<OK>** button to confirm your choice (and enter the menu item) or **<Back>** to return to previous menu/desktop.

Customize your phone

MyPhone 3330 can be customized to your needs. This makes its use more enjoyable and easier.

Turning the „silent“ mode on and off

To turn off sounds use **<*>** button. Press it and hold for about 3 seconds, until „Silent mode activated“ announcement is displayed. By pressing and holding the **<*>** key again will return to the previous sound profile.

Sounds and user profiles

To set ringtones and volume in the phone use **[Profiles]** option. To launch it press **<OK>** button and enter the phone menu. Subsequently, with use of navigation buttons choose **[Settings] > [User profiles]** and press **<OK>**. Select the chosen sound profile and enter **<OK>** to activate the chosen profile or **[Options] > [Settings] > [OK]**, to edit the profile according to your own preferences. Available sound profile options:

- **[Rename]** - allows you to modify the profile name.
- **[Ring settings]** - allows you to select the ringtone for calls and messages for each SIM card.
- **[Adjust volume]** - select the volume for ringtone calls, messages, alarms and calls. Changes are made by selecting a given option and adjusting it with **<Up>** and **<Down>** buttons, and confirming with **<OK>** button.
- **[Ring type]** - allows you to select the ring type (alarm) for calls and messages for each SIM card - ring tone, vibration, silent, vibration and then ring tone.
- **[Other alert rings]** - allows you to select or mute the keypad sound, low battery warning, dialing mode.

Save the changes by pressing **[Done]**.

Call handling functions

Calling

Enter the number using the keypad on the home screen.



We recommend that you enter the area code prior to the telephone number.

Press **<green handset>**, to start the call and then select the SIM card with which You wish to set the conversation. Press **<red handset>** button to finish the call.

Answering

During an incoming call press **<green handset>** or **[Answer]** to answer an incoming call. Press **<red handset>** to finish/ reject the call.

Text messages

Writing and sending messages

Enter: **[Menu] > [Messages] > [New message]**. Enter the phone number or press **<OK>** to select the contacts from the phonebook to which you want to send the message. Confirm your selection by pressing **[Options] > [OK]**.

Go to the text field by pressing **<Down>**. Type in the message using the keypad. Signs are typed in letter by letter. The **<#>** button launches a menu that allows you to change the input method to, among others

- **Abc** – The first letter capital, the rest lower case.
- **abc** – Only lower case letters
- **ABC** – Only uppercase letters,
- **Numeric** – numbers only
- **Writing language** – select the language of the content to be typed.

To enter a special character i.e. period, comma, dash, etc., press **<*>** and choose from the list, or press the **<1>** a number of times (in a mode other than "123"). To enter a space between the words press **<0>** button. To enter the letter "b" one should press **<2>** button twice. To enter the letter "d" one should press **<3>** button once etc. After entering the message content, select **[Options] > [Send]** and select the SIM card you want to use to send the message.

Messages display

Pick one: Select **[Menu] > [Messages] > [Received]**, select a message from the list, and then select **<OK>** to read its contents.

Phonebook

Adding a new contact

To add a contact, open the main desktop of your phone and press the **[Contacts]** button on the bottom right of the screen, then select **[Options] > [New contact]** and select the storage location of the contact **[SIM1], [SIM2] or [Phone]** to confirm with **<OK>**. Enter contact details by selecting the name or number using the **<up>** and **<down>** buttons. After entering the name/number, select **[Save]** to save the contact. To transfer a contact between SIM card and phone memory, select: **[Menu] > [Contact]**, select the contact to move, and then select **[Options] > [Copy/Move] > [Move]**, select where to move the number and confirm **<OK>**.

Search for a contact

To search contact choose: **[Menu] > [Phonebook]**. Enter the letter of the contact's name and a list of contacts containing the letter will appear on the screen. To narrow down the search enter consecutive letters. To search for another contact use navigation buttons **<up>** or **<down>**.

After searching the contact and choosing **[Options]** a list of operations will appear:

- **[New]** – to enter and save the details of the new contact.
- **[SMS]** – to send a text message.

- **[Call]** - to call the number.
- **[Delete]** - to delete a contact.
- **[Delete multiple]** - to delete more contacts.
- **[Delete all]** - to delete all contacts.
- **[Delete Phone]** - to delete contacts from the phone memory.
- **[Delete SIM1]** - to delete contacts from SIM1.
- **[Delete SIM2]** - to delete contacts from the SIM2 card.
- **[Copy/Move]** - to copy or move the contact from phone and SIM cards.
- **[Add to blacklist]** - to add to the blacklist of unwanted and blocked numbers.
- **[Add to whitelist]** - to add to a whitelist. Only those numbers will be able to call the phone.
- **[Import/Export]** - to export and import the contact list to and from the phone memory or microSD card.
- **[Others]** - to start a quick diall or check the memory status.

Editing contacts

To edit a found contact, select it in **<OK>** > **[Options]** > **[Edit]** at the bottom right of the screen, then select **[Options]** > **[New]** and select the storage location of the contact **[SIM1]**, **[SIM2]** or **[Phone]** to confirm.

Deleting contacts

To delete all contacts press: **[Menu]** > **[Contacts]** > **[Options]** > **[Delete all]** > **[Ok]**. To delete a single contact, select: **[Menu]** > **[Contacts]** search for a contact to delete **[Options]** > **[Delete]** > **[OK]**.

4. Advanced phone features

Calling a contact from the phone book

To call a phone number saved in the phone book enter submenu **[Phonebook]**. In the phonebook search for the proper contact (by entering first letters of the contact using the keypad). Execute the call by pressing the **<Green headset>**.

Missed calls

Missed calls are displayed on the screen of the phone. An appropriate message and an icon on the top of the screen will inform you about a missed call. To find out who called, tap on the home screen of **[Details]**. Another option is **[Calls Register]** function. To choose enter: **[Menu]** > **[Call history]** > **[Missed call]** > **<OK>**.

To call back, select the missed call from the list, then press **<green handset>** on the keypad and choose the SIM card with which you wish to make a call.

Speakerphone mode

During a call, press **<OK>** to activate hands-free mode. Pressing **<OK>** again switches off the hands-free mode.

Speed dial

Choose **[Contacts]** > **[Options]** > **[Other]** > **[Speed dial]**. On the left side of the screen there are digits which correspond with keypad buttons. Select the position (from 2 to 9) where you want to save the number and select **[Options]** > **[Edit]**. You can enter a number or select a number from your contacts list. Confirm with **<OK>**. When you set

the numbers press **<red handset>**, to return to the main phone screen. To establish connection by speed dialling function press and hold for about 3 seconds the programmed button of phone numerical keyboard and select a SIM card you wish to use.

Dual SIM open

Dual SIM function enables using 2 SIM cards simultaneously. To use that function one should mount two SIM cards in the phone (SIM slots are placed beneath the phone battery). Subsequently enter **[Main menu] > [Settings] > [Connections] > [Dual SIM]**. You can select **[Standby mode] - [Answer with the same card] [Set SIM name]**.

Connecting your phone to the computer

The phone can be plugged to the PC computer using USB. This allows you to view and exchange data between your computer and your phone. To do this, you must:

- 1) Connect the microUSB connector to USB port in your phone (placed on the bottom of the phone), then connect the USB connector to a USB port on your computer.
- 2) An information about USB connection should be displayed on your phone screen.
- 3) Choose **[Mass storage]** from the displayed list.
- 4) The phone is now connected to the computer. The contents of the phone memory can be viewed using Windows Explorer.

International calls

While on the main screen press quickly **<*>** button twice until the "+" sign appears. Enter the full phone number of the recipient (the country code and the telephone number), and then press **<Green handset>** to make a call.

5. Other phone features

Time and date settings

To set time and date enter: **[Main Menu] > [Settings] > [Phone settings] > [Time and date]**. Select **[Set Time]** and enter the correct time using the numeric keypad. Enter the current date in **[Set Date]**. You can also set **[Time format]**, i.e. a 24-hour or 12-hour presentation, and **[Date format]** allows you to choose how you want the date to be displayed - the sequence of days, months and years. The settings will be confirmed when **[Done]** is selected.

Menu language settings

Select an option to set or change the language of the phone menu: Select **[Main Menu] > [Settings] > [Phone settings] > [Language settings] > [Displayed Language]** and select your preferred language from the list.

Displays setting

Enter **[Menu] > [Settings] > [Display]**, and options will appear:

- **[Wallpaper settings]** - choice of wallpaper.
- **[Idle display settings]** - select the data to be displayed on the home screen (time and date, SIM1, SIM2, today's tasks, timer, audio player, FM radio).
- **[Contrast]** - ability to set intensity of backlight using **<right>** and **<left>**.
- **[Backlight]** - backlighting time.
- **[Keypad backlight time]** - keyboard backlight length and type (20s, 10s, 5s, night mode, off).

Call settings

Enter **[Main Menu] > [Settings] > [Call settings]**. There are options for setting the Dual-SIM function (described above), call forwarding, call waiting, blocked calls, hiding the ID. In **[Others]**, call settings such as call time minute reminder, auto redial, reply SMS after reject, auto record voice call are available.

Configuration of the alarm

Enter **[Main menu] > [Alarm]** and select any entry from the list, then press **<OK>**. You can set the message to be displayed when the alarm clock is activated, the time of alarm, ringtone or repeat mode. Confirm the changes by pressing **<OK>**. Alarm clock on or off by selecting the entry and pressing **[On]** or **[Off]**.

Calculator

Select **[Main Menu] > [Tools] > [Calculator] > <OK>**. Basic arithmetic operations can be performed using the numeric keypad (typing numbers, digits). Actions can be set using navigation buttons: **<Up>** - addition, **<Down>** - subtraction, **<Left>** - multiplication and **<Right>** - division. To see the result press **<OK>**.

Factory settings

To restore the system to its factory default settings, select **[Main Menu] > [Settings] > [Phone Settings] > [Restore Factory Settings]**, enter the phone password, and confirm your selection with **<OK>**. Password required to restore the factory settings is 1122.

Torch

To turn on the flashlight, go to the main desktop, press and hold the **<OK>** button. You can switch it off the same way.



CAUTION! *The light emitted by the LED has a strong focus therefore it is unadvisable to look directly into the light. Not following this instruction may cause damage to your eyesight.*

Call history

To view the call history (what calls were made, received, etc.), select **[Menu] > [Call History]**. The following positions are placed in submenu:

- All logs
- Missed calls
- Dialed calls
- Received calls
- Rejected calls
- Delete all
- Call counter

To enter one of the listed options one has to select it from the list and press **<OK>**.

Audio Player

Audio player is launched by selecting **[Main menu] > [Music player]**. This application allows you to play music files in MP3, AAC, AMR, M4A, WAV formats. The first time you start the unit, the memory will be searched to add any audio files to the playlist.



Listening to the audio player too long or too loud can cause hearing damage.

To enjoy the audio player use the following buttons:

Button	Function	<Right>	Next track
<Up>	Louder	<Left>	Previous track
<down>	Quieter	<OK>	Start/Pause

More audio player options can be found in **[Options]**.

Radio

Listening to FM radio requires plugging in headphones with minijack 3.5 mm/0.13 inch connector. Headphones are used as an external antenna. **Headphones are not included!**

Enter **[Menu] > [Multimedia] > [FM Radio]**. The first time you start up the phone, the strongest stations in the area are searched for and stored in the list in the phone memory. You can start the automatic search manually by selecting **[Options] > [Auto Search] > <OK>**. All found radio stations will be saved and accessed when **[Options] > [Channel List]** is selected, where they can be edited and deleted. Radio control is done using the following buttons:

Button	Function
<down>	Louder
<Up>	Quieter
<OK>	Turning the FM Radio On/Off
<Right>	Searching for stations of a higher frequency.
<Left>	Searching for stations on lower frequency.

Calendar

There is a calendar available in the phone. It allows you to view the current or any date and also set the notifications for the day (repeat them daily, weekly, monthly, yearly or on any day of the week). To start the calendar application, press the **<Right>** button on the main desktop or select **[Main Menu] > [Tools] > [Calendar]**.

Bluetooth

The phone is equipped with a Bluetooth. It is used to wirelessly connect and exchange files with other devices equipped with Bluetooth. To use Bluetooth enter: **[Menu] > [Tools] > [Bluetooth]**. The following options are available:

- **[Power]** - By pressing **<Activate>** you can enable or disable the Bluetooth module. It is signalled with a Bluetooth icon displayed on the upper status bar on the phone main screen.
- **[Bluetooth visibility]** - Enabling this feature allows the visibility of your phone on the list of available devices other phones, tablets and computers equipped with Bluetooth.
- **[Paired device]** - with **[Add new device]**, you can view a list of available Bluetooth devices within range of your phone. This feature allows you to connect to a device from the list by pressing **[Pair]**.
- **[Device name]** - the name visible to other bluetooth devices can be typed in here. Default name is "myPhone 3330".

- **[Send]** - allows you to view the status of the files that are being transferred over Bluetooth.
- **[Memory]** - allows you to select where you want to save files transmitted via Bluetooth, whether on your phone or on a memory card.

Pairing bluetooth devices.

To connect to a Bluetooth device, select **[Menu] > [Tools] > [Bluetooth] > [Paired device] > [Add new device]**. When the device you are searching for is found press **<Stop>** to stop the search. Subsequently select a device from the list and press **[Pair]** button. Both devices will display a request for password compliance. Confirm, type them, or select any sequence of digits and type them on the target device - it all depends on the hardware and software that manages them. The connection should now be established.

Sending files via Bluetooth.

To send files situated on the memory card to a paired (connected) device enter: **[Menu] > [Memory card]** and choose a file you want to send. Then choose **[Options] > [Send via Bluetooth]** and search the device you wish to send the file to or add it from the list of paired devices. The file will be send after recipient' approval.

Camera

myPhone 3330 is equipped with a camera with the possibility of taking pictures and recording videos.

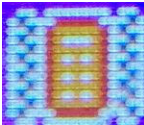 
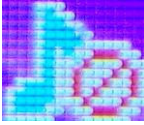 
Taking pictures

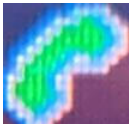 
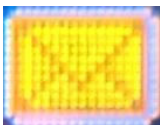 
To take a photo one should open the camcorder app by entering: **[Menu] > [Multimedia] > [Camera]**. When you start the camera, place the subject you wish to photograph in the frame, and then press **<OK>** to take a photo. Decide if you wish to save the photo or go back to taking photos. By default, images are saved in the "Photos" folder on the memory card. You can view the pictures you have taken and all other by entering **[Menu] > [Multimedia] > [Image]**.

 
Recording videos

 
To record a video choose **[Menu] > [Multimedia] > [Camcorder]**. Then place the recorded object in the camera frame and press the **<OK>** button to start recording. Videos are saved by default in a "Videos" file on the memory card. To watch recorded videos enter **[Menu] > [Multimedia] > [Video]**.

Phone icons

	GSM network range
	"Meeting" mode on
	Silent mode activated

	Missed call
	Unread SMS message
	Bluetooth active

	Earphone plugged
	Battery charge level

	Installed microSD card
--	------------------------

Troubleshooting

Message	Possible solution
Insert SIM card	Make sure SIM card has been correctly installed.
Input PIN	If the SIM card is secured with the PIN code you have to enter the PIN when turning the phone on and press <OK> .
Network fail	In areas where signal or reception is weak, calls may not be possible. Also receiving calls may not be possible. Move to another location and try again.
No one can call me	The phone has to be on and within GSM network reach.
I cannot hear the caller./ The caller cannot hear me	The mic. should be close to mouth. Check if the built-in mic. is not covered. When a headset is un use, check if it has been connected correctly and the mic. works correctly. Check if the built-in speaker isn't covered.
Poor sound quality while on the phone.	Make sure that the speaker and mic. are not covered.
The connection cannot be established	Check if the typed-in phone number is correct. Check if the phone number entered to the [Phonebook] is correct. Enter the correct phone number if necessary.

6. Proper phone maintenance.

Proper use of the battery

Battery in this device can be charged with a charger. If the battery level is low, recharge it. To prolong battery life, let it discharge before connecting the charger. If not used, unplug the charger from the phone. Excessive charging causes shortened battery life. The temperature of the battery has an impact on its charging cycle. Prior to the charging process, cool the battery or raise its temperature so that it is similar to the room temperature (approx. 20°C/68°F). If the battery temperature exceeds 40°C the battery must not be charged! Use the battery only according to its intended purpose. Avoid leaving the battery within a magnetic field range, because it shortens its life. Do not use a damaged battery. The battery lifespan can be shortened, if it has been exposed to very low or very high temperatures - this causes interference to the phone, even when the battery has been properly charged. Do not throw the battery into flames! Do not throw a worn-out battery - send it or return it to an authorized recycling point.

Device maintenance

To extend the life of your phone, follow the guidelines. Keep the phone and its accessories out of reach of children. Avoid exposing the phone to the high and low

temperatures; it can shorten the life of phone electronic components, melt the plastic parts and destroy the battery.

Do not try to disassemble the phone. Tampering with its structure in an unprofessional manner may cause serious damage to the phone or destroy it completely. For cleaning use only a dry cloth. Never use any agent with a high concentration of acids or alkalis. Use only original accessories; violation of this rule may result in invalidation of the warranty. Exposing the phone to extreme temperatures can reduce the level of protection. It is recommended that the phone is not used at temperatures below 0°C/32°F or higher than 40°C/104°F.



The packaging of the device can be recycled in accordance with local regulations.

Safety information

While using the phone, take into account the legal regulations concerning safety and the safety of its surroundings.

Road safety

Apart from emergency situations, using the phone while driving should be carried out only with use of a headset or a speaker phone, which ensures safety and does not limit motor abilities of the user. If one does not own a headset and still wants to use the phone, one should pull over and stop the car. Pay attention to the legal regulations concerning the use of mobile phone while driving. Some electronic components of the car without adequate protection can be affected by waves emitted by the phone; it is therefore advisable to use the phone in the car only when the external antenna of the vehicle is secured. Use the services of a professional when installing the phone in the car.

Surroundings security

Familiarise yourself with legal regulations concerning the use of mobile phones. Turn off the phone in areas where its use is forbidden or when it may cause interference or danger. The use of any devices that radio waves causes interference with medical devices (i.e. cardiac pacemaker), if they are not properly secured (if in doubt, consult your doctor or medical device manufacturer).

Attention: In places where there is a risk of explosion (i.e. petrol stations, chemical factories etc.), it is advisable to turn off the phone. *Please refer to regulations governing the use of GSM equipment in these places.*

Technological criteria

Network: GSM 2G: 900/1800 MHz

Some services may depend on your provider, the state of your local cellular network, version of the SIM card used and the way you use your phone. For more information, please contact your service provider.

Attention	Statement
The manufacturer is not responsible for any consequences caused by improper usage of the phone and not obeying the above instructions.	The software version can be upgraded without earlier notice. The representative retains the right to determine the correct interpretation of the above instructions.

Information on certificates (SAR)

Your mobile phone is a transmitter and receiver of radio waves. It is designed and manufactured according to current safety standards, so that exposure to radio waves never exceeds the limits set by the Council of European Union. Those limits establish the permitted levels of RF energy for the general population and were developed by independent scientific organizations on the basis of detailed scientific studies, including a large safety margin. Their purpose is to ensure the safety of all people, regardless of age and health. With regard to cell phones the level of exposure to radio waves is measured by the value SAR (Specific Absorption Rate). The SAR limit recommended by the Council of the European Union is 2 W/kg and refers to the averaged value for 10 grams of tissue. The highest SAR value for **myPhone 3330** equals **1,096 W/kg**.

The maximum radio frequency power emitted in the frequency range.		
Frequency Range	GSM 850/900/1800/1900 MHz	Bluetooth 2402-2480 MHz
Transmit Power	2W/1W	5.37 dBm EIRP

Correct disposal of used equipment.

The device is marked with a crossed-out garbage bin, in accordance with the European Directive 2012/19/EU on used electrical and electronic Equipment (Waste Electrical and Electronic equipment - WEEE). Products marked with this symbol should not be disposed of or dumped with other household waste after a period of use.

The user is obliged to get rid of used electrical and electronic equipment by delivering it to designated recycling point in which dangerous waste are being recycled. Collecting this type of waste in designated locations, and the actual process of their recovery contribute to the protection of natural resources.

Proper disposal of used electrical and electronic equipment is beneficial to human health and environment. To obtain information on where and how to dispose of used electrical and electronic equipment in an environmentally friendly manner user should contact their local government office, the waste collection point, or point of sale, where the equipment was purchased.

Correct disposal of used batteries

According to the EU directive 2006/66/EC with changes contained in EU directive 2013/56/UE on the disposal of batteries, this product is marked with crossed-out garbage bin symbol. The symbol indicates that the batteries used in this product should not be disposed with regular household waste, but treated according to the legal directives and local regulations. It is not allowed to dispose of batteries and accumulators with unsorted municipal waste. Users of batteries and accumulators must use the available collection points of these items, to be returned, recycled and disposed of.

Within the EU, the collection and recycling of batteries and accumulators is a subject to separate procedures. To learn more about existing procedures of recycling of batteries and accumulators please contact your local office or an institution for waste disposal or landfill.

Declaration of conformity with European Union Directives



mPTech Ltd. hereby declares that myPhone 3330 cellular phone is compliant with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following Internet address:

www.myphone.pl/qr/myphone-3330