 
 



my721X

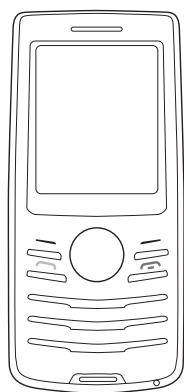

 **SAGEM**

 English

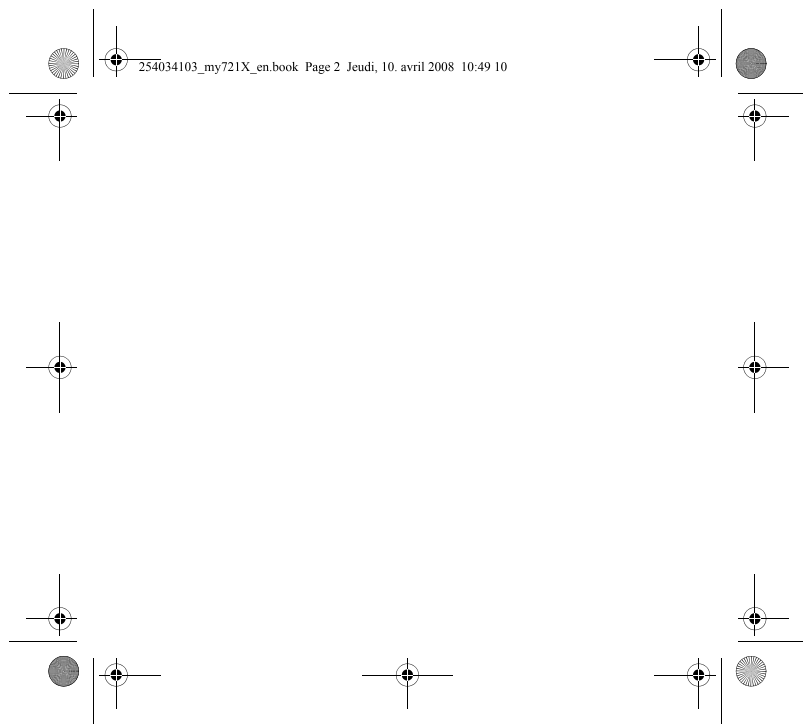

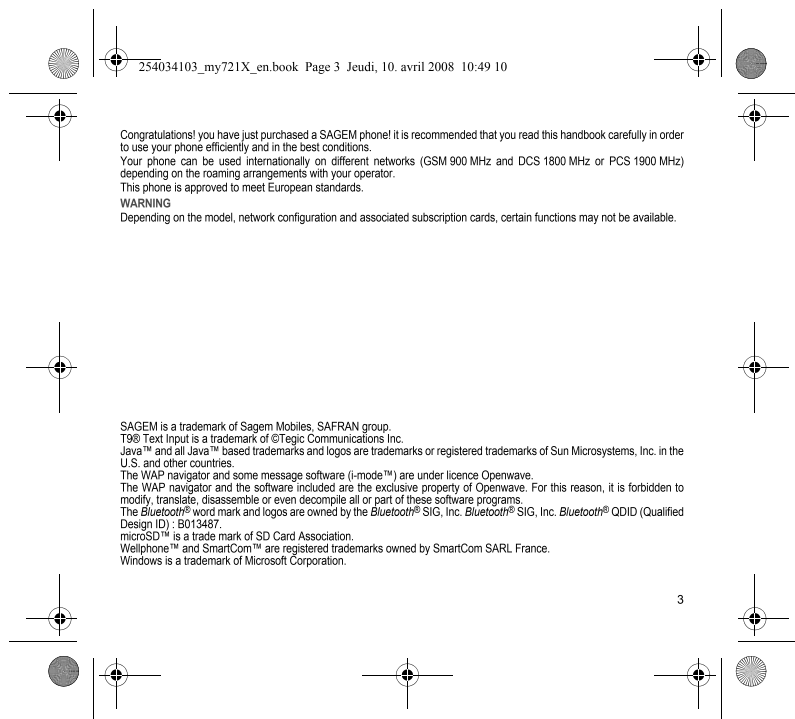

Congratulations! you have just purchased a SAGEM phone! it is recommended that you read this handbook carefully in order to use your phone efficiently and in the best conditions.
Your phone can be used internationally on different networks (GSM 900 MHz and DCS 1800 MHz or PCS 1900 MHz) depending on the roaming arrangements with your operator.
This phone is approved to meet European standards.
WARNING
Depending on the model, network configuration and associated subscription cards, certain functions may not be available.

SAGEM is a trademark of Sagem Mobiles, SAFRAN group.
T9® Text Input is a trademark of ©Tegic Communications Inc.
Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.
The WAP navigator and some message software (i-mode™) are under licence Openwave.
The WAP navigator and the software included are the exclusive property of Openwave. For this reason, it is forbidden to modify, translate, disassemble or even decompile all or part of these software programs.
The Bluetooth® word mark and logos are owned by the Bluetooth® SIG, Inc. Bluetooth® QDID (Qualified Design ID) : B013487.
microSD™ is a trade mark of SD Card Association.
Wellphone™ and SmartCom™ are registered trademarks owned by SmartCom SARL France.
Windows is a trademark of Microsoft Corporation.

Contents

Description	6	Sending the message.....	22
Installing the SIM card and the battery	8	Receiving messages	22
Inserting the memory card	9	Messages menu	22
Idle screen	10	Camera	25
Icons	10	Taking and saving a photo	25
Quick search for a menu or a contact name	10	Taking a video	26
Quick start	11	Multimedia.....	27
Information on the SIM card	11	Music	28
Getting started	11	Music player	28
Switching ON/OFF	12	FM Radio	29
Network	12	WAP	31
First call	12	The WAP Menu	31
Receiving a call	13	WAP Logging on	31
Using your phone.....	14	Downloading objects	32
Improving antenna performance.....	14	WAP Logging off	32
Increase the battery life of your phone	14	GPRS	32
Charging the battery	15	Organiser and Tools	33
Phonebook.....	17	Services	33
Using the phonebook	17	Games	33
Storing a new contact	17	Calculator	33
Calling a contact	17	Unit Converter	34
Contact options	18	Applications	34
Mailing lists	20	Time Manager	35
Messages	21	Alarm	35
Creating a text message	21	Timer	35
Saving the message	22	Organizer	35

ToDo	35
Autonomy	36
Chronometer	36
Settings	37
Phone	37
Connectivity	40
Flight mode	42
Multimedia	43
Calls	43
Messaging	45
Advanced	45
Technical features	48
Care and safety information	50
SAR	50
Advice for limiting exposure to radiofrequency (RF) fields	50
Safety	51
Environment	52
End User Licence Agreement (EULA), for the software	53
Java™	57
Warranty	60
Troubleshooting	63
Customer care	65
Index	66

Description

Loudspeaker

Left programmable key

- In menus: access to the selection shown on screen in the tab

Green key

- In call context: call - receiving a call
- Short press: activate/deactivate hands-free mode
- WARNING: do not use the phone in hands-free mode near to your ear, or you may suffer hearing loss

Navigator

- Navigation in menus
- Confirmation of a selection

* key

- In idle screen: long press: activates keypad locking. To deactivate: short press and (Validate)
- When composing a message:
 - Long press: switches from one input mode to another (ABC/T9)
 - Short press: upper case/lower case/figures



Right programmable key

- In menus: access to the selection shown on screen in the tab

Red key

- Short press: switch on
- Long press: switch off
- In call context: reject a call - hang up
- In menus: return to idle screen

 
key

- In idle screen: Hold down: silent mode
- In call/reception mode: short press stops ring tone
- In ring tone setting mode: activate/deactivate ring tone
- Stops sound in video or message playing, or in a game

Microphone

- WARNING: Ensure that you are not obstructing the microphone in call context

Loudspeaker

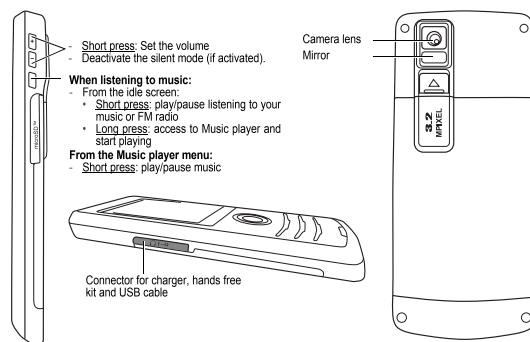

To ensure optimal screen legibility, check that you have removed the plastic protective film, clean the screen of you telephone with a soft dry cloth to remove any finger marks or dust and make sure the background brightness is not too strong.

Description

7

 
Alphanumeric keypad

- 1** A long press on the key 1 calls voicemail (if the number has been stored in **Settings/Calls/Advanced/Voicemail** menu).
- 2 to 9** A long press on one of the **2 to 9** keys immediately displays the phonebook on the contact corresponding to the letters on the key.

Installing the SIM card and the battery


Ensure that the phone is switched off and the charger disconnected.

- 1 To open the back cover: push the locking button upwards and remove the cover.
- 2 Slide the SIM card into the card holder with fold face down and cut corner as shown in the figure below.
- 3 Insert the battery as shown in the diagram below.
- 4 Replace the back cover, clicking in the lower part first and then push the locking button to close the cover.

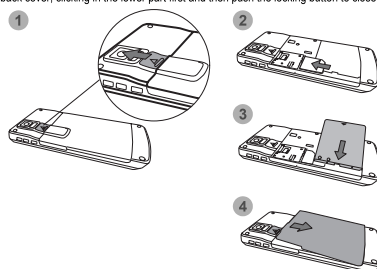

Your phone is identified by its IMEI number. Write this number down, and do not keep it with your phone, because you may be asked for it in the event of your phone being stolen, in order to prevent it from being used, even with a different SIM card. In order to display the IMEI on your phone's screen, type: *#06#.

 Inserting the memory card



- Remove the back cover.
- Open the protective cover of the slot located on the side of the phone and insert the memory card pushing it until it clicks into place.
- Replace the back cover.
- To remove the card, first make sure that no application is accessing the card, then slightly push the top edge of the card to release it and pull it out of the slot.

WARNING

The memory card is very fragile. Take care when you insert or remove the memory card.
Some memory cards must be formatted with a PC before first use with the phone.

Description

9

Idle screen

The idle screen may contain the following information:

Icons

1 - The title bar icons:

-  Battery (if it flashes red, the battery must be charged immediately)
-  Silent mode (the ringtone is off)
-  Only emergency call is possible
-  Signal strength level (between 0 and 5 bars)
-  Message received (read your message), flashing: memory full (delete some messages)
-  Grey: GPRS unavailable
Blue: GPRS connection
Flashing: GPRS connection on hand
-  WAP connection

2 - Date and time, in digital or analog mode

3 - Network provider

4 - Tab centred on bottom line:

This tab indicates that menu access is obtained by pressing the central part of the navigator.

Information messages on calls, messages or network messages received may also be displayed. They can be deleted by pressing the red key briefly.

Quick search for a menu or a contact name

From the idle screen, use the alphanumeric keypad keys to enter the first two letters of the menu or name that you want to find.

 
Example: to find contact «Mikael», press 6 and 4; the name of the contact is displayed on the idle screen.

10

Idle screen

Quick start

Information on the SIM card



To use your phone, you need a card called a SIM card. It contains personal information that you can modify.

- Secret codes (PIN(s): Personal Identification Numbers), these codes allow you to protect access to your SIM card and phone
- Phonebook
- Messages
- How special services work.

WARNING

This card must be handled and stored with care to avoid being damaged. If you should lose your SIM card, contact your network provider immediately.
Please keep your SIM card out of reach of young children.

Getting started

When you switch on your phone for the first time, follow the instructions displayed on the screen.

If access to the SIM card is protected, the device prompts you to enter the PIN:

Enter the code you received when your SIM card was issued. The digits do not appear on the screen for security reasons.

Warning

If a wrong PIN is entered three times in succession, your SIM card is blocked. You must then:

- Enter the PUK (Personal Unblocking Key) code provided by your operator, and validate.
- Enter your PIN and validate.
- Enter your PIN again and validate.

After 5 or 10 failed attempts (depending on the type of SIM card), the SIM card is permanently locked. You must then contact your operator to obtain a new card.

Switching ON/OFF

When your phone is off, a short press on the red key will turn it ON.
When the phone is ON, if you are browsing in the menus, a short press on the red key will take you back to the idle screen.
When you are in the idle screen, a long press on the red key will switch OFF the phone.

Network

 
The phone will now search for a network on which it can make calls. Once registered on a network, it displays the name of the network on the screen. You are then ready to send or receive a call.

If the network's name appears, calls are possible on your operator's network.
If the letter **R** and a network name are displayed, calls are possible on a roaming network provider.
If the letter **E** is displayed without any network name, only the emergency services are accessible (ambulance, police, fire brigade).
If the network icon flashes, the phone is in permanent search mode. There is no network available. The received signal strength indicator displays the quality of reception. If it indicates less than three bars, search for better reception in order to call in good conditions.

First call

Dial the number you want to call.
Press the green key.
During the call, the call in progress icon flashes on screen and tones may indicate the establishment of the call.
While a call is connecting, the phone icon is flashing.
You can adjust the sound level by pressing the side volume keys.
At the end of the conversation press the red key to hang up.

International call
Press (hold down) **0** to display " + ", then the number of the called party.
Emergency services
Depending on the network you can obtain the emergency service with or without a SIM card. It is enough to be in an area served by a network.
To obtain the international emergency service, dial **112** then press the green key.

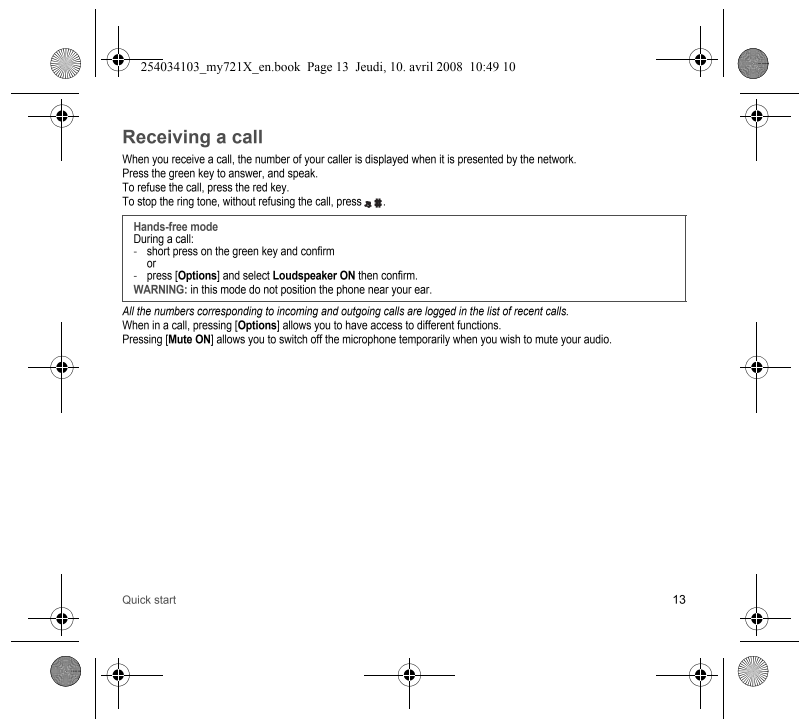

Using your phone

Improving antenna performance

 


The antenna is integrated in your phone, under the lower part of the back cover. Avoid putting your fingers on this area when the phone is switched ON. If your fingers obstruct the antenna, the phone may have to operate with a higher power level than usual, decreasing its efficiency quickly. It could also affect the quality of your communications.

Increase the battery life of your phone

- Don't press the keys when not necessary: each keypress activates the backlight, and uses much power.
- Don't obstruct the antenna with your fingers.
- Activation of the *Bluetooth®* function reduces the phone battery life. We recommend you deactivate it when not in use.

Charging the battery

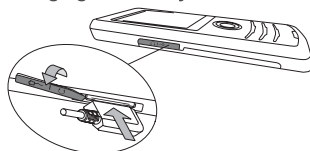

Your phone is powered by a rechargeable battery. A new battery must be charged for 4 hours at least before being used for the first time. It reaches its optimum capacity after a few cycles of use.

When your battery has been discharged, the empty battery icon flashes. In this case recharge your battery for at least 15 minutes before making any calls in order not to be cut off quickly.

To recharge the battery:

- Open the connector protective cover.
- Connect the charger to a socket.
- Plug the end of the cable into the phone connector.

The phone is then charging up. The battery icon scrolls up and down to indicate that it is charging. When the battery is fully charged, the charging stops on its own. Disconnect the cable.

When charging, the battery may warm up, this is normal.

When you recharge the battery, make sure that the mains socket where you plug in the charger is easy to access.

 
When you charge the battery, the socket on which the charger is plugged must be easily accessible.

WARNING

If the battery has entirely discharged, the phone cannot start. Plug the phone into the charger. The phone will switch on after a few minutes of charge. You can use the phone again when the **Start** option is displayed on the screen.

Using your phone

15

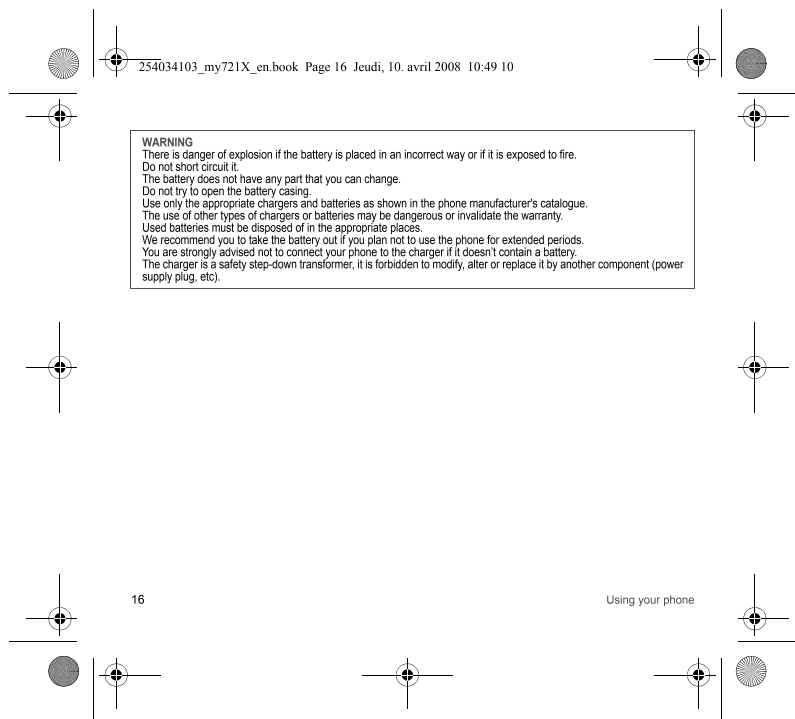

Phonebook

Using the phonebook

Enter the **Phonebook** menu, the contacts list is displayed if you already get some (otherwise, go to **Storing a new contact**). When a contact is selected, an icon is displayed in the title bar:

 contact stored in the SIM card

 contact stored in the phone

 contact stored in the Fixed Dialling. See **Settings/Advanced/Security/PIN2** and **Settings/Advanced/Security/Advanced/Fixed dialling** menus for more details about this activation.

You can search for a contact quickly by typing the first letters (up to three). You can display it by pressing the navigator.

Storing a new contact

There are two options to store a contact :

- 1) select **[Options]**, then select **Add phone contact** or **Add SIM contact**, or
- 2) enter in **Add contact** pressing the navigator, then select **Telephone**, **SIM card** or **Fixed directory**.

- Enter the last name and press the navigator.

- Enter the number and press the navigator.

Note: you can fill in other fields if you store the contact in the phone memory (email, address, ringtone, photo, etc.).

- Press **[Save]** to store it.

Calling a contact

Several ways:

- Select a contact. Press the green key to start the call.
- Select a contact, press the navigator, their number is displayed, press **[Options]/Call** to start the call.
- Direct call from the idle screen (only for the contacts stored in the SIM card memory): type the number with which the contact was saved  (example : 21 ) or the number  the number is displayed, confirm.

Contact options

To display the various options, select a contact and press **[Options]**.

Modify contact

Modify what you want and validate then select **Save** once the modifications are completed.

Send message

To send an SMS or an MMS to a contact (see chapter **Messages**).

Send by message

To send a contact details by message (see chapters **Messages**).

Send by Bluetooth

To send the details of one, several or all the contacts by *Bluetooth®*.

Copy to SIM / Copy to mobile

This allows you to copy your phonebook contacts from one memory to the other. Only the name and the first phone number will be copied.

Export

This allows you to copy one or several contact details to the **Multimedia/My Contacts** directory.

Several options:

- **current**: the details of the contact selected are copied,
- **multiple**: the details of the contacts you select are copied,
- **all**: the details of all the contacts are copied.

My numbers

This option allows you to save your personal numbers and store them in the memory.

Memory

Select **SIM** or **Phone** and validate.

- **Phone:** the screen displays the amount of memory used. The memory capacity is shared between the phonebook and various other features. If you are short on memory, check if you can free some space.
- **SIM:** available memory only for contacts.

Delete

It allows you to delete the contact(s) selected or all the contacts.

Set as my card/Business card

The details of a contact stored in the phone memory can be saved in a business card.

- Select a contact and press **[Options]**.
- Select **Set as my card** and **[OK]**. The details are saved as **Business card**. Then you can read it, modify it or send it by message or *Bluetooth®*.

Copy SIM -> phone/Copy phone -> SIM

This allows you to copy your phonebook contacts from one memory to the other. Only the name and the first phone number will be copied.

- **Copying a contact stored in the phone to the SIM card:** select the current contact and modify the name and number if necessary.
- **Copying a SIM contact to the phone:** select the current contact, several contacts or all the SIM contacts.

Synchronize

You can synchronize your phonebook with your archives stored in your operator's network depending on the options offered by your operator with a GSM or GPRS connection from your phone.

 
You can also synchronize your phonebook with your archives stored in your computer. You just need to activate *Bluetooth®* or configure your USB connection in your phone (see chapter **Connectivity**).

Add to mailing list

This allows you to add a contact to a mailing list.

Phonebook

19

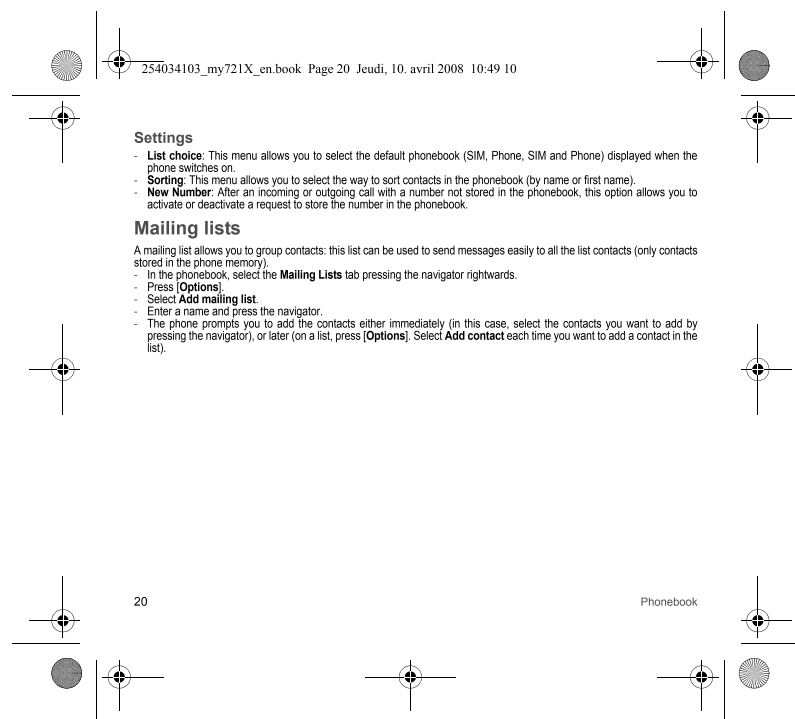

Messages



From this menu, you can send an SMS and MMS. MMS is a Multimedia Message Service, which allows you to attach photos, audio files, and others rich contents to your messages; these messages can even include several slides. An MMS is not charged at the same rate as an SMS. Please contact your network provider to get more information on their cost and the service availability.

Creating a text message

- Select **Messages/Create Message**.
- Type your text. The T9 mode is applied by default.

The language used is the one selected on the display of the phone (if the language selected is not compatible with the Easy Message T9®, the English language will be automatically selected).
The Easy Message T9® mode helps you to write your messages more easily.

Using T9 Mode



Press the key corresponding to the letter chosen once and compose the word by continuing to press the keys corresponding to the various letters without paying attention to the display; the word is highlighted.
The same sequence of keys pressed can correspond to several words, existing in the dictionary. If the word that appears is not the word you expected, press the navigator upwards to scroll through the words corresponding to this key sequence.

Once you agree on the word proposed on the screen, press the navigator rightwards to validate it or on the **0** key (which validates and inserts a space after the word), and continue writing the next word.

If the word you are expecting is not proposed, please add characters until you get the message **Add a word?** Press **Yes** and validate if the word displayed is appropriate or modify this word before adding it in the dictionary.

If you do not want to use **T9 mode**, you can switch to ABC mode pressing *** 3** (long press). The **ABC mode** allows you to type letters; press one key several times to display the letter you want (for example: press the **2** key twice to display **B**).

Upper case/Lower case/Figures

A short press on *** 3** switches the text to upper case, lower case or figures.

Punctuation characters

Punctuation characters are obtained by pressing the **1** key (except in **123** mode), or with the help of **Insert** mode (fast access by briefly pressing **3 0**).

Accented characters

Accented characters are generated automatically in T9 mode.

In ABC mode accented characters are available by pressing the key supporting the non-accented character repeatedly.

Saving the message

- Select **Save** if you do not want to send the message immediately or if you want to send it several times. It is saved in the **Drafts** menu.
- or
- Select **Save as template** to use it again as a template. It is saved in the **Templates** menu.

Sending the message

- Once the text entered, press the navigator or press **[Options]** and select **Add recipient**.
 - Enter the receiver's number or take it in your phonebook pressing **[Options]** then selecting **Contacts**.
- You also can select a contacts list in your phonebook.

Receiving messages

When you receive a message, the phone plays the ring tone that you selected, and a message icon is displayed on the screen of your phone.

If you do not read the messages, this icon remains displayed on the screen. When it flashes, the memory is full.

Receiving icons, backgrounds or tunes can take several seconds. An icon is flashing when the download of your message is in progress.

Note that you have two different possibilities for receiving MMS: automatically or manually; if " manual mode " is activated, then you will just receive a notification in your Inbox, meaning that a MMS is available on the MMS Server; select Retrieve in the options when you want to retrieve the MMS from the network.

 
For more details about automatic and retrieval modes, see " Options " on page 24.

Messages menu

Inbox

Messages are listed in chronological order, the latest message being displayed first.

The quantity of Not Read and Not Retrieved messages is shown. Not Retrieved and Not Read messages are shown in bold.

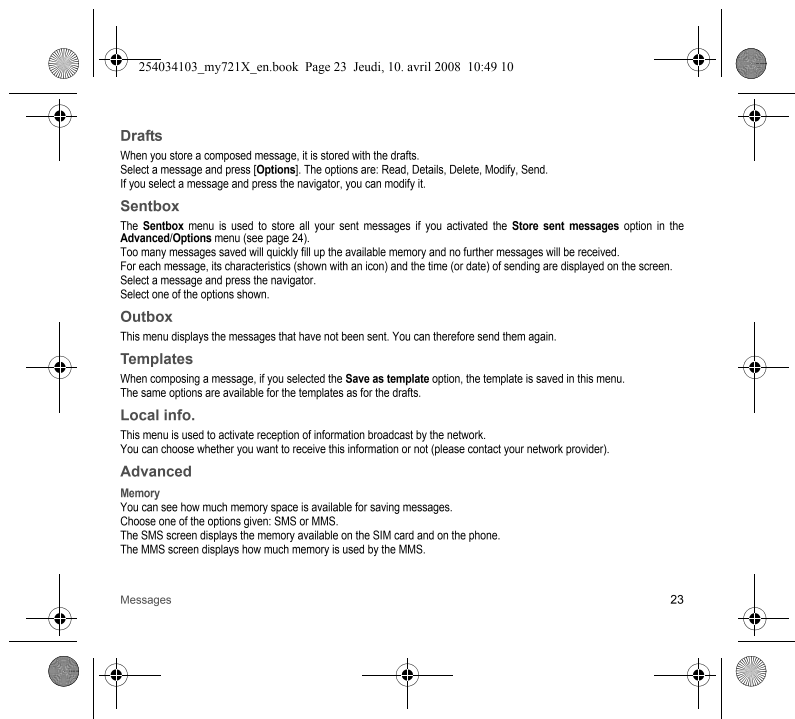

Drafts

When you store a composed message, it is stored with the drafts.
Select a message and press **[Options]**. The options are: Read, Details, Delete, Modify, Send.
If you select a message and press the navigator, you can modify it.

Sentbox

The **Sentbox** menu is used to store all your sent messages if you activated the **Store sent messages** option in the **Advanced Options** menu (see page 24).
Too many messages saved will quickly fill up the available memory and no further messages will be received.
For each message, its characteristics (shown with an icon) and the time (or date) of sending are displayed on the screen.
Select a message and press the navigator.
Select one of the options shown.

Outbox

This menu displays the messages that have not been sent. You can therefore send them again.

Templates

When composing a message, if you selected the **Save as template** option, the template is saved in this menu.
The same options are available for the templates as for the drafts.

 
Local info.

This menu is used to activate reception of information broadcast by the network.
You can choose whether you want to receive this information or not (please contact your network provider).

Advanced

Memory
You can see how much memory space is available for saving messages.
Choose one of the options given: SMS or MMS.
The SMS screen displays the memory available on the SIM card and on the phone.
The MMS screen displays how much memory is used by the MMS.

Messages

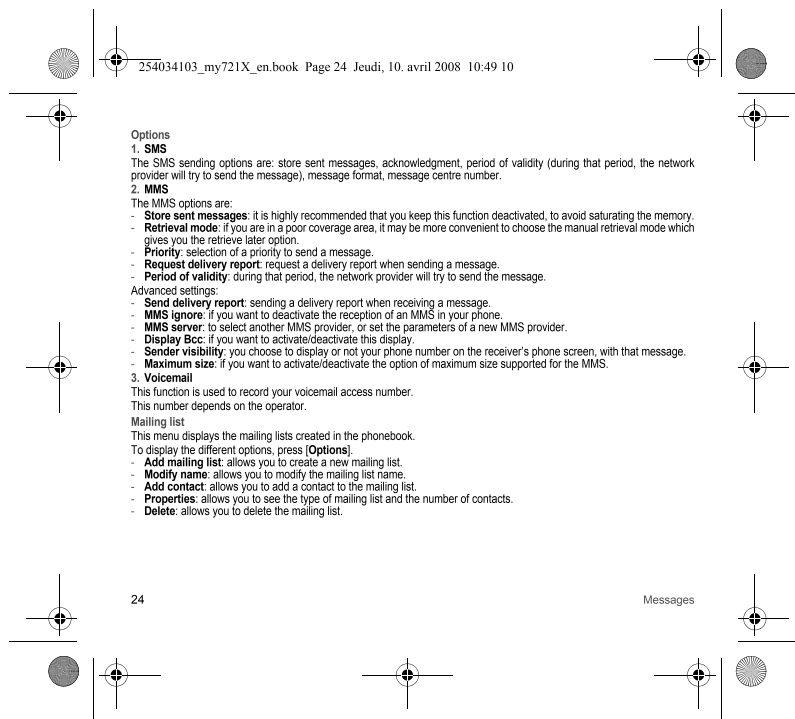

Options

1. SMS

The SMS sending options are: store sent messages, acknowledgment, period of validity (during that period, the network provider will try to send the message), message format, message centre number.

2. MMS

The MMS options are:

- **Store sent messages:** it is highly recommended that you keep this function deactivated, to avoid saturating the memory.
- **Retrieval mode:** if you are in a poor coverage area, it may be more convenient to choose the manual retrieval mode which gives you the retrieve later option.
- **Priority:** selection of a priority to send a message.
- **Request delivery report:** request a delivery report when sending a message.
- **Period of validity:** during that period, the network provider will try to send the message.

Advanced settings:

- **Send delivery report:** sending a delivery report when receiving a message.
- **MMS ignore:** if you want to deactivate the reception of an MMS in your phone.
- **MMS server:** to select another MMS provider, or set the parameters of a new MMS provider.
- **Display Bcc:** if you want to activate/deactivate this display.
- **Sender visibility:** you choose to display or not your phone number on the receiver's phone screen, with that message.
- **Maximum size:** if you want to activate/deactivate the option of maximum size supported for the MMS.

3. Voicemail

This function is used to record your voicemail access number.

 
This number depends on the operator.

 
Mailing list

This menu displays the mailing lists created in the phonebook.

To display the different options, press [Options].

- **Add mailing list:** allows you to create a new mailing list.
- **Modify name:** allows you to modify the mailing list name.
- **Add contact:** allows you to add a contact to the mailing list.
- **Properties:** allows you to see the type of mailing list and the number of contacts.
- **Delete:** allows you to delete the mailing list.

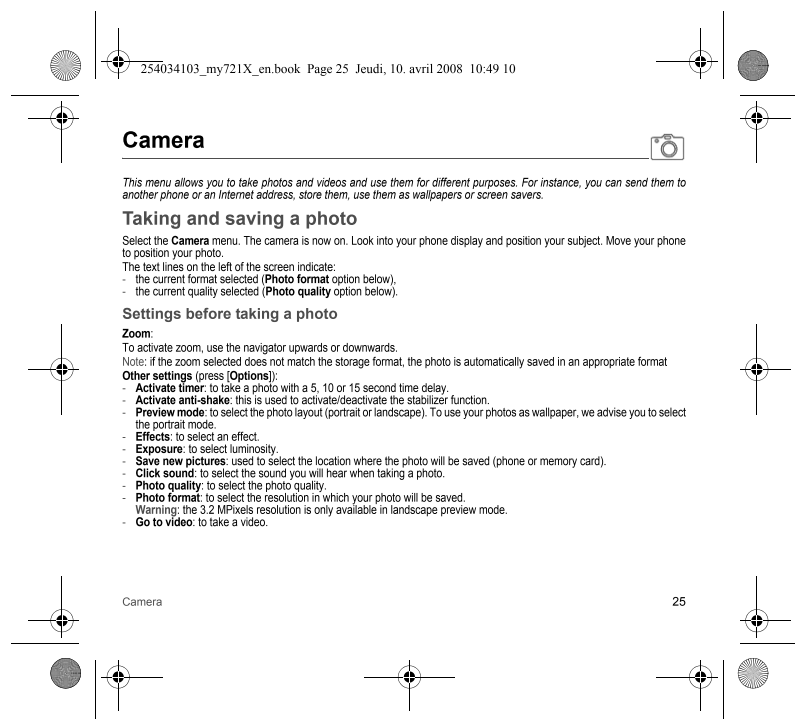

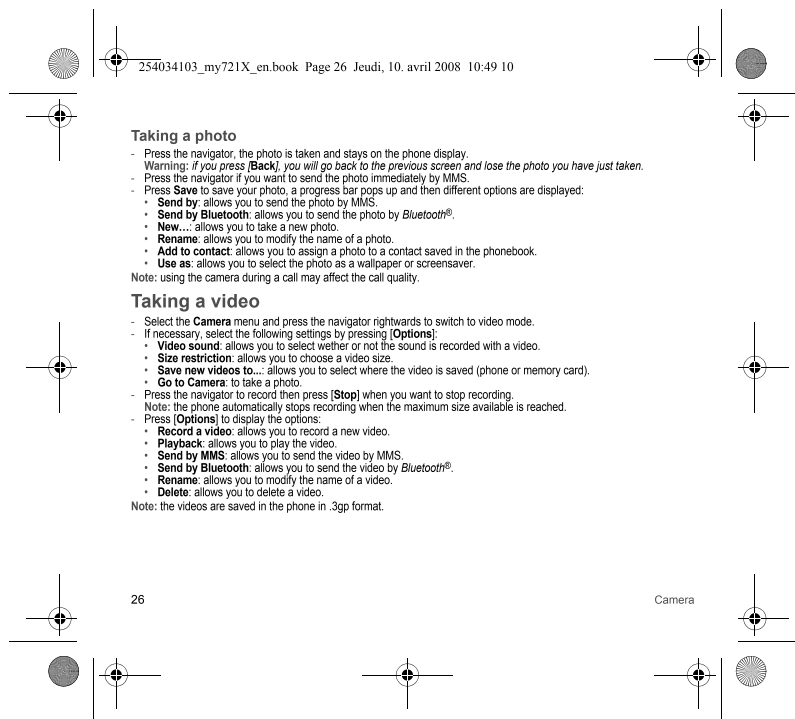

Multimedia



The **Multimedia** menu contains the directories of all the multimedia objects recorded in your phone and the downloaded objects (photos, videos, ringtones, etc.).

There are two tabs that you can select by pressing the navigator rightwards or leftwards:

- **Phone** tab (phone memory)
- **microSD™** tab (available if you have inserted a memory card in your phone).

You can copy the multimedia objects from the card to your phone.

To display the various options of each directory, press **[Options]**.

- **Browse**: displays the list of the objects.
- **Rename**: modifies the directory name.
- **Delete**: deletes the directory (only the directories created by the user).
- **New... folder**: create a new directory.
- **New**: allows you to take a new photo or video or to record a sound.
- **Format**: this option deletes all the internal memory of the phone. Warning: all the multimedia objects saved in this memory will be deleted.
- **Memory**: displays the memory used and available for the multimedia objects.

For each object a list of options is available (view, send, delete, etc.).

The **My Contacts** directory appears if you have exported contact details from your phonebook (see chapter **Phonebook**).

The **My Calendar** directory appears if you have exported a ToDo (see chapter **Time Manager**).

 
Multimedia

27

Music

Music player


This menu allows you to listen to music in the same way as on a portable music player.
If you do not have any music stored in the memory, use WAP to download some or connect your phone to a PC

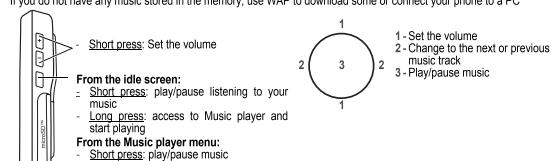

Creating a playlist

 - Select **[Options]Library**
 - Select **[Options]Create playlist**
 - Type a name for your playlist and press the navigator.
 - The **Multimedia** menu in which there are the multimedia directories is displayed.
 - Select in **My Sounds** directory or in the memory card the music tracks you want in your playlist.
 - **[Options]View content** then on a music **[Options]Add to playlist** adds the music selected or all the music tracks.
- When pressing **[Options]** on a playlist, you can display or play the contents, add musics, create a new playlist, delete one or modify its name.



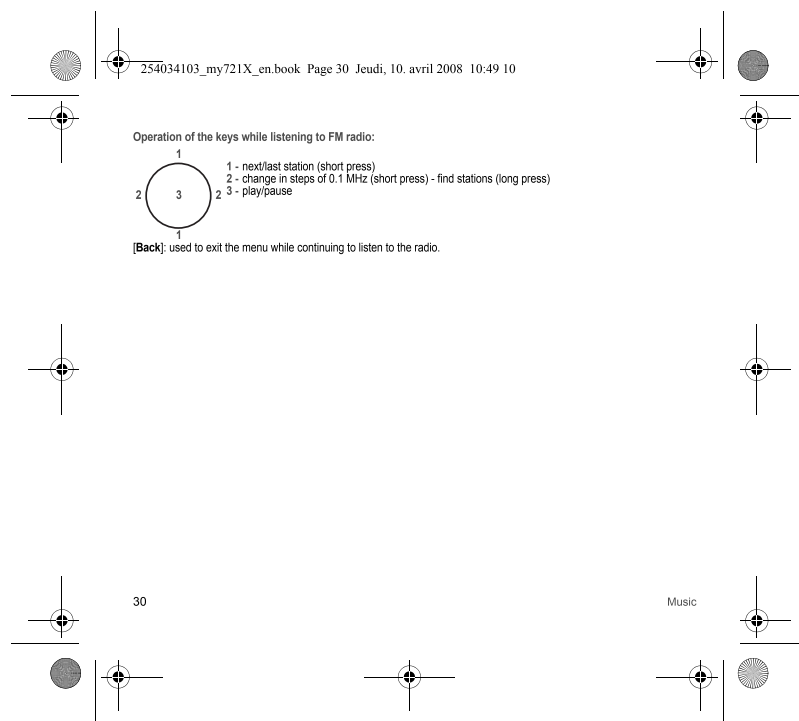

WAP

WAP (Wireless Application Protocol): a protocol that translates the Internet language into WML and HTML languages that can be read by a phone. The WAP function allows you to log onto certain Internet sites. You can log onto sites that allow you to download ringtones, icons, animated screensavers, Java™ applications, videos and games to your phone.

The WAP Menu

The WAP navigator is under licence:



RSA Data Security

The WAP navigator and the software included are the exclusive property of Openwave. For this reason, it is forbidden to modify, translate, disassemble or even decompile all or part of this software.



Home page: logs onto the home page (carries the name of your access provider).

Go to URL: this menu allows you to input an Internet address directly.

Bookmarks: allows you to store bookmarks (addresses of Internet sites).

A bookmark stored in the list can be modified, sent or deleted.

You can receive bookmarks and add them to this list.

Saved pages: allows you to display the pages saved on Internet sites out of connection (Warning: these pages will not be updated).

History: backward and forward navigation of the pages displayed are kept in memory.

Note: see chapter **Idle screen** for information on @ and GPRS icons.

 
WAP Logging on

The connection to a WAP service on the GPRS network is not terminated if an incoming call is received. You can answer the call.

If you are logging onto the GSM or GPRS network, the @ symbol flashes, the metering of the cost of the call starts as soon as it stops flashing.

WAP

31

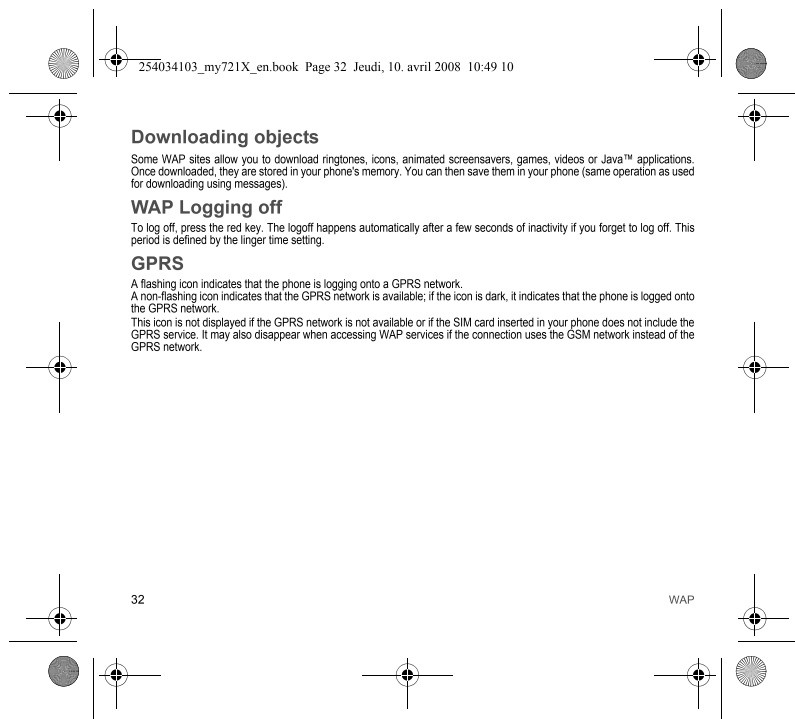

Organiser and Tools

Services

Set of services dependent on your operator.

Games



Your phone contains one or several games, either a complete or demo version according to the model. You can download more. You are the owner of a SAGEM mobile phone with which you can download applications and games to be executed on your phone thanks to the built-in Java™ engine. However, receiving applications from anywhere implies some basic knowledge of the possible effects of such downloading.

We recommend you download certified games or applications from your operator sites or from www.planetsagem.com.

By default, the connection URL of your operator or of PlanetSagem is configured in your phone.

If no connection URL is configured, selecting the **More Games** menu, will display the WAP function to configure new profiles which allow you to download games or applications.

When you select a game or an application, the **Settings/Connection** menu (displayed with **[Select]** key) allows you to configure a profile which is only used by the game or application to connect to the network (to exchange scores for example) but is not used to download new games or applications.

Calculator

This menu allows you to use your phone as a calculator.

Use the following keys to make calculations:

- **Upwards**: Add, **downwards**: Subtract, **rightwards**: Divide, **leftwards**: Multiply

The following keys are used for:

- **Left programmable key**: Equals or convert

- **Right programmable key**: Delete

 
- ***.:** Decimal point

- **-**: Minus sign.

If no calculations are being run, pressing **[Convert]** allows you to use the value in the converter directly.

Organiser and Tools

33

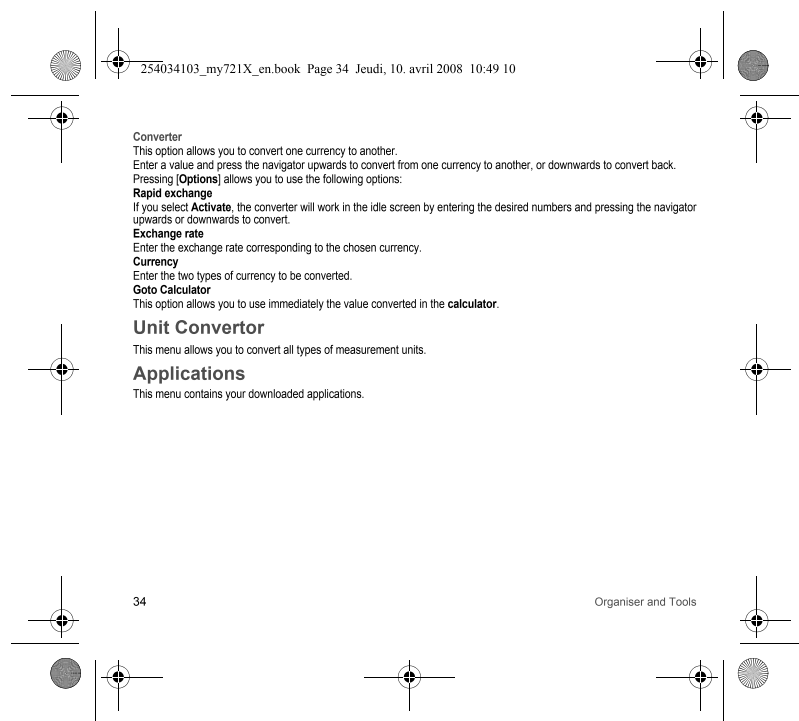

Time Manager

Alarm

This menu allows you to set and activate the alarm.
The alarm works even when the phone is switched off.

Timer

 
This menu is used to set and activate the timer.
 The alarm icon appears on the idle screen.

 
Organizer

 
The Assistant menu is an organiser where you can record events. The current month is displayed: press the navigator to see the current week and any events you have recorded.
Press the navigator again to access the options:
- **Add Written Event/Add Vocal Event:** allows you to add text or voice type events. Fill in the different items. Save the event.
Once you have added the event, you can modify it, delete it, send it by message or *Bluetooth®* or export it.

 
ToDo

 
This menu allows you to add ToDos, access category-based Todo management and delete all the ToDos.
If there are not ToDos, you access the options below directly. If there is a ToDo, press **[Options]** to display the options.
- **Add written ToDo/Add vocal ToDo:** allows you to add a ToDo of the text or voice type. Fill in the different items. Save the ToDo.
- **Categories:** allows you to see the different ToDo categories, assign a specific ring tone to each individual ToDo, know the number of ToDos in each category and see them.
- **Delete all:** allows you to delete all the ToDos from your ToDo.
- **Memory:** allows you to display the memory used by the different functions of your phone and in particular the ToDos.

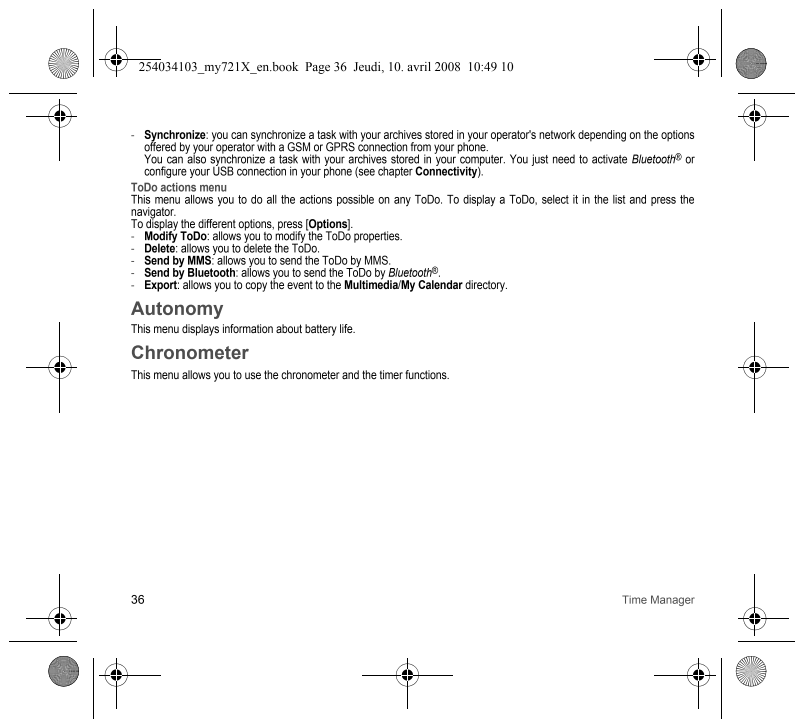

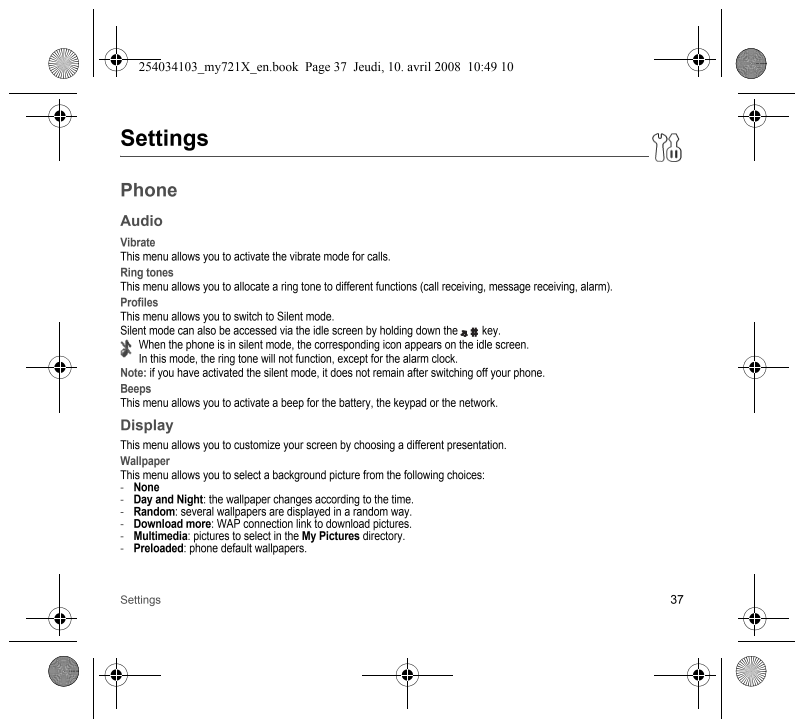

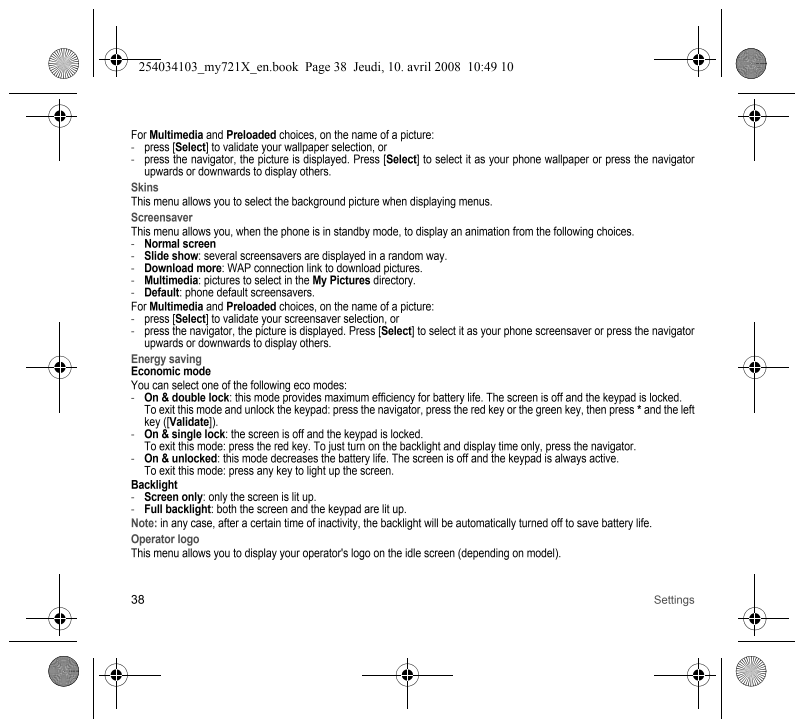 


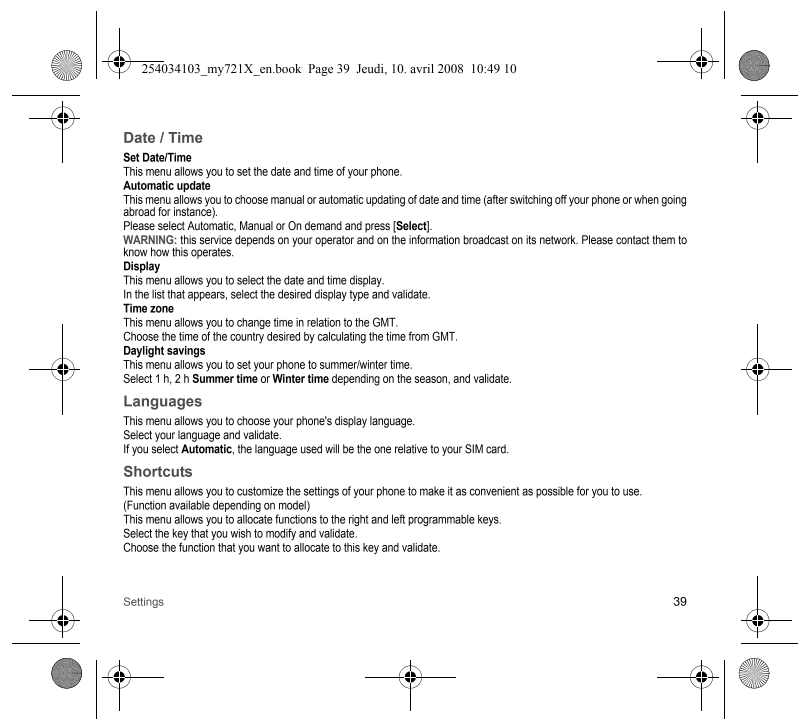

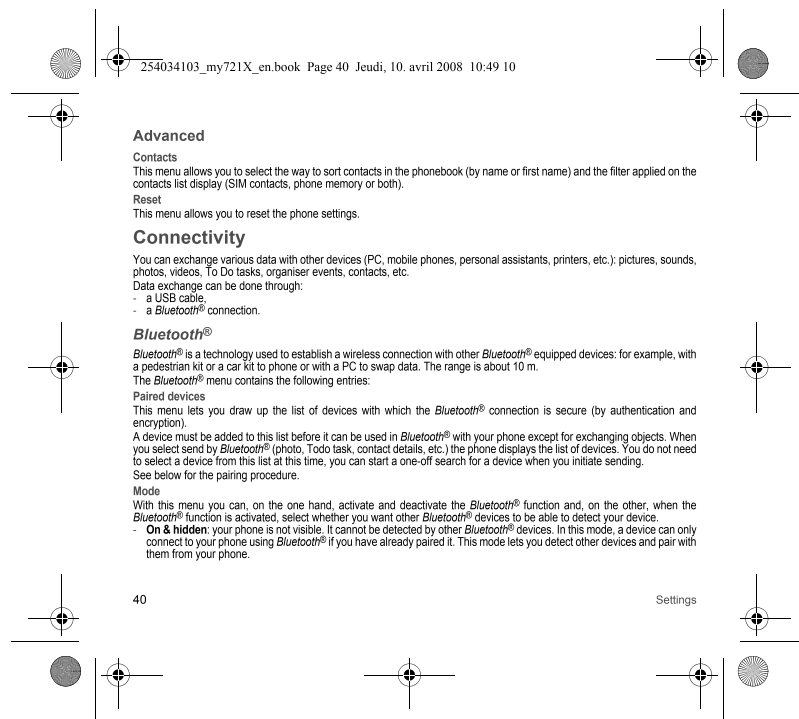





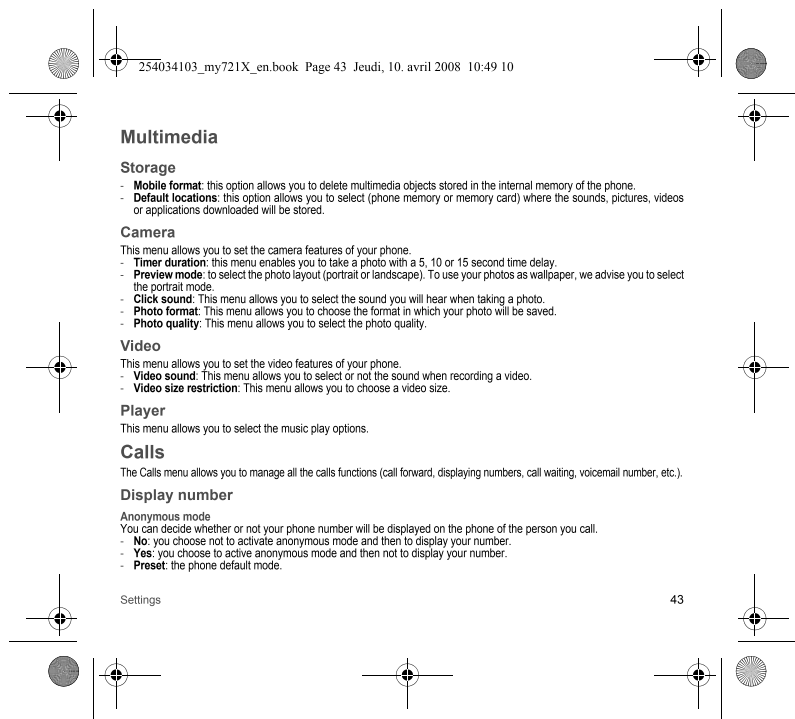

My number

On outgoing calls: status of the Display numbers function.

On incoming calls: status of the Display numbers function when you have forwarded the incoming calls to another number.

Caller's Number

On outgoing calls: status of the Display numbers function when your call is forwarded to another number.

On incoming calls: status of the caller's Display numbers function.

Call waiting

(Operator-dependent service). During a call, you may be informed that a caller is trying to reach you: you hear a special tone. The caller's identity is displayed on the screen (name or number).

You can **activate**, **deactivate**, or **status** of the call waiting service in order to check if it is active or not.

During a call, if a second caller tries to contact you, the screen displays the call warning.

Auto redial

This menu allows you to call back a caller you have not managed to reach.

You can set the redial function to **Inactive**, **On request** or **Systematic**.

If you choose **On request**, your phone will offer to redial your caller automatically if their number is busy.

Advanced

Counters

This menu allows you to consult the duration of the last calls.

It can also be used to check the volume of data exchanged in GPRS.

Call barring

 
This menu allows you to block the sending or receiving of certain calls.

Before you can use this service, a password will be provided by your operator when you take out your subscription.

Access to this service depends on your subscription type.

To activate call barring :

- Select incoming or outgoing calls.
- Select the call type on which you want to activate call barring.
- Select:
 - * either All,
 - * or If roaming, if you are away from your home country and if roaming is available, only incoming calls will be blocked.
- Select Activation and enter password.

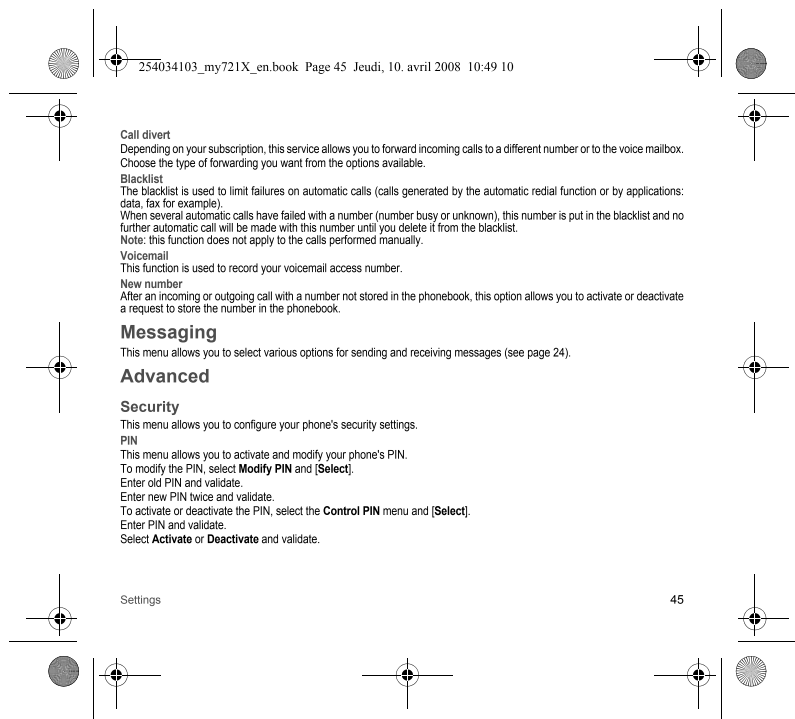

PIN2

You have a second PIN number to allow you to access certain functions (*). Proceed as above in order to modify PIN number 2 of your phone.

Phone code

The Phone code menu allows you to activate the phone code so that it is requested and checked whenever the phone is switched on if a different SIM card is used. This code is automatically linked to the SIM card installed when the phone is activated, for example to protect the phone if stolen.

Select **Check** and **[Select]**.

Enter 0000 (the default factory code) and validate.

Select **Activate** or **Deactivate** and validate.

To modify the phone code, select **Modify** and validate.

Enter old phone code and validate.

Enter new phone code and validate.

Enter phone code again to confirm it and validate.

Operator

This menu allows you to modify the call barring.

Access to this service depends on your type of subscription.

Advanced

Confidentiality

This menu allows the activation or deactivation of automatic deletion, after power off/on, of outgoing calls, messages stored or organiser events.

Select **Activate** or **Deactivate** and validate.

Fixed dialling

This menu allows you to restrict the outgoing calls.

The availability of this menu depends on your SIM.

Enter PIN2 number and validate.

 
Select **Activate** or **Deactivate** and validate.

Proceed as for any other phonebook.

When activating this function, only the numbers stored in the phonebook can be called.

This phonebook is linked to the SIM card, and its size depends on the card's capacity.

(*) These functions may or may not be available depending on your SIM card.

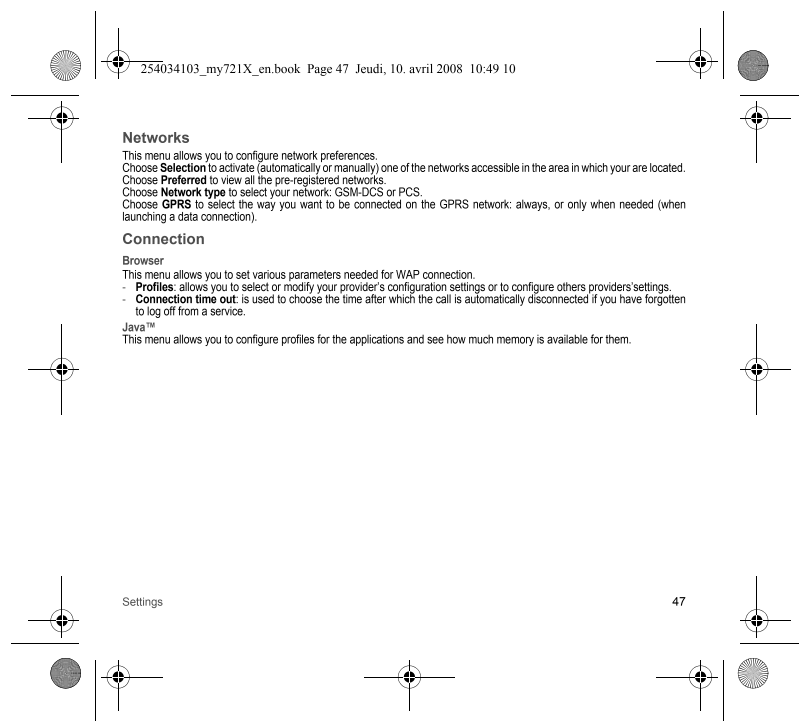

Technical features

Weight: 90 g
Size: 112.5 x 48.5 x 9.8 mm
Battery life (*):
- Standby: up to 220 h
- Calls: up to 3 h
- Music mode: 4 h 30
Multimedia objects supported:
- Audio formats: Midi, WAV (PCM, ADPCM), AMR NB, MP3, AAC, iMelody 1.2
- Image formats: bmp, wbmp, jpeg, png, gif, animated gif
- Video formats: 3GP
Size of memory available for messages: 100 messages
Size of memory available for messages, the phonebook and the multimedia objects: up to 10 MB
Memory card maximum size: 4 GB
Maximum size of each message:
- SMS: < 160 characters
- MMS: the phone supports MMS sizes up to 300 kB both for outgoing and incoming messages (depending on the phone configuration and on the operator reservations)
Operating temperature: from - 10 °C to + 55 °C

(*) These values are theoretical ones and given for information only.

CE Declaration of Conformity

Déclaration CE de Conformité

Fabricant
Manufacturer

Sagem Mobiles

Adresse

Le Pont de Paris
27 rue Labarre - 75015 Paris - FRANCE

Déclare sous sa responsabilité que le produit
Declares under our sole responsibility that our product

Nom du produit
Product Name

Triple Band GSM/DCS/PCS BT - DX2008S2 (my721X)

est conforme aux exigences des directives européennes suivantes :
conforms to the requirements of the following EEC directives

EEC Directive 1999/5/CE

Sécurité (Safety)

EN 60950

CEM (EMC)

EN 301 488-1
EN 301 488-7
EN 301 488-17

Réseau (Network)

3GPP TS 51.010-1 v 7.8.0 avec GCF-CC v 3.28.0 inclus
(3GPP TS 51.010-1 v 7.8.0 selected with GCF-CC v 3.28.0 included)
EN 301 511 V8.0.2
EN 300 328-2

Santé (Health)

EN 50360, EN 50361

FM

EEC Directive 2004/108/EC


CEM (EMC)

EN 55013
EN 55020

Lieu et date
(Place and date of issue)


Le Pont de Paris - 27/04/2008

 Signature



Declaration of Conformity

 49

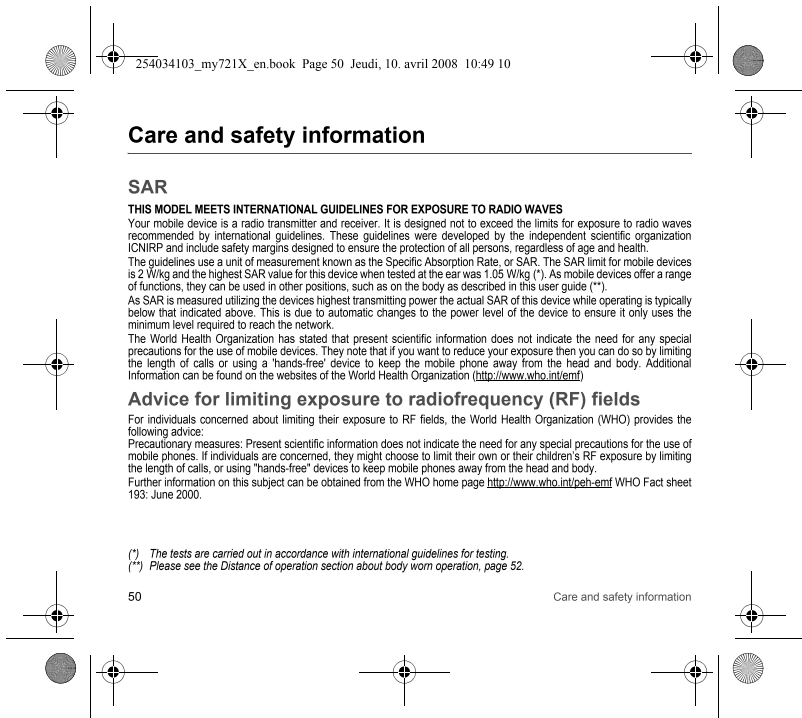

Care and safety information

SAR

THIS MODEL MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to ensure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 1.05 W/kg (*). As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide (**).

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a "hands-free" device to keep the mobile phone away from the head and body. Additional Information can be found on the websites of the World Health Organization (<http://www.who.int/emf>)

Advice for limiting exposure to radiofrequency (RF) fields

For individuals concerned about limiting their exposure to RF fields, the World Health Organization (WHO) provides the following advice:

Precautionary measures: Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body.

Further information on this subject can be obtained from the WHO home page <http://www.who.int/peh-emf> WHO Fact sheet 193: June 2000.

(*) The tests are carried out in accordance with international guidelines for testing.

(**) Please see the Distance of operation section about body worn operation, page 52.

Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited.

Use of your phone is subject to safety measures designed to protect users and their environment.

Do not use your phone in damp areas (bathroom, swimming pool, ...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower than - 10°C and higher than + 55°C.

The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.

Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

Electrical safety

Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

Aircraft safety

When travelling by plane, you will need to switch your phone off when so instructed by the cabin crew or the warning signs.

Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network.

Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

Explosive materials

Please comply with warning signs at petrol stations asking you to switch your phone off. You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

Electronic equipment

To avoid the risk of demagnetisation, do not leave electronic devices close to your phone for long periods of time.

Electronic medical equipment

Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

Hospitals

Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.

Road safety

Do not use your phone when driving. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.

Distance of operation

This phone model has been tested and meets radiofrequency exposure guidelines when used as follows:

- **against the ear:** make or receive a phone call and hold the phone as you would a wireline telephone,
- **body worn:** when transmitting, place the phone in a carry accessory that contains no metal and positions the phone a minimum of 1.5 cm from your body. Use of other accessories may not ensure compliance with radiofrequency exposure guidelines. If you do not use a body worn accessory and are not holding the phone at the ear, position the phone a minimum of 1.5 cm from your body,
- **data operation:** when using a data feature, position the phone a minimum of 1.5 cm from your body for the whole duration of the data transmission.

Accessories

We recommend you use SAGEM brand accessories for optimal operation of your phone and accessories.

Using the music player

This product has been designed to comply with prevailing legislation regarding the limitation of maximum audio volume levels.

- Prolonged listening at high volume with a headset or earphones can damage your hearing.
- If you experience ringing in your ears, reduce the volume or stop using the product.
- Only use the headset or earphones supplied with the product or else use compatible accessories. The list of compatible accessories can be consulted on our Web site: <http://www.sagem.com>.

Environment

Packaging

To facilitate the recycling of packaging materials, please comply with the selective waste sorting rules instituted locally for this type of waste.

Batteries

Spent batteries must be deposited at the designated collection points.

The product



The crossed-out waste bin mark affixed to the product (including its accessories) means that it belongs to the family of electrical and electronic equipment.

To promote the recycling and recovery of waste electrical and electronic equipment (WEEE) and at the same time safeguard the environment, European regulations require you to comply with the sorting rules instituted locally for this type of waste.

End User Licence Agreement (EULA), for the software

CONTEXT AND ACCEPTANCE OF THE AGREEMENT

You have acquired a Mobile Phone device ("DEVICE"), manufactured by Sagem Mobiles (SAGEM), that includes software either developed by SAGEM itself or licensed third party Software suppliers ("SOFTWARE COMPANIES") to SAGEM with the rights to sub-license it to the purchaser of the device. These installed software products, regardless of their company of origin, and whether the name of the company of origin is indicated or not in the DEVICE documentation, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.

IF YOU DO NOT AGREE WITH THIS END USER LICENCE AGREEMENT ("EULA"), DO NOT USE THE DEVICE OR COPY THE SOFTWARE. INSTEAD, PROMPTLY CONTACT SAGEM FOR INSTRUCTIONS ON RETURN OF THE UNUSED DEVICE(S) FOR A REFUND. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICE, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

SOFTWARE includes software already installed on the DEVICE ("DEVICE Software") and Software contained on the CD-ROM disk ("Companion CD"), if any is supplied with the product.

GRANTING OF SOFTWARE LICENCE RIGHTS

This EULA grants you the following licence:

DEVICE Software. You may use the DEVICE Software as installed on the DEVICE. All or certain portions of the DEVICE Software may be inoperable if you do not have and maintain a service account with an appropriate Mobile Operator, or if the Mobile Operator's network facilities are not operating or configured to operate with the DEVICE software.

COMPANION CD. If any is supplied, additional software for your personal computer is included with your DEVICE. You may install and use the software component(s) contained in the Companion CD only in accordance with the terms of the printed or online end user licence agreement(s) provided with such component(s). In the absence of an end user licence agreement for particular component(s) of the Companion CD, you may install and use only one (1) copy of such component(s) on the DEVICE or a single computer with which you use the DEVICE.

Security Updates. The SOFTWARE may include digital rights management technology. If SOFTWARE does contain digital rights management technology, content providers are using the digital rights management technology ("DRM") contained in the SOFTWARE to protect the integrity of their content ("Secure Content") so that their intellectual property, including copyright, in such content is not misappropriated. Owners of such Secure Content ("Secure Content Owners") may, from time to time, request manufacturers or SOFTWARE SUPPLIERS to provide security related updates to the DRM components of the SOFTWARE ("Security Updates") that may affect your ability to copy, display and/or play Secure Content through the SOFTWARE or third party applications that utilise the DRM.



NOTICE REGARDING THE MPEG-4 VISUAL STANDARD. The SOFTWARE may include MPEG-4 visual decoding technology. MPEG LA, L.L.C. requires the following notice:

USE OF THIS SOFTWARE IN ANY MANNER THAT COMPLIES WITH THE MPEG-4 VISUAL STANDARD IS PROHIBITED, EXCEPT FOR USE DIRECTLY RELATED TO (A) DATA OR INFORMATION (i) GENERATED BY AND OBTAINED WITHOUT CHARGE FROM A CONSUMER NOT THEREBY ENGAGED IN A BUSINESS ENTERPRISE, AND (ii) FOR PERSONAL USE ONLY; AND (B) OTHER USES SPECIFICALLY AND SEPARATELY LICENSED BY MPEG LA, L.L.C.

If you have questions regarding this Notice, please contact MPEG LA, L.L.C., 250 Steele Street, Suite 300, Denver, Colorado 80206; Telephone 303.531.1880; FAX 303.531.1879

Termination. Without prejudice to any other rights, SAGEM may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE and all of its component parts.

Consent to Use of Data. You agree that SOFTWARE SUPPLIERS may collect and use technical information gathered in any manner as part of product support services related to the SOFTWARE. SOFTWARE SUPPLIERS may use this information solely to improve their products or to provide customised services or technologies to you. SOFTWARE SUPPLIERS may disclose this information to others, but not in a form that personally identifies you.

Internet Gaming/Update Features. If the SOFTWARE provides, and you choose to utilise, the Internet gaming or update features within the SOFTWARE, it is necessary to use certain computer system, hardware, and software information to implement the features. By using these features, you explicitly authorise SOFTWARE SUPPLIERS to use this information solely to improve their products or to provide customised services or technologies to you. SOFTWARE SUPPLIERS may disclose this information to others, but not in a form that personally identifies you.

Internet-Based Services Components. The SOFTWARE may contain components that enable and facilitate the use of certain Internet-based services. You acknowledge and agree that SOFTWARE SUPPLIERS may automatically check the version of the SOFTWARE and/or its components that you are utilising and may provide upgrades or supplements to the SOFTWARE that may be automatically downloaded to your Device.

Links to Third Party Sites. The SOFTWARE may provide you with the ability to link to third party sites through the use of the SOFTWARE. The third party sites are not under the control of SAGEM. Neither SAGEM nor its affiliates are responsible for (i) the contents of any third party sites, any links contained in third party sites, or any changes or updates to third party sites, or (ii) webcasting or any other form of transmission received from any third party sites. If the SOFTWARE provides links to third party sites, those links are provided to you only as a convenience, and the inclusion of any link does not imply an endorsement of the third party site by SAGEM or its affiliates.

Additional Software/Services. The SOFTWARE may permit SAGEM to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-based services components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components").

If SAGEM provides or makes available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply.

SAGEM reserves the right to discontinue any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

End User Licence Agreement (EULA), for the software

55

EXPORT RESTRICTIONS. You acknowledge that SOFTWARE is subject to U.S. export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments.

UPGRADES AND RECOVERY MEDIA

- **DEVICE Software.** If the DEVICE Software is provided by SAGEM separate from the DEVICE on media such as a ROM chip, CD ROM disk(s) or via web download or other means, and is labelled "For Upgrade Purposes Only", you may install one copy of such DEVICE Software onto the DEVICE as a replacement copy for the existing DEVICE Software and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade DEVICE Software.
- **COMPANION CD.** If any Companion CD component(s) is provided by SAGEM separate from the DEVICE on CD ROM disk(s) or via web download or other means, and labelled "For Upgrade Purposes Only", you may (i) install and use one copy of such component(s) on the computer(s) you use to exchange data with the DEVICE as a replacement copy for the existing Companion CD component(s).

RESPONSIBILITIES

SUPPORT AND INFORMATION. Should you have any questions concerning this EULA, or if you desire to contact SAGEM for any other reason, please refer to the address provided in the documentation for the DEVICE.

NO LIABILITY FOR CERTAIN DAMAGES. EXCEPT AS PROHIBITED BY LAW, SAGEM SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

FOR APPLICABLE LIMITED WARRANTIES AND SPECIAL PROVISIONS PERTAINING TO YOUR PARTICULAR JURISDICTION, PLEASE REFER TO YOUR WARRANTY BOOKLET INCLUDED WITH THIS PACKAGE OR PROVIDED WITH THE SOFTWARE PRINTED MATERIALS.

Java™

When running a Java™ application, you may be prompted to grant access to protected features. These features are protected because using them could incur a cost, or involve your personal data. In case of doubt, don't hesitate to refuse access by selecting the "No" button!

The security configuration menu is an expert feature! You must know exactly what you are doing before attempting to change the security parameters of a MIDlet. Misunderstanding changes may render MIDlet non functional and/or lead to higher risks for your private data or impact your airtime consumption. Any changes in the security configuration are done under your responsibility. In no case shall Sagem Mobiles and/or your network provider be liable for any damages deriving from or arising out of such changes in the security configuration.

You must be aware that applications downloaded to your phone could cause the phone to perform actions for which you will be billed, such as making calls and sending SMS. Depending on your operator's billing policy, you may also be charged to download the application because of airtime consumption.

Security considerations

Java™ MIDP technology is an efficient way to provide powerful applications in mobile phones.

All these MIDP 2.0 features cannot be displayed on MIDlet installed in the handset: an advanced access control system is implemented in the device to protect your private data and airtime consumption.

Access controls are collected in 9 security groups:

- Network access
- Auto invocation
- Phone call
- Local connectivity
- Messaging receive
- Messaging sending
- Read User data
- Write User data
- Multimedia recording

Each of these security groups has one of 5 possible authorizations levels (listed from the more restrictive to the more permissive):

- Never: The security group completely prevents access to the protected features.
- Per use: Each time MIDlet tries to use protected feature, user is prompted to grant access.
- Per session: First time a MIDlet uses a protected function, user is prompted to grant access like in "Per use" authorization but access is granted until the MIDlet terminates.

Java™

57



- Single confirmation: The first time in the whole MIDlet life a MIDlet uses a protected feature, user is prompted to grant access. It remains valid until the MIDlet is removed from the handset.
 - Always: The security group unconditionally grants access to protected features.
- A MIDlet has a security status which is either "uncertified", or else "certified".
An "uncertified" status means that the source of the MIDlet could not be verified by the mobile phone at installation time. As far as the phone knows, the MIDlet could have been written by anyone.
A "certified" status means that the MIDlet was digitally signed by a known party, whose name is displayed by the mobile phone.
Security permissions are different for "uncertified" or "certified" MIDlets.

Security configuration menu
When a MIDlet is installed in the mobile phone, default security authorizations are applied.
This default security configuration may be altered through the "Settings/Security" menu of an installed MIDlet.
Once in the "Security" menu, the security status of the MIDlet is displayed.

If you do not want to enter the security menu, simply select the "Back" button. You can proceed by selecting "OK" button.
The menu displayed allows you to increase or decrease the permissions currently applied to the current MIDlet for each of the security groups.

When you set a more permissive authorization to a security group than the current value, the mobile phone asks you to confirm your increased risk exposure.
The maximum risk exposure increase is limited by the security status.

What is Java™?
Business applications and games are easily downloadable by the end-user on a Java™ featured handset.
Your mobile phone is a MIDP 2.0 compliant Java™ platform which implements WMA (SMS support) and MMAPI (Multimedia support) options, providing an exciting environment to run highly graphical, networked and intuitive MIDP applications.

What is a MIDlet?
A Java™ application or a game designed to run in a mobile phone is named a MIDlet (MIDP applet).
A MIDlet is usually made up of 2 files:

- The JAD file
- The JAR file

JAD file stands for Java™ Application Descriptor. It is a small file describing the content of a JAR file.
JAR file stands for Java™ Archive. It refers to the application data themselves (program, images, sound). A JAR file can have a size of up to 200 KB.

Note: In rare circumstances, MIDlet vendors may provide no JAD file and the MIDlet is just the JAR file. In such a case it is your sole responsibility to assess the risk of downloading the JAR file without any possibility of consulting the JAD file.





Warranty

You must always use your phone for the purpose for which it was designed, under normal operating conditions. Sagem Mobiles declines all responsibility for any use outside of the scope of its designed purpose and for any consequences of this use.

The software program developed by SAGEM remains the exclusive property of Sagem Mobiles. It is therefore highly prohibited to modify, translate, de-compile or disassemble this software program or any part thereof.

Usage precautions

Your phone allows you to download ring tones, icons and animated screensavers. Some of these items may contain data that may cause malfunctions of your phone or data losses (virus for example).

For this reason, Sagem Mobiles rejects all responsibility concerning (1) the reception of downloaded data or losses of the said data, (2) the impact on the operation of the phone and (3) damages resulting from receiving the said downloaded data or loss of said data. In addition, Sagem Mobiles states that a failure caused by receiving downloaded data that do not comply with the specifications set by Sagem Mobiles is excluded from the warranty. Consequently, the diagnosis and repair of a phone infected by the said downloaded data will be at the expense of the customer.

Any content that you download to your phone may be protected by copyright belonging to third parties and consequently you may not have the right to use this content or its use may be restricted. Consequently it is up to you to ensure that you have permission, such as under the terms of a licence agreement, to use any content that you download. Furthermore, Sagem Mobiles does not guarantee the accuracy or the quality of any content that you download. You alone are responsible for the content that you download to your mobile phone and how you use it. Sagem Mobiles cannot be held responsible for this content or for its use.

It is your responsibility to ensure compliance, at your own expense, with the laws and regulations applicable in the country where you use your phone.

Warranty conditions

Whenever you wish to make use of the warranty, please contact your vendor and present the purchasing paperwork obtained from the vendor.

If a fault occurs, the vendor will indicate what action is to be taken.

1.

The new phone (excluding consumables), including new accessories bundled with the phone, are guaranteed by Sagem Mobiles, parts and labour (apart from travel) against any manufacturing fault for a period of twelve (12) months with effect from the sale of the phone to the customer, on presentation of the paperwork indicating the purchase date of the phone.

Phones that have been repaired or replaced as standard during the warranty period stated above are guaranteed (parts and labour) until the later of these two dates:
Expiry of the guarantee period of twelve (12) months stated above or three (3) months with effect from the date of support provided by Sagem Mobiles.
Your legal rights under the terms of applicable national law as well as your rights in relation to your retailer, as set out in the sales contract, remain applicable and are in no way affected by this guarantee.
In any disputes, the phone is covered by the legal warranty against the consequences of faults or hidden defects.

2.
All faulty phones under warranty will be replaced or repaired free of charge at Sagem Mobiles's option (with the exclusion of repair of any other damage), once it has been specified that the work required for the application of the warranty will be done in a workshop and that the return costs (transport and insurance) of the phone to the address to be indicated by the Sagem Mobiles after-sales service, whose phone number is shown on the delivery note, will be charged to the customer.
Subject to essential legal provisions, Sagem Mobiles does not accept any warranty, explicit or implicit, other than the warranty provided expressly in this chapter, nor shall Sagem Mobiles accept responsibility for any immaterial and/or indirect damages (such as loss of orders, loss of profit or any other financial or commercial damage) under the warranty or not.

3.
The acceptance of a phone under warranty requires a purchase document that is legible and with no modifications, stating vendor's name and address, date and place of purchase, type of phone and IMEI, be attached to the warranty, and that the information on the phone identification label is legible and that this label or any other seal has not been tampered with.
The warranty applies in normal conditions of use.

Prior to sending the phone for repair, it is the customer's responsibility to backup at his expense the customized data stored in the phone (phonebook, settings, wallpapers). A list of backup facilities can be provided by Sagem Mobiles on request. The responsibility of Sagem Mobiles cannot be invoked if damage occurs to customer files, programs or data. The information or operating elements and the contents of files will not be re-installed in any case in the event of loss.

Sagem Mobiles may decide, at its option, to repair the phone with new or reconditioned parts, replace the phone with a new phone or, in any dispute, a phone in good working condition. During its work Sagem Mobiles reserves the facility to make, where necessary, any technical modifications to the phone where these modifications do not adversely affect its initial purpose.

Faulty parts to be replaced during a repair under warranty will become the property of Sagem Mobiles.

The phone repair and standstill time during the warranty period may not lead to an extension of the warranty period as stated in article 1 above, provided no other vital provisions have been agreed.

The application of the warranty is subject to the full payment of the sums due for the phone when the request for support is made.

Warranty

61



Troubleshooting

The phone won't start and/or won't take a charge

The battery has completely lost its charge.

Connect the phone to the charger for between 5 and 30 minutes. The phone will only switch on after it has been charging for a few minutes.

You may use the phone again when the Start option is displayed on the screen.

If the phone still won't start after 30 minutes charging, contact customer service.

SIM not present

Check if the SIM card is present and properly positioned / inserted.

Check the condition of the SIM card. If damaged, please go back to the operator's shop for advice. Contact your after-sales service if the message persists.

Incorrect PIN code

An incorrect PIN code has been entered. Be careful! Three incorrect PIN codes will block the SIM Card.

SIM BLOCKED

If a wrong PIN is entered three times in succession, your SIM card is blocked. You must then:

- Enter the PUK (Personal Unblocking Key) code provided by your operator, and validate.
- Enter your PIN and validate.
- Enter your PIN again and validate.

After 5 or 10 failed attempts (depending on the type of SIM card), the SIM card is permanently locked. You must then contact your operator to obtain a new card.

SIM LOCKED

In certain cases, the handset can only be used with some types of SIM cards. This message means that the SIM card you are using does not match the phone. Take the SIM card out, and switch the phone on again. If the message **SIM not present** appears on the screen, you will need to check its compatibility with the phone vendor. If not, please contact your after-sales service.

No call connection

Check that the number you have dialled is correct.

If the letter R is displayed on the top right corner of the screen, without any network name displayed, only emergency services can be called.

Check the status of your credit.

Check that the SIM Card you are using offers the service you are requesting; check if its validity has not expired.

Check and deactivate the outgoing calls restriction when necessary.

Troubleshooting

63



The network could be saturated. Try later.
If the problem persists, please contact your Technical Helpdesk.

No incoming calls received
Try to make a call in order to check that the phone and the network are operational.
Check and deactivate the permanent call forwarding (permanent call forwarding icon displayed on the screen).
Check and deactivate the incoming calls restriction when necessary.
If the problem persists, please contact your Technical Helpdesk.

Poor reception quality when calling
Avoid placing your fingers on the bottom of the phone, where the aerial is integrated: the phone will have to use full strength to establish a quality transmission.

Cannot send message
Check that the message centre number is correctly entered.
To do so, please select the menu **Messages**, select **Advanced/Options/SMS**, select **MSG centre n°** and check the number entered. Please contact your network provider to get this number.

No voicemail
Check that your subscription does offer this service.
Program the call to be forwarded to voicemail using the information provided by the operator.
Try to make a call to check that phone and network are operational.
Check if the voicemail number is properly configured. To do so, go to the **Settings/Calls** menu, select **Voicemail** and check the number. Otherwise, enter your operator's voicemail number.

Operator name does not appear on screen
Go into the **Settings** menu, select **Networks**, then **Selection/Manual**. Wait until the operator appears, select it and validate.
If the Operator logo is present (depending on model), activate the display (**Settings/Display/Operator logo**).

Poor screen legibility
To ensure optimal screen legibility, follow the recommendations below:
- check that you have removed the plastic protective film,
- clean the screen of you telephone with a soft dry cloth to remove any finger marks or dust,
- make sure the background brightness is not too strong.

The automatic updating of date and time does not operate correctly
This service depends on your operator and on the information broadcast on its network. It may broadcast them continuously, occasionally or may not offer this service.
For instance, some networks require a GPRS connection for the automatic updating of date and time. This GPRS connection is identified by a black GPRS icon displayed on the screen.
Please contact your operator, they will confirm you can access this service and will give you all the installation information.

Customer care

Austria	01 36 02 77 16 64
Belgium	02 62 77 016
Croatia	0800 222 722
Czech Republic	296335686
France	0 892 701 799 (0.34 €/mn)
Germany	01805 843 850
Greece	00800 44 14 20 38
Hungary	06 1 7774 839
Ireland	0 160 58 355
Italy	800 800 485
Morocco	0810 800 10
Netherlands	020 65 45 724
Poland	0801 801 101
Romania	0800 89 45 21
Russia	495 258 54 33
South Africa	011 389 7870
Spain	91 375 3376
Switzerland	02 25 67 53 99
United Kingdom	0870 24 05 613

Customer Care e-mail address: support.mobiles@sagem.com

Web sites: www.sagem.com/mobiles
www.planetsagem.com
www.sagem-online.com

Index

A			
Accessories	52	Currencies	34
Advanced	40	Customer care	65
Alarm	35	D	
B		Date / Time	39
Battery		Display	37
Charging the battery	15	Downloaded objects	27
Installing the battery	8	E	
Beeps	37	Energy saving	38
Bluetooth®	14, 19, 26, 29, 36, 40	F	
Business card	19	Fixed dialling	46
C		FM Radio	29
Calculator	33	G	
Call barring	44	Games	33
Calls	12	Getting started	11
Automatic redial	44	GPRS	32
Call divert	45	H	
Call waiting	44	Hands-free mode	13
Counters	44	I	
Display number	43	Icon	10
Camera	25, 43	Idle screen	10
Camera lens	7	Input modes	21
Confidentiality	46	L	
Contact	17, 26	Languages	39
Call	17	Local information	23
Delete	19		
Mailing list	20		
Memory	18		
Modify	18		
Contacts	40		
Copy	19		
Converter	34		

M

Memory 23
 Messages 21
 Create message 23
 Drafts 22
 Inbox 23
 Outbox 22
 Receiving messages 23
 Sentbox 23
 Templates 7
 Mirror 21, 26, 36
 MMS 27
 Multimedia 28
 Multimedia objects
 Music player

N

Network 12, 47

O

Operator 46
 Operator logo 38
 Organiser 40
 Organizer 35

P

Phone code 46
 Phonebook 17
 New contact 17
 Using the phonebook 25, 40, 43
 Photo 40
 Picture 45
 PIN 46
 PIN2 10

Q

Quick search

Index

R

Ring tones 37

S

Safety information 50
 Screensaver 38
 Security 45
 Shortcut keys 39
 Silent mode 37
 SIM card 8, 11
 Skins 36
 SMS 21
 Sound 40

T

T9 21
 Timer 35
 ToDo 35, 40

U

Unit Converter 34
 USB 19
 USB cable 40


V


Vibrate 37
 Video 25, 26, 40, 43
 Voicemail 24, 45





W

WAP 31, 32
 Downloading objects 32
 WAP logging off 32
 WAP logging on 31
 Warranty 60

      67

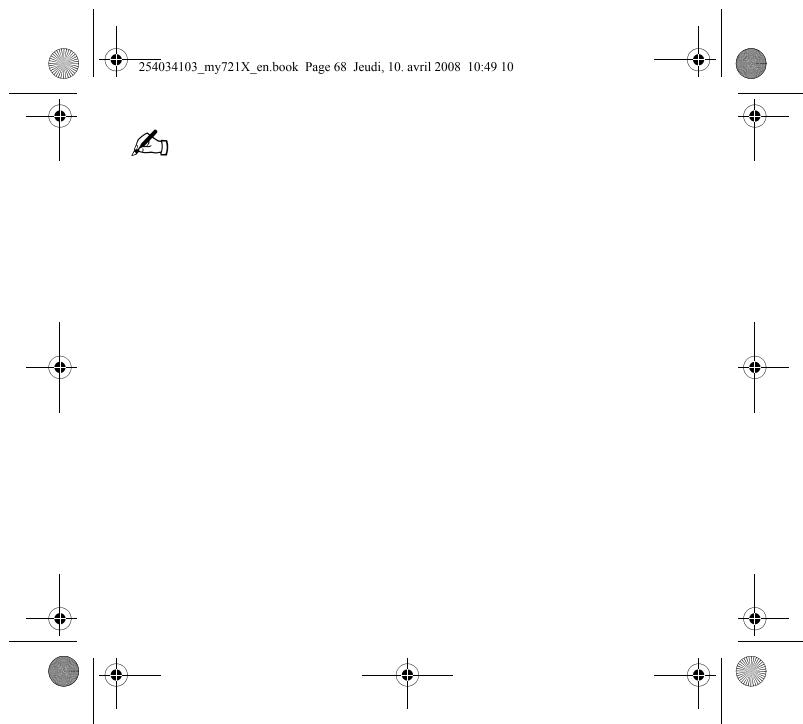

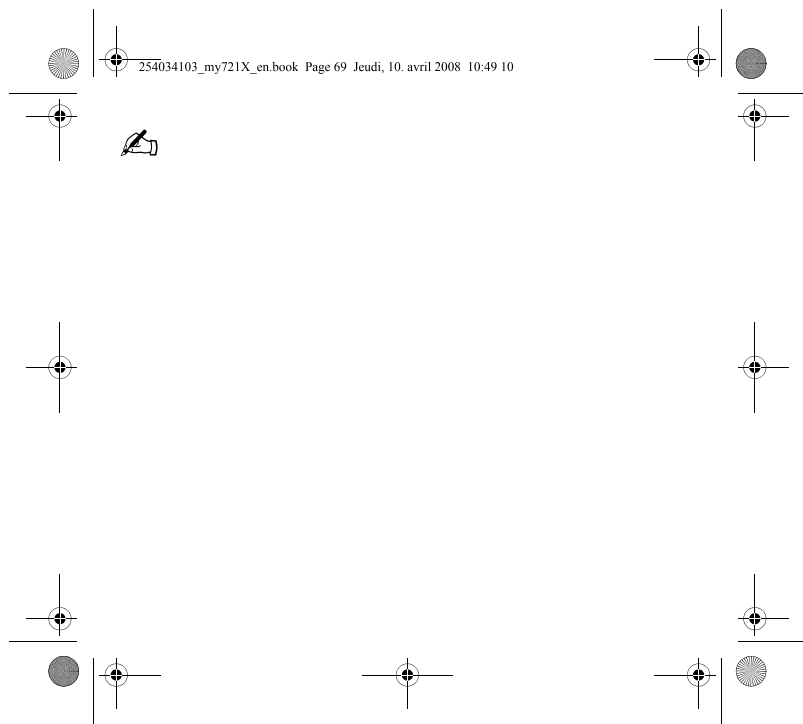

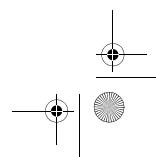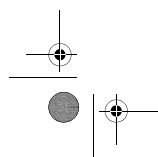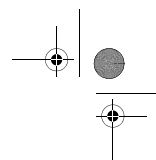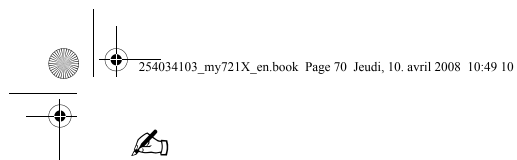


WELLPHONE[™]XT

PC software, available as an option:

To exchange data between your mobile phone and your PC:
Pictures, Sounds, Video, SMS, MMS, Contacts, Calendar, etc

 To connect to the Internet easily
Using the 3G, EDGE or GPRS networks according to your mobile phone capacities
and your subscription



For more information or to buy WellPhoneXT
www.wellphone.com

(*) See chapter "Connectivity", page 40 to view the links compatible with your phone.

