



SGH-M200

## safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your mobile phone.

### Mobile Phone user manual

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.  
Bluetooth QD ID : B014451

www.samsungmobile.com

Printed in Korea  
Code No. GH68-20179A  
English: 03/2008, Rev. 1.0

SAMSUNG



### Safety precautions

#### Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

#### Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

#### Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

#### Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

#### Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

#### Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

#### SAR information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the European Union (EU) Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies.



### Safety warnings

#### Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

#### Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

#### Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

#### Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phone in a fire. Follow all local regulations when disposing used batteries or phone.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

#### Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research.

If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Avoid using the phone's camera flash or light close to the eyes of children or animals.
- Your phone and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

#### Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

#### Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

#### Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Store the battery pack in a dry place.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

#### Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.

#### Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate collection systems)



This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the EU Council is 2.0 W/kg. The highest SAR value for this model phone was 0.819 W/kg.

#### Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

 
Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



### Important usage information

#### Use your phone in the normal position

Avoid contact with your phone's internal antenna.

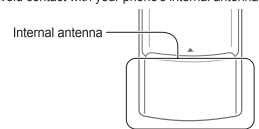

#### Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

#### Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

SAMSUNG  
ELECTRONICS



### Declaration of Conformity (R&TTE)

We, **Samsung Electronics**

declare under our sole responsibility that the product

**GSM Mobile Phone : SGH-M200**

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

|        |                                                                                                    |
|--------|----------------------------------------------------------------------------------------------------|
| SAFETY | EN 60950-1 : 2001+A11:2004                                                                         |
| EMC    | EN 301 489-01 V1.5.1 (11-2004)<br>EN 301 489-07 V1.2.1 (08-2002)<br>EN 301 489-17 V1.2.1 (08-2002) |
| SAR    | EN 50360 : 2001<br>EN 62209-1 : 2006                                                               |
| RADIO  | EN 301 511 V9.0.2 (03-2003)<br>EN 300 328 V1.7.1 (10-2006)                                         |

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(s):

BABT, Balfour House, Churchfield Road,  
Walton-on-Thames, Surrey, KT12 2TD, UK\*  
Identification mark: 0168

The technical documentation kept at :

**Samsung Electronics QA Lab.**

which will be made available upon request.  
(Representative in the EU)

Samsung Electronics Euro QA Lab,  
Blackbushe Business Park, Saxony Way,  
Yateley, Hampshire, GU46 5GG, UK\*

2008.08.22

Yong-Sang Park / S. Manager


(place and date of issue) (name and signature of authorised person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

CE0168


 
## Phone layout

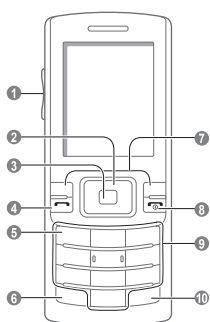


- 1 Volume key**  
In Idle mode, adjust the key tone volume; Send an SOS message  
► *Activate and send an SOS message*
- 2 4-way navigation key**  
In Idle mode, access default menus (up/down) or user-defined menus (left/right); In Menu mode, scroll through menu options
- 3 Web access/Confirm key**  
In Idle mode, launch the web browser; In Menu mode, select the highlighted menu option or confirm an input
- 4 Dial key**  
Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers
- 5 Voice mail service key**  
In Idle mode, access voice mails (press and hold)
- 6 Keypad lock key**  
In Idle mode, lock the keys (press and hold)
- 7 Softkeys**  
Perform actions indicated at the bottom of the display
- 8 Power/Menu exit key**  
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode
- 9 Alphanumeric keys**
- 10 Silent profile key**  
In Idle mode, activate or deactivate the Silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:


| Icon | Description                              | Icon | Description                |
|------|------------------------------------------|------|----------------------------|
|      | Signal strength                          |      | Alarm activated            |
|      | GPRS network connected                   |      | Bluetooth activated        |
|      | Call in progress                         |      | FM radio on                |
|      | Connecting to secured web page           |      | Normal profile activated   |
|      | Connected with PC                        |      | Memory card inserted       |
|      | Call diverting activated                 |      | Music playback in progress |
|      | Roaming (outside of normal service area) |      | Music playback paused      |
|      | New message                              |      | Battery power level        |
|      | SOS message feature activated            |      |                            |

## Install the SIM card and battery

 - Remove the battery cover and insert the SIM card.




 - Insert the battery and replace the battery cover.



## Charge the battery

 - Plug the supplied travel adapter.



- When charging is finished, unplug the travel adapter.



## Instructional icons

|  |                                                                                                                                                                                                       |
|--|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Note:</b> notes, usage tips, or additional information                                                                                                                                             |
|  | <b>Followed by:</b> the order of options or menus you must select to perform a step; for example: Press <b>&lt;Menu&gt;</b> → <b>Messages</b> (represents <b>Menu</b> , followed by <b>Messages</b> ) |
|  | <b>Square brackets:</b> phone keys; for example: <b>[*]</b> (represents the Power/Menu exit key)                                                                                                      |
|  | <b>Angled brackets:</b> softkeys that control different functions at each screen; for example: <b>&lt;OK&gt;</b> (represents the OK softkey)                                                          |

## Turn your phone on or off

- To turn your phone on, press and hold **[\*]**.
- When the setup wizard opens, customise your phone as desired by following the screen.
- To turn your phone off, press and hold **[\*]**.

## Make a call

- In Idle mode, enter an area code and a phone number.
- Press **[\*]** to dial the number.
- To end the call, press **[\*]**.

## Add a new contact

- In Idle mode, enter a phone number and press **<Options>**.
- Select **Save** → a memory location (phone or SIM) → **New**.
- Select a number type (if necessary).
- Enter contact information.
- Press **<Save>** or **[\*]** to add the contact to memory.

## Send and view messages

### To send a text message

- In Idle mode, press **<Menu>** → **Messages** → **Create new message** → **Text message**.
- Enter the message text.
- Press **<Options>** → **Save and send** or **Send only**.
- Enter a destination number.
- Press **<Options>** → **Send** to send the message.

### To view text messages

- In Idle mode, press **<Menu>** → **Messages** → **My messages** → **Inbox**.
- Select a text message.

## Answer a call

- When a call comes in, press **[\*]**.
- To end the call, press **[\*]**.

## Adjust the volume

### To adjust the volume of the ringtone

- In Idle mode, press **<Menu>** → **Settings** → **Phone profiles**.
- Scroll to the profile you are using.
- Press **<Options>** → **Edit** → **Call alert volume**.
- Scroll left or right to adjust the volume level.
- Press **<Save>**.

### To adjust the volume of voice during a call

While a call is in progress, press **[▲/▼]** to adjust the earpiece volume.

## Change your ringtone

- In Idle mode, press **<Menu>** → **Settings** → **Phone profiles**.
- Scroll to the profile you are using.
- Press **<Options>** → **Edit** → **Voice call ringtone**.
- Select a ringtone category → a ringtone.
- Press **<Save>**.

## Activate the mobile tracker

This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

- In Idle mode, press **<Menu>** → **Settings** → **Security** → **Mobile tracker**.
- Enter your password and press **<OK>**.
- Scroll left or right to **On**.
- Scroll down and press **[\*]** to open the recipient list.
- Press **[\*]** to open your contact list.
- Scroll to a contact and press **[\*]**.
- Select a number (if necessary).
- When you are finished selecting contacts, press **<Options>** → **Select** to return to the recipient list.
- Press **<Options>** → **Save** to save the recipients.
- Scroll down and enter the sender's name.
- Press **<Options>** → **Save** → **<Accept>**.

## Call a recently dialed number

- In Idle mode, press **[\*]**.
- Scroll left or right to select a call type.
- Scroll up or down to select a number or name.
- Press **[\*]** to view details of the call or **[\*]** to dial the number.

## Enter text

### To change the text input mode

- Press and hold **[\*]** to switch to an input mode. Depending on your region, you may be able to access an input mode for your specific language.
- Press **[\*]** to change case or switch to Number mode.
- Press and hold **[\*]** to switch to Symbol mode.

### T9 mode

- Press the appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press **[\*]** to insert a space. If the correct word does not display, press **[0]** to select an alternate word.

## Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

### To activate the SOS message

- In Idle mode, press **<Menu>** → **Messages** → **SOS messages** → **Sending options**.
- Scroll left or right to **On**.
- Scroll down and press **[\*]** to open the recipient list.
- Press **[\*]** to open your contact list.
- Scroll to a contact and press **[\*]**.
- Select a number (if necessary).
- When you are finished selecting contacts, press **<Options>** → **Select** to return to the recipient list.
- Press **<Options>** → **Save** to save the recipients.
- Scroll down and set the number of times to repeat the SOS message.
- Press **<Save>** → **<Yes>**.

### To send an SOS message

- With the keys locked, press **[▲/▼]** four times to send an SOS message to preset numbers. The phone switches to SOS mode and sends the preset SOS message.
- To exit SOS mode, press **[\*]**.

## Set and use alarms

### To set a new alarm

- In Idle mode, press **<Menu>** → **Alarms**.
- Scroll to an empty alarm location and press **[\*]**.
- Set alarm details.
- Press **<Save>**.

### To stop an alarm

When the alarm sounds,

- Press any key to stop an alarm without snooze.
- Press **<OK>** or **[\*]** to stop an alarm with snooze, or press **<Snooze>** or any key to silence the alarm for the snooze period.

### To deactivate an alarm

- In Idle mode, press **<Menu>** → **Alarms**.
- Scroll to the alarm you want to deactivate and press **[\*]**.
- Scroll down (if necessary).
- Scroll left or right to **Off**.
- Press **<Save>**.

