



E T E R N I T Y[®] II

S G H - A 5 9 7

P O R T A B L E Q u a d - B A N D

M O B I L E P H O N E

User Manual

**Please read this manual before operating your
phone, and keep it for future reference.**

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the “Phone System”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), LLC

Headquarters:	Customer Care Center:
1301 E. Lookout Drive	1000 Klein Rd.
Richardson, TX 75082	Plano, TX 75074
Toll Free Tel:	1.888.987.HELP (4357)
Internet Address:	http://www.samsungusa.com

© 2010 Samsung Telecommunications America, LLC is a registered trademark of Samsung Electronics America, Inc. and its related entities.

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at:

www.samsungtelecom.com/support

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437; U.S. Pat. 5,953,541; U.S. Pat. 6,011,554 and other patents pending.

ACCESS[®] and NetFront[™] are trademarks or registered trademarks of ACCESS Co., Ltd. in Japan and other countries.

The Bluetooth[®] word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD[™] and the microSD logo are Trademarks of the SD Card Association.

Openwave[®] is a registered Trademark of Openwave, Inc.

 and  are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under license from SRS Labs, Inc.

- SRS CS Headphone[™] delivers a 5.1 surround sound experience over standard headphones or earbuds when listening to multichannel content, such as DVD movies.
- WOW HD[™] significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail.

Devices purchased for use on AT&T's system are designed for use exclusively on AT&T's system. You agree that you won't make any modifications to the Equipment or programming to enable the Equipment to operate on any other system. A voice plan is required on all voice-capable devices, unless specifically noted otherwise in the terms governing your agreement. Some devices or plans may require you to subscribe to a data plan.

Your phone is designed to make it easy for you to access a wide variety of content. For your protection, AT&T wants you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through AT&T, AT&T offers privacy controls that let you decide how an application may use the location of your phone and other phones on your account. However, AT&T's privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected.

Your phone may be used to access the Internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.

A&T may collect certain types of information from your device when you use AT&T services to provide customer support and to improve its services. For more information on AT&T's Privacy Policy, visit <http://www.att.com/privacy>.

Dynamic Noise Suppression from Audience™

Your phone is equipped with an advanced voice processing chip that delivers clear mobile calls by suppressing background noise, intermittent sounds (like a siren or nearby conversation), and echoes, allowing you to hear and be heard nearly anywhere.

How Does It Work?

Based on the intelligence of the human hearing system, the technology:

- Captures, evaluates and distinguishes all the sound signals surrounding your phone, and the person you're speaking with.
- Then isolates the primary voice in conversation and filters out the background noise - so the person you're calling hears only your voice, without disturbing background noise.
- Dynamically equalizes and adjusts voice volume to optimize your calling experience, so you can hear clearly and don't need to speak louder to overcome surrounding noise.

The noise suppression technology is built-in and already enabled in your new mobile phone. So it's ready to provide unsurpassed voice clarity with every call.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

<http://opensource.samsung.com/category/mobile/mobile-phone/>.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Getting Started5

Setting Up Your Phone	5
Charging a Battery	7
Switching the Phone On or Off	8
Locking the Touch Screen	9
Setting Up Your Voice Mail	9

Section 2: Understanding Your Phone10

Features of Your Phone	10
Front View of Your Phone	10
Side Views of Your Phone	12
Back View of Your Phone	13
Display Layout	13
Using the Multitasking Menu	16

Section 3: Menu Navigation18

Menu Navigation	18
Widgets	23
Widget Bar Navigation	28
Understanding the Events Widget	30

Section 4: Call Functions31

Displaying Your Phone Number	31
Making a Call	31
Making a Call Using Speed Dial	33
Making a Call from the Address Book	33
Answering a Call	33

Dialing Options	35
Video Share	35
Recent Calls	36
Call Time	39
Data Counter	39
Options During a Call	40

Section 5: Entering Text44

Using the QWERTY Keypad	44
Changing the Text Input Mode - Keypad	45
Using T9 Mode	45
Using 123Sym Mode	46
Using Emoticon (Emo) Mode	46
Using Abc Mode	47
Using Numeric in Portrait Mode	48
Using Symbols in Portrait Mode	48
Using Abc Mode in Portrait Mode	48
Using the Handwriting Feature	48
Changing the Text Input Mode - Handwriting	49
Handwriting Mode-Entering Characters	50
Handwriting Mode-Entering Numbers	50
Handwriting Mode-Entering Symbols	51

Section 6: Changing Your Settings52

Quick Tips	52
Sound Profile	52

Normal Profile	52	FDN Mode	84
Silent Profile	54	Group Settings	85
Display and Light Settings	54	Address Book Favorites	86
Time & Date	56	Managing Address Book Entries	87
Phone Settings	57	Section 9: My Stuff	90
Smart Unlock	63	My Stuff Functions	90
Call Settings	63	Applications	91
Connectivity	65	Audio	91
Bluetooth Secure Mode	66	Games	93
Configuring Your Phone's USB Settings	67	Pictures	93
Network Profile Configuration	67	Tools	94
Applications Settings	69	Video	94
Memory Management	72	Other Files	95
Software Update	73	Used Space	95
Phone Information	74	Section 10: Camera	96
Section 7: Mobile Video	75	Using the Camera	96
Viewing a Video Clip	75	Camera and Camcorder Options	97
Using the Video Categories	75	Using the Camcorder	102
Customizing Mobile Video	76	Section 11: Messaging	106
Section 8: Understanding Your Address Book	78	Types of Messages	106
Address Book Settings	78	Creating and Sending Messages	106
AT&T Address Book Activation	78	Additional Message Options	107
Adding a New Contact	79	Viewing New Received Messages	108
Using Contacts	82	Using Message Options	109
Address Book Entry Options	83	Using Mobile Email	110
AT&T Address Book Settings	84	Using Instant Messaging (IM)	110
Finding My Own Phone Number	84		

Deleting Messages	111	Obtaining Driving Directions	133
Messaging Settings	112	AT&T FamilyMap	134
Templates	115	Shopping for GPS Applications	134
Delete by Folder	115	Loopt	134
Used Space	116	Where	134
Section 12: AT&T Mobile TV	117	Section 17: Tools	136
Getting Started	117	Tools	136
Using the Mobile TV Player	118	Camera	136
Want more?	122	Music Player	136
Section 13: Games & Applications	123	Shop Music	138
Games	123	Using Playlists	140
Applications	123	Voice Recognition	144
Section 14: AppCenter	126	Record Audio	146
Downloading Multimedia Files	126	Alarms	146
Ringtones	126	Calendar	148
Games	127	Recent Calls	150
Cool Tools/Apps	127	Sketchpad	150
Videos	127	Memo	150
Color Graphics	127	Tasks	150
AppCenter Options	127	Calculator	151
Section 15: Music	129	Tip Calculator	151
AT&T Music	129	Converter	152
AT&T Radio	131	World Clock	152
Section 16: AT&T GPS	132	Timer	153
Launching AT&T Navigator	132	Stopwatch	153
Using Navigator	133		

Section 18: Mobile Web 154

Accessing the Mobile Web	154
Homepage - att.net	154
Navigating with the Mobile Web	155
Enter a URL	155
Search the Internet	156
My Shortcuts	156
My Account	156
Using Bookmarks	156
Emptying the Cookies	157
Using your History	158
Changing the WAP Profiles	158

Section 19: Accessibility 160

Section 20: Health and Safety Information 161

Health and Safety Information	161
Please Note the Following Information When Using Your Handset	162
Samsung Mobile Products and Recycling	163
UL Certified Travel Adapter	163
Consumer Information on Wireless Phones	163
Road Safety	169
Responsible Listening	171
Operating Environment	173
Using Your Phone Near Other Electronic Devices	173
Potentially Explosive Environments	174
Emergency Calls	174
FCC Notice and Cautions	175

Other Important Safety Information	175
Product Performance	176
Availability of Various Features/Ring Tones	177
Battery Standby and Talk Time	177
Battery Precautions	177
Care and Maintenance	179

Section 21: Warranty Information 181

Standard Limited Warranty	181
End User License Agreement for Software	184

Index 189


Section 1: Getting Started

This section explains how to start using your phone by first configuring your hardware, activating your service, and then setting up your voice mail.

Setting Up Your Phone

Prior to use it is necessary to install both the battery and SIM into their corresponding internal compartments. The microSD card slot is also located in this same internal area.

1. Remove the battery cover by placing your thumbnail into the slot at the bottom of the phone (1). If you have fragile nails, use a pointed object.
2. Lift the cover up and off the phone (2).

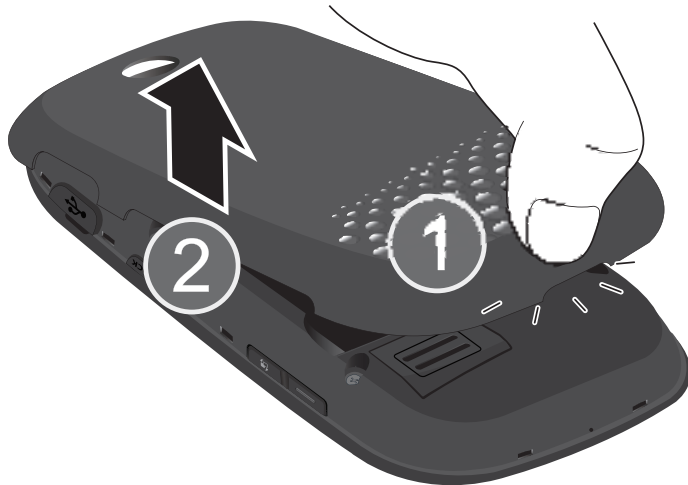


Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, available optional services, and many others features.

Important!: The plug-in SIM card information and its contacts can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.

- Carefully slide the SIM card into the SIM card socket (as shown below) until the card locks into place.
- Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as shown.

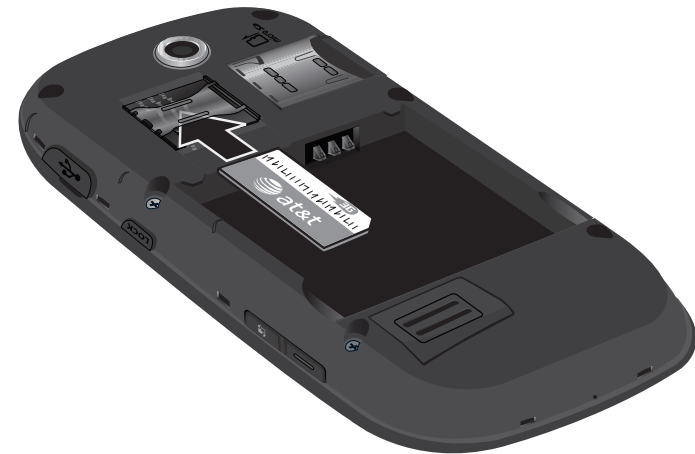


Note: If the card is not inserted correctly, the phone does not detect the SIM card. Re-orient the card back into the slot if the SIM is not detected.

Installing the Memory Card

Your phone also supports the use of a memory card (microSD™) for data storage of such things as data, music, pictures, and video files. This type of memory card is designed for use with this mobile phone and other devices.

1. Push the microSD card into the slot until it clicks. Orient the card as shown on the back of the phone.
 - Make sure the microSD's gold contact pins face downward and the card is fully inserted.

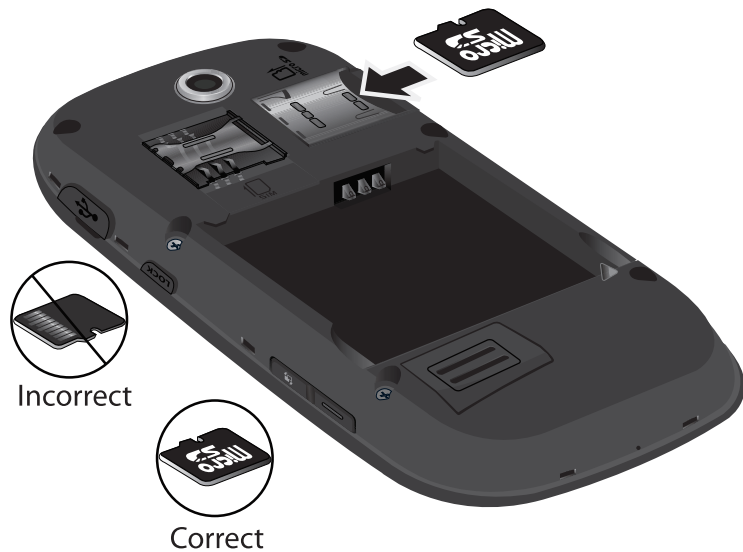


Note: Your phone has been tested to support up to a 16GB memory card.

Installing the Battery

1. Insert the battery into the opening on the back of the phone, making sure the contacts align (1).
2. Gently press down to secure the battery (2).



3. Place the battery cover onto the back of the phone and press down (1).
4. Press down on the bottom of the phone (2) until you hear a light click.

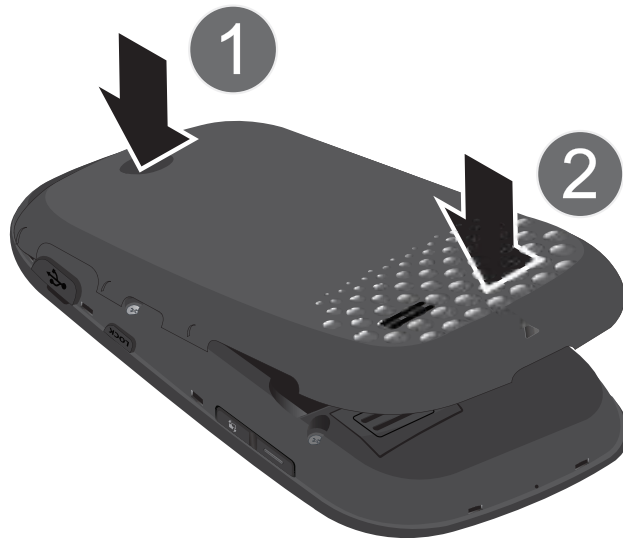

Note: Make sure the battery is properly installed before switching on the phone.

Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. The Travel Adapter used to charge the battery is included with your phone. Use only Samsung-approved batteries and chargers.

Note: Long backlight settings, searching for service, vibrate mode, browser use, and other variables may reduce the battery's talk and standby times.


Although you can use the phone while the battery is charging, doing so will require additional charging time.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 4 hours.

Using the Travel Adapter

1. With the battery installed, open the plastic cover to access the Power/Accessory Interface connector on the top right side of phone.

Important!: Verify that the handset battery is installed prior to connection. If the battery is not properly installed and the wall charger is connected, the handset may power off and on continuously, preventing proper operation.

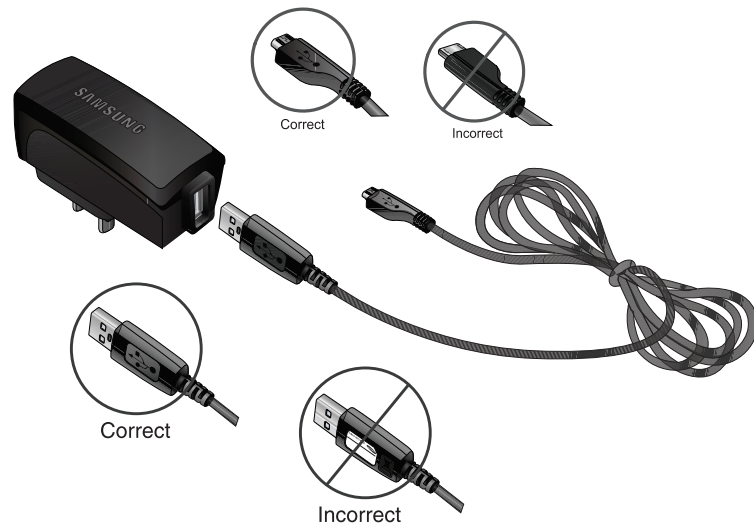

2. Plug the data cable into the base piece provided and into the Power/Accessory Interface connector on your phone.
3. Plug the base piece into a standard AC wall outlet.
4. When the battery is fully charged, the phone displays a message telling you the battery is full. Remove the connector from the phone.

Warning!: If your handset has a touch screen display, please note that a touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty. For more information, refer to “*Standard Limited Warranty*” on page 181.

Note: Failure to unplug the wall charger before removing the battery, can cause damage to the phone.

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, the battery icon () blinks and the device sounds a warning tone at regular intervals. In this condition, your phone conserves its remaining battery power, not by turning off the backlight, but by entering the dimming mode. For a quick check of your battery level, glance at the battery charge indicator located in the upper-right corner of your device’s display. Five bars () indicate a full charge.

When the battery level becomes too low, the phone automatically turns off.

Switching the Phone On or Off

1. Press and hold  or  until the phone switches on.

The phone launches the activation splash screen and then proceeds to search for the network. Once the network has been found, you can make or receive calls. To lock your phone, see “*Security*” on page 59.

Note: The display language is preset to English at the factory. To change the language, from Idle mode, touch  → **Settings** → **Phone** → **Language**. For more information, refer to “*Changing Your Settings*” on page 52.

2. Press and hold , until the phone switches off.

Locking the Touch Screen

1. Press  (on the right side of the phone) to lock the touch screen.
2. Press and hold  again to unlock the touch screen.
— or —
Press and hold  on the screen to unlock the touch screen.

Setting Up Your Voice Mail

1. In Idle mode, press , then touch and hold .

Note: You can also access your voicemail from the on-screen keypad by touching  then pressing  or touch **Call**.

2. Follow the tutorial to create a password, record a greeting, and record your name.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail

1. In Idle mode, press , then touch and hold .
2. When connected, follow the voice prompts from the voice mail center.

Accessing Your Voice Mail From Another Phone

1. Dial your wireless phone number.
2. When you hear your voicemail greeting, press 
(the asterisk key on the phone you are using).
3. Enter your passcode using the on-screen keypad.

Section 2: Understanding Your Phone

This section outlines some key features of your phone. It also displays the screen and the icons that appear when the phone is in use.

Features of Your Phone

Your phone is lightweight, easy-to-use and offers many useful features. The following list outlines a few of the features included in your phone.


- Touch screen provides quick response to a variety of in-phone menus and options including a widget bar and three main menus.
- AT&T Mobile TV
- User friendly, menu driven access to features and options
- Ready access to the Internet with multi-window feature
- Built-in Bluetooth technology
- Instant Messaging capability
- AT&T GPS Navigation functionality provides real-time navigation
- microSD card compatibility for use in data storage and access
- HSDPA 7.2 mbps high speed download capability
- Other features include AT&T Music, Mobile Email, Voice Recognition, Files, Games, Alarms, Calendar, Sketchpad, Memo, Tasks, Calculator, Tip Calculator, Unit Converter, World Clock, Timer, and Stopwatch.

Front View of Your Phone



1. **External speaker:** allows you to hear the caller.
2. **Display:** shows the information needed to operate your phone, such as the received signal strength, phone battery level, time, etc.
3. **Widget tab:** allows you to open the Widget toolbar.
4. **Contacts key:** allows you to access your current Contacts, Groups and Favorites lists.
5. **Dial key:** allows you to access the Phone Functions menu, such as Dialer, Contacts, and Create message screen.
6. **Talk/Send key:** allows you to power on the phone, make or answer a call, access your call history, Call Manager, and Block Caller features. Press and hold to redial the last phone number.
7. **Back key:** When in a main menu, press to return to the previous menu. This key also allows you to return to the previous page within the Web browser. Deletes characters from the display when you are in text entry mode. Deletes items when in an application.
8. **Power/End key:** ends a call. Press and hold to turn the phone on or off. While in a menu, press this key once to cancel the current input or to return to the previous step. Press twice to return to Idle mode.
9. **Menu key:** allows you to access your phone's three-page, revolving menu functions, such as Address Book, Messaging, AT&T Navigator, Mobile Video, AT&T Music, Games, Applications, Mobile Web, AppCenter, YPmobile, My Stuff, Tools, Settings and more.
 - While in the Menu screens, this key is replaced with the **Message** key, whose function is to create new text or picture messages.


Side Views of Your Phone

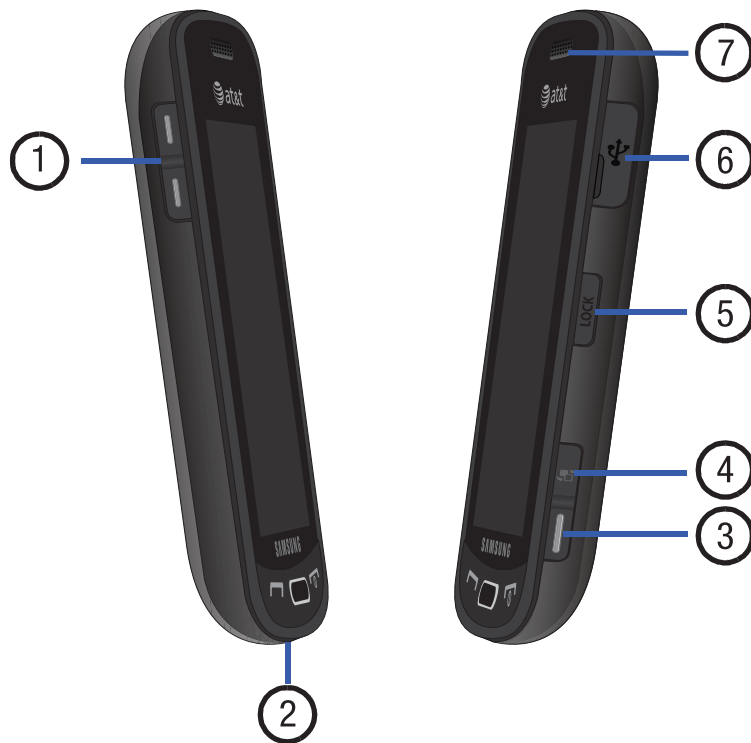

1. **Volume keys:** allow you to adjust the ringer volume while in standby mode or adjust the voice volume during a call. When receiving an incoming call, briefly press down either volume key () to mute the ring tone. Press and hold either volume key to reject the call and send it directly to voicemail. Adjusts text size when reading a message or using the browser in the Applications folder.

2. **Microphone:** allows other callers to hear you when you are speaking to them.
3. **Camera/Camcorder key:** () allows you to take pictures or videos when you are in camera or camcorder mode. In Idle mode, press to launch the camera/camcorder.
4. **Multitask key:** () launches the multitask menu. This menu provides easy access to some of the most commonly used features such as: Call, Messaging, Mobile Web, Music Player, and Games. You can also End all running programs/apps.
5. **Lock key:** () lets you lock or unlock the touch screen. For more information on locking your phone, see *"Locking and Unlocking the Phone"* on page 18.
6. **Power/Accessory Interface connector:** allows you to connect a Travel Charger or other optional accessories such as a USB/data cable or a hands-free headset for convenient, hands-free conversations.
7. **Speaker:** allows you to hear audio on your phone.

Back View of Your Phone

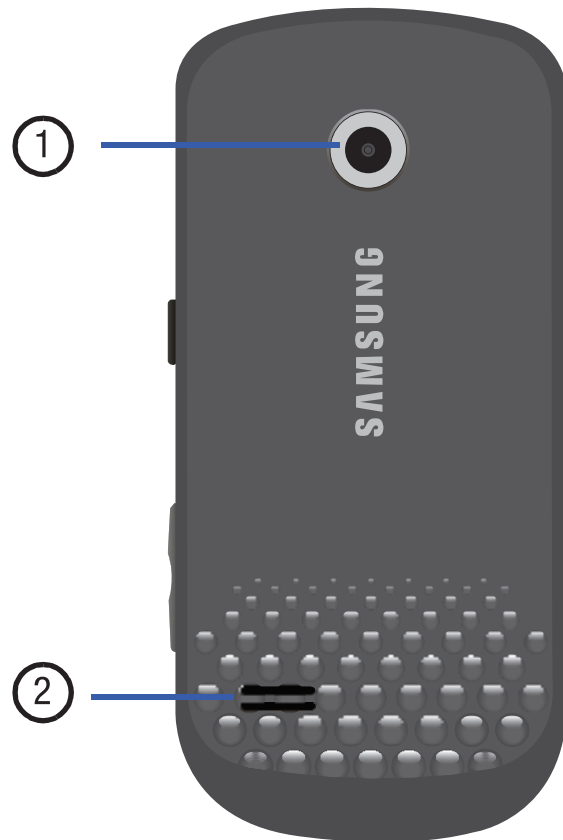

1. **Camera lens:** is used to take pictures and shoot videos.
2. **External speaker:** allows you to hear when the Speakerphone is turned on.

Display Layout

Your display screen provides a wealth of information about the phone's status and options, as well as providing access to the widget bar. The display has 4 main areas:



Widget bar

The Widget bar provides quick access to those functions you use most frequently (Analog Clock, Digital Clock, Dual Clock, TV, AT&T Social Net, Create Message, Photo Favorites, Voice Recognition, AT&T Navigator, AppCenter, Mobile Web, Today, Calendar, Favorite URL, Picture, Games, Widget Memo 1, 2, 3, Message Inbox, Record Audio, Memo, Timer, Go on a Diet, Birthday, Sound Profile, Bluetooth, Calculator, Video, Widget Gallery, Y! Search, MySpace, Facebook and MSNBC.

For more information about the Widget bar, see “*Widget Bar Navigation*” on page 28.

Function categories

Function categories are shortcuts to Dial (for dialing a number), Contacts (accessing the Contacts list), and Menu (displays the icons for application/folder access). While viewing the Main Menus, the Menu category changes to Messaging, which can be used to view and create messages.

Icons

This list identifies the symbols you see on your phone’s display and Indicator area:



Displays your current signal strength. The greater the number of bars, the stronger the signal.



Indicates that the Airplane Mode is activated. You cannot send or receive any calls or access online information.



Displays when you are out of your service area.



Displays when a call is in progress.



Displays within the lock screen when a call has been missed.



Displays your battery’s charge level. The more bars you see, the more power you have remaining.



Displays when your connection to an EDGE network is active.



Displays when your phone is communicating with the EDGE network.



Displays when your connection to a 3G network is active.



Displays when your phone is communicating with the 3G network.



Displays when an internal microSD memory card is detected.



Displays when the phone is connected to a computer via a supported USB cable connection.



Displays within the Indicators area when a new text message is received.



Displays within the Indicators area when a new multimedia message is received.



Displays within the Indicators area when a new voice mail is received.



Displays within the Indicators area when a new WAP message is received.



Displays when Inbox is full - Text Message.



Displays when you set an alarm to ring at a specified time. For more information, refer to “*Alarms*” on page 146.



Displays when Call forwarding is set to Forward always. For more information, refer to “*Call Settings*” on page 63.



Displays when the Sound profile is set to Normal.



Displays when the Sound profile is set to silent or the volume has been manually lowered below level 1.



Displays when the Sound profile is set to Driving.



Displays when the Sound profile is set to Outdoor.



Displays when Bluetooth is activated.



Displays when a Bluetooth stereo headset has been paired with the phone.



Displays when TTY device has been inserted.



Displays when signed on to AIM IM service.



Displays when signed on to Windows Live IM service.



Displays when signed on to Yahoo! IM service.



Displays when your Address Book is synchronizing with the AT&T Address Book, the network backup service.

For more details on configuring your phone's settings, see *"Changing Your Settings"* on page 52.

Using the Multitasking Menu

This key () launches the Multitask menu that can be activated from within any active window or page on the phone. There is no need to stop what you are doing to activate another common feature.

You can temporarily exit from your current location to access a group of common functions such as: Call, Messaging, Mobile Web, Music Player, Games, and End all. It is not necessary to completely exit from your current task or window, whether that be a text message, a web page, or an active call, just to quickly do something else.

Here is an example:

You might be in the middle of typing up an email or text message, when you suddenly realize that you need to make a quick call. Typically, you would have to exit from your current message, navigate to the Idle screen, make your call (page 31), after which you would have to go back and re-create your message.

Using this same situation, all you would have to do is:

1. Press  until the you see the Multitask menu screen.
2. Touch **Call**, then enter your number and continue the call.
3. Once you are done, hang up the call normally and you are returned to the previous message screen.

Multitask Functions

Pressing the Multitasking key () on the right side of the handset, allows you to choose from one of the following functions:



- **Call:** allows you to make a voice call while using the handset for other tasks. If Music Player is active, it is muted during the call.
- **Messaging:** allows you to send a text or multimedia message while using the handset for other tasks.
- **Mobile Web:** allows you to launch the Mobile Web browser while using the handset for other tasks.

- **Music Player:** allows you to launch the Music Player while using the handset for other tasks. If an incoming call is received or you want to make a call, the Music Player is muted.
- **Games:** allows you to quickly access Games while using the handset for other tasks.
- **End all?:** closes all running applications or tasks and returns you to the Idle screen.

When any Java application, such as a game, is paused, suspended, or minimized, the Multitask screen is modified to include the Java application. In the example below, the Bubble Bash game has been paused.



Touch the **Up** or **Down** arrows to scroll up or down.

Section 3: Menu Navigation

This section explains the menu navigation for your phone. Your phone has done away with the need for navigation wheels or keypads. Your phone is completely navigable by either an on-screen touch or scroll.

- Touching an on-screen option activates the feature.
- Long menu list can be viewed easily by using your fingertip to scroll up or down the on-screen list or by pressing the volume keys up or down.

Menu Navigation

You can tailor the phone's range of functions to fit your needs using both menus and widgets. Menus, sub-menus, and features can be accessed by scrolling through the available on-screen menus. Your phone originally has three main menus but you can add seven more main menus for a total of ten.

Locking and Unlocking the Phone

When your phone is locked, there are three different ways to unlock your phone:

- Press the lock button **LOCK** located on the right side of your phone.
- Touch and hold  on the Idle screen.
- Use the Smart Unlock feature. For more information, refer to “*Smart Unlock*” on page 63.

The Idle screen provides access to many useful phone features, including popup Widgets and Menu tabs (Dial, Contacts, and Menu).



Navigating Through the Main Menus

Your phone originally has three main menus, but you can add seven more main menus for a total of ten. Some icons can be deleted and replaced with new icons.

1. From the Idle screen, touch . Main menu is displayed.
2. Drag your finger along the three bars at the top of the Main menu to scroll through the three Main menus. You can scroll in either direction.



The icons initially contained in the three Main menus are shown below.



Adding Additional Main Menus

To add another Main Menu, follow these steps:

1. Touch the Menu Edit icon () located at the top right of any of the Main Menus.
2. Scroll horizontally to Main Menu 4.
3. Touch the  icon.




The Menu Items screen displays.

4. Touch one of the Menu Items to have the icon for that feature or application added to your menu. Default items that already have icons on a menu will be grayed out.
5. Continue to add Icons that you want on a main menu. When Main Menu 4 is full, you can scroll to Main Menu 5 and add icons to it also.

Removing an Icon from a Main Menu

1. Touch the Menu Edit icon () located at the top right of any of the Main Menus.

2. Scroll to icon that you would like to remove. Icons that display the  symbol cannot be removed. Only icons with the  symbol next to them may be removed.

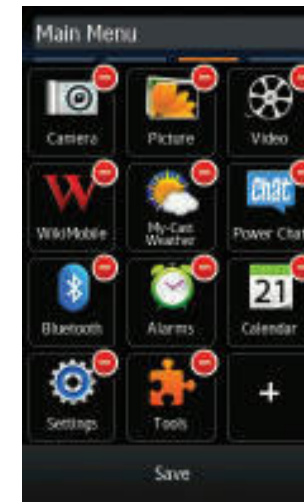

3. Touch the  symbol next to the icon you want removed. The icon is removed and the  icon appears in its place.

Opening an Application

- ▶ Tap the associated on-screen icon.
 - Press  to exit from the current menu and return to the previous screen.
 - Press  to exit from the current location or function, cancel your input and return to the Idle screen.


Navigating Through Menus

As you navigate through a menu, options display on the screen as scrollable lists. Menu tabs (located at the bottom of most screens, provide access to additional screen options).


To navigate a scrollable list:

1. From the Idle screen, touch .
2. Scroll through the main menus to find the desired option.
3. Gently press an on-screen option.
4. From the available list of options you can either:
 - Touch an on-screen entry to activate it.
 - Firmly press and slide your finger up or down the screen to scroll through lists of menu items.
 - Navigate through a long list by pressing the volume key up or down.

Note: Tapping or touching individual entries on the list opens the list entry.

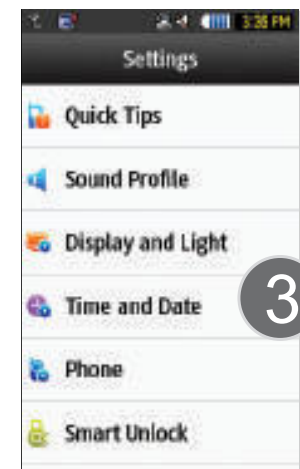


Note: Scrolling requires that you press firmly on the screen then drag. When scrolling through a list make sure not to touch or press individual entries on the list as this will open the list entry.

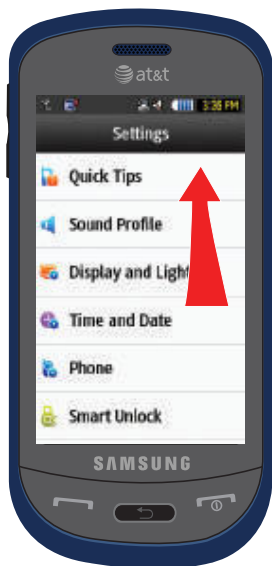

Using the Power Search Tab

Within the Contacts list (sorted alphabetically), the **Power Search** tab allows you to quickly “thumb through” the alphabetical listing of entries by first letter (A → B → C, etc...). The **Power Search** tab is located along the left side of the screen and Contacts entries are then selected by pressing their name fields. The Power Search tab can also be used with your Music Player.

1. Touch  .
2. Press and drag the Power Search tab until the first letter of the name of the contact you wish to find is shown on the screen.
3. Release the Power Search tab and scroll to the desired contact.

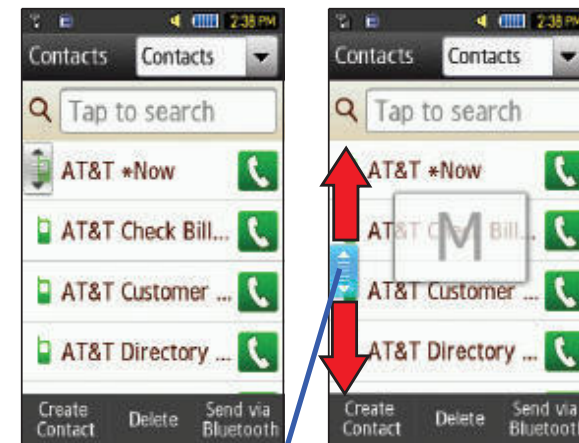

Power Search tab

Scrolling Through Field Entries

Some screens will ask you to assign a value to an on-screen field by either touching the up/down selection arrows or by quickly sliding through these values by using your fingertip. An example of these actions can be found on the Alarm page.

1. Touch  → **Tools** → **Alarms** → **Create Alarm**.
2. Touch the **Alarm Time** field and then adjust the hour and minutes values by entering manually (Keypad tab) or using either the +/- buttons or by quickly sliding your fingertip over the numbers (Jog tab).



Widgets

The Widget bar provides quick access to mini-programs (widgets). This bar (located at the left of the Idle screen) gives you information at a glance and provides easy access to frequently used tools such as Widget Manager, Analog Clock, Digital Clock, Dual Clock, TV, Photo Favorites, Voice Recognition, AT&T Navigator, AppCenter, Mobile Web, Today, Calendar, Favorite URL, Picture, Birthday, Sound Profile, Bluetooth, Alarms,

Calculator, Video, Games, Widget Memos, Create Message, Message Inbox, Record Audio, Memo, Timer, Go on a Diet, MySpace, Facebook, Yahoo Search, msnbc.com, Music Player, AT&T Social Net, Events and Widget Gallery.

This bar makes great use of the available space on your phone. The Widget bar is a pane on the side of the display screen that houses user-selected mini-applications and keeps them organized and always accessible.



You can easily customize the Widget bar by keeping the widgets docked within the bar itself or by dragging them anywhere onto your Idle screen.

Adding and Deleting Widgets

To select which items are displayed or hidden within the Widget bar:

1. From Idle mode, touch the Idle screen or the Widget bar to open it.
2. Touch . The Widget menu is displayed.
3. Touch the check box to place a check mark next to the Widget you want to display.
— or —
Touch the check box again to remove the check mark and hide the Widget.

 
The following table contains a description of each available Widget.




Widget Manager: allows you to choose which widgets will be displayed on the widget bar.



Analog Clock: displays the current time on an analog clock.



 Digital Clock: displays the current time on a digital clock.



Dual Clock/World Clock: displays current time in another user-defined international location. You can also find out what time it is in another part of world.

For more information, refer to “*World Clock*” on page 152.



TV: allows you to watch live broadcast AT&T Mobile TV on your phone.



AT&T Social Net: allows you to access your favorite social networks such as Facebook, Twitter, Myspace, and the News.



Create Message: allows you to create new text or picture messages. For more information, refer to “*Creating and Sending Messages*” on page 106.



Contacts Favorites: displays the Contacts Favorites list. You can use the pull-down Contacts menu to select all Contacts and Groups.

These favorites are listed and can be edited in **Address Book → Favorites**.



Voice Recognition: allows you to use your voice to dial, look up contacts, launch applications and navigate phone menus. Follow the on-screen tutorial. For more information, refer to “*Voice Recognition*” on page 144.



AT&T Navigator: opens AT&T Navigator.

For more information, refer to “*AT&T GPS*” on page 132.



AppCenter: opens AppCenter.

For more information, refer to “*AppCenter*” on page 126.



Mobile Web: opens the Mobile Web home page.

For more information, refer to “*Mobile Web*” on page 154.



Today: displays day of the week and date.



Calendar: allows you to access the Calendar feature.

With the Calendar feature, you can:

- Consult the calendar by month, week, or day.
- Set schedules and note anniversaries.
- Write memos to keep track of your schedule.
- Set an alarm to act as a reminder, if necessary.
- For more information, refer to “*Calendar*” on page 148.



Favorite URL: allows you to access your most frequently visited internet locations which you have saved as Favorites, including your account information, chat group, news, sports, weather, and MEdia Net.



Picture: allows you to view the list of photos downloaded from the web server, saved from messages, or taken by the camera. You can then assign the image as the current wallpaper.

For more information, refer to “*Using the Camera*” on page 96.



Games: allows you to access your Games folder.

For more information, refer to “*Games*” on page 123.



Widget Memo 1: allows you to write a short memo to keep on your widget bar or main display. The Widget Memo is limited to 80 characters.



Widget Memo 2: allows you to write a short memo to keep on your widget bar or main display. The Widget Memo is limited to 80 characters.



Widget Memo 3: allows you to write a short memo to keep on your widget bar or main display. The Widget Memo is limited to 80 characters.



Message inbox: allows you to easily access your inbox.



Record Audio: allows you to record voice memos.

For more information, refer to “*Record Audio*” on page 146.



Memo: allows you to access the Memo feature.

For more information, refer to “*Memo*” on page 150.



Timer: allows you to easily access your Timer.

For more information, refer to “*Timer*” on page 153.



Go on a Diet: allows you to see how many days it has been since starting a diet. Touch the icon and touch **Start** to start keeping track of days.



Birthday: displays an on-screen alert for up to 5 upcoming birthdays. These dates must have been previously entered as an entry within the Address Book on the day assigned for that person's birthday.

For more information, refer to “*Adding a New Contact*” on page 79.

For more information, refer to “*Understanding the Events Widget*” on page 30.



Sound Profile: allows you to quickly modify your current sound Profile.

For more information, refer to “*Sound Profile*” on page 52.



Bluetooth: From this application you can activate Bluetooth and configure it so other Bluetooth devices can see your device by name.

For more information, refer to “*Bluetooth*” on page 65.



Alarms: allows you to access alarm settings.

For more information, refer to “*Alarms*” on page 146.



Calculator: allows you to use a built-in calculator.

For more information, refer to “*Calculator*” on page 151.



Video: allows you to play videos stored on the phone.

For more information, refer to “*Video*” on page 94.



Widget Gallery: allows you to access the Widget Gallery.



Events: The Events Widget is an area that displays on the screen to inform you of calendar events, missed calls, or when new messages have been received. For more information, refer to “*Understanding the Events Widget*” on page 30.



Yahoo! Search: allows you to perform Yahoo searches on the Mobile Web.



 
MySpace: allows you to sign up for an account and to create and customize your profile with photos, videos and information to share with the online community of other members.



Facebook: allows you to sign up for an account and to create and customize your profile with photos, videos and information to share with the online community of other members.



msnbc: allows you to access news, sports, and weather on the Mobile Web at the msnbc.com website.



Music Player: allows you to play music files stored on the phone and external card and control their playback.

For more information, refer to “*Music Player*” on page 136.

Widget Bar Navigation

You can drag the widgets to the desktop (Idle Screen) to use the application or feature, then drag it back to the Widget Bar when you are finished. There are three different widget desktops you can use. You can have different widgets on all three desktops.

Accessing the Widget Bar

1. Tap the Widget bar tab, located on the left side of the main display to open the widget (quick access) bar.
2. Tap the Widget bar tab or anywhere on the main screen to close the widget bar.

Undocking Widgets

You can easily customize the Widget bar by either keeping these mini-apps docked within the bar itself or undocking them by dragging anywhere onto your Main display screen.

1. Touch and hold the widget (1).
2. While still holding the icon, in a single motion, drag it over to the new location and release your finger from the screen. The application is now located on the desktop (2).



Note: You can drag a widget to a location of your choice on the desktop or, just touch the widget on the widget bar and it will display in the center of the desktop.

Rearranging Widgets

You can also customize the Widget bar by arranging the location of your current widgets. This can help you place your frequently used (favorite) widgets at the top of the list.

1. Touch and hold the widget (1).

2. While still holding the icon, drag it away from the widget bar and drop it on the main screen (2). Then drag it back into its new location in the list. Or, you can drag it away from the widget bar in a single motion and drop it in the desired location on the widget bar.

Activating a Widget

1. Locate your widget (whether it is still docked in the Widget bar or in another location).
2. Touch the icon to activate the mini-application (widget).
If the widget is on the widget bar, it will be moved to the widget screen.

Scrolling Through the Widget Bar

Although the Widget Bar contains a number of widgets, it can only display six widget icons at one time on the bar.

- Use your fingertip to scroll up and down along the Widget bar.

Tip: Flick the screen in an upward motion to quickly scroll through the list.

Accessing Multiple Widget Desktops

1. Drag your finger along the three bars at the top of the Main menu to scroll through the three widget desktops. You can scroll in either direction.



2. Use the widget bar to place the widgets you choose on each of the screens. For more information, refer to “Undocking Widgets” on page 28.

Understanding the Events Widget

The Event Widget is an area that displays on the screen to inform you of calendar events, missed calls, or when new messages have been sent to the phone.



The following is a description of these on-screen notification tabs:



Displays when the Event Widget is parked on the Widget bar.



Displays within the Event Widget as a tab when a call has been missed.



Displays within the Event Widget as a tab when a new voicemail message is received.



Displays within the Event Widget as a tab when a new message is received.



Displays within the Event Widget as a tab when a new chat message is received.



Displays within the Event Widget as a tab when a new email message is received.



Displays within the Event Widget as a tab when a scheduled event has been missed.

Note: When you drag the Event Widget to the Idle screen, it will remain there until you drag it back to the Widget bar. When the Event Widget automatically appears on the Idle screen after an event has taken place, it will return to the Widget bar automatically after you have confirmed the event or pressed .

Section 4: Call Functions

This section describes how to make or answer a call. It also includes the features and functionality associated with making or answering a call.

For more information, refer to “*Call Settings*” on page 63.

Displaying Your Phone Number

- Touch  → **Settings** → **Phone Information**. Your phone number is displayed in the **My Number** field.

Making a Call

1. From the Idle screen, touch  and use the on-screen keypad to enter the number you wish to dial.
2. Touch  or press .

Note: When you activate the **Auto Redial** option in the Voice Call menu, the phone will automatically redial up to 10 times when the person does not answer the call or is already on the phone. For more information, refer to “*Call Settings*” on page 63.

Making an International Call

1. Touch , then touch and hold . The + character appears.

2. Use the on-screen keypad to enter the country code, area code, and phone number.
 - If you make a mistake, touch  until the desired numbers have been deleted.
3. Touch  or press .

Manual Pause Dialing

To manually call a number with pause(s) without storing it in your Contacts list:

1. Touch  and use the on-screen keypad to enter the phone number.
2. Press and hold  to add a two-second pause, and use the keypad to enter the additional numbers.

Tip: You can create pauses longer than two seconds by entering multiple P pauses.

3. Touch  or press .

For more information, refer to “*Adding Pauses to Contact Numbers*” on page 82.

Correcting an Entered Number

Use the following steps to correct a mis-typed entry when dialing.

1. After entering a number using the keypad.
 - If you make a mistake, touch  to erase a single character.
 - Press and hold  to erase the entire string of numbers.
2. Press  to return to the Idle screen.

Ending a Call

- Press the  key.

Dialing a Recent Number

All incoming, outgoing and missed calls are recorded in the **Calls** menu. If the number or caller is listed in your Address Book, the associated name also displays.

1. From the Idle Screen, briefly press .
2. Find the number by touching the drop down arrow in the upper right corner of the screen to view the call logs from the various options screens. Choose from: **All**, **Missed**, **Made**, or **Received**.

3. Touch  next to the desired phone number (or entry name if already in your Address Book).


– or –

Select the Contact to enter the **Details** page, then touch **Call** or press  to dial the number.

Note: Press and hold  to redial the last number.

To call the
selected number

To save the
number to the
Address Book

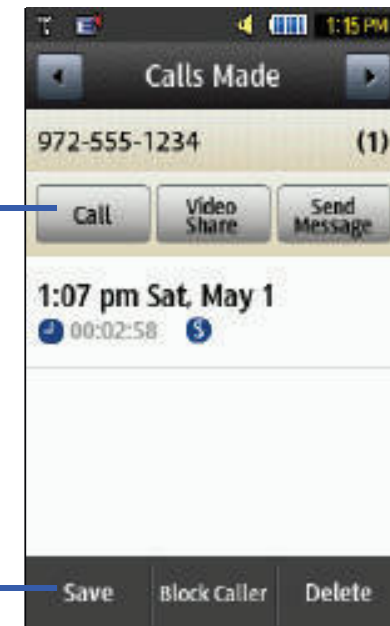

Making a Call Using Speed Dial

You can assign a short cut number to a phone number for speed dialing.

1. Touch  → **Address Book** → **Address Book Settings** → **Speed Dial**.
2. The **Speed Dial** screen displays showing the numbers 1 through 9. The number 1 is reserved for **Voice Mail**.
3. Touch an unused number and the **Contacts** screen displays.
4. Select a contact to assign to the number. You can also tap on the search box and enter the first few letters of the name you are searching for.
5. Follow the on-screen instructions to replace, add, or delete an entry.

Making a Call from the Address Book


You can store phone numbers that you use regularly on the SIM card or in the phone's memory. These entries are collectively called the **Address Book**.

For further details about the **Address Book** feature, see “*Finding an Address Book Entry*” on page 82.

Answering a Call

When a call is received, the phone rings and displays the caller's phone number or name if stored in the Address Book.

1. At the incoming call screen, touch and slide **Accept** to the right to answer the call or touch and slide **Reject** to the right to reject the call and send it to your voicemail.

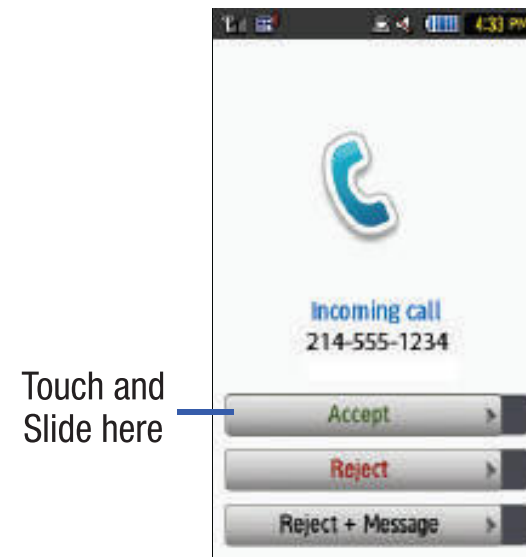

— or —

From the Incoming call screen, press .

- If the **Any Key** option is activated (**Menu** → **Settings** → **Calls** → **General** → **Call Answer**), you can press any key to answer a call except .

2. End the call by pressing .

Note: You can answer a call while using the Address Book or other menu feature. After ending the call, the phone returns to the previously active function screen.

Other Answering Options

When receiving an incoming call:

- Briefly press down either volume key () to mute the ring tone.
— or —

To mute the ring tone when the phone is facing upwards, flip the phone over so that it is facing down. To mute the ring tone when the phone is facing downwards, flip the phone over and then flip it over again so that it is facing downward. To set up your phone to utilize Motion Detection, see “*Motion Detection*” on page 58.

- Press and hold either volume key to reject the call and send it directly to voicemail.

Quick Reply


You can use the Quick Reply feature to send a text message to someone when you are not able to take their call.

To use the Quick Reply feature, follow these steps:

1. At the incoming call screen, touch and slide **Reject + Message** to the right. The Quick Reply screen will display.
2. Touch one of the following pre-defined messages:

- I'll call you right back.
- I'm in a meeting plz leave me a message.
- What's up?
- Create Message

The message is sent and you are returned to the previous menu.

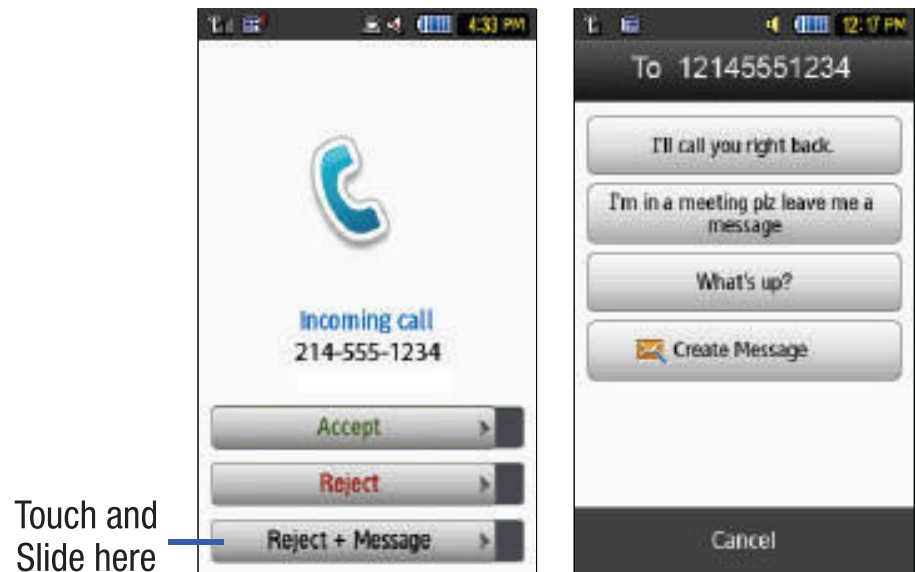

Dialing Options

From the Idle screen and Main menu, you have the option to access the Dialer and initiate a call by touching . When you manually enter numbers from the Dialer, you will see three dialing options displayed on the screen.

- **Call:** dials the current number entered using the on-screen keypad.
- **Send Message:** to create a new text message and address it to either a manually entered number or a current entry from your Address Book.
- **Contacts:** takes you to your Address Book where you can select a contact to call.

After you begin to enter numbers, the **Contacts** options changes to **Save** so you can save the Contact if needed.

Video Share

The Video Share features allows you to place a call and share live or recorded video while on the call. You can initiate or receive video by using the following steps.

Note: In order to share video, both parties must be subscribed to Video Share, both must have phones that support Video Share, and both must be in a 3G coverage area.

Initiating and Receiving a Video Share Session


To initiate and receive a Video Share session:

1. From the Idle screen, touch  and use the on-screen keypad to enter the number you wish to dial.
2. Touch  or press .
3. Once the call is answered, if you are both capable of Video Sharing, the Video Share icon appears on the screen and turns from grey to black ( Video Share). **Video Share Ready** appears at the upper line of the recipient's number or name.
4. Touch the **Video Share** on-screen button to invite the other party to see video shot from your phone. “**Inviting ###-###-####**” displays. A message is sent to the recipient “**###-###-#### Wants to Share Video With You.**”

Important!: When establishing a Video Share session, only the sender of the video clip can save the file.

5. The recipient will receive a Video Share pop-up to either **Accept** or **Reject** the **Video Share** call. They should press the **Accept** soft key to continue or **Reject** soft key to reject the invitation.

6. If the **Auto Record** option is **On**, the recording starts whenever the Video Share call is accepted.
7. During a Video Share session, your options are displayed as icons on the screen. Touch the corresponding icon to activate the feature.

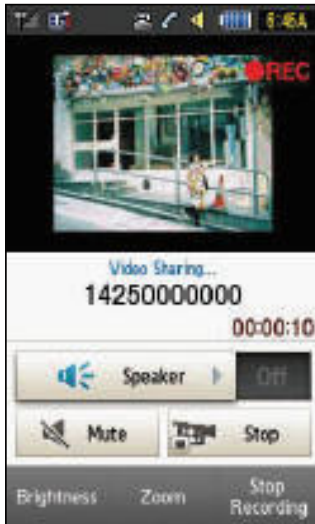

Tip: To stop the video share call press the **Stop** key.

8. A pop-up message displays **Video Share has stopped. Your recorded video “VSxxxxxxx” is saved in the Video folder in My Stuff.**

Video Share (In-Call)

You can begin a **Video Share** call during an existing call by touching the **Video Share** icon, or touching **More → Video Share → Live**.

Play a Video Share Recording

During a call (while not in a **Live Video Share** session) you can share a recorded video for the recipient.

1. Touch **More → Video Share → Recorded** and then select from the available files in your **Video** folder.
2. To make the connection, the recipient should press **Accept** and the Video begins to play on both phones.

Recent Calls

The phone stores the numbers of the calls you’ve dialed, received, or missed in the **Calls** menu. You can access this menu from the Idle screen by following these steps:

1. Briefly press .
- or —
- Touch  → **Tools** → **Recent Calls**.

2. Touch the drop-down list located at the top right of the screen to select from **All**, **Missed**, **Made**, or **Received**. If the number or caller is listed in your Address Book, the associated name is displayed.
3. Press  to dial the number.


Viewing All Calls

1. From the **Recent Calls** menu, touch the drop-down and select the **All** option. All calls made, received, and missed are listed.
2. Touch an entry from the list to view the following options:
 - **Call**: allows you to return the call automatically.
 - **Video Share**: allows you to call the number and share a video.
 - **Send Message**: allows you to send a text or Multimedia message to the caller.
 - **Save**: allows you to save the number to your Address Book on either the phone or SIM card.
 - **Block Caller**: allows you to add the sending number to your Reject List, where incoming calls are sent directly to voice mail.
 - **Delete**: allows you to delete the selected call.

Viewing Missed Calls

The number of calls you have missed is displayed on the Idle screen.

1. Touch **View All** on the Missed Calls dialog. A list of the most recently missed calls is displayed.

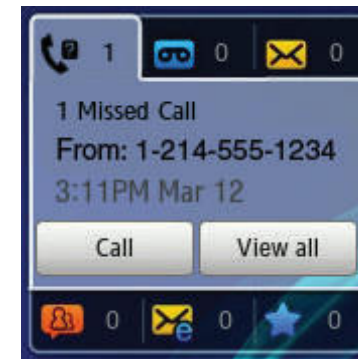

Note: If there is a voicemail sent by the same number, associated icons are displayed and can then be selected.

2. Scroll through the list of missed calls.
3. To move to another call type, touch the call drop-down list (upper right on Calls page) and make your selection.

Viewing the Details of a Missed Call

To view the details of a selected missed call, use the following steps:

1. Touch **View All** on the Missed Calls dialog. A list of the most recently missed calls is displayed.
2. Touch the desired missed call. Information for that caller is then displayed within a Missed Calls page. For more information regarding the available options, see “*Viewing All Calls*” on page 37.

Calling Back a Missed Call

To call back a missed call number:

1. Touch **Call** (to call the most recent missed call) or Touch **View All** on the Missed Calls dialog. A list of the most recently missed calls is displayed.
2. Touch the desired missed call.
3. Touch either **Call** or press .

Saving a Missed Call to your Address Book

1. Touch **View All** on the Missed Calls dialog. A list of the most recently missed calls is displayed.
2. Touch the desired missed call.

Note: You may see different choices depending upon the settings for your “Save New Contacts to” option.

3. Touch **Save → New**.

For further details about the **Address Book** feature, see “*Adding a New Contact*” on page 79.

Sending a Message to a Missed Call

1. Touch **View All** on the Missed Calls dialog. A list of the most recently missed calls is displayed.
2. Touch the desired missed call.
3. Touch **Send Message**.
4. At the “Create” screen, touch the empty text field and use the on-screen alphanumeric keys to type in a message.
5. When you are done with your message, touch **OK**.
6. To add additional recipients, touch the yellow recipients field. Insert new recipients by:
 - Pressing the yellow field and then entering the number manually.
 - Selecting from **Recent Contacts** to choose your recipient.
 - Select an entry from your **Contacts** list.
 - Selecting members of a **Group**.

7. Touch **Send** to initiate delivery.

Deleting a Missed Call

1. Touch **View All** on the Missed Calls dialog. A list of the most recently missed calls is displayed.
2. Touch **Delete**.
3. Place a check mark adjacent to those entries you wish to select for deletion.
 - Touching **Select All** toggles the placement of a check mark next to every entry in the list.
4. Touch **Delete**.

Note: You can press  at any time to exit the **Missed Call** feature.

Call Time

1. Touch  → **Tools** → **Recent Calls** → **Call Manager** → **Call Time**.
2. The following times are displayed:
 - **Last Call Duration:** shows the length of time for the last call.
 - **Total Dialed:** shows the total length of time for the calls made.
 - **Dialed Voice Calls:** shows the total length of time for all voice calls made.

- **Dialed Data Calls:** shows the total length of time for all data calls made.
 - **Total Received:** shows the total length of time for the calls received.
 - **Received Voice Calls:** shows the total length of time for all voice calls received.
 - **Received Data Calls:** shows the total length of time for all data calls received.
 - **Total Call Duration:** shows the total length of time for all calls made and received.
3. Reset these fields by touching **Reset All**.
 4. Touch **Yes** to confirm the reset or **No** to cancel the operation.
 5. Enter the user-defined password and touch **Confirm** to reset all counters. For more information, refer to “*Change Phone Password*” on page 61.
 - Press  or  to cancel this operation.

Data Counter

Data Counter refers to the amount of data (volume) to and from the phone.

1. Touch  → **Tools** → **Recent Calls** → **Call Manager** → **Data Counter**.

2. The following data items are displayed:

- **Last Sent:** shows the size of the last data packet sent (measured in KB - kilobytes) since the last time this counter was reset.
- **Last Received:** shows the size of the last data packet received (measured in KB - kilobytes) since the last time this counter was reset.
- **Total Sent:** shows the amount of data sent (measured in KB - kilobytes) since the last time this counter was reset.
- **Total Received:** shows the amount of data received (measured in KB - kilobytes) since the last time this counter was reset.

3. To set these counters back to zero, touch **Reset**.

- Place a checkmark adjacent to those individual fields you would like reset.
- Touch **Select All** to place a checkmark adjacent to all fields.

4. Enter the password and touch **Confirm** to reset all counters. For more information, refer to “*Change Phone Password*” on page 61.

5. Press  or  to cancel this operation.

Options During a Call

Your phone provides a number of control functions that you can use during a call.

Adjusting the Call Volume

During a call, to adjust the earpiece volume, use the **Volume** keys on the left side of the phone.

- Press the **Up** volume key to increase the volume level and press the **Down** volume key to decrease the volume level.

In Idle mode, you can also adjust the ringer volume using these same keys.

In-Call Options

During an active call there are several functions available by touching a corresponding on-screen button.

- **Speaker On/Off** routes the phone's audio through either the speaker or through the earpiece.
 - Slide **Speaker** to **On** to route the audio through the speaker. (You can adjust the speaker volume using the volume keys.)
 - Slide **Speaker** to **Off** to use the phone's earpiece (see “*Using the Speakerphone During an Active Call*” on page 42.)
- **Mute/Unmute** turn the onboard microphone either on or off.
 - Touch **Mute** during a call to mute the microphone.
 - Touch **Unmute** to unmute the microphone.
- **Video Share** lets you share video during an active call. For more information, refer to “*Video Share*” on page 35.

- **Dial** to display the on-screen keypad, where you can choose to Save the entered number to your Address Book, Send a new text message, or initiate a new call.
- **Hold** to place the current active call on hold.
- **More** to access additional in-call options such as:
 - **Address Book** to display your current Address Book entries.
 - **Save to Address Book** to save the current phone number into your Address Book if it is not already saved.
 - **View Contact Details** to see details of the current phone number if it has already been saved in your Address book.
 - **Noise Suppression on/off** to turn on or off the noise reduction feature that filters out background noise when necessary.
 - **Send Message** to send a new text message.
 - **Memo** to write a memo concerning this call.

Placing a Call on Hold

You can place the current call on hold at any point during a conversation. You can also make another call while you have a call in progress if your network supports this service.

1. While on a call, touch **Hold**. This action places the current caller on hold (which is displayed on-screen as a greyed-out box).
2. You can later reactivate this call by touching **Resume**.

To make a new call while you have a call in progress

1. Touch .
2. Touch  → **Address Book** to look up a number in the Address Book.
– or –
Touch  → enter the new number → .
3. Press  to dial the second number.

Once connected, each call is displayed within either an **In call** or **On hold** tab.

Note: The caller currently on hold appears within the **On Hold** tab.

Switching Between Calls

When you have an active call and a call on hold, you may switch between the two calls, changing the one on hold to active and placing the other on hold.

1. Touch **Swap**.
 - The current call (caller #2) is placed on hold and the previous call on hold (caller #1) is then reactivated so that you can continue conversing with that person.
2. Press  to end the currently active call.

To end a specific call

1. Press the associated tab (**In call** or **On hold**).
2. Touch  to end the specific call.
3. Press the  key to end the remaining call.

Using the Speakerphone During an Active Call

While in an active call, it is possible to enable the speakerphone feature.

1. Dial the number and press .
2. Once the call is answered, slide **Speaker** to **On** to activate the speakerphone.



3. Use the **Volume** keys (located on the left side of your phone) to adjust the volume.
4. To deactivate the speakerphone, slide **Speaker** to **Off**.

Important!: For more information, see “*Responsible Listening*” on page 171.

Switching off the Microphone (Mute)

You can temporarily switch your phone’s microphone off, so that the other person cannot hear you.

Example: You wish to say something to person in the room, but do not want the person on the phone to hear you.

Note: If you are already in Video Share or you have a call on hold, you need to select Mute/Unmute.

To switch the microphone off temporarily during a call

1. Touch **Mute**. The option is then replaced with **Unmute**.
2. Touch **Unmute** to deactivate the Mute function and reactivate the microphone.

Searching for a Number in Address Book

1. During the active call, touch **More** → **Address Book**.
2. Touch the Address Book entry.

For further details about the **Address Book** feature, see “*Finding an Address Book Entry*” on page 82.

Call Waiting

The Call Waiting feature allows you to answer an incoming call while you have a call in progress, if this service is supported by the network, and you have set the  → **Settings** → **Calls** → **Voice Call** → **Call Waiting** Menu to **Activated**. You are notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress

1. Touch and slide **Accept** or  to answer the next incoming call. The first call is automatically put on hold.
2. To switch between the two calls, touch **Swap**.
 - **Swap**: Places the current call on hold and then activates the previous call.

To end a call on hold

1. Touch the **On hold** tab and touch  adjacent to the caller you wish to disconnect.
2. Press  to end the current active call.

3-Way Calling (Multi-Party Calling)

The 3-Way or Multi-Party feature allows you to answer a series of incoming calls and place them on hold. If this service is supported by the network, all calls can be joined together. You are notified of an incoming call by a call waiting tone.

Note: The **Join** option combines all of the calls you have established with your phone (both active and on hold).
Swap places the current call on hold and then activates the previous call.

This feature joins all of the calls you have established with your phone (both active and on hold) into a multi-party call.

1. Press  to answer the first incoming call.
2. Press  or **Accept** to answer the next incoming call. The first call is automatically put on hold.
3. Join the first two callers into a single multi-party call by touching **Join**.
4. To disconnect one of the callers, touch **Split**.
5. The connected numbers will be displayed. Select the one to be taken out of the Multi-party call and put on hold.
6. Press  to end the call with the caller on hold.
7. Press  again to end the call.

Section 5: Entering Text

This section outlines how to select the desired text entry mode when entering characters using the QWERTY keyboard-style keypad. This section also describes how to use the T9 predictive text entry system to reduce the number of key strokes needed to enter text.

The phone comes equipped with an orientation detector that can tell if it is being held in an upright (Portrait) or sideways (Landscape) orientation. This is useful when entering text. If the phone is sideways, an on-screen keypad is displayed. When upright, only the alphanumeric keypad is shown.

The phone not only provides several on-screen keypad/keypad text entry options, but also provides handwriting recognition to make the task of text entry that much easier.

Using the QWERTY Keypad

From a screen where you can enter text, rotate your phone counterclockwise to a Landscape orientation. Regardless of the current setting with the **Input Select** field (page 48), the on-screen QWERTY keypad will display.



Changing the Text Input Mode - Keypad

There are three main keypad layout keys that will change the on-screen keys within the QWERTY keypad.

The available Text Input modes are: **T9**, **123Sym**, and **Abc**. Refer to the Text Input mode in the upper right hand corner to identify which mode you are currently in.



T9: activates the T9 mode in either **abc** (all lower case) or **T9Eab** (where the keys default to lowercase until the Shift key is touched [activated]). This is achieved by repeatedly pressing the button to toggle the current state.

123Sym

Symbol-Numeric: activates the number and symbol keys.

EMO

Emoticons: activates the emoticon keys.

Abc


Abc: activates the default alphabet keys. This function works in conjunction with the T9 feature.

1. Touch an on-screen Text Input mode button.

2. Touch a corresponding key to enter the associated character within the text field.
3. Touch the right and left arrow keys on the  button to turn the page to choose from additional options. Multiple pages are only available with **123Sym** and **EMO** options.
4. Touch **OK** to complete the message and return to the previous screen.


Using T9 Mode

1. Rotate your phone counterclockwise to a Landscape orientation.

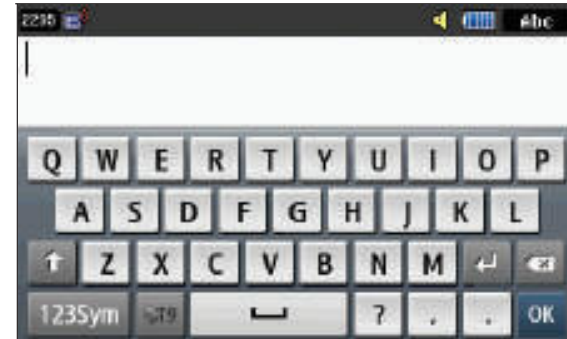

Note: The T9 option is available only when Abc mode has been selected.

2. Touch the Text Input Mode button at the bottom of the screen and touch . The T9 indicator turns green  and  appears in the upper right corner of the screen.
3. Begin typing a word. A list of word options displays and includes a number indicating the words available to chose from.

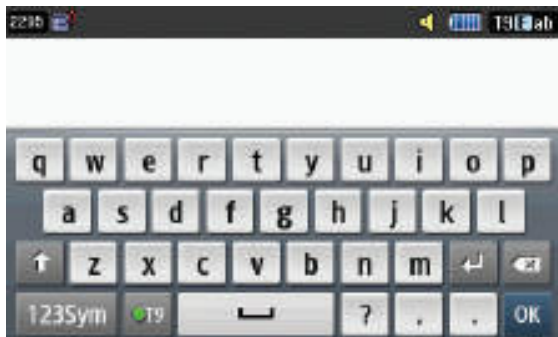


4. Touch the down arrow in the word options box and scroll through the list of choices to select the desired word.
5. Touch  to complete the message and return to the previous screen.

Note: The T9 Text Input Mode is also available in Portrait mode.

Using 123Sym Mode


1. Rotate your phone counterclockwise to a Landscape orientation.
2. Touch the Text Input Mode button at the bottom of the screen and touch . The following screen displays:

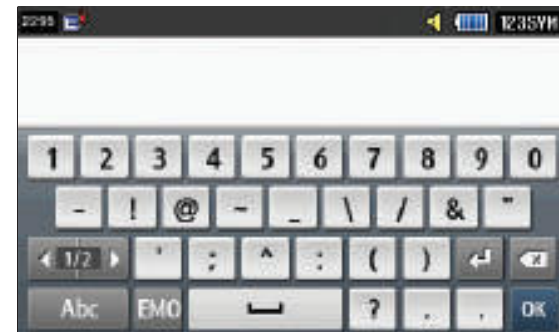

3. Touch the right and left arrow keys on the  button to turn the page to choose from additional options.
4. Touch  to complete the message and return to the previous screen.


Using Emoticon (Emo) Mode

1. Rotate your phone counterclockwise to a Landscape orientation.

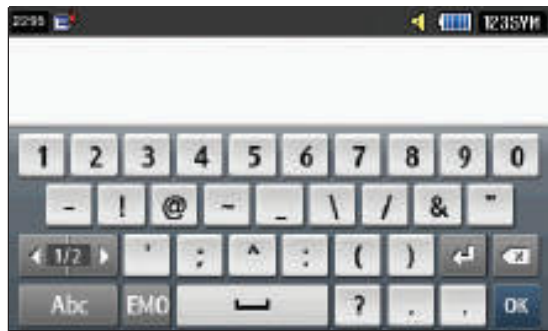

Note: The Emo option is available only when 123Sym mode has been selected.

2. Touch the Text Input Mode button at the bottom of the screen and touch **EMO**. The following screen displays:

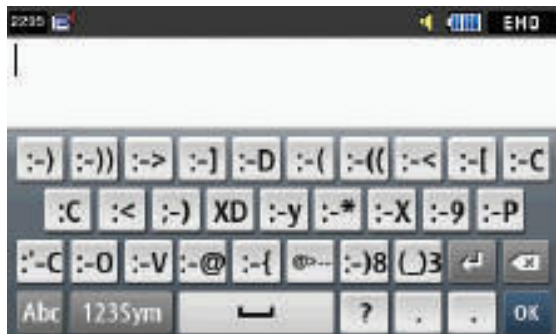

3. Touch **OK** to complete the message and return to the previous screen.

Using Abc Mode

1. Rotate your phone counterclockwise to a Landscape orientation.
2. Touch the Text Input Mode button at the bottom of the screen and touch **Abc**. The following screen displays:



3. Touch the desired alphabetic characters. Touch **↑** to input an upper-case letter. The keypad automatically reverts to lower case after the first letter in a sentence is typed unless you select **↑** for each of the following letters.
4. Touch **OK** to complete the message and return to the previous screen.

Using Numeric in Portrait Mode

The Numeric mode enables you to enter numbers into a text message.

- Touch the Text Input Mode button at the bottom right side of the screen and select **Numeric**, then touch the keys corresponding to the digits you want to enter.

Using Symbols in Portrait Mode

Symbol mode enables you to insert symbols and punctuation marks into text.

1. Touch the Text Input Mode button at the bottom right side of the screen and select **Symbols**, then touch the desired symbol key.
2. To display more symbols, touch the left or right arrow key.
3. To clear the symbol(s), touch .

Using Abc Mode in Portrait Mode


1. Touch the Text Input Mode button at the bottom right side of the screen and select **Abc Mode**, then touch the desired alphabetic characters.

2. You can move the cursor to the right by touching **Space** (). To delete letters, touch . Touch and hold  key to clear the display.
3. Touch  to enter punctuation marks.

Tip: The cursor moves to the right when you touch a different key. When entering the same letter twice or a different letter on the same key, wait for a few seconds for the cursor to automatically move to the right, and then select the next letter.


Using the Handwriting Feature

1. From a screen where you can enter text, touch the **Input Select** field (shown below) to change the screen to Handwriting mode.

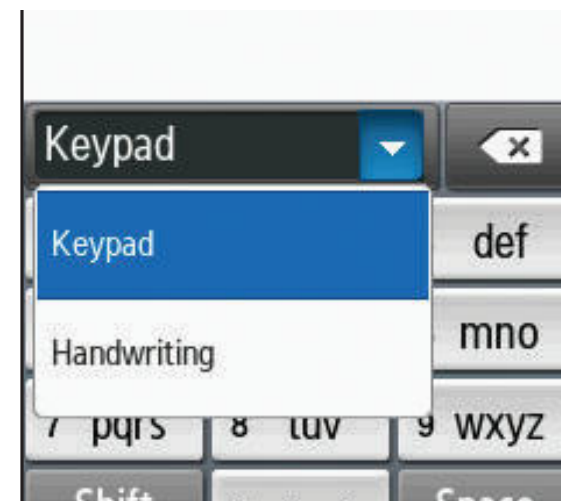

2. From the drop-down list touch Handwriting to activate the handwriting recognition on the phone.
3. Use your finger tip to write out each character. Touch the **Shift** key to use uppercase letters. Touch the **Space** key () to create a space between letters, numbers, or symbols.

Note: To properly recognize the written characters and to prevent scratching of the LCD, do not use script.

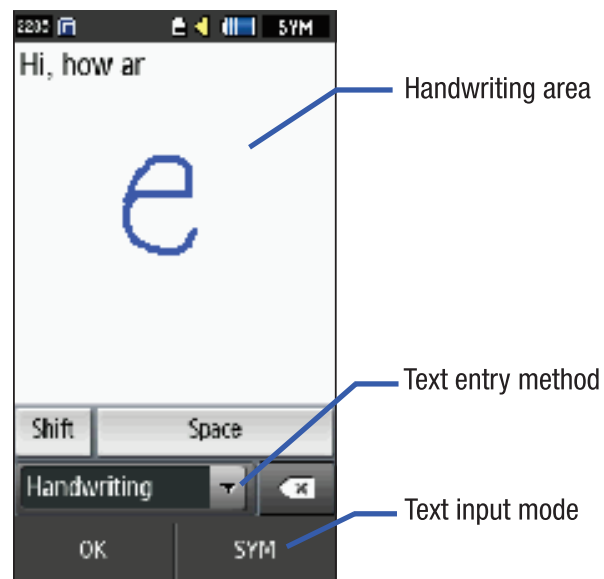

Changing the Text Input Mode - Handwriting

You can write your message using the Handwriting mode but if at any time you feel you can't remember how to input text, you can touch the **Input Select** field and select Keypad.

The available Text Input modes are: **abc**, **Abc**, **ABC**, **Numeric**, and **Symbols**. Each option causes the Handwriting mode to behave differently.

ABC

All uppercase: causes the phone to read everything being written as uppercase characters. Ex: **HI THERE.**

Abc

Initial uppercase: causes the phone to read words as having the initial character in uppercase and all consecutive characters of the same word as lower case. Ex: **Hi there.**

abc

All lowercase: causes the phone to read everything being written as lowercase characters. Ex: **hi there.**

123

Numeric: causes the phone to try and interpret all inputs as numbers. Ex: The letter **I** would be displayed as the number **1**.

SYM

Symbols: causes the phone to try and interpret all inputs as symbols.

The following buttons can also be used in Handwriting mode:

 **Shift key:** Touch this key before writing a letter to make it upper case.

 **Space key:** Touch this key before writing a letter to insert a space.

Handwriting Mode-Entering Characters

1. Touch the Text Input Mode button at the bottom of the screen and select **Abc**. The input mode indicator then changes to  which activates the Initial uppercase function.
2. Write the desired text using your finger.
 - To change the case of the alphabetic characters touch the Text Input Mode button and select **ABC** or **abc**.
 - If you make a mistake, touch  to erase a single character.
 - Touch and hold  to erase an entire word or line.

As an example, to write “Hi there.” you would:

- Touch the **Text Input Mode** button and select **Abc**.  is then shown on the screen.
- Write **HI** or **Hi**. In either case, the **Abc** mode causes the initial character to be uppercase while the rest are forced into lowercase.

- Draw a line () across the screen to insert a space. Since there is no letter that matches this icon, the phone inserts an empty space.
 - You could also touch the Input Select field and choose Keypad to then touch  and insert an empty space. After which return to the Handwriting mode.
- Touch the **Text Input Mode** button and select **abc**.  is then shown on the screen.
- Write **THERE** or **there** (in either case the **abc** mode causes characters to display as lowercase.)
- Touch the screen to insert a period.

Note: Draw a diagonal slash across the screen (/) to enter a paragraph return.

Handwriting Mode-Entering Numbers

1. Touch the Text Input Mode button at the bottom of the screen and select **Numeric**. The input mode indicator then changes to  which activates the number function. No alphabetic characters are recognized.
2. Write the desired numbers using your finger.
 - If you make a mistake, touch  to erase a single character.
 - Touch and hold  to erase an entire word or line.

As an example, to write “123 Anywhere” you would:

- Touch the **Text Input Mode** button and select **Numeric**.  is then shown on the screen.
- Write **123**.
- Touch the **Text Input Mode** button and select **Abc**.  is then shown on the screen.
- Write **ANYWHERE** or **Anywhere** (in either case the **Abc** mode causes the initial character to be uppercase while the rest are forced into lowercase.)
- Draw a line () across the screen to insert a space. Since there is no letter that matches this icon, the phone inserts an empty space. You can also touch  to insert an empty space.

Handwriting Mode-Entering Symbols

1. Touch the **Text Input Mode** button at the bottom of the screen and select **Symbols**. The input mode indicator then changes to  which activates the symbols function. No alphabetic or numeric characters are recognized.
2. Write the desired numbers using your finger.
 - If you make a mistake, touch  to erase a single character.
 - Touch and hold  to erase an entire word or line.

As an example, to write “tom@att.net” you would:

- Touch the **Text Input Mode** button and select **abc**.  is then shown on the screen.
- Write **TOM** or **tom** (in either case the **abc** mode causes all characters to be lowercase.)
- Touch the **Text Input Mode** button and select **Symbols**.  is then shown on the screen.
- Draw **@** or touch the Input Select field, choose **Keypad** to then choose from several pages of available symbols.
- Touch the **Text Input Mode** button and select **abc**.  is then shown on the screen.
- Write **ATT** or **att** (in either case the **abc** mode causes all characters to be lowercase.)
- Touch the screen to insert a period.
- Write **NET** or **net** (in either case the **abc** mode causes all characters to be lowercase.)
- Touch the Input Select field and choose **Keypad**, then touch  to insert an empty space. Return to the Handwriting mode.
- Select  from the Symbols page to insert a new paragraph.

Section 6: Changing Your Settings

This section includes tips on how to use your phone's features, as well as how to change and customize the display settings, call handling, security settings, and other settings associated with your phone.

Quick Tips

Quick Tips connects you to the AT&T Quick Tips web page where you can find information on the operation of your phone.

► In Idle mode, touch  → **Settings** → **Quick Tips**.

The AT&T Quick Tips web page displays.

Sound Profile

The Sound Profile menu allows you to specify how you are informed of incoming calls and messages as well as other notification sounds your phone can make.

The steps for modifying the **Normal** sound profile are described in detail. You can apply these steps to modify the other sound profiles: **Silent**, **Driving** and **Outdoor**.

Selecting a Sound Profile

1. Touch  → **Settings** → **Sound Profile**.
2. Touch the radio button next to the profile name. The selected profile activates. Choices include:

- **Normal:** default sound profile where the incoming Alert Type is set to melody. You can modify Normal settings for Call, Message and Phone.
- **Silent:** allows you to select mute or vibrate alerts that stop the phone from making noise, in a theater for example. You can modify Silent settings for Call and Message. Since the phone is silent, there are no Phone settings to adjust.
- **Driving:** allows you to select alerts that you can hear easily while driving. You can modify Driving settings for Call, Message and Phone.
- **Outdoor:** allows you to select alerts that you can hear in outdoor conditions by adjusting the volume, vibration and the tones. You can modify Driving settings for Call, Message and Phone.

Normal Profile

The following procedures describe the steps for modifying the Call, Message and Phone settings for the Normal sound profile.

Editing the Normal - Call Profile

1. Touch  → **Settings** → **Sound Profile** → **Normal**.
 - Touch the name field and not the radio button to the right.

2. Touch drop-down menu (upper-right of the screen) and select **Call**.
3. Select the **Call Alert Type** field and select one of the following and touch **Save**:
 - **Melody**: the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration then Melody**: the phone vibrates and then starts ringing.
 - **Vibration & Melody**: the phone vibrates and plays a melody simultaneously.
4. Touch the **Voice Call Ringtone** field, touch to select a ringtone and touch **Save**.
5. Drag the **Ringtone Volume** slider to the volume level you desire (range is 1-7).
6. Touch the **Vibration Pattern** field, then touch to select **Vibration 1 - 5**.
7. Touch **Save** to return to the Sound Profiles menu.

Editing the Normal - Message Profile

1. Touch  → **Settings** → **Sound Profile** → **Normal**.
 - Touch the name field and not the radio button to the right.
2. Touch drop-down menu (upper-right of the screen) and select **Message**.

3. Touch the **Message Alert Type** field, select one of the following and touch **Save**:
 - **Melody**: the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration**: the phone vibrates 3 times.
 - **Vibration & Melody**: the phone vibrates and plays a melody simultaneously.
 - **Mute**: the phone is silent and does not play a melody or vibrate.
4. Touch the **Message Alert Tone** field, touch to select a ringtone and touch **Save**.
5. Touch the **Message Alert Repetition** pull-down and select one of the following options and touch **Save**:
 - **Once**: repeats the message alert once.
 - **Periodic**: repeats the message alert periodically.
6. Drag the **Alert Tone Volume** slider to the volume level you desire (range is 1-7).
7. Touch the **Vibration Pattern** field, then touch to select **Vibration 1 - 3**.
8. Touch **Save** to return to the Sound Profiles menu.

Editing the Normal - Phone Profile

1. Touch  → **Settings** → **Sound Profile** → **Normal**.

- Touch the name field and not the radio button to the right.
2. Touch drop-down menu (upper-right of the screen) and select **Phone**.
 3. Touch the **Keypad Tone** pull-down and select one of the following tones and touch **Save**:
 - **Beep**
 - **Glossy**
 - **Mute**
 4. Touch the **Power On Type** field, select one of the following and touch **Save**:
 - **Melody**: the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration**: the phone vibrates but does not play a melody.
 - **Vibration & Melody**: the phone vibrates and plays a melody simultaneously.
 - **Mute**: the phone is silent and does not play a melody or vibrate.
 5. Touch the **Power Off Type** field, select one of the following and touch **Save**:
 - **Melody**: the phone rings using the ring melody selected in the Ring tone menu.
 - **Vibration**: the phone vibrates but does not ring.

- **Vibration & Melody**: the phone vibrates and plays a melody simultaneously.
 - **Mute**: the phone is silent and does not play a melody or vibrate.
6. Drag the **Phone Sound Volume** slider to the volume level you desire (range is 0-7).
 7. Touch **Save** to return to the Sound Profiles menu.

Silent Profile

Silent mode is convenient when you wish to stop the phone from making noise, in a theater for example.

- Touch  → **Settings** → **Sound Profile** → **Silent**.

All sound tones are now changed to Silent.

— or —

From the on-screen dial pad, touch and hold the  key.

Silent Profile on is displayed. Touch and hold again, to change back to Normal profile.

Display and Light Settings

In this menu, you can change various settings for the display or backlight.

1. From Idle mode, touch  → **Settings** → **Display and Light**.

2. Select one of the following options:

- Wallpaper
- Widget
- Font Type
- Greeting Message
- Transition Effect
- Brightness
- Backlight Time

Wallpaper

This menu allows you to change the background image displayed on the Main screen.

1. From Idle mode, touch  → **Settings → Display and Light → Wallpaper.**
2. Drag an on-screen image to the left or right to view either the next or previously available images (located in your Pictures folder) for the wallpaper selection.
3. Touch one of the following options:
 - **Set:** assigns the current image as the new wallpaper image that appears when the Main screen.
 - **Pictures:** allows you to choose a photo from Pictures folder, that are displayed in a thumbnail view.

Widget

Allows you to select which widget applications will appear docked within the Widget bar on the Idle screen.

For more information, refer to “*Widgets*” on page 23.

Font Type

You can select the text style for the informational text displayed on your phone.

1. From Idle mode, touch  → **Settings → Display and Light → Font Type.**
2. Select **Type1**, **Type2** or **Type3** and touch **Save.**

Greeting Message

In this menu you enter the text which displays on the main screen when the phone powers on.

1. From Idle mode, touch  → **Settings → Display and Light → Greeting Message.**
2. Touch and hold  to erase the current greeting message.
3. Use the on-screen keypad to enter a new greeting.
4. Touch .

Transition Effect

Allows you to activate/deactivate the default transition effect (wipe) during transitions between menu/options pages.

1. From Idle mode, touch  → **Settings → Display and Light → Transition Effect.**
2. Touch either **On** (activate) or **Off** (deactivate).

Brightness

Allows you to adjust the display brightness in order to see better in different lighting conditions.

1. From Idle mode, touch  → **Settings → Display and Light → Brightness.**
2. Drag the **Level** slider to the brightness level you desire (range is 1-5).
3. Touch .

Note: Modifying this setting will impact your battery life.

Backlight Time

The backlight turns the screen on using a preset brightness level. When the time (set in this feature) runs out, the touch screen turns off.

The phone can also be set to lock when the Backlight Time runs out. For more information, refer to “*Locking and Unlocking the Phone*” on page 18.

1. From Idle mode, touch  → **Settings → Display and Light → Backlight Time.**
2. Touch one of the backlight times to set the amount of time the phone’s touchscreen remains lit without activity.
Options include: **8 Seconds, 15 Seconds, 30 Seconds, 1 Minute, 3 Minutes, or 10 Minutes).**
3. Touch .

Note: Modifying this setting will impact your battery life.

Time & Date

This menu allows you to change the current time and date displayed.

1. From Idle mode, touch  → **Settings → Time and Date.**
2. Touch the **Time Zone Updating** drop-down list and select one of the following:
 - **Automatic:** the phone automatically updates the time and date according to the current time zone using the network service.

- **Prompt First:** you are prompted before a time change is applied.
 - **Manual Only:** you need to manually set the time and date according to the current time zone using the Set time menu.
3. Touch the **Time Zone** field and assign a new time zone by touching a corresponding area of the world map.
 - Touch  to save the new setting.
 - Major cities in each zone are displayed upon selection.
 - Current time zones are based upon Greenwich Mean Time.
 4. Touch **12hr** (12 hour) or **24hr** (24 hour) from the **Time Format** field.
 5. Touch the **Time** field then adjust the hour and minutes values by using either the up/down input arrows or by quickly sliding your fingertip over the numbers to scroll through their available values.
 - Touch either **AM** or **PM**.
 - Touch  to complete the assignment.
 6. Touch the **Date Format** pull-down list and select the format in which you want the date to display.

7. Touch the **Date** field then adjust the **Month**, **Day**, and **Year** values by using either the up/down input arrows or by quickly sliding your fingertip over the numbers to scroll through their available values.
 - Touch  to complete the assignment.
8. Touch **Save** to store all the new Time and Date settings.

Phone Settings

You can customize various phone settings.

- From Idle mode, touch  → **Settings** → **Phone**.

Language

This menu allows you to select a display language for Text language and Text Input mode. Choose from Automatic, English, Français, and Español.

1. From Idle mode, touch  → **Settings** → **Phone** → **Language**.
2. Touch the **Screen Text** drop-down list, touch one of the following selections and touch :
 - **Automatic** (uses the language set on your SIM card).
 - **English**

- Français
 - Español
3. Touch the **Input Language** drop-down list, touch one of the following selections and touch :
 - English
 - Français
 - Español
 4. Touch  to return to Phone settings page.

Vibration Feedback

You can set the level of vibration intensity that occurs when you touch the screen.

1. From Idle mode, touch  → **Settings** → **Phone** → **Vibration Feedback**.
2. Drag the **Vibration Intensity** slider to the intensity level you desire (range is 0-4).
3. Touch **Save**.

Calibration

The Calibration feature allows you to re-align the screen's touch accuracy. Use this feature only when the device does not respond properly when you touch the screen.

1. From Idle mode, touch  → **Settings** → **Phone** → **Calibration**.
2. Touch the center of each target and repeat this step for all four targets displayed.
3. At the **Calibration completed. Save new setting?** prompt, touch **Yes** to save or **No** to cancel.

Note: When touching the screen in Calibration mode, you must touch the center of the cross hair area.

Motion Detection

The Motion Detection feature can be used for muting an incoming call or alarm, setting Snooze on an alarm, and starting and restarting a timer.

1. From Idle mode, touch  → **Settings** → **Phone** → **Motion Detection**.
2. Touch **On** to activate the Motion Detection feature, or touch **Off** to deactivate it.

For more information on using Motion Detection on your phone, see the following:

- To mute the ringer - see “*Other Answering Options*” on page 34.
- To mute an alarm - see “*Turning Off an Alarm*” on page 147.

- To start or restart a timer - see “*Timer*” on page 153.

Auto Keypad Lock

The Auto Keypad Lock feature locks your phone when the Backlight turns off. To modify this feature, follow these steps:

1. From Idle mode, touch  → **Settings** → **Phone**.
2. Touch **On** or **Off** from the **Auto Keypad Lock** field.

For information on setting the Backlight time settings, see “*Backlight Time*” on page 56.

For information on the Smart Unlock feature, see “*Smart Unlock*” on page 63.

Security

The Security feature enables you to restrict the use of your phone by others and to restrict the types of calls.

Various codes and passwords are used to protect the features of your phone.

- ▶ From Idle mode, touch  → **Settings** → **Phone** → **Security**.

Lock Phone

When the Lock Phone feature is enabled, the phone is locked and you must enter the 4 to 8 digit phone password each time the phone is powered on.

Note: You will be prompted to create a password the first time this feature is enabled.

To change the phone password, see “*Change Phone Password*” on page 61. Once you enter the correct password, you can use the phone until you power it off.

- ▶ Touch **On** or **Off** from the **Lock Phone** field.

Lock SIM Card

When the Lock SIM Card feature is enabled, your phone only works with the current SIM. You must enter the lock code to unlock the SIM so you can use a different SIM card. Once you have entered the lock code, you are asked to confirm your password.

- ▶ Touch **On** or **Off** from the **Lock SIM Card** field.

Note: This lock code is typically the last four digits of the current phone number or can be obtained from an AT&T customer service representative.

Check PIN code

When the Check PIN code feature is enabled, you must enter your PIN each time you power on the phone. Consequently, any person who does not have your PIN cannot use your phone without your approval.

- Touch **On** or **Off** from the **Check PIN Code** field.

Note: You can obtain your PIN from an AT&T customer service representative.

Lock Applications

Using this menu, you can lock your applications and media content (apps, messages, images, and sounds) from being accidentally accessed, altered or deleted. Once you lock the contents, you must enter the phone's password to access the associated menus.

Note: The first time you access the password screen, you will be prompted to create a password.

1. Touch the **Lock Applications** field.
2. Touch the check box next to each application you wish to lock, or touch **All** to select all applications.
 - Applications include: Messaging, My Stuff, Recent Calls, Address Book, Calendar, Memo, IM, and Tasks.
 - Touch  to store your new selections.
3. Enter a new password (during the first use) using the on-screen keypad into the **New Password** field and touch .
4. Enter the new password again and touch .

Note: To change this password, see “*Change Phone Password*” on page 61.

Fixed Dialing Mode

FDN (Fixed Dial Number) mode, if supported by your SIM card, restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers stored in the FDN list on the SIM card. For more information, refer to “*FDN Mode*” on page 84.

1. Touch **On** or **Off** from the **Fixed Dialing Mode** field.
 - **On:** you can only call phone numbers stored in the Fixed Dial Contacts. You must enter your PIN2 to continue this configuration. You can obtain your PIN2 from AT&T's customer service department.
 - **Off:** you can call any number.
2. Use the on-screen keypad to enter your PIN2 Code and touch .

Note: The PIN2 code is provided by AT&T. Entering an incorrect PIN2 code can cause the phone to lock, at which point, you will have to call AT&T customer service for assistance.

Change Phone Password

The Change password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

1. Touch the **Change Phone Password** field.
2. Enter the current phone password and touch .

Note: Initially, the phone will not have a password assigned, and step 2 will not be necessary. Once a password is assigned, all steps are necessary.

3. Enter the new password and touch .
4. Re-enter the same password and touch .

Note: If you change your password, be sure to write it down and keep it in a safe place. If you forget your password, your phone will require AT&T customer service to have it unlocked.

Change PIN code

This feature allows you to change your current PIN, provided that the Check PIN Code feature is enabled. The Check Pin Code field must be active before you can access this function (page 59).

Note: This code is provided by AT&T. Entering an incorrect code can cause the phone to lock, at which point, you will have to call AT&T customer service for assistance.

1. If the Check PIN Code feature has not been enabled, touch **On** from the **Check PIN Code** field.
2. Touch the **Change PIN Code** field.
3. Enter your current PIN code and touch .
4. Enter the new PIN code and touch .
5. Re-enter (reconfirm) the same code and touch .

Change PIN2 code

The Change PIN2 code feature allows you to change your current PIN2 to a new one. You must first enter the current PIN2 (obtained from AT&T) before you can specify a new one. Once you have entered a new PIN2, you are asked to confirm it by entering it again.

Note: Not all SIM cards have a PIN2. If your SIM card does not, this menu does not display.

1. Touch the **Change PIN2 Code** field.
2. Use the on-screen keypad to enter your PIN2 code and touch .

3. Enter the new PIN2 code and touch .
4. Re-enter (reconfirm) the same code and touch .

APN Control

Allows you to turn control of Access Point Names (APN) On or Off. APNs are a method by which you can access advanced communication using your handset. This advanced communication can include instant messaging, multimedia messaging, email, and Internet access. Turning On APN Control requires the PIN2 code.

1. Touch **On** or **Off** from the **APN Control** field.
2. Press  to return to the previous Phone settings page.

Reset Phone

You can easily reset your phone to its default settings. To reset your phone:

1. From Idle mode, touch  → **Settings** → **Phone** → **Reset Phone**.
2. At the prompt: **All settings reset to factory defaults. Continue?**, touch **Yes** to reset, or **No** to cancel.
3. Enter your phone password, if prompted and touch .

4. After the phone settings have been reset, the **Reset Phone done** confirmation displays.

Once your phone has been reset to its default settings for those selected options, it will restart itself in order to incorporate the new settings.

Note: User Data such as contacts, messages, pictures, videos, and music is not deleted.

Restore Phone

The Restore Phone option is the same as the Reset Phone option described above in that all settings are reset to factory defaults. However, with the Restore Phone option, all user data is deleted.

Warning! All User Data such as contacts, messages, pictures, videos, and music will be deleted. Ensure that you remove your microSD card if applicable as it will be erased with the Restore Phone option.

Airplane Mode

Airplane Mode allows you to use many of your phone's features, such as Games, Voice note, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information. The () icon appears in place of the signal strength indicator when active.

1. From Idle mode, touch  → **Settings** → **Phone**.
2. Touch **On** or **Off** from the **Airplane Mode** field.
3. Press  to return to the previous Phone settings page.

Smart Unlock

Smart Unlock allows you to unlock your phone by drawing a preselected symbol with your finger. In addition to unlocking your phone, you can immediately display your contacts, create a message, or launch an application.

1. From Idle mode, touch  → **Settings** → **Smart Unlock**.
2. Touch the gray box next to a symbol. Initially, all of the boxes will be labeled **Off**.
3. Touch one of the white circles next to a specific function or application.
4. Touch **Save**. The Smart Unlock main menu displays with the new shortcut displayed next to the symbol.

Touch the **Show Guide** box to create a checkmark if you want the different Smart Unlock symbols to be displayed on the Idle screen whenever the phone is locked.



Call Settings

- ▶ From Idle mode, touch  → **Settings** → **Calls**.

Adjusting the General Call Settings

1. Touch **General** and select from the following options:
 - **Show My Number**: allows you to select how your caller ID is handled when an outgoing call is initiated. This is what others see on their Caller ID screen. This value can be made blank if you do not wish your number displayed to other users.
 - **Auto Reject**: selects which numbers will be automatically sent to voicemail based on a user-created list from within the Reject List.
 - **Quick Reply**: allows you to select text to include in your reply:
 - I'll call you right back.

- **I'm in a meeting plz leave me a message**
 - **What's up?**
 - **Call Answer:** selects how your phone answers incoming calls. Selections are: Send Key, Any Key, and Automatic (Time - 1-5 seconds).
 - **Call Status Tones:** allows you to activate an alert tone for one of two available status categories. Touch an option to make your selection and then touch  to store your new selection. Options include:
 - **Call Connect Tone:** allows you to activate an alert tone when the a connection has been made.
 - **Minute Minder:** allows you to activate an alert tone which sounds every minute the call is active.
 - **Alerts on Call:** activates an alert tone for new messages being received during an active call. Touch  to store setting.
2. Press  twice to return to the previous Phone settings page.

Adjusting the Voice Call Settings

1. Touch **Voice Call** and select from the following options:
- **Call Forwarding:** incoming calls are re-routed to a secondary number that you specify. Select the condition for the call forward action:
 - **Forward Always** activates an automatic forward of all incoming calls regardless of condition.

- **Busy** activates an forward function only when your number is currently in use and the caller receives a busy signal.
 - **No Reply** activates an automatic forward of all incoming calls after a preset amount of time (5 seconds - 30 seconds).
 - **Unreachable** activates an automatic forward of all incoming calls only when you can not be reached and your phone status is set to unreachable.
 - **Cancel All** cancels all call forwarding functions.
 - **Call Waiting:** this network service informs you when someone is trying to reach you during another call. You can specify individual call waiting options for voice calls and/or data calls.
 - Touch of the available options: **Activate**, **Deactivate**, **Check Status** (checks the status of this service on your account).
 - **Auto Redial:** the phone automatically redials the last active number if the call was either cut off or you were unable to connect.
 - Touch either **On** or **Off** to activate/deactivate the function.
 - Touch  to store the new setting.
 - **Noise Suppression:** allows you to turn on or off the feature that filters out background noise when necessary.
 - Touch either **On** or **Off** to activate/deactivate the function.
 - Touch  to store the new setting.
2. Press  twice return to the previous Phone settings page.

Connectivity

The phone has several communication/connection parameters which can be edited.

Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection. Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms. The following Bluetooth options are available:

Activation

1. From Idle mode, touch  → **Settings** → **Connectivity** → **Bluetooth**.
– or –
From Idle mode, touch  → **Bluetooth**.
2. Touch the Phone icon  to activate Bluetooth.
– or –
Touch  to deactivate Bluetooth.



Bluetooth
Inactive



Bluetooth
Active

Device Name

1. From Idle mode, touch  → **Settings** → **Connectivity** → **Bluetooth** → **My Info**.
2. Touch the **Name** field, touch and hold  to erase the current name.
3. Use the on-screen keypad to enter the new name for this device and touch . For more information, refer to “Entering Text” on page 44.
4. Touch .

Phone's Visibility

1. From Idle mode, touch  → **Settings** → **Connectivity** → **Bluetooth** → **Visible**.
2. Touch **Yes** or **No** to enable or disable the visibility (discoverability) of your phone.
 - Your phone becomes visible to other devices when you transmit your device's name to others in your area. This allows other devices to detect your phone and request a connection. If your phone is not visible, you can still detect and connect to other devices, while still hiding yourself from others.

Connecting to Other Bluetooth Devices

1. From Idle mode, touch  → **Settings** → **Connectivity** → **Bluetooth** → **Search**.
 - Detected Bluetooth devices then appear as buttons on the Bluetooth page.
2. Touch the desired device to begin pairing.
3. Touch the **Passkey** field, enter the passkey used by the target device and touch .
4. Select a connection option and touch .
5. Once the target device accepts the pair your new device shows as connected (green) within the Bluetooth page.

Bluetooth Secure Mode

When the Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status to every device within its range. This transmission can pose a security risk and incite unauthorized connection to your phone. It is recommended that you remain hidden unless necessary.

Remote SIM mode

This mode allows you to turn On or Off Remote SIM Mode. Remote SIM mode, when set to On, allows the Bluetooth phone car kit to access the contact information stored on the SIM card.

Note: There is a risk that another Bluetooth device (user) can access and modify your SIM card features and data.

1. From Idle mode, touch  → **Settings** → **Connectivity** → **Bluetooth** → **My Info**.
2. Touch **On** or **Off** from the **Remote SIM Control** field.
3. Touch .

Bluetooth Services

The Bluetooth specification is a protocol that describes how the short-range wireless technology works, whereas services describe the individual devices that are supported.

These services reduce the chance that incompatible devices are allowed to connect to your phone.

- **Headset:** a Bluetooth headset enables both incoming and outgoing calls using Bluetooth headsets.
- **Handsfree:** a Bluetooth car kit or speakerphone enables both incoming and outgoing calls.
- **Bluetooth Stereo Headset:** used to make calls and listen to music through the Bluetooth stereo headset.
- **Serial Port:** used to connect to other Bluetooth devices through a virtual serial port.
- **Dial up:** used to provide Internet access for Bluetooth devices through the phone's modem.
- **Basic Printing:** used to print images, text messages, personal data such as namecards and appointments, etc. through a remote Bluetooth printer.
- **File transfer:** used to transfer files to and from Bluetooth devices.
- **Object Push:** used to exchange personal data (namecards, Address Book contacts, etc.) with Bluetooth devices.
- **SIM Access:** provides access to the SIM card on the phone.

Configuring Your Phone's USB Settings

This menu selects the method of communication for the USB port.

Note: The Bluetooth feature **must first be disabled before initiating a USB connection** with the phone. Prior to connecting the USB cable to the phone, install the latest version of the PC Studio application. This application installs the necessary USB drivers onto your computer. For a free download of PC Studio, go to www.samsung.com/us/support.

1. From Idle mode, touch  → **Settings** → **Connectivity** → **Select USB Mode**.
2. Select one of the following USB modes:
 - **Ask on Connection:** causes the phone to present a "Select USB Mode" pop-up when you connect to the PC. You can then choose from either: **Samsung PC Studio**, **Media Player**, or **Mass Storage**.
 - **Samsung PC Studio:** sets PC Studio to launch as the default application when a USB connection is detected.
 - **Media Player:** sets the Media Player to launch as the default application when a USB connection is detected.
 - **Mass Storage:** allows you to utilize the onboard storage capacity of the phone's microSD card to store and upload files. This option allows your computer to detect the phone's microSD card as a removable storage drive.
3. Touch .

Network Profile Configuration

Your phone is wirelessly connecting to the Internet via a built in WAP browser.

Connection can be made via either one of three available WAP browsers: MEdia Net, AT&T MMS (MultiMedia Server), and AT&T IMS. You need these settings to use the web browser or send MMS messages or Emails.

Use this menu to create and customize the profiles containing the settings for connecting your phone to the network. Although the active connection can be changed by the user, it is recommended that this choice be made with the assistance of either the retailer or customer service representative.

1. From Idle mode, touch  → **Settings** → **Connectivity** → **Network Profiles**.
2. Touch one of these options:
 - **MEdia Net**
 - **AT&T MMS**
 - **AT&T IMS**

Note: The MEdia Net WAP and AT&T MMS are pre-configured and cannot be altered on this screen. Your phone is set up by default for connecting to the network.

3. To create a new connection, touch .
4. Select the parameter you want to edit:
 - **Set Name:** enter a profile name.
 - **Access Name:** edit the access point name.

- **Auth Type:** select the type of authentication used for this WAP connection: None, Normal, or Secure.
- **User ID:** enter the User ID required to connect to the network.
- **Password:** enter the user password required to connect to the network.
- **Protocol:** set the connection protocol used by the WAP browser: WAP, HTTP, or Other.
- **Home URL:** enter the URL address of the page to be used as your homepage.
- **Proxy Address:** MEdia Net set as the proxy server address and port.
- **Linger Time (sec.):** set a time period (in seconds) after which the network is disconnected if there has been no new data traffic in that time.
- **Advanced Settings:** allows you to configure some of the IP-specific information: Static IP, Static DNS, Server information, and Traffic Class.
 - **Static IP:** specify if you want to manually enter an IP address. If you want the IP address to be automatically assigned by the server, remove the check mark.
 - **Static DNS:** specify if you want to manually enter the Domain Name Server (DNS) address. If you want the address to be automatically assigned by the server, remove the check mark.
 - **Traffic Class:** select the traffic class.

Note: The WAP settings may vary depending on the service provider.

5. Touch  to store these new settings.

IMS Settings

IMS is the method used to connect to the server in order to set up the Video Share option.

1. From Idle mode, touch  → **Settings** → **Connectivity** → **IMS Settings**.
2. Touch one of these options:
 - **IMS Service** allows you to set the IMS service to **On** or **Off**.

Important!: If you reset the IMS Service to **Off**, you will not be able to use the Video Share Option.

- **IMS Profiles** allows you to set the server that service is coming from. Select a profile and make your alterations.

Important!: If you change from the default **AT&T IMS**, you may not be able to use Video Sharing.

Applications Settings

The Applications Settings feature allows you to configure the functional parameters for most of the onboard applications.

These applications are described in more detail within other sections of this manual.

1. From Idle mode, touch  → **Settings** → **Applications Settings**.
2. Select the type of application which you want to change:
 - **Messaging** (see page 106)
 - **Browser** (see page 69)
 - **Music Player** (see page 136)
 - **Mobile Video** (see page 75)
 - **Video Share** (see page 70)
 - **Record Audio** (see page 70)
 - **Calendar** (see page 71)
 - **Address Book** (see page 78).

Browser Settings

To configure the parameters on the onboard browser, use the Browser Settings page.

1. In Idle mode, touch  → **Settings** → **Applications Settings** → **Browser**.
2. In Browser Settings, touch any of the following function fields.

- **Clear Caches:** deletes the information stored in the cache. The cache stores the most recently accessed pages.
 - **Delete Cookies:** delete cookies. Cookies are pieces of personal information sent to a web server while navigating the web.
 - **Cookie Options:** sets whether cookies are stored on your phone (**Accept All** or **Reject All**). If you select **Prompt**, the phone will ask you to save the cookies on every page requiring cookies.
 - **Delete History:** deletes the record of any previously visited web sites.
 - **Preferences:** changes the settings for the web browser to suit your preference.
 - **Browser Profiles:** deletes the current browser profile. For more information, refer to “*Changing the WAP Profiles*” on page 158.
 - **About Browser:** displays the access version and copyright information about the browser.
3. Touch **Yes** to activate the feature.
- or —
- Touch  to save the new setting.

Video Share Settings

To enable the Alerts, Auto Record, and Recording Location for Video Share, use the following steps.

1. From Idle mode, touch  → **Settings** → **Applications** → **Settings** → **Video Share**.
2. Activate any of the following options by touching the on-screen button.
 - **Audio Alert:** allows you to turn **On** or **Off** the Video Share Alerts which play a tone.
 - **Auto Record:** allows you to turn **On** or **Off** the Auto Record, which records the video automatically on a Video Share call on starting a Live Video Share session.
 - **Recording Location:** allows you to set whether video recorded is stored on the **Phone** or on the microSD **Memory Card**.
3. Touch .

Record Audio Settings

To configure the filename and maximum length for a recording.

1. From Idle mode, touch  → **Settings** → **Applications** → **Settings** → **Record Audio**.

— or — Touch either of the following fields and edit the information:

 - **Default Name:** allows you to use the on-screen keypad to enter a prefix name of all recorded audio files. Touch  to store the new name.

- **Recording Time:** allows you to choose the maximum limit allowed for the recorded audio file (1 Minute, 5 Minutes, 10 Minutes, 15 Minutes, 30 Minutes, 60 Minutes, or Limit for MMS).

2. Touch .

Calendar Settings

To configure the starting day and view used when opening the Calendar application.

1. From Idle mode, touch  → **Settings → Applications Settings → Calendar.**
2. Touch either of the following fields and edit the information:
 - **Starting Day:** allows you choose which day mark the first day in your calendar week (Sunday or Monday).
 - **View by:** allows you to choose the default view for appointments used by the Calendar application when launched (Month, Week, or Day).
3. Touch .

Address Book Settings

To configure your Address Book application.

1. From Idle mode, touch  → **Settings → Applications Settings → Address Book.**
 — or —
 From Idle mode, touch  → **Address Book → Address Book Settings.**
2. Touch one of the following fields and edit the information:
 - **My Business Card:** creates and attaches a virtual business card to be used as an attachment to outgoing messages. For more information, see *“Attaching Business Card to a Message”* on page 108.
 - **Speed Dial:** allows you to set up Speed Dial for your contacts. For more information, refer to *“Making a Call Using Speed Dial”* on page 33.
 - **Save New Contacts to:** defines the destination for new contact entries (Phone, SIM Card, or Always Ask).
 - **View Contacts from:** to filter the display of current Address Book entries. Options include: All, Phone, or SIM Card.
 - **AT&T Address Book:** message displays: **Processing...AT&T Address Book registration will begin momentarily. Please wait while your device connects to AT&T** Select **OK**. Sign Up screen displays, if you are not yet signed up.

- **Own Number:** to display your current phone number.
 - **Fixed Dial Contacts:** assigns phone numbers as FDN entries.
 - **Used Space:** displays the memory storage allocation (total available and remaining) within both your Phone, SIM card, and FDN list.
 - **About:** displays AT&T Address Book version information.
3. Touch  (not all of the above options require that you save).

Memory Management

You can easily check the amount of memory being used for storing data, such as messages, media, calendar data, or contacts entries. You can also delete any selected information from your phone:

1. From Idle mode, touch  → **Settings** → **Memory Management**.
2. Touch any of the following options:
 - **Clear Phone Memory**
 - **Memory Card Details**
 - **Used Space**

Clear Phone Memory

From this menu you can clear the memory for My Stuff, Messaging, Address Book entries, Calendar entries, Tasks, Memos or All Licenses.

You can select All to clear everything listed.

Note: To completely remove any personal information stored on your device, see “*Precautions for Transfer and Disposal*” on page 187.

1. From Idle mode, touch  → **Settings** → **Memory Management** → **Clear Phone Memory**.
2. Place a checkmark alongside those applications you wish to clear by touching individual applications
— or —
Touch **All** to clear all the memory settings.
3. Touch .
4. Enter the user-defined password and touch **Confirm** to clear the memory settings. For more information, refer to “*Change Phone Password*” on page 61.
5. At the **Clear?** prompt, touch **Yes** to confirm or **No** to cancel.

Memory Card Details

Allows you to view specific information related to the current microSD card being used for storage.

- From Idle mode, touch  → **Settings** → **Memory Management** → **Memory Card Details**.

Note: Memory card is optional.

Formatting the Memory Card

Allows you to format your memory card. All information on the memory card will be removed and new folders will be created for your content. New folders include Music, Tones, Recorded Audio, Picture, Video, and Other Files.

1. Ensure that your memory card is inserted properly in your phone. For more information, refer to “*Installing the Memory Card*” on page 6.
2. From Idle mode, touch  → **Settings** → **Memory Management** → **Memory Card Details**.
3. At the bottom of the screen, touch **Format**.
4. The prompt, **Formatting will erase all data. Format now?** is displayed. Touch **Yes** to continue or **No** to cancel.
5. After formatting, the **Memory Card Details** screen appears.
6. Touch **Rename** if you would like to rename your memory card.
7. When you are finished, press  to return to Idle screen.

Check the Used Space

1. From Idle mode, touch  → **Settings** → **Memory Management** → **Used Space**.
2. Select one of the following storage categories to view the contents of a category’s memory:
 - **Shared Memory**
 - **Messaging**
 - **My Stuff**
 - **Calendar**
 - **Tasks**
 - **Memo**
 - **Address Book**
3. When you are finished, press  to return to Idle screen.

Software Update

The Software Update feature enables you to use your phone to connect to the network and download any new phone software directly to your phone.

1. From Idle mode, touch  → **Settings** → **Software Update** → **Check for Update**.
2. Follow the on screen instructions.

Phone Information

This option allows you to see the phone number on the SIM card (within the phone), the Manufacturer, the Model number, the Device ID, the Software version, the Language, and the Client Version. This information may be necessary if talking to Customer Service in the event of a problem.

1. From Idle mode, touch  → **Settings** → **Phone Information**.
2. When you are finished, press  to return to Idle screen.

Section 7: Mobile Video

Your phone allows you to access the Internet and download media files directly to your phone. These media files are displayed using the built-in Media Player. Mobile Video is a media service which allows you to stream media content (Weather, News, Sports highlights, etc.) directly to your phone.

1. In Idle mode, touch  → **Mobile Video** to launch the default Mobile Video homepage. This homepage provides you with access to content categories & settings:
 - **My Favorites:** allows you to choose from recently uploaded video clips from media providers.
 - **Video Categories:** provides some general content categories from which to begin searching for media: Entertainment, Sports, News & Weather, Music and Kids & Cartoons.
 - **Customize Mobile Video:** allows you to access the Mobile Video Settings menu where you can configure most of the settings associated with Mobile Video.
 - **Parental Controls:** provides you with settings which can be configured to restrict certain media content from being displayed on the phone.
 - **MEdia Net:** exits from the Mobile Video application and launches the MEdia Net homepage.

- **Help:** provides basic on-line assistance which answers most of the common issues users come across while using this feature.
2. Select from one of the available categories by touching an option.

Viewing a Video Clip

1. In Idle mode, touch  → **Mobile Video**.
2. Select the video clip by touching the entry from within the Favorites section.
3. After the stream has been buffered into memory, you can choose to either pause or play the content.
 - Touch the Pause/Play button to toggle between the two functions.
 - Touch the Go Back button () to be taken back to the Mobile Video homepage.

Using the Video Categories

This grouping of media categories provides access to an additional listing of streaming media. Where the previous Favorites list of media stream can be user edited and updated, this list of categories is defined by Mobile Video's homepage and cannot be changed.

Customizing Mobile Video

Updating the Favorites List

The list of media providers which appear in the Favorites section of the Mobile Video homepage can be edited and changed by the user.

1. In Idle mode, touch  → **Mobile Video** → **Customize Mobile Video** → **Edit My Favorites**. The screen is composed of two sections:
 - Manage My Favorites: lists the current Favorites list and gives you the option of opening the page or deleting it from your Favorites.
 - Add to Favorites: selecting an item moves it to the Favorites list.
2. Do one of the following:
 - Touch  to delete a Favorite.
 - Touch  to move a Favorite up on your list.
 - Touch  to move an item to the Favorites.

Adding a Video Alert

When new media is available for upload to your phone (such as breaking news), you can set your phone to notify you of the new available content.

1. In Idle mode, touch  → **Mobile Video** → **Customize Mobile Video** → **My Video Alerts** → **Add to My Alerts**.

2. Touch the red circle next to any of the available alert services listed within the Add to My Alerts section of the page (ex: Breaking News).

My Purchases

The Mobile Video homepage can be used to shop for streaming multimedia content. The **My Purchases** section can help keep track of your purchase history and view any new resale products.

1. In Idle mode, touch  → **Mobile Video** → **Customize Mobile Video** → **My Purchases** → **Purchase History**. This provides you with an on screen listing of your “to date” purchase history for media content.
2. Touch **My Account**. This provides you with an on-screen description of your account details.

Parental Controls

Your phone can be configured to block both purchased and streamed media content. Before filtering, you must first establish a pin/password and a contact e-mail address. Once those have been established, you can the two available filter options:

- **Content Filters:** let you restrict access to inappropriate content both on and outside of MEdia Net.

- **Purchase Blocker:** lets you restrict the ability to buy ringtones, downloads, games, etc., from MEdia Net on this phone.

Setting up Parental Controls

1. In Idle mode, touch  → **Mobile Video** → **Customize Mobile Video** → **Parental Controls** to access the MEdia Net parental setup fields.
2. Touch each of the following fields and use the on-screen keypad to enter the information: **PIN**, **Re-enter**, **contact email address**.
3. Touch **Save** and allow a few minutes for your information to be received and accepted by MEdia Net. You can then use this information to activate the parental filters.

Configuring the Filters

1. In Idle mode, touch  → **Mobile Video** → **Customize Mobile Video** → **Content Filters** → **On** button to toggle the On/Off state.
2. Touch **Purchase Blocker** → **On** button to toggle the On/Off state.
3. Touch **OK** to activate the filter.

Section 8: Understanding Your Address Book

This section allows you to manage your contacts by storing their name and number in your Address Book. Address Book entries can be sorted by name, entry, or group.

You can also synchronize your phone Address Book with AT&T Address Book, the network backup service.

Now, managing and keeping your contacts safe and accessible has never been easier!

Note: When storing an Address Book entry into your SIM card, note that only the name, phone number, group, and slot location are initially offered as fields (some SIM cards may allow an address as well). Although you may add additional fields to a SIM entry; if you move that same SIM card to another model phone, it is possible that only the basic information will be transferred.

Address Book Settings

For information on your Address Book settings, see “*Address Book Settings*” on page 71.

AT&T Address Book Activation

Upon activation of AT&T Address Book, the network backup service, contacts are automatically synchronized between your phone and online address book. The changes you make are automatically saved and if you ever upgrade, damage, or lose

your phone, you can easily restore your contacts onto your new phone.

To activate the AT&T Address Book, follow these steps:

1. Touch  → **Address Book** → **Address Book Settings** → **AT&T Address Book**.
2. Read the Terms and Conditions and touch **Accept** to continue or **Decline** to cancel.
3. At the **Do you want to import the contacts from SIM** prompt, press **Yes** if you have contacts on your SIM card and you would like to add them to your address book. Otherwise, touch **No**.
4. Touch **OK**.
5. Touch **OK** again.

Your Address Book is displayed. Your AT&T Address Book is Ready to Use. You can now make a call or send a message through your Address Book. You can also manage your Address Book on the web at:

<http://www.att.com/addresssbook>.

Adding a New Contact

Use the following procedure to store a new contact to your Address Book.

Saving a Number from the Idle screen

1. Touch  →  (**Create Contact**). This opens the **Add New Contact** screen.
2. Touch the image icon and assign a picture to the new entry by choosing one of three options:
 - **Remove** although not an option with a new entry, deletes any previously assigned image.
 - **Take Photo** to use the camera to take a new picture and assign it to this entry.
 - **Caller Image** to retrieve a previously stored image from your Pictures folder and assign it to this entry. Select an image and touch **Add** to assign the image and return to the previous Add New Contact screen.
3. Touch the **First Name**, **Last Name**, and **Display Name** fields and use the on-screen keypad to enter names for the new entry, and touch . (For more information, refer to “*Entering Text*” on page 44.)
 - **First Name**: allows you enter a first name for this entry.
 - **Last Name**: allows you enter a Last name for this entry.
 - **Display Name**: is automatically filled with the First Name + Last Name. You may enter a different display name if you wish. The Display Name is what appears when you receive a call from this contact.
4. Touch the **Mobile** field and use the on-screen keypad to enter the phone number for the entry, and touch . Touch  if you want to change the category type of the entry. Choose from among: **Mobile**, **Home**, **Work**, **Fax**, or **Others**.
5. Use your fingertip to scroll down the screen and touch any of the remaining fields to update their information. Touch , if required, to save your updates. Available fields consist of:
 - **Email**: adds a contact email address for this entry.
 - **Group**: assigns this contact to group. Touch a group type to complete the assignment. For more information, refer to “*Creating New Group*” on page 85.
 - **Ringtone**: assigns a ringtone for this contact information. Choose from **Tones**, **Music**, or **Recorded Audio** categories. Touch a music file to play a short sample and then touch **Add** to complete the assignment.

- **Vibration:** assigns a vibration type for this contact information. Touch a setting (**Vibration 1 - 5**) to be provided with a sample. Touch **Save** to complete the assignment.
- **Birthday:** assigns a calendar date for the contact's birthday. Touch **Save** to store the new date. For more information, refer to *"Scrolling Through Field Entries"* on page 22.
- **Note:** allows you enter notes associated with this contact. For more information, refer to *"Entering Text"* on page 44.

6. Touch  to store the new entry into the Address Book.

Note: By default, Contacts are saved on the phone. To copy them to a SIM card, see *"Copying an Entry to the SIM Card"* on page 87.

Adding More Fields to a Number

While in the process of creating a new entry or editing an existing contact, you can add additional fields to the entry's list of information.

1. Within the open Contact Screen, touch  (**Add More Fields**).
2. Place a checkmark adjacent to an individual field by touching each entry.
— or —

Place a checkmark alongside all entries by touching **All**.
Additional fields include:

- **Mobile:** adds an additional Mobile number field for the entry.
- **Home:** adds an additional Home number field for the entry.
- **Work:** adds an additional Work number field for the entry.
- **Fax:** adds an additional Fax number field for the entry.
- **Others:** adds an Others field for the entry.
- **Email:** adds an additional Email address field for this entry.
- **URL:** adds a Web site's URL to the entry.
- **DTMF:** adds a DTMF tone string for use with this entry.
- **Group:** creates an additional group field for group assignment.
- **Message Tone:** adds a field used to assign a message tone that will sound when messages are received from this contact.
- **NickName:** adds a field that can be used to enter a nickname for the entry. The NickName is not displayed when calls are made to or received from the contact.
- **Company:** adds a Company field for this entry.
- **Job Title:** adds a Job Title field for this entry.
- **Address - Home:** adds a field used to assign a physical home address for this entry.
- **Address - Work:** adds a field used to assign a physical work address for this entry.

3. Touch **Add** to store the new fields to the entry and return to the previous screen.
4. Touch the new fields to enter information.

Deleting Fields From a Number

1. Within the open Contact Screen, touch **Edit** → **Delete Fields** (**Delete Fields**).

Note: Only certain new fields may be deleted. If you have not added any new fields to the contact, the **Delete Fields** button will not appear.

2. Touch each field you wish to delete and a checkmark will appear.
 3. Touch **Delete**.
 4. Once you have made your deletions, touch **Save** to store the contact and its fields.
- Or —
- Touch **Add More Fields** to add more fields.


Saving a Number During a Call

1. Touch **Dial** and use the on-screen keypad to enter your number.
2. Press  or touch **Call** to initiate the call.

3. Touch **More** → **Save to Address Book** → **New**.
 - Select **Update** if this was a previously created entry and your are adding the current number to the previous entry.
4. Enter the desired information, see “Saving a Number from the Idle screen” on page 79.

Saving a Number After a Call Has Ended

1. Press  to bring up the recent calls screen.
— Or —
Touch **Menu** → **Tools** → **Recent Calls**.
2. Touch a phone number from the list to reveal the Details page (shown below) for the phone entry.

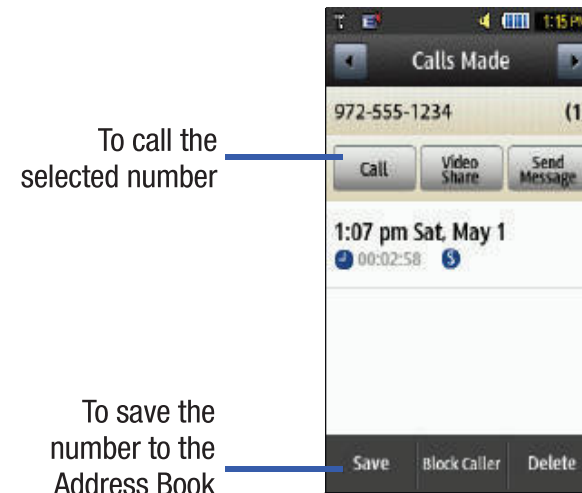

3. Touch  → **New**.
 - Select **Update** if this was a previously created entry and you are adding the current number to the previous entry.
4. Enter the desired information, see “*Saving a Number from the Idle screen*” on page 79.

Adding Pauses to Contact Numbers

When you call automated systems, you are often required to enter a password or account number. Instead of manually entering the numbers each time, you can store the numbers in your Contacts along with special characters called pauses.

To add a pause to a Contact:

1. Touch , and then touch the name to open the Contact.
2. Touch  and then select the desired phone number.
3. Touch the **Phone Number** field and then touch the screen at the place where the additional numbers need to be added.
4. Press and hold  to add a two-second pause, and use the keypad to enter the additional numbers.

Note: If more than a two-second pause is required, press and hold  as many times as needed to add additional two-second pauses.

5. Touch .

6. Touch  to store your changes.

Using Contacts

Dialing a Number from Address Book

Once you have stored phone numbers in the Address Book, you can dial them easily and quickly by either using their SIM card location number or by using the Search field to locate the entry.

Note: The default Address Book entries are: AT&T *Now - *669, AT&T Check Bill Balance - *225#, AT&T Customer Care - 1-800-331-0500, AT&T Directory Assistance - 411, AT&T Music ID - #43, AT&T Pay My Bill - *729, AT&T View Data Usage - *3282#, AT&T View My Minutes - *646#, and AT&T Voice Dial - *08.


Finding an Address Book Entry

You can store phone numbers and their corresponding names onto your SIM card and phone's onboard memory. The two locations are physically separate but are used as a single entity, called the Address Book.

Depending on your particular SIM card, the maximum number of phone numbers the SIM card can store and how they are stored may differ.

1. In Idle mode, touch  → **Address Book** → **Contacts**.

2. Touch the **Contacts Filter** field (upper-right) and select Contacts. Additional entry categories include Groups and Favorites.
3. Within the Contacts list (sorted alphabetically), drag the **Power Search** tab to quickly “thumb through” the alphabet. When you get to the letter that begins with the first name you are looking for, release the tab and then scroll to the contact you are searching for.

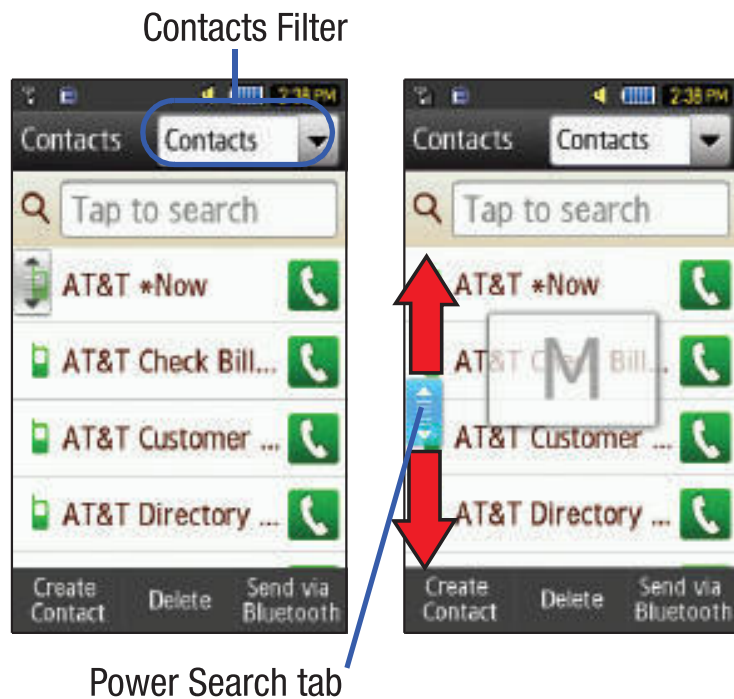


4. When found, touch  adjacent to the entry to make the call.

Address Book Entry Options

While in the details page for a specific entry (seen below) you have two sets of options, each accessible from two of the on-screen buttons.

1. Touch  and touch an Address Book name from the list to reveal the **Entry Options** page (shown below) for the phone entry.

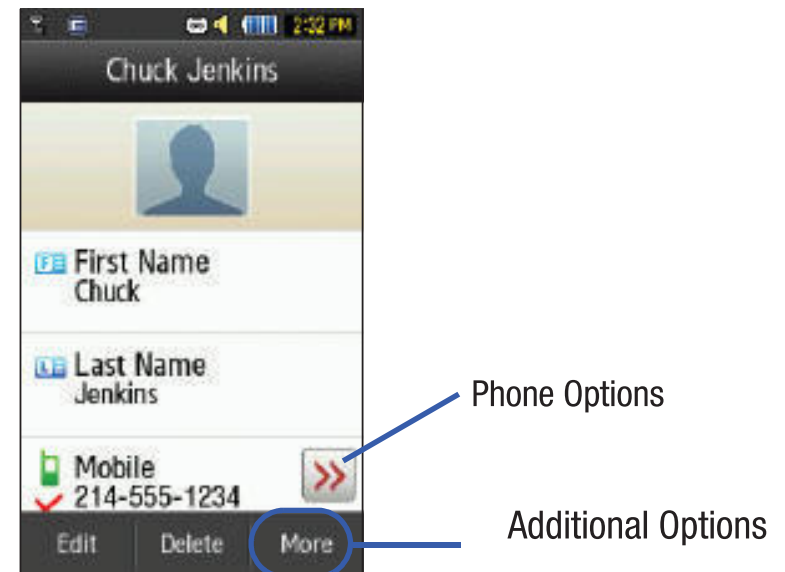

2. Touch  to reveal the first set of options:
 - **Call:** allows you to call a currently selected entry.
 - **Video Share:** allows you to share either a live video or recorded video with a phone that is similarly equipped, and if both SIMs have the feature enabled.
 - **Send Message:** allows you to send a text message or a multimedia message to the selected entry.
3. Press  to return to the previous Entry Options page.
4. Touch  to alter the properties of the current entry such as: Name, Group or location. Touch  to store your changes.
5. Touch  to delete the current address book entry from a target location such as the Phone and/or SIM card.
6. Touch  to reveal the second set of entry options:
 - **Print via Bluetooth:** allows you send the selected contact entry information to a Bluetooth compatible printer.
 - **Send Business Card via:** allows you to send a message to the selected entry which contains the information from an Address Book Business Card entry which you have on file. This can be sent as either a message or via Bluetooth.
 - **Add to Favorites:** allows you add the current contact entry to your favorite list of callers (Favorites list).

AT&T Address Book Settings

This feature allows you to synchronize your phone Address Book information with AT&T Address Book, the network backup service. If you were using AT&T Address Book on your previous phone, merge or replace contacts on this phone with your AT&T Address Book contacts.

- In Idle mode, press **Menu** → **Address Book** → **Address Book Settings** → **AT&T Address Book**.

The following message displays: **Processing...AT&T Address Book registration will begin momentarily. Please wait while your device connects to AT&T.** Select **OK**. The Sign Up screen displays, if you are not yet signed up.

Finding My Own Phone Number

This function is a memory aid, which you can use to check your own phone number if you need to do so.

- In Idle mode, touch  → **Address Book** → **Address Book Settings** → **Own Number** → **<voice line #>**.

FDN Mode

FDN (Fixed Dialing Number) mode, if supported by your SIM card, restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers stored in the FDN list on the SIM card.

Note: FDN Mode must be set to **On** in the **Menu → Settings → Phone → Security → Fixed Dialing Mode** option before you can add, change, or delete contacts on the FDN List.

Changing the FDN mode Status

1. In Idle mode, touch  → **Settings → Phone → Security**.
2. Scroll down to the **Fixed Dialing Mode** field and touch **On** (to enable fixed dialing) or **Off** to disable the option.

Important!: With Fixed Dial Mode enabled, you will NOT be able to dial any number other than those created Fixed Dial Numbers.

Creating New FDN Numbers

With the Fixed Dial mode On, follow these procedures:

1. In Idle mode, touch  → **Address Book → Fixed Dial Contacts → Create FDN**.

Note: If FDN is Off: touch **Menu -> Address Book -> Address Book Settings -> Fixed Dial Contacts -> Create FDN**. Then follow steps 2-7.

2. Enter your PIN2 password and touch **Confirm**. This number is provided to you by your Service Provider.
3. Touch **Name** and use the on-screen alphanumeric keypad to enter a name for this FDN contact. Touch .

4. Touch **Phone Number** and use the on-screen numeric keypad to enter a contact phone number for this FDN contact. Touch .
5. Touch the SIM card location field to then use the on-screen numeric keypad to enter a location value for the entry on the SIM card. Touch .
6. Touch  to store the new FDN entry.
7. Press  to return to Idle mode.

Group Settings

Creating New Group

1. In Idle mode, touch  → **Address Book → Groups → Create Group**.
2. Touch the **Group Name** field and use the on-screen keypad to enter a new group name. For more information, refer to “*Entering Text*” on page 44.
 - Touch  to store the new group name.
3. Touch the **Group Picture** field and choose a location for the new image:
 - **Reset:** although not an option with a new group, deletes any previously assigned image.

- **Take Photo:** to use the camera to take a new picture and assign it to this entry.
 - **Group Picture:** to retrieve a previously stored image from your Pictures folder and assign it to this group entry.
4. Touch **Group Ringtone** to choose an audio file for assignment to this new group. Choose from **Tones**, **Music**, or **Recorded Audio** categories.
 - Touch a music file to play a short sample and then touch **Add** to complete the assignment.
 5. Touch **Group Vibration** to choose a vibration type for assignment to this new group. Choose from five vibration options (**Vibration 1-5**).
 - Touch a vibration option to activate a short sample and then touch **Save** to complete the assignment.
 6. Touch  to store the new Group category.

Adding an Entry to a Group

1. In Idle mode, touch  → **Address Book** → **Groups**.
2. Touch a group entry.
3. Touch **Add Member** and place a checkmark alongside those entries you wish to add to the current Group.
4. Touch **Add**.

Removing an Entry From a Group

1. In Idle mode, touch  → **Address Book** → **Groups**.
2. Touch a group entry.
3. Touch **Remove Member** and place a checkmark alongside those entries you wish to remove from the current Group.
4. Touch **Remove**.

Editing a Caller Group

To edit a Group entry, there must be at least one member as part of the selected group.

1. In Idle mode, touch  → **Address Book** → **Groups**.
2. Touch a current Group entry.
3. Touch  → **Edit Group**.
4. Make modifications to the **Group Name**, **Group Picture**, **Group Ringtone**, **Group Vibration** fields. For more information, refer to “*Creating New Group*” on page 85.
5. Touch  to store your changes.

Address Book Favorites

Once you have stored phone numbers in the Address Book, you can add them to your Favorites list.

Adding Favorites to your Address Book

1. In Idle mode, touch  → **Address Book** → **Favorites**.
2. Touch .
3. Touch the Contacts you want to add to your Favorites and a checkmark will appear in the box next to the contact.
4. Touch .

Removing Favorites from your Address Book

1. In Idle mode, touch  → **Address Book** → **Favorites**.
2. Touch .
3. Touch the Contacts you want to remove from your Favorites.
4. Touch .

Changing the Order of your Favorites

1. In Idle mode, touch  → **Address Book** → **Favorites**.
2. Touch .
3. Drag the entry to the desired location in your Favorites.
4. Touch .

Managing Address Book Entries

You can copy, delete, and view the memory status for the Phone and SIM entries on your phone.

Copying an Entry to the SIM Card

Note: When storing an Address Book entry into the SIM card, note that only the name, phone number, group, and slot location are initially offered as fields (some SIM cards may allow an address as well). To save additional information for a particular contact, such as other phone numbers, or e-mail, it is important to add new fields to that Contact information. It is also important to note that if you move the SIM card to another phone that does not support additional fields on the SIM card, this additional information may not be available.

1. In Idle mode, touch  → **Address Book** → **SIM Management** → **Copy Contacts to SIM**. The phone then displays a list of your current contacts.
2. Place a checkmark adjacent to those entries you wish to have copied to the SIM card.
 - Repeat this step for all individual entries you wish copied to the SIM or touch **All** to place a checkmark alongside all entries.
3. Touch **Copy**. The selected numbers are copied to the SIM card.
4. Press  to return to Idle mode.

Copying an Entry to the Phone

1. In Idle mode, touch  → **Address Book** → **SIM Management** → **Copy Contacts from SIM**.

The phone then displays a list of your current contacts held on the SIM card.

- If the entry's associated Group graphic has a SIM location icon on it, then the entry exists on the SIM card. This is the type you can duplicate.
 - If the entry's associated Group image does not have a SIM location icon, then this entry currently exists on the phone.
2. Place a checkmark adjacent to those entries you wish to have copied from the SIM card to the Phone.
 - Repeat this step for all individual entries you wish copied to the Phone or touch **All** to place a checkmark alongside all entries.
 3. Touch **Copy**.
 4. When you are finished, press  to return to Idle mode.

Deleting All of the Address Book Entries

You can delete all Phone or SIM entries from your phone's memory.

Deleting all entries from the Phone

1. In Idle mode, touch  → **Address Book** → **Contacts** → **Delete**.

2. Touch the **All** field to place checkmarks alongside all the current Address Book entries.
3. Touch **Delete**.
4. At the **Delete?** prompt, touch **Yes**.
5. Enter your password and touch **Confirm**.
6. When you are finished, press  to return to Idle mode.

Deleting all entries from the SIM

1. In Idle mode, touch  → **Address Book** → **SIM Management** → **Delete Contacts from SIM**.

Touch the **All** field to place checkmarks alongside all the current Address Book entries.

2. Touch **Delete**.
3. At the **Delete?** prompt, touch **Yes**.
4. Enter your password and touch **Confirm**.
5. When you are finished, press  to return to Idle mode.

Note: Entries on the FDN Address Book must be deleted from within the FDN Address Book

Using the Service Dialing Numbers

You can view the list of Service Dialing Numbers (SDN) assigned by your service provider. These numbers may include emergency numbers, customer service numbers, and directory inquiries.

1. In Idle mode, touch  → **Address Book** → **Service Numbers**.
2. Scroll through the available numbers.
3. To dial the number displayed, press .

Note: This menu is available only when your SIM card supports Service Dialing Numbers.

Checking the Address Book's Used Space

You can check how many names and numbers are stored in the Address book, in both SIM card and the phone memory. You can also see the capacity of both memories.

1. In Idle mode, touch  → **Address Book** → **Address Book Settings** → **Used Space**.
 - **Phone:** tells you how many Address Book entries (out of a possible 2000) are in use.
 - **USIM:** tells you how many entries are in use on your SIM card.

- **Additional No. 1:** if you have added additional numbers to contacts saved on the SIM card, this is a counter of the number of SIM contacts with a second number saved on your SIM card.
- **Additional No. 2:** if you have added additional numbers to contacts saved on the SIM card, this is a counter of the number of SIM contacts with a third number saved on your SIM card.
- **Email:** tells you how many email entries exist.
- **FDN:** tells you how many entries are in use on your FDN SIM memory.

Note: Depending on the SIM card, the number of entries may differ.

2. Once finished, press  to return to Idle mode.

Section 9: My Stuff

The topics covered in this section include Applications, Audio, Games, Picture, Tools, Video, Other Files, and Used Space.

1. Touch  → **My Stuff**.
2. Select from one of the following functions: **Applications**, **Audio**, **Games**, **Pictures**, **Tools**, **Video**, **Other Files**, or **Used Space**.
3. If you have a memory card in your phone, touch the filter drop down (upper-right of My Stuff page) to filter the entries based on their current location (**All**, **Phone**, or **Memory Card**).

My Stuff Functions

This page provides you with several functions that you can activate from virtually any page within the My Stuff directories. Most editing features are only applicable to those files/folders that are not locked.

1. Touch  → **My Stuff**.
2. Select from the following:
 - **Create Folder**: create a new My Stuff folder on either the Phone or Memory Card.

- **Manage**: allows you to move or copy an existing unlocked folder or file.
- **More**: provides you with the ability to Delete, Rename, Sort by, Send via Bluetooth, Bluetooth Visibility, and Lock/Unlock certain files or folders.

Creating a New Folder

1. Touch  → **My Stuff** → **Create Folder**.
2. If you have a microSD card inserted, you are asked where you want the new folder created. Select **Phone** or **Memory Card**.
3. Use the on-screen alphanumeric keypad to create a new name for the folder and touch  once your are done.

Managing Files and Folders

1. Touch  → **My Stuff** → **Manage**.
2. Select a migration option by touching either **Move** or **Copy**.
 - **Move**: takes an unlocked file/folder and moves it to a new location.
 - **Copy**: takes the selected file/folder and duplicates it in the new location.

3. Select an unlocked entry by touching it to then place a checkmark next to the entry.
 - Touch **All** to place a checkmark alongside all available/unlocked items.
4. Once complete, touch **Move/Copy**.
5. Touch **Phone** or **Memory Card** depending on where you want to copy or move the files to.
6. Select the folder to copy or move the files to. Touch **New folder** to create a new folder.
7. Touch **Paste here/Move here** to copy or move the files.

More Functionality

1. Touch  → **My Stuff** → **More**.
2. Select an on-screen option:
 - **Delete**: erases selected files/folders.
 - **Rename**: renames the selected files/folders.
 - **Sort by**: sorts the current available files and folders using either: Date, Type, Name, or Size.
 - **Send via Bluetooth**: sends a selected file via Bluetooth to another compatible device.

- **Bluetooth Visibility**: allows you to make specific files or folders visible to other Bluetooth devices.
- **Lock**: locks available files and folders.

Applications

The **Applications** menu option allows you to access applications and shop for applications using AppCenter.

For more information, refer to “*Applications*” on page 123.

Audio

The **Audio** option allows you to shop tones, answer tones, and music using AppCenter. You can also access previously stored (pre-recorded) audio files from your internal microSD card.

1. Touch  → **My Stuff** → **Audio**.
2. Touch an on-screen option (**Tones**, **Answer Tones**, **Music**, or **Recorded Audio**).

Tones

You can shop, download, and save to your Downloaded Ringtones folder.

1. Touch  → **My Stuff** → **Audio** → **Tones**. A menu then displays to give you the option of either shopping for tones or selecting from files previously stored to your phone.

2. Touch **Shop Tones** and select a file to download, and follow the on-screen options. (These files are downloaded and stored in the **Tones** folder.)
— or —
Touch an available entry.
3. From the playback page, touch **Set as** and select from the following options:
 - **Call Ringtone**: allows you to assign the selected ringtone for use with general incoming calls when no other caller ringtone has been assigned.
 - **Caller Ringtone**: select one of the following:
 - **Search Contact**: allows you to assign a ringtone to someone in your Contacts list.
 - **Create Contact**: creates a new contact and assign a ringtone to.
 - **Alarm Tone**: allows you to assign the tone to an alarm.

Answer Tones

You can shop and download Answer Tones, manage your Answer Tones, and access Help files. To access the **Answer Tones** menu option, use the following steps:

1. Touch  → **My Stuff** → **Audio** → **Answer Tones**.
2. Touch one of the following options and follow the onscreen instructions.

- **Shop Answer Tones**: launches AppCenter from which you can touch Shop Answer Tones, then follow the on-screen instructions to purchase a file.
- **Manage Answer Tones**: launches AppCenter from which you can assign Answer Tones to Callers and Groups, turn your greeting on or off, and shop for more Answer Tones.
- **About Answer Tones**: launches AppCenter from which you can navigate through the frequently asked questions regarding Answer Tones.

Music

This menu displays all of your purchased songs. From this menu, you can also shop for music.

1. Touch  → **My Stuff** → **Audio** → **Music** → **Shop Music** to launch AppCenter.
2. Follow the on-screen options.

Recorded Audio

This menu shows a list of saved voice memos. When a voice memo is recorded and saved, it is stored in the Recorded Audio folder. To access this menu use the following steps:

1. Touch  → **My Stuff** → **Audio** → **Recorded Audio**.
2. Touch a pre-recorded memo to begin playback.
3. To exit, press .

Creating a new audio recording

1. Touch  → **Tools** → **Record Audio**.
2. To start recording, touch .

For more information, refer to “*Record Audio*” on page 146.

Games

The **Games** menu option allows you to shop games using AppCenter. You can download new games, then save them to the **Games** folder.

For more information, refer to “*Games*” on page 123.

Pictures

The **Pictures** menu option allows you to shop for and download new graphics (using AppCenter), then save them to your **Pictures** folder. To access the Pictures menu option, use the following steps:

- Touch  → **My Stuff** → **Pictures**.

From the Picture page you can access the following menu options (see “*My Stuff Functions*” on page 90.):

- **Create Folder:** create a new My Stuff folder on either the Phone or Memory Card.
- **Manage:** allows you to move or copy an existing unlocked folder or file.

- **More:** provides you with the ability to Delete, Rename, Sort by, Send via Bluetooth, Bluetooth Visibility, and Lock/Unlock certain files or folders.

Shop Wallpapers

1. Touch  → **My Stuff** → **Pictures** → **Shop Wallpapers**. AppCenter is launched.
2. Follow the on-screen options to purchase the new image. The file is downloaded and stored in the **Pictures** folder.

Image Features

Touch a graphic from the Pictures page to display the image. From the image viewer page, you have access to both macro functions (Zoom, Edit, and Info) and menu options. If the icons and options do not appear when the picture displays, touch the screen below the picture.

- **Zoom:** allows you to magnify the current image.
- **Edit:** allows you to edit the current image by applying various image effects. For more information, refer to “*Editing Images*” on page 94.

Note: Editing is only available for unlocked images or non DRM images.

- **Information:** displays an on-screen listing of the image’s properties such as: name, format, size, etc.

- **Send:** lets you send the currently active image as part of a new multimedia message, to an external device via Bluetooth, or to Online Locker.
- **Set as:** allows you to assign the current image as either your current Wallpaper, or as a Caller Image used by a specific entry within your Address Book.
- **More:** allows you to choose from the following image options:
 - **Delete:** allows you to delete the current graphic.
 - **Rename:** allows you to rename the current graphic.
 - **Slide Show:** allows you play a slideshow using the graphics currently available from within the Pictures folder. Press  to stop the slideshow.
 - **Bluetooth Visibility:** allows you to make graphics visible to other Bluetooth devices.
 - **Print via:** allows you to make a selected graphic printable by either USB or Bluetooth printer.
 - **Lock/Unlock:** locks and unlocks graphics.
 - **Properties:** allows you to view the properties of a graphic.

Editing Images

1. Touch  → **My Stuff** → **Pictures** → <image>.

2. Touch **Edit** () → **Files** → **Open** or **Save as** (to save a renamed copy of this image).

— or —

Touch **Edit** () and select from any of the following:

- **Effects:** allows you to choose from among several effects such as: **Filter**, **Style**, **Warp** or **Partial Blur**.
- **Adjust:** allows you to adjust **Auto Level**, **Brightness/Contrast** and **Color**.
- **Undo:** allows you to undo your changes.

Tools

The Tools folder provides access to and allows you to use the Camera, Music Player, Voice Recognition, Record Audio files, set Alarms, use the Calendar features, view Recent Calls, use the Sketchpad, create Memos, create Tasks, use the Calculator, use the Tip Calculator, use the Converter (for currency, length, weight, volume, area, and temperature), view World Clock, set the Timer, and use the Stopwatch.

For more information, refer to “Tools” on page 136.

Video

This menu allows you shop for videos and to set up folders to save your videos using AppCenter.

1. Touch  → **My Stuff** → **Video** → **Shop Videos**.
AppCenter is launched.
2. Follow the on-screen options to purchase a new video. The file is downloaded and stored in the **Video** folder.

Other Files

This feature provide additional storage of other miscellaneous file types that may not fit into any of the previous categories.

- Access the Other Files menu by selecting  → **My Stuff** → **Other Files**.

Used Space

The Used Space menu option allows you to view the usage and available memory for Applications, Audio, Games, Picture, Video, and Other Files. To access the **Used Space** option, use the following steps:

1. Touch  → **My Stuff** → **Used Space**.
2. Choose from **Applications**, **Audio**, **Games**, **Pictures**, **Video**, or **Other Files**.
3. Press  to return to the **Used Space** menu.

Section 10: Camera

This section explains how to use the camera on your phone. You can take photographs and shoot video by using the built-in camera functionality. Your 2 megapixel camera produces photos in JPEG format.

Important!: Do not take photos of people without their permission.
Do not take photos in places where cameras are not allowed.
Do not take photos in places where you may interfere with another person's privacy.

Using the Camera


Taking Photos

Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the camera, then pressing the camera key.

Note: When taking a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. In Idle mode, press the Camera key  to activate the camera mode.
2. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camera at the subject.

3. Press the Camera key until the shutter sounds. (The picture will automatically be stored within your designated storage location. If no microSD is installed, all pictures will be stored on the Phone.) For more information, refer to *"Camera and Camcorder Options"* on page 97.

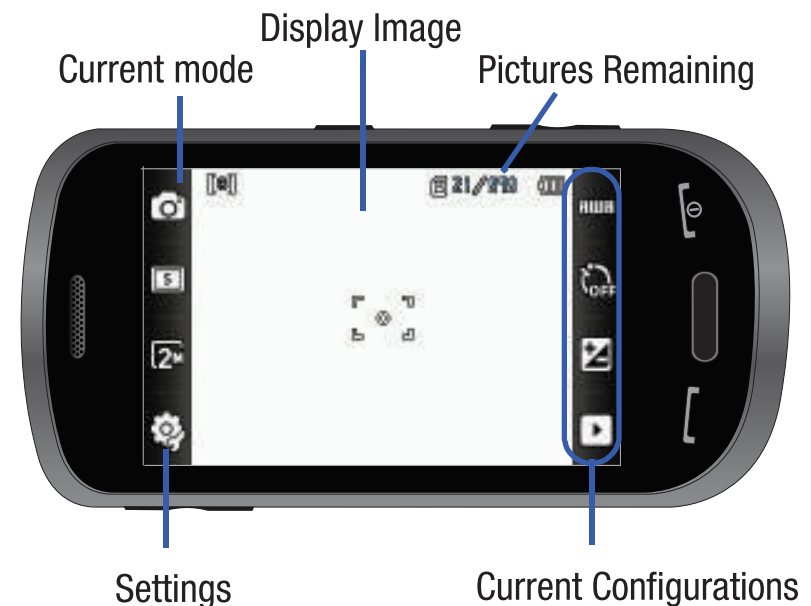

Note: The number of JPEG pictures remaining on the selected media appears in the upper-right of the screen. This is an approximate number of total pictures which can be taken at the current image size.

4. If desired, before taking the photo, you can touch on-screen icons to access various camera options.
5. When viewing a picture after you have taken it, use the **Up** and **Down** Volume keys to zoom in or out. You can magnify the picture up to x2.0.

Note: The zoom feature is not available when the camera resolution is set to 2M.

6. Press  to return to the viewfinder.

Camera and Camcorder Options

Options are represented by icons across both sides of the screen.

Note: The options will disappear after a few seconds. Touch the screen and they will reappear.



Camera/Camcorder/Video Share Mode: allows you to take a photo in various modes. Once you change the mode, the corresponding indicator appears at the top left of the display. Choose from Camera, Camcorder, or Video Share.



Recording Mode: allows you to set the camcorder recording mode to either: Normal (limited only by available space on destination location), Limit for MMS (limited by MMS size restrictions), or Video Share. (Recording Mode is only available in Camcorder mode).



Shooting mode: allows you to set the camera shooting mode options:

- **Single:** takes a single photo and view it before returning to the shooting mode.
- **Continuous:** takes a succession of consecutive photos by pressing and holding the Camera key.
- **Panorama:** takes a landscape photo by taking an initial photo and then adding additional images to the initial photo. The guide box lets you view the area where the second part of the panoramic picture should appear by highlighting the area with an orange box. If you hold the camera still when the orange box appears, the picture is automatically taken. Repeat this step for up to 6 segments. When you are done, press the Camera key.



Shooting mode (continued):

- **Smile Shot:** the camera focuses on the face of your subject. Once the camera detects the person's smile, it will take the picture.
- **Mosaic:** takes multiple photos and then groups them together into a single final photo.
- **Frame:** allows you to choose a custom frame border for your image. Choose from one of the 20 available frames.



Resolution: allows you to set the camera image size to either: 2M (1600x1200), w1M (1600x960), 1M (1280x960), 0.3M (640x480), (400x240), or (320x240).



Resolution: allows you to set the camcorder video size to either: 320x240 or 176x144.



Settings (lower left corner): allows you to customize your camera or camcorder settings. Choose from the following options:

Camera/Camcorder:

- **Effects:** allows you to change the color tone or apply special effects to the photo. Options include: None, Black and White, Sepia, Negative, or Water Color.



Camera only:

- **Exposure Meter:** allows you to set how the camera measures or meters the light source: Matrix, Center-Weighted, or Spot.
- **Night Mode:** allows you to turn night mode setting **On** or **Off**.
- **Image Quality:** allows you to set the image quality to: Superfine, Fine, Normal or Economy.



Camcorder only:

- **Video Quality:** allows you to set the video quality to: Fine, Normal or Economy.



Additional Settings tab (upper right corner):

- **Guidelines:** allows you to turn the guidelines On or Off.
- **Review:** allows you to activate the instant review feature where images are displayed immediately after review (On or Off).
- **GPS:** allows you to turn the GPS On or Off (camera mode only).
- **Audio Recording:** allows you to record audio while recording video. Selecting Off, temporarily mutes the microphone and records only video. (Only available in Camcorder mode).
- **Shutter Sound:** allows you to select a shutter sound: Shutter 1, Shutter 2, Shutter 3 or Off (camera mode only).
- **Storage:** allows you to configure the default storage location for images/videos as either Phone or Memory Card (if inserted).



White Balance: allows you to set this option to one of the following choices: Auto, Daylight, Incandescent, Fluorescent, or Cloudy.



Timer: allows you to set a timer for how long to wait before taking a picture. Options include: Off, 2 Seconds, 5 Seconds, and 10 Seconds.




Brightness: allows you to adjust the brightness level by moving the slider across the page.



Access Pictures/Video Folder Options: allows you to access the options page for a selected image/video. Options include: Play slideshow, Edit, Information, Send, Set as, Delete, and Return to previous page.

Pictures/Videos Folder Options

After you have taken a photo or shot a video, you can access various options from the Pictures/Video Folder page.

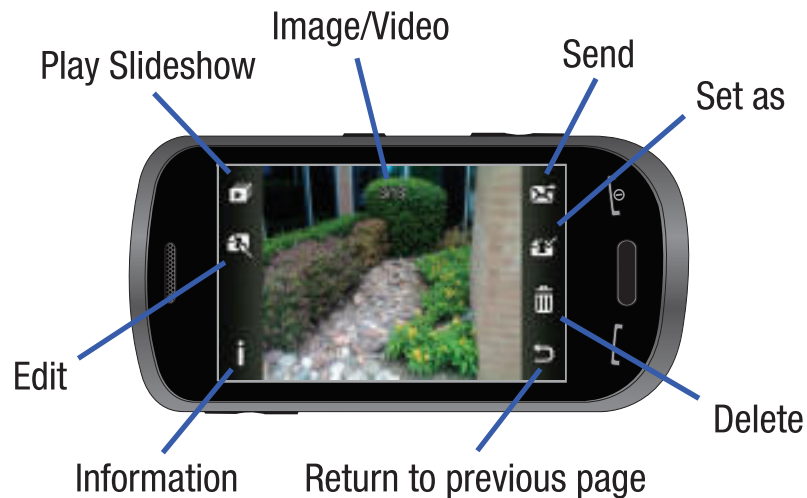

► Touch → and then touch one of the available options:

- **Play Slideshow** (): to play the available images (from the Pictures folder) within a slideshow. Touch the Up/Down arrows to set the duration of each on-screen image.
- **Edit** (): allows you to edit the current image using any of the following:
 - **Files**: allows you to Open or Save as to view your files or to rename your image.
 - **Effects**: allows you to choose from among several effects.
 - **Adjust**: allows you to adjust **Auto Level**, **Brightness**, **Contrast**, and **Color**.

– **Undo**: allows you to undo your changes.

Note: Edit and Set as features are not available when the camcorder mode is active.

- **Information** (): displays file information such as name, format, resolution and size.
- **Send** (): lets you send the currently active image as part of a new multimedia message, to an external device via Bluetooth, or to Online Locker.
- **Set as** (): allows you to assign the current image as either your current Wallpaper, or as a Caller Image used by a specific entry within your Address Book.
- **Delete** (): erases the currently selected image/video.
- **Return to previous page** (): takes you back to the previously active camera or camcorder page where you can take another photo or shoot a new video.

Accessing the Pictures Folder

1. Touch → **My Stuff** → **Pictures**.
2. Touch a photo to open it in the viewer.

Selecting and Using the Pictures Folder

Touch a picture from the Pictures page to display the image. From the image viewer page, you have access to both macro functions (Zoom, Edit, and Info) and menu options.

Note: Menu options only appear in portrait view.

- **Zoom:** allows you to magnify the current image.
- **Edit:** allows you to edit the current image by applying various image effects.
- **Information:** displays a listing of the image's properties such as: name, format, size, etc.
- **Send:** lets you send the currently active image as part of a new multimedia message, to an external device via Bluetooth, or to Online Locker.
- **Set as:** allows you to assign the current image as either your current Wallpaper, or as a display image used by a specific entry within your Address Book.
- **More:** allows you to choose from the following image options:
 - **Delete:** allows you to delete the current graphic.
 - **Rename:** allows you to rename the current graphic.
 - **Slide Show:** allows you play a slideshow using the pictures currently available from within the Pictures page. Touch the screen to stop the slideshow.
 - **Bluetooth Visibility:** allows you to toggle your current Bluetooth visibility status between Visible or Hidden (this option only appears on photographs taken with your camera).
 - **Print via:** allows you to make a selected graphic printable by either USB or Bluetooth printer.

- **Lock/Unlock:** allows you to secure a selected graphic by making it protected from accidental alterations.
- **Properties:** allows you to view the properties of a photo.

Editing a Photo

1. Touch  → **My Stuff** → **Pictures** → **<image>**.
2. Use the options and icons for editing and photo management.
3. Touch **Edit** () and select from any of the following:
 - **Files:** allows you to Open or Save as to view your files or to rename your image.
 - **Effects:** allows you to choose from among several effects such as: **Filter**, **Style**, **Warp**, or **Partial Blur**.
 - **Adjust:** allows you to adjust **Auto Level**, **Brightness**, **Contrast**, and **Color**.
 - **Undo:** allows you to undo your changes.

Assigning an Image to an Address Book Entry

1. Touch  → **My Stuff** → **Pictures** → **<image>**.
2. Touch **Set as** → **Caller Image** → **Search Contact**, touch an entry and touch  .
 - or –

Touch **Set as** → **Caller Image** → **Create Contact**, and follow the steps to create a new Address Book entry with the image already assigned. For more information, refer to “*Understanding Your Address Book*” on page 78.

Assigning an Image as a Wallpaper

1. Touch  → **My Stuff** → **Pictures** → <image>.
2. Touch **Set as** → **Wallpaper**.
3. Touch the screen to reveal the adjustment tools:
 - **Zoom slider**: touch the magnifying icons at either the top or bottom of the slider to adjust the magnification of the current image.
 - **Rotate**: orients the current image in either a landscape or portrait orientation. The bottom left of the page indicates how much of the image will be displayed as the wallpaper.
4. Touch  to store the new settings and assign the wallpaper image.

Using the Camcorder

In addition to taking photos, the camera also doubles as a camcorder allowing you to also record, view, and send videos.

Shooting Video

Tip: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by having the light source behind you.

1. In Idle mode, press the Camera key  to activate the camera mode.
2. Touch  then touch **Camcorder** ().
3. Using the phone's main display screen as a viewfinder, adjust the image by aiming the camera at the subject.
4. Press the Camera key again to begin shooting video.
5. Touch  or the Camera key to stop the recording and save the video file to your Videos folder.

— or —

Before shooting, touch  and select **Video Share** (.

- Video Share allows you to make a Video Share call by displaying a screen where you can select or input the number of a recipient that also has Video Share. (This option will only display if you have the Video Share service.) If the recipient accepts the Video Share call, you continue using the camcorder as usual.

- Touch  **Video Share** to end the Video Share session. The recorded file is saved automatically, if it is on recording and the file name is displayed. You can then continue the call or terminate it.

6. Once the file has been saved, touch  to play back your video for review.

7. Press  to return to the viewer.

Camcorder Options

Camcorder options are represented by icons across both sides of the screen.

For more information, refer to “*Camera and Camcorder Options*” on page 97.

Camcorder Options after a Video is Taken

After you have shot a video, you can use various options that appear as icons on the screen. Touch an icon to activate the function.

► Touch  →  and then touch one of the available options:

- **Play Slideshow** (): to play the available images (from the Pictures folder) within a slideshow. Touch the Up/Down arrows to set the duration of each image.

Note: Edit and Set as are not a features available when the camcorder mode is active.

- **Information** (): displays file information such as name, format, size, resolution, etc.
- **Send** (): lets you send the currently active video as part of a new multimedia message, to an external device via Bluetooth or to Online Locker.
- **Delete** (): erases the currently selected video.
- **Return to previous page** (): takes you back to the previously active camera or camcorder page where you can shoot a new video.

Accessing the Video Folder

1. Touch  → **My Stuff** → **Video**.
2. Touch a video to open it in the viewer and initiate playback.
3. To play the video, touch .

Options available from the main Videos page, and before you select it to play:

- **Create Folder:** create a new My Stuff folder on either the Phone or Memory Card.
- **Manage:** allows you to move or copy an existing unlocked folder or file.
 - **Move:** allows you to choose the Selected or Multiple videos to move.
 - **Copy:** allows you to copy a selected or multiple videos.
- **More:** provides you with the ability to Delete, Rename, Sort by, Send via Bluetooth, Bluetooth Visibility, and Lock/Unlock certain files or folders.
 - **Delete:** allows you to delete the Selected video or Multiple videos.
 - **Rename:** allows you to rename the video file.
 - **Sort by:** allows you to sort video clips by Name, Date, Size or Type.
 - **Send via Bluetooth:** allows you to send the video to a Bluetooth device.
 - **Bluetooth Visibility:** allows you to make the Selected or Multiple videos visible to Bluetooth devices.
 - **Lock/Unlock:** allows you to lock/unlock the video file to prevent deletion. Lock prevents the video clip from being deleted; Unlock allows the video clip to be deleted.

Viewing a Video

Once you have selected the video to play, you can select options in normal viewing mode and in landscape viewing mode.

Normal viewing mode options:

- **Send:** allows you to send the video clip via a multimedia message, a Bluetooth device or to Online Locker.
- **Display Mode:** allows you to select Full Screen or Full Screen in Ratio, to view your video.
 - **Full-Screen View** (

Note: Tap the Full-Screen View icon () to toggle between Full-Screen View and Full-Screen in Ratio View. Tap the viewing screen to return to the original view mode.

- **More:** allows you to select the Video Share option and to view the video file properties.
 - **Video Share:** allows you to send the video clip via Video Share.
 - **Properties:** allows you to view the properties for this video file.
- **Pause/Resume:** ( ) allows you to pause the video being played, then resume playing.
- **Previous/Next:** ( ) allows you to FF/REW the video or to jump to either the previously played video or to the next file in the Videos folder.

- **Return to Video Page** (): takes you back to the Video page.

Landscape viewing mode options:

- **Options** (): to access the following:
 - **Video Share**: allows you to send the video clip via Video Share.
 - **Send**: allows you to send the video clip via a multimedia message or a Bluetooth device to Online Locker.
 - **Display Mode**: allows you to select Full Screen or Original Size to view your video.
 - **Properties**: allows you to view the properties for this video file.
- **Full-Screen View** (): allows you to change the display mode to the full-screen option while the video is playing. The full-screen view may cause some minor distortion.
- **Original Size** (): allows you to change the display mode to the original size.
- **Pause/Resume**: ( ) allows you to pause the video being played, then resume playing.
- **Previous/Next**: ( ) allows you to FF/REW the video or to jump to either the previously played video or the next file in the Videos folder.
- **Exit**: () takes you back to the Videos page.

Section 11: Messaging

This section describes how to send or receive different types of messages. It also includes the features and functionality associated with messaging.

Types of Messages

Your phone provides the following message types:

- Text Messages
- Multimedia (Pictures and Video) Messages
- IM Messages
- Email Messages

The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's message service.

The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture messages and video messages) to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.

Important!: When creating a message, adding an image, a sound file, or a video clip to a text message changes the message from a text message to a multimedia message.

Messaging icons are displayed at the top of the screen and indicate when messages are received and their type. For more information, refer to “*Icons*” on page 14.

Creating and Sending Messages

1. Touch  → **Messaging** → **Create Message**.

— or —

Touch **Message** from the bottom of any Main menu.

2. Select a recipient by touching **Tap to Add Recipient**, then selecting an associated option:
 - **FDN Contacts:** to select a recipient from your FDN Contacts list (if FDN mode has been turned on).
 - **Enter number or email:** to manually enter a destination using a valid cellular phone number or email address.
 - **Contacts:** to select a recipient from your Contacts list (valid entries must have a wireless phone number or email address).
 - **Recent Contacts:** to select a recipient from a list of recently sent messages.
 - **Group:** to select a recipient from the Group list.

Note: If the number of recipients are less than 10, all members in the group will be added. You will need to delete any unnecessary members in the list by selecting the trash can icon and deleting unwanted entries.

3. Touch the empty text field and use the on-screen keypad to enter a message. Rotate the phone counterclockwise on its side to reveal the QWERTY keypad. For more information, refer to “*Entering Text*” on page 44.
4. Touch **OK** to save your text and return to the message screen.
5. Add more recipients by touching the recipient field.
6. Review your message and touch **Send**.

Additional Message Options

1. Touch **Insert** to reveal additional insert options.
 - **Picture:** allows you to choose an existing image from the Pictures list, then add it to your message by touching **Add**.
 - **Video:** allows you to choose an existing video from the Videos list, then select **Add**.
 - **Audio:** allows you to choose an existing audio file from the Audio list, then add it to your message by touching **Add**.
 - **Templates:** allows you to insert one of the preset message templates to the text (for example, “Where is the meeting?”).

2. Touch **More** to reveal additional options:
 - **Take Picture:** allows you to temporarily exit the message, take a photo with phone’s camera, and then add it to your message by touching **OK**.
 - **Record Video:** allows you to temporarily exit the message, record a video clip using the phone’s camera, and then add it to your message by touching **OK**.
 - **Record Audio:** allows you to temporarily exit the message, record an audio clip using the phone’s microphone, and then add it to your message by touching **Add**.
 - **Favorite URL:** allows you to temporarily exit the message, access your Favorites list then select those URLs you would like to add to the current message by touching **Add**.
 - **Contact Info:** allows you to choose an existing Address Book entry, then add it to your message by touching **Insert**.
- **Preview:** allows you to preview your current message before delivery (multimedia messages only).
- **Slide Options:** allows you to add more images to the current message but then have those configured to display as a slideshow on the recipients phone. Options include: Add Slide, Delete Slide, or Edit Style (multimedia messages only).
- **Attach Files:** allows you to add either a file, card, or other information such as a calendar entry, task, or note.
 - **File:** allows you to insert an audio file, graphic or video clip to your message as an attached file.

- **Business Card:** allows you to insert the contact information for an entry from Address Book directly to your message as an attached file.
 - **Event:** allows you to insert an Event entry from your calendar directly to your message as an attached file.
 - **Tasks:** allows you to insert an entry from your calendar tagged as a Task directly to your message as an attached file.
 - **Memo:** allows you to insert a presaved Memo (text) directly to your message as an attached file.
 - **Favorite URL:** allows you to add a web address from your Favorites list of Internet sites as an attachment to the message.
 - **Add Subject/Remove Subject:** allows you to either add or delete a subject field to the new message (multimedia messages only).
 - **Save to Drafts:** saves the current message to the Drafts folder.
 - **Save as Template:** allows you to save the message as a template so you can use it again later.
 - **Delivery Options:** allows you to configure the options associated with sending the message.
 - **Request Reports:** allows you to be alerted when the message is received and when it is read (text messages only).
3. When you have finished composing your message, touch **Send** to and confirm the recipient(s). For more information, refer to *“Creating and Sending Messages”* on page 106.

4. Touch  to deliver the message to the selected recipients.

Attaching Business Card to a Message

To attach your Business Card to an outgoing message, follow these steps:

1. Touch  → **Address Book** → **Address Book Settings** → **My Business Card**.
2. Create your Business Card by entering the information that you want (this must only be done once) and touch **Save**.
3. Touch **More** → **Send Business Card via** → **Message**.
4. Enter your message and touch .
5. Add recipient(s) and touch .

Viewing New Received Messages

1. In Idle mode, new messages are indicated by icons and a **New Messages** pop-up. For more information, refer to *“Understanding the Events Widget”* on page 30.
2. Touch the **Read/View all** button from the New Messages pop-up.

Note: If you accidentally exit from this notification screen, you will need to go to **Menu → Messaging → Inbox** to access your messages.

3. Touch a message you wish to view. The selected message appears in the display.

Tip: When viewing a text message, press the **Up** or **Down** volume keys to increase or decrease the font size of the message text. Six different font sizes are available.

4. To play a multimedia message, touch **Play**.
 - To pause playback of the multimedia message, touch **Pause**.
 - To stop playback of the multimedia message, touch **Stop**.
5. To scroll through the message (if additional text pages have been added), touch the screen and in a single motion, scroll up or down the page.
6. When you have finished, press .

Note: Messages can also be accessed by navigating to your Inbox (**Menu → Messaging → Inbox**).

Using Message Options

Message options at the Inbox level differ according to the message type, what you have done with the message, and whether you are viewing the message. Some of the main message category types include:

- **Inbox:** stores any incoming message (text or multimedia).
- **Sent:** stores a copy of the messages you sent.
- **Outbox:** contains messages until they are sent and then the message no longer displays in this box but instead displays in the Sent box.
- **Drafts:** stores unsent messages that you want to edit or send later.

► With the list of current message displayed, use any of the following menu options:

- **List by:** sort the current list based on one of the following criteria (criteria will be different depending on the type of message):
 - Sender, Read/Unread, Type, Subject, Size, or Lock/Unlock status.
- **Delete:** deletes either a single or multiple set of messages. Touch an entry from the list to place a checkmark alongside the entry and mark it for deletion. Touch  to complete the process.

► With a message open for reading, use any of the following menu options:

- **Reply (to):** allows you to compose and send a reply to the message. This option reads Reply (when replying to an SMS [Text] message), and Reply to (when replying to an MMS [Multimedia] message).

- **Delete:** deletes the current message.
- **More:** provides these additional message functions:
 - **Forward:** allows you to forward the message.
 - **Save to Address Book:** allows you to save the recipient or sender's information from the message to your Address Book as either a New or Updated entry. For more information, refer to *“Understanding Your Address Book”* on page 78.
 - **Move to Phone/Move to SIM card:** If a message is stored in the SIM card, it is saved to the phone's memory. If a message is stored in the phone's memory, it is then saved to the SIM card.
 - **Save as Template:** allows you to save text and multimedia as a template.
 - **Print via Bluetooth:** allows you to print the contents of the message on a Bluetooth compatible printer.
 - **Save Attachment:** allows you save any selected attachments. If the filename matches one you already have in your folder, you are prompted to rename the filename. This option only appears for multimedia messages.
 - **Properties:** allows you to see properties of a message such as Date, From, To, Size, Priority, Delivery Report, and Read Report. This option only appears for multimedia messages.
 - **Lock/Unlock:** allows you to secure a selected message by protecting it from accidental alterations. This option only appears for multimedia messages.

Using Mobile Email

Take your email with you! With Mobile Email you can check your Yahoo!® Mail, AOL®, AIM, Windows Live Hotmail, AT&T Mail®, Gmail, and other providers quickly and easily.

Signing into Your Mobile Email

To sign into your Mobile Email, follow these steps:

1. Touch  → **Messaging** → **Mobile Email**.
2. Touch an Email carrier of your choice.
3. Touch **Sign Up** or **I Agree** to accept the conditions of service.
4. Touch both the ID and password fields, then use your on-screen keypad to enter the account information (for example, “silverfox2”), and touch **Sign In**. You will be connected to your account's Inbox and contacts, where you can send and receive emails.
5. Follow any remaining on-screen instructions to complete the process.

Using Instant Messaging (IM)

Instant Messaging allows you to send and receive instant messages using AIM, Windows Live, and Yahoo!® communities.

Note: Before using this feature, you need to subscribe to a messaging service. For further details, contact your service provider.

Signing into Your IM Account

Although each account type differs, the initial sign in procedure is common to all supported IM clients. Before beginning the sign in procedure, you must complete the previous procedures for selecting your default IM Community to which you are subscribed.

1. Touch  → **Messaging** → **IM**.
2. Touch an IM client of your choice (AIM, Windows Live, or Yahoo!).
3. Touch **New Account** and then touch the available fields to enter your information such as Screen Name, Email Address, or Yahoo! ID, and Password. Select any additional fields.
4. Touch **Sign In** to continue.

After selecting an Instant Messaging service and signing in, you can choose from the following options:

- **Refresh Contact List:** updates and displays the IM contact information.
- **Add Contact:** allows you to add an IM contact to the list.

- **More:**

- **Settings:** allows you to change your Community settings.
- **Send Msg. to:** allows you to send an IM to a selected contact.
- **Saved Conversations:** shows permanent records of your Instant Messaging conversations.
- **IM Forwarding:** allows you to automatically sign you into Yahoo! IM on your mobile device when you log off your computer. You must sign in from your mobile device to enable this feature.
- **My Communities:** allows you to choose: AIM, Windows Live, or Yahoo!
- **Minimize:** minimizes the IM window.
- **Sign Out:** allows you to log off or disconnect from this IM session.

Deleting Messages

When your phone's memory is full, an error message displays notifying you that you cannot receive any new messages. Use the **Delete** option erase obsolete messages, freeing memory for new messages. You can delete the messages in each message folder(s) either individually or all at one time. Another option is to delete messages from all categories at once.

Deleting Messages within a Folder

1. Touch  → **Messaging**.
2. Select a message folder (**Inbox**, **Sent**, **Outbox**, or **Drafts**). A list of messages in the folder appears in the display.

3. Touch **Delete** and touch an entry to mark it for selection with a checkmark.
4. Touch either an individual message or **Select All** to place a checkmark alongside all entries in the list.
5. Touch **Delete**.

Delete All Messages

1. Touch  → **Messaging** → **Delete by Folder**.
2. Touch either a single category (Inbox, Sent, Outbox, or Drafts) or touch **All** to place a checkmark alongside all entries.
3. Touch .
4. At the “**Locked Messages**” pop-up, touch **Yes** or **Cancel** to discontinue the process.

Messaging Settings

To configure the settings for text messages, multimedia messages, Voice mails, and Push messages.

- Touch  → **Settings** → **Applications Settings** → **Messaging**.

Configuring Auto Delete Inbox Settings

When you select the Auto Delete Inbox option, inbox messages will be deleted automatically without a warning message.

1. From Messaging Settings page, touch **Auto Delete Inbox**.
2. Touch one of the available setting fields:
 - **Off**: Messages will not be deleted automatically.
 - **1 Week Old**: Read messages more than one week old will be deleted automatically.
 - **2 Weeks Old**: Read messages more than two weeks old will be deleted automatically.
 - **The Oldest When Full**: The oldest message will be deleted automatically when the Inbox is full.
3. Touch  to store the selected option.

Configuring Text Message Settings

1. From Messaging Settings page, touch **Text Message** → **Delivery Options**.
2. Touch **Keep a Copy** and touch  to store a local copy of all outgoing text messages.

Configuring the Text Message Center

1. From Messaging Settings page, touch **Text Message → Text Message Center**. These settings allow you to set the default method of text message transmission used by the Text Message Center.
2. Touch one of the available setting fields and make the necessary updates.
 - **SMS Settings:** allows you to configure the Text message delivery parameters when sending Text messages.
 - **Email Settings:** allows you to configure the Email parameters when sending this type of message.
 - **Empty:** allows you to configure a new Text Message Center profile for use when sending this type of message.

Note: It is recommended that you do not alter these fields without assistance from a customer service representative.

3. Touch  to store your settings.

Configuring Multimedia Message Settings

1. From Messaging Settings page, touch **Multimedia Message**.
2. Touch an available field and make the necessary updates.

- **Delivery Options:** to configure the parameters associated with the delivery of the multimedia message such as:
 - **Priority:** you can select the priority level of your messages.
 - **Expiration:** select the length of time you wish the message you sent to remain on the Multimedia message server.
 - **Delivery Time:** you can set a time delay before the phone sends your messages.
 - **Message Size:** you can set the maximum allowed size (30/100/300/600 KB) for a multimedia message.
 - **Get Delivery Report:** when this option is enabled, the network informs you whether or not your message has been delivered.
 - **Get Read Report:** when this option is enabled, your phone requests a reply along with your message to the recipient.
 - **Keep a Copy:** you specify whether you want to keep a copy of the sent messages on your phone.
 - **Add My Business Card:** you send your content information along with your sent messages.
- **Receiving Options:** to configure the parameters associated received multimedia messages such as:
 - **Download Type:** allows you to set the message receipt options. Choose from Auto Download, Manual, or Reject.
 - **Send Delivery Report:** when this option is enabled, the phone allows the network report to the sender whether or not the message has been received.

- **Send Read Report:** when this option is enabled, your phone sends a notification back to the recipient indicating that your message has been received.
- **Reject Anonymous:** allows you to automatically reject messages with a category of anonymous.
- **Reject Advertisement:** allows you to automatically reject messages with a category of advertisement.
- **MMS Profiles:** to configure your Network parameters (For more information, refer to “*Changing the WAP Profiles*” on page 158.)
- **Auto Resize Image:** to configure the size limits of the images added to new picture messages. Images larger than your setting, will be resized to meet this value. Options include: No Resize, 100 KB, 300 KB or 600 KB.
- **Creation Mode:** provide you with editing and formatting tools. Choose from: Free, Warning, or Restricted.
- **Default Style:** assigns the “look and feel” for the multimedia message screen with parameters such as: Background Color, Font Color (for text), Font Style, and Slide Duration (during playback).

3. Touch  to store each new settings.

Configuring Voice Mail Settings

There may be times when the voice mail access number might need to be changed. If this is necessary, please obtain the information from your service provider’s Customer Service Department.

Note: It is recommended that you do not alter these fields without assistance from a customer service representative.

1. From Messaging Settings page, touch **Voice Mail**.
2. Touch the **Voicemail** field and use your on-screen keypad to enter the new Name and Center Address (voicemail phone number).
 - **Name:** allows you to create a new descriptive name for this access number.
 - **Center Address:** allows you edit the existing number and create a new number for use when accessing the remote voicemail.
3. Touch  to store this new information.

Configuring Broadcast Message Settings (SIM Card Dependent)

This network service allows you to receive text messages on various topics, such as the weather or traffic.

Note: Please contact AT&T customer service for further details.

1. From Messaging Settings page, touch **Broadcast Message**.
2. Touch  to store this new information.

Configuring Push Message Settings

A Push Message is a method for your service provider to deliver content (e.g. images, ringtones, software upgrades, information, etc.) to mobile phones that are WAP enabled. You cannot initiate or reply to WAP Push Messages. Examples may be firmware updates or emergency notifications.

1. From Messaging Settings page, touch **Push Message**.
2. From the **Receiving Options** field touch **On** (activate) or **Off** (deactivate) to toggle the state of this feature.

Templates

Besides entering text in your message by using the keypad keys, you can speed message composition by including copies of stored text into your message.

Text Templates

1. Touch  → **Messaging** → **Templates** → **Text Templates**.
2. Touch **Create**.
3. Touch the empty text field and use the on-screen keypad to enter a message. You can rotate the phone to use the QWERTY keypad. For more information, refer to “*Entering Text*” on page 44.
4. Touch **Save** to store the text to the Text Template folder.

Multimedia Templates

1. Touch  → **Messaging** → **Templates** → **Multimedia Templates**.
2. Touch **Create**.
3. Touch the empty text field and use the on-screen keypad to enter a message. You can rotate the phone to use the QWERTY keypad. For more information, refer to “*Entering Text*” on page 44.
4. Touch **OK**.
5. Touch **Insert** to place a picture, video, or audio file into the message.
6. Touch **Add** to include the selected picture, video, or audio into the template.
7. Touch **More** → **Save as Template**.

Delete by Folder

You can delete all the messages from one or more folders at one time.

1. Touch  → **Messaging** → **Delete by Folder**.

2. Touch one or more particular folders you would like the messages deleted from. Touch **All** to have all messages deleted.
3. Touch **Delete**.
4. The **Delete?** confirmation box will display. Touch **Yes** to confirm deletion or **Cancel** to exit without deleting. Select the confirmation box to delete Locked Messages, if you wish to delete.
5. When you have finished, press .

Used Space

You can check the amount of the memory being used and the memory remaining for Multimedia, Text, Push, and Configuration Messages. The display shows the total space including the used and free space. You can also view how much space is currently occupied by each message box.

1. Touch  → **Messaging** → **Used Space**.
2. Touch a particular folder for review using the drop-down list box.
3. When you have finished, press .

Section 12: AT&T Mobile TV

The AT&T Mobile TV (Mobile TV) service allows you to watch an exciting lineup of live, simulcast or time-shifted full-length episodes of entertainment, news, sports, and kids' programming from some of the most popular networks. For a current list of channels, visit <http://www.att.com/mobiletv>.

Note: You must be in an AT&T Mobile TV coverage area to subscribe.

Subscribe to and start watching your favorite programs immediately. The Program Guide is simple to use and navigate, allowing you to change from one channel to the next quickly and easily.

Important!: Programming and available networks are subject to change. Mobile TV services may require separate subscription and activation fees. Contact AT&T for details.

For more information about AT&T Mobile TV, visit <http://www.att.com/mobiletv>.

Getting Started

1. From the Home screen touch the Widget bar on the left hand side of the display, then touch .

— or —

From the Home screen, touch  → .

— or —

From the Home screen, touch  → **Applications** → **AT&T Mobile TV**.

Note: The first time you launch Mobile TV, the device plays an introductory video, followed by the Welcome screen for subscription.

Subscribing to AT&T Mobile TV

You must be in an AT&T Mobile TV coverage area to subscribe.

1. Touch .

2. Touch **View Mobile TV Packages** to view available Mobile TV packages and pricing.

— or —

For a trial service, touch **Preview Movie TV** and watch the Movie TV Preview channel. You can preview the available Mobile TV Packages each time you launch Mobile TV.

3. To subscribe, review the basic package information and touch **Continue**. The Terms of Service screen appears.
4. To accept the Terms and Conditions, touch **Agree**. If you do not agree, touch **Disagree** and you are prompted to exit the subscription process.
5. Confirm your package subscription and touch **Submit**. Package costs are automatically added to your monthly bill.
6. Touch **Close** to return to the Mobile TV Player and begin viewing content immediately.

Using the Mobile TV Player

Navigate the Mobile TV Player and Program Guide using swipes, touch arrow buttons or the keyboard arrow keys. Swiping up/down on the display changes the channel.



Other available Mobile TV Player options:



Accesses and displays the Program Guide.



Plays the channel above.



Displays information about current programs.



Plays the channel below.



Exits Mobile TV.



Views the program in full-screen mode.

Note: When viewing a program, the touch icons and program information disappear after a few seconds. Simply tap anywhere on the screen for the icons to reappear.

While in the Mobile TV application, you will receive visual notifications for incoming calls or calendar/alarm events. For all other incoming alerts, you will receive an audible tone.

Activating Full-screen mode

 
View Mobile TV programming using the entire video screen by touching  after selecting a program.

From a current on-screen program, touch  to resize the on-screen video window to fill the entire screen. The Mobile TV Player icons and program title information are not visible.



Tapping the screen displays the icons and program title information, and the video resizes to the default viewing size.

Using the Program Guide

The Program Guide lists all scheduled programs and their respective channel names, program titles, descriptions, and program times. Touch a current program title from within the Program Guide to launch that program. Touch a future program title from within the Program Guide to display program information. If you select a program on a channel that is not included in your subscription package, you can add that package immediately by touching  and following the prompts.



To navigate through the Program Guide, swipe up/down or left/right on the display or press the keyboard Up/Down or Left/Right arrow keys. Touch the following icons to navigate to other options.



Returns to the previous screen.



Highlights the item above.



Launches the Options menu.



Highlights the item below.



Highlights the item to the left.



Highlights the item to the right.

 
Using the Options menu

The Options menu allows you to change your subscription, set parental controls, check for updates, refresh your subscription and view information about AT&T Mobile TV.

1. From the Program Guide screen, touch .
2. Follow the on-screen options and make your selection by touching the corresponding on-screen icon. Options include: Subscription Manager, Mobile TV Parental Controls, Check for updates, Refresh subscription, and About.

Subscription Manager


The Subscription Manager allows you to edit or cancel your subscription, as well as view memory usage and terms of agreement.

1. From the Program Guide screen, touch  to launch the Options menu.
2. Touch  to manage your subscription and configure available options.
3. Touch  to display available options.
4. Touch an options menu item to update settings.

Mobile TV parental controls

Mobile TV parental controls limit access to specific rated programs.

1. From the Program Guide screen, touch  to launch the Options menu.
2. Touch **Mobile TV Parental Controls**.

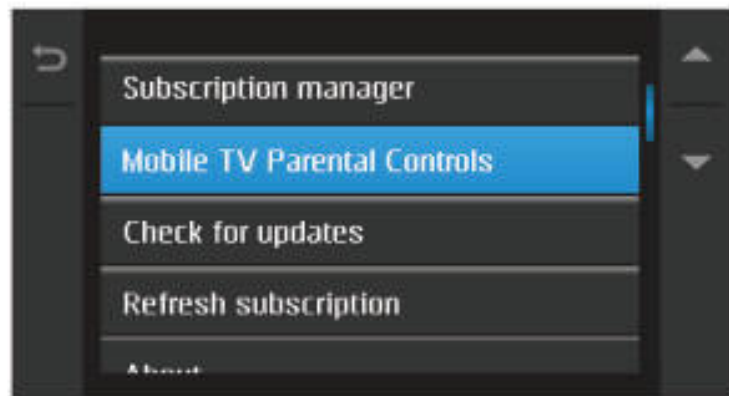

3. Touch **Parental control on/off** and touch **On**.
4. Use the on-screen keypad to create a 4-digit PIN. This PIN is required to delete, modify, or add programming packages to your subscription.
5. Touch **OK**.
6. Reenter the 4-digit PIN, and touch **OK** to store the new PIN.
7. Touch **Parental control ratings**, and select the rating levels for TV, movies, and music.



After settings are confirmed, the service assesses a program's rating before allowing it to be viewed. When a selected program exceeds the set rating, you are prompted to enter your PIN.

- Enter the correct PIN, and the program can be viewed.
- Enter the incorrect or no PIN, and the program cannot be viewed.

Keep your PIN in a safe place, and do not share it with unauthorized parties. If you forget your PIN, contact AT&T customer service for assistance.

Checking for updates

1. From the Program Guide screen, touch  to launch the Options menu.
2. Touch **Check for updates**. The system searches for updates to your Mobile TV service and automatically downloads any new software.

Refreshing a subscription

Refresh your subscription if you have more than one Mobile TV-enabled phone and you switch your SIM card between phones.

1. From the Program Guide screen, touch  to launch the Options menu.
2. Touch **Refresh Subscription**. The Mobile TV service checks your records to verify that you are receiving the correct package.

About

1. From the Program Guide screen, touch  to launch the Options menu.
2. Touch **About** to display the current version of the Mobile TV service operating on your phone.

Want more?

For more information about AT&T Mobile TV, visit:

<http://www.att.com/mobiletv>.

Section 13: Games & Applications

Games

The **Games** menu option allows you to access games that are on the phone and also shop for games using AppCenter. You can download new games and then save them to the **Games** folder.

1. Touch  → **Games**.
2. From the **Games** menu, touch a pre-installed application or touch **Shop Games**.
3. Follow the on-screen instructions.

Shop Games

1. Touch  → **Games** → **Shop Games** to launch AppCenter.
2. Follow the on-screen options. The file is downloaded and stored in the **Games** folder.

Note: Service charges and subscription purchase may be required.

For more information, refer to “*AppCenter*” on page 126.

Applications

The **Applications** menu option allows you to access applications that are on the phone and also shop applications using AppCenter. You can download applications and then save them to the **Applications** folder.

1. Touch  → **Applications**.
2. From the **Applications** menu, touch a pre-installed application or touch **Shop Applications** or **Shop GPS**.
 - **AllSport GPS:** This application allows you to track how far and fast you run, walk, jog, or bike and it tells you how many calories were burnt.
 - **AppCenter:** allows you to shop for Ringtones, Games, Cool Tools/ Apps, Videos, Color Graphics, Answer Tones, and Multimedia using the built-in browser. You can also access the MEdia Home site.
 - **AT&T FamilyMap:** AT&T FamilyMap provides peace of mind by being able to conveniently locate a family member from your wireless phone or PC and know that your family's location information is secure and private.
 - **AT&T Music:** AT&T Music is a music service that provides you access to Music Player, Shop Music, MusicID, AT&T Radio, Music Videos, Community, and Music Applications. For more information, refer to “*AT&T Music*” on page 129.

- **AT&T Navigator:** is a JAVA based driving aid that uses GPS navigation.
- **AT&T Radio:** This service allows you to stream commercial-free music, talk, news, and sports through your handset.
- **AT&T Social Net:** is a single mobile application with a live connection to your favorite social networks such as Facebook, Twitter, Myspace, and the News.
- **Loopt:** is a cellphone-based GPS sharing system that allows users to visualize one another using their cell phones and share information. Loopt also enables users to explore the world around them by connecting users with integrated content from Yelp and other applications. For more information, refer to “*Loopt*” on page 134.
- **Maps:** allows you to obtain, with your wireless device, navigation instructions to destinations throughout most of the United States and certain international destinations.
- **Mobile Banking:** You can access your banking information on your phone. Mobile Banking allows you to view balances, perform transfers, view account history and pay bills directly from your mobile phone. Some of the Mobile Banking Providers include: U.S. Bank, Sun Trust, Regions, USAA, and Citi Mobile for Cards. To see if your banking institution is included, check the Explore Providers section of the application.
- **Mobile Email:** Take your email with you! With Mobile Email you can check your Yahoo!® Mail, AOL®, AIM, Windows Live Hotmail, AT&T Yahoo!®, Gmail, and other providers quickly and easily.
- **Mobile Web:** Your phone is equipped with att.net, your access to the mobile web.
- **MobiVJ:** This is a subscription service that allows you to watch unlimited music videos using your handset.
- **My-Cast Weather:** This is a user-friendly application which runs on your mobile phone giving you access to all the weather information you need. You can check current and predicted National Weather Service data for your immediate location, your travel destination, or virtually anywhere else in the continental U.S.
- **PicDial:** This application allows you to automatically see your friends' Facebook/MySpace profile pics/status every time they call. When your friends update their profile pictures, it automatically updates on your phone.
- **Power Chat:** Power Chat is an exciting way for you to meet friends, flirt, or even setup a virtual text date. Users can chat with friends, establish a profile, share images and form a list of friends from around the world. Product Features: Big Online Community, Public Chat Rooms, Tons of Photos, Safe Moderated Chats, and Private 1-on-1 Chats.
- **WHERE:** is a downloadable mobile application that uses your current location (obtained via the built-in GPS) to help you find places of interest, things to do, and local information while you're on the go.
- **WikiMobile:** With WikiMobile, you gain access to all 2 million Wikipedia articles, including pictures and quick facts. Bookmark

your favorites for quick and easy tracking. Being a walking encyclopedia is now at your fingertips.

- **YPmobile:** The Yellowpages Mobile application provides quick and ready access to businesses, map locations, and storage of your favorite searches (My Place). This application allows you to tap into local businesses, locations, and events, connecting you to your search in real-time.
- **AT&T Mobile TV:** The AT&T Mobile TV service allows you to watch an exciting lineup of live, simulcast or time-shifted full-length episodes of entertainment, news, sports, and kids' programming from some of the most popular networks. For more information, refer to "AT&T Mobile TV" on page 123.
- **Mobile Video:** The Mobile Video media service allows you to stream media content (Weather, News, Sports highlights, etc.) directly to your phone.
- **Browser:** allows you to access the internet using att.home.

3. Follow the on-screen instructions.

Shop Applications

1. Touch  → **Applications** → **Shop Applications** to launch AppCenter.
2. Follow the on-screen options to purchase the new application. The file is downloaded and stored in the **Applications** folder.

3. To access a new application, touch the entry from the available list.

Note: Service charges and subscription purchase may be required.

For more information, refer to "*AppCenter*" on page 126.

Shop GPS

1. Touch  → **Applications** → **Shop GPS** to launch AppCenter.
2. Follow the on-screen options to purchase the new application. The file is downloaded and stored in the **Applications** folder.
3. To access a new application, touch the entry from the available list.

Note: Service charges and subscription purchase may be required.

For more information, refer to "*AppCenter*" on page 126.

Section 14: AppCenter

The AppCenter allows you to shop for Ringtones, Games, Cool Tools/Apps, Videos, Color Graphics, Answer Tones, and Multimedia using the built-in browser. You can also access the MEdia Home site.

- Touch  → **AppCenter**. This launches the AppCenter application.

Downloading Multimedia Files

You can buy a variety of multimedia files, such as ringtones, graphics, applications, multimedia content, and so on from AppCenter. Your phone has embedded links to the web sites providing you with download services, preset by your service provider.

1. Touch  → **AppCenter**.
2. Touch an on-screen entry such as: **Ringtones, Games, Cool Tools/Apps, Videos, Color Graphics**.
 - To access the homepage for answer tone shopping, touch **Answer Tones**.
 - To access the homepage for the online shopping mall, touch **MEdia Net Home**.

3. Touch the on-screen **Options** button to also access the following options. For more information, refer to “*AppCenter Options*” on page 127.

- MEdia Mall Home
- My MEdia Club
- MEdia Mall Account
- My Answer Tones
- Recently Viewed
- Exit

4. Find the item you want to download and follow the on-screen instructions to purchase it.

Ringtones

This option allows you to shop for ringtones using the built-in browser.

1. Touch  → **AppCenter** → **Ringtones**. You may have to touch an on-screen entry twice, once to select it and a second time to navigate to that page.

2. Follow the on-screen options. Purchase options include: Answer Tones, Full Track Music, Voice Tones, and Sound Effects.

Games

1. Touch  → **AppCenter** → **Games**. You may have to touch an on-screen entry twice, once to select it and a second time to navigate to that page.
2. Follow the on-screen options to purchase a game.

Cool Tools/Apps

1. Touch  → **AppCenter** → **Cool Tools/Apps**. You may have to touch an on-screen entry twice, once to select it and a second time to navigate to that page.
2. If prompted to accept a redirection, touch **Ok**.
3. Follow the on-screen options to purchase a Tool or Application.

Videos

1. Touch  → **AppCenter** → **Videos**. You may have to touch an on-screen entry twice, once to select it and a second time to navigate to that page.

2. If prompted to accept a redirection, touch **Ok**.
3. Follow the on-screen options to purchase a Video.

Color Graphics

This menu option allows you to shop for graphic images using the built-in browser. You can download new images to your

Pictures folder.

1. Touch  → **AppCenter** → **Color Graphics**. You may have to touch an on-screen entry twice, once to select it and a second time to navigate to that page.
2. Follow the on-screen options to purchase a color graphic.

AppCenter Options

The on-screen **Options** button (visible from the main AppCenter homepage). The following options appear:

- **MEdia Mall Home**: takes you back to the AppCenter home screen.
- **MyMEdia Club**: enables you to join the MyMEdia Club, where you can earn credits to be used for tones, graphics, and games in the AT&T AppCenter.

Note: A monthly charge is applied for MyMEdia membership.

- **MEdia Mall Account**: shows a history of your AppCenter account.

- **My Answer Tones:** allows you to shop for answer tones using the built-in browser.
- **Recently Viewed:** shows the most recently viewed ringtones, games, videos, graphics, and answer tones.
- **Exit:** takes you back to the Main menu.

Section 15: Music

AT&T Music provides you access to a connected music player, Streaming Music, Music Discovery tools, and allows you to purchase and download music directly from your handset.

AT&T Radio combines unlimited personal radio stations with over 75 commercial free genre stations, more than 400 local stations, news, talk, sports, and more!

AT&T Music

The AT&T Music application centers on three key music experiences: Play, Discover, and Shop.

- Play allows you to play music you own via the Library feature, and play streaming music from Genre and Personal radio stations.
- Discover offers a direct link to search the Shop section, as well as Song Match, which enables users to quickly find songs by holding their phone up to a song playing on the radio, TV, or jukebox, and Lyric Match which allows lookup of artist/song information based on song lyrics.
- Shop is a full music catalog where users can search for their favorite songs and artists; preview, buy, download, and play songs or albums directly from their AT&T mobile phone.


Getting Started

1. From the Home screen, touch  → **AT&T Music** ().
– or –

From the Home screen, touch  → **Applications** → **AT&T Music** ().

Note: The first time you launch AT&T Music, the device plays an introductory tutorial. A free 3-day trial of all AT&T Music services is included. After the trial, you may subscribe or continue accessing the free local player and Shop features.

2. A screen displays a warning that this feature uses large amounts of data and recommends subscribing to an unlimited data plan. Touch **Continue**.
3. Touch **Let's Go!** if you want to take a quick tour of AT&T Music. Touch **Next** as each screen displays. The AT&T Music Play screen displays with options that are described below.
4. Make a selection and follow the on-screen instructions.

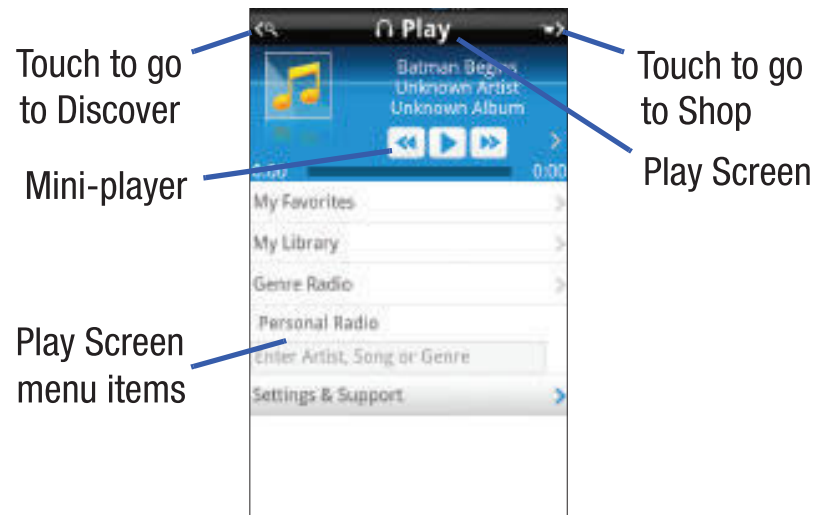

Play Screen

With the mini-player always present, you can listen and access different music with one-click access to last, currently playing music, or any radio station. All available device music libraries and radio are easily available through simple touch interactions.

Play screen options:

- **My Favorites:** allows you to access shortcuts to favorite artists, albums, songs, and radio stations.
- **My Library:** allows you to Access to all music on phone. Create or manage playlists, and find music by artist, album, song, or genre.
- **Genre Radio:** allows you access pre-programmed stations ranging from today's hits to deep cuts for the music enthusiast.

- **Personal Radio:** an easy-to-use personal listening experience started by entering an artist, song, or genre. Customized to your tastes by love/ban song ratings.
- **Settings & Support:** contextual settings for AT&T Music and help and support in the **Play** section.

Discover Screen

Users can search AT&T Music song catalog utilizing a variety of free form options including artist names, bands and songs. Using Song Match, the user can capture nearly any song by holding the phone to the audio of the music and recording a short clip. Can't remember the name of that song you heard last, simply type a few words into Lyric Match and the song appears.

Discover screen options:

- **Search Shop:** allows you to search for songs and albums available from AT&T Music.
- **Song Match:** allows you to identify nearly any song by holding your phone up to the music and recording a short clip.
- **Lyric Match:** allows you to look up songs by only entering a few words.
- **View Match History:** allows you to see all of the songs you matched via Song and Lyric Match.
- **Settings & Support:** contextual settings for AT&T Music and help and support in the **Discover** section.

Shop Screen

You can easily shop the entire AT&T catalog of music simply by entering the artist or song you want to buy. Fast, easy access to music is also available by browsing top songs, new releases, featured artists, and genres.

Shop screen options:

- **Top Downloads:** allows you to access the most downloaded music.
- **New Arrivals:** allows you to access new music that was not previously available.
- **Featured Artists:** allows you access music of the presently featured artists.
- **View Genres:** allows you to view the different music genres that you may select from.
- **Purchase History:** allows you to see a history of all of your purchases.
- **Settings & Support:** contextual settings for AT&T Music and help and support in the **Shop** section.

AT&T Radio

This service allows you to stream over 20 channels of commercial free music through your handset.

Note: This product uses a large amount of data. You will be required to subscribe to an eligible Data Plan before purchasing to avoid high data charges on your bill.

1. Touch  → **AT&T Radio** ().
2. During the initial setup, touch **Continue** to acknowledge the data service usage information and access the AT&T Radio Subscription screen.

Note: This is a paid service, initially you will only be allowed a 10 minute trial period before you have to register for the paid service.

3. Touch **Buy** to agree to the terms of the AT&T Radio service and follow the on screen prompts.
4. Select a radio station category from the guide list.
5. Select a specific radio channel to start the music streaming to your phone.
6. Touch **Buy** to purchase the music content associated with the selected channel.

Section 16: AT&T GPS

AT&T GPS provides you with access to real-time GPS-driven applications. These programs not only allow you to achieve real-time GPS enabled turn-by-turn navigation, but also access local searches based on a variety of category parameters. You also have the ability to shop for other GPS applications.

Global GPS turn-by-turn navigation—mapping and Point of Interest content for three continents, including North America (U.S., Canada, and Mexico), Western Europe, and China where wireless coverage is available from AT&T or its roaming providers.

In the Applications folder on the phone, you can either purchase GPS applications or find preloaded GPS applications.

AT&T Navigator is a separately licensed product that requires you to download the feature to your handset, and accept the license agreement before using.

Important!: You must have a data plan to use this feature.

Launching AT&T Navigator

1. Touch  → **AT&T Navigator**.

2. Read the Terms of Use and touch **YES** to acknowledge the terms of use.
3. Touch **Login** and touch **Get Your 1st 30 Days Free** to continue. The next time you access AT&T Navigator, you only need to Login.
4. Read the Warning and touch **Agree** to acknowledge the terms of use. Otherwise, touch **Exit**.
5. The AT&T Navigator main screen displays.



Using Navigator

Although your phone does not come with left and right softkeys, these are available as on-screen buttons so you can activate their corresponding features.

1. Touch  → **AT&T Navigator**.
2. Select an option and follow the on-screen instructions to activate a Navigator features.
 - **Drive To:** lets you get driving directions from wherever you are to wherever you're going. Choices include:
 - **My Favorites:** displays your favorite (marked) GPS navigation sites.
 - **Recent Places:** displays your recently entered locations.
 - **Address:** displays manually entered locations.
 - **Intersection:** used to locate a specific address by using two separate street addresses to identify an intersection. These can be entered either manually (Type It) or by speaking into the phone (Speak It).
 - **City:** allows you to enter a city, State and/or Province for navigation.
 - **Businesses:** allows you to enter a business type or name, category, or location.
 - **Airports:** allows you to use either local airports based on current a GPS location or manually enter the 3-letter airport code or name.
 - **Search:** allows you to search for the address by either speaking it or by entering the information manually. This function lets you search for locations from options such as: Food/Coffee, Gas

Stations, Gas By Price, Banks/ATMs, WiFi Spots, Parking Lots
Hotels & Motels, Movie Theaters, Car Rentals, and more.

- **Maps & Traffic:** provides access to 2D and 3D maps for both your current location and for several categories of locations such as Airports and Contacts.
- **Tools & Extras:** provides additional features such as sharing your location with contacts, recording your current location, creating and storing My Favorites locations, accessing the Product Tour, enabling a real-time compass, and setting detailed application preferences.

3. Press  to return to Idle mode.

Note: These services require the purchase of a subscription.

Obtaining Driving Directions

The built-in GPS hardware allows you to get real-time driving directions to selected locations or establishments based on your current location.

Using a Physical Address

1. Touch  → **AT&T Navigator** → **Drive To** → **Address** → **OK**.
2. Touch either **Type It** or **Speak It**.
 - **Type It:** requires that you enter the physical address using either the keypad or on-screen keypad.

- **Speak It:** enables the voice response unit and translates voice to text.
3. If typing in the address, touch the following fields and use the on-screen alphanumeric keypad to enter the necessary information:
 - **Street:** used to enter a street address. Touch  to complete.
 - **City:** to enter the city for the address. Touch  to complete.
 - **State/Province** or **ZIP/Postalcode:** additional information that can provide a more detailed search. Touch  to complete.
 4. Touch **Done** to begin the search process and receive driving directions from the GPS network.
 5. Follow both the on-screen and audio directions.

AT&T FamilyMap

At&T FamilyMap provides peace of mind by being able to conveniently locate a family member from your wireless phone or PC and know that your family's location information is secure and private.

1. Touch **Menu → Family Map.**

The AT&T FamilyMap Sign In webpage displays.

2. Enter your Phone Number and Password in the appropriate fields and touch Sign In.

Note: To sign up for service, visit <http://www.att.com/familymap> for more information.

3. Follow the on-screen instructions.

Shopping for GPS Applications

1. Touch  → **Applications → Shop GPS.**
2. Follow the on-screen prompts to purchase additional GPS Applications.

Loopt

Loopt is a cellphone-based GPS sharing system that allows users to visualize one another using their cell phones and share information. Loopt also enables users to explore the world around them by connecting users with integrated content from Yelp and other applications.

1. Press **Menu → AT&T GPS → Loopt.**
2. Follow the on-screen instructions.

Where

WHERE™ is a downloadable mobile application that uses your current location (obtained via the built-in GPS) to help you find places of interest, things to do, and local information while you're on the go.



1. Touch  → **Where**. A seven-day free trial period is provided with a notice that if you do not cancel within seven days then you are charged for the GPS service.

Important!: After the trial period, charges for Where service apply. Contact your service provider for details.

2. Touch **OK** to accept the Terms of Service.
3. Touch **OK** again to start.
4. Touch **Use GPS to get locations**. This will set your location using GPS for future use of the Where application.

5. The following menu icons appear in the display:

- **Weather:** allows you to check the local weather.
- **News:** allows you to check Local News, Top US News, Sports, Entertainment, Technology, or Strange News.
- **Reviews:** allows you to search local businesses within a close proximity and to see customer reviews or send your own review.
- **Movies:** allows you to search for local theaters and movies being shown.
- **YP.COM:** allows you to search the Yellow Pages.
- **My Stuff:** allows you to set up My shortcuts and My places.
- **Where Wall:** allows you to write on the world wide WHERE wall. You must set up an account first.
- **Starbucks:** allows you to locate the nearest Starbucks.
- **Gas Prices:** allows you research gas pricing in your area.

6. Use the navigation keys to select an option and follow the on-screen prompts.

Note: These services require the purchase of a subscription.

Section 17: Tools

The on-board applications (such as camera, camcorder, calendar, and alarms) can be supplemented with additional applications which can be purchased through the AppCenter.

Tools

Tools are applications that allow you to use your handset for a variety of non-phone related activities. To access any of the tools, perform the following:

- Touch  → **Tools**.

Camera

For more information, refer to “*Camera*” on page 96.

Music Player

The Music Player is an application that can play music files. The music player supports files with extensions AAC, AAC+, eAAC+, MP3, WMA, 3GP, MP4, and M4A. Launching the Music Player allows you to navigate through your music library, play songs, and create playlists (music files bigger than 300 KB are displayed).

Using the Music Player

1. Touch  → **Tools** → **Music Player**.

2. Touch a library category (All Music, Artist, Album, or Playlists) to view the available music files. You can also Shop Music.
3. Scroll through the list of songs and touch an entry to begin playback.

Note: You can use the Power Search tab to scroll thru your list of songs. For more information, see “*Using the Power Search Tab*” on page 22.

Music Player Functions

- Touch any of the following on-screen buttons during playback to activate their features:

Shuffle mode button:



- Shuffle On: the current list of songs are randomly shuffled for playback.



- Shuffle Off: songs play in order and are not shuffled.

Equalizer button:

Equalizer presets include: NORMAL, ROCK, POP, DANCE, CLASSICAL, JAZZ, WIDE, DYNAMIC, and 5.1Ch. Your phone is using the SRS™ solution. WIDE = WOWHD (Voice), and DYNAMIC = WOWHD.

Repeat button:

- Repeat one: repeats the currently playing song.



- Repeat all: replays the current list when the list ends.



- Play All: plays the current song list once.



- Touch quickly to move to the beginning of the current song.
- Touch and hold to play the previous song.



- Touch once to play the current song.



- Touch once to pause the current song.



- Advances to the next song.

- Touch the player menu options at the bottom of the screen to reveal additional menu functions:

- **Library:** displays the Music Player library view (Now Playing, All Music, Artist, Album, Playlists, and Shop Music).
- **Minimize:** reduces the player and leaves it running in the background so that you can navigate to other programs or activities.
- **More:** provides access to options such as:
 - **Add to Playlist:** allows you to add the current audio file to a selected playlist.
 - **Send via:** allows you to send the current file via a message attachment or as a data file delivered to a Bluetooth-capable device.
 - **Settings:** allows you to access the Background Playing Settings menu.
 - **Properties:** allows you to view details for the current song such as Name, Format, Size, Forwarding, Date created, and Location.

Adding Music to your Handset

Music files (ringtones and full tracks) can be added to your handset by using one or more of the following methods:

- Purchase and download music and ringtones directly to your handset over your wireless carrier's network by using the AT&T Music – Shop Music feature (also accessible from My Stuff).

Note: Audio files smaller than 300 KB are treated as ringtones, whereas audio files larger than 300 KB are stored in the Music Folder. To listen to music smaller than 300 KB, go to Menu → My Stuff → Audio → Music. You can not assign an MP3 file larger than 300 KB as a ringtone.

- Transfer music files from a personal computer using a media player application and an optional USB Data Cable and an optional microSD™ Memory Card.
-

Note: When the Bluetooth feature is active on your handset, USB communication is not be available. To transfer files to your handset, turn off the Bluetooth functionality (**Settings → Connectivity → Bluetooth**). (For more information, refer to “Bluetooth” on page 65.)

Note: The maximum number of songs you can synchronize between your phone and your PC is 1500.

Shop Music

AT&T Music can be used to shop for ringtones, Answer Tones™ and songs from some of your favorite music stores.

1. Touch  → **Tools → Music Player → Shop Music**. The Shop Music web page is displayed.
2. Select your music store of choice (or select **Ringtones**).

3. From the **Categories** listing, select the desired entry. Touch  to return to the previous page.

4. Exit the browser at any time by pressing .

Transferring Music from the Digital Music Stores

In order to download music from the computer to your handset, a microSD card and USB data cable are required. These items are sold separately; go to www.wireless.att.com/cell-phone-service/accessories/.

1. Using your computer, open your preferred Windows Media Digital Rights Management (WMDRM) PC music management client.
2. Download the selected song to your library.

Note: If the music file is protected, Media Player will block the playing or synching of that file.

3. Verify the pre-insertion of the microSD card into the handset. For more information, refer to “Installing the Memory Card” on page 6.
4. Use the USB adapter cable to connect the handset to the target PC. When an active connection has been established, a USB icon () appears on the phone.

Note: If the target computer does not detect the newly connected handset or provide an MTP Player dialog window on the PC screen, please follow steps 6 - 9.

5. Touch  → **Settings** → **Connectivity** → **Select USB Mode** → **Mass Storage/Media Player**. For more information, refer to “*Configuring Your Phone’s USB Settings*” on page 67.
6. Once the USB connection has been established, the handset displays “**Connected**” and the computer screen then shows your device. If the detection occurs, skip to step 8.
7. Locate the song on your computer and using your right mouse button, click **Copy**.
8. Open the Removable Disk drive corresponding to the microSD card location on the phone.
9. Open the **Music** folder (ex:\\Audio\\Music) you wish to upload from the handset.
10. Using your right mouse button, click **Paste**. This step begins the download process.

Note: The Music Player does not necessarily support all features of a particular file format nor all the variations of those formats. The Music Player includes support for Windows Media Digital rights Management (WMDRM) which allows you to play some purchased or subscription content. Copyright protections may prevent some images, music (including ringtones) and other content from being copied, modified, transferred or forwarded.

Playing Music through a Stereo Bluetooth Device

Your device supports the Stereo Bluetooth profile (A2DP), and when connected to a stereo Bluetooth headset, will play back music in stereo from the phone through the headset.

1. Pair and connect your handset to a stereo Bluetooth device. For more information, refer to “*Connecting to Other Bluetooth Devices*” on page 66.
2. From the list of compatible devices, select the previously paired Bluetooth headset to begin listening to your song through the headset.
3. Touch  → **Tools** → **Music Player** → **All Music**.
4. Select a song to play within the Music Player.

Playing Music while Using the Phone

The Music Player allows you to play music in the background while performing other tasks on your phone. The music will pause when an incoming call is accepted, and the music will resume when the call is ended. Music will continue to play when you receive a Text Message, Multimedia Message, or an Instant Message.

The other functions you can use are:

- **Call:** make or receive a call (music player is paused)
- **Messaging:** send or receive a text or multimedia message. Music continues to play unless an audio clip is received as a part of a multimedia message.
- **Mobile Web:** browse the web (music continues to play).
- **Music Player:** turns on Music Player, or allows you to use full-screen controls of the music player.
- **Games:** lets you play games while listening to music.

Important!: When you are finished using the **Music Player** function, you must press  to stop the function to prevent the battery from losing its charge. **Pausing** the player will continue to use the battery.

Music Player Settings

1. Touch  → **Tools** → **Music Player**.
2. Touch **More**, then touch **Settings**.

3. Touch **On** or **Off** to either activate or deactivate the Background Playing option. This determines whether you want the music to play in the background while outside of the player.
4. Touch .

Using Playlists

Playlists are used to assign songs to a list of preferred media which can then be grouped into a list for later playback. These Playlists can be created via either the handset's Music Player options menu or from within a 3rd party music application (such as Windows Media Player) and then downloaded to the handset.

Creating a Playlist

1. Touch  → **Tools** → **Music Player** → **Playlists** → **Create Playlist**.
2. Touch the playlist name field at the bottom of the screen and use the on-screen keypad to enter a descriptive name for the new playlist. Touch save.
3. Tap to Edit to Take Photo or Add Image to your playlist.

Important!: The following characters cannot be used in the playlist filename:
< > " ? / \ : * |.

4. Touch  →  to complete the creation process.

Adding Songs to a Playlist

1. Touch  → **Tools** → **Music Player** → **Playlists**.
2. Touch a previously created playlist from the list and touch **Add Tracks**.
3. Touch any available music files to place a checkmark alongside their entry (indicating their selection).
— or —
Touch **Select All** to select all available songs from the list.
4. Touch **Add** and wait for the songs to be added to the current playlist.

Changing the order of songs in a Playlist

1. Touch  → **Tools** → **Music Player** → **Playlists**.
2. Touch a previously created playlist.
3. Touch **More** → **Change Order**.
4. Touch and hold one of the songs. The color bar changes color.
5. Drag the song to the new location.

Removing songs from a Playlist

1. Touch  → **Tools** → **Music Player** → **Playlists**.
2. Touch a previously created playlist from the list and touch **Remove Tracks**.
3. Touch any available music files to place a checkmark alongside their entry (indicating their selection).
— or —
Touch **Select All** to select all available songs from the list for removal.
4. Touch **Remove Tracks** and wait for the songs to be deleted from the current playlist.

Transferring Music using a Media Application

A USB cable, microSD card, and a current version of a media application (such as Napster[®] or Windows Media Player[®]) are required for this procedure.


1. Open the media player on your personal computer (if you are using Windows Media Player, use version 10.0 or higher).

Note: The Napster application can be downloaded at www.napster.com. Subscription fees may apply.

2. Touch  → **Settings** → **Connectivity** → **Select USB Mode** → **Media Player**. For more information, refer to “*Configuring Your Phone’s USB Settings*” on page 67.
3. Use the USB adapter cable to connect the handset to the target PC. When an active connection has been established, a USB icon () appears on the phone.
4. Once the USB connection has been established, the handset displays “**Connected**” and the computer screen then shows your phone.


Note: The following steps reflect the procedure used with Windows Media Player. If you are using either Napster, or some other form of media player, you should refer to that application’s Help files for specific directions.

5. If this is your first time connecting the your phone to Windows Media Player, you will need to enter a unique name for this phone connection (ex: My Phone Card). This assigns a name to both the phone (when recognized) and to the internal microSD card.

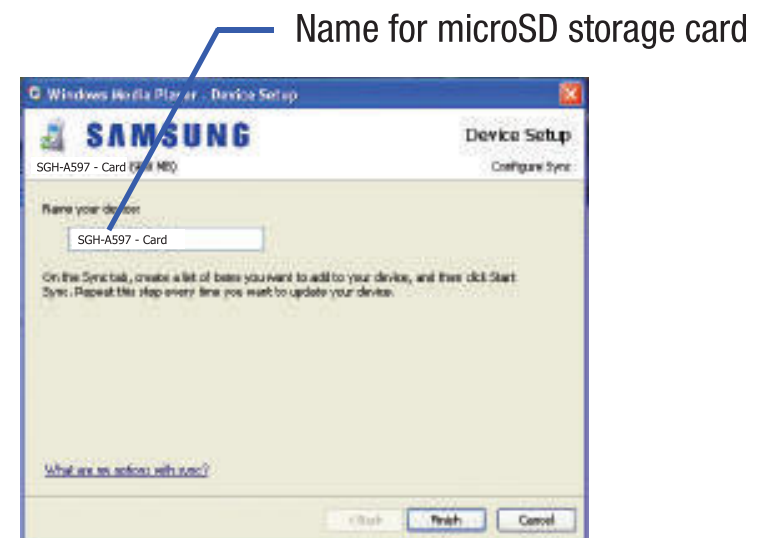

6. Click **Finish** to continue onto the application. You will then notice the Sync tab active and displaying a connection with the phone and displaying the name you created.
7. From within the Windows Media Player application, click on the **Sync** tab. Available songs are then listed on the left side of the application.

Note: This upper-right area also indicates the amount of free storage space left on the internal microSD.

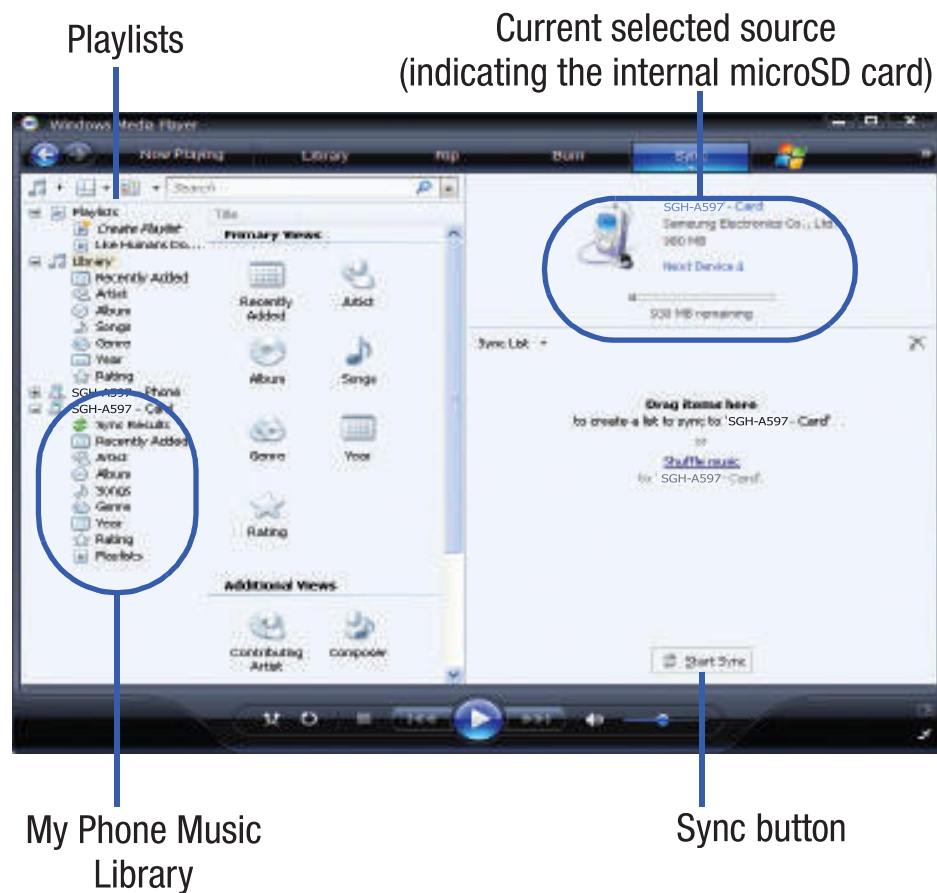

8. If not already active, click the **Sync** tab.
9. Choose the destination location for the media files. The **My Phone Card** entry (you named) appears in a drop-down list on the left side of the screen.

10. Click on the **Library** entry (from the left column) and select a category to reveal available songs.
11. Click a song from the center column and drag it into the Sync List section of the current page. This then places the current song on a “wait list” for update to the target location within the phone.
12. Click the **Start Sync** button (at the bottom of the Sync List) to begin uploading the selected songs to your handset. A “**synchronization in progress**” message appears on the application. Do not unplug the handset during this process. Once complete, a **Sync Results** folder then appears below the device entry to indicate sync status.
13. It is now safe to unplug the USB connector from the handset.

Importing a Playlist from Windows Media Player

1. Open Windows Media Player on your computer (version 10.0 or higher).
2. Use the USB adapter cable to connect the handset to the target PC. When an active connection has been established, a USB icon () appears on the phone.

3. Once the USB connection has been established, the handset displays “**Connected**” and the computer screen then shows your phone.
4. If not already active, click the **Sync** tab.
5. Locate the Playlist section (upper-left).
6. Right-click a playlist entry and select **Add to ‘Sync List’**.
7. Click the **Start Sync** button (at the bottom of the Sync List) to begin uploading the selected playlist to your handset.
8. It is now safe to unplug the USB connector from the handset.

Voice Recognition

Nuance Voice Recognition software is an advanced speech recognition software used to activate a wide variety of functions on your phone. Nuance software automatically voice activates (up to 2,000 contacts) for voice dialing and searching. No pre-recording or training needed. Speak a contact name naturally to dial, and use your voice to look up contacts, launch applications and navigate phone menus.

1. Touch  → **Tools → Voice Recognition**.
2. At the voice prompt, say a command. The list of available commands is listed below.

Note: This list of voice commands is briefly displayed.

Say a Command Options

- **Call <Name or #>:** dials a name or number listed in your contact list. If multiple numbers exist (i.e. home, work, or other) say the name and the number type (location).
- **Send Message to <Name or #>:** displays the Create Text Message screen.
- **Lookup <Name>:** allows you use a voice command to locate and display contact information stored in the Contacts list.
- **Go to <Application>:** accesses all the features of your phone if they are activated, such as: Voice mail, Contacts, Tones, Calendar, Tasks, and Browser.
- **Check <Item>:** lets you check your phone's status in the same report (Status, Messages, Missed Calls, Time, Signal strength, Network, Battery, My Phone Number, and Volume).

While the **Say a Command** screen displays you have two options:

- **Tutorial:** provides examples of how to use the voice commands.
- **Settings:** lists the settings for voice command software such as: Confirmation, Adaptation, Mode, Speakerphone, and About.

If the phone does not recognize your command the Command not recognized screen displays with two options:

- **Help:** provides instructions on how to use voice commands.

- **Restart:** touch and try the command options again.

Speak clearly when giving your command. There is no need for you to speak slowly or with added emphasis. The voice recognition software has been optimized to understand your speech in its natural form. If it does not recognize your command after a few seconds, a voice prompt asks you to repeat the command. If it does not recognize your command again, the following message displays “Sorry, no match found,” and voice recognition turns off.

You must end your current Voice Commands call before you can make another call using Voice Commands. To make a 3-way call, only the first call can be made using Voice Commands.

Voice Recognition Tips

- Wait for the tone before you speak.
- Speak clearly and at a normal volume.
- There is no need to use paused speech. The voice recognition software has been trained to recognize natural speech, and performs best when you speak naturally.
- In very noise environments, it may be helpful to use a headset or a Bluetooth headset.

Contacts List Voice Activation

On startup, Nuance Voice Recognition software reads your Contacts list and voice-activates all the names.

When you add or change contacts, the software automatically reloads and voice-activates the list when you add or modify a contact.

Record Audio

Record Audio allows you to record voice memos. It also allows you to send your audio clip to other people as an attachment of an MMS message. Recording time will vary based on the available memory within the phone.

1. Touch  → **Tools** → **Record Audio**. For more information, refer to “Record Audio Settings” on page 70.
2. To start recording, touch . Record a memo by speaking into the microphone.
3. During the recording process you can either touch Stop () to stop and save the recording or Pause () to temporarily halt the recording. Once the audio recording has stopped, the message is automatically saved.
4. Once stopped, choose from one of the following options:
 - **Play:** () allows you to play the memo.

- **Record:** allows you to save the current memo and begin another session.
- **Delete:** allows you to delete the current memo.
- **More:** provides these additional functions.
 - **Send via:** allows you to send your voice clip to other people using either a message or to a Bluetooth device.
 - **Set as:** allows you to set the current memo as a Call Ringtone, a Caller Ringtone for a specific entry or an Alarm Tone.
 - **Properties:** displays the Name, Format, Size, etc., of the current voice memo.

5. To exit, press  or press .

Recorded Audio Folder

This folder shows a list of audio clips that have been recorded and saved. To access this folder, use the following steps:

1. Touch  → **My Stuff** → **Audio** → **Recorded Audio**.
2. Touch a pre-recorded memo from the list to begin playback.
3. To exit, press  or press .

Alarms

This feature allows you to name an alarm and to set it to ring at a specific time.

1. Touch  → **Tools** → **Alarms** → **Create Alarm**.

The following options display:

- **Alarm Name:** allows you to use a specific name for the alarm. The name will appear on the display when the alarm activates.
- **Alarm Time:** use either the Up/Down input arrows or scroll through the available fields to set the new time for the event, at which time an alarm will sound. Touch **Set** to save the new values.

Note: To change the time format, see “*Time & Date*” on page 56.

- **Alarm Repeat:** use this option to set the repeating status for the alarm by placing a checkmark alongside those days you would like to use for the current alarm. **Everyday** places a checkmark alongside all days.
 - **Snooze:** use this option to set a Snooze Duration (5, 10, 15, 20, or 30 Minutes) and a Snooze Repeat (1, 2, 3, 5, or 10 Times).
 - **Set Details:** allows you modify some additional features:
 - **Alarm Type** sets the way in which the alarm sounds when activated (Melody, Vibration, Vibration then Melody, and Vibration & Melody).
 - **Alarm Tone** sets the sound file which is played when the alarm is activated.
 - **Alarm Volume** adjusts the alarm’s volume (1 - 7).
2. Touch **Save** to store the alarm details and **Save** again store this new event.

3. Touch **On** from the **Auto Power-up** field to keep the alarm event active even if the phone is turned off. Activating this feature turns the phone on and sounds the alarm even if the phone was previously is a powered-off state.

Turning Off an Alarm

To stop the alarm when it rings, perform one of these steps:

- Locate the **Stop** slider on the screen and slide it across to the right until the alarms stops.

– or –

Press any key, such as: volume,  ,  , etc.

– or –

If the phone is facing upwards, flip the phone over so that it is facing down to mute the alarm. If the phone is facing downward, flip the phone over and then flip it over again so that it is facing downward.

To set up your phone to utilize Motion Detection, see “*Motion Detection*” on page 58.

– or –

If Snooze is set to **On**, and if the phone is facing upwards, flip the phone over so that it is facing down to activate Snooze and mute the alarm. If the phone is facing downward, flip the phone over and then flip it over again so that it is facing downward. Each time the alarm rings (depending on how many times you have set the Snooze Repeat option) flip the phone over.

Calendar

The calendar feature allows you to view the Month, Week, and Day layout views. It also shows any Missed Alarm Events that have occurred.

Creating a New Event

1. Touch  → **Tools** → **Calendar** → **Create Event**.
2. Touch the **Title** field and use the on-screen keypad to enter a name for this specific event. Touch **OK** to save the new name.
3. Touch the **Start Date** field. The **Start Date** screen displays.
4. Select the **Keypad** tab to enter a date with the keypad, or touch the **Jog** tab to scroll to the desired date using **+** or **-**.
5. Touch **Set** to complete the process.

6. Touch the **Start Time** field. The **Start Time** screen displays.
7. Select the **Keypad** tab to enter a time with the keypad, or touch the **Jog** tab to scroll to the desired time using **+** or **-**.
8. Touch **Set** to complete the process.

Note: In Jog mode, touching and holding down the **+** and **-** keys increases the speed at which the numbers scroll through each reel.

9. Touch the **Alarm** field and select a time for the alarm to begin alerting you of the upcoming event. Touch **Save** to store the new alert time.
 - Choices include: Off, On Time, 30 Minutes Before, 1 Hour Before, 1 Day Before, 1 Week Before, Customize (your own defined schedule).
10. Touch **Set Details** to configure additional parameters for the new event:
 - **End Date:** enter final date for this event to occur. This is useful if the alarm is for a repeating event. Touch **Set** to store the date.
 - **End Time:** enter final time for this repeating event. Touch **Set** to store the time.
 - **Details:** enter a description for this event. Touch **OK** to store the name.

- **Location:** enter a location for this event. Touch **OK** to store the name.
- **Alarm Tone:** allows you to choose an alarm tone. Once highlighted, navigate to Tones and select an audio file. Touch **Add** to assign the file as your new alert tone.
- **Repeat:** allows you to set the number of repetitions allowed for this appointment (Off, Everyday, Every Week, Every Month, or Every Year). Once selected, all remaining alarm settings are enabled. Touch **Save** to store the option.
- **Repeat Until:** allows you to set as duration for this appointment by assigning an expiration date.

11. Touch  →  to store the new event.

Other Event Options

1. Touch  → **Tools** → **Calendar** → **More**.
2. Touch any of the following options:
 - **Go to:** allows you to manually select a target date for review by using the Go To dialer page. Touch **Go** to be taken to the dialed-in date.
 - **View by Day:** allows you to change the Calendar view to display a daily event listing.
 - **View by Week:** allows you to change the Calendar view to display a weekly event listing.
 - **Delete:** allows you to remove an event from your Calendar.

- **Calendar Settings:** allows you to configure the Calendar's **Starting Day** (select either Sunday or Monday) and **View by Mode** (select Month, Week, or Day).
- **Missed Alarm Events:** displays any missed events.
- **Used Space:** displays a list of the different Calendar event categories along with the memory allocation for each.

3. To exit, press  or press .

Viewing an Event

1. Touch  → **Tools** → **Calendar** → **Event List**. A listing of all upcoming events is then displayed.
2. Touch an event from the Events page to then open that instance.
3. To exit, press  or press .

Deleting an Event

1. Touch  → **Tools** → **Calendar** → **Event List** → **Delete**.
2. Touch an individual event from the list or touch **Select All** to place a checkmark adjacent to all events.
3. Touch **Delete**.
4. To exit, press  or press .

Recent Calls

The phone stores the numbers of the calls you've dialed, received, or missed in the **Recent Calls** menu. If the number or caller is listed in your Address Book, the associated name displays.

For more information, refer to “Recent Calls” on page 36.

Sketchpad

This option allows you to create sketches.

1. Touch  → **Tools** → **Sketchpad** → **Draw**.
2. Use the on-screen keypad to draw a sketch and touch  to save.
3. Select save, then enter file name.

The following options are available:



Save: allows you to save your sketch.



Draw: allows you to draw a sketch. Touch this icon to toggle between Draw, Erase, and Fill.



Erase: allows you to erase everywhere that you draw.



Fill: allows you to fill in enclosed areas of your sketch.



Line Width: allows you to set three different line widths used for drawing. Touch this icon to toggle between the three line widths.



Color: allows you to choose between seven different colors. Touch the arrow keys to move the color bar.



Undo: allows you to undo the last continuous stroke that you drew on your sketch. You can undo up to ten of your last ten strokes.

Memo

This option allows you to create memos to add to your events.

1. Touch  → **Tools** → **Memo** → **Create Memo**.
2. Use the on-screen keypad to enter a new memo and touch .

Tasks

This menu option allows you to create a “to do” entry of tasks which are created in a similar fashion to previously described Calendar entries.

1. Touch  → **Tools** → **Tasks** → **Create Task**.

2. Select any of the following options:

- **Title:** enter a title for this task (up to 15 characters).
- **Priority:** allows you assign the task a priority (High, Medium, or Low).
- **Start Date:** enter a date for this task to begin.
- **Due Date:** enter a date for this task to end.
- **Status:** allows you assign a current project status (Completed or Ongoing).

3. Touch **Set Details** to access additional options:

- **Details:** enter a detailed description for this task (up to 100 characters).
- **Alarm:** allows you to set a time prior to the event where the event alerts will begin. Options include Off, On Start Date, On Due Date, 1 Day Before Starting, 2 Days Before Starting, and 1 Week Before Starting.
- **Alarm Time:** enter a time for this alarm to sound. Touch **Set** to assign the new time.
- **Alarm Tone:** allows you to choose an alarm tone. Once selected, navigate to Tones, select a file, and touch **Add** to assign the audio file as the current alarm tone.

4. Touch → to store the new task.

Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.

1. Touch  → **Tools** → **Calculator**.
2. Enter the first number using the on-screen numeric keys.
3. Enter the operation for your calculation by touching the corresponding on-screen arithmetic function key.
4. Enter the second number.
5. To view the result, touch equals (=).

Tip Calculator

Tip Calculator automatically calculates the following amounts:

- Gratuity (tip)
- Individual payment (for groups)

Calculations are based on the total amount of the check, a selected percentage, and the number of people paying.

1. Touch  → **Tools** → **Tip Calculator**.
2. Touch the **Bill** field and use the keypad to enter the total amount of the bill and press **Result**.

3. If needed, touch the **Tip** field and use the keypad to change the tip percentage and press **Result**.
4. If needed, touch the **Split** field and use the keypad to change the number of persons that will be splitting the bill and press **Result**.
5. The amount of the Tip, the bill Total, and the amount each person should pay appear in the lower half of the screen.
6. Touch **Reset** to clear the fields and start over.

Converter

Your phone comes with a built-in conversion application. This conversion menu provides the following conversion categories:

- Currency
- Length
- Weight
- Volume
- Area
- Temperature

1. Touch  → **Tools** → **Converter**.
2. Select the specific converter function by touching one of the above on-screen conversion functions.

- Each converter function has a field for the type of unit to be converted, and the type of unit to convert to. An additional field allows you to input the unit amount to convert.

3. Enter the main value by touching the first on-screen value field (top left of the page).
4. Use the popup keypad to enter the necessary value and touch .
5. Touch the drop-down list (upper-right) to then select the desired source unit. This is the value you are converting “from”.
 - The resulting converted values (“to”) are the automatically displayed in a list.
6. Touch **Reset** to erase the current values and begin again.
7. To exit, press  or press .

World Clock

World Clock allows you to view the time of day or night in other parts of the world. World displays time in the 100 different cities, within all 24 time zones around the world.

1. Touch  → **Tools** → **World Clock** → **Add**.
2. Drag the on-screen map to find the desired global region.

3. Touch a representative city from a desired area. If the correct city area is then highlighted in a different color, your selection was accurately read and you can touch .

— or —

If not read correctly, repeat the previous two steps until your selection is correct.

4. Touch the sun symbol next to the time to add or remove Daylight Savings Time. If Daylight Savings Time is selected, the sun symbol will appear orange.

Deleting a World Clock Entry

1. Touch  → **Tools** → **World Clock** → **Delete**.
2. Touch the Trash Can () next to the entry you wish to delete.

Timer

You can use this menu to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

1. Touch  → **Tools** → **Timer**.

2. Select a countdown time length for the alert by setting the Hours, Minutes, and Seconds value.

Select the **Keypad** tab to enter a time length with the keypad, or touch the **Jog** tab to scroll to the desired time length using **+** or **-**.

Note: In Jog mode, touching and holding down the **+** and **-** keys increases the speed at which the numbers scroll through each reel.

3. Touch **Start** to begin the timer and touch **Stop** to pause the timer.

Note: You can stop the timer by flipping your phone over so that it is facing downward. Restart the timer by flipping it back over. To set up your phone to utilize Motion Detection, see “*Motion Detection*” on page 58.

Stopwatch

You can use this menu to measure intervals of time.

1. Touch  → **Tools** → **Stopwatch** → **Start**.
2. Touch **Stop** to stop the stopwatch and touch **Lap** to mark a unit of time per lap. You can record up to 50 lap times.
3. Touch **Reset** to erase all times recorded.

Section 18: Mobile Web

Your phone is equipped with att.net, your access to the mobile web. This section explains how to navigate att.net and introduces you to the basic features.

Accessing the Mobile Web

To access the Mobile Web browser:

- ▶ When the Idle screen displays, touch  → **Mobile Web**. The att.net homepage displays.

You can change the way you view the web by checking or unchecking the Mobile view option in **Options → Settings → Mobile view**. When the Mobile view option is unchecked, the web format changes to resemble the web as it appears on your PC.

Homepage - att.net


When you access the Mobile Web, the att.net homepage displays.

The main page has 3 tabs:

- **Web**: Web is the default page. Web allows you to enter a URL, search the web, manage your shortcuts, and access My Account.

- **Local**: The Local page allows you to quickly search for Restaurants, ATMs, Shopping and other businesses based on your current location. You can also view Maps & Traffic, Weather, and Movie Times.
- **Popular**: The Popular page allows you to access news, social networking site, web-based email and other content.

Browse the Local, Web and Popular screens using the top navigation bar. The default is the Web tab.

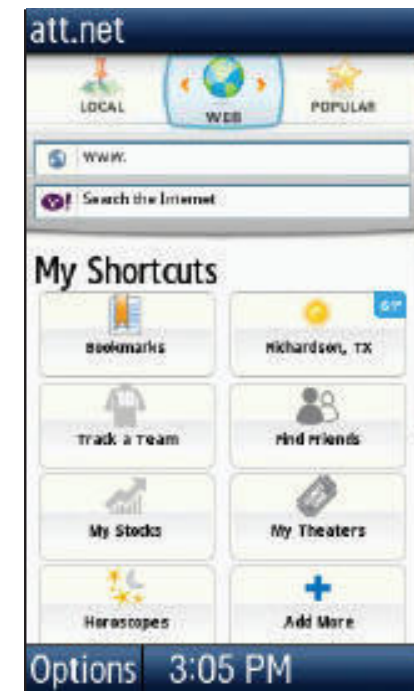

Navigating with the Mobile Web

1. To select an item, touch an entry.
2. To return to the previous page, touch **Back** or press .
3. Press the **Options** soft key to access the following options:
 - **Home [0]**: returns you to the homepage where you started.
 - **Enter Address**: allows you to enter a URL address to a website.
 - **History**: displays a list of the last sites visited. You can browse to any of these sites by selecting them in your History list.
 - **Go to Bookmarks**: displays a list of your bookmarked sites. You can browse to any of these sites by selecting them in your Bookmarks list.
 - **Add to Bookmarks**: allows you to add a URL to your bookmark list. This option does not appear initially at the home page.
 - **Reload**: reloads the current page.
 - **Find in Page**: allows you to search in the current page.
 - **Settings**: allows you to change the way you view your web pages by changing these options:
 - **Load images**: allows you to choose whether to load images or not.
 - **Image quality**: allows you to adjust from Low, Medium or High.

- **Font size**: allows you to set font size: Small, Medium, Large or Extra Large.
- **Mobile view**: allows you to choose how you view the web: Mobile Web view or HTML web view.
- **Landscape mode**: changes your display to landscape.
- **Show overview**: when checked, desktop view will appear zoomed out after page is loaded. When unchecked, desktop view will appear zoomed in.
- **24-hour clock**: allows you to change between 12-hour and 24-hour clock format.
- **Set clock**: drop-down menu allows you to set your clock.
- **Clear Cookies**: allows you to delete cookies stored by the sites you have visited.
- **Help**: allows you to search for help on using the web.
- **Exit**: allows you to exit the web and return to the Main Menu.

Enter a URL

You can access a website quickly by entering the URL. Websites are optimized for viewing on your phone.

To enter a URL and go to a particular website, follow these steps:

1. Select the **Web** tab.
2. Touch the **URL** field.

3. Enter the URL using the on-screen keypad.

The website displays.

Search the Internet

To perform an internet search using keywords, follow these steps:

1. Select the **Web** tab.
2. Touch the Yahoo search field.
3. Enter the keyword(s) to search using the on-screen keypad.
4. A list of search results displays.
5. Touch a link.

My Shortcuts

Shortcuts enable you to access web content quickly. You can customize your Shortcuts.

1. From the **Web** page, select **Add More** in the **My Shortcuts** section.
2. Select one of the listed shortcuts to add to your homepage.

Tip: Manage Shortcuts allows you to rearrange and delete Shortcuts.

My Account

My Account allows you to manage your account from your phone's browser. You can use it to view your minutes, Internet, and messaging usage. You may also be able to see account balances, pay your bill, change services, and reset your voicemail password.

1. Select the **Web** tab.
2. Touch the **My Account** link.
3. Touch one of the following items:
 - **Usage & Billing:** shows current usage, minutes remaining, and date of next billing cycle.
 - **Parental Controls:** allows you to turn on Content Filters and Purchase Blocker.
 - **Privacy Policy:** shows where to view Privacy Policy.
 - **Help:** allows you to get help for My Account.

Using Bookmarks

While navigating a website with att.net, you can bookmark a site to quickly and easily access it at a future time. The URLs (website addresses) of the bookmarked sites are stored in the Favorites folder, where you can use the 6-preset favorites and store your own favorite URLs.

Accessing a Website Using Bookmarks

1. When the Idle screen displays, touch  → **Mobile Web**, then touch **Options** → **Go to Bookmarks**.
2. Touch a bookmark item in the Bookmarks list to go to that webpage.

Adding Bookmarks

1. When the Idle screen displays, touch  → **Mobile Web**.
2. Touch the URL field and enter the URL using the on-screen keypad and touch **OK**.
3. After the webpage appears, touch **Options** then select **Add to Bookmarks**.
4. **Bookmark Added** will appear at the top of the webpage.
5. When you have finished, press  or touch **Back** to return to the Main Menu.

Editing Bookmarks

1. From the **Bookmarks** list, touch  to the right of the bookmark you want to change the name of.
2. Edit the Name.

3. Touch **Save**.

Deleting a Bookmark

1. From the **Bookmarks** list, touch  to the right of the bookmark you want to delete.
2. At the **Delete?** confirmation pop-up, touch **OK** to continue, or **Back** to cancel.
3. When you have finished, press .

Emptying the Cookies

A cookie is a small file that is placed on your phone by a website during navigation. In addition to containing some site-specific information, it can also contain some personal information (such as a username and password), which can pose a security risk if not properly managed. You can clear these cookies from your phone at any time.

1. When the Idle screen displays, touch  → **Mobile Web**.
2. At the att.net homepage, touch **Options** → **Settings**.
3. Touch **Clear cookies....**
4. Touch **Yes** to confirm and continue, or **No** to cancel.
5. The **Cookies deleted** confirmation is displayed.

6. When you have finished, touch **Back** to return to the homepage or press  to exit the web.

Using your History

The History list provides you with a list of the most recently visited websites. These entries can be used to return to previously unmarked web pages.

1. When the Idle screen displays, touch  → **Mobile Web**, then touch **Options** → **History**.
2. Touch an entry from the list to access the site.
3. Touch **Clear** to clear the history content.
4. When you have finished, press  to exit from the browser.

Changing the WAP Profiles

Connection can be made via either one of three available connection profiles: MEdia Net, AT&T MMS (MultiMedia Server), or AT&T IMS. Use this menu to create and customize the profiles containing the settings for connecting your phone to the network. You need these settings to use the WAP browser or to send MMS messages or Email messages.

Note: Although the active connection can be changed by the user, it is recommended that this choice be made with the assistance of either the retailer or customer service representative.

1. In Idle mode, touch  → **Settings** → **Applications**
Settings → **Browser** → **Browser Profiles**.
2. Touch one of the following profiles:
 - **MEdia Net**
 - **AT&T MMS**
 - **AT&T IMS**

Caution! The WAPs are pre-configured and can not be altered using this screen. If you change the settings without first checking with your service provider, the web browser, MMS, and e-mail features may not work properly.

3. To create a new connection profile, touch  and follow the on-screen prompts.

— or —

To edit an existing profile, touch a profile from list, scroll to the desired field, and use the on-screen keypad to edit the parameter you want to edit:

- **Set Name:** enter a profile name.
- **Access Name:** edit the access point name.

- **Auth Type:** select the type of authentication used for this WAP connection: None, Normal, or Secure.
- **User ID:** enter the User ID required to connect to the network.
- **Password:** enter the user password required to connect to the network.
- **Protocol:** set the connection protocol used by the WAP browser: WAP or HTTP.
- **Home URL:** enter the URL address of the page to be used as your homepage.
- **Gateway Address:** (WAP only) enter the gateway address of the proxy server.
- **Proxy Address:** (HTTP only) set the proxy server address and port.
- **Secure Connection:** (WAP only) determines if the connection follows a secure protocol. Select On or Off.
- **Linger Time (sec.):** set a time period (in seconds) after which the network is disconnected if there has been no new data traffic in that time.
- **Advanced Settings:** (touch ) allows you to configure some of the IP-specific information: Static IP, Static DNS, Server information, and Traffic Class.
 - **Static IP:** specify if you want to manually enter an IP address. If you want the IP address to be automatically assigned by the server, remove the check mark.
 - **Local Phone IP:** enter the IP address obtained from the network operator, if you checked the Static IP option.

- **Static DNS:** specify if you want to manually enter the Domain Name Server (DNS) address. If you want the address to be automatically assigned by the server, remove the check mark.
- **Server 1/Server 2:** enter the Domain Name Server (DNS) addresses.
- **Traffic Class:** select the traffic class.

4. Touch  to save these settings.

The WAP settings may vary depending on the service provider.

Section 19: Accessibility

TTY Settings

TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf or hard of hearing, or who have speech or language disabilities, to communicate via a telephone. This phone comes TTY-ready and only requires the insertion of the TTY device to enable this feature.

Use the following steps to access the TTY settings:

- Inserting a TTY connector into the Headset/Adapter jack (on the top of the phone) enables this function.

For additional technical support you may access the following website or call 1-888-987-4357.

http://www.samsungtelecom.com/contact_us/accessibility.asp

Section 20: Health and Safety Information

This section outlines the safety precautions associated with using your phone. These safety precautions should be followed to safely use your phone.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Specific Absorption Rate (SAR) Certification Information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government.

These FCC exposure limits are derived from the recommendations of two expert organizations, the National Counsel on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE).

In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of

absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that

contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

GSM 850

- Head: 0.97 W/Kg.
- Body-worn: 0.84 W/Kg.

GSM 1900

- Head: 0.41 W/Kg.
- Body-worn: 0.30 W/Kg.

WCDMA 850

- Head: 0.95 W/Kg.
- Body-worn: 0.60 W/Kg.

WCDMA 1900

- Head: 0.92 W/Kg.
- Body-worn: 0.43 W/Kg.

SAR information on this and other model phones can be viewed online at <http://www.fcc.gov/oet/ea>. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Please Note the Following Information When Using Your Handset

1. WARNING REGARDING DISPLAY

The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

2. WARRANTY DISCLAIMER: PROPER USE OF A TOUCH SCREEN HANDSET

If your handset has a touchscreen display, please note that a touchscreen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touchscreen may damage the tempered glass surface and void the warranty. For more information, refer to *"Precautions for Transfer and Disposal"* on page 187.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile phones and genuine Samsung accessories.

Go to: <http://mobile.samsungusa.com/recycling/index.jsp> or 1-800-822-8837 for more information.

UL Certified Travel Adapter

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF

exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies.

When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe.

Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some

cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones.

Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals.

However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures.

However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years.

However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer.

This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF). FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996.

An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations.

CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional

research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF).

Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000.

They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the

absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone.

Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal Trade Commission (FTC) charged two companies that sold devices that

claimed to protect wireless phone users from radiation with making false and unsubstantiated claims.

According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (Updated 1/1/2010):

- FCC RF Safety Program:
<http://www.fcc.gov/oet/rfsafety/>
- Environmental Protection Agency (EPA):
<http://www.epa.gov/radiation/>
- Occupational Safety and Health Administration's (OSHA):
<http://www.osha.gov/SLTC/radiofrequencyradiation/index.html>
- National Institute for Occupational Safety and Health (NIOSH):
<http://www.cdc.gov/niosh/>
- World Health Organization (WHO):
<http://www.who.int/peh-emf/>
- International Commission on Non-Ionizing Radiation Protection:
<http://www.icnirp.de>
- Health Protection Agency:
<http://www.hpa.org.uk/radiation>

- US Food and Drug Administration:
<http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm>

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold. Always comply with road safety regulations on using a mobile phone while driving. Using a mobile phone while driving can be dangerous.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.

3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.
4. Let the person you are speaking with know you are driving. Suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.
9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.ctia.org.

Important!: If you are using a handset other than a standard numeric keypad, please call 1-888-901-7233.

Provided by the Cellular Telecommunications & Internet Association.

Responsible Listening

Caution!: Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds, and Bluetooth or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing.

Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings and equipment.

You should follow some commonsense recommendations when using any portable audio device:

- Always turn the volume down before plugging the earphones into an audio source.
- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise. By blocking background environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using earbuds.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.

- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: <http://www.audiology.org>

National Institute on Deafness and Other Communication Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD 20892-2320

Email: nidcdinfo@nih.gov

Internet: <http://www.nidcd.nih.gov/>

National Institute for Occupational Safety and Health (NIOSH)

395 E Street, S.W.

Suite 9200

Patriots Plaza Building

Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4647)

1-800-CDC-INFO (1-800-232-4636)

Outside the U.S. 513-533-8328

Email: cdcinfo@cdc.gov

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

1-888-232-6348 TTY

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder if you are using an external antenna).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless phone and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the phone more than six (6) inches from their implantable medical device when the phone is turned ON;
- Should not carry the phone in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place;
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your wireless phone with such a device, consult your health care provider.

For more information see:

<http://www.fcc.gov/oet/rfsafety/rf-faqs.html>

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air

contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions areas or circumstances. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example). Before traveling in remote or underdeveloped areas, plan an alternate method of contacting emergency services personnel.

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 911 or other official emergency number).
Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Do not allow children to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association:

NFPA (National Fire Protection Agency)

1 Batterymarch Park

Quincy, Massachusetts

USA 02169-7471

Internet: <http://www.nfpa.org>

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.

- Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment near or in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Allowing unqualified personnel to service your phone may result in damage to your phone and may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- If your phone is equipped with an external antenna, hold the phone with the antenna raised, fully-extended and over your shoulder.
- Do not hold, bend or twist the phone's antenna, if applicable.
- Do not use the phone if the antenna is damaged.
- If your phone is equipped with an internal antenna, obstructing the internal antenna could inhibit call performance.
- Speak directly into the phone's receiver.
- If your phone has a SIM or memory card: (i) handle the SIM or memory card with care, (ii) do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card of phone, (iii) protect cards from strong shocks, static electricity, and electrical noise from other devices, and (iv) do not touch gold-colored contacts or terminals with your fingers or metal objects (if dirty, wipe the card with a soft cloth).
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas.

Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Avoid dropping the cell phone. Dropping it, especially on a hard surface, can potentially cause damage to the phone and battery. If you suspect damage to the phone or battery, take it to a service center for inspection.
- Never use any charger or battery that is damaged in any way.
- Do not modify or remanufacture the battery as this could result in serious safety hazards. Use batteries only for their intended use.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Follow battery usage, storage and charging guidelines found in the user's guide.

- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time and must be recharged before use.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers which are specifically designed for your phone. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Do not use incompatible cell phone batteries and chargers. Some Web sites and second-hand dealers, not associated with reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers should purchase manufacturer or carrier recommended products and accessories. If unsure about whether a replacement battery or charger is compatible, contact the manufacturer of the battery or charger.
- Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible risk of fire, explosion, leakage serious injuries, damage to your phone, or other serious hazard.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, (below 0 °C (32 °F) or over 45 °C (113 °F) such as in a car in summer or winter conditions, as you will reduce the charging capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not place the battery in, on or near areas that may get very hot, such as on or near a microwave oven, cooking surface, cooking appliance, iron, or radiator. Batteries may explode when overheated.
- Do not get your phone or battery wet. Even though they will dry and appear to operate normally, the circuitry could slowly corrode and pose a safety hazard.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.
- Do not crush, puncture or put a high degree of pressure on the battery as this can cause an internal short-circuit, resulting in overheating.

- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery. For safe disposal options for Li-Ion batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas (over 45 °C (113 °F)). High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas (below 0 °C (32 °F)). When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or near areas that may get very hot devices, such as a microwave oven, cooking surface, iron or a radiator. Do not dispose of the phone in a fire. The phone may explode when overheated.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
- If your phone is equipped with an external antenna, use only the supplied or an approved replacement antenna. Unauthorized antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

- Dispose of phones in accordance with local regulations. In some areas, the disposal of phones in household or business trash may be prohibited. For safe disposal options for phones, contact your nearest Samsung authorized service center.

Section 21: Warranty Information

Standard Limited Warranty

What is Covered and For How Long?
SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Leather Case	90 Days
Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, neglect, unusual physical, electrical or electromechanical stress, or defects in appearance, cosmetic, decorative or structural

items, including framing, and any non-operative parts unless caused by SAMSUNG; (b) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (c) equipment that has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible; (d) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (e) malfunctions resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (f) defects or damage from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (g) defects or damage from external causes such as collision with an object, or from fire, flooding, sand, dirt, windstorm, lightning, earthquake, or from exposure to weather conditions, or battery leakage, theft, blown fuse, or improper use of any electrical source; (h) defects or damage caused by cellular signal reception or transmission, or viruses or other software problems introduced into the Product; (i) any other acts which are not the fault of SAMSUNG; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or

show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the original date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG. If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser

must pay all parts, shipping, and labor charges for the repair or return of such Product.

What Are The Limits On Samsung's Warranty/liability? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- WARRANTIES OF TITLE OR NON-INFRINGEMENT;
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT;
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS

WRITTEN WARRANTY STATED HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS, OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES, OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY

WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.

THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT LIE SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation,

whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

Samsung Telecommunications America, LLC

1301 E. Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG

Phone: 1-888-987-HELP (4357)

©2010 Samsung Telecommunications America, LLC. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice. [021710]

End User License Agreement for Software

IMPORTANT. READ CAREFULLY: This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation ("Software"). BY CLICKING THE "I ACCEPT" BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE "I ACCEPT", AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE THE SOFTWARE), YOU AGREE TO

BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS IN THIS EULA, YOU MUST CLICK THE "DECLINE" BUTTON, DISCONTINUE USE OF THE SOFTWARE.

1. **GRANT OF LICENSE.** Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.

2. **RESERVATION OF RIGHTS AND OWNERSHIP.** Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

3. **LIMITATIONS ON END USER RIGHTS.** You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by

applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.

4. **CONSENT TO USE OF DATA.** You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.

5. **UPGRADES.** This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

6. **SOFTWARE TRANSFER.** You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include

all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.

7. **EXPORT RESTRICTIONS.** You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. **TERMINATION.** This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you shall cease all use of the Software and destroy all copies, full or partial, of the Software.

9. **DISCLAIMER OF WARRANTIES.** You expressly acknowledge and agree that use of the Software is at your sole risk and that the entire risk as to satisfactory quality, performance, accuracy and effort is with you. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE SOFTWARE IS PROVIDED "AS IS" AND WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND

SAMSUNG AND ITS LICENSORS (COLLECTIVELY REFERRED TO AS "SAMSUNG" FOR THE PURPOSES OF SECTIONS 9, 10 and 11) HEREBY DISCLAIM ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE SOFTWARE, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, OF SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, OF FITNESS FOR A PARTICULAR PURPOSE, OF RELIABILITY OR AVAILABILITY, OF ACCURACY, OF LACK OF VIRUSES, OF QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE, THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE SOFTWARE WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY SAMSUNG OR A SAMSUNG AUTHORIZED REPRESENTATIVE SHALL CREATE A WARRANTY. SHOULD THE SOFTWARE PROVE DEFECTIVE, YOU ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON APPLICABLE STATUTORY RIGHTS OF A CONSUMER, SO THESE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

10. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL SAMSUNG BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, OR FOR LOSS OF PROFITS, LOSS OF DATA, BUSINESS INTERRUPTION, OR FOR ANY PECUNIARY DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO YOUR USE OR INABILITY TO USE THE SOFTWARE, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT OR OTHER SERVICES, INFORMATION, SOFTWARE, AND RELATED CONTENT THROUGH THE SOFTWARE OR OTHERWISE ARISING OUT OF THE USE OF THE SOFTWARE, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS EULA, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY FOR PERSONAL INJURY, OR OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION MAY NOT APPLY TO YOU.

11. LIMITATION OF LIABILITY. Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced herein and all direct or general damages in contract or anything else), the entire liability of Samsung under any provision of this EULA and your exclusive remedy hereunder shall be limited to the greater of the actual

damages you incur in reasonable reliance on the Software up to the amount actually paid by you for the Software or US\$5.00. The foregoing limitations, exclusions and disclaimers (including Sections 9, 10 and 11) shall apply to the maximum extent permitted by applicable law, even if any remedy fails its essential purpose.

12. U.S. GOVERNMENT END USERS. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to

the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

Important!: Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG (726-7864)

Important!: If you are using a handset other than a standard numeric keypad, dial the numbers listed in brackets.

Phone: 1-888-987-HELP (4357)

©2010 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Index

A

Accessing the Music Player 136

Adding a New Contact

Adding More Fields 80

Deleting Fields 81

During a Call 81

Idle Screen 79

Address Book

Adding a New Contact 79

Adding Pauses to Contact Numbers
82

Address Book Entry Options 83

Checking the Used Space 89

Copying an entry to the Phone 88

Copying Entry to Phone 88

Copying Entry to SIM Card 87

Deleting all of the Address Book
Entries 88

Dialing a Number 82

Favorites 86

FDN (Fixed Dialing Number) Mode
84

Finding an Address Book Entry 82

Group Settings 85

Managing Address Book Entries 87

Own Phone Number 84

Service Dialing Numbers 89

Using Contacts List 82

Address Book Settings 78

AIM 110

Alarms 146

Answer Tones 92

AOL 110

AppCenter

Options 127

Ringtones 126

Application Settings

Calendar 71

Reset 62

Applications 123

Alarms 146

Calculator 151

Calendar 148

Converter 152

Maps 124

Memo 150

Mobile Banking 124

Record Audio 146

Stopwatch 153

Tasks 150

Timer 153

Tools 136

Using the Camcorder 102

Using the Camera 96

World Clock 152

AT&T FamilyMap 134

AT&T GPS

AT&T FamilyMap 134

Navigator 132

At&T GPS

Loopt 134

AT&T Mobile TV 117

AT&T Music 129

Discover Screen 130

Getting Started 129

Play Screen 130

Shop Screen 131

AT&T Radio 131

AT&T Yahoo! 110

Audio 91

Audio Folder 146

B

Backlight

settings 56

Battery

charging 7

Installing 6

Low Battery Indicator 8

Block Caller 37

Bluetooth Device

Stereo 139

Brightness 56

Browser

Settings 158

Browser Settings 69

Business Card

attaching to a message 108

C

Calendar 148

Deleting an Event 149

Viewing an Event 149

Call Functions 31

3-Way Calling (Multi-Party Calling)
43

Address Book 33

Adjusting the Call Volume 40

Answering a Call 33

Call Back Missed Call 38

Call Time 39

Call Waiting 43

Correcting the Number 32

Data Counter 39

Deleting Missed Call 39

Dialing a Recent Number 32

Ending a Call 32

International Call 31

Making a Call 31

Manual Pause Dialing 31

Missed Call Details 38

Noise Suppression 41

Options During a Call 40

Putting a Call on Hold 41

Recent Calls 36

Saving the Missed Call Number to

Address Book 38

Searching for a Number in Address
Book 42

Send Message to Missed Call 38

Using the Speakerphone 42

Viewing All Calls 37

Viewing Missed Calls 37

Camcorder 102

Accessing the Video Folder 103

Camcorder Options 103

Shooting Video 102

Camcorder Options

Camcorder Options after a Video is
Taken 103

Camera

Accessing the Pictures Folder 100

Camera Options 97

Picture Folder 100

Taking Pictures 96

Camera Options

Settings 98

Change Phone Password 61

Changing Your Settings 52

Charging battery 7

Check PIN code 59

Clear Phone Memory 72

Cookies

Emptying 157

D

Digital Music Stores 138

Display

icons 14

E

Entering Text 44

Changing the Text Entry Mode 45,
49

Using 123Sym Mode 46

Using Abc Mode 47

Using Emo Mode 46

Using Numeric 48

Using Symbols 48

Using T9 Mode 45

Event Widget 30

F

FDN

Changing the Status 85

Creating New Numbers 85

Fixed Dialing Mode 60

Formatting the Memory Card 73

G

Games 123, 127

Games & Applications 123

Getting Started 5

Setting Up Your Phone 5

Voice mail 9

GPS Applications 134

Shopping For 134

Graphics 127

Group

Adding an Entry 86

Creating New Group 85

Editing 86

Removing an Entry 86

Group Settings

Editing a Caller Group 86

H

Handwriting 48

Changing Text Input 49

Entering Characters 50

Entering Numbers 50

Entering Symbols 51

Health and Safety Information 161

I

Icons, description 14

IMS Settings 69

In-Call Options 40

International Call 31

J

Join 43

K

Keypad

Changing Text Input 45

L

Landscape 44

Lock Applications 60

Loopt 134

M

Maps 124

Media Net and WAP

Changing WAP Profiles 158

Downloading Multimedia Files 126

Memory

Used Space 116

Memory Card Installation 6

Memory Management 72

Formatting the Memory Card 73

Used Space 73

Menu Navigation 18

Messaging

Creating and Sending Text

Messages 106

Settings 112

- Signing into Your Mobile Email 110
- Templates 115
- Types of Messages 106
- Using Message Options 109
- microSD card**
 - Installing 6
- Mobile Banking** 124
- Mobile Email** 124
 - AIM 110
 - AOL 110
 - AT&T Yahoo! 110
 - Windows Live Mail 110
- Mobile TV** 117
 - Getting Started 117
- Mobile Video**
 - Adding a Video Alert 76
 - Customizing 76
 - My Purchases 76
 - Parental Controls 76
 - Updating Favorites 76
 - Video Categories 75
- Mobile Web**
 - Entering Text in the Mobile Web
 - Browser 155
 - Navigating with the Mobile Web 155
- Using Bookmarks 156
- MobiVJ** 124
- Motion Detection** 58
- Multitasking** 140
 - Functions 16
 - Menu 16
- Music** 92, 129
 - AT&T Music 129
 - AT&T Radio 131
- Music File Extensions**
 - 3GP 136
 - AAC 136
 - AAC+ 136
 - eAAC+ 136
 - M4A 136
 - MP3 136
 - MP4 136
 - WMA 136
- Music Player** 136
 - Adding Music to your Handset 137
 - Music Sync 138
 - Playing Music Through a Stereo
 - Bluetooth Device 139
 - Playing Music while Using the Phone 140
- Playlists 140
- Shop Music 138
- Transferring Music Windows Media
 - Player 141
- Music Sync** 138, 142
- Mute** 40, 42
- My Stuff**
 - Answer Tones 92
 - Audio 91
 - Games 93
 - Music 92
 - Other Files 95
 - Pictures 93
 - Recorded Audio 92
 - Shop Applications 125
 - Tones 91
 - Used Space 95
 - Videos 94
- My-Cast Weather** 124
- N**
- Network Profile**
 - Configuration 67
- Network Selection** 67
- Noise Suppression** 41

P

Paragraph

Inserting a Return 50

Parental Controls

Configuring Filters 77

Setup 77

Password

Changing 61

Phone

Back View 13

Front View 10

icons 14

Side View 12

Switching On/Off 8

Phone Information 74

Phone Lock 59

Phone Safety 173

Phone Settings 57

Playlists

Adding songs to a Playlist 141

Creating a Playlist 140

Importing a Playlist from Windows

Media Player 144

Removing songs from a Playlist 141

Power Search tab 22

Powering

Off 8

On 8

Q

QWERTY Keypad 44

R

Recent Calls 36, 150

Record Audio

Audio Folder 146

Recorded Audio 92

Creating 93

S

SAR values 161, 162

Security 59

Service Dialing Numbers 89

Settings

Address Book 71, 78

Applications 69

Call Settings 63

Display and Light 54

Noise Suppression 64

Phone 57

Phone Information 74

Quick Tips 52

Record Audio 70

Security 59

Software Update 73

Sound Profile 52

Time & Date 56

Video Share 70

SIM card

installation 5

Installing 5

Smart Unlock 63

Sound Profile 52

Driving 52

Normal 52

Outdoor 52

Silent 52

Speakerphone Key 42

Standard Limited Warranty

181

Suppression 41

Swap 41

T

T9 Mode

Add a New Word 46

Text Input Mode

Changing within Handwriting 49

Tip Calculator 151

Tones 91

Tools

Alarms 146

Calculator 151

Calendar 148

Camera 96

Converter 152

Memo 150

Music Player 136

Recent Calls 150

Record Audio 146

Stopwatch 153

Tasks 150

Timer 153

World Clock 152

Touch Screen 9

Lock/Unlock 9

Transition Effect 56

Travel Adapter 7

TTY Settings 160

U

UL Certification 163

Understanding Your Phone 10

Back View 13

Features of Your Phone 10

Front View 10

Side Views 12

Unmute 40

Used Space 89, 95, 116

Using Favorites

Accessing a Website Using Favorites
157

Adding Favorites 157

Deleting a Favorite 157

Editing Favorites 157

V

Video Categories

Viewing a Video Clip 75

Video Features 75

Video Share 35

IMS Settings 69

In-Call 36

Initiating and Receiving a Video

Share Session 35

Play a Recording 36

Settings 70

Videos 94

Voice Mail

Accessing 9

From Another Phone 9

Setup 9

Voice Recognition 144

W

Warranty Information 181

Widgets 23

Accessing 28

Activation 29

Adding to the Widget bar 24

Deleting from the Widget bar 24

Events 30

Rearranging 28

Undocking 28

WikiMobile 124

Windows Live Hotmail 110

World Clock 152

Deleting an Entry 153

Y

Yellowpages 125