 


Install the SIM card and battery

1. Remove the back cover and insert the SIM cards.



2. Insert the battery and replace the back cover.



Charge the battery

1. Plug the supplied travel adapter.
2. When charging is finished, unplug the travel adapter.



Do not remove the battery before removing the travel adapter. Doing this may cause damage to the phone.

Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type).



- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

1. Remove the back cover and the battery.
2. Insert a memory card with the gold-coloured contacts facing up.



3. Push the memory card in the memory card slot until it locks in place.
4. Replace the battery and the back cover.

Instructional icons

	Caution: situations that could cause damage to your phone or other equipment
	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step, for example: In Menu mode, select Messages → Create message (represents Messages , followed by Create message)
	Square brackets: phone keys, for example: [Power] (represents the Power/End key)

Use a stylus and the touch screen

Learn basic actions to use the stylus and touch screen.



To avoid scratching the touch screen, do not use sharp tools.



For the optimal use of the touch screen, remove the protection film before using your phone.

- Tap: Touch once with the stylus to select or launch a menu, option, or application.
- Tap and hold: Tap an item and hold it for more than 2 seconds.

- Drag: Tap and drag the stylus up, down, left, or right to move to items on lists.

A special slot for storing the stylus is included on the back of your phone.

Turn your phone on or off

To turn your phone on,

1. Press and hold [**Power**].
2. Enter your PIN and select **OK** (if necessary).

To turn your phone off, repeat step 1 above.

Access menus

To access your phone's menus,

1. In Idle mode, select **Menu** to access Menu mode.
2. Scroll left or right to a main menu screen.
3. Select a menu or application.
4. Press [**Back**] to move up one level; Press [**Power**] to return to Idle mode.



- When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Manage your SIM cards

Your phone supports Dual SIM mode that enables you to use two SIM cards at the same time without changing them. Learn to activate SIM cards and change the card settings.

To switch networks

In Idle mode, press [**Menu**] to switch between networks.

To activate SIM cards

1. In Menu mode, select **Settings** → **SIM cards management**. You can also press and hold [**Menu**] in Idle mode.
2. Select **Network** and select a SIM card.
3. Select **On** → **Save** to activate the card.

To switch SIM cards automatically

1. In Menu mode, select **Settings** → **SIM cards management**.
2. Select **SIM auto switch**.
3. Select **SIM auto switch** to activate the auto switch feature.
4. Set the starting and ending time to switch to the SIM card.
5. Select **Save**.

To register SIM cards

1. In Menu mode, select **Settings** → **SIM cards management**.
2. Select **Register card**.
3. Select a SIM card.
4. Change the name and the icon of the card.
5. Select **Save**.

Make a call

1. In Idle mode, select **Keypad** and enter an area code and a phone number.
2. Press [**Call**] to dial the number.
2. To end the call, press [**End**].

Answer a call

1. When a call comes in, press [**Answer**].
2. To end the call, press [**End**].

Adjust the volume

To adjust the volume of the ringtone

1. In Menu mode, select **Settings** → **Sound profiles**.
2. Select the profile you are using.



If you are using the silent or offline profile, you are not allowed to adjust the volume of the ringtone.

3. Select **Volume** → **Call alert**.

4. Scroll left or right to adjust the volume level and select **Save**.

To adjust the volume of the touch tone

In Idle mode, press the Volume key to adjust the volume.

To adjust the volume of voice during a call

While a call is in progress, press the Volume key to adjust the volume.



In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Change your ringtone

1. In Menu mode, select **Settings** → **Sound profiles**.
2. Select the profile you are using.



If you are using the silent or offline profile, you are not allowed to change the ringtone.

3. Select **Voice call ringtone**.
4. Select a memory location (if necessary).
5. Select a ringtone and select **Set**.

To switch to another profile, select it from the list.

Call a recently dialled number

1. In Idle mode, press [**Recent**] to display a list of recent numbers.
2. Select **◀** or **▶** to a call type.
3. Scroll up or down to a number or name.
4. Select the number or name to view details of the call or press [**Call**] to dial the number.

Use widgets

Learn to use widgets on the idle screen.



- Some of your widgets connect to web services. Selecting a web-based widget may incur additional charges.
- Available widgets may vary depending on your region or service provider.

To open a widget

1. In Idle mode, scroll left or right to a panel of the idle screen.
2. Select a widget to activate on the idle screen.

To organise your widget

You can organise each panel of the idle screen with your favourite widgets.

1. In Menu mode, select **Settings** → **Display** → **Widgets**.
2. Select a widget for each panel.

Enter text

To change the text input mode

- Select **EN** to change the input language.
- Select **T9** to switch between T9 and ABC modes. The dot turns green in T9 mode.
- Select **123** or **sym** to switch to Number or Symbol mode.
- Select **↑** to change case.

T9 mode

1. Press appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, select **↵** to insert a space. If the correct word does not display, select **⌂** to select an alternate word.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press an appropriate alphanumeric key to enter a number.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

To use other features for text input

- To move the cursor, select **⬅** and then the virtual navigation key.
- To delete characters one by one, select **✖**.
- To enter punctuation marks, select 1 repeatedly.

Add a new contact



The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → **More** → **Settings** → **Save new contact** to → a memory location.

1. In Idle mode, select **Keypad** and enter a phone number.
2. Select **✚**.
3. Select **Create contact** → a memory location (if necessary).
4. Select a number type (if necessary).
5. Enter contact information.
6. Select **Save** to add the contact to memory.

Send and view messages

To send a text or multimedia message

1. In Menu mode, select **Messages** → **Create message**.
2. Select the recipient field → **Enter manually**.
3. Enter a recipient number and select **Done**.
4. Select the text input field.
5. Enter your message text and select **Done**.
 - ▶ See "Enter text."
- For sending as a text message, skip to step 7.
- For attaching multimedia, continue with step 6.
6. Select **Add media** and add an item.
7. Select **Send** to send the message.

To view text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To activate the fake call feature

- In Menu mode, select **Settings** → **Call** → **Fake call** → **Fake call hot key**.

To make a fake call

In Idle mode, press and hold the Volume key down.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

1. In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
2. Select **Sending SOS** to activate the SOS message feature.
3. Select **Recipients** → **Add recipients** → **Contacts**. You can also enter a recipient number. Skip to step 6.
4. Select **Multiple**.
5. Select contacts → **Add**.
6. When you are finished setting the recipients, select **Save** to save the recipients.
7. Select **Repeat**, set the number of times to repeat the SOS message, and select **Save**.
8. Press [**Yes**] → **Yes**.

To send an SOS message

1. With the touch screen and the keys locked, press the Volume key four times to send an SOS message to preset numbers.
2. To exit SOS mode, press [**Power**].

Set and use alarms

To set a new alarm

1. In Menu mode, select **Alarms**.
2. Select **Create**.
3. Set alarm details.
4. Select **Save**.

To stop an alarm

When the alarm sounds,

- Tap and hold **Stop** to stop the alarm.
- Tap and hold **Snooze** to silence the alarm for the snooze period.

To deactivate an alarm

1. In Menu mode, select **Alarms**.
2. Select the dot next to the alarm you want to deactivate.

SAMSUNG
ELECTRONICS

Declaration of Conformity (R&TTE)

Samsung Electronics

declare under our sole responsibility that the product

GSM Wi-Fi Mobile Phone : GT-E2652W

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2006 +A11:2009
	EN 50332-2 : 2003
SAR	EN 62209-1 : 2006
	EN 62209-1 : 2006
EMC	EN 301 489-01 V1.8.1 (04-2008)
	EN 301 489-07 V1.3.1 (11-2009)
	EN 301 489-17 V2.1.1 (05-2009)
RADIO	EN 301 511 V9.0.2 (03-2003)
	EN 300 328 V1.7.1 (10-2006)

We hereby declare that all essential radio test suites have been carried out and that the above named product is in conformity with all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies)

RABT, Forsyth House,
Churchfield Road,
Wotton-on-Thames,
Surrey, KT12 2TD, UK*
Identification mark: 0168

The technical documentation kept at :
Samsung Electronics QA Lab

which will be made available upon request.
(Representative in the EU)
Samsung Electronics Euro QA Lab,
Blackthorn Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*

2010.12.21
(date and date of issue)

Joong-Hoon Choi / Lab Manager
(name and signature of authorized person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.