

Your phone displays the following status indicators on the top of the screen:

 
Icon	Description	Icon	Description
	Signal strength		Roaming (outside of normal service area)
	GPRS network connected		Bluetooth activated
	EDGE network connected		Browsing the web
	UMTS network connected		Connecting to secured web page
	HSDPA network connected		Connected to PC
	Call in progress		New text message (SMS)
	Call diverting activated		New multimedia message (MMS)
	SOS message feature activated		New email message
	Alarm activated		New voice mail message
	FM radio on		Memory card inserted
	FM radio suspended		Normal profile activated
	Music playback in progress		Silent profile activated
	Music playback paused		Battery power level
			Current time

Install the SIM or USIM card and battery

1. Remove the back cover and insert the SIM or USIM card.




2. Insert the battery and replace the back cover.



Charge the battery

 1. Plug a travel adapter. 2. When charging is finished, unplug the travel adapter.




- Do not remove the battery before removing the travel adapter. Doing this may cause damage to the phone.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.

Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type).

- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

 1. Remove the back cover.
2. Insert a memory card with the gold-coloured contacts facing down.



3. Replace the back cover.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example, In Menu mode, select Messages → Create message (represents Messages , followed by Create message)
	Square brackets: phone keys; for example, [*#] (represents the Power/End key)
	Angled brackets: softkeys that control different functions at each screen; for example, < Save > (represents the Save softkey)

Turn your phone on or off

To turn your phone on,

- Press and hold [***#**].
- Enter your PIN and press <**Confirm**> (if necessary).
- When the setup wizard opens, customise your phone as desired by following the screen.

- If the battery remains fully discharged or removed from the device, the date and time will be reset.

To turn your phone off, repeat step 1 above.

Access menus

To access your phone's menus,

- In Idle mode, press <**Menu**> to access Menu mode.

- You may need to press the Confirm key to access Menu mode depending on your region or service provider.

- Use the Navigation key to scroll to a menu or option.
- Press <**Select**>, <**Save**>, or the Confirm key to confirm the highlighted option.
- Press <**Back**> to move up one level; Press [***#**] to return to Idle mode.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM or USIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Make a call

- In Idle mode, enter an area code and a phone number.
- Press [**☎**] to dial the number.
For a video call, press <**Options**> → **Video call**.
- To end the call, press [***#**].

Answer a call

- When a call comes in, press [**☎**].
- For a video call, press <**Camera on**> to allow the caller to see an image via the camera lens.
- To end the call, press [***#**].

Adjust the volume

To adjust the volume of the ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Scroll to the profile you are using.

- If you are using the silent profile, you are not allowed to adjust the volume of the ringtone.

- Press <**Edit**>.
- Select **Volume**.
- Scroll to **Call alert**.
- Scroll left or right to adjust the volume level and press <**Save**>.

To adjust the volume of voice during a call

While a call is in progress, press the Volume key up or down to adjust the volume.

- In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Change your ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Scroll to the profile you are using.

- If you are using the silent profile, you are not allowed to change the ringtone.

- Press <**Edit**>.
- Select **Voice call ringtone** or **Video call ringtone**.
- Select a ringtone.

To switch to another profile, select it from the list.

Call a recently dialled number

- In Idle mode, press [**☎**].
- Scroll left or right to a call type.
- Scroll up or down to a number or name.
- Press the Confirm key to view details of the call or [**☎**] to dial the number.

Enter text

To change the text input mode

- Press and hold [**#**] to switch between T9 and ABC modes. Depending on your region, you may be able to access an input mode for your specific language.
- Press [**#**] to change case or switch to Number mode.
- Press [*****] to switch to Symbol mode.
- Press and hold [*****] to select an input mode or change the input language.

T9 mode

- Press appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press [0] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press an appropriate alphanumeric key to enter a number.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

To use other features for text input

- To move the cursor, press the Navigation key.
- To delete characters one by one, press <**Clear**>. To delete characters quickly, press and hold <**Clear**>.
- To insert a space between characters, press [0].
- To enter punctuation marks, press [1].

Add a new contact

- The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → <**Options**> → **Settings** → **Save new contacts to** → a memory location.

- In Idle mode, enter a phone number and press <**Options**>.
- Select **Add to Contacts** → a memory location (if necessary) → **Create contact**.
- Select a number type (if necessary).
- Enter contact information.
- Press the Confirm key or <**Options**> → **Save** to add the contact to memory.

Send and view messages

To send a text or multimedia message

- In Menu mode, select **Messages** → **Create message**.
- Enter a recipient number and scroll down.
- Enter your message text. See "Enter text."
For sending as a text message, skip to step 6.
For attaching multimedia, continue with step 4.
- Scroll down to the toolbar.
- Scroll left or right to an icon and add an item.
- Press the Confirm key to send the message.

To view text or multimedia messages

- In Menu mode, select **Messages** → **Inbox**.
- Select a text or multimedia message.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To activate the fake call feature

In Menu mode, select **Settings** → **Call** → **Fake call** → **Fake call hot key**.

To make a fake call

- In Idle mode, press and hold the Navigation key down.
- When the keys are locked, press the Navigation key down four times.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

- In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
- Select **Sending SOS** to activate the SOS message feature.
- Select **Recipients** and press <**Search**> → **Contacts** to open your contact list.
You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 5.

- Select a contact.
- When you are finished setting the recipients, press the Confirm key to save the recipients.
- Select **Repeats** and set the number of times to repeat the SOS message.
- Press <**Back**> → <**Yes**>.

To send an SOS message

- With the keys locked, press the Volume key four times to send an SOS message to preset numbers.
The phone switches to SOS mode and sends the preset SOS message.
- To exit SOS mode, press [***#**].

Activate the mobile tracker

When someone inserts a new SIM or USIM card in your phone, the mobile tracker feature will automatically send the contact number to specified recipients to help you locate and recover your phone. To activate the mobile tracker,

- In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
- Enter your password and press <**OK**>.

- The first time you access **Mobile tracker**, you will be prompted to create and confirm a password.

- Select **Mobile tracker** to turn on the mobile tracker feature.
- Select **Recipients** and press <**Search**> → **Contacts** to open your contact list.
You can also enter a phone number including a country code (with +). Skip to step 6.
- Select a contact.
- When you are finished setting the recipients, press the Confirm key to save the recipients.
- Scroll down to enter the sender's name.
- Press the Confirm key → <**Accept**>.

Use the camera

To capture photos

- In Idle mode, press and hold the Camera key to turn on the camera.
- Rotate the phone anti-clockwise to landscape view.
- Aim the lens at the subject and make any adjustments.
- Press the Navigation key left to select a focus mode (if necessary).
For Auto focus mode, skip to step 6.
For Manual focus mode, continue with step 5.

- Press the Navigation key down to focus on the preview screen.
To cancel Manual focus mode, press the Navigation key down again.
- Press the Camera key or the Confirm key to take a photo.
The photo is saved automatically.

To view photos

In Menu mode, select **My files** → **Images** → a photo file.

To record videos

- In Idle mode, press and hold the Camera key to turn on the camera.
- Rotate the phone anti-clockwise to landscape view.
- Press [1] to switch to Recording mode.
- Aim the lens at the subject and make any adjustments.
- Press the Camera key or the Confirm key to start recording.
- Press the Camera key, the Confirm key or <**Stop**> to stop recording. The video is saved automatically.

To view videos

In Menu mode, select **My files** → **Videos** → a video file.

SAMSUNG
ELECTRONICS

Declaration of Conformity (R&TTE)

We,

Samsung Electronics

declare under our sole responsibility that the product

GSM WCDMA Mobile Phone : GT-S5610

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2006+A11:2009
SAR	EN 50360 : 2001/AC2006 EN 62209-1 : 2006 EN 301 488-01 V1.8.1 (04-2008) EN 301 488-07 V1.3.1 (11-2005) EN 301 488-17 V2.1.1 (05-2009) EN 301 488-24 V1.5.1 (10-2011) EN 301 511 V8.2.2 (03-2003) EN 300 328 V1.7.1 (10-2006) EN 301 508-1 V4.2.1 (03-2010) EN 301 508-2 V4.2.1 (03-2010)
EMC	
RADIO	

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House,
Churchill Road,
Watton-on-Thames,
Surrey, KT12 2TD, UK*
Identification mark: 0193

The technical documentation kept at :
Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)
Samsung Electronics Euro QA Lab,
Blackthorn Business Park, Bocking Way,
Valeley, Hemphrey, GU46 6GG, UK*
2011.08.19

Joong-Hoon Choi / Lab Manager

(place and date of issue) (name and signature of authorised person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the reseller where you purchased your product.