 


- could hurt themselves and others, damage the device, or make calls that increase your charges.


Icon	Description	Icon	Description
	No SIM card		Bluetooth activated
	No signal		Bluetooth hands-free car kit or headset connected
	Signal strength		Connected to PC
	Flight mode activated		New text or multimedia message
	Network searching		New email message
	GPRS network connected		New voice mail message
	EDGE network connected		Java games or applications in progress
	Call in progress		Memory card inserted
	Call diverting activated		Normal profile activated
	Missed call		Silent profile activated
	SMS message feature activated		Battery power level
	Alarm activated		Current time
	Connecting to secured web page		
	Roaming (outside of normal service area)		
	WLAN activated		

Install the SIM card and battery

1. Remove the back cover and insert the SIM card.




 2. Insert the battery and replace the back cover.



Charge the battery

 1. Plug the supplied travel adapter.
2. When charging is finished, unplug the travel adapter.



- While the phone is charging, the touch screen may not function due to an unstable power supply. If this happens, unplug the travel adapter from the phone.
- Do not remove the battery before removing the travel adapter. Doing this may cause damage to the phone.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.

Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type).



- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

1. Open the cover to the memory card slot on the side of the phone.
2. Insert a memory card with the gold-coloured contacts facing up.



Adjust the volume

To adjust the volume of the ringtone

1. In Menu mode, select **Settings** → **Sound profiles**.
2. Select the profile you are using.



- If you are using the silent or offline profile, you are not allowed to adjust the volume of the ringtone.

3. Drag the slider under **Ringtone** to adjust the volume level and select **Set**.

To adjust the volume of the touch tone

In Idle mode, press the Volume key to adjust the volume.

To adjust the volume of voice during a call

While a call is in progress, press the Volume key to adjust the volume.



- In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

Change your ringtone

1. In Menu mode, select **Settings** → **Sound profiles**.
2. Select the profile you are using.



- If you are using the silent or offline profile, you are not allowed to change the ringtone.

3. Select **Ringtone**.
4. Select a memory location (if necessary).
5. Select a ringtone and select **Set**.

To switch to another profile, select it from the list.

Call a recently dialled number

1. In Idle mode, press [↶] to display a list of recent numbers.
2. Scroll up or down to a number or name.
3. Select the number or name to view details of the call or press [↶] to dial the number.

3. Push the memory card in the memory card slot until it locks in place.
4. Close the cover to the memory card slot.

Instructional icons

	Caution: situations that could cause damage to your phone or other equipment
	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: In Menu mode, select Messages → Compose (represents Messages , followed by Compose)
	Square brackets: phone keys; for example: [↶] (represents the End key)

Use the touch screen

Learn basic actions to use the touch screen.



- To avoid scratching the touch screen, do not use sharp tools.



- For the optimal use of the touch screen, remove the protection film before using your phone.
- Your touch screen has a layer that detects small electrical charges emitted by the human body. For best performance, tap the touch screen with your fingertip. The touch screen will not react to touches of sharp tools, such as a stylus or pen.

Use widgets

Learn to use widgets on the idle screen.



- Some of your widgets connect to web services. Selecting a web-based widget may incur additional charges.
- Available widgets may vary depending on your region or service provider.

To open a widget

1. In Idle mode, scroll left or right to a panel of the idle screen.
2. Select a widget to activate on the idle screen.

To organise your widget

You can organise each panel of the idle screen with your favourite widgets.

1. In Idle mode, select **Widget** at the top left of the screen to open the widget toolbar.
2. Read the widget disclaimer and select **Accept** (if necessary).
3. Scroll left or right on the widget toolbar to find the widget you want to use.
4. Drag the widget to the idle screen.
5. Select **Done** at the top left of the screen.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

1. In Menu mode, select **Messages** → [***] → **Settings** → **SOS messages** → **Sending options**.
2. Select **Sending SOS** to activate the SOS message feature.
3. Select **Recipients** to open the recipient list. You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 7.
4. Select **Contacts**.
5. Select contacts → **Add**.
6. Select a number (if necessary).
7. Select **OK** to save the recipients.
8. Select **Repeat** and set the number of times to repeat the SOS message, and select **Set**.
9. Select **Set** → **Yes**.

To send an SOS message

1. With the touch screen and the keys locked, press the Volume key four times to send an SOS message to preset numbers.
2. To exit SOS mode, press [⏏] → [↶].

- Tap: Touch once to select or launch a menu, option, or application.
- Tap and hold: Tap an item and hold it for more than 2 seconds.
- Drag: Tap and hold on an item, and then drag your finger to move the item.

Turn your phone on or off

To turn your phone on,

1. Press and hold [⏏].
 2. Enter your PIN and select **Done** (if necessary).
 3. Follow the on-screen instructions to set up your phone.
- To turn your phone off, press and hold [⏏] and select **Yes**.

Access menus

To access your phone's menus,

1. In Idle mode, press the Menu key to access Menu mode.
2. Scroll left or right to a main menu screen. You can also select a dot on the top of the screen to move to the corresponding main menu screen directly.

Enter text

To change the text input mode

- Select [👉] to change the input language.
- Tap and hold [👉] and select **Keyboard type** → a text input method.
- Tap and hold [👉] and select **Predictive text** to turn on T9 mode.
- Tap and hold [👉] and select **Continuous input** to switch to Continuous input mode. When Predictive text mode is activated, you can use Continuous input mode.
- Select **123** to switch to Number mode. Select **?#*** to switch to Symbol mode.
- Select [↵] to insert a space; Double-tap [↵] to insert a period and space.
- Select [👆] to change case.
- Delete characters one by one, select [✖] to delete words quickly, tap and hold [✖].

3. Select a menu or application.
4. Select **Back** to move up one level; Press [↶] to return to Idle mode.



- When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

Make a call

1. In Idle mode, select **Keypad** and enter an area code and a phone number.
2. Press [↶] to dial the number.
3. To end the call, press [↶].

Answer a call

1. When a call comes in, press [↶].
2. To end the call, press [↶].

T9 mode

1. Select appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, select [↵] to insert a space. If the correct word does not display, select [✖] or [👉] and select an alternate word from the list that appears.

ABC mode

Select an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Select an appropriate alphanumeric key to enter a number.

Symbol mode

Select an appropriate alphanumeric key to enter a symbol.

Add a new contact



The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → [***] → **Settings** → **Memory in use** → **Save new contacts to** → a memory location.

1. In Idle mode, select **Keypad** and enter a phone number.
2. Select **Add to Contacts** → **Create contact**.
3. Enter contact information.
4. Select **Done** to add the contact to memory.

Send and view messages

To send a text or multimedia message

1. In Menu mode, select **Messages** → **Compose**.
2. Select **Contacts**.
3. Select the check boxes next to contacts and select **Add**.
4. Select **Tap to add text**.
5. Enter your message text. See "Enter text." For sending as a text message, skip to step 7. For attaching multimedia, continue with step 6.
6. Select [📎] and add an item.
7. Select **Send** to send the message.

To view text or multimedia messages

1. In Menu mode, select **Messages** and select a contact.
2. Select a text or multimedia message.

Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

To activate the fake call feature

In Menu mode, select **Settings** → **Applications** → **Call** → **Fake call** → **Fake call hot key**.

To make a fake call

In Idle mode, press and hold the Volume key down.

SAMSUNG
ELECTRONICS

SAMSUNG

Declaration of Conformity

Product details

For the following

Product : GSM BT/WiFi Mobile Phone

Model(s) : GT-S3850

CE 0168

Declaration & Applicable standards

We hereby declare, that the product above is in compliance with the essential requirements of the R&TTE Directive (1999/5/EC) by application of:

SAFETY EN 60950-1 : 2006 + A12 : 2011

SAR EN 50368 : 2001 / AC 2006

EN 62209-1 : 2006

EMC EN 301 489-01 V1 9.2 (08-2011)

EN 301 489-07 V1 3.1 (11-2009)

EN 301 489-17 V2 1.1 (05-2009)

RADIO EN 301 511 V9.2.2 (03-2003)

EN 300 328 V1 7.1 (10-2006)

and the Directive (2011/65/EU) on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

The conformity assessment procedure referred to in Article 10 and detailed in Annex(V) of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies).

TUV SUD BAHT, Fenchy House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, UK

Identification mark 0168

Representative in the EU

Samsung Electronics Euro QA Lab, Blackhouse Business Park, Saxony Way, Wokingham, Hampshire, GU46 6GG, UK

2012.12.04

(Place and date of issue)

Joong-Hoon Choi / Lab. Manager

(Name and signature of authorised person)

* This is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.