


User Manual

535



PHILIPS

Discover your phone

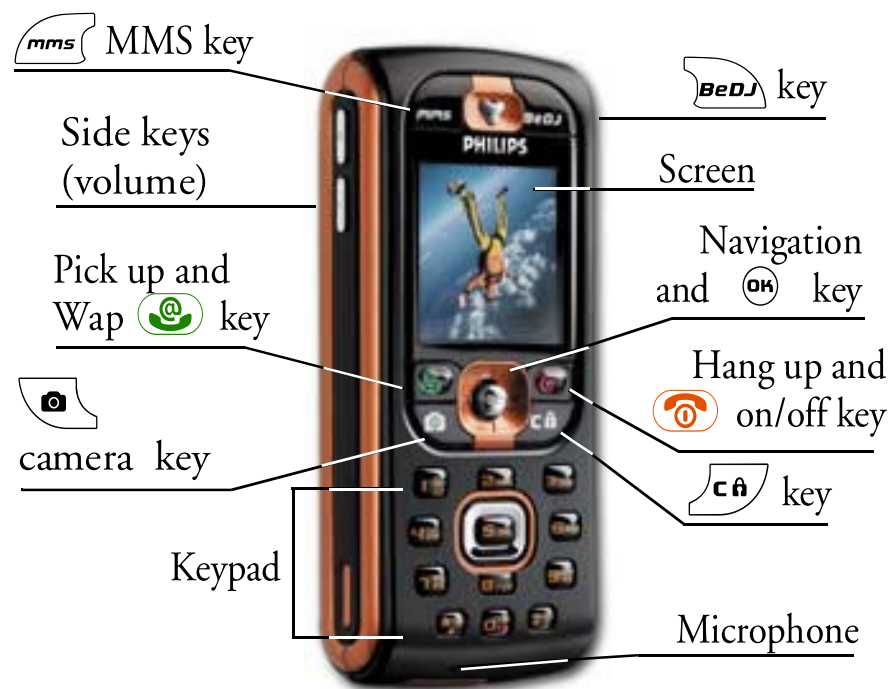

Philips continuously strives to improve its products. Therefore, Philips reserves the rights to revise this user guide or withdraw it at any time without prior notice. Philips provides this user guide «as is» and does not accept, except as required by applicable law, liability for any error, omission or discrepancy between this user guide and the product described.

How to...

Switch phone On/Off	Press and hold  .
Enter PIN code	Enter your PIN code using the keypad and press  or  to confirm.
Set the ringer volume	Press the side key up or down when in idle mode.
Make a call	Enter the phone number on the keypad and press  to dial.
Answer a call	Press  when your phone rings.
Set conversation volume	Press the side key up or down during the call.
End a call	Press  .
Access the main menu	Press  in idle mode.
Access the Phonebook	Press  in idle mode.

Use the Phonebook	Browse the list by moving Δ or ∇ and press  to call the selected name.
Access BeDJ	Press  in idle mode.
Access the Call list	Press Δ in idle mode.
Go to previous menu	Press  .
Quickly return to idle when browsing menus	Press and hold  .
Lock/unlock the keypad	Press and hold  when in idle mode.
View the last call made	Press  in idle mode.
Change the language used	Press and hold  , move Δ or ∇ to select the language and press  .
Access a function in the menu	Press  , move $\Leftarrow$ or $\Rightarrow$ to select a function, then press  to enter the sub-menu. Repeat to reach the desired function.

Activate a programmed Voice command	Press and hold the  key.
Launch WAP	Press and hold  .

The carousel

A carousel is a circular loop of icons displayed on the screen. Each icon represents a feature or operation of your phone.

All icons don't fit within the screen; the hidden ones appear when scrolling $\Leftarrow$ or $\Rightarrow$.

You access the main carousel by pressing  when in idle mode. Move $\Leftarrow$ (anti clockwise) or $\Rightarrow$ (clockwise) and press  when the feature or option of your choice is selected, or  to cancel. Another sub-carousel or list will then appear.

Pressing Δ or ∇ will alternate between two options, such as Activate/Deactivate, On/Off, Increase/Decrease a value, etc.

Browse carousels and lists until you reach the desired feature or option. When navigating in a list, a scroll bar located on the right hand side of the screen shows your actual position in the list. With the navigation key, you can then select or adjust all the functions of your phone as described in the relevant chapter of this user guide.

Events

Some events may modify the idle screen (missed call, new message, etc.). Press  to access the corresponding menu or long press  to go back to the idle screen.

Table of contents

1. Get started	7
Insert the SIM card	7
Switch on the phone	8
Set date and time	8
Copy the SIM phonebook	8
Charge the battery	9
2. Main features	10
Access and consult the phonebook	10
Make a call	10
Answer and end a call	10
Call handsfree	10
Change the ringer	11
Lock / unlock the keypad	11
Activate the silence mode	11
Activate the vibra alert	11
Fotocall: see and hear who's calling	12
Foto Talk: add voice to pictures	12
Read your mobile phone number	12
Mute the microphone	13
Unmute the microphone	13
Record a conversation	13
Adjust the earpiece volume	13
Clear the call list	13
Clear the SMS list	13

Clear the phonebook	14
Quickly scroll a list	14
Other features during a call	14
3. Menu tree	15
4. Text or number entry	18
T9® text Input	18
<i>What is it?</i>	18
<i>How to use it?</i>	18
Basic text input	19
5. Taking pictures	20
How to...	20
Pictures shots	20
<i>Preview mode settings</i>	20
<i>Take a picture</i>	21
<i>Foto Talk: add voice to pictures</i>	22
<i>Review the pictures</i>	23
<i>Receive a call</i>	23
<i>Make a call</i>	23
Settings	23
<i>Colour mode</i>	23
<i>Camera mode</i>	24
<i>Sound settings</i>	24
<i>Picture resolution</i>	24
<i>Picture quality</i>	24
<i>Self-timer</i>	24
6. Music & Mix	25
How to...	25

Get started	25
<i>Activate tracks</i>	25
<i>Change track melodies and instruments</i>	26
<i>Change the tempo</i>	26
<i>Start recording</i>	27
<i>Manage the recording</i>	27
Record a mix	27
Create your own style and mix	27
<i>From existing files</i>	28
<i>From scratch</i>	28
Save your own styles	28
Receive a call	28
7. Phonebook	29
SIM card phonebook	29
Phone's phonebook	30
Add names in the phonebook	30
<i>In the SIM card</i>	30
<i>In the phone</i>	30
<i>Add a record in the phone's phonebook</i>	31
<i>Own numbers</i>	31
Fotocall: see & hear who's calling	31
Edit and manage names	32
<i>In the SIM card</i>	32
<i>In the phone</i>	33
Make calls	34
<i>Emergency number</i>	34
<i>Other number</i>	34

8. Settings	36
Sounds	36
<i>Silent</i>	36
<i>Ringer volume</i>	36
<i>Ringer</i>	36
<i>Messages Ringer</i>	36
<i>Equaliser</i>	36
<i>Key tones</i>	36
<i>Sounds Alerts</i>	37
<i>Vibra alert</i>	37
Display	37
<i>Screen saver</i>	37
<i>Animation</i>	38
<i>Backlight</i>	38
<i>Wallpaper</i>	38
Hotkeys	38
Voice command	40
Voice dial	41
Security	42
<i>Keypad lock</i>	42
<i>Public names</i>	42
<i>Call barring</i>	42
<i>Change codes</i>	43
<i>PIN protection</i>	43
Network	43
<i>GPRS attach</i>	44
<i>Register again</i>	44
<i>Preferred list</i>	44

<i>Access settings</i>	44
Time and date	46
<i>Clock display</i>	46
<i>Set date</i>	46
<i>Date format</i>	46
<i>Time zone</i>	46
<i>Daylight saving</i>	46
<i>Set time</i>	46
Profiles	47
Language	47
9. Messages	49
SMS	49
<i>Send a SMS</i>	49
<i>Read SMS</i>	50
<i>SMS settings</i>	51
<i>SMS Archive</i>	52
E-Mail	52
<i>Settings</i>	53
<i>Write and send an e-mail</i>	55
<i>Receive and read e-mails</i>	56
Broadcast Message	60
Instant message	60
MMS	61
<i>Create an MMS</i>	61
<i>Receive an MMS</i>	63
<i>Manage folders</i>	65
<i>Settings</i>	65

10. Infrared	68
Position of devices	68
Send data	68
<i>Select an item</i>	68
<i>Send the selected item</i>	69
Receive data	69
<i>Activate IrDA</i>	69
<i>Save the data received</i>	69
<i>Use the phone as a modem</i>	70
11. Multimedia	71
Picture album	71
Sound album	71
Demo mode	72
Memory Status	72
Sound recording	73
BeDJ	73
Camera	73
12. Games & Appli.	74
Euro converter	74
Calculator	74
Alarm clock	74
Organiser	75
<i>Create a new event</i>	75
<i>Modify an event</i>	75
Brick Game	77

13. Call information	78
Call settings	78
<i>Call forward</i>	<i>78</i>
<i>Mailboxes</i>	<i>78</i>
<i>Auto redial</i>	<i>79</i>
<i>Any key answer</i>	<i>79</i>
<i>Call waiting</i>	<i>79</i>
<i>Caller ID</i>	<i>79</i>
Call list	79
<i>Call list</i>	<i>80</i>
<i>Reset</i>	<i>80</i>
Call counters	80
<i>GSM counters</i>	<i>80</i>
<i>GPRS counters</i>	<i>81</i>
14. WAP	82
Internet services	82
<i>Launch a WAP session</i>	<i>82</i>
<i>End a WAP session</i>	<i>82</i>
<i>Homepage</i>	<i>82</i>
<i>Bookmarks</i>	<i>83</i>
<i>Enter address</i>	<i>83</i>
<i>Settings</i>	<i>83</i>
<i>Push inbox</i>	<i>85</i>
Options	85
<i>Homepage</i>	<i>85</i>
<i>Back</i>	<i>85</i>

<i>Forward</i>	<i>86</i>
<i>Refresh</i>	<i>86</i>
<i>Save as homepage</i>	<i>86</i>
<i>Save as...</i>	<i>86</i>
<i>Exit</i>	<i>86</i>
<i>Receive a call</i>	<i>86</i>
15. Operator services	87
GSM strings	87
DTMF tones	87
<i>Pause and wait characters</i>	<i>87</i>
<i>For example: access your answering</i>	
<i>machine</i>	<i>88</i>
Make a second call	88
Answer a second call	88
Answer a third call	89
Conference call	89
Explicit call transfer	90
Precautions	91
Troubleshooting	95
Icons & symbols	98
Philips authentic accessories	99
Declaration of conformity	100


1 • Get started

Read the safety instructions in the «Precautions» section before use.

To use your phone, you must insert a valid SIM card supplied by your GSM operator or retailer. The SIM card contains your subscription, your mobile number, and memory in which you can store phone numbers and messages (see “Phonebook” page 29).


Insert the SIM card

1. Press on the two clips on each side of the back cover of your phone as shown below and remove it.

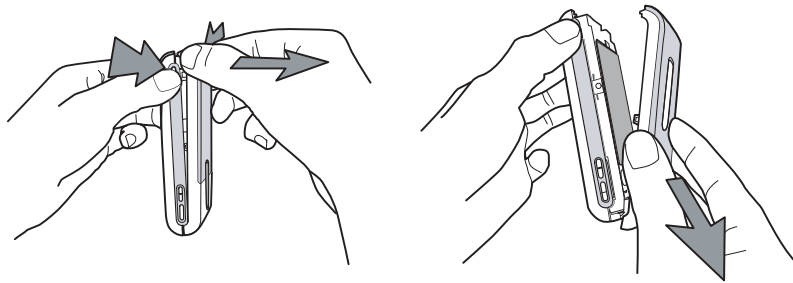


2. Remove the SIM card from its holder and insert it under the metal clip holder, until it stops. Be


careful that the clipped corner of the card is in the correct corner.

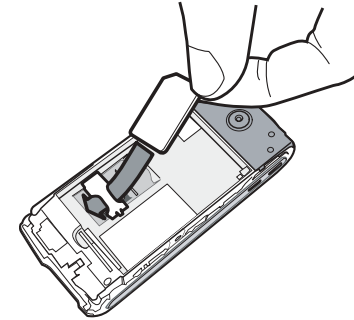

3. Slide the battery door into its slot, metallic connectors downwards, until it stops. Then lock it by pushing it downwards.

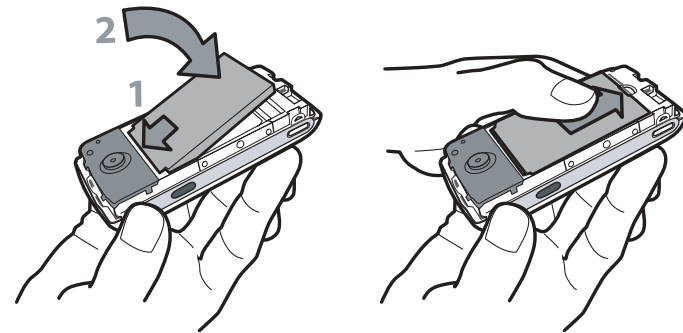

4. Replace the back cover of your phone: hook the front housing onto the hinges on the top of the phone, then press the bottom down until the latch catches.

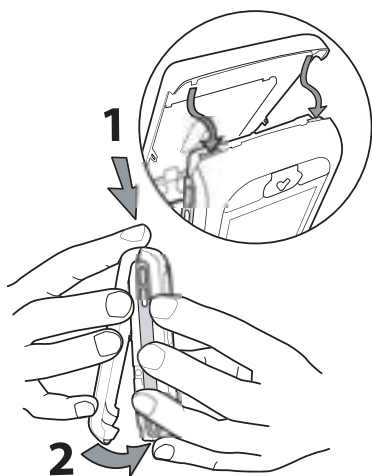

5. Remove the protective film covering the screen before using the phone.

Switch on the phone

1. To switch on the phone, press the  key.
2. When you switch on the phone, you may be prompted to enter the PIN code, which is the 4 to 8-digit secret code of your SIM card to protect it from unauthorised use. It is preconfigured and communicated to you by your operator or retailer. To personalise the PIN code, see page 43.

If you enter a wrong PIN code 3 times, your SIM card is blocked. To unblock it, you must request the PUK code from your operator.

3. Enter your PIN code. If you make a mistake, press . Then press  or  to confirm.

Set date and time

As prompted by the phone at first switch on, set the date by pressing the appropriate numeric keys (press  to erase a number), then press  to validate. Proceed in the same way to set the time.

For complete date and time options, see page 46.

Copy the SIM phonebook

If you do not copy the SIM phonebook at very first switch, you will be able to do it directly from the phonebook menu (see page 29).

If you had a mobile phone before and are using the same SIM card, the card might contain all or part of your current phonebook. The mobile phone detects this and a message asks you if you want to copy your SIM phonebook onto the built-in phonebook. Press  to cancel or  to accept. Whether you accepted, aborted or cancelled the copy, the phonebook located on your phone is always automatically set as your default phonebook. To switch back to the SIM phone-


book, press **OK** and select **Phonebook > Phonebook settings > Phonebook select > In SIM card**.

Charge the battery

Your phone is powered by a rechargeable battery. A new battery is partially charged and an alarm will warn you when the battery reaches low.

We recommend that you do not remove the battery when the phone is switched on: you may lose all your personal settings (see information on battery safety, page 93).

1. Once the battery and battery cover are clipped on the phone, plug the connector of the charger (supplied with the phone, in the box) into the **LEFT** hand socket at the base of the phone on one end, then plug it into a main AC power socket with easy access on the other end.
2. The battery symbol indicates the state of charge:
 - During charging the 4 charge indicators change; Each bar represents around 25% of charge and it takes around 1.45 hours to fully recharge your mobile phone.

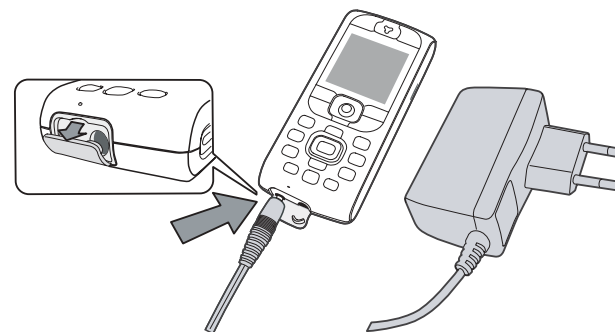

- When all 4 bars are steady the battery is fully charged, you can disconnect the charger. Depending on the network and condition of use, talk time can be up to 6 hrs and stand-by time up to 300 hrs.

Keeping the charger plugged to the mobile when the battery is fully charged doesn't damage the battery. The only way to turn off the charger is to unplug it, so use an easily accessible AC power socket. You can connect the charger to an IT supply (Belgium only).

3. If you don't intend to use your phone for several days, we recommend you disconnect the battery.

You can use the phone while it is on charge (note that the vibra alert goes Off when plugging the charger). If the battery is completely flat, the battery icon will only reappear after 2 or 3 minutes of charging.

2 • Main features

Access and consult the phonebook



In idle mode, press . Depending on the selected phonebook (in SIM or in phone), the content that appears on the screen may vary: see “Phonebook” page 29 for details on this subject.

To consult the phonebook during a call, press , select **View Names List**, press and scroll through the entries by pressing or . Then press twice to return to the in-call screen.

Make a call

1. In idle mode, enter the phone number using the keypad. To correct an error, press .
2. Press to dial the number and press to hang up.

For an international call, enter the «+» sign instead of the usual international prefix by pressing and holding . To learn how to make a call from the phonebook, see “Make calls” page 34.

Answer and end a call

When receiving a call, depending on your subscription and if the caller has permitted this information to be transmitted, his number may be displayed. If the number is stored in the selected phonebook (see page 29), the corresponding name is displayed instead of the number.

1. To answer the call, press .
2. To reject a call, press . If you have activated “Call forward” (see page 78), the call is diverted to a number or voice mail.
3. To hang up, press .

The phone will not ring if in Silence mode (see page 11). If you have selected Any Key Answer (see page 79), you can accept a call by pressing any key (except).

Call handsfree

For your own comfort and safety, ensure you move the phone away from your ear when calling handsfree, especially when increasing the volume.

1. If you selected the phonebook in your SIM card, select a record, press twice to access the next

carousel, then select **Call handsfree** and press **OK** to dial the number.

2. If you selected the phonebook in your phone, proceed the same way to call the default number, or press **◀** or **▶**, select another number in the list, then press **OK** and select **Call handsfree**.

*If already on the phone, press **OK** twice to switch to handsfree mode and back.*

Change the ringer

1. Press **OK**, select **Settings** > **Sounds** > **Ringer** and press **OK** again.
2. Move **△** or **▽** to select a ringer in the list, then press **OK** to confirm your choice.

Lock / unlock the keypad



Keypad lock

You can lock the keypad to protect the keys from being pressed accidentally (e.g., when the phone is in your pocket). To lock the keypad, press and hold **CA** when in idle screen. To unlock the keypad, press and hold **CA** again.

Activate the silence mode



Silent

If you don't want your phone to ring when you receive a call, you can deactivate the ringer as follows:

Press **OK** and select **Settings** > **Sounds** > **Silent** and press **▽** until the volume is set to **On**.

You can also press the side key while in idle screen until the volume is set to silence.

You can also mute the ringer when receiving a call by pressing the side key down.

Activate the vibra alert



Vibra alert

If you want your phone to vibrate when you receive a call, you can activate the vibra alert as follows:

1. Press **OK**, select **Settings** > **Sounds** > **Vibra alert** and press **OK**.
2. Move **△** or **▽** to select **On** or **Off** and press **OK** to confirm.

Activating the vibra doesn't mute the ringer. If you want to mute it and keep the vibra function on, activate the Silent mode as described above.

The vibra alert is automatically deactivated when you plug the charger.

Foto Talk: add voice to pictures

This feature, which is available when using the camera and also from the [Picture album](#), allows you to quickly send a message made of a picture and a sound.

1. When in idle mode, press  to activate the camera.
2. Press  to take a picture, then press  to access the option and select [Send by MMS](#).
3. Press  again to access the Voice memo recording window.
4. Press , select the person you want to send it to and validate the list. Press  twice to send your message.

This will send one message to one person, without text. See “MMS” page 61 for details on this feature.

Fotocall: see and hear who's calling

This feature is available only when selecting the phonebook in the phone (not the one in the SIM card).

This feature allows you to link one or several names to a group. When a name in that group calls, it will appear along with the corresponding picture, and the melody defined for that group will ring.

1. When in idle mode, press  to activate the camera, and press  to take a picture of your friend.
2. Select [Multimedia](#) > [Sound recording](#) > [New](#). Record them saying something and save it in the [Sound album](#).
3. Select [Phonebook](#) > [Phonebook set.](#) > [Group settings](#) > [Groups](#). Rename a group and select your friend's voice, then their picture.
4. Press , select a name in your phonebook and press . Press , and choose [Select group](#) to link it to the group that you renamed.

Read your mobile phone number

To read your own mobile phone number, press  when in idle mode and select [Own numbers](#), then press , select [Show](#) and press  again. Your phone number is displayed if present on your SIM card. If not, select [New](#), then follow the instructions.

If your own number has been stored in the Phonebook, you can read it during a call. See “Access and consult the phonebook” page 10.

Adjust the earpiece volume

During a call, move the side key up or down to increase/decrease the volume.

Mute the microphone



Mute

You can mute the microphone so that your caller cannot hear you.

During a call, press **OK**, select **Mute** and confirm by pressing **OK**.

Unmute the microphone



Unmute

To unmute the microphone during a call, press **OK**, select **Unmute** and confirm by pressing **OK**. The microphone is unmuted.

Record a conversation



Record dialogue

In most countries, conversation recording is subject to law regulation. We advise you to notify the caller if you intend to record the conversation you have with them and only record if they agree. You should also keep any recording

private. 1 min. is the maximum recording time available (see “Sound recording” page 73).

To record a conversation during a call:

1. While one or several simultaneous calls are in progress, press **OK** to access the call context carousel.

If you select Mute, then Record dialogue, only the caller's voice is recorded.

2. Select **Record dialogue** and press **OK**. Press **CA**, **OK** or hang up to end the recording.
3. In all cases, and when hanging up, an edit window allows you to name the recording.
4. Press **OK** to save the recording, which is then available in the menu **Multimedia** > **Sound album**.

Clear the call list



Reset

To clear your call list, press **OK** and select **Call Info** > **Call list** > **Reset**. Press **OK** twice to reset the call list.

Clear the SMS list

To clear the whole messages list at once, press **OK** and select **Messages** > **SMS** > **Read SMS** > **Delete all SMS**. Press **OK** twice to reset the SMS list.

You can also delete all the SMS messages from the SMS Archive menu. Deleting your SMS list is useful to free memory space in order to receive new messages.

Clear the phonebook

To clear the content of your phonebook at once, press **OK** and select **Phonebook > Phonebook set. > Delete all**. Press **OK** to reset the phonebook content.

This option only applies to the phonebook in your phone, NOT to the SIM phonebook.

Quickly scroll a list

When browsing a list (of ringtones, events, etc.), press **Page Down** to scroll page per page instead of item by item.

Other features during a call

- Change the equalizer settings (see page 36),
- Add a name to the phonebook (see page 30),
- Write and send a message (see page 49),
- Read a message (see page 50),
- Consult your Call list (see page 79),
- Consult your Organiser (see page 75),
- Make a second call (see page 88).

3 • Menu tree

The table below describe the complete menu tree (first to third levels) of your mobile phone, as well as the page reference you should refer to for more information concerning each feature or setting.



Settings p36



Sounds p36

Silent / Ringer volume / Ringer / Messages Ringer / Equaliser / Key tones / Sounds Alerts / Vibra alert



Display p37

Screen saver / Animation / Backlight / Wallpaper



Hotkeys p38

List of available hotkeys



Voice command p40

List of available voice commands



Voice dial p41



Security p42

Keypad lock / Public names / Call barring / Change codes / PIN protection



Network p43

GPRS attach / Register again / Preferred list / Access settings



Time and date p46

Clock display / Set date / Date format / Time zone / Daylight saving / Set time



Language p47

List of available languages



Profiles p47



Messages p49



SMS p49

Send a SMS / Read SMS / SMS settings / SMS Archive



E-Mail p52

For each available mail box

Settings / Open mailbox / Send mail



Broadcast Message p60

Reception / Topics / District codes



Instant message p60



MMS p61

Create an MMS / Receive an MMS / Manage folders / Settings



Multimedia p71



Camera p73



Picture album p71

List of available pictures



Sound album p71

List of available sounds



Demo mode p72



Memory Status p72



Sound recording p73



BeDj p73



Games & Appli. p74



Euro converter p74



Calculator p74



Alarm clock p74



Organiser p75



Brick Game p77



Infrared p68

Data / Receive



Call information p78



Call settings p78

Call forward / Mailboxes / Auto redial / Any key answer / Call waiting / Caller ID



Call list p79

Call list / Reset



Call counters p80

GSM counters / GPRS counters



Phonebook p29



View names list



Phonebook settings

Delete all / Phonebook select. / Group settings / Copy to phone



Operator services p87



Service numbers

The numbers available in this menu are operator and subscription-dependent, please check with your operator.



WAP p82



Services +

This menu is operator and subscription-dependent, please check with your operator.

4 • Text or number entry

Text can be entered in editing screens in two different ways: by using T9® predictive Text Input, or basic text input. Two other modes for numbers and punctuation marks, are also available. Icons appearing on the screen show the active text mode.

T9® text Input

What is it?



Tegic Euro. Pat.
App. 0842463

T9® predictive Text Input is an intelligent editing mode for messages, including a comprehensive dictionary. It allows you to quickly enter text. Press only once on the key corresponding to each letter needed to spell a word: key-strokes input are analysed and the word suggested by T9® is displayed in the edit screen. If several words are available according to the keys used, the word you entered is highlighted: press  to browse the list and to choose from those proposed by the T9® built-in dictionary (see example below).

How to use it?

Alphabets and symbols represented by each key are as follows:

 to 

To key in letters.



Short press to browse the list of candidate words, long press to browse back.



To confirm entry.



Short press to clear one entry, long press to clear all text.



Shift from standard, to lower, to upper case.



Shift from basic mode, to numeric or to punctuation typing mode.

Example: how to enter the word «home»:

1. Press     The screen displays the first word of a list: **Good**.
2. Press  to scroll and select **Home**.
3. You can press either  or  to confirm selection of the word **Home**. Pressing  also confirms selection of the word and inserts a space, ready for the next word of your message.

Basic text input

If you wish to access the basic text input, select «Abc» basic text input using  key. This method requires multiple key presses to reach the desired character: the letter «h» is the second letter on the  key, so you must press it twice to enter «h». Using this mode requires you press a key as many times as is equal to the order of the letter.

To enter the word «Home» in basic text input mode, you should therefore key in ,  (GHI) ,

,  (MNO),  (MNO), ,  (DEF).

Press  when the message is completed.

Letters, numbers and symbols are located on each key as follows:

 space 1 @ _ # = <	 a b c 2 à ä å æ ç
> () & £ \$ ¥	
 d e f 3 é è Δ Φ	 g h i 4 Γ ì
 j k l 5 Λ	 m n o 6 ñ ò ö
 p q r s 7 β Π Θ Σ	 t u v 8 ü ù
 w x y z 9 ø Ω Ξ Ψ	 . 0 , / : ; » ' ! ; ? * + - %

5 • Taking pictures

Your mobile phone features a digital camera that allows you to take pictures, store them in your phone, use them as wallpaper or send them to your friends and relatives.

How to...

Activate/deactivate the camera	Press the  key to activate, and long press  to deactivate.
Zoom in/out	Press the joystick key  (up) or  (down).
Change the Camera mode	Press  to toggle between Night and Normal mode.
Change the Picture resolution	Press  to switch from VGA to QVGA to SQVGA to 128 x 128 .
Access the camera settings	Press  when the camera is active.
Take a picture	Press  when the camera is active.

Save the picture	Press  right after the shot.
Delete the picture	Press  right after the shot.
Access the shot options	Press  right after the shot.
Activate/deactivate the self-timer	Press  .

Within any menu related to the camera, a long press on the  key will cancel any current action and bring you back to idle mode.

Pictures shots

Preview mode settings

Press  to display the camera preview screen: the lens of the camera is automatically focused. Icons displayed on top and bottom of the screen allow you to check the different **Modes**, and also to set the **Self-timer activation**.

All options and key presses described in the present section are applicable only when the camera mode is active, i.e. when the preview is displayed on the screen. Press  to access any of them.

Camera mode

Two modes are available: **Normal** and **Night mode**. According to ambient light level, press  to toggle between modes, which are reflected by the icons in the bottom of the screen (sun & moon).

Picture resolution

The default picture size of the standard format is **128 x 128**. Press  to switch to **VGA** (640 x 480 pixels), to **Q VGA** (320 x 240 pixels), to **SQ VGA** (160 x 120 pixels) or to **128 x 128**. The **Picture resolution** you select is displayed in the bottom right corner of the screen.

Zoom mode

This option is available in all modes: one-level zoom (x2) in **128 x 128** mode, and two-levels zoom (x2 and x4) in all the other modes. In any mode, press the navigation key  or  to zoom in or out.

The zoom icon is highlighted when the zoom is activated. Zoom out is available only after a zoom in.


Self-timer

This option allows you to set the **Self-timer** option **On** or **Off** (see next section for details).

Take a picture

With the key

1. If the self-timer option is **Off**, and once the camera was activated, press the  key to take a picture, which is then automatically displayed on the screen.

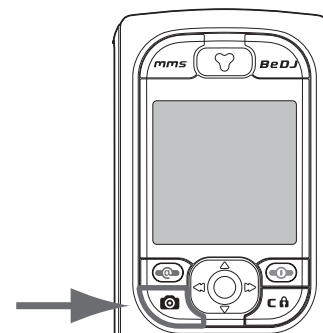

2. The number in the upper black bar of the screen shows its row. The pictures will be named in the **Own pictures** menu «img_1.jpg», etc., up to 9999.

This does not mean you can take up to 9999 pictures (see “Number of pictures” below), but that pictures, including the ones you delete, are numbered up to 9999. Numbering will then restart from 1 on.

You can then choose to:

Press  To **Delete** the picture you have taken.

Press  To **Save** it.

Press 

To access the list of available options, which are:

- **Save** the picture in the **Picture Album**,
- **Modify** it,
- **Send** it via **MMS**, **Infrared** or **E-mail**,
- **Take a new picture**, which will bring you back to the preview window.



or To go back to preview mode.

With the self-timer

1. If the self-timer option is **On**, press  to activate it (or press  if the option is **Off**).
2. The count-down starts at -10 seconds (this value cannot be changed). A beep is played 2 seconds before the picture is taken, then again when it's actually shot.

Beep alarms can be customized via the camera settings. At any time, press  to stop the timer and go back to preview mode or press  to just stop the timer.

3. Once the picture is shot, follow the instructions starting at point 2 of the previous section.

Number of pictures

The number of pictures you can save in the phone will vary according to the settings you have configured: the higher the resolution, the bigger the file size.

A message will warn you if there isn't enough memory to store the picture you have just taken. In this case, you must delete data (sounds, images, etc.) before storing a new picture. Select Multimedia > Memory status to check the memory available in your phone.

Foto Talk: add voice to pictures

This feature, which is available when using the camera and also from the **Picture album**, allows you to quickly send a message made of a picture and a sound.

The maximim size of an MMS is 50 KB.

1. When in idle mode, press  to activate the camera.
2. Press  to take a picture, then press  to access the option and select **Send by MMS**.
3. Press  again to access the Voice memo recording window.
4. Press , select the person you want to send it to and validate the list. Press  twice to send your message.

This will send one message to one person, without text. See “MMS” page 61 for details on this feature.

Review the pictures

The pictures you save are automatically stored in the **Multimedia > Picture album > Own pictures** menu. Select a picture in the list and press  to access the graphical display. Then press  or  to go to the next or previous picture, or  to **Send**, **Delete** or **Rename** the picture. Press  to go back to the text list.

As mentionned earlier, Foto Talk is also available from the Picture album menu.

Receive a call

When receiving a call while using the camera:

1. Answering the call will quit any action linked to the camera: picture preview, picture shot, self-timer, options browsing, etc. Your phone will return to idle when you hang up. If you had taken a picture that was not yet saved, it will be lost.
2. Rejecting the call will also quit any action linked to the camera, and will bring you back to the preview screen.

Make a call

To make a call, you must first long press  to go back to the idle screen. Then enter the number or select a name of your phonebook, press  to dial and press  to hang up.

Settings

Further to the settings that are available directly within the preview screen as described above, several menus also allow you to set other options. Press  while the camera mode is active to access them.

In all cases, select an option, and press  for the next picture to be taken using this mode, or  to cancel.

When quitting the camera application, settings you have defined will be saved and available when reusing the camera or until you change them again.

Colour mode

Allows you to choose a mode available from the following: **Colour**, **Black & white**, **Sepia** and **Blue**. The effect will be applied to the picture according to the mode you chose (e.g., **Sepia** will take a brown and beige picture, giving the impression of an old-times picture). The default mode is **Colour**.

Camera mode

Allows you to choose one of the two modes available: **Normal** and **Night**. The default mode is **Normal**.

Sound settings

Both **Alert** and **Shoot** sounds can be set from this menu. The first one occurs 2 seconds before the picture is taken, the second one when it's shot. In both cases, select **On**, and press **OK** to access the list of available sounds. Select one of the sounds, or **<New>** to create a new sound, then press **OK** to activate it.

Picture resolution

Allows you to choose a resolution available among the following: **VGA** (640 x 480 pixels), **Q VGA** (320 x 240 pixels), **SQ VGA** (160 x 120 pixels) and **128 x 128**. The default mode is **128 x 128**.

Picture quality

Allows you to choose an image quality available among the following: **Low**, **Medium**, **High**. The default mode is **Medium**.

Self-timer

See "Self-timer" page 21.

6 • Music & Mix

With BeDJ, you can create your own sound by using a predefined BeDJ style (as explained below), or any SP-MIDI or MIDI ring tones present in your phone, or that you downloaded via WAP, Infrared, etc. (refer to relevant chapters in the present user manual for complete information). You can then send your own mix to friends and relatives, use it as a ringer or an alarm, etc.

How to...

Switch **BeDJ** On/
Off

Press  to switch on OR
Press  and select **Multime-**
dia > BeDJ.
Press and hold  or 
to switch off.

Activate/deactivate
a track

Press a key from  to  .
*Press  to deactivate all
tracks at once.*

Record the mix
(start and stop)

Press  .

Activate the
Tempo field

Press  .

Open the track
selection list

Press and hold a key from
 to  .

Open the
Help screen

Press  .

Open the
Options list


Press  .

*Within BeDJ, the colour orange always shows the in-
formation currently in use, or a selected item.*

Get started

Activate tracks

1. Launch BeDJ by pressing the  button, on
the top right corner of your mobile phone.

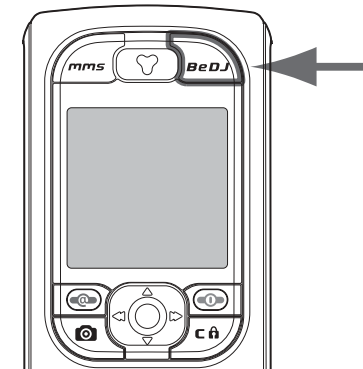

2. In the BeDJ screen that appears, the default music style is selected (e.g., Groovy, Techno, etc.).
3. In the upper left part of the screen, a small table displays the current tempo value, the status of the recording (Off by default) and the name of the track.
4. In the bottom part of the screen, 9 tracks are available, linked to keys  to  and which you can mix: press the key corresponding to the track you want to activate.
A total of 16 tracks are available: press and hold keys  to  to open the track selection list. Key  is always dedicated to the voice track.
5. The activated track appears in orange, and the above table displays the name of the relevant melody and instrument.

Change track melodies and instruments

Press and hold keys  to  according to the track you would like to change. In the list that appears, you can change first the current melody used by the selected track, then the instruments used in the melody.

Melody

1. The current melody used in the selected track is the first one highlighted in the list. Move  or  to select another one (which is automati-

cally played when selected), then press  to confirm your choice.

2. The name of the selected melody is displayed in the upper part of the screen. Press  to access the instruments list used in this melody.

Instruments

1. The current instrument used in the selected melody is the first one highlighted in the list.
2. Move  or  to select the next or previous instrument, then press  to select it.

Change the tempo

1. Press  to activate the Tempo field.
2. The Tempo (displayed in bmp or «beats per minute») applies to all tracks. Press the highlighted  or  keys to increase or decrease it.

You don't have to save the Tempo, which is automatically taken into account.

3. Press  or  to go back one screen.

You cannot change a Tempo while playing tracks or during a mix recording.

Record a mix

Start recording

1. When ready to record your mix, press . The timer starts and the **On air** red icon is selected.
2. While recording your mix, you can:

Press keys To activate the relevant track.

 to 

Move  or  To increase/decrease the current track volume.

Move  or  To highlight the previous or next track.

3. Press  to stop recording.

The recording will stop automatically when the mix reaches 50 KB (approximately 2 min). Capacity depends on the memory available in your phone: select Multimedia > Memory Status for memory information.

Manage the recording

As soon as you stop recording your mix, a window automatically opens and displays the following options

for you to choose from:

Remix	Allows you to record a new mix by using the same tracks.
Re-play	Plays the mix you just recorded.
Store	Opens the Save window, for you to name and save your mix.
Send by MMS	Allows you to send your mix as part of a multimedia message (MMS).
Send by IrDA	Activates IrDA so that you can send your mix to another IrDA device.
Send by e-mail	Opens the E-Mail menu so that you can send your mix via e-mail.

The recording you save will appear under the name of your choice in Settings > Sounds > Ringer list as well as in Multimedia > Sound album. You can select it as a ring-er for incoming calls and new events.

Create your own style and mix

Advanced options allow you to create and mix your own styles of music, either directly from the BeDJ styles available (e.g. Groove, Techno, Disco, etc.), or from the ringers list (e.g., Bach, Cool, Dream, etc.).

The ringers list includes the MIDI files you might have downloaded via e-mail, WAP, IrDA, etc.

From existing files

1. When the BeDJ screen is active, press **OK** to access the options list.
2. When selecting **Mix ringers** or **BeDJ styles**, simply choose one of the available melodies in the list and press **OK** to confirm your choice.
3. The phone automatically goes back to the BeDJ screen, and the melody associated to the ringer you have selected is divided into tracks.
4. As described above, you can then activate and deactivate tracks, record your mix, etc.

The number of active tracks depends on the melody you have chosen.

From scratch

1. When selecting **Advanced**, BeDJ opens a complete new set of empty tracks.
2. Press and hold **I M**: the list of all the MIDI files present in your phone appears on the screen. Select one of them and press **OK**.
3. A new list appears, showing all tracks of the selected MIDI file (max.16). Move **△** or **▽**

to select one of them, then press **OK** to apply it to key **I M**.

4. Repeat these two steps to apply tracks of your choice to keys **2 ABC** to **9 WH** of the phone.
5. When ready, record your mix (see page 27).
6. Press **OK** twice to go back to normal mode.

*Have fun and mix: you can apply any of the 16 tracks of any ringer of your choice to **I M** to **9 WH** keys of your phone! This makes thousands of possibilities that allow you to completely personalise your own mix.*

Save your own styles

You can save your own **Style** in the BeDJ styles menu, and reuse it later to create another mix. This new style will contain all the tracks you have mixed, but without the effects applied to the mix.

Receive a call

When receiving a call while BeDJ is activated, your mobile phone will automatically mute the sound.

1. Answering the call will quit BeDJ and your phone will return to idle when you hang up.
2. Rejecting or ignoring the call will allow you to stay in the BeDJ screen.

7 • Phonebook

All operations described in this chapter require the relevant Phonebook, whether in the SIM or in the phone to be selected.

Your mobile phone has two phonebooks. The SIM phonebook is located on the SIM card and the number of entries depends on the card capacity. The second phonebook is built into the mobile's memory and can hold up to 299 names.

The SIM card capacity depends on the type of card you have. Please check with your local dealer for full information on this subject.

The phonebook located on your phone shares the mobile capacity and memory with other features. As such, they are inter-dependent: the more names you create, the less events you can store and vice-versa. 299 is the maximum number of names and events cards, provided that other features (memos, sounds, pictures, etc.) are not using a significant amount of the phone's memory.

The **Phonebook** menu allows you to select one of the two available phonebooks: the one on your SIM card or the one in your phone. When entering new names

in one of the **Phonebooks**, they will only be added to the one you have selected.

The Reset phonebook option does NOT apply to the SIM phonebook.

Copy all to phone will copy the content of your SIM card into your phone. Selecting this option twice will duplicate all the names.

SIM card phonebook

If you are using a SIM card for the first time, follow the standard SIM card installation procedure as described page 7, then go to the section titled “Add names in the phonebook” below.



Press **OK** and select **Phonebook**, **Phonebook set.**, **Phonebook select.** Then press **Phonebook select.** **△** or **▽** to select the phonebook located in your SIM card. Names added to this phonebook can then be copied into the phonebook located in your phone.

*If you cancelled or aborted the automatic copy of your SIM phonebook at very first switch, you can do it manually : press **OK** and select **Phonebook**, **Phonebook set.**, then **Copy to phone.***



In SIM card

When you copy the contents of your SIM phonebook into your phone, you can still use the phonebook of your SIM card, even though it features less fields of information.

Phone's phonebook

Your mobile phone only manages one phonebook at a time and will ignore the information relative to the other one: e.g., if «Smith» is present in both phonebooks and if you delete it in the phone, it remains unchanged in the SIM.



In phone

The default selected phonebook is the one located in your phone. It can hold up to 299 names and can be reset at once using the **Reset phonebook** option. Depending on SIM card capacity, names added to this phonebook can then be copied into the SIM phonebook (see “Copy to SIM” page 34).

Add names in the phonebook

In the SIM card

To add a name in the SIM phonebook:

1. Press ∇ to enter the phonebook, select **New**, then press **OK**.

2. Enter the name, then the number of your choice and press **OK**.

A number can contain a maximum of 40 digits, depending on your SIM card.

Entering all numbers, including local ones with international prefix, country code and area code will allow you to dial them from any location.

3. Select the type of number allocated to the name: **Phone**, **Fax** or **Data** and press **OK** to confirm and store this name in your phonebook.

In the phone

The phonebook in your phone can holds more information fields than the SIM card phonebook. Including (in latin characters):

First and last names fields	up to 20 characters
Numbers fields (Mobile, Work, etc.)	up to 40 digits and 1 «+»
Extra fields (e-mail and note)	up to 50 characters
Group selection	20 groups available

You can create up to 299 records, holding up to a maximum of 7 information fields for each, with a maximum of 5 numeric fields. For example, you can save 2 mobile numbers, 3 work numbers, an e-mail address and a text note, all for the same person.

Add a record in the phone's phonebook

Add a name field

1. Press ∇ to enter the **Phonebook**, select **<New>**, and then press OK .
2. Enter the last name of your contact and confirm by pressing OK , then enter their first name and confirm by pressing OK .

*One of the two name fields can be empty, but not both.
To go back to the previous field, press CA .*

Add a number/text field

1. After entering the name of your contact, you will be in the **Number type** menu. You can choose from numerical fields (Mobile, Fax, Data, Pager, Home, Work) or alphanumeric fields (Note, e-mail). Make your selection and enter the relevant number or text. Then press OK to save this new record.
2. The phone will then prompt you the **Group**: choose the group you want this name to belong to and press OK to confirm. The record is then saved in your phone's phonebook.
3. You can associate a specific **Melody** and **Picture** to each group, as well as **Rename** groups. Select **Phonebook > Phonebook set. > Group settings**, then refer to "Fotocall: see & hear who's calling"

page 31 for complete information). When receiving a call from a contact associated to a group, the melody and/or picture defined for this group will automatically ring and/or appear on the screen.

Own numbers

The **Own numbers** option that appears in your phonebook should contain your own phone number. If not, we advise that you enter your mobile number as well as any other relevant information.

Although all its fields can be empty, the «Own numbers» item cannot be deleted.

Fotocall: see & hear who's calling

This feature is only available when you select the phonebook of your phone, NOT the SIM phonebook.

The Fotocall feature allows you to personalize the groups available with their own name («Friends», «Office», etc.), a given picture (from the **Picture album**) and a given melody (from the **Ringers** list).

You can link one or several contacts from your phonebook to a group. When a name in that group calls, the contact's name will appear along with the defined picture of that group. The melody defined for that group will also ring.

For that important person, why not set up a group just for them. Use the camera to save their picture in the Picture album and Sound recording to save their voice as a ringer. When they call, you will truly be able to see and hear them (for camera, see page 20 and for sound recording, see page 71).

1. To use Fotocall, you need to be using the phonebook in the phone; if you are not already doing so, see “Copy the SIM phonebook” page 8.
2. Then select **Groups setting**, press  and select the group of your choice.
3. Rename the group to be identified («Friends», «Kids», etc.) and select the **Melody** and the **Picture** to be associated to this group.
4. Long press  to go back to idle, then  to display the content of your Phonebook. Select a contact you wish to link to this group and press . Then choose **Select group** and select the group of your choice.
When this contact calls you, the **Melody** and **Picture** associated to his group will ring/appear on the screen.

Edit and manage names

Once you have stored names in your phonebook, press  when in idle mode to access the **Phonebook**. You

can search for a name in the phonebook by pressing the corresponding key for the letter that you want to go to in the list (e.g., press  twice to access the letter «U»). The first record starting with this letter is selected in the list. Depending on the phonebook menu you have selected, you will have access to part or all of the following options:

- | | | |
|---------------|------------------|-----------------|
| • Delete | • Delete all | • Change name |
| • Show | • Send an SMS | • Include in a |
| • Copy to SIM | • Send an MMS | group |
| • Flash dial | • Make default | • Associate a |
| • Change type | • Copy to phone | voice dial |
| • Call | • Call handsfree | • Send via IrDA |

In the SIM card

Select a name in the SIM card phonebook, then press  to access one of the following options:

- **Delete** to delete the selected name and number,
- **Change** to change the selected name and all related information,
- **Copy to phone** to copy the selected name and all related information into the phonebook located in your phone.
- If you cancelled the automatic copy of the SIM phonebook at the very first switch of your phone, you need to do it manually.

In the phone

Add a field

1. To add a new field to an existing record, select the name of your choice, select **Show** and press .
2. Select **<New>** and press . Choose the type of field to be added and press . Enter the number or text, then press  to save changes.
3. Repeat steps 1 and 2 to add up to 6 fields to the same record. Make a short press on  to go back to the previous menu, or a long press to go back to the idle mode.

Numbers or text will appear in order of creation date. The first fax or phone number you enter becomes the default number. As such, it appears in first position in the list. To make another number default, see “Make default” page 33. Alphanumeric fields (note and e-mail) can only be changed or deleted.

Change a field content

1. To change the content of a field in an existing record, select the name of your choice, press , select **Show** and press  again.
2. Select the field to be changed in the list and press .

3. In the carousel that appears, select **Change** and press . Make the changes wanted and press  to save them.

Change a field type



Change type

To change a field type of an existing record, repeat steps 1 to 3 of the “Change a field content” paragraph. Then select **Change type** in the carousel menu, select the new type of number and press  to confirm your choice.

If you copied your SIM phonebook into your phone, some numbers might appear as being of «No type» and don't have any icon. «No type» numbers can be changed: follow the procedure described previously to define a type for these numbers.

Delete a field



Delete

To delete a field of an existing record, repeat steps 1 to 3 of the “Change a field content” paragraph. Then select **Delete** in the carousel menu, and press  to confirm.

Make default



Make default

The first number you enter when creating a new record becomes the default number: it will appear first on the fields list and is automatically called when pressing the pick-up key or when pressing  and selecting the

Call, Call handsfree or Send SMS option. To change the default number (e.g. make the «Work» number default instead of the «Home» number), repeat steps 1 to 3 of the “Change a field content” paragraph. Then select **Make default** in the carousel menu, and press  to confirm.

Copy to SIM



As mentioned earlier, entering names in the SIM phonebook can be useful if you change phones frequently. If you copy phone numbers into the SIM card, your phonebook is always updated when switching phonebooks or when using another phone.

To copy a number into the SIM card phonebook, repeat steps 1 to 3 of the “Change a field content” paragraph. Then select **Copy to SIM** and press .

Make calls

For your own comfort and safety, ensure you move the phone away from your ear when calling handsfree, especially when increasing the volume.

Emergency number



The emergency number will call the emergency services number in your

country. In most cases, you can call this number even if your keypad is locked and if you haven't yet entered your PIN.

1. *Depending on the network operator, the emergency number can be dialled without the SIM card being inserted. In Europe the standard emergency number is 112, in the UK it is 999.* To call this number, enter it in idle mode by pressing the corresponding keys, or press  and select **Phonebook > View Names List > Emergency number**.
2. Press  to dial and press  to hang up.

Other number

Enter a number



In idle mode, enter a number by pressing the corresponding keys. Press  to dial and press  to hang up.

Pressing  will let you access a carousel allowing you to call this number, store it or send a SMS.

Select a name

1. Press  and select the record of your choice.
2. If you selected the phonebook in your SIM card:
 - once the record is selected, simply press  to call,
 - or

- press  twice to access the next carousel, then select **Call** or **Call handsfree** and press  to dial the number.
- 3. If you selected the phonebook in your phone:
 - To call the **default** number:
 - once the record selected, simply press  to dial, **or**
 - press  to access the record carousel, then select **Call** or **Call handsfree**.
 - To call any other number, choose **Show** once the record is selected and choose a number type in the list (Mobile, Home, etc.). Press  to access the next carousel and select **Call** or **Call handsfree**.
- 4. In all cases, press  to hang up.

*You can also switch to handsfree while a standard call is in progress: press , select **Activ.h/free** and press  to confirm.*

Use Flash dial



Flash dial

In idle mode, press and hold a key between  and  to dial the associated entry (see “Hotkeys” page 38): connection is established. Press  to hang up.

Use Voice dial



Voice Dial

In idle mode, press and hold , then pronounce the saved voice tag (see “Voice dial” page 41). If the phone recognizes the voice tag, it dials the number associated with it. Press  to hang up.

8 • Settings

The **Settings** menu allows you to customise your phone and change the settings related to each available option (sounds, time and date, security, etc.). The **Profiles** menu allows you to change several settings at once (see page 47).

Sounds

Silent



Silent

Allows you to set the **Silence** mode **On** or **Off**. When this setting is **On**, all alerts are deactivated and the vibra alert is active.

The Silent mode also applies to key tones.

Ringer volume



Ringer volume

By default the ringer volume can be set to **Medium**. Press Δ or ∇ to set the volume of your ringer from **Silent** to **Increasing**.

Ringer



Ringer

Allows you to select the ringer tone from the choices available. The list also includes the music mix you create with BeDJ (see page 73), recorded sounds and melodies at-

tached to messages you receive (from e-mail, SMS, etc.).

Scroll through the list by pressing Δ or ∇ and wait to hear the selected melody being played. Press **OK** to select this melody as ringer, **CA** to cancel, or move to the next melody.

You will not hear the melody if the volume ringer is set to Off or if the Silence mode was activated (see page 11).

Messages Ringer



Messages Ringer

Allows you to set an alert beep **On** or **Off**, for each time you receive a new message. When **On**, this option also allows you to select the alert of your choice from the ringers list.

Equaliser



Equaliser

This option allows you to choose from different audio settings, also available while a call is in progress. In this case, press **OK**, select **Equaliser**, scroll through the list and wait a few seconds to hear the difference. Press **OK** to confirm your choice.

Key tones



Key tones

Allows you to set the key tones **On** or **Off**. Even when set **Off**, DTMF are played during calls (see page 87).

Sounds Alerts



Sounds Alerts

Allows you to set alert beeps **On** or **Off** for the following items:

- when an **Event** you programmed in your organiser is due,
- when you have missed a call,
- when the **Battery** is low and requires charging,
- to manage the duration of your calls, first after 45 seconds, then every minute of an ongoing call (the beep cannot be heard by the caller).

This menu only allows you to activate/deactivate the alert sounds, NOT the alerts themselves. E.g. setting the event alert Off will not prevent your phone from displaying the Reminder screen (if you programmed one), but the corresponding sound will not be played.

Vibra alert



Vibra alert

Allows you to set the vibra alert **On** or **Off** when receiving a call, when an event set in the organiser is due, when you receive

a message and when the alarm rings.

The vibra alert is always Off when you connect the charger or the Cigarette Lighter Adapter.

Display

Screen saver



Screen saver

Allows you to set the screen saver **On** or **Off**. When **On**, it will run a slide show in idle mode, by using the jpeg file(s) you have stored in your phone and selected.

Setting the Screen saver Off automatically activates the Economy mode, i.e., the current time displayed on a black background. This mode increases the autonomy of your phone (increases your battery life).

1. When setting the screen saver **On**, select a picture in the list that appears by pressing ◀ or ▶ (you deselect it also by pressing these keys), then press ▽ to move to the next picture. Once you selected the pictures of your choice, press **OK** to activate the screen saver.

You must select several pictures (up to 10) in order to display a slide show. When selecting only one picture to be used as screen saver, only this picture will be displayed.

2. Select **Start delay** and press △ or ▽ to choose a value. When in idle mode, the screen

saver will start according to the time limit you have set.

3. Then select the **Display period** and press **OK**. The timing you have set will be applied between each picture of the slideshow.

Animation



Animation

Allows you to set the animation of the carousel menus **On** or **Off**. When **On**, this option will also scroll texts, such a message selected in the **Read SMS** menu.

Deactivating this function increases the autonomy of your phone.

Backlight



Backlight

The backlight is activated when receiving incoming calls or messages, browsing lists and menus, etc. Press **Δ** or **▽** to set the backlight **Duration** by selecting one of the available values and press **OK** to confirm.

Deactivating this function increases the autonomy of your phone.

Wallpaper



Wallpaper

Allows you to set the Wallpaper **On** or **Off**. When **On**, the picture(s) you selected is (are) displayed in **Normal** or **Fade** mode in idle mode, if you didn't activate a slide show.

Only JPEG type pictures can be used as Wallpapers.

Hotkeys

Instead of entering the various menus and browsing the lists, you can set up direct access to a specific function by linking it to a **Hotkey**. A long press on the key will then automatically activate the function or call the associated number (Flash dial).

*You can only program keys **2 ABC** to **9 WH YZ** and ***#**, as keys **0** (select language) and **1** (call voice mailbags) are predefined and locked, preventing reprogramming. Depending on your service provider, other hotkeys may be predefined and locked.*

1. Select a key from **2 ABC** to **9 WH YZ** and press **OK**.
2. Browse the list to select the function you wish to associate with this key (see list following). Press **OK** to confirm your choice.

*If the selected key is already set, you can reprogram it: select **Settings > Hotkeys > a hotkey in the list**. Press*

 twice, select **Change** and press . This will bring you to the list of available functions.

- To use the hotkeys, simply press and hold the key corresponding to the function you want to launch or to the number you want to dial while in idle mode.

You can associate hotkeys  to  to the functions of the following table:

	Dials the associated number of the phonebook.
	Opens the Send Messages menu.
	Opens the Read Messages menu.
	Activates the Instant message feature, to quickly Reply to the sender of the received message.
	Immediately locks / unlocks the keypad.
	Activates the Silence profile (vibra on, ringer volume off).

	Activates the Car profile (ringer volume high, any key answer).
	Activates the Headset profile (ringer volume medium, any key answer on).
	Activates the Meeting profile (vibra on, ringer and all keys set to silent).
	Activates the Outdoors profile (ringer volume high).
	Activates the Personal profile.
	Activates the Autonomy profile, which extends the battery autonomy (animation off, vibra off, backlight off, ringer volume medium).
	Direct access to the Calculator .
	Redials the last number called.
	Redials the number of the last call received.
	Dials the emergency call number.



E-mail

Opens the **E-mail** menu for access to the mail boxes.



Show balance

Displays the remaining credit balance.



Accum. cost

Displays the **Accumulated cost** of outgoing calls.

Subscription dependent



Add new event

Opens the **Add event** menu of the Organiser.



Show events

Displays the **Events** list of the Organiser menu.



Alarm Clock

Opens the **Alarm** menu.



Record

Allows to record a new sound.



WAP

Launches a **WAP** session.

Subscription dependent



Screen saver

Opens the **Screen saver On/Off** menu.



To voice mail

Forwards **ALL** calls to the voice mailbox.



Brick Game

Direct access to the **Brick Game**.



Voice mail box

Dials the number of your voice mailbox.



Games

Opens the **Games** menu.



-> Euro

Direct access to the Euro converter (from currency).



Euro ->

Direct access to the Euro converter (to currency).

The Euro converter is available upon subscription and only in countries using the Euro.

Voice command



Voice Command

Instead of entering the various menus and browsing the lists, you can also set a voice tag that will activate a feature (e.g., launch the Calculator).

You can associate a Voice command to all the functions supported by the Hotkeys (see page 38), except for «Get mail» and «Alarm clock».

1. Select **Settings** > **Voice Command** > **<New>** and press , then browse the list to select the function to be set with a voice tag. Press  to confirm your choice.
2. When **Press OK and speak** appears, follow the instructions displayed on the screen. When prompted to record your voice tag, make sure you are in a quiet environment, choose a short and simple word and clearly pronounce it.
3. Press  and repeat the steps described above to add more voice commands.

To use the voice command, press and hold  when in idle mode, then say the recorded voice tag. Words recorded as voice tags can be played, changed or deleted at any time.

Voice dial



Voice Dial

Voice dial allows you to quickly call a name from your phonebook: set a voice tag by recording a word that will call the corresponding name when pronounced.

1. Select **Settings** > **Voice dial** > **<New>** and press .
2. Browse the list to select the call number to be set with a voice tag. Depending on the selected phonebook (see “Phonebook” page 29):
 - SIM phonebook: select a name in the list and press ,
 - Phone’s phonebook: select a name in the list, then the phone number of your choice if several numbers were stored for this name and press .
3. When **Add voice tag?** appears, press  and follow the instructions displayed on the screen. When prompted to record your voice tag, make sure you are in a quiet environment, choose a short and simple word and clearly pronounce it.

To use the voice command, press and hold  when in idle mode, then say the voice tag corresponding to the number you want to dial.

To display the list of voice dials you have defined, select **Settings** > **Voice Commands** or **Voice dial** and press . Words recorded as voice tags can be played, changed or deleted at any time.

Up to 15 voice tags can be defined and shared between voice dial and voice command.

Security

Keypad lock



Keypad lock

Allows you to lock/unlock your keypad by pressing and holding the  key when in idle mode. The keypad automatically unlocks when receiving a call.

You can also choose immediate or delayed lock by selecting Settings > Security > Keypad lock, then one of the values by pressing  or . Your keypad will then be permanently locked. If you unlock it by pressing the  key, it will be temporarily unlocked while you use your phone, and locked again after the time period you selected.

Note that even when your keypad is locked, you can still place an SOS call (see page 34).

Public names



Public names

Allows you to manage a specific names list, called **Public Names** list, and restrict calls to this list via the **Call restriction** option.

This feature is subscription dependent and requires a PIN2 code (see page 43).

Call restriction



Call restriction

Allows you restrict the calls to the **Public Names** list. In this case, you can only access the names of the **Public names** list, as opposed to the **Phonebook** of the main menu.

This function is subscription dependent and requires a PIN2 code (see page 43). Please note that when activating this option, it might also apply to WAP and e-mail connections over GPRS.

Public names



Public names

Allows you to consult and modify your **Public Names** list. You can enter a new name, modify or delete a name in the list via PIN2 code. Use the **<New>** option to enter the name and phone number, then select the number type: **Phone**, **Fax** or **Data**. Names in this list can be changed or deleted.

Call barring



Call barring

This menu allows you to limit the use of your phone to specific calls by letting you bar both outgoing and incoming calls. This function is network dependent and requires a specific call barring password supplied by your service provider.

Outgoing calls



Outgoing

The **Outgoing** menu allows you to select between **All calls**, **International calls** and **Intl. Exc. Home** calls (the latter allowing you to call your home country when you are abroad). You can also **Deactivate** the bar on outgoing calls. These menus then allow you to bar, within each available option, **All calls**, **Voice calls**, **Data calls** or **Fax calls**.

Incoming calls



Incoming

The **Incoming** menu allows you to select **All calls** or **When roaming**. It also provides access to the **Cancel** menu to remove bar on incoming calls. These menus then allow you to bar, within each available option, **All calls**, **Voice calls**, **Data calls** or **Fax calls**.

Status



Status

In each sub-menu (**All calls**, **When roaming**, etc.), the **Status** option allows you to know whether a type of call is barred or not.

Change codes



Change codes

Allows you to change your **PIN** and **PIN 2** codes, as well as the call **Barring code**.

Depending on your SIM card, some features or options may require a PIN2 secret code. This is a second secret 4 to 8-digit code given to you by your operator.

If you enter a wrong PIN2 code 3 times, your SIM card is blocked. To unblock it, request the PUK2 code from your operator or retailer.

If you enter an incorrect PUK code 10 times in a row, the SIM card will be blocked and unusable. If this happens, contact your operator or retailer.

PIN protection



PIN protection

This allows you to set the PIN protection **On** or **Off**. When **On**, you will be asked to enter your PIN code when switching your phone on.

You cannot change your PIN code if this option is Off.

Network

This menu allows you to handle the connection between the phone and the network, register manually the available networks and manage your preferred networks.

GPRS attach



Your mobile integrates features that support GPRS (Global Packet Radio Service), a service allowing you to exchange data with high speed rates and to stay always on-line (i.e. have a permanent connection to the Internet and WAP).

Contact your phone operator to have full information about GPRS availability over their network and for an appropriate subscription. You might also need to configure your phone with the GPRS settings supplied by your operator, by using the menus described in this section.

This menu allows you to define the attach mode of your mobile phone to the GPRS service:

Always on

Your phone will always register to the GPRS service. This option allows faster GPRS connection. However it will increase energy consumption.

For data calls

Your phone will automatically register to the GPRS service only when required. This option reduces energy consumption, however it will increase the connection delay.

In spite of these settings, you must still select the bearer (GSM or GPRS) in the menus of each application to be used (e.g., WAP, MMS, e-mail, etc.).

Register again



Register again

Provides you with a list of the networks available in the area when the [Manual](#) mode is selected. Select the network you want to register with and press  to confirm.

Preferred list



Preferred list

Allows you to build a network list in order of preference. Once defined, the phone will try to register on a network, according to your preferences.

Access settings



Access settings

This menu allows you to create several data profiles: when using WAP or when sending a multimedia message (MMS), the selected profile will be used to connect to the GSM or GPRS network.

All options described below are operator and/or subscription dependent. With some operators, you may receive a SMS which contains access parameters that will

be stored automatically. Please contact your network operator for detailed information on this subject.

Change name



Change name

Allows you to enter or change the name of the selected profile. Press **OK** , enter the name of your choice and press **OK** to confirm.

Some pre-configured profiles might be locked, preventing re-programming and renaming.

Show



Show

Allows you to visualise all parameters of the selected profile (ISP number, APN, etc.), either **GSM** or **GPRS**.

GSM settings



GSM settings

Allows you to enter or change the GSM settings and gives you access to the following items:

Login and **Password** allow you to enter the login and password needed. In both cases, enter the information and press **OK** to confirm.

Phone Number allows you to enter the phone number needed to establish a connection. Select **Phone numbers** and press **OK** , then press **△** or **▽** to select:

- **ISDN No.** to enter an ISDN ISP number, **OR**
- **Analogic No.** to enter an analogic number.

In both cases, enter the «+» sign followed by the number provided by your operator and press **OK** .

Contact your operator to know what type of number you should select.

Inactivity time allows you to enter an inactivity time period after which the phone automatically disconnects (if a connection was in progress) and returns to idle screen. Select **Inactivity time** and press **OK** , then enter a value (in seconds) of over 30 s. and press **OK** .

GPRS settings



GPRS settings

This allows you to change the GPRS settings, **Login**, **Password** and **Inactivity time** (the same fields and the same instructions as for GSM settings, please refer to the previous section).

APN allows you to enter the address of the external data network you want to connect to, a text string (or IP address, e.g., wap.operatorname.fr) used to establish the connection. Select **APN** and press **OK** , then enter the appropriate address and press **OK** .

Error messages during connections are mainly due to incorrect parameters: you should contact your operator before first use, in order to have the appropriate settings. With some operators, the access parameters can be set remotely. Please check with your operator.

Time and date

This menu allows you to set the time and date, time zone, daylight savings, and change the clock display mode.

Clock display



Clock display

Allows you to select **Analogue**, **Digital** or **Tiny** time formats when shown in idle mode, by pressing Δ or ∇ . In all cases, press OK to confirm.

Set date



Set date

Allows you to set the date by pressing the appropriate numeric keys (you can also set the date by moving Δ or ∇). Press OK to confirm.

Date format



Date format

Allows you to select one of the two available date formats, either **Western** or **Thai**. Press OK to confirm.

Time zone

The time zone and daylight savings are to be set first. You should then double-check date and time if previ-

ously set. To know which time zone you are in, we recommend you to check in an atlas or an encyclopedia.



Time zone

The **Time zone** option allows you to set the time zone you belong to, according to GMT (Greenwich Meridian Time).

Move Δ or ∇ to select the setting corresponding to your area.

Daylight saving

This setting only concerns countries in which time is set according to summer/winter time (e.g. Greenwich Meridian Time / British Summer Time).



Daylight saving

This option allows you to set the daylight savings to **On** (in summer time) or **Off** (in winter time) by moving Δ or ∇ . As this setting impacts the date and time option, it should be set first. If daylight saving is **On** and you set the time to 12:00, it will automatically switch to 13:00 when turning the option to **Off**.

Set time



Set time

Allows you to set the time by pressing the appropriate keys or moving Δ or ∇ to increase or decrease the time minute by minute.

Language

This menu allows you to select a language for all menu text. A long press on  when in the idle screen automatically displays this menu.

Profiles

This menu allows you to access a group of predefined settings, which let you quickly adapt your phone to your environment by changing several settings at once. For example, selecting **Meeting** will set your ringer volume to silent, activate vibra and deactivate the key tones (the other items are set according to the settings you configured). When your meeting is over, selecting **Personal** will reactivate all your usual settings.

When you associate a hotkey to a profile (e.g. long press key  activates Meeting, see “Hotkeys” page 38), also long press this key to deactivate it and go back to the Personal settings.

The settings listed in the column **Personal**, in the following table, are default settings preset during production. As you can change them, the personal settings in your phone may differ from the table.

Each  box of the table refers to the settings as stored in the **Personal** menu (whether you have changed the settings or not).

Profiles	 * Personal	 Autonomy	 Outdoors	 Meeting
Vibra alert	On*	Off		On
Ringer volume	Medium*	Medium	High	Silent
Key tones	On*			Off
Organiser alerts	On*			
Battery low alert	On*			
Message alert	On*			
Backlight	10 sec*	Off		
Any key answers	Off*			
Animation	On*	Off		

* personal setting

When connecting an accessory, the settings described in the table below also become available. When disconnecting the accessory, the phone goes back to the **Personal** profile.

Accessories Profiles	 Headset	CLA or Charger	 Activate Car
Vibra alert		Off	Off
Ringer volume	Medium		High
Key tones			

Accessories Profiles	 Headset	CLA or Charger	 Activate Car
Organiser alerts			
Battery low alert			
Message alert			
Backlight			On
Any key answers	On		On
Animation			

9 • Messages

SMS



Send SMS

The **Send SMS** item of the **Messages** menu allows you to:

- send a standard or customised short text message to someone,
- edit the last message sent and send it again,
- add an iMelody, pre-defined sounds, an animation or a picture to your message.

The features above are not available from the idle mode when the Instant message feature is On (see page 60). In this case, you can only access the Answer option.

The Standard SMS messages are displayed in a list. Press $\triangle$ or ∇ to browse: for example **Please call me back at...** allows you to select a pre-configured message including your number, if this number is the first one of the **Own num.** option (see page 31).

Send a SMS

To a name in the list

To the default number if several (phonebook in phone) or to the unique phone number (phonebook in SIM)

1. Press ∇ , select the name of your choice and press OK .
2. Select **Send SMS** and press OK , then select the type of message to be sent and press OK . Enter your message, attach a graphic or a sound if you wish, then select **Send now** or **Save** (see below).

To the number of your choice (phone name list only)

1. Press ∇ and select the record of your choice, then press OK , select **Show** and press OK .
2. Select the number of your choice and press OK .
3. Proceed as described in step 2 of the previous paragraph.

To any other name

To send a short message to someone whose number isn't stored in the phonebook, press OK and select **Messages**, **SMS** then **Send SMS** and **New**. Enter the phone number to which the message should be sent to and press OK . Then follow the instructions detailed above to send a message.

Together with an attachment

This option allows you to attach a sound, icon or animation to your message and press  to confirm and attach it to your message. Depending on the type of file you want to attach, select [Add graphic](#) to attach a bit-map image or an animation, and/or [Add sound](#) to attach a melody. Select the sub-menu of your choice, then one of the available items in the list that appears, and press  to confirm and attach it to your message.

You can send up to 2 attachments of 2 different types together with your SMS. Animations and pictures are exclusive: if you first select an animation, then a picture, only the picture will be taken into account and vice-versa.

Some icons, animations and sounds are pre-defined and supplied as standard with your mobile phone. Personal pictures and sounds, e.g., that you have received via SMS or e-mail and then stored in the relevant menus, will automatically appear in the «Own» sub-menus (Own melodies, Own animations, etc.). You cannot send «Own» items via SMS when they are copyright-protected.

Send now



This allows you to send the current message you have entered (to learn how to enter text and numbers, see “Text or number entry” page 18). Press  to confirm.

Save



Allows you to store the current message and its associated icon and melody if any. Press  to confirm.

Read SMS



The [Read SMS](#) option in the [Messages](#) menu allows you to consult the list of SMS you have saved and received, and that are first stored on your SIM card. Several options allow you to then manage them directly on your mobile phone.

Received Messages

- The messages you have received and already read are labelled with . Messages received but not yet read are labelled with a sealed envelope icon. Select a message and press  to read it. When displayed, press  to access the following options:
- [Reply](#) to the sender,
- [Forward](#) the selected message (choose the recipient in the phonebook or enter a phone number manually),

- **Delete** the selected message,
- **Store number** of the sender if it is attached to the message,
- **Store melody** if a melody was sent together with the SMS,
- **Store graphic(s)** if one or several graphics and/or animations were sent together with the message,
- **Extract** a number included in the message itself, if this number is included in double quotes (several numbers can be included and extracted),
- **Call** the sender of the message (operator-dependent),
- **Move to Archive** allows you to store read messages in the phone memory. Saved messages can then be consulted by pressing  and selecting **Messages**, **SMS Archive**,

Moving a message to the archive list deletes it from the read SMS list.

- **Edit** a message in the **Read** or **Archive** folder, modify it and resend it to someone (you can add a picture or a sound).

If a picture or a sound was attached to the message you edit, you must first detach it and store it in the Picture album or in the Own melodies menu of the ringers list. Then re-attach it to your message (see page 50).

Saved Messages

The messages you sent are labelled with  in normal mode or with a mail box icon in auto save SMS mode

(see page 52). Select the message you want and press  to read it. When displayed, press  to access the same options, including storing the caller's number.

Delete all SMS

Allows you to delete all the messages of either the **Read SMS** (messages on SIM card) or **SMS Archive** (messages in phone) lists of the **Messages** menu.

SMS settings



SMS settings

This menu allows you to customise your SMS via the options described below.

SMS centre



SMS centre

Allows you to select your default SMS centre. **If not available on your SIM card, you must enter your SMS centre number.**

Signature



Signature

Allows you to sign your SMS. By default, your signature is your phone number, added at the end of your message (which length is consequently reduced). You can **Edit** the signature, **Change** and **Save** it.

Validity period

This feature is subscription dependent.



Validity period

Allows you to select the length of time your message is to be stored in your SMS centre. This is useful when the recipient is not connected to the network (and thus cannot receive your message immediately).

Reply path

This feature is subscription dependent.



Reply path

Allows you to set the Reply path option **On** or **Off**. When **On**, it allows you to transmit the number of your SMS message centre together with the message. Your correspondent can then reply using your own SMS centre and not theirs. This speeds up the rate of transmission.

Delivery report

This feature is subscription dependent.



Delivery report

Informs you via an SMS whether your SMS was received or not. This option can be set **On** or **Off**.

Auto save SMS



Auto save SMS

Allows you to set **On** or **Off** the option of automatically saving messages sent in the **Archive** menu.

SMS Archive



SMS Archive

Allows you to consult all read messages you saved and to **Reset** all archived messages at once. You save a message by activating the **Auto save SMS** option (see above), or by selecting a received message, pressing **OK** twice and selecting **Move to Archive**.

E-Mail

If not included in your phone subscription, you must subscribe to an e-mail account (over the phone or via Internet from a computer) and have received the settings information from your provider. In this case, all parameters are communicated to you by your provider and/or operator as described below and must be entered as given.

If included in your subscription, you simply have to enter the login, password and e-mail address of your e-mail account. In some cases, your operator might also be your e-mail service provider.

Your phone might have been pre-configured. In this case, most parameters are already set and you don't have to change them (except for **Login**, **Password** and **E-mail address** which are up to you when creating an e-mail account).

To enter text and numbers, including specific signs such as @ or %, see the characters table described page 19.

Settings

Network access

This menu allows you to configure your phone and to handle the connection to the network, whether GSM or GPRS, in order to *then* connect to the appropriate server that will let you send and receive e-mails.

All options described below are operator and/or subscription dependent.

1. Press , select **Messages** > **E-mail** > **E-mail 1** > **Settings** and press .
2. Select **Network Access** and press .

Bearer



Bearer

This menu allows you to select the type of network used when launching a connection.

GSM or **GPRS**: your mobile will only use the GSM or the GPRS network for e-mail connections.

GPRS first: your mobile will first try to connect to the GPRS network, then to the GSM network if the GPRS network isn't available when connecting.

Selecting this option you need to have both GSM and GPRS settings configured.

GPRS settings



GPRS Settings

This menu allows you to enter or change the GPRS settings communicated to you by your operator, which are: **APN**, **Login** and **Password**. All settings must be entered as given to you by your operator.

Error messages during connections are mainly due to incorrect parameters: you should contact your operator before first use, in order to have the appropriate GPRS parameters.

GSM settings



GSM Settings

This menu allows you to enter or change the GSM settings communicated to you by your operator, which are: **Phone number**, **Auto disconnection**, **Login** and **Password**. Enter them as defined.

Phone Number: allows you to enter the phone number provided by your ISP and needed to establish a connection. Press  or  to select:

- **ISDN number** to enter an ISDN ISP number, **OR**
- **Analogic No.** to enter an analogic number, then press .

Contact your ISP to know what type of number you should select.

Auto disconnection: allows you to select an inactivity time period after which the phone automatically disconnects (if a connection was in progress) from the network. Press Δ or ∇ to select a value from 3 to 10min. and press OK to validate.

The lack of exchanges with the network (connecting, sending an e-mail, disconnecting) defines the inactivity time period leading to auto disconnection.

Login and **Password** were up to you when you subscribed to your account. Enter them also as defined.

E-mail server access

The menus described in this section feature settings needed to connect to the e-mail server of your Internet Service Provider (ISP) via your mobile phone. Most parameters are communicated to you by your service provider and must be entered as given.

1. Press OK , select **Messages** > **E-mail** > **E-mail 1** > **Settings** and press OK .
2. Select **E-Mail server** and press OK . The fields to be completed are the following: **POP3 address**, **SMTP address**, **Login**, **Password** and **E-Mail address**.

- **POP3 address:** allows you to enter the IP or DNS address of the POP3 server, which is used to **receive** e-mails.
- **SMTP address:** allows you to enter the IP or DNS address of the SMTP server, which is used to **send** e-mails.

WARNING ! Network-dependent! For an e-mail connection via GPRS, if your phone operator is not your e-mail provider, contact your operator to get the correct address of the SMTP server and enter it in this field.

In some cases, **Login**, **Password** and **E-mail address** are up to you when you subscribe to your account. Enter them as defined.

Account name

This menu allows you to rename the available e-mail accounts.

An e-mail account might be preconfigured with the name of your operator. In this case, its name cannot be changed.

1. Press OK , select **Messages** > **E-mail** > **E-mail 1** > **Settings** > **Account name** and press OK .
2. Enter the new name in the edition window that appears and press OK .

Advanced

The menus described in this section feature advanced settings that may have been pre-configured, so you shouldn't have to change any of them.

If the fields of these menus are empty, or if you encounter connection problems, contact your ISP.

Port POP3: allows you to enter the POP3 port number, which is used to **receive** e-mails.

Port SMTP: allows you to enter the SMTP port number, which is used to **send** e-mails.

DNS address: allows you to enter the DNS address of the external data network you want to connect to.

SMTP authenticat.: allows you to activate/deactivate the authentication process with the SMTP server.

In most European countries, this menu should be set to Off: your e-mails will NOT be sent if set to On. Contact your provider for complete information.

Write and send an e-mail



Send mail

The **Send mail** menu allows you to send e-mails to one or several recipients at a time, including with an attachment such as a jpeg picture. Once received, your messages can be

forwarded and the attachments visualised with the appropriate software.

To one or several recipients

1. Press **OK**, select **Messages > E-mail**, then **E-mail 1** or **E-mail 2** depending on the one you wish to use. Select **Send mail** and press **OK**.
2. Move **▽** to select **Add addressee** and press **OK** to access the list.

If you select the phonebook «On SIM card», you will not be able to access any e-mail address, but an edit window will allow you to enter one. See “Phonebook” page 29 for information on phonebook selection.

3. Select a name in the list and press **OK** to add it to your mailing list or press **CA** to cancel and go back to the previous sub-menu.
4. Back to the **Addressees** list, press **OK** to **Change** the e-mail address or to **Remove** it from the list, or select **Add addressee**, press **OK** to access the phonebook again and add new names to the mailing list.
5. Repeat steps 2 to 4 to add as many recipients as required.
6. Select **Validate list** and press **OK**. Then enter the subject of your e-mail (you can leave this field empty) and press **OK**.

7. In the next window, enter the text of your e-mail (you can also leave this field empty). Press **OK** when you are ready to send your e-mail.

To learn how to enter text, see “Text or number entry” page 18. If you exit the Send e-mail menu before sending your e-mail, its content is deleted without being stored.

8. Select **Modify mail** and press **OK** if you want to change the content of your e-mail. This takes you back to step 2: follow the instructions from there to complete the list of recipients and send your e-mail.
9. Select **Send now** and press **OK** to send your e-mail. Your mobile phone connects to the Internet server, sends your e-mail to the names present in your mailing list, then disconnects.

*You can cancel this operation by pressing and holding the **CN** key. Your mobile will then disconnect from the server, exit the e-mail menu and go back to idle. Disconnection also occurs each time you enter the Settings menu while a connection is in progress. In this case, your e-mail is lost.*

Depending on the call settings you configured (see “Call waiting” page 79), you can receive calls during an

e-mail connection. In this case, and if you accept the incoming call, your phone switches to the call screen context and the e-mail menu is closed; the phone goes back to idle when you hang up.

With a sound or a picture

1. Repeat steps 1 to 7 described above. Select **Add sound** or **Add graphic** and press **OK**.
2. In both cases, a list appears, showing the available JPEG, BMP, GIF or Midi files. Select the picture and/or sound of your choice and press **OK**.

You can only attach one JPEG file at a time. If you exit the Send e-mail menu before sending your e-mail, its content (including attachment) is deleted without being stored.

3. Select **Modify mail** or **Send now** and press **OK** to confirm.

Receive and read e-mails



E-mails are received on a server, which you must connect to in order to retrieve your e-mails on your mobile phone (some operators send you a SMS when you receive a new e-mail). You must first download the headers from the server before retrieving the corresponding e-mails.

Connect to the server

Connection process

1. Press  and select **Messages** > **E-mail**, then **E-mail 1** or **E-mail 2** depending on the one you wish to use. Select **Open mailbox** and press .

Mailboxes 1 and 2 feature the same settings and options. Configuring them differently will allow you to have two different e-mail addresses from your phone.

2. Your mobile phone automatically connects to the e-mail server and downloads the e-mail headers. If you didn't receive any e-mail, **List empty** is displayed on the screen. Otherwise, the e-mail headers are displayed in the form of a list.
3. The total number of mails received and pending on the server is displayed on the top of the screen, as well as the number of pages needed to display all headers.
4. Your mobile phone retrieves five e-mail headers at a time. If **Next** (respectively **Previous**) appears at the end (respectively beginning) of the list, other e-mail headers are pending: select one of the available options and press  to retrieve them.

An e-mail without any attachment may be automatically displayed in the details screen.

Headers information

Select a header, press , select **Details** and press  again to see the address it was sent from, the date and time at which it was sent, its subject and the size of the attachment if any. The following status icons may appear in regards to each header:

[No icon] The e-mail can be downloaded.



The e-mail size is too large, it cannot be downloaded.



The e-mail is marked to be deleted (see page 59).

Download e-mails



Get mail

Simply select one of the retrieved e-mail headers and press . Then select **Get mail** and press  to download the e-mail. Repeat this operation to download each e-mail corresponding to each selected header.

*You can also press  to access the e-mail headers' carousel and select **Get mail** from the available options. If the e-mail is too big (over 50 KB), it is rejected and the download is cancelled.*

Get and store attachments

If the e-mail you have received contains attachments (JPEG picture, text file or another e-mail), they are characterised by a specific icon:

-  Contains the details of the e-mail header (date and time, sender's e-mail address, etc.), press  to display these details.
-  The text of the e-mail itself can be viewed as an attachment, press  to read it. There isn't any advanced options in this situation: it can be read, but not stored nor forwarded.
-  A text file (text only, «.txt» format) is attached to the e-mail, press  to read it. There isn't any advanced options in this situation either.
-  The application needed to manage this attachment isn't available in your phone, or the e-mail is too large to be uploaded.
-  Another e-mail is attached to the one you received (up to five e-mails can be attached one after the other). There isn't any advanced options for an attached e-mail: it can be read, but not stored nor forwarded.



A picture in JPEG, BMP or GIF format is attached to this e-mail. Select the attached picture in the list and press  twice to store it in your mobile phone (you can rename it if you wish).

You must have stored a picture before being able to view it via the Picture album menu. See “Picture album” page 71 for more details. If there isn't enough memory to store the new picture, you must delete other items (name, event or picture) to release enough memory to be able to save the new picture.

A picture may not be accepted by your mobile phone if it is too large, or if it doesn't have the right file format. When receiving a picture via e-mail, proceed as follows to obtain optimal results:

- The picture received must have been saved in JPEG, BMP or GIF format.
- The size of the picture file should not exceed 50 KB.
- The optimal size is 128 x 128 pixels, in order to be displayed correctly. We recommend you use a standard picture editing software to create the size of the picture you want.
- Use a file name, a maximum of 10 characters. You can then add an extension such as «.jpg».

Add an e-mail address to the phonebook

You must have selected the phonebook in your phone to be able to add an e-mail address; this menu item will NOT appear if you selected the SIM phonebook.



Add to names

You can add the sender's e-mail address to your phonebook, even when you haven't yet downloaded his e-mail (retrieving the header only is sufficient to access the e-mail address).

1. Select an e-mail header, then press **OK** to access the carousel options.
2. Select **Add to names** and press **OK**. Then select:
 - <new> to create a new name, enter first and last name then add the associated e-mail address, or
 - a name in the list and press **OK** to add the e-mail address to this name card. If it already contains an e-mail address, you will be prompted to press **OK** to replace it.

Delete e-mails

1. Select the e-mail to be deleted and press **OK** to access the options.
2. Select **Delete**, and press **OK** to confirm and mark the e-mail to be deleted. A small icon allows you to spot the header(s) of the list corresponding to the e-mail(s) to be deleted.

To unmark the e-mail to be deleted, select this option again.

3. When you exit the **E-mail** menu, you will be asked to confirm deletion of the selected item(s) from the e-mail server. Press **OK** to confirm or **CA** to cancel (in this case, the marked e-mails remain in the list and aren't marked to be deleted any more).

Reply to an e-mail

1. Select the header of the e-mail you want to reply to, press **OK** to access the options menu, then select **Reply** and press **OK**.
2. The address of the sender, which you can modify (see "To one or several recipients" page 55), is automatically added to the **Addressees** list. Select **Validate list** and press **OK**.
3. A new screen appears, that contains the subject of the received e-mail preceded with **Re:** standing for «Reply». Press **OK**.
4. Enter the text of your mail, then press **OK** to send it: select **Send now** and press **OK** to send your reply.

Forward an e-mail

In order to forward an e-mail to another recipient, you must first have downloaded it (see "Download e-mails"

page 57). From the **Forward to** option, proceed as described above in “Reply to an e-mail”.

In both cases (reply to an e-mail or forward it), your phone will disconnect from the server when reaching the network inactivity time out set in the Auto disconnection menu (see “Bearer” page 53). It will reconnect to this server when sending the e-mail.

Broadcast Message

The Broadcast SMS feature is network-dependent.



Broadcast SMS

You can **Activate** or **Deactivate** the reception of SMS broadcast regularly transmitted to all subscribers on the network.

Reception



Reception

Allows you to set the reception of cell broadcast messages **On** or **Off**. When **On**, you must define one or several topics as described below.

Topics



Topics

Allows you to define the type of messages you want to receive. To define a new type, select **<New>**, enter the code provided by the operator, and, if desired, associate a name. If you select an existing type in the list, you can change

or delete it. You can enter up to 15 different types in the list. To obtain the codes corresponding to the different types, contact your operator.

District codes



District Code

Allows you to select the type of messages you would like to be permanently displayed on the idle screen. As a result, for this special treatment of the message, you must enter the type in both the **District code** and the **Topics** menu.

Instant message

Allows you to set the **Instant message** feature **On** or **Off**. When **On**, any short message (SMS) you receive is automatically displayed in idle mode.

Scroll down to read it, and quickly reply by pressing **OK** twice: first to enter the edition screen, then to send your message. The phone will automatically go back to the idle screen.

*If you receive a second SMS while you are reading one, press **CA** to exit the first one or reply to it. The mobile phone will then display the second message.*

MMS



MMS

Your mobile phone allows you to send and receive MMS (multimedia messages), featuring texts, pictures and sounds, including music mixes you have created with BeDJ or memos that you have recorded.

A multimedia message can be made of one slide (including text, sound and image), or of several: in this case, the message is played in a slide show, whether you send it to an e-mail address or to another mobile phone.

Create an MMS

Select the addressees

1. Press  while in idle mode.
2. Select **New MMS** and press .
3. Select a name in the list and press  to add it to your mailing list, **OR**
Select **<New>** and enter the phone number or e-mail address you wish to send your message to. Then press .

You must have selected the phonebook «In phone» to access an e-mail address. See “Phonebook” page 29 for information on phonebook selection.

4. If you wish to send your message to this person only, select **Validate list** and press .
- If you want to send it to several people, select **Insert name**, press  to access the phonebook again and to add new names to the mailing list (up to 20 names).
5. Add as many recipients as required, then select **Validate list** and press .

You can select one of the items and press  to Edit the e-mail address or phone number, or to Remove it from the list.

Design your message

1. On the left hand side of the screen, 5 icons allow you to add a **Picture**, add **Text**, add a **Sound**, **Send** the message or access the **Options** menu. Move  or  to go to the previous or next icon.
2. Press  to access the **Picture Album** list, select a picture and press  to add it to your MMS. The first window of your message is displayed, showing the selected picture, which is resized if needed, in order to fit the screen.

Although the picture preview when creating the MMS is (W)105 x (H)55 pixels, the max. size of a picture you can send is (W)640 x (H)640 pixels, and the max. size of an MMS (sent or received) is 50 KB.

Warning! The bigger the picture size, the longer it will take to send it. A copyright-protected picture cannot be sent. Select None if you don't want to insert any picture.

3. The **Text** icon is automatically selected: press  to access the text editing screen, enter the text of your message (see “Text or number entry” page 18 for help).
4. The **Sound** icon is then selected: press  to access the **Sound Album** list, select a sound and press  to add it to your MMS.

Sounds can be one of the files available in the Album, or a sound memo that you record when creating the MMS: in this case, select <Records>, then <New> and follow the procedure that appears on the screen. You cannot attach an existing voice memo. The icon of the item you have added (picture or sound) changes colour to indicate its insertion.

5. Press  to send your message, or move  to access the options.

If you quit the MMS menu and haven't finished writing your message, it will be automatically saved in the Draft menu (see below).

Access the options

Move  to go to the **Options** icon and press . The following options are available:

Add slide To create a new slide and add it to your slide show.

You can also press  when the last page of the message you are currently designing is selected.

Once you have created several pages, move  or  to browse slides.

Delete slide To delete the selected page.

This option is only available if there is more than one slide in the message.

Next slide To move to the next or to the previous slide.

Slide duration To change the value of slide duration that you have set in **Settings > Application settings** (see page 67), and to set a delay between each slide.

Save MMS as draft

To save your message as a draft, that you can edit, complete and send later on. MMS saved as drafts are stored in **MMS > Drafts** (see “Manage folders” page 65).

Messages saved as drafts must feature a subject.

Save as template

To save your message as a template, that you can use as a basis for other MMS (e.g., «Happy birthday» type of message). MMS saved as templates are listed in **MMS > Templates** (see “Manage folders” below).

Preview MMS

To preview the slide show you have created from the first to the last slide, including sounds & pictures.

Add subject

To edit and change or enter the subject of your message.

When browsing the lists, specific icons show the type of the selected message (read MMS, delivery report, template, etc.). The information about the message (sender, recipients, subject) scrolls horizontally automatically when selected.

Send your Message

As described above, you can either:

- Send your message as soon as it is completed: select **Send MMS** and press .
- Save it as a **Draft** to complete it and send it later: to send, select the message in **Drafts**, select **Send MMS** and press . Once it has been sent, the **MMS** is removed from the drafts list.

If the sending of a draft message fails, the message will be moved to the Outbox menu, and identified as Not sent.

- Select it from the **Outbox** menu and send it: select the message to be sent from this menu, select **Re-send MMS** and press . Once it has been sent, the MMS is identified as a sent message in the list.

In the two last cases, select the message to be sent in the relevant folder. In all cases, select **Send MMS** and press  : a progress bar allows you to follow the sending of your message. Press  to cancel the sending of your message.

Receive an MMS

Download and play an MMS

When you receive an MMS, an alert message appears on the screen to inform you.

1. If you activated the **Automatic** retrieval mode (see page 66), the message is automatically downloaded and placed in the **Inbox**. Select it in the **Inbox** list and press  to play it.
2. If the **Manual** mode is activated:
 - Press  to go back to idle mode and to save the notification in the **Inbox**, OR
 - Press  to display the details of the notification, then select **Download** and press  to download the message itself. As for sending, a progress bar allows you to follow the download of the message.

A notification isn't the MMS itself, but an information window gathering the details about the sender's identity, date and time of reception, subject, etc. DO NOT DELETE NOTIFICATIONS BEFORE YOU HAVE RETRIEVED THE MESSAGE, or you will never be able to do so.

In both automatic and manual modes, a message will inform you if the size of the MMS you wish to download is bigger than the memory available in your phone. In this case, you must free memory by deleting data (picture, sounds, etc.). See "Memory Status" page 72.

- If the sender of the message has asked for a **Read report**, a prompt will ask you to press  to send it or to press  to refuse the sending of the report.
3. Once the MMS is downloaded, select it in the **Inbox** list and press  to play it.

Pressing  or  will switch the player mode from automatic to manual. In manual mode, press  or  to display the previous or the next slide.

Get and store attachments

When playing an MMS as described in the previous section, press  to access the following **Player options**:

- | | |
|---------------------------------|---|
| Play message | To switch back to automatic mode: the MMS is then played as a continuous slide show. |
| Next (or Previous) slide | To move to the next or previous slide. You can also press  or  when viewing the MMS in manual mode. |

This item is not available when you have selected the last (or first) slide.

- Rewind** To rewind the MMS back to the first slide.
- Detach picture** To detach the picture of the current slide and save it in the **Picture album**.
- Detach sound** To detach the sound of the current slide and save it in the **Sound album**.

Manage folders

The MMS menu allows you to manage your messages in 4 different folders. The default (active) folder is the last one you selected. To change the active folder, press  to return to the main MMS menu and select the folder of your choice:

- Inbox** Lists all the **Notifications**, **Delivery** and **Read reports**, **Read** and **Unread MMS**.
- You can **Read** or **Delete** notifications and reports.
 - You can **Play**, **Forward** or **Reply** to an MMS, display its **Details** or **Delete** it.

Notifications are automatically deleted once you have received the full MMS. Do NOT delete notifications before you have retrieved the MMS, or you will never be able to do so.

- Outbox** Lists the messages you have **Sent** or created but **Not sent** yet (e.g., if you have cancelled the sending procedure by pressing the  key).
- You can **Open**, **Delete** or view the **Details** of all these messages.
 - In addition, an MMS not yet sent can also be **Re-sent** to someone, and you can **Forward** an MMS already sent.

- Templates** Lists all messages saved as templates after their creation.
You can **Play**, **Edit** and **Delete** templates.

- Drafts** Lists all messages saved as drafts after their creation, or automatically saved if you quit the MMS menu before saving or sending your message.
You can **Play**, **Edit**, **Send** and **Delete** drafts.

*Messages you have saved can only be sent from the **Draft** or **Outbox** folders. You can NOT recover an item (whether message, notification or report) that you have deleted. Press  to cancel deletion.*

Settings

Your phone may have been pre-configured to directly access the services offered. If not, you must have received

from your operator the information items described in the present section and enter them as given.

With some operators, access parameters can be set «over the air». Please check directly by your operator.

Network account

Allows you to choose a data profile from the ones you have set (see “Access settings” page 44 for complete information on how to configure or modify a data profile). This profile and the parameters it features will then be used for connection.

Bearer

This menu allows you to select the type of network used when launching a connection.

- | | |
|-------------------|---|
| GSM | Your mobile will only use the GSM network for connections. |
| GPRS | Your mobile will only use the GPRS network for connections. |
| GPRS first | Your mobile will first try to connect to the GPRS network, then to the GSM network if the GPRS network isn't available when connecting. |

If selecting GPRS first, you must have configured both the GSM and GPRS settings (see “Access settings” page 44).

MMS Centre

Allows you to enter or change the MMS address of the server your phone will connect to.

Gateway address

Allows you to enter or change the IP address of the server's gateway.

Gateway port

Allows you to enter or change the Port number of the server's gateway.

You must have the information relating to the three points above, supplied by your operator, and must enter them exactly as given.

Application settings

Retrieval mode

Automatic (default mode) Any new MMS you receive is automatically downloaded from the server and placed in the **Inbox**, without you having to launch a connection. Select the message you have received in the **Inbox** and press  .

This mode is deactivated when roaming.

Manual

Messages are stored on the MMS server, and you must connect manually to retrieve them:

1. Press **OK** to access the **Inbox**.
2. Select the notification item corresponding to this message and press **OK**.
3. Select **Read** and press **OK**.
4. When the **Details** of the message are displayed, press **OK** to launch the connection and download it.
5. Once the message is in your phone, press **OK**, select **Play message** and press **OK**.

Delivery report

This option can be set **On** or **Off** and informs you (via an SMS) whether your MMS was received or rejected. The delivery report will display the sender's identity, date and time of receipt, MMS subject and status of delivery.

Read report

This option can be set **On** or **Off** and informs you (via an SMS) when the status the MMS you have sent has changed, i.e., whether it was read or deleted without being read.

Auto save

This option can be set **On** or **Off** and allows you to automatically save of the messages sent from the **Outbox** menu. Messages saved will then appear in the **Outbox** folder.

Validity period

Allows you to select the length of time your message is to be stored on the server, from **1 hour** to **1 week** (maximum). This is useful when the recipient is not connected to the network (and thus cannot receive your message immediately).

Slide duration

Allows you to select the duration between each slide included in your MMS, from **1 sec.** to **60 secs.**

10 • Infrared


Your mobile phone integrates the infrared technology (also called IrDA), that allows you to send or receive data to and from other IrDA-compliant devices through a wireless link (e.g., another mobile phone, a PC or PDA, a printer etc.). Instead of sending a message, you can decide to use IrDA to quickly send a sound you just mixed to a friend's mobile phone, or to receive pictures from their PDA.

Files that are copyright-protected cannot be sent. When connecting with a PC, make sure you have activated its infrared option.

Position of devices

Before sending or receiving data to and from another device, they must be correctly positioned in relation to your mobile phone. Make sure that the respective IrDA ports are facing each other and are a maximum

of 50 cm away from each other (see diagram). Also make sure that nothing obstructs the IrDA beam.

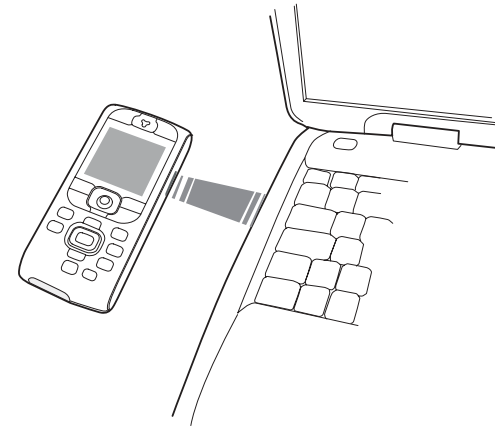

Send data

Select an item

To send data via IrDA from your mobile phone, you must first select the item to be sent: for each category, a sub-menu then gives you access to the **Send** option; press **OK** to send the selected data to the other device.

Data you can send	Where to find it in the phone menus
Pictures (BMP, GIF, JPEG)	Multimedia > Picture album
Sounds (MIDI files & ringers)	Multimedia > Sound album (or live from BeDJ when mixing music, see “Music & Mix” page 25).
Names	Phonebook > View names list (or press  when in idle mode).
Events	Games & Appli > Organiser > Events

Send the selected item

As soon as your phone finds another IrDA-compliant device to communicate with, the sending automatically takes place. Messages are displayed on the screen, for you to follow the process.

If the phone finds several IrDA devices, a list is displayed on the screen, for you to choose from. Press  to confirm and to send the selected data.

Sending is cancelled in the following cases:

- the phone cannot find another device and the time out is reached before any data is sent,
- the infrared link is broken,
- you press the  key to cancel the process.

Receive data

Activate IrDA



Infrared

To receive data, press  and select **Infrared** > **Receive** and press . Your mobile phone is then ready to receive an item and waits for the other IrDA device to send it. As when sending, messages are displayed on the screen and allow you to follow up the process.

Receiving is cancelled in the following cases:

- the phone isn't contacted by another device and the time out is reached before data is received,
- the infrared link is broken,
- the size of the file sent is too large for your phone to manage it,
- you press the  key to cancel the process.

Save the data received

Several options are available when receiving data from another IrDA device:

Press 

Cancels the process: if you confirm your choice by pressing , the phone goes back to idle and the data you have received isn't saved.

Press 

Gives you access to the options menu, from which the following options are available:

Save

Saves the data in the appropriate menu (**Name** cards in the **Phonebook**, **Event** cards in the **Organiser**, etc.), then goes back to idle.

In the case of a **Name** card, a **<New>** screen will be opened, for you to save this new record.

The files default names are used, and you can freely rename each of them via the appropriate menu (i.e. in **Multimedia** > **Sounds** when you have saved a ringer you would like to rename).

Show

Displays the details of the data you have received: press  to go back one screen.

You must save the data to modify it.

If you have received a **Picture**, it will be displayed in full screen.

If you have received a **Sound**, it will be played once. Press  or  to stop playing it, or move the side keys up or down to change the volume.

Use the phone as a modem



Data

You can also use your mobile phone together with a PC or a PDA, e.g. to surf the Internet or send faxes.

To fully benefit from the services available via IrDA (send and receive SMS, e-mail and fax, upload pictures and MIDI sounds in your phone, phonebook synchronization, GPRS Wizard, etc.), you must install Mobile Phone Tools on your PC. This software application is available on the CD-Rom shipped with your phone.

The software supplied on the CD-Rom is not compatible with Apple® Macintosh® computers. It only supports Windows® 98 SE, ME, 2000 and XP.

Specific software modules for Lotus Notes, Lotus Organizer and Microsoft Outlook are designed to allow synchronisation from your Philips mobile phone to these applications: refer to their respective user guides for detailed information concerning installation and configuration.

11 • Multimedia

Picture album

JPEG pictures must have the correct size and format for your mobile phone to store and display them correctly. Please check “Get and store attachments” page 58 for complete information on this subject.



Picture Album

This menu allows you to manage and display the pictures stored in your mobile phone.

When entering one of the available sub-menus, the pictures stored in your phone are displayed as a text list. To access the graphical display, select a picture in the list and press . Then press or to go to the next or previous picture, or to go back to the text list. Press to access the following options:

- Rename** To **Rename** it: press , enter a name and press again.
- Delete** To **Delete** the selected picture.
- Send by MMS** To send the selected picture via MMS (see “MMS” page 61 for details).

Send by Infrared

To send the selected picture via infrared to another IrDA device (see “Infrared” page 68 for details).

Send by Email

To send the selected picture via E-mail (see “E-Mail” page 52 for details).

Set as wallpaper

To set the selected picture as **Wallpaper** (this option must be set **On** in **Settings > Display**, see page 38).

Pictures in the Standard Pictures folder cannot be deleted. New pictures are stored in Own Pictures. If there isn't enough space to store a new picture, you must delete some other pictures to release memory.

Sound album



Sound Album

This menu allows you to manage and listen to the sounds stored in your mobile phone. When entering one of the available sub-menus, the sounds are displayed as a text list. Press or to go to the next or previous sound and wait for a few seconds for the sound to be played.

Select a sound and press  to access the following options:

- Rename** To **Rename** it: press , enter a name and press  again.
- Delete** To **Delete** the selected sound.
- Send by MMS** To send the selected sound via MMS (see “MMS” page 61 for details).
- Send by Infrared** To send the selected sound via infrared to another IrDA device (see “Infrared” page 68 for details).
- Send by Email** To send the selected sound via E-mail (see “E-Mail” page 52 for details).
- Set as ringer** To set the selected sound as the current **Ringer**.
- Set as SMS / MMS ringer** To set the selected sound as **Messages ringer** (this option must be set **On** in **Settings** > **Sounds**, see page 36).

You will not be able to send sounds that are protected by a copyright. Sounds in the Standard melodies folder cannot be deleted.

Demo mode



Press  to launch the **Demo** movie.

If you turned the phone on without having inserted a SIM card, this menu is available in the first menu level.

Memory Status



Memory status

This menu allows you to display the percentage of memory available in your phone. Several features share the mobile capacity: pictures and sound album, recorded memos and voice tags for voice commands, messages you have stored in the phone, phonebook and organiser entries, games, etc.

Your mobile phone is supplied with many sounds and pictures. You can only delete sounds or pictures in the Own Pictures or Own Melodies folders, e.g., to free memory space for your own sounds and pictures.

Press  to check the memory status. The display shows you the percentage of memory free and the phone's total memory in KB. Press  again and access the detailed list of memory used by each feature.

If «List full» appears when saving a new item or to free memory space, you must delete an item to be able to create or add a new one.

Sound recording



This menu allows you to record a sound of 1 min. maximum, and up to 20 different sounds, depending on the Memory status.

Press **OK** and select **Multimedia** > **Sound recording**, then press **OK** again. Select **<New>** to record a new sound. Follow the instructions on the screen and press **OK** once your sound is recorded. You can then **Delete** or **Rename** it.

Memos can then be used as alarm or incoming call ringers, etc. Voice memos previously saved cannot be sent by MMS.

BeDJ



This menu allows you to launch BeDJ: press **OK** (see “Music & Mix” page 25 for details).

Camera



This menu allows you to activate the camera: press **OK** (see “Taking pictures” page 20 for details).

12 • Games & Appli.

Euro converter



-> Euro



Euro ->

The **-> Euro** menu enables you to convert a sum into Euros by entering the amount and pressing **OK**.

The **<- Euro** menu enables you to convert a sum from Euros by entering the amount and pressing **OK**.

The currency used for the conversion is determined by the country where you have subscribed. The Euro converter is available upon subscription and only in countries using the Euro.

Calculator



Calculator

This menu provides the following functions:

Addition	By pressing the + key.
Subtraction	By pressing the - key twice.
Multiplication	By pressing the * key 3 times.
Division	By pressing the / key 4 times.
Equals	By pressing the = key.

Enter the figures using the keypad. Calculator accuracy is to 2 decimal places and is rounded up to the higher decimal figure. Press **CA** to correct the numbers. Press and hold **CE** to get the dot. Press and hold **CA** twice to return to idle mode.

Alarm clock



Alarm clock

This menu allows you to set the alarm clock. Press **OK** and select **Games & Appli > Alarm clock**, then press **△** or **▽** to activate it. Enter the time, then press **OK** and select:

- **Once** activates the alarm at a set hour on a set day,
- **Every day** activates the alarm at a set hour every day of the week,
- **On weekdays** activates the alarm at a set hour on weekdays only.

Then select one of the alarm alerts: the buzzer, a melody or a sound recording (the latter being played only once). Select an item in the list if required, and press **OK** to confirm your choice.

The alarm clock will ring even if you turned off your phone, and even if the Ringer volume is set to Off (see page 36). Press any key to stop the alarm ringing.

Organiser

Create a new event



Organiser

The **Events** menu allows to create events and store them in your organiser. Events can be **Meetings**, **Holidays** or **ToDo**s.

When the organiser alert is On (see page 37), a beep alerts you when an event is due.

1. Select **Organiser** > **Events** > **<New>** and press **OK**.
2. Select the type of event to create (**Holiday**, **Meeting**, **ToDo**) and press **OK**.
3. Enter the starting and ending date & time of the event and press **OK**, enter the text concerning the event (e.g. «Meeting with Smith») and press **OK**.
4. The **Set Reminder** menu reminds you of events via alerts triggered at the chosen time. Move **◀** or **▶**, set the **Reminder** for this event and press **OK**.

This menu only applies to Meeting and ToDo events. Note that the reminder depends on the time set and displayed on the screen. As such, it will be updated when changing time zones (see “Time and date” page 46).

5. Move **◀** or **▶** to set the **Repeat Event** option for this event and press **OK**.
6. The events will be listed using start time and date. From the events list,
 - press and hold **CA** to go back to the idle screen,
 - repeat steps 2 to 5 to create more events.

The organiser shares the mobile capacity and memory with other features (phonebook, picture album, sound, etc.). As a consequence, all features are inter-dependent: the more events you create, the less names, memos or pictures you can store, and vice-versa. 299 is the maximum total of events + names you can store.

*If «List full» appears, delete an event (or name) to be able to create a new one. To check the memory available in your phone, press **OK** and select **Multimedia** > **Memory** status.*

Modify an event

Change an event



Change

When creating an event, not all fields are available, this is designed so make creating a new event quicker. When changing an event, these further options become available.

1. To change an event, select the event of your choice and press **OK**.

2. When your phone displays the details of the selected event, press , select **Change** and press  again.

Changing a repeated event will also modify all instances of this event: in this case, press  to confirm.

3. Change any information as needed and as described above.

Deleting an event

Deleting a single event

Select the event of your choice and press  twice. Then select **Delete** and press  to confirm.

Deleting a repeated event

- By selecting a past occurrence: select a past occurrences of an event and press . When the event details appear, press , then select **Delete** and press  to confirm: only the past occurrences of the selected event are deleted.
- By selecting a future occurrence: select a future occurrence of an event and press . When the event details appear, press , then select **Delete** and press  to confirm: all occurrences of the selected event are deleted.

Deleting past events



Delete past

You can also delete past events by selecting **Delete past** at the first level of the **Organiser** menu. In this case, enter the starting date (past or future) from which all previous events will be deleted and press  twice to delete all events preceding this date.

To delete all events set in your organiser, enter a starting date several years ahead (e.g., 3rd of December, 2010). This way, you make sure all events preceding this date are deleted at once.

Views of events

The **Day view**, **Week view** and **Month view** display in the respective format all events stored in your organiser. To display events in these views, proceed as follows:

1. Select the view of your choice and press .
2. Once you entered the selected view, move  or  to display the previous or next day, week or month.
3. Press  to display the list of corresponding events or to create a new one.

Time zone



Time zone

Although changing time zones is necessary when travelling a lot, be aware that it will impact all organiser reminders: the

event alarms will be updated depending on the time displayed on the screen (see “Time and date” page 46).

Brick Game

This menu can be subscription dependent. As such its icon and content may vary.



This menu gives you access to the brick game. The object of the game is to destroy the bricks by hitting them with the ball.

When you have destroyed the last brick, you access the next level. Keys used are the following:

-  and  To move the racket left or right.
-  and  To throw the ball left or right. Press either of these keys to start the game.
-  To pause the game; pause time is limited to 2 min. after which the screen returns to idle mode and the game is lost.

13 • Call information

Call settings



Call settings

This menu allows you to set all the call options (call forward, waiting, etc.).

Call forward



Call forward

Allows you to divert incoming calls either to your mailbox or to a number (whether in your [Phonebook](#) or not) and applies to: [Data calls](#), [Voice calls](#) and [Fax calls](#).

Before activating this option, you must enter your voice mailboxes' numbers (see "Mailboxes" page 78). This feature is subscription dependent, and different from the call transfer, which takes place when one/several calls are in progress.

Unconditional

The unconditional option will divert all the incoming calls.

Warning! When selecting this option, you will not receive any calls at all until you deactivate it.

Conditional

This option allows you to choose in which circumstance(s) you want to divert incoming calls. Three options are available: [If no reply](#) (you haven't replied to the call), [If not reachable](#) (your network isn't available) or [If busy](#) (you are already on the phone and your subscription doesn't include the call waiting option or you haven't activated it). Each option can be set independently.

Once you have selected either [Conditional](#) or [Unconditional](#), choose whether you want to divert calls to your voice mailbox or to another phone number, or cancel the call forward.

Status



Status

Allows you to display the status of all call forwarding.

Mailboxes



Mailboxes

This menu allows you to enter your voice mailbox numbers (if not available on your SIM card).

In some cases, you might have to enter two numbers: one to listen to your mailbox, the other one to forward calls. Contact your operator for more information on this subject.

Auto redial



Autoredial

Allows you to set the auto redial **On** or **Off**. When **On** and if the person you are calling is busy, your phone automatically redials this number until a successful connection is made, or until the maximum number of attempts is reached (10). The phone emits one beep at the beginning of each attempt and one special beep if the connection is successful.

The time between redials increases with each attempt.

Any key answer



Any key answer

Allows you to accept a call by pressing any key, except , used to reject a call.

Call waiting



Call waiting

Call waiting is managed differently depending on the type of network (GSM or GPRS) you have selected.

With GSM call



With GSM call

Allows you to **Activate** or **Deactivate** the call waiting and applies to: **All calls**, **Voice calls**, **Fax calls** and **Data calls**.

When this option is active, you hear a beep if someone tries to call you while already on a call. Select the **Status** option to find out whether the GSM call waiting is active or not.

This function is subscription-dependent. Contact your operator.

With GPRS call



With GPRS call

Allows you to **Activate** or **Deactivate** the call waiting for voice incoming calls while a GPRS connection is ongoing.

Caller ID



Caller ID

Allows you to **Show** or **Hide** your identity to your correspondent. The **Status** option will inform you if this function is activated or not.

Call list



Call List

This menu provides you with the list of outgoing and incoming calls, as well as attempts at auto redialling and call details. The calls (made, missed and received) are displayed in chronological order with the most recent on top of the list. When the **Call list** is empty the screen displays **List empty**.

Call list



Call list

From the main carousel, press **OK** then select **Call Info** > **Call list** > **Call list** to display the call list. Use **△** and **▽** arrows to scroll the list and press **OK** again to consult the date, time, number, call status of any selected call and to know if it was sent or received. Press **OK** for access to a carousel which allows you to **Call** or **Call handsfree** this correspondent, **Send a SMS**, **Delete** the selected call or **Store** the associated number.

Reset



Reset

Press **OK**, select **Call Info** > **Call list**, then **Reset**. Press **OK** twice to reset.

*The phone stores the last 30 numbers in the Call list, the most recent number being displayed first. You can redial directly any of these numbers. In idle screen, move **△** to access the Call list. If a number listed is also in your Phonebook, the corresponding name is displayed. Move **△** or **▽** to select the number to redial and press **@**. Press **☎** to hang up.*

Call counters



Call counters

This menu allows you to handle the cost and duration of your calls.

GSM counters



GSM counters

This menu gives you access to the options described below.

The GSM Call Counters do not include WAP connections. Most options mentioned below are subscription-dependent.

Total duration



Total duration

Select this option and press **OK** to **Show** or **Reset** the time duration of **Outgoing** or **Incoming** calls.

Last call information

This feature is subscription dependent.



Last call info

This menu allows you to display the duration and/or cost of your last call.

Info at call end

This feature is subscription dependent.



Info at call end

Allows you to activate or deactivate the systematic display of the length and/or cost of each call when hanging up.

Total cost

This feature is subscription dependent.



Total cost

Allows you to display the accumulated cost and to set the counter to zero. It may be protected by PIN or PIN2 codes.



Show

Shows how much has been spent, having established the charge rate.



Reset

Allows you to reset the current **Total cost** to 0; requires your PIN2 code.



Show balance

Allows you to check the remaining credit (compared with previously set limit).



Cancel cost limit

Allows you to cancel the cost limit. It may be protected by PIN or PIN2 codes (depending on your subscription).



Cost limit

Allows you to enter the cost limit used in the **Show balance** menu.



Charge rate

Allows you to set or change the rate per unit. First enter the currency used (three characters maximum) then enter the cost per unit.

GPRS counters

This feature is subscription and network dependent.



GPRS counters

This menu allows you to select either one of the following options:

Last mobile session



Mobile session

This option will display the last connection session or transfer volume of your mobile phone (e.g., after a WAP connection over GPRS).

Last PC session



PC session

This option will display the last connection session or transfer volume of your PC transmission.

The call counters managed by your mobile phone might differ from the ones used by your operator. You should therefore consider the call counters displayed on the screen as informative items, but NOT as the actual charge rate basis.

14 • WAP



WAP

Your mobile phone supports services based on the Wireless Application Protocol (WAP). The built-in WAP browser allows you to access services supplied with your network, such as news, sports, weather, etc.

Your mobile phone readily supports the WAP function if it is included in your subscription; if your phone was pre-configured, it shouldn't be necessary for you to change the settings described in this section.

With some operators, WAP parameters can be set remotely. Please check directly with your operator for detailed information.

Internet services

This main menu of the WAP browser allows you to configure the settings related to WAP, connect to your operator's homepage, define bookmarks for direct and faster connections, etc.

Launch a WAP session

1. To launch a WAP session, press and hold the  key while in idle mode.

You can also select Operator Services. > WAP > Homepage and press .

2. Your mobile phone will connect to the network and according to the [Access settings](#) you have defined in the menu [Settings](#) > [Network](#) (see page 44).
3. The browser is launched and your phone connects to your operator's homepage.
4. Move  or  to navigate the on-line pages, and press  to select a highlighted item.
5. Press  to return to the previous page.

End a WAP session

To end a WAP session, press and hold , OR select [Options](#) > [Exit](#) and press  to confirm.

Homepage

The [Homepage](#) is the link to the first WAP site you will access when launching WAP from the idle screen. In most cases, this menu item of the [WAP services](#) menu is preconfigured and will connect directly to your operator's WAP homepage.

You can change this default homepage by specifying the name and URL address of another homepage, which will then replace the current one (see "Save as homepage" page 86).

Bookmarks

This menu allows you to store your favourite WAP site addresses, rename them if desired and access them quickly from the list.

This can also be done while browsing: press  to access the Options, then select Bookmarks. In this case, the Name and URL fields will be automatically filled in with the information contained in the page you are browsing.

Add bookmarks

1. Select **WAP** > **Bookmarks** > **Add bookmark** and press .
2. Start entering the new name: an edit screen automatically appears.
3. Press  to save the name you entered.
4. Press  to move to the address field and proceed the same way to enter the WAP address.

Manage bookmarks

This menu allows you to **Delete** the stored bookmarks, or to **Edit** them in order to change their name and/or address. In both cases, press  to confirm.

Use bookmarks

To connect to a WAP site you have stored as a bookmark, simply select it in the list and press  to launch the connection.

Enter address

This menu allows you to enter a WAP site address, to which you can connect directly when selecting it and pressing . This is a quick way to access WAP addresses without saving them as bookmarks.

1. Press  and enter the URL address of the desired homepage.
2. Press  to connect to this page.

All the addresses you enter in this menu and connect to at least once, will appear in a list: select one of the items and press  to reconnect to the corresponding page, without having to enter the complete address again.

Settings

Edit Homepage

Allows you to change the **Homepage** name and address:

1. Press  and start entering the new name. An edit screen automatically appears.
2. Press  to save the name you entered.
3. Back to the **Edit Homepage** menu, press  to move to the address field and proceed the same way to change the address.

Select Profile

This menu allows you to select one of the available profiles, and to then define the connection settings for each of them: scroll  or  to choose the profile

of your choice, then press  or  to select / deselect it and press  to confirm.

All connection settings described below will apply to the selected profile, which you can then rename for easier identification.

Connection

Select connection

Allows you to select one of the data profiles you have defined in [Settings > Access settings](#) (see page 44 for detailed information on this subject).

In the list that appears, select the connection setting of your choice and press  to confirm.

Bearer

Allows you to select the type of network used by the selected profile when launching a connection.

GSM or **GPRS**: your mobile will only use the GSM or the GPRS network for WAP connections.

GPRS first: your mobile will first try to connect to the GPRS network, then to the GSM network if the GPRS network isn't available when connecting.

Selecting this option requires you to have configured both GSM and GPRS settings. See page 44 for details.

Proxy address

Allows you to specify a proxy gateway address to be used when launching a WAP connection using the selected profile. Press  and enter the address of your choice, then press  to confirm.

Press and hold  to enter a dot «.»

Proxy port

Allows you to specify a proxy port number, in case the proxy you are using requires a different port number. Press  and enter the number of your choice, then press  to confirm.

Security

Certificates

Select this menu and press  to display the list of installed security certificates. Select one of the items in the list and press  to display its details or delete it.

Session info

Allows you to display information about the current WAP session: security type, class, etc. Press  to go back one page.

Current certificate

Allows you to display the currently used security certificate. Press  to go back one page.

Rename Profile

This menu allows you to rename the currently selected profile: enter the new name (an edit screen automatically appears), then press  to save the name you entered.

Browser Options

This menu allows you to activate/deactivate the downloading of images attached to WAP pages. Select **Never** or **Always** and press  to confirm your choice.

Selecting Never will speed up the global downloading time of the pages browsed.

Cache

This menu allows you to empty an area of the phone's memory where the pages browsed during a WAP session are stored. Select **Clear cache** and press  to confirm your choice.

Push inbox

This menu allows you to read and manage messages automatically sent to you by the network and / or by your operator.

1. If you have been informed that you received a push message, press  to read it.
2. Otherwise, select **Operator Services.** > **WAP** > **Internet services** > **Push Inbox** and press  to access the list of messages.

Messages with high priority feature an exclamation mark together with the read / unread icon.

3. Press  or  to browse the list and select the message of your choice, press  to read it.
4. If the message contains a WAP address (or URL), press  to connect to the corresponding WAP site.
5. To delete one of the push messages, select **Push Inbox** > **Manage** messages and press .
6. Select the message to be deleted and press  to confirm.

Options

While browsing Internet pages, press the  key to access the options described below.

The menus that are common to both Internet services and Options menus are described in the above section.

Homepage

Gives you direct access to the Homepage of the WAP site you are currently browsing.

Back

Brings you back to the previously browsed page.

You must have browsed at least 2 pages for this option to be available.

Forward

Takes you to the next browsed page (e.g., when you have previously selected [Back](#)).

Refresh

Will reload the currently browsed page from its original server.

Save as homepage

This menu option allows you to save the currently browsed WAP page as the default homepage.

1. Select [Save as homepage](#) and press . The URL address of the page you are browsing automatically appears in the [Address](#) field.
2. Enter a name for this homepage and press .
3. Back on the [Internet services](#) menu, the homepage name will be the first item on the list. Press the  key while in idle mode to connect automatically to this page.

Save as...

When browsing WAP sites, this menu option allows you to save images embedded in the pages that are displayed.

1. While browsing, scroll  or  to select the picture.
2. Once the picture is highlighted, press  to access the [Options](#). Select [Save as...](#) and press .
3. Rename the picture if desired and press  to save it in the [Picture Album](#).

Exit

Allows you to end a WAP session: press  to confirm and to quit WAP.

Receive a call

When receiving a call whilst connected to WAP:

1. Answering the call will quit the WAP application and disconnect the current session. Your phone will return to the last browsed page when you hang up, but the connection itself will be lost.
2. Rejecting the call will bring you back to the preview screen.

15 • Operator services

Most items of the Operator Services menu (e.g. Service numbers, Services +) are subscription-dependent and specific to operators: your mobile phone readily supports them if they are included in your subscription. Consequently, the menus shown following may or may not be available. Contact your network operator for detailed information on availability and rates.

The services provided may involve making a phone call or sending a SMS for which you may be charged.

GSM strings

The phone supports standard GSM strings that can be sent from the keypad to the network and used to activate services provided by the network.

- Example n° 1

Press , then , to activate the Call Waiting service.

- Example n° 2

Press , then , to know if the mobile identification has been sent.

- Example n° 3

Press , then , to activate the feature call forward if no reply.

- Example n° 4

Press , then , to activate the feature call forward if unreachable.

Contact your network operator for detailed information on GSM strings.

DTMF tones

Some phone services (such as phone answering machines and pagers) require your phone to transmit DTMF tones (Dual Tone Multi Frequency), also known as “touch tones”. These are used to communicate passwords, callback numbers, caller choices, and so on.

You can send DTMF tones at any time during a call by pressing any of the keys to , and . You can also attach a DTMF sequence to a phone number before dialling it (or storing it in the [Phonebook](#)). The phone number and the DTMF part must be separated by a wait character.

Pause and wait characters

To obtain a pause or wait character, press and hold . The display shows **w** for a wait and **p** for a pause. The phone always interprets the first pause character as a wait character. When you dial a number containing a wait character, your phone dials the first part (the

phone number) and then waits for the call to be connected before sending the rest of the digits as DTMF tones. Any subsequent pause character is an ordinary pause that generates a delay of 2.5 seconds.

For example: access your answering machine

To hear all messages (e.g. code 3) on your answering machine (password 8421) at phone number 12345678, you could call: **12345678w8421p3**. The phone dials 12345678 and waits for the call to be connected. When connected, the phone transmits 8421 (the password), pauses 2.5 seconds, and then sends the last digit. If you find that 2.5 seconds is not long enough for your needs, you can enter several pause characters one after the other to increase the pause time.

Make a second call

You can make a second call during an active call or during a call on hold. You can switch between the two calls (the cost displayed on the screen depends on local charge rate).

1. While already on the phone, dial a number then press . The first call is put on hold and the

number is displayed at the bottom of the screen. The second number is then dialled.

2. To toggle between the two calls, press  then select **Switch calls**. Each time that you toggle from one call to another, the active call is placed on hold and the call which was on hold is activated.
3. To hang up the active line, press . The active line is hung up and the call on hold remains as such.
4. To end the call on hold, use **Switch calls** to reach it, then press .

Notes:

The second number can be dialled either from the keypad or from:

- *the phonebook, by pressing , then selecting the name to be called,*
- *the Call list, by pressing , then selecting the number to be called.*

Answer a second call

You are able to receive another call when already in communication (if this feature is available with your subscription). When you receive a second call the phone emits an alert beep and the screen displays **Call waiting**.

To receive a second call, you must have:

- *subscribed to this feature,*
 - *deactivated the Call forward option for voice calls (see page 78),*
 - *activated the Call waiting option (see page 79).*
-

If you receive a second call, press , then you can:

- accept the second call: the first one is put on hold, the second one is active. If you want to toggle between the two calls, press  then select **Switch calls**. Each time you toggle from one call to another, the active call is put on hold and the call which was on hold is then activated. To introduce the new caller into a conference press  and select **Conference**.
 - reject the second call
 - end the active call, then your incoming call is ringing.
-

Notes:

- *If you also wish to answer the incoming call, press ; to reject it, press .*
 - *If you have activated call forwarding 'If Busy' (see "Call forward" page 78), you will never receive second calls since they are always forwarded when the line is busy.*
-

Answer a third call

Subscription dependent

While in communication and one call being on hold, you may receive a third call. The phone emits an alert beep. You can either end one of the calls before being able to answer the third one or introduce the calling party into a conference (see below). This service is limited to two current communications (one active and one on hold).

Conference call

Subscription dependent



You can activate the conference call by making consecutive outgoing calls, or create it from a multiparty call context.

You may have up to five members at the same time and end the conference with . At this point all calls are disconnected.

In order to make consecutive outgoing calls, first initiate a normal call with the first number of the conference. When the first member is on line, initiate a second call as described in "Make a second call" above. When the second call is engaged, press  and select

Conference. Repeat the above process until five members are connected.

If there is an incoming call during the conference call and there are less than five members, you can accept this new call by pressing **OK** . Press **OK** again and then select **Conference** to add this member to the conference call. If there is an incoming call during a conference with five members already connected, you can answer this new incoming call, but not add it to the conference.

While a conference call is in progress, press **OK** to access the **Conf. members** options. Disconnect a member of the conference by selecting **Remove party** and press-

ing **OK** to confirm, or select **Private call** to have a private call with this member only (other members are put on hold).

Explicit call transfer

Subscription dependent

You can connect an active call and a call on hold. You are disconnected when the transfer is completed. During a call press **OK** , select **Transfer** and press **OK** .

This feature is different from the Call forward, which takes place before you pick up the call (see page 78).

Precautions

Radio waves



Your cellular mobile phone is a **low power radio transmitter and receiver**. When it is operating, it sends and receives radio waves. The radio waves carry your voice or data signal to a base station that is connected to the telephone network. The network controls the power at which the phone transmits.

- Your phone transmits/receives radio waves in the GSM frequency (900 /1800MHz).
- The GSM network controls transmission power (0.01 to 2 watts).
- Your phone complies with all relevant safety standards.
- The CE mark on your phone shows compliancy with European electromagnetic compatibility (Ref. 89/336/EEC) and low voltage directives (Ref. 73/23/EEC).

Your cellular mobile phone is your **responsibility**. To avoid damage to yourself, to others or to the phone itself, read and follow all the safety instructions and make them known to anyone borrowing your phone.

Furthermore to prevent unauthorised use of your phone:



Keep your phone in a safe place and keep it out of small children's reach.

Avoid writing down your PIN code. Try to remember it instead.

Switch off the phone and remove the battery if you are going to leave it unused for a long time.

Use the **Security** menu to change the PIN code after purchasing the phone and to activate call restriction options.



The design of your phone complies with all applicable laws and regulations. However your phone may cause interference with other electronic devices. Consequently you should follow all **local recommendations and regulations** when using your cellular phone both at home and when away. **Regulations on the use of cellular phones in vehicles and aircraft are particularly stringent.**

Public concern has been focused for some time on the possible health risks for users of cellular phones. The current research on radio wave technology, including the GSM technology, has been reviewed and safety standards have been drawn up to ensure protection from exposure to radio wave energy. Your cellular tele-

phone **complies with all applicable safety standards** and the Radio Equipment and Telecommunications Terminal Equipment Directive 1999/5/EC.

Always switch off your phone

Inadequately protected or **sensitive electronic equipment** may be affected by radio energy. This interference can lead to accidents.



Before boarding an **aircraft** and/or when packing the phone in your luggage: the use of mobile phones in an aircraft may be dangerous for the operation of the aircraft, disrupt the mobile phones network and may be illegal.



In **hospitals**, clinics, other health care centres and anywhere else where you may be in the close vicinity of **medical equipment**.



In areas with a potentially **explosive atmosphere** (e.g. petrol stations and also areas where the air contains dust particles, such as metal powders).

In a vehicle transporting flammable products (even if the vehicle is parked) or a vehicle powered by liquefied petroleum gas (LPG), check first that the vehicle complies with the applicable safety rules.

In areas where you are requested to turn off radio transmitting devices, such as quarries or other areas where blasting operations are in progress.



Check with the vehicle manufacturer that **electronic equipment** used in your vehicle will not be affected by radio energy.

Users of pacemakers

If you are a user of a **pacemaker**:

- Always keep the phone more than 15 cm from your pacemaker when the phone is switched on, in order to avoid potential interference.
- Do not carry the phone in a breastpocket.
- Use the ear opposite to the pacemaker to minimise the potential interference.
- Switch off your phone if you suspect that interference is taking place.

Users of hearing aids

If you are a user of a **hearing aid**, consult your physician and hearing aid manufacturer to learn whether your particular device is susceptible to cellular phone interference.

Performance improvement

In order to **improve the performance of your phone**, reduce radio energy emission, **reduce battery consumption** and ensure safe operation adhere to the following guidelines:



For the optimal and satisfactory operation of the phone you are recommended to use the phone in the normal operating position (when not using in hands-free mode or with a hands-free accessory).

- Do not expose your phone to extreme temperatures.
- Treat the phone with care. Any misuse will void the International Guarantee.
- Do not immerse the phone in any liquid; if your phone is damp, switch it off, remove the battery and let them dry for 24hrs before using them again.
- To clean the phone, wipe it with a soft cloth.
- Placing and receiving calls consumes the same amount of battery energy. However, the mobile consumes less energy in idle screen when kept in the same place. When in idle screen and while you are moving, your phone consumes energy to transmit updated location information to the net-

work. Setting the backlight for a shorter period of time as well as avoiding unnecessary navigating in the menus will also help to save the battery's energy for longer phoning and stand-by performances.

Information displayed on the battery

- Your phone is powered by a rechargeable battery.
- Use specified charger only.
- Do not incinerate.
- Do not deform or open the battery.
- Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
- Avoid exposure to excessive heat ($>60^{\circ}\text{C}$ or 140°F), moisture or caustic environments.



You should only use Philips Authentic Accessories, as the use of any other accessories may damage your phone and will make all guarantees for your Philips phone null and void.

Make sure damaged parts are replaced immediately by a qualified technician and that they are replaced with genuine Philips replacement parts.

Do not use your phone while driving



It lowers concentration, which can be dangerous. Adhere to the following guidelines:
Give your full attention to driving. Pull off the road and park before using the phone.

Respect the local regulations in countries where you drive and use your GSM phone.

If you want to use your phone in a vehicle, install the hands-free car kit which is designed for that purpose, still ensuring you give full attention to driving.

 
Ensure that your phone and car kit do not block any air bags or other security devices fitted in your car.

The use of an alarm system to operate a vehicle's light or horn to indicate incoming phone calls is prohibited on public roads in some countries. Check local regulations.

EN 60950 Norm

In case of hot weather or after a prolonged exposure to the sun (e.g., behind a window or a windscreen), the temperature of your phone's casing might increase, especially when featuring a metallic finish. Be very careful in this case when picking up your phone and also avoid using it with an ambient temperature over 40°C.

Environmental care



Remember to observe the local regulations regarding the disposal of your packaging materials, exhausted batteries and old phone and please promote their recycling.

Philips has marked the battery and packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.

Battery: 	The crossed-out dustbin signifies that the battery should not be disposed of with general household waste.
Packaging: 	The mobius loop symbol signifies the labelled packaging material is recyclable.
	The green point symbol signifies that a financial contribution has been made to the associated national packaging recovery and recycling system (e.g. EcoEmballage in France).
	The chasing arrows symbol on the plastic tray and plastic bag indicate that the materials are recyclable and also identifies the plastic material.

Troubleshooting

The phone does not switch on

Remove and reinstall the battery (see page 7). Then charge the phone until the battery icon has stopped flashing. Finally, unplug from the charger and try to switch the mobile on.

The display shows **BLOCKED** when you switch on

Somebody tried to use your phone but didn't know the PIN code nor the unblocking code (PUK). Contact your service provider.

The  and  symbols are not displayed

The network connection is lost. Either you are in a radio shadow (in a tunnel or between tall buildings) or you are outside the network coverage area. Try from another place or contact your network operator for assistance/information about the network.

The display doesn't respond (or the display responds slowly) to key presses

The display responds more slowly at very low temperatures. This is normal and does not affect the operation of the phone. Take the phone to a warmer place and try again. In other cases please contact your phone supplier.

Your phone doesn't return to the idle screen

Press and hold , or switch off the phone, check that the SIM card and the battery are installed correctly, and switch it on again.

Your phone doesn't display the phone numbers of incoming calls

This feature is network and subscription dependent. If the network doesn't send the caller's number, the phone will display **Call 1** instead. Contact your operator for detailed information on this subject.

You can't send text messages

Some networks don't allow message exchanges with other networks. Contact your operator for detailed information on this subject.

The display shows
IMSI failure

This problem is related to your subscription. Contact your operator.

You can't receive
and/or store JPEG
pictures

A picture may not be accepted by your mobile phone if it is too large, or if it doesn't have the correct file format. See page 58 for complete information on this subject.

When charging the
battery the battery
icon shows no bars
and the outline is
flashing

Only charge the battery in an environment where the temperature does not go below 0°C (32°F) or above 50°C (113°F).

In other cases please contact your phone supplier.

The display shows
SIM failure

Check that the SIM card has been inserted in the right position (see page 7). If the problem remains, your SIM card may be damaged. Contact your operator.

You are not sure that
you are receiving
calls properly

To receive all calls, make sure that none of the features «Conditional call forward» or «unconditional call forward» is activated (see page 78).

When attempting to
use a feature in the
menu, the mobile
displays not allowed

Some features are network dependent. They are only available, therefore, if the network or your subscription supports them. Contact your operator for detailed information on this subject.

The display shows
Insert your SIM card

Check that the SIM card has been inserted in the right position (see page 7). If the problem remains, your SIM card might be damaged. Contact your operator.

Your phone doesn't
work well in your
car

A car contains many metallic parts that absorb electromagnetic waves which can affect the phone's performances. A car kit is available to provide you with an external antenna and enables you to make and receive phone calls without handling the handset.

You should check with local authorities if you are allowed to phone while driving.

Icons & symbols

In idle mode, several symbols can be displayed simultaneously either on external screen or main screen.

If the network symbol isn't displayed, the network is not currently available. You may be in a bad reception area: move to a different location.



Silent - Your phone will not ring when receiving a call.



Vibra - Your phone will vibrate when receiving a call.



GPRS attach - Your mobile phone is connected to the GPRS network.



SMS message - You have received a new message.



Voice mail - You have received a new voice mail.



Battery - The bars indicate the battery level (4 bars = full, 1 bar = low).



Alarm clock activated.



Roaming - Displayed when your phone is registered to a network other than your own (especially when you're abroad).



SMS full - Memory for messages is full. Delete old messages to receive new ones.



Call Forward Unconditional to number - All your incoming voice calls are being forwarded to a number other than voice mail.



Call Forward to voice mailbox - All your calls are being forwarded to voice mail.



Home zone - A zone designated by your network operator. Subscription dependent, contact your service provider for details.



GSM Network: your phone is connected to a GSM network

Reception quality: the more bars are shown the better the reception is.



Instant message - option is set to **On**.



Memory full - The phone's memory is full. Delete items to store new ones.



MMS message - You have received a new multimedia message.

Philips authentic accessories

Charger

Charges your battery in any AC outlet. Small enough to carry in a briefcase/handbag.

Universal car kit

Designed to operate your Philips mobile phone hands-free and easy to use, this compact hands-free solution offers a high audio quality. Simply plug the kit into the vehicle auxiliary outlet.

Stereo headset

In-line answer button offers you a simplified alternative to searching for the phone. Simply answer an in-

coming call by pressing the button. In idle mode, press to activate voice dial.

In certain countries, telephoning while driving is prohibited. For safe and trouble free installation, we recommend that specialized technicians install hands-free car kits.

Carry case

A translucent and soft plastic carry case allows easy key presses while protecting your phone from nicks and scratches. Supplied with necklace.

To maximise the performance of your Philips phone and not to void the warranty, always purchase Philips Authentic Accessories that are specially designed for use with your phone. Philips Consumer Electronics cannot be held liable for any damage due to use with non authorised accessories. Ask for Philips Authentic Accessories where you purchased your Philips Phone.

Declaration of conformity

We,
Philips France
Mobile Telephony Business Creation Team
Route d'Angers
72081 Le Mans cedex 9
FRANCE

declare under our sole responsibility that the product

Philips 535
CT 5358
Cellular Mobile Radio GSM 900/GSM 1800
TAC: 352751

to which this declaration relates, is in conformity with the following Standards:

EN 60950, EN 50360 and EN 301 489-07
EN 301 511 v 7.0.1

We hereby declare that all essential radio test suites have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex V of Directive 1999/5/EC has been followed related to articles 3.1 and 3.2 with the involvement of the following Notified Body:
BABT, Claremont House, 34 Molesey Road, Walton-on-Thames, KT12 4RQ, UK
Identification mark: **0168**

The technical documentation relevant to the above equipment will be held at:

Philips France
Mobile Telephony Business Creation Team
Route d'Angers
72081 Le Mans cedex 9
FRANCE

Le Mans, 13, November 2003

Jean-Omer Kifouani
Quality Manager

In case your Philips product is not working correctly or is defective, please return your phone to the place of purchase or the Philips National Service Center. In the event you require service whilst in another country a dealer address can be given to you by the Philips Consumer Help Desk in that country.
