

ZTE Whirl™

USER MANUAL



Z660G

www.zteusa.com

Table of Contents

Getting Started	5	Connecting to Networks and Devices	23
Installing the Battery and a microSD™ Card	5	Connecting to Mobile Networks	23
Charging the Battery	6	Connecting to Wi-Fi®	23
Switching Your Phone On/Off.....	6	Connecting to <i>Bluetooth</i> ® Devices	25
Locking/Unlocking the Screen and Keys.....	6	Connecting to Your Computer via USB	26
Using the Touch Screen	7	Connecting to Virtual Private Networks	27
Getting to Know Your Phone	8	Phone Calls	29
Personalizing	11	Placing and Ending Calls	29
Changing the System Language.....	11	Answering or Rejecting Calls	29
Setting the Date and Time	11	Working With the Call Log.....	29
Changing the Ringtone.....	11	Calling Your Contacts	30
Changing the Notification Sound	11	Checking Voicemail	30
Turning On/Off Touch Sounds.....	11	Using Options During a Call	31
Adjusting Volumes.....	11	Managing Multi-party Calls	31
Switching to Silent Mode.....	12	Adjusting Your Call Settings.....	32
Applying New Wallpapers	12	Internet Call Settings	33
Changing the Screen Brightness	12	People	35
Protecting Your Phone With Screen Locks.....	12	Checking Contact Details.....	35
Protecting Your Phone With Encryption	13	Adding a New Contact	35
Knowing the Basics	15	Setting Up Your Own Profile	35
Monitoring the Phone Status	15	Importing, Exporting, and Sharing Contacts	35
Managing Notifications	16	Working With Favorite Contacts.....	36
Managing Shortcuts and Widgets	17	Working With Groups	36
Organizing With Folders.....	18	Searching for a Contact	37
Rearranging the Favorites Tray	18	Editing Contacts.....	37
Entering Text	18	Accounts	39
Editing Text	21	Adding or Removing Accounts	39
Opening and Switching Apps.....	22	Configuring Account Sync.....	39

Copyright © 2013 ZTE CORPORATION.
All rights reserved.
No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.
The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Edition Time: May 2013
Manual No.: Z081704100155

Table of Contents

Email	40	Calendar	48
Setting Up the First Email Account.....	40	Viewing Your Calendars and Events.....	48
Checking Your Emails.....	40	Creating an Event.....	49
Responding to an Email.....	40	Editing or Deleting an Event.....	49
Writing and Sending an Email.....	41	Changing Calendar Settings.....	49
Adding a Signature to Your Emails.....	41	Google Talk™	50
Adding and Editing Email Accounts.....	41	Signing In to See Your Friends.....	50
Changing General Email Settings.....	42	Adding a Friend.....	50
Gmail™	43	Changing Your Online Status.....	50
Opening Your Gmail Inbox.....	43	Chatting With Friends.....	50
Switching Accounts.....	43	Changing Google Talk Settings.....	51
Writing and Sending a Message.....	43	Google+™	52
Adding a Signature to Your Gmail Messages.....	43	Organizing Your Contacts.....	52
Replying to or Forwarding a Message.....	43	Getting Updates.....	52
Working With Received Attachments.....	44	Chatting With Contacts.....	52
Searching for Messages.....	44	Checking Photos.....	52
Working With Labels.....	44	Checking and Managing Your Profile.....	52
Changing Gmail Settings.....	45	Browser	53
Messaging	46	Opening the Browser.....	53
Opening the Messaging Screen.....	46	Working With an Opened Page.....	53
Sending a Text Message.....	46	Using Multiple Browser Tabs.....	54
Sending a Multimedia Message.....	46	Downloading Files.....	54
Replying to a Message.....	46	Using Bookmarks.....	55
Forwarding a Message.....	47	Viewing Your Browsing History.....	55
Copying a Message.....	47	Changing Browser Settings.....	55
Viewing Details About a Message.....	47		
Deleting Messages or Threads.....	47		
Changing Message Settings.....	47		

Table of Contents

Maps, Navigation, Local, and Latitude	56	Play Music	67
Activating Location Services.....	56	Playing Your Music.....	67
Getting Your Location.....	56	Managing Playlists.....	68
Searching for a Location.....	56	Video Player	69
Getting Directions to Your Destination.....	56	Opening the Video Library.....	69
Searching for Local Places.....	57	Playing and Controlling Videos.....	69
Sharing Location.....	57	Managing Video Files.....	69
Google™ Search, Voice Search™, and Voice Actions	58	Sound Recorder	70
Searching With Text.....	58	Recording a Voice Memo.....	70
Searching by Speaking.....	58	Playing a Voice Memo.....	70
Using Voice Actions.....	58	More Apps	71
Changing Search and Voice Search Settings.....	58	Alarm.....	71
Camera	59	Calculator.....	71
Capturing a Photo.....	59	Downloads.....	71
Customizing Camera Settings.....	60	File Manager.....	71
Recording a Video.....	60	Note Pad.....	72
Customizing Camcorder Settings.....	61	Play Books.....	72
Gallery	62	Play Movies & TV.....	72
Opening the Gallery.....	62	Task Manager.....	72
Working With Albums.....	62	Timer.....	72
Working With Pictures.....	62	YouTube™.....	72
Working With Videos.....	63	Play Store	73
Music	64	Browsing and Searching for Apps.....	73
Copying Music Files to Your Phone.....	64	Downloading and Installing Apps.....	73
Viewing Your Music Library.....	64	Managing Your Downloads.....	73
Playing Music.....	65	Viewing Your Downloaded Apps.....	73
Managing Playlists.....	65		

Table of Contents

Settings **74**
General Settings..... 74
Wireless and Networks..... 75
Device..... 75
Personal..... 76
Accounts..... 77
System..... 77
Troubleshooting **78**
For Your Safety **81**
General Safety..... 81
Radio Frequency (RF) Energy..... 82
FCC Compliance..... 82
CTIA 83
Distraction 85
Product Handling 85
Electrical Safety..... 87
Radio Frequency Interference..... 88
Explosive Environments 88
Specifications **90**
Notes **91**

Getting Started

 
Installing the Battery and a microSD Card

Switch off your phone before installing or replacing the battery or the microSD card. You have the option to install a microSD card of up to 32 GB to expand your phone’s storage capacity. The microSD card can be installed and removed while the phone is turned on. Unmount the microSD card before removing it.


- 1. Remove the back cover.



- 2. Hold your microSD card with the metal contacts facing down and slide it in.

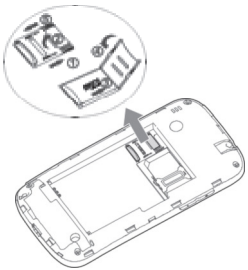

 - 3. Insert the battery by aligning the metal contacts on the battery with the metal contacts in the battery compartment. Gently push down on the battery until it clicks into place.

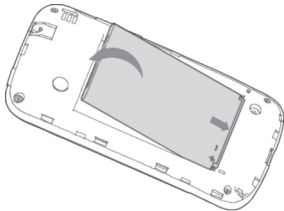


- 4. Press the cover gently back into place until you hear a click.

Charging the Battery

When you first get your new phone, you'll need to charge the battery. If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the screen will tell you the exact battery level each time you wake up your phone.

WARNING! Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

 1. Connect the adapter to the charging port. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging port.

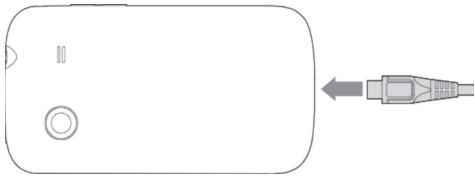

2. Connect the charger to a standard AC wall outlet. If the phone is on, you'll see a charging icon, such as  or , appear in the Status Bar.
3. Disconnect the charger when the battery is fully charged.

Switching Your Phone On/Off

- Press and hold the **Power/Lock Key** to turn on your phone.
- To turn it off, press and hold the **Power/Lock Key** to open the options menu. Tap **Power off** > **OK**.

Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys (put the phone into Sleep mode) when not in use, and also to turn the screen back on and unlock it when you need it.

To lock the screen and keys:

To quickly turn the screen off and lock the keys, press the **Power/Lock Key**.

NOTE: To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone screen is off.

To unlock the screen and keys:

1. Press the **Power/Lock Key** to turn the screen on.
2. Tap and hold  at the center of the screen.

NOTE: If you have set an unlock pattern, PIN, or password for your phone (see *Personalizing – Protecting Your Phone With Screen Locks*), you'll need to draw the pattern or enter the PIN/password to unlock your screen.

 
Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

- **Tap** – When you want to type using the on-screen keyboard, select items on screen (such as application and settings icons), or press on-screen buttons, simply tap them with your finger.
- **Tap and Hold** – To open the available options for an item (for example, a message or link in a web page), tap and hold the item.
- **Swipe or Slide** – To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.
- **Drag** – To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.

- **Pinch** – In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).
- **Rotate the screen** – For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.

Getting to Know Your Phone

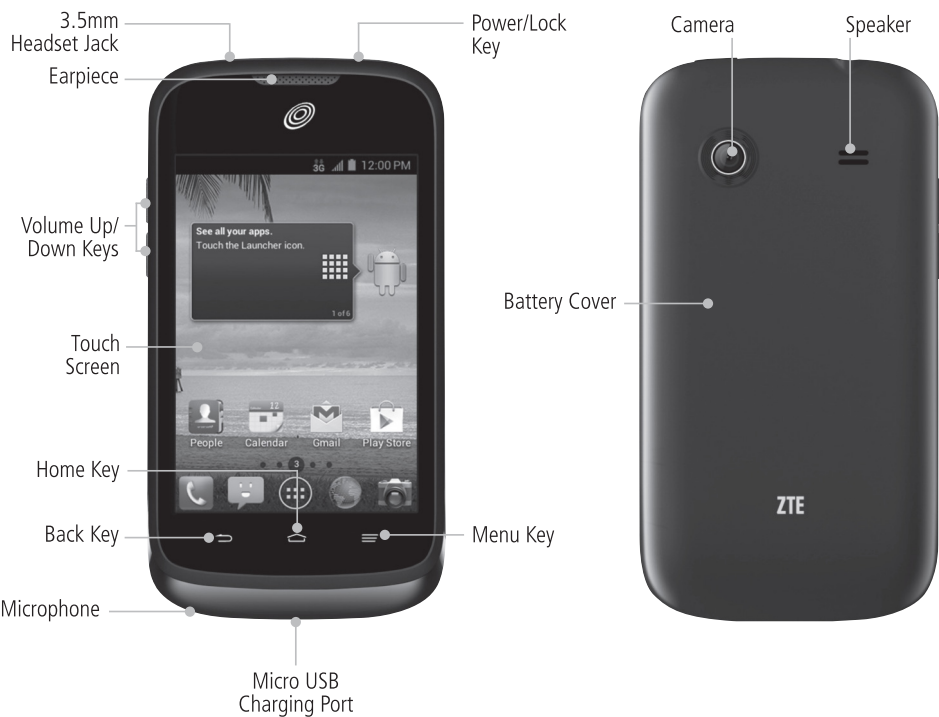


Key Functions

Key	Description
Power/Lock Key	Press and hold to turn on or off Airplane mode, enable silent mode/vibration mode/sound, or to power off. Press to switch your phone to Sleep mode. Press to wake up your phone.
Home Key	Press to return to the Home Screen from any application or screen. Press and hold to open Google Search .
Menu Key	Press for current screen options. Press and hold to see recently used applications.
Back Key	Press to go to the previous screen.
Volume Up/Down Keys	Press or hold to turn the volume up or down.

Getting Started

Home Screen

 You can customize your Home Screen. Set your own wallpaper, add the widgets or application shortcuts you need, or remove them as you like.

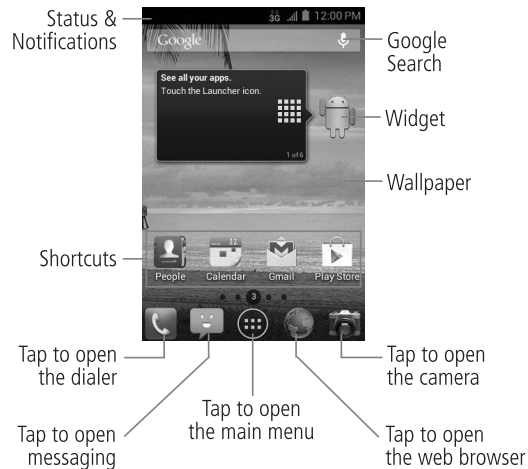

Personalizing

Changing the System Language

1. Press the **Home Key > Menu Key > System settings > Language & input > Language**.
2. Select the language you need.

Setting the Date and Time

1. Press the **Home Key > Menu Key > System settings > Date & time**.
2. Uncheck **Automatic date & time** and **Automatic time zone** if you want to set the date, time, and time zone by yourself.
3. Set the date, time, time zone, and date/time format.

Changing the Ringtone

You can customize the default ringtone for incoming calls quickly.

1. Press the **Home Key > Menu Key > System settings > Sound**.
2. Tap **Phone ringtone**.
3. Scroll through the ringtone list and select the ringtone you want to use.
4. Tap **OK**.

Changing the Notification Sound

You can customize the default notification sound quickly.

1. Press the **Home Key > Menu Key > System settings > Sound**.
2. Tap **Default notification**.
3. Scroll through the list and select the ringtone you want to use.
4. Tap **OK**.

Turning On/Off Touch Sounds

1. Press the **Home Key > Menu Key > System settings > Sound**.
2. Check or uncheck **Touch sounds**.

Adjusting Volumes

1. Press the **Home Key > Menu Key > System settings > Sound > Volumes**.
2. Drag the sliders to adjust the volume for each type of audio.
3. Tap **OK** to save.

TIP: You can adjust the media volume when a media application is in use by pressing the **Volume Up/Down Keys**. If no media application is active, press the **Volume Up/Down Keys** to adjust ringtone volume (or the earpiece volume during a call).

Switching to Silent Mode

You can set the phone to silent mode by using one of the following methods:

- Press and hold the **Power/Lock Key** and then tap  to enable silent mode, tap  to enable silent mode with vibration, or tap  to disable silent mode.
- Keep pressing the **Volume Down Key** when no media application is active. When the  icon appears in the Status Bar, the phone is set to silent mode with vibration. When the  icon appears in the Status Bar, the phone is in silent mode.
- Press the **Home Key > Menu Key > System settings > Sound > Silent mode**, and tap **Vibrate** or **Mute**.

Applying New Wallpapers

You can set the wallpaper for the Home Screen or Lock Screen.

1. Press the **Home Key > Menu Key > Wallpaper**.
2. Tap **Home** or **Lock screen**.
3. Select a wallpaper source from **Gallery**, **Live Wallpapers**, or **Wallpapers** and choose the image or animation you want to use as the wallpaper. Some cropping may be needed for **Gallery** images.
4. Tap **Done** at the top of the screen (for **Gallery** images) or **Set wallpaper**.

NOTE: Live Wallpapers are not available for the Lock Screen.

Changing the Screen Brightness

1. Press the **Home Key > Menu Key > System settings > Display > Brightness**.
2. Check the **Automatic brightness** box to make the phone adjust the screen brightness automatically, or clear the check box to adjust the brightness manually.
3. Tap **OK**.

Protecting Your Phone With Screen Locks

You can protect your phone by creating a screen lock. When enabled, you need to draw a pattern or enter a numeric PIN or password to unlock the phone's screen and keys.

1. Press the **Home Key > Menu Key > System settings > Security**.
2. Tap **Screen lock**.
3. Tap **Long press**, **Pattern**, **PIN** or **Password**.
 - If you tap **Long press**, simply tap and hold  at the center of the screen to unlock the phone. Tap and drag the icon in any direction to access application shortcuts.

Protecting Your Phone With Encryption

You can encrypt all the data on your phone: Google accounts, application data, music and other media, downloaded information, and so on. If you do, you must enter a numeric PIN or password each time you power on your phone.

WARNING! Encryption is irreversible. The only way to revert to an unencrypted phone is to perform a factory data reset, which erases all your data.

Encryption provides additional protection in case your phone is stolen, and may be required or recommended in some organizations. Consult your system administrator before turning it on. In many cases the PIN or password you set for encryption is controlled by the system administrator.

Before turning on encryption, prepare as follows:

1. Set a lock screen PIN or password.
2. Charge the battery.
3. Keep the phone connected to the charger.
4. Schedule an hour or more for the encryption process. You must not interrupt it or you will lose some or all of your data.

- If you tap **Pattern**, you're guided to create a pattern you must draw to unlock the screen. The first time you do this, a short tutorial about creating an unlock pattern appears. Then you're prompted to draw and redraw your own pattern.
- If you tap **PIN** or **Password**, you're prompted to set a numeric PIN or a password you must enter to unlock your screen.

The next time you turn on your phone or wake up the screen, you must draw your unlock pattern or enter your PIN or password to unlock it.

IMPORTANT: Screen lock options are listed in the approximate order of the strength of their security, starting with **None**, which provides no security.

If you forget the pattern you set, try five times and tap **Forget pattern?** to sign in to the Google account you have added on the phone and reset the screen lock. You need an active Internet connection. You can also upgrade the phone software.

Personalizing

When you're ready to turn on encryption:

- 1. Press the **Home Key > Menu Key > System settings > Security > Encrypt phone.**
- 2. Read the information about encryption carefully.
The **Encrypt phone** button is dimmed if your battery is not charged or your phone is not plugged in. If you change your mind about encrypting your phone, press the **Back Key.**
WARNING! If you interrupt the encryption process, you will lose data.
- 3. Tap **Encrypt phone.**
- 4. Enter your lock screen PIN or password and tap **Next.**
- 5. Tap **Encrypt phone** again.

The encryption process starts and displays its progress. Encryption can take an hour or more, during which time your phone may restart several times.

When encryption is complete, you'll be prompted to enter your PIN or password.

Subsequently, you must enter your PIN or password each time you power on your phone to decrypt it.

Knowing the Basics

Monitoring the Phone Status

The Status Bar at the top of the Home Screen provides phone and service status icons on the right side. Below are some of the icons you may see.

Indicators and Icons

Indicator	What it means
	GPRS connected
	EDGE connected
	3G connected
	Flight mode
	Battery empty
	Battery low
	Battery partially drained
	Battery full
	Battery charging

Indicator	What it means
	No signal
	Signal strength
	Mobile data in use
	Ringer off
	Vibrate mode
	<i>Bluetooth</i> on
	Connected to a Wi-Fi network
	Wired headset connected
	Alarm set

Managing Notifications

The Status Bar at the top of the Home Screen provides notification icons on the left. Below are some of the icons you may see.

Indicators and Icons

Indicator	What it means
	New SMS
	New MMS
	New Email
	New Gmail message
	New Google Talk instant message
	Problem with SMS/MMS delivery
	Missed call
	Call in progress
	USB connected

Indicator	What it means
	Song is playing
	microSD card unmounted
	microSD card removed
	Preparing microSD card
	New Wi-Fi network detected
	Downloading data
	Sending data
	GPS on
	Updates available

Opening/Closing the Notification Panel

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events. You can open the Notification Panel to view the details of notifications.

- To open the Notification Panel, swipe your finger down from the top of the screen.
- To close the Notification Panel, swipe your finger up from the bottom of the screen or tap the **Back Key**.

Responding to or Removing a Notification

In the Notification Panel, you can respond to a notification or remove the notifications.

- To respond to a notification, tap it.
- To remove a notification, swipe it left or right.
- To remove all notifications, tap  in the top right corner.
- Most apps that send notifications, such as Gmail and Google Talk, have notification settings that you can adjust.

TIP: In the Notification Panel, tap  at the top of notifications list to get to the **Settings** menu quickly.

Managing Shortcuts and Widgets

Adding Shortcuts and Widgets

1. Press the **Home Key** > .
2. Tap **WIDGETS** or **APPS** to view the available widgets and shortcuts.
3. Tap and hold a widget or app and drag it to the Home Screen.

Moving Shortcuts or Widgets

1. Tap and hold a widget or shortcut on the Home Screen.
2. Drag it to the place you need.

Removing Shortcuts or Widgets

1. Tap and hold a widget or shortcut on the Home Screen.
2. Drag it to  to remove it.

Adjusting Widget Size

1. Tap and hold a widget on the Home Screen and then release it.
2. An outline appears around the widget. Drag the outline to resize the widget.

NOTE: Not all widgets can be resized.

Organizing With Folders

You can create folders on the Home Screen and add several shortcuts in a folder.

Creating a Folder

1. Tap and hold the shortcut on the Home Screen you want to add into a folder until  appears.
2. Drag the shortcut to  and release it. A new folder will be created and the shortcut is added to the folder.

Renaming a Folder

1. Tap a folder to open it.
2. Tap the folder name field and enter a new name.

Adding Shortcuts to a Folder

1. Tap and hold a shortcut and then drag it onto a folder icon.
2. Release the shortcut and it will be added into the folder.

Removing Shortcuts From a Folder

1. Tap a folder to open it.
2. Tap and hold the shortcut you want to remove and then drag it to the Home Screen.
3. Release the shortcut and it will be removed from the folder.

Rearranging the Favorites Tray

The Home Screen includes a customizable favorites tray at the bottom of all Home Screens. You can drag apps, shortcuts, folders, and other priority items in or out of the favorites tray for instant access from any Home Screen.



Removing Items From the Favorites Tray

Tap and hold an item in the favorites tray and drag it out of the tray.

Adding Items to the Favorites Tray

Tap and hold an item on the Home Screen and drag it into the favorites tray.

If the favorites tray is full, you need to remove an item in the tray.

Entering Text

 
You can enter text using the on-screen keyboard. Some apps open it automatically. In others, you open it by tapping where you want to type. You can press the **Back Key** to hide the on-screen keyboard.

Changing Input Method

1. When you use the on-screen keyboard to enter text, the icon  appears in the Status Bar.
2. Open the Notification Panel and tap **Choose input method**.
3. Select an input method.

Android Keyboard

The Android Keyboard provides a layout similar to a desktop computer keyboard. Turn the phone sideways and the keyboard will change from portrait to landscape. The landscape keyboard is not supported in all applications.

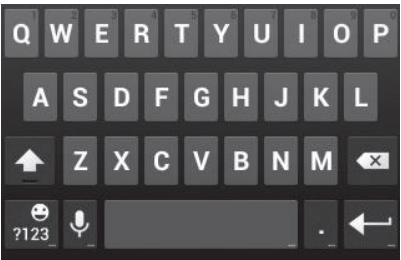

- Tap the alphabetic keys to enter letters. Tap and hold some specific keys to enter associated accented letters or numbers. For example, to enter è, tap and hold  and the available accented letters and number 3 appear. Then slide to choose è.

- Tap  to use uppercase. Double-tap  to lock uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Tap  to delete the text before the cursor.
- Tap  to select numbers and symbols. You can then tap  to find more. Also, often-used symbols are displayed above the keyboard.
- Tap and hold  and then swipe to choose the emoticons.
- Tap  to use Google's networked voice input.
- Tap and hold  to change the input language or access the Android keyboard settings.

TouchPal Keyboard

The TouchPal keyboard offers three layouts: **Full QWERTY**, **12-Key PhonePad**, and **CooTek T+**.

To switch the keyboard layout:

1. From the home screen, tap  > **System settings** > **Language & input** >  next to **TouchPal Keyboard** > **Keyboard layout**.
2. Check the box next to **Swipe layout**.
3. On the TouchPal keyboard screen, tap , uncheck the **Curve** check box, and tap **Close**.
4. Swipe left or right on the TouchPal keyboard to switch between the **Full QWERTY**, **12-Key PhonePad**, and **CooTek T+** keyboards.

Knowing the Basics

Full QWERTY



- Tap the alphabetic keys to enter letters.
- Tap to use uppercase or lowercase letters. This key also changes to indicate the current case you are using: for lowercase, for uppercase, and when locked in uppercase.
- Slide right on to enable word prediction. Slide left on to disable word prediction.
- Tap to change the input language.
- Tap to enter digits, symbols, emoticons and other pre-defined texts. Tap to access more. Tap / to lock or unlock text input. Tap to go back to entering letters.
- Tap to start a new line.
- Tap or tap and hold to delete text before the cursor.
- Tap to access the quick settings of TouchPal keyboard.

- Tap to change the TouchPal keyboard settings.
- Tap to open text editing options. You can select, cut, copy, paste, and delete text, or move the cursor.
- Tap to use voice input.
- Tap to hide the on-screen keyboard. Tap the **Type message** field again to show the keyboard.

12-Key PhonePad

Tap a key repeatedly until the desired letter or symbol appears. If word prediction is enabled (), just tap the keys once and choose the right word.



CooTek T+

Tap to enter the left letter on the key; Double-tap to enter the desired letter/symbol on the key. If word prediction is enabled (), just tap the keys and choose the right word.



To enable and use TouchPal Curve:

1. On the TouchPal keyboard screen, tap , check the box next to **Curve**, and tap **Close**.
2. Move your finger from letter to letter on the keyboard to trace a word without lifting the finger until you reach the end of the word.

NOTE: TouchPal Curve is only available in the **Full QWERTY** layout.

Knowing the Basics



TIPS:

- To enter a single letter, simply tap it.
- Lift your finger at the end of the word. A space is added automatically when you begin to trace the next word.

Touch Input Settings

Choose the touch input settings by pressing the **Home Key > Menu Key > System settings > Language & input**.

In the **KEYBOARD & INPUT METHODS** section, you can set the default input method and choose the settings for input methods.

Editing Text

- **Move the insertion point:** Tap where you want to type. The cursor blinks in the new position, and a tab appears below it. Drag the tab to move the cursor.

Knowing the Basics

- **Select text:** Tap and hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection.
- **Cut or copy:** Select the text you want to manipulate. Then tap the Cut  or Copy  button to cut or copy the text to the clipboard.
- **Replace text with the clipboard text:** Select the text you want to replace. Then tap  or **PASTE**.
- **Insert text from the clipboard:** Move the cursor to the insertion point and then tap and hold the tab below the cursor. Release your finger and tap **PASTE**.

Opening and Switching Apps

Opening an App

1. Press the **Home Key** > .
2. Slide left or right on the screen and tap an app to open it.

Switching Between Recently Opened Apps

1. Press and hold the **Menu Key**. A list of the names and thumbnails of apps you've recently used opens. If you've been using more apps recently than can fit on the screen, you can scroll the list up and down.
2. Tap a thumbnail to open that app. You can swipe a thumbnail sideways to remove it from the list.

Connecting to Networks and Devices

Connecting to Mobile Networks

Enabling or Disabling Data Access

1. Press the **Home Key** > **Menu Key** > **System settings** > **Mobile networks**.
2. Check **Data enabled** to enable data access over the mobile network. Clear the check box to disable data access.

Enable Always-on Data Access

1. Press the **Home Key** > **Menu Key** > **System settings** > **Mobile networks**.
2. Check **Always-on mobile data** to allow applications to update data automatically.

IMPORTANT: When you enable this option, more data traffic will be generated for automatic updates of applications data. Your phone will also consume more power.

Getting Data Services When Roaming

1. Press the **Home Key** > **Menu Key** > **System settings** > **Mobile networks**.
2. Check **Data roaming**.

IMPORTANT: Depending on your service provider and rate plan, data roaming may incur significant roaming charges.

Setting Access Point Names

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact your service provider to get the necessary information.

1. Press the **Home Key** > **Menu Key** > **System settings** > **Mobile networks** > **Access Point Names**.
2. Press the **Menu Key** > **New APN**.
3. Tap each item to enter the information you get from your service provider.
4. Tap **Save**.

TIP: To set the APN to default settings, press the **Menu Key** > **Reset to default**.

Connecting to Wi-Fi

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

Turning Wi-Fi On and Connecting to a Wi-Fi Network

1. Press the **Home Key** > **Menu Key** > **System settings** > **Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position to turn on Wi-Fi.
3. Tap a network name to connect to it.

4. If the network is secured, enter the password and tap **Connect**.

NOTE: Your phone automatically connects to previously used Wi-Fi networks when they are in range.

Getting Notified of Open Networks

1. Press the **Home Key > Menu Key > System settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Press the **Menu Key > Advanced**.
4. Check **Network notification**.

When Wi-Fi is on, you receive notifications in the Status Bar when your phone detects an open Wi-Fi network. Uncheck the option to turn off notifications.

Adding a Wi-Fi Network

You can add a Wi-Fi network if the network does not broadcast its name (SSID) or add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

1. Press the **Home Key > Menu Key > System settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Tap **Add network**.
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Tap **Save**.

Forgetting a Wi-Fi Network

You can make your phone forget the details of a Wi-Fi network that you added—for example, if you don't want the phone to connect to it automatically or if it is a network that you no longer use.

1. Press the **Home Key > Menu Key > System settings > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Tap the **Wi-Fi** network name and then tap **Forget**.

Adjusting Advanced Wi-Fi Settings

1. Press the **Home Key > Menu Key > System settings > Wi-Fi**.
2. Press the **Menu Key > Advanced** to adjust the following settings.
 - **Network notification:** Get notifications in the Status Bar when Wi-Fi is on and an open network is available.
 - **Keep Wi-Fi on during sleep:** Choose whether or not to keep Wi-Fi on in Sleep mode.
 - **Avoid no Internet connections:** Only use a Wi-Fi network when the Internet connection is good.
 - **MAC address:** Check the MAC address.
 - **IP address:** Check the phone's IP address.

Connecting to Bluetooth Devices

Bluetooth is a short-range wireless communication technology. Phones or other devices with *Bluetooth* capabilities can exchange information wirelessly within a distance of about 32 feet (10 meters). The *Bluetooth* devices must be paired before the communication is performed.

Turning Bluetooth On/Off

1. Press the **Home Key > Menu Key > System settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** or **OFF** position.

When *Bluetooth* is on, the  icon will appear in the Status Bar.

Changing the Device Name

1. Press the **Home Key > Menu Key > System settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position if *Bluetooth* is off.
3. Press the **Menu Key > Rename phone**.
4. Edit the name and tap **Rename**.

Pairing With Another Bluetooth Device

1. Press the **Home Key > Menu Key > System settings > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position if *Bluetooth* is off.

Your phone automatically scans for and displays the IDs of all available *Bluetooth* devices in range. Tap **SEARCH FOR DEVICES** if you want to scan again.
3. Tap the device you want to pair with.
4. If necessary, confirm that the *Bluetooth* passkeys are the same between the two devices and tap **Pair**. Alternately, enter a *Bluetooth* passkey and tap **Pair**.

Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.

NOTE: The *Bluetooth* passkey may be fixed for certain devices, such as headsets and hands-free car kits. You can try entering 0000 or 1234 (the most common passkeys) or refer to the documents for that device.

Sending Data via Bluetooth

1. Open the appropriate application and select the file or item you want to share.
2. Select the option for sharing via *Bluetooth*. The method may vary by application and data type.
3. Tap a *Bluetooth* device the phone has paired with or wait for it to search for new devices and tap one of them.

Receiving Data via Bluetooth

1. Turn *Bluetooth* on before trying to receive data via *Bluetooth*.

NOTE: If the phone has not been paired with the sending device, you may need to tap **Bluetooth > Z660G** in **Settings** to keep the phone detectable through *Bluetooth*.

2. Flick down the Status Bar and tap .
3. Tap **Accept** to start receiving the data.

Received files are stored automatically in a dedicated folder (*Bluetooth*, for instance). You can access them with the **File Manager** app. Received contacts (vCard files) are automatically imported to your contact list.

Connecting to Your Computer via USB

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in internal storage or on a removable microSD card.

Connecting Your Phone to a Computer via USB

1. Connect your phone to the PC with a USB cable.
2. Press the **Home Key > Menu Key > System settings > Connect to PC**.

3. Choose one of the following options:

- **Charge only:** Charge your phone via USB.
- **USB Mass Storage:** Use the phone as a USB modem.
- **Install driver:** Install the driver of the phone in computer.
- **Connect to PC software:** Sync the phone with a PC.
- **Media device (MTP):** Transfer media files on a Windows-based PC or with Android File Transfer on a Mac.
- **Camera (PTP):** Transfer photos using camera software and transfer any files to a computer that doesn't support MTP.

Connecting with Windows Media® Player

You can sync music with your phone and your computer installed with Windows Media Player.

1. Connect the phone with your computer via USB and choose **Media device (MTP)**.
2. Open Windows Media Player and synchronize music files.

Disconnecting Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

Removing the microSD Card From Your Phone

If you need to remove the microSD card while the phone is on, you should unmount it first.

1. Press the **Home Key > Menu Key > System settings > Storage**.
2. Scroll down and tap **Unmount SD card > OK**.
3. The  icon appears in the Status Bar and you can now safely remove the microSD card from the phone.

Erasing the microSD Card

1. Press the **Home Key > Menu Key > System settings > Storage**.
2. Scroll down the screen and tap **Erase SD card > Erase SD card > Erase everything**.

CAUTION! The formatting procedure erases all the data on the microSD card, after which the files CANNOT be retrieved.

Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your VPN. You can get this information from your network administrator.

Adding a VPN

1. Press the **Home Key > Menu Key > System settings > More > VPN**.
2. You may be prompted to set a lock screen (see *Personalizing – Protecting Your Phone With Screen Locks*). If not, tap **Add VPN profile** and fill in the information provided by your network administrator.
3. Tap **Save**.

The VPN is added to the list on the VPN screen.

Connecting to a VPN

1. Press the **Home Key > Menu Key > System settings > More > VPN**.
2. Tap the VPN that you want to connect to.
3. When prompted, enter any requested credentials and then tap **Connect**.

When you are connected, the VPN connected icon appears in the Status Bar.

Connecting to Networks and Devices

Modifying a VPN

1. Press the **Home Key > Menu Key > System settings > More > VPN**.
2. Tap and hold the VPN that you want to modify.
3. Tap **Edit profile** and edit the VPN settings.
4. Tap **Save**.

Deleting a VPN

1. Press the **Home Key > Menu Key > System settings > More > VPN**.
2. Tap and hold the VPN that you want to delete.
3. Tap **Delete profile**.

Phone Calls

You can place calls from the Phone app, the People app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually tap it to dial.

Placing and Ending Calls

Placing a Call by Dialing

1. Press the **Home Key > **.
2. In the dialer, enter the phone number with the on-screen keypad. Tap  to delete incorrect digits.
NOTE: As you enter digits, your phone searches for contacts that match. If you see the number you want to dial, tap it to place the call immediately without entering the rest of the number.
3. Tap  below the keypad to dial.

TIP: To make an international call, you may first need to dial an access number. Check with your service provider. Tap and hold the **0 key** to enter the plus (+) symbol. Next, enter the country code followed by the city/area code and then the phone number.

Ending a Call

During a call, tap  on the screen.

Answering or Rejecting Calls

When you receive a phone call, the Incoming Call screen opens, displaying the Caller ID or the information about the caller that you've entered in People. You can answer or reject the call, or reject it with a text message.

Answering a Call

When you receive a phone call, drag  to the center to answer the call.

NOTE: To silence the ringer before answering the call, press the **Volume Up/Down Keys**.

Rejecting a Call

When you receive a phone call, drag  to the center to reject the call.

You can also drag  to the center to reject the call and send a preset text message to the caller.

TIP: To edit the text response from within the Phone app, tap the **Menu Key > Settings > Quick responses**.

Working With the Call Log

The Call Log is a list of all the calls you've placed, received, or missed. It provides a convenient way to redial a number, return a call, or add a number to your Contacts.

To open the call log, press the **Home Key >  > Call log**.

Placing a Call From the Call Log

1. Open the **Call Log**.
2. Tap a number for more information about the call, or tap  beside it to call back.

NOTE: You can tap  on the bottom of the screen and select the type of call log you want to view.

Adding a Call Log Number as a Contact

1. Open the **Call Log**.
2. Tap a number to view more call information.
3. Tap  to save.
4. To add the number to an existing contact, tap **Add to existing** and select a contact in the list. To add a new contact, tap **New contact**.

Taking Other Actions on a Call Log Entry

1. Open the **Call Log**.
2. Tap a number to view more call information. While viewing the call details, you can:
 - Tap  to call a number.
 - Tap  > **Edit number before call** to edit the number in the dialer before calling it.
 - Tap  to send a message.
 - If the number belongs to a contact you already have, tap  to view contact details.

Deleting the Call Log

1. Open the **Call Log**.
2. Press the **Menu Key** > **Multi-Select**.
3. Tap the call log items you want to delete and then tap  > **Delete** to delete the call logs.

NOTE: You can also tap a number in the call log screen, and tap  > **Delete** at the bottom to delete the call log of the number.

Calling Your Contacts

Calling a Contact

1. Press the **Home Key** >  and then tap the **Contacts** tab .
2. Flick the screen up or down to view all your contacts with phone numbers.

TIP: You can search for a contact by tapping  on the screen.
3. Tap a contact for more information about the call, or tap  next to the contact's name to call.

Calling a Favorite Contact

1. Press the **Home Key** >  and then tap the **Contacts** tab .
2. Your favorite contacts and frequently called contacts or numbers are listed at the top of the screen. Tap a contact for more information about the call, or tap  next to the contact's name to call.

Checking Voicemail

If you have set the phone to divert certain calls to voicemail, callers can leave voicemail messages when they cannot reach you. Here's how to check the messages they left.

1. Press the **Home Key** > .
2. Tap and hold **"1"** in the dialer. If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

NOTE: To set your voicemail service, press the **Menu Key** > **Settings** > **Voicemail** in the dialer and tap the voicemail settings you want to change. For detailed information, please contact your service provider.

Using Options During a Call

During a call, you will see a number of on-screen options. Tap an option to select it.

- Tap  to turn the speaker on or off.
- Tap  to mute or unmute the microphone.
- Tap  to hold or unhold the current call.
- Tap  to make another call separately from the first call, which is put on hold.
- Tap  to switch to the dialer, for example to enter a code.
- Tap  to end the current call.

WARNING! Because of higher volume levels, do not place the phone near your ear during speakerphone use.

Managing Multi-party Calls

When the call waiting and three-way call features are available, you can switch between two calls or set up a conference call.

NOTE: The call waiting and three-way call features need network support and may result in additional charges. Please contact your service provider for more information.

Switching Between Current Calls

When you're on a call, your phone screen informs you that another call is coming in and displays the caller ID.

To respond to an incoming call while you're on a call:

Drag  over  to answer the call. This puts the first caller on hold and answers the second call.

To switch between two calls:

Tap .

Setting Up a Conference Call

With this feature, you can talk to two people at the same time.

1. On the dialer screen, enter a number and tap .
2. Once you have established the connection, tap  and dial the second number. This puts the first caller on hold and dials the second number.
3. When you're connected to the second party, tap .

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

To end the conference call, tap .

Adjusting Your Call Settings

Using Fixed Dialing Numbers

Fixed Dialing Numbers (FDN) allows you to restrict outgoing calls to a limited set of phone numbers.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Fixed Dialing Numbers**.
3. The following options are available:
 - **Enable FDN:** Input the PIN2 code to enable the FDN feature.
 - **Change PIN2:** Change the PIN2 code for FDN access.
 - **FDN list:** Manage the FDN list.

NOTE: The PIN2 code is provided by your carrier. Entering an incorrect PIN2 code more times than allowed can lock your SIM card. Contact your service provider for assistance.

Editing Quick Response to Rejected Callers

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Quick responses**.
3. Tap the text message to edit it.

Setting Up Voicemail

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings**.
3. Tap **Voicemail** > **Service** to select your voicemail service provider. Your carrier is the default.
4. Tap **Setup** > **Voicemail number** to edit the voicemail number if necessary.

Setting Speed Dials

You can touch and hold the **2-9 Keys** from the dialer to call the corresponding speed dial number.

The number **1 Key** is reserved to speed dial your voicemail.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Speed dial**.
3. Tap a speed dial key.
4. Enter a phone number or select one from the contacts list.
5. Tap **OK**.

Setting Up TTY Mode

Select a TTY mode for your phone to work with a teletypewriter or turn TTY off.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **TTY mode**.
3. Tap **TTY Off** to turn the feature off, or tap **TTY Full**, **TTY HCO**, or **TTY VCO** to select a mode for your phone to work with the teletypewriter. Consult your teletypewriter manufacturer's manual if necessary.

Setting DTMF Tones

You can set the length of Dual-tone multi-frequency (DTMF) signal tones.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **DTMF tones**.
3. Tap **Normal** or **Long**.

Barring Certain Calls

Call Barring allows you to forbid certain types of calls from your phone.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Call Barring Settings**.
3. Set the restriction of specific types of calls from your phone.

Forwarding Incoming Calls

Call forwarding feature allows you to forward your incoming calls to another phone number.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Call forwarding**.
3. Tap an available option (**Always forward**, **Forward when busy**, **Forward when unanswered**, or **Forward when unreachable**) to enable it.

Other Options

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Additional settings**.
3. Tap **Caller ID** to choose whether your number is displayed when someone receives your outgoing call. Or check **Call waiting** to get notified of incoming calls during a call.

NOTE: Please contact your service provider to check whether the caller ID and call waiting features are available.

Internet Call Settings

Adding an Internet Calling Account

To add an Internet calling account:

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Accounts**.
3. Tap **Add account**.
4. Follow the instructions from your Internet calling service provider to configure the settings for your account.
5. Press the **Back Key** to save.

Phone Calls

To configure which calls use Internet calling:

You can configure your phone to place all calls using Internet calling (when you're connected to a Wi-Fi network), just calls to Internet calling addresses, or to ask each time you place a call.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Use Internet calling**.
3. Tap the Internet calling option you want.

Configuring Your Phone to Receive Internet Calls

By default, your phone is configured to make Internet calls, but not to ensure that you will receive them. But you can configure your phone to listen for Internet calls made to an Internet calling account you added to your phone.

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Settings** > **Accounts**.
3. Check **Receive incoming calls**. Checking this setting will reduce your battery life between charges.

People

You can add contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, press the **Home Key** > . From there, you can tap the tabs to quickly switch to the contact groups  or favorite contacts .

Checking Contact Details

1. Press the **Home Key** >  to access your contact list.
2. Scroll through the list to view all your contacts.
3. Tap a contact to view its details.

TIP: If you have a lot of contacts stored, you'll see a slider when you tap the right side of the screen. To go directly to a letter, tap and hold the slider and drag it to a letter.

Adding a New Contact

1. Press the **Home Key** > .
2. Tap  to add a new contact.
3. Tap **Phone contact** to choose where to save the contact. If a sync account is selected, the contacts will be synced automatically with your account online.
4. Enter the contact name, phone numbers, email addresses, and other information.
5. Tap **Done** to save the contact.

Setting Up Your Own Profile

You can create your own name card in your phone.

1. Press the **Home Key** > .
2. Tap **Set up my profile** or your name, whichever is at the top of the contact list.
3. Edit your profile information and tap **Done**.

Importing, Exporting, and Sharing Contacts

You can import/export contacts to/from your SIM or microSD card. This is especially useful when you need to transfer contacts between different devices. You can also quickly share your contacts using *Bluetooth*, Email, Messages, etc.

Importing Contacts From the SIM Card

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Import/export** > **Import from SIM Card**.
3. Select an account in which to save the contacts.
4. Tap to select the contacts you need and then tap **Export**.

Importing Contacts From the microSD Card

1. Press **Home Key** > .
2. Press the **Menu Key** > **Import/export** > **Import from SD card**.
3. Select an account in which to save the contacts.
4. The phone will import all vCard file(s) automatically.

Exporting Contacts to the SIM Card

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Import/export** > **Export to SIM Card**.
3. Tap to select the contacts you need and then tap **Export**.

Exporting Contacts to the microSD Card

1. Press the **Home Key** > .
2. Press the **Menu Key** > **Import/export** > **Export to SD card**.
3. The phone will prompt you with the name of the vCard file. Tap **OK** to create the file on the microSD card.

Sharing Contacts

1. Press the **Home Key** > .
2. Press **Menu Key** > **Multi-Select**.
3. Tap the contacts you want to share and then tap .

4. Choose to share the contacts via **Bluetooth**, **Email**, **Gmail** or **Messaging**.

Working With Favorite Contacts

In the Favorite Contacts tab, you can find your favorite contacts and frequently used contacts.

Adding a Contact to Favorites

You can add the contacts used frequently to Favorites so you can find them quickly.

1. Press the **Home Key** > .
2. Tap a contact and then tap  next to the contact name.

Removing a Contact From Favorites

1. Press the **Home Key** > .
2. Tap a favorite contact and then tap  next to the contact name.

Working With Groups

Viewing Your Contact Groups

1. Press the **Home Key** >  and tap the **Contacts** tab .
2. Tap  in the lower left corner.
3. Scroll through the list to view the preset groups and any groups you have created.
4. Tap a group to view its members.

NOTE: To send messages to the group members, you can tap  next to the group and select message recipients from the listed group members.

Setting Up a New Group

1. Press the **Home Key** > .
2. Tap  in the lower left corner.
3. Tap  to create a new group.
4. Tap the account field on the top of the screen to choose an account for the group.
5. Enter the group name and tap **Done**.
6. Tap  and select the contacts you wish to be in the group.
7. Tap .

Deleting a Group

1. Press the **Home Key** > .
2. Tap .
3. Tap a group and then press the **Menu Key** > **Delete group**.
4. Tap **OK** to disband the group. The contacts in the group will not be deleted.

Editing a Group

1. Press the **Home Key** > .
2. Tap .
3. Tap a group and then press the **Menu Key**.

4. Tap **Rename group** to edit the group name. Or tap **Multi-Select** to select the members you don't need and remove them.

Searching for a Contact

1. Press the **Home Key** > .
2. Tap  at the bottom of the screen.
3. Input the contact name you want to search for. The contacts matched will be listed.

Editing Contacts

Editing Contact Details

1. Press the **Home Key** > .
2. Tap a contact to view the details.
3. Tap .
4. Edit the contact and tap **Done**.

Deleting a Contact

1. Press the **Home Key** > .
2. Tap a contact you want to delete and then press the **Menu Key** > **Delete**.
3. Tap **OK** to confirm.

Deleting Several Contacts

1. Press the **Menu Key** > **Multi-Select** in the Contacts screen.

People

2. Tap to select the contacts you want to remove and then tap .
3. Tap **OK** to confirm.

Joining Contacts

Your phone can synchronize with multiple accounts containing your contact information (such as Google and Microsoft Exchange ActiveSync®). When you synchronize your phone with those accounts, there might be duplicate entries for the same contact.

You can merge all the separate information of a contact into one entry in the Contacts list.

1. Press the **Home Key** > .
2. Tap a contact entry to display the contact's details. This is the contact you will see in the Contacts list after merging.
3. Press the **Menu Key** > **Join Contact**. The phone will list the suggested contacts to join.
4. Tap the contact whose information you want to join with the first entry.

The information from the second contact is added to the first contact, and the second contact is no longer displayed in the Contacts list.

You can repeat these steps to join another contact to the main contact.

Separating Contact Information

If contact information from different sources was joined in error, you can separate the information back into individual contacts on your phone.

1. Press the **Home Key** > .
2. Tap a contact entry you have merged and want to separate.
3. Press the **Menu Key** > **Separate Contact**.
4. Tap **OK** to confirm.

The contact information is separated into individual contacts in the list of contacts.

Accounts

Adding or Removing Accounts

You can add multiple Google accounts and Microsoft Exchange ActiveSync accounts. You may also add other kinds of accounts, depending on the apps installed on your phone.

Adding an Account

1. Press the **Home Key** > **Menu Key** > **System settings** and move to the **ACCOUNTS** section.
2. Tap **Add account**.
3. Tap the type of account you want to add.
4. Follow the on-screen steps to enter the information about the account. Most accounts require a username and password, but the details may vary. You may also need to obtain some information from IT support or your system administrator.

When the account is successfully added, it is displayed in the **ACCOUNTS** list.

Removing an Account

Removing an account will delete it and all information associated with it from your phone, such as emails and contacts.

1. Press the **Home Key** > **Menu Key** > **System settings** to move to the **ACCOUNTS** section.
2. Tap the account.
3. Press the **Menu Key** > **Remove account** > **Remove account**.

Configuring Account Sync

Configuring Auto Sync Settings

1. Open the **Accounts** screen. Your accounts and sync status are displayed. The  icon turns green if automatic sync is enabled for some or all of the account's data, and gray if automatic sync is disabled.
2. Tap the account and check or uncheck the box to turn on or off automatic sync.
 - When automatic sync is turned on, changes you make to information on your phone or on the web are automatically synced with each other.
 - When auto-sync is turned off, you need to sync manually to collect emails, updates, or other recent information.

Sync Manually

1. Open the **Accounts** screen.
2. Tap the account whose data you want to sync.
3. Press the **Menu Key** > **Sync now**.

Change an Account's Sync Settings

1. Open the **Accounts** settings screen.
2. Tap the account whose sync settings you want to change. The Sync settings screen appears, showing a list of information the account can sync.
3. Check or uncheck items as you need. Checked types of information on the phone and the web will be kept in sync when auto-sync is turned on.

Press the **Home Key** >  and select **Email**. Use it to read and send emails from services other than Gmail.

Setting Up the First Email Account

1. When you open **Email** for the first time, enter your email address and password.
2. Tap **Next** to let the phone retrieve the network parameters automatically.

NOTE: You can also enter these details manually by tapping **Manual setup** or when automatic setup fails.

3. Follow the on-screen instructions to finish the setup. Your phone will show the inbox of the email account and start to download email messages.

Checking Your Emails

Your phone can automatically check for new emails at the interval you set when setting up the account.

You can also check new emails manually by tapping  in any of the email account's boxes. Tap **Load more messages** at the bottom of the email list to download earlier messages.

Responding to an Email

You can reply to or forward a message that you receive. You can also delete messages and manage them in other ways.

Replying to or Forwarding an Email

1. Open the email you want to reply to or forward from Inbox.
2. Choose one of the following:
 - Reply to the sender, tap .
 - Reply to the sender and all recipients of the original message, tap .
 - Forward the message, tap .
3. Edit your message and tap .

Marking an Email as Unread

You can return a read email to the unread state—for example, to remind yourself to read it again later. You can also mark a batch of emails as unread.

- While reading a message, press the **Menu Key** > **Mark as unread**.
- While in a message list (for instance, the inbox), tap the checkboxes before the messages and then tap .

Deleting an Email

You can delete an email from its folder. You can also delete a batch of emails.

- While reading a message, tap  > **OK**.
- While in a message list (for instance, the inbox), tap the checkboxes in front of the messages and then tap  > **OK**.

Writing and Sending an Email

1. Open your email inbox and tap .
- NOTE:** If you have more than one email account added on the phone, tap the sender line to select the account you want to use for sending the message.
2. Enter a contact name or email address in the **To** field. Separate each recipient with a comma. You can also tap  to select recipients from your contacts.
3. Enter the email subject and compose the email text.
4. Press the **Menu Key** > **Attach file** to add audio files, images, videos and other types of files as attachments.
5. Tap  at the top right of the screen to send the message.

Adding a Signature to Your Emails

You can set a few lines of plain text as a signature for every outgoing email message from an account, such as your name and contact information.

1. Open the **Email** app.
2. Press the **Menu Key** > **Settings** and select the account you want to add a signature to.
3. Tap **Signature** and enter the text.
4. Tap **OK**.

Adding and Editing Email Accounts

Adding an Email Account

After setting up your first email account (see *Email – Set Up the First Email Account*), you can add more email accounts and manage them separately.

1. Open **Email** to get the Inbox screen.
2. Press the **Menu Key** > **Settings** and tap **ADD ACCOUNT** at the top right of the screen.
3. Set up the account as you would with the first one.

Editing an Email Account

You can change a number of settings for an account, including how often you check for email, how you're notified of new emails, and details about the servers the account uses to send and receive emails.

1. Open **Email** to get the Inbox screen.
2. Press the **Menu Key** > **Settings** and tap the account whose settings you want to change.
3. Make the changes you want and press the **Back Key** when you're finished.

Removing an Email Account

1. Open **Email** to get the Inbox screen.
2. Press the **Menu Key** > **Settings** and tap the account you want to remove.
3. Tap **Remove account** > **OK**.

Email

Changing General Email Settings

General settings apply to all email accounts you add.

1. Open **Email** to get the Inbox screen.
2. Press the **Menu Key** > **Settings** > **General**.
3. Make the changes you want and press the **Back Key** when you're finished.

Gmail

After you sign in to your Google account on the phone, you can send and retrieve Gmail messages with the **Gmail** app.

NOTE: This feature may not be available in certain regions or with certain service providers.

Opening Your Gmail Inbox

Press the **Home Key** > . The Inbox screen appears.

If you haven't signed in, you will be prompted to do so or create a new account.

Tap  at the bottom right of the screen to refresh your Inbox and download new messages.

Switching Accounts

Gmail displays conversations, messages, and settings from one Google account at a time. If you have signed in to more than one Google account on your phone, you can switch accounts and view information in each account.

1. From your Inbox, tap the current account at the top of the screen.
2. From the drop-down menu, tap the account you want to see. The account's inbox will open.

Writing and Sending a Message

1. Open your Gmail Inbox and switch to the account you want to use for sending the message.
2. Tap .

3. Enter a contact name or email address in the **To field**. Separate each recipient with a comma.
4. Enter the email subject and compose the email text.
5. To attach an image, press the **Menu Key** > **Attach picture** and select a file from the image gallery.
6. Tap  at the top right of the screen to send the message.

Adding a Signature to Your Gmail Messages

You can set a few lines of plain text as a signature for every outgoing Gmail message. The signature you set on the phone is independent of the signature you use for Gmail on the web.

1. Open the **Gmail** app.
2. Press the **Menu Key** > **Settings** and select the account you want to add a signature to.
3. Tap **Signature** and enter the text.
4. Tap **OK**.

Replying to or Forwarding a Message

1. Open the Gmail message you want to reply to or forward to another person.
2. Choose one of the following:
 - Reply to the sender, tap  in the message header.

- Reply to the sender and all recipients of the original message, tap in the message header  > **Reply all**.
 - Forward the message, tap in the message header  > **Forward**.
3. Edit your message and tap .

Working With Received Attachments

When a message has an attachment, Gmail displays information about that attachment at the top of the message.

Depending on the attachment type, the applications installed on your phone, and your settings, you may preview, view, play, or save the attachment or check information about the attachment.

TIP: For documents with multiple pages, tapping the **Preview** option will only download the pages you view, while tapping **View**, **Play**, or **Save** will download the entire file and cost more time and data.

Searching for Messages

You can search for messages using words that appear in addresses, subjects, labels, or contents.

NOTE: If you search while the phone doesn't have an active Internet connection, only messages synchronized onto your phone can be searched.

1. Open the **Gmail** app and tap .

2. Enter the words to search for and tap the search key on the screen keyboard.

As you type, suggestions may appear below the search field. You can tap a suggestion to search for it right away, or tap the arrow next to it to add its text to the search field.

 
3. In the search results, tap the message you need and work with it just as you would with any Gmail message.

Working With Labels

Message labels include both labels you create and default labels such as **Sent**, **Starred**, and **Outbox**. You can organize your emails by labeling them or adding stars to them. Labels also help you sort your messages, just like folders.

Adding or Changing a Label

1. Open the **Gmail** app and tap in the message list the checkboxes next to the messages you want to label.

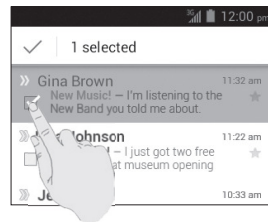

2. Tap the label icon  at the bottom of the screen.

3. Check or uncheck labels in the new screen and tap **OK**.

Adding Stars to Messages

1. Open the **Gmail** app and tap in the message list the checkboxes next to the messages you want to star.
2. At the bottom of the screen, tap  > **Add star**.

Viewing Messages by Label

1. Open the **Gmail** app and tap the label icon  at the bottom of the message list without checking any message.
2. Tap the label to view messages with that label.

TIP: You can also tap the name of your account at the top of the screen. Then tap one of the labels listed in the **RECENT** section, below account names.

Changing Gmail Settings

Press the **Menu Key** > **Settings** in any Gmail screen to change **General settings**, which apply to all Gmail accounts, or other settings that only apply to specific accounts.

Messaging

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS).

Opening the Messaging Screen

Press the **Home Key** > .

The **Messaging** screen opens, where you can create a new message, search for messages, or open an ongoing message thread.

- Tap  to write a new text or multimedia message.
- Tap  to search for a message using keywords.
- Tap an existing message thread to open the conversation you've had with a certain number.

Sending a Text Message

1. On the **Messaging** screen, tap  at the bottom.
2. Add recipients in one of the following ways:
 - Tap the **To** field and manually enter the recipient's number or the contact name. If the phone presents a few suggestions, tap the one you want to add.
 - Select recipients from your contacts by tapping .
3. Tap the **Type message** field and enter the content of your text message.
4. Tap **Send**.

Sending a Multimedia Message

1. On the **Messaging** screen, tap  at the bottom.
2. Enter the recipient and the text of the message, as you do when sending a text message. You can also include email addresses as recipients.
3. Press the **Menu Key** > **Add subject** to add a message subject.
4. Tap  to attach a file to the message.
5. Tap **Send**.

NOTE: When you enter an email address as a recipient or attach a file, the message is automatically converted to a multimedia message. When you delete this information, the message is converted to a text message.

Replying to a Message

Messages you receive are appended to existing threads of the same number. If the new message comes from a new number, a new thread is created.

1. On the **Messaging** screen, tap the thread that has the message you want to reply to.
2. Type your reply in the text box at the bottom. You can tap  if you want to reply with an MMS.
3. Tap **Send**.

Forwarding a Message

1. On the **Messaging** screen, tap the thread that has the message you want to forward.
2. Tap and hold the message.
3. Tap **Forward** in the menu that opens.
4. Enter a recipient for the message and edit the content if you want.
5. Tap **Send**.

Copying a Message

You can copy text messages in the phone storage to the SIM card, or vice versa.

- To copy a text message from the phone to the SIM card, tap the message and select **Copy to SIM card**.
- To copy a text message from the SIM card to the phone, press the **Menu Key** in the Messaging screen and select **Settings** > **Manage SIM card messages**. Then tap and hold a message and select **Copy to phone memory**.

Viewing Details About a Message

1. Tap and hold a message in a thread.
2. Tap **View message details** to see information about the message such as message type, sender, recipient, or date.

Messaging

Deleting Messages or Threads

Deleting Messages in a Thread

1. On the **Messaging** screen, tap a thread.
2. Press the **Menu Key** > **Multi-Select**.
3. Tap the messages you want to delete. The ones you tap will have a check in the box in front of them.
4. Tap  at the bottom.
5. Tap **Delete**.

Delete Message Threads

1. On the **Messaging** screen, tap and hold one thread you want to delete.
2. If there are more threads you want to delete, tap them one by one.
3. Tap  at the bottom.
4. Tap **OK**.

Changing Message Settings

Press the **Menu Key** > **Settings** in the **Messaging** screen to change Message settings.

Calendar on the phone works with the web-based Google Calendar service for creating and managing events, meetings, and appointments. It also works with the Microsoft Exchange ActiveSync calendar once you sign into your Exchange account on the phone.

To open Calendar, press the **Home Key** > .

Viewing Your Calendars and Events

Selecting Visible Calendars

- 1. Open the **Calendar** app.
- 2. Press the **Menu Key** > **Calendars to display**.
- 3. In the new screen, tap the calendars to check the calendars you want to see or uncheck the calendars you'd like to hide.

Events from hidden calendars are not shown in the Calendar app.

Changing Calendar Views

You can view your calendars in different forms. The app offers four views: Month, Week, Day, and Agenda.

To change calendar views, tap the time period shown at the bottom and select the view you prefer.

You can also change to Day view from Month view by tapping any day in the grid.



TIPS:

- In Month view, swipe vertically to see earlier months and later months.
- In Week or Day view, swipe horizontally to see earlier weeks/days and later weeks/days.
- When you are viewing earlier or later days, weeks, or months, tap  at the top to quickly switch to today.

Viewing Event Details

In Agenda, Day, or Week view, tap an event to view its details.

In Month view, tap a day to switch to Day view. Then tap an event to view its details.

Creating an Event

- 1. In any Calendar view, tap  at the upper right corner to open an event details screen for a new event.
- 2. Add details about the event.
- 3. Tap **SAVE** at the top of the screen to save the new event.

You can also tap a spot in Day or Week view twice to add an event to that time spot.

Enter a name, location, time span, and other additional details about the event.

NOTE: If you have more than one calendar, you can choose the calendar to which to add the event by tapping the current calendar above the **Event name** box.

Editing or Deleting an Event

- 1. Find the event you want to edit or delete.
- 2. Open its details screen (see *Viewing Your Calendars and Events – Viewing Event Details*).
- 3. Choose one of the following options:
 - To edit the event, tap . Tap **SAVE** to save your changes.
 - To delete the event, tap  at the bottom of the screen and then tap **OK**.

Changing Calendar Settings

To change Calendar settings, open a Calendar view (Day, Week, Month, or Agenda) and then press the **Menu Key** > **Settings**.

You can change General settings, which apply to all accounts, or other settings that only apply to specific accounts.

Google Talk is Google's instant messaging service. You can use it to communicate in real time with other people who also use Google Talk on a phone, on the web, or with a desktop application.

Signing In to See Your Friends

You must sign in to your Google account before you can use Google Talk.

Press the **Home Key** >  and select **Talk**. The first time you launch **Talk**, tap the account you want to sign in with. Your friends list is then displayed.

NOTE: You remain signed in to Google Talk after launching the **Talk** app even if you switch to other apps, until you explicitly sign out. To sign out, go back to your friends list and press the **Menu Key** > **Sign out**.

Adding a Friend

1. In the friends list, tap  at the top right of the screen.
2. Enter your friend's address and tap **DONE**.

Your friend's address in Google Talk is a Gmail or other email address that is configured to connect to Google Talk.

NOTE: If other people try to add you as a friend, you will receive a notification in the status bar and the invitation appears in your friends list. You can tap the invitation to accept, decline, or block.

Changing Your Online Status

1. Tap your own entry at the top of your friends list.
2. In the screen that opens, tap your current status to change it (or to sign out of **Talk**).
3. Enter a status message, or if you already have one, edit it. In addition to the standard status settings, you can also tap **Change to a recently-used status** to select a message that you've entered previously.
4. Press the **Back Key** to return to your friends list.

Chatting With Friends

1. Tap a friend in your friends list. The chat screen for that friend opens.
2. Type in a message and tap . You can also tap  to initiate a voice chat if the friend is online.

Switching Between Active Chats

If you have more than one chat going, you can switch between these chats in one of the following ways:

- Press the **Back Key** to return from one chat to the friends list. Then tap the other friend you want to chat with.
- While you are in one chat screen with a friend, swipe left or right to switch to the chat screen with the other friend.

Using Group Chat

When you're chatting, you can invite additional friends to join a group chat.

1. On a chat screen, press the **Menu Key** > **Add to chat**.
2. Tap the name of the friend to invite.

The friend you invited and the current participants receive an invitation to a group chat. Each one who accepts the invitation joins the group chat. In a group chat, everyone can see everyone else's messages. Group chats appear at the top of your friends list with a group chat icon.

Ending the Chat

While on a chat screen, press the **Menu Key** > **End chat**.

You can also press the **Menu Key** > **End all chats** while in the friends list to end all active chats.

Changing Google Talk Settings

On any chat screen or in the friends list, press the **Menu Key** > **Settings** to change Google Talk settings for your account.

Google+

Google+ is a social networking service offered by Google. The Google+ application on your phone enables you to manage your data, chat with online contacts, organize them in different circles, and share your selected information.

Press the **Home Key** >  and select **Google+**. The first time you open the Google+ app, select the instant upload and contact sync options.

Organizing Your Contacts

1. Open the **Google+** app.
2. Tap  > **Find people**.
3. Tap . Enter the person you want to search for or select a suggested person, and tap **Add**.
4. Check the circles you want the person to be added to, or tap **Create a new circle**.

Getting Updates

1. Open the **Google+** app.
2. Tap  > **Home**.
3. Swipe up or down to see different information shared with you by other users. Tap  to choose what groups of information are shown.
 - **Nearby** shows posts shared with you by users near your current location.
 - **All circles, Acquaintances, Family, Following**, and **Friends** show updates from people you've added to your circles.
 - **What's hot** shows popular posts on Google+.

Chatting With Contacts

You can chat with your Google+ contacts through instant messaging, similar to sending a text with the Messaging app.

1. Tap  > **More** > **Messenger** in the **Google+** app.
2. Tap  to create a new message.
3. If you tapped  at the top, tap  to add recipients. They can be contacts or circles.
4. Enter the message.
5. Tap  to send the message.

TIP: Tap  > **More** > **Hangouts** to hold a video chat with your friends.

Checking Photos

You can see your own photo albums and those shared by other users.

Tap  > **Photos** in the **Google+** app to see all available albums.

Checking and Managing Your Profile

1. Tap  > **Profile** in the **Google+** app.
 2. Swipe up or down to see your posts and personal info.
- Tap  and you can change your profile photo.

Browser

Use Browser to view web pages and search for information.

Opening the Browser

Press the **Home Key** > . The last web page you were viewing is displayed. If you have not used Browser recently, your home page opens.

Browser also opens when you tap a web link—for example, in an email or a text message.

Opening a Web Page or Searching the Web

1. Open the **Browser** app.
2. Tap the address box at the top of the web page. If the address box isn't visible, swipe down a little to show it.
3. Enter the address (URL) of a web page. Or, enter terms you want to search for. You can also tap  to search by voice.
4. Tap a URL or search suggestion or tap **Go** on the keyboard to open the web page or search results.

TIP: Tap the **X** if you want to stop opening the page.

Setting the Homepage

Your home page opens when you open a new browser tab, when you start Browser after restarting your phone, or after not using the app for a while.

1. Open the page you want to set as your home page.

2. Press the **Menu Key** > **Settings** > **General** > **Set homepage**.
3. Tap **Current page** or one of the following options:
 - **Blank page:** Open browser tab without opening a web page by default. This can make new Browser tabs open more quickly.
 - **Default page:** Set the factory default URL as the homepage.
 - **Most visited sites:** Every new browser tab displays a list of your frequently visited sites for you to choose from.
 - **Site Navigation:** Set the Navigator site as the home page.
 - **Other:** Type a URL as the homepage.

Get Information About the Current Page

Press the **Menu Key** > **Page info**.

Working With an Opened Page

While viewing most web pages, you can do the following operations:

- **Scroll:** Swipe the screen in any direction.
- **Zoom out:** Tap the screen with two fingers or pinch them together.
- **Zoom in:** Tap the screen with two fingers or spread them apart.

- **Go back:** Tap  at the bottom to return to the page you've viewed previously in the same window.
- **Go forward:** Tap  at the bottom.
- **Refresh the page:** Tap  beside the address bar.
- **Find text on the page:** Press the **Menu Key** > **Find on page** and type the terms you want to search for.
- **Send the page URL to friends:** Press the **Menu Key** > **Share page** and select how you want to send the URL.
- **Follow a link:** Tap a link on the web page to open it.
- **Save the page for offline reading:** Press the **Menu Key** > **Save for offline reading**. You can press the **Menu Key** > **Bookmarks** > **SAVED PAGES** to read them.

TIPS:

- Some websites may redirect you to the mobile version of their web pages, which mostly do not support scrolling or zooming. If you want to view the desktop version, press the **Menu Key** and check **Request desktop site**.
- Besides links, Browser also recognizes some phone numbers, addresses, and similar information for you to act on. Try tapping them and see what happens.

Using Multiple Browser Tabs

You can open several web pages at the same time (one page in each tab) and switch between them freely.

Opening a new browser tab

1. Tap the tabs icon  to the right of the address box.
2. Tap + at the top right of the screen. A new browser window opens and the homepage is loaded.

Switching between tabs

1. Tap the tabs icon  to the right of the address box.
2. Swipe vertically to scroll through the list of opened tabs.
3. Tap the thumbnail of the tab you want to open.

TIP: Swipe a thumbnail horizontally or tap its **X** to close the tab.

Using Incognito Tabs for Privacy Browsing

Pages you view in incognito tabs won't appear in your browsing history or search history. No trace will be left on your phone once you close the tab.

1. Tap the tabs icon  to the right of the address box.
2. Press the **Menu Key** > **New incognito tab**.

Downloading Files

Tap and hold an image or a link to a file or to another webpage. In the menu that opens, tap **Save image** or **Save link**.

The downloaded files are saved to your phone or the memory card. You can view or open them in the **Downloads** app ( > **Downloads**).

Using Bookmarks

Save web URLs as bookmarks to open them easily in the future.

To open a bookmark, press the **Menu Key** > **Bookmarks** in a browser tab and then tap the bookmark.

Bookmarking a Web Page

1. Open the web page.
2. Press the **Menu Key** > **Save to bookmarks**.
3. Edit the bookmark label and address if necessary, or choose a different account. Tap the name beside **Add to** to change the place where the bookmark will be stored.
4. Tap **OK**.

Editing a Bookmark

1. Press the **Menu Key** > **Bookmarks**.
2. Tap and hold the bookmark to edit.
3. Tap **Edit bookmark**.
4. Edit the label, address, account, or location of the bookmark in the dialog that opens.
5. Tap **OK**.

NOTE: Preinstalled bookmarks may not be edited.

Deleting a Bookmark

1. Press the **Menu Key** > **Bookmarks**.
2. Tap and hold the bookmark to delete.
3. Tap **Delete bookmark**.
4. Tap **OK**.

NOTE: Preinstalled bookmarks may not be deleted.

Viewing Your Browsing History

1. Open the Browser app and press the **Menu Key** > **Bookmarks**.
2. Tap the **HISTORY** tab.
3. Tap a time span to view the web pages you browsed during that time. You can tap an item to reopen the web page.

Changing Browser Settings

You can configure a number of Browser settings to customize the way you browse the web, including several that you can use to control your privacy.

To open the Browser settings screen, press the **Menu Key** > **Settings**.

Maps, Navigation, Local, and Latitude

Activating Location Services

To use Navigation, Local, and Latitude, and to find your location on Google Maps, you must have location services turned on on your phone.

1. Press the **Home Key** > **Menu Key** > **System settings** > **Location services**.

2. Select the location options you want to use.

Check **Google's location service** to use Wi-Fi and mobile networks to determine your approximate location; check **GPS satellites** to use GPS satellites to determine your location; check **Location & Google search** to use your location to improve search results and other services.

Getting Your Location

1. Press the **Home Key** >  and select **Maps**.
2. Tap  at the top right.

The map centers on a blue blinking dot that indicates your location.

Searching for a Location

1. Press the **Home Key** >  and select **Maps**.
2. Tap .
3. Enter the place you're looking for in the search box at the top. You can enter an address, a city, or a type of business or establishment, for example, "museums in Shanghai." As you enter information, suggestions from your previous searches and from

popular searches appear in a list below the search box. You can tap a suggestion to search for it.

TIP: You can also tap  beside the search box to use voice search.

4. Tap the search icon on the keyboard. Markers with letter labels indicating search results appear on the map.
5. Tap a marker to open a balloon that contains a label with summary information about the location.
6. Tap the balloon to open a screen with more information, as well as options for obtaining directions and more.

Getting Directions to Your Destination

Maps can provide directions for travel by foot, public transportation, bicycle, or car.

1. Press the **Home Key** >  and select **Maps**.
2. Tap  at the bottom.
3. Enter a start and end point and select the mode of transportation (car, public transit, bicycle, or walking). If you have enabled My Location, this will appear in the start point field by default.
4. Tap **GET DIRECTIONS**. The directions to your destination are marked on the map. Tap the left or right arrow to see the directions step by step. You can also tap **DIRECTIONS LIST** to see your route displayed in a list.

Maps, Navigation, Local, and Latitude

NOTE: Press the **Home Key** >  and select **Navigation** to use Google Maps Navigation and get turn-by-turn voice directions.

Searching for Local Places

Google Places helps you find all kinds of businesses and establishments around you. You can rate these places and get recommendations.

1. Press the **Home Key** >  and select **Local**. Or, from the **Maps** app, tap  at the top of the screen and select **Local**.
2. Wait while you are being located. Your location, when found, is shown at the top.
3. Select a place category and the information for that type of place near you will be displayed.
You can also use the  button at the top to find the place you need.

NOTE: Press the **Menu Key** > **Add a search** to add new place categories.

4. Tap a result you are interested in and check out the details and reviews about that place. You can also see the place on Maps, find out how to get there, give that place a call, add your rating and review, and more.

Sharing Location

Google Latitude lets you and your friends view each other's locations on maps and share status messages.

1. Press the **Home Key** >  and select **Maps**.
2. Tap  > **Latitude**. You will be prompted to enable location reporting on your device. Tap the prompt and check **Report from this device**.
3. Press the **Back Key**.

After you join in, you can always tap  at the top in **Maps** and select **Latitude** to see your status as well as that of your selected friends.

In **Latitude**, you can do the following:

- Tap  to refresh friends' status.
- Tap **MAP VIEW** to see friends on **Maps**. You can tap the left/right arrow to switch between each friends and yourself.
- Tap  to add new friends to Latitude from contacts, via email addresses, or from suggested friends.
- Press the **Menu Key** to show or hide "stale" friends who haven't updated their location with you for a while.
- Press the **Menu Key** > **Location settings** to change Latitude settings or sign out of Latitude.

Google Search, Voice Search, and Voice Actions

You can search for information on the web or on your phone using Google Search. You can also search the web or perform certain tasks by speaking.

Searching With Text

- 1. Press the **Home Key** >  and select **Google**.
- 2. Enter the terms you want to search for and tap  on the keyboard, or tap a search suggestion.

Searching by Speaking

- 1. Tap the microphone icon to the right of the search box.
- 2. Speak the terms you want to search for. When you're finished speaking, your speech is analyzed and the search is initiated.

If Google Search didn't quite understand what you said, you are presented with a list of similar-sounding terms. Tap the correct term to start the search.

Using Voice Actions

- 1. Tap the microphone icon to the right of the search box.
- 2. Speak the voice action you want to use. For example, say "send a text." Your speech is analyzed before the action is initiated.
- 3. Some voice actions need you to complete by speaking or typing more information. For example, a **send text** window appears after you say "send a text." You need to enter the recipient and message text by typing or speaking.

Changing Search and Voice Search Settings

Open the **Search** app and press the **Menu Key** > **Settings** to set searchable items.

 
To set Voice Search settings, press the **Menu Key** > **System settings** > **Language & input** > **Voice Search**.

Camera

You can take photos and record videos. Photos and videos are stored to the phone's memory card or to the phone's internal storage. You can copy them to your computer or access them in the Gallery app.

Capturing a Photo

- 1. Press the **Home Key** > .
- 2. Aim the camera at the subject and make any necessary adjustments.
- 3. Lightly tap  or press a **Volume Key**.

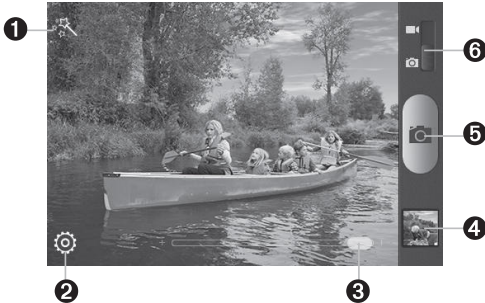

Number	Function
1	Adjust color filters.
2	Change the camera settings.
3	Hold the slider and slide to zoom in or out.
4	View photos and videos you have captured.
5	Capture a photo.
6	Switch to the camcorder.

Customizing Camera Settings

Before taking a photo, you can tap  to open the following camera setting options:

Timing	Set the lapse time for taking a photo.
Image Settings	Set exposure, brightness, contrast, saturation, or sharpness of the image.
White balance	Select how the camera adjusts colors in different kinds of light to achieve the most natural looking colors for your shots, or allow the camera to adjust the white balance automatically.
Storage	Choose the storage location.
ISO	Set the ISO as auto, ISO-100, ISO-200, or ISO-400.
Geo-tagging	Set whether your location information is stored or not with each photo you take.
Tones	Turn the shutter tone on or off.
Composition Line	Set the composition line to help you to aim the camera at the subject.
Picture Size	Choose the size of the photo.
Picture Quality	Adjust picture quality as super fine, fine, or normal.
Anti-band	Set anti-band as auto, 50 Hz, or 60 Hz.
Other	Restore default camera settings.

Recording a Video

1. Press the **Home Key** >  and select **Camcorder**, or switch to the camcorder from the camera screen.
2. Aim the camera at the subject and make any necessary adjustments.
3. Tap  or press a **Volume Key** to start recording.
4. Tap  or press a **Volume Key** to stop recording.



Number	Function
1	Change the camcorder settings.
2	View photos and videos you have captured.
3	Record a video.
4	Switch to the camera.

Customizing Camcorder Settings

Before recording a video, you can tap  to open the following camcorder setting options:

Video Quality	Choose the video quality as VGA or MMS video for general quality or MMS high quality.
Storage	Choose the storage location.
Time Lapse	Set the lapse time for taking a video.
White balance	Select how the camera adjusts colors in different kinds of light to achieve the most natural looking colors for your videos, or allow the camera to adjust the white balance automatically.
Geo-tagging	Set whether your location information is stored or not with each video you record.
Other	Restore default camera settings.

Opening the Gallery

Press the **Home Key** >  and select **Gallery** to view albums of your pictures and videos.

Working With Albums

When you open the Gallery, all pictures and videos on your phone are displayed in a number of albums.

Viewing album contents

Tap an album to view the pictures and videos it contains.

Sharing Albums

- 1. Tap and hold an album until it is selected.
- 2. Tap more albums that you want to share.
- 3. Tap  at the top of the screen and select how you want to share the albums.

 
Viewing Details of an Album

- 1. Tap and hold an album until it is selected.
- 2. Press the **Menu Key** > **Details**.

Deleting Albums

- 1. Tap and hold an album until it is selected.
- 2. Tap more albums that you want to delete.
- 3. Tap .

Working With Pictures

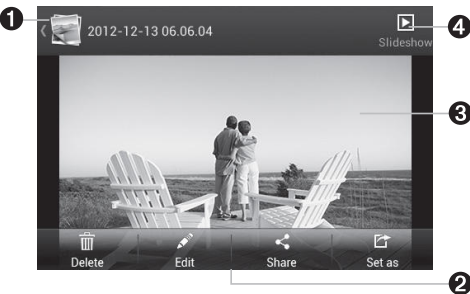

Number	Function
1	Tap to return to the album or thumbnails of all the pictures and videos in the album, where all its contents are displayed in a grid.
2	Delete, edit, share the picture; set the picture as contact icon or wallpaper, view picture file detail.
3	Swipe horizontally to see more; double tap a picture to view it in full screen.
4	Browse the album contents in a slideshow.

NOTE: Not all the options may be available for certain albums or pictures.

Retouching Your Pictures

You can edit any photos you took and some other pictures in **Gallery**. The changed picture is saved in the **Edited** album, while the original image is never affected.

- 1. Tap  while viewing a picture.
- 2. Tap the icons along the bottom of the screen to edit the picture.

	Adjust saturation, sharpen the picture, add fill light, emphasize highlight or shadows.
	Crop, rotate, straighten, fix red eye, or doodling on the picture.
	Apply color filters such as cross-processing, posterizing, lomography, documentary, B&W, sepia, negative.
	Apply effects such as warmth, tint, vignette, film grain and fisheye.

- 3. To undo or redo the changes you've made to the picture, tap  or  at the top of the screen.
- 4. Tap **Save** to save the new picture to the **Edited** album.

Sharing Your Pictures

- 1. Tap an album in **Gallery** and then tap a picture.
- 2. Tap  at the bottom of the screen. If the icon is invisible, tap the screen first.
- 3. Select how you want to share the picture.

Working With Videos

Playing Videos

- 1. Tap an album in **Gallery** and then tap the thumbnail of a video.
- 2. Tap the video to view the playback controls.

Sharing Videos

- 1. Tap an album in **Gallery** and then tap the thumbnail of a video.
- 2. Press the **Menu Key** > **Share**.
- 3. Select how you want to share the video.

Press the **Home Key** >  and select **Music** to play audio files stored on your phone. Music supports a wide variety of audio formats, so it can play music you purchase from online stores, music you copy from your CD collection, and so on.

Copying Music Files to Your Phone

Before using Music, you need to copy audio files from your computer to your phone’s memory card.

Copying From a Computer

- 1. Connect your phone and the computer with a USB cable.
- 2. Tap **Media device (MTP)** (if supported on the PC) or **Camera (PTP)** to browse the files on the phone storage and the microSD card.
- 3. Copy the music file from the PC to the phone storage or microSD card.

Downloading From the Internet

You can download music files when browsing web pages. (See *Browser – Downloading Files.*)

Receiving via Bluetooth

You can receive music files from other devices via *Bluetooth*. (See *Connecting to Networks and Devices – Connecting to Bluetooth Devices.*)

Viewing Your Music Library

Press the **Home Key** >  and select **Music** and your music library is displayed. All your audio files are cataloged according to the information stored in the files. Tap the tabs at the top of the screen to view your music library organized by **Albums**, **Artists**, **Songs**, **Playlists**, **Folders**, or **Genre Lists**.

NOTE: If an audio file is being played, its summary information is displayed at the bottom of the screen. Tap the song to open the playback screen.

Setting a Song as the Default Ringtone

The song will be used as the ringtone for all incoming calls, except those from contacts you have assigned special ringtones to (see *People – Editing Contacts – Set a Ringtone for a Contact*).

- 1. Press the **Home Key** >  and select **Music** to see the music library.
- NOTE:** If you are in the playback screen, press the **Menu Key** > **Library** to return to the music library.
- 2. Tap  next to a song in any list.
- 3. In the menu that opens, tap **Use as phone ringtone**.

TIP: If the song is being played, you can press the **Menu Key** > **Use as ringtone** in the playback screen.

Deleting a Song

- 1. Press the **Home Key** >  and select **Music** to see the music library.
- NOTE:** If you are in the playback screen, press the **Menu Key** > **Library** to return to the music library.
- 2. Tap  next to a song in any list.
- 3. In the menu that opens, tap **Delete** > **OK**.

Playing Music

Tap a song in the music library to listen to it. The following playback screen appears:



Number	Function
1	Song and artist information.
2	Tap to toggle repeat mode (no repeat, repeat the current song, or repeat the current playlist).
3	Playback control. Skip songs or pause and resume playback. Drag the slider to jump to any part of the song.
4	Tap to open the current playlist.
5	Tap to add a song to the favorite list.
6	Tap to play the current playlist in shuffle mode, where tracks are played in random order.
7	Album artwork.

Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

Creating a Playlist

- 1. Tap  next to the song in the music library.
 - 2. In the menu that opens, tap **Add to playlist**.
 - 3. Tap **New**.
 - 4. Type the playlist name and tap **Save**.
- The playlist is created and the song you selected is added to the playlist.

Music

Adding a Song to a Playlist

- 1. Tap  next to the song in the music library.
- 2. In the menu that opens, tap **Add to playlist**.
- 3. Tap the name of the playlist you want the song added to.

Removing a Song From a Playlist

- 1. Open a playlist.
- 2. Tap and hold the song or songs you want to remove.
- 3. Tap  > **OK**.

NOTE: You can also press the **Menu Key** > **Remove songs** after opening the playlist to select multiple songs and remove them together.

Deleting or Renaming a Playlist

- 1. Tap the **Playlists** tab in the music library to see all the playlists.
- 2. Tap  next to a playlist and tap **Rename Playlist** or **Delete Playlist** in the menu that opens.

NOTE: These options may not be available for certain automatically created playlists, such as **Recently added**.

 
Play Music

The Play Music app  works with Google Music, Google’s online music store and streaming service. You can stream via mobile data or Wi-Fi and listen to your favorite songs that you’ve added to your online Google Music library. You can also play audio files you’ve copied directly to your phone from a computer.

NOTE: The availability of Google Music is dependent on your region. If it is not available, or you don’t have a mobile data or Wi-Fi connection, you can only play music stored on your phone.

Playing Your Music

- 1. Press the **Home Key** >  > and select **Play Music**. If you are prompted, select an account to access its online music library.
The app searches your online library and your phone for music and playlists before displaying your combined music library, organized by **RECENT**, **ARTISTS**, **ALBUMS**, **SONGS**, **PLAYLISTS**, and **GENRES**. To change views of your library, swipe left or right when holding the phone upright, or tap the view name at the top left of the screen when holding the phone on its side.
- 2. Tap a song to play it. When the song is playing, tap the album artwork to display more options.

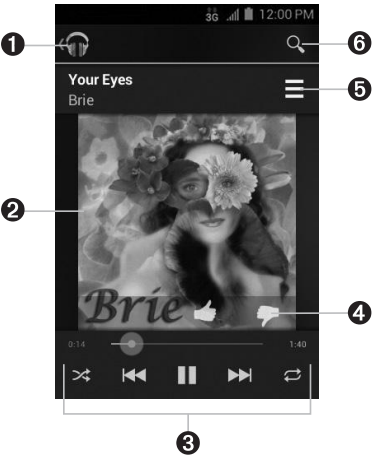

Number	Function
1	Tap to view the currently playing list.
2	Album artwork.
3	Playback control. Skip songs, pause and resume playback, use shuffle or repeat. Drag the progress bar to jump to any part of the song.
4	Rate the song.
5	Go back to Now Playing list.
6	Search for music.

Play Music

You can still control the music when you are not in the playback screen.

- In the **Play Music** app, tap the Now Playing bar at the top right (portrait mode) of the screen to restore the playback screen.
- In other apps, flick down on the notification panel. Tap the song title to restore the playback screen, or just pause/resume playback or skip to the next/previous song.
- When the screen is locked, the song information and playback controls are displayed on top of the screen. You can pause/resume playback or skip songs.

Managing Playlists

Create playlists to organize your music files into sets of songs so that you can play the songs you like in the order you prefer.

Create a Playlist or Add a Song to a Playlist

Tap and hold the song or tap  next to the song, and select **Add to playlist**.

Adding songs to a list:

1. Open a playlist in the **Playlists** tab of the music library.
2. Tap and hold the song or tap  next to the song you want to add to list.
3. Tap a song to play and view all the songs in the list.

4. Tap and hold the small grid in front of a song in the list.
5. Drag the grid up or down to change its order in the playlist.

Rearranging Songs in a Playlist

1. Open a playlist in the **Playlists** tab of the music library.
2. Tap and hold the small grid in front of a song.
3. Drag the grid up or down to change its order in the playlist.

Removing Songs From a Playlist

1. Open the playlist in the **Playlists** tab of the music library.
2. Tap and hold the song or tap  next to the song you want to remove.
3. Select **Remove from playlist**.

Renaming or Deleting a Playlist

1. Swipe to the **Playlists** tab in the music library to see all the playlists.
2. Tap and hold a playlist or tap  next to the playlist.
3. Tap **Rename** or **Delete** in the menu that opens.

Video Player

Use the Video Player to play various kinds of videos.

Opening the Video Library

Press the **Home Key** >  and select **Video Player** to view your video library.

Tap the tabs at the top of the screen to view the available videos.

- **ALL:** Videos on your phone.
- **LAST ADDED:** Recently added videos on your phone.
- **CAMERA VIDEOS:** Videos you have recorded with the phone's camera.

Playing and Controlling Videos

- Tap a video in the video library to play it. Rotate the phone on its side to watch the video in landscape view.
- Tap the video to show the playback controls. You can pause and resume the playback or jump to any part of the video. Press the **Back Key** to exit the video.

Managing Video Files

Deleting Videos

1. Tap and hold a video in the video library. The video is highlighted.
2. To remove more videos, tap them.
3. Tap  at the bottom left of the screen.
4. Tap **OK**.

Sharing Videos

1. Tap and hold a video in the video library. The video is highlighted.
2. To share more videos, tap them.
3. Tap  at the bottom right of the screen and select how you want to share them.

Renaming a Video

1. Tap  next to the video you want to rename.
2. Tap **Rename**.
3. Type the new video name and tap **OK**.

Viewing Details of a Video

1. Tap  next to a video.
2. Tap **Details**.

Sound Recorder

Sound Recorder enables you to record voice memos and listen to them whenever you like.

Recording a Voice Memo

1. Press the **Home Key** >  and select **Sound Recorder**.
2. Tap  to start recording. Tap  to cancel recording if you change your mind.
3. Tap  to stop recording. The memo is automatically saved.

If you don't want to save the memo after recording it, tap **X** to delete it.

Playing a Voice Memo

Playing a Memo You Just Recorded

Tap  at the bottom of the screen.

Playing Any Saved Memo

1. Tap  at the top right of the screen to see all recordings.
2. Tap the title of a memo to play it.

NOTE: You can also tap  at the right of the memo to share, rename, delete it, check its file information, or set it as your phone ringtone.

More Apps

Alarm

Set alarms or turn the phone into a bedside clock.

Setting a New Alarm

1. Press the **Home Key** >  and select **Alarm**.
2. Tap  at the bottom of the screen to create a new alarm.
3. Tap the  icon before an alarm to turn on or off the alarm.
4. Tap a default alarm to configure it, and set up the alarm options, such as time, repeat, and ringtone.
5. Press the **Back Key** to save and exit.

Using the Bed Clock

The Bed Clock displays the current time and the next alarm.

1. Press the **Home Key** >  and select **Alarm**.
2. If necessary, press the **Menu Key** > **Bed Clock Preferences** in the Alarm screen to set up the Bed Clock options. Then press the **Back Key** to return to the Alarm screen.
 - **Enable bed clock:** Turn on or off the Bed Clock function.
 - **Bed clock never sleeps:** Keep the Bed Clock screen turned on when charging the phone.
3. Press the **Menu Key** > **Bed Clock** to open the Bed Clock screen.

Calculator

Press the **Home Key** >  and select **Calculator**.

TIP: Tap  or , or swipe left or right to switch between different panels. You can also hold the phone on its side to see all of the calculator buttons.

Downloads

The Downloads app keeps a record of the files you have downloaded using the Browser, Email, or Gmail app.

Press the **Home Key** >  and select **Downloads** to check the record.

- Tap a file to open it with the appropriate applications.
- Tap and hold a file, or check the box in front of it, to delete or share it.

File Manager

Quickly access all of your images, videos, audio clips, and other types of files on your phone and on the memory card.

1. Press the **Home Key** >  and select **File Manager**.
2. Tap the folder name at the top of the screen to switch between the memory card storage and the phone storage.

More Apps

Note Pad

Press the **Home Key** >  and select **Note pad** to save and view your text notes.

- Tap **New** to create a new note. Then enter your text and tap **Save** to save it.
- Tap a note to view its entire content. You can also delete, share, edit, or export it.

Play Books

Press the **Home Key** >  and select **Play Books** to read ebooks purchased from Play Store.

- Tap a book cover displayed in Play Books to start reading it. You can also tap the shopping bag icon at the top to buy more books from Play Store or tap  to search by book title or author name.

Play Movies & TV

Press the **Home Key** >  and select **Play Movies & TV** to watch movies you rent from Play Store as well as your personal videos stored on the phone.

- The **MY RENTALS** tab displays your recent movie rentals. You can stream them for online watching or download them to watch offline.
- The **PERSONAL VIDEOS** tab displays videos from other sources. Tap a video to play it.

Task Manager

Press the **Home Key** >  and select **Task Manager** to view or stop applications.

- Tap a task in the **Tasks** tab to disable, force stop, or see its details.
- Tap the **Apps** tab to manage all the apps on your phone.
- Tap the **Resources** tab to view the real-time system resources information.

Timer

Press the **Home Key** >  and select **Timer** to use the stopwatch or the timer.

Stopwatch allows you to record lap times, while Countdown allows you to set a time and count down to zero.

YouTube

Press the **Home Key** >  and select **YouTube**.

You can watch YouTube videos or upload your own.

Play Store

Press the **Home Key** > . You can buy or rent music, books, movies, and apps and download them to your phone.

NOTE: The content you can access in Play Store depends on your region and your service provider.

Browsing and Searching for Apps

You can browse apps by category and sort them in different ways. Tap a top-level category, such as Games, and tap the app from any subcategory.

You can also search for apps using an app's name or description, or the developer's name. Just tap  and enter the search terms.

Downloading and Installing Apps

When you find the app you are interested in through browsing or searching, tap it to open its details screen, where more information about the app is displayed.

1. Tap **Install** (free apps) or the price (paid apps) in the app details screen.
2. If the app is not free, you will need to sign in to your Google Wallet account and select a payment method.
3. Tap **Accept** to accept the permissions for the app. Your app will start downloading immediately or once payment is successfully authorized.

Managing Your Downloads

After you've downloaded and installed an app, you can rate it, view it in a list with your other downloaded apps, configure it to update itself automatically, and so on.

Viewing Your Downloaded Apps

1. In the Apps screen of Play Store, press the **Menu Key** > **My apps**.
2. Your list of installed apps opens. You can tap one to rate it, uninstall it, request a refund, and so on.

Uninstalling an App

1. In the Apps screen of Play Store, press the **Menu Key** > **My apps**.
2. Tap an app to open its details screen.
3. Tap **Uninstall** > **OK**.

Press the **Home Key** >  and select **Settings**. The Settings app contains most of the tools for customizing and configuring your device.

General Settings

Airplane Mode

Tap or slide the Airplane Mode switch to turn airplane mode on. All the phone's radios that transmit voice or data are turned off.

Wi-Fi

Turn Wi-Fi on or off and configure your Wi-Fi connections. (See *Connecting to Networks and Devices – Connecting to Wi-Fi.*)

Bluetooth

Turn *Bluetooth* on or off and configure your *Bluetooth* connections. (See *Connecting to Networks and Devices – Connecting to Bluetooth Devices.*)

Mobile Networks

Control mobile data use and data roaming. (See *Connecting to Networks and Devices – Connecting to Mobile Networks.*)

Sound

Adjust volumes (see *Personalizing – Adjusting Volumes*), toggle sound and mute (see *Personalizing – Switching to Silent Mode*), set up ringtone (see *Personalizing – Changing the Ringtone*) and notification sound (see

Personalizing – Changing the Notification Sound), and select system sounds (refer to *Turning On/Off Touch Sounds*). Tap **Silent mode** to turn off all sounds except media and alarm, or enable silent mode with vibration.

Display

- **Brightness:** Set the brightness of the display.
- **Wallpaper:** Select a background image for the Home Screen.
- **Sleep:** Set the length of time of inactivity before the screen turns off automatically.
- **Font size:** Set the font size of the text on the screen.
- **Pulse notification light:** Flash the LED light to notify you of missed calls, new messages, and other events.

Date and Time

Set date, time, time zone, and how date and time are displayed. You can also use network-provided data.

Language and Input

- **Language:** Select a language and region for your system.
- **Personal dictionary:** Add new words to the phone's dictionary or remove words from the dictionary. The words you add are used for spelling check and word suggestion.
- **KEYBOARD & INPUT METHODS:** Configure text input settings. (See *Knowing the Basics – Entering Text – Touch Input Settings.*)

- **Voice Search:**
 - **Language:** Select the language you use when entering text by speaking or searching by speaking.
 - **Speech output:** Set always or only hands-free using the speech output function.
 - **Block offensive words:** Replace offensive words with an asterisk (*) when you use Google voice recognition to transcribe your voice into text.
 - **Hotword detection:** Say hotword to launch Google voice search.
- **Text-to-speech output:**
 - **PREFERRED ENGINE:** Select the speech synthesis engine you want to use or change its settings.
 - **Speech rate:** Select how quickly you want the synthesizer to speak.
 - **Listen to an example:** Play a brief sample of the speech synthesizer, using your current settings.
- **Pointer speed:** Select how fast the pointer/mouse should scroll when you connect the phone to a track pad or mouse accessory.

Wireless and Networks

Data Usage

Tap the **ON/OFF** switch to turn on or off mobile data.

You can check how much data has been used during the time cycle you set, set mobile data limit and warning, see what apps have been using mobile data, allow data roaming, or restrict background data for individual apps.

VPN

Set up and connect to virtual private networks. (See *Connecting to Networks and Devices – Connecting to Virtual Private Networks.*)

Device

Storage

Check memory information for your external memory card and internal storage.

- **Unmount SD card:** Unmount the memory card from your phone so that you can safely remove the card while the phone is on.
- **Erase SD card:** Erase all data on your memory card and prepare it for use with your phone.

Battery

Check how much power remains for the battery and what has been using the battery.

Apps

See apps installed on your phone and manage them.

Tap an app in the **DOWNLOADED, ON SD CARD, RUNNING**, or **ALL** tab to see its information. You can stop the app, uninstall or disable the app, clear data and cache, or move the app between the internal storage and the memory card.

NOTE: Not all applications can be moved or uninstalled.

Connect to PC

Select the USB connection mode between your phone and PC. (See *Connecting to Networks and Devices – Connect Your Phone to a Computer via USB*.)

Personal

Location Services

Activate location services to determine your location. (See *Maps, Navigation, Local, and Latitude – Activating Location Services*.)

Check **Location & Google search** to improve Google search results and other services using your location information.

Security

- **Screen lock:** Lock the screen with long press, face unlock, pattern, PIN, or password. (See *Personalizing – Protecting Your Phone With Screen Locks*.)

- **Owner info:** Input personal text which will be displayed on the lock screen.
- **Encrypt phone:** Encrypt your data on the phone to protect your privacy. (See *Personalizing – Protecting Your Phone With Encryption*.)
- **Set up SIM/RUIM card lock:** Use the PIN lock SIM card or change SIM PIN.
- **Make passwords visible:** Display passwords as you enter them.
- **Device administrators:** View or deactivate apps you have authorized to be device administrators.
- **Unknown sources:** Check this option to permit installation of apps from sources other than the Play Store.
- **Trusted credentials:** Display trusted CA certificates.
- **Install from SD card:** Install certificates from the memory card.
- **Clear credentials:** Delete all certificates.

Backup and Reset

- **Back up my data:** Back up app data, Wi-Fi passwords, and other settings to Google servers after you sign in to your Google account.
- **Backup account:** Back up accounts and accounts data.
- **Automatic restore:** Restore previously backed up settings and data when you reinstall an app.

- **Factory data reset:** Reset your phone to factory default settings. All your personal data from the phone's internal storage will be erased. You can also erase the data on the memory card during the process.

Accounts

Manage your accounts and synchronization settings.

- Tap **Add account** to sign in to or create accounts on your phone.
- Tap an account to set the sync settings for that account. You can then press the **Menu Key > Sync now** to sync all checked items.
- Tap an account and then press the **Menu Key > Remove account** to remove the account and all information related to it from your phone.

System

Accessibility

Configure the system accessibility options and accessibility plug-ins on your phone, such as using **TalkBack** for low-vision users.

Developer Options

Developer options contains settings that are useful when developing Android applications.

About Phone

View phone status and legal information. You can also upgrade your phone system from update packages copied to the storage card.

To update your phone software through microSD card:

Copy the update package to the root directory of microSD card. Please make sure the update package has been renamed to update.zip.

1. Press the **Menu Key > System settings > About phone > System updates > Storage card updates**.
2. Tap **OK > Update now**.
3. The system reboots and begins microSD upgrade.
4. When the upgrade is finished, the system will reboot with new software.

Troubleshooting

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

Problem	Possible Causes	Possible Solution
Poor reception	The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions can not effectively reach it.	Move to a location where the network signal can be properly received.
	The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).	Avoid using the phone at such times, or try again after waiting a short time.
	You are too far away from a base station for your service provider.	You can request a service area map from your service provider.
Echo or noise	Poor network link quality on the part of your service provider.	End the call and dial again. You may be switched to a better-quality network link or phone line.
	Poor local telephone line quality.	End the call and dial again. You may be switched to a better-quality network link or phone line.
Unable to select certain features	Your service provider does not support these features, or you have not applied for services that provide these features.	Contact your service provider.
Battery not charging	The battery or battery charger is damaged.	Contact the dealer.
	The phone's temperature is below 32°F (0°C) or higher than 113°F (45°C).	Adjust the battery charging environment to avoid extremes of temperature.
	Poor contact between the battery and charger.	Check all connectors to make sure all connections have been properly made.

Troubleshooting

Problem	Possible Causes	Possible Solution
Shortened standby time	The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time.	If you are located in an area where signaling is weak, temporarily power off the phone.
	The battery is depleted. In high temperature environments, battery life will be shortened.	Use a new battery.
	If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time.	Change your location to one where the network is accessible, or temporarily turn off your phone.
Cannot turn your phone on	Battery power has been depleted.	Recharge the phone's battery.
(U)SIM card error	(U)SIM card malfunction or damage.	Take the (U)SIM card to your service provider for testing.
	(U)SIM card inserted improperly.	Insert the (U)SIM card properly.
	Debris on the (U)SIM card contacts.	Use a soft, dry cloth to clean the (U)SIM card contacts.
Unable to connect to the network	(U)SIM card invalid.	Contact your service provider.
	You are not within the network's service area.	Check the service area with your service provider.
	Poor signal.	Move to an open space, or if you are inside a building, move closer to a window.

Troubleshooting

Problem	Possible Causes	Possible Solution
Cannot answer incoming calls	You have activated the Call barring feature.	In Phone app, press the Menu Key > Settings > Call Barring Settings , and then check Deactive All .
Cannot make outgoing calls	You have activated the Call barring feature.	In Phone app, press the Menu Key > Settings > Call Barring Settings , and then check Deactive All .
	You have activated the Fixed dial numbers feature.	In Phone app, press the Menu Key > Settings > Fixed Dialing Numbers and disable it.
PIN Code blocked	You have entered an incorrect PIN code three consecutive times.	Contact your service provider. If the service provider provides the (U)SIM card's PUK code, use the PUK code to unlock the (U) SIM card.
Phone crashes, reboots, freeze, or cannot be powered on	Some third-party software is not compatible with your phone.	Reset the phone to factory status.
		Enter safety mode and uninstall the software that may cause the problem.
		Upgrade the phone software.

For Your Safety

General Safety

	Don't make or receive handheld calls while driving. And never text while driving.
	Keep your phone at least 0.6 inches (15mm) away from your ear or body while making calls.
	Small parts may cause choking.
	Your phone can produce a loud sound.
	Keep away from pacemakers and other electronic medical devices.
	Switch off when asked to in hospitals and medical facilities.
	Switch off when told to in aircrafts and airports.
	Switch off when near explosive materials or liquids.
	Don't rely on your phone for emergency communications.

	Don't use at gas stations.
	Your phone may produce a bright or flashing light.
	Don't dispose of your phone in fire.
	Avoid contact with anything magnetic.
	Avoid extreme temperatures.
	Avoid contact with liquids. Keep your phone dry.
	Don't take your phone apart.
	Only use approved accessories.

Radio Frequency (RF) Energy

This model phone meets the government’s requirements for exposure to radio waves.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States, Industry Canada of Canada.

During SAR testing, this device is set to transmit at its highest certified power level in all tested frequency bands , and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 15 mm.

Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg, and 1.6W/kg by Industry Canada.

This device is compliance with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1992 and Canada RSS 102, and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C, and Canada RSS 102. This device has been tested, and meets the FCC, IC RF exposure guidelines when tested with the device directly contacted to the body.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: **Q78-Z660G**.

For this device, the highest reported SAR value for usage against the head is 1.23 W/kg, for usage near the body is 1.19 W/kg.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

SAR compliance for body-worn operation is based on a separation distance of 15 mm between the unit and the human body. Carry this device at least 15 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 15 mm between this device and the your body.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.

FCC Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: *Changes or modifications not expressly approved by the manufacturer could void the user’s authority to operate the equipment.*

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CTIA

- a) Do not disassemble or open crush, bend or deform, puncture or shred.
- b) Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose

to water or other liquids, expose to fire, explosion or other hazard.

- c) Only use the battery for the system for which it is specified
- d) Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE 1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- e) Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- f) Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

Only authorized service providers shall replace battery. (If the battery is non-user replaceable).

- g) Promptly dispose of used batteries in accordance with local regulations
- h) Battery usage by children should be supervised.
- i) Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- j) Improper battery use may result in a fire, explosion or other hazard.

For those host devices that utilize a USB port as a charging source, the host device’s user manual shall include a statement that the phone shall only be connected to CTIA certified adapters, products that

For Your Safety

bear the USB-IF logo or products that have completed the USB-IF compliance program.

Using Your Phone With a Hearing Aid Device

Your Z660G is compliant with the FCC Hearing Aid Compatibility (HAC) requirements. For additional HAC information, including the HAC rating of this product, please refer to www.zteusa-support.com.

When some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that have been rated have a label on the box.

Your Z660G has been tested for hearing aid device compatibility and has an M3/T3.

These ratings are not guaranteed. Results will vary, depending on the level of immunity of your hearing device and the degree of your hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference with hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices contain telecoils.) The more immune your hearing aid device is, the less likely you are to experience interference noise from your wireless phone.

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device.

For additional information about the FCC's actions with regard to hearing aid compatible wireless devices and other steps the FCC has taken to ensure that individuals with disabilities have access to telecommunications services, please go to www.fcc.gov/cgb/dro.

HAC for Newer Technologies

This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

For Your Safety

Distraction

Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands-free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

Product Handling

General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Keep the screen and camera lens clean. Unclean screen or camera lens may slow down the phone's reaction to your operations or lower image quality.
- Clean the device and its accessories with a soft material such as cleaning cloth for eyeglass lenses.

Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.

- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture, or high humidity.
- Do not drop, throw, or try to bend your phone or its accessories.
- Do not paint your phone or its accessories.
- Do not attempt to disassemble your phone or its accessories; only authorized personnel can do so.
- Do not expose your phone or its accessories to extreme temperatures, minimum 23°F and maximum 122°F (minimum -5°C and maximum 50°C).
- Do not place your phone inside or near heating equipment or high pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your phone may be damaged.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

Small Children

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

For Your Safety

Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your phone for a long time.

Electrostatic Discharge (ESD)

Do not touch the SIM/SD card's metal connectors.

Antenna



Do not touch the antenna unnecessarily.

Normal Use Position

When placing or receiving a phone call, hold your phone to your ear, with the bottom toward your mouth.

Power Supply

Do not connect your mobile phone to the power supply or switch it on until instructed to do so in the installation instructions.

Air Bags

Do not place a phone in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result.

Store the phone safely before driving your vehicle.

Seizures/Blackouts

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician.

Repetitive Stress Injuries

To minimize the risk of RSI when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take lots of breaks to stretch and relax.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

For Your Safety

Loud Noise

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, *Bluetooth* stereo headsets or other audio devices.

Phone Heating

Your phone may become warm during charging and during normal use.

Electrical Safety

Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Never puncture the surface of the battery with sharp objects.

Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel can service or repair the phone or its accessories.

If your phone or its accessory has been submerged in water, punctured, or subjected to a severe fall, do

not use it until you have taken it to be checked at an authorized service center.

Battery Handling & Safety

- Do not disassemble or crush, bend or deform, puncture, or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which it is specified.
- Only use the battery with a charging system that has been qualified by ZTE. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short-circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.
- Avoid dropping the phone or battery.
- Improper battery use may result in a fire, explosion, or other hazard.
- The phone shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.

Radio Frequency Interference

General Statement on Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 6 inches (15 cm) be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

Medical Devices

Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Hospitals

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These

requests are designed to prevent possible interference with sensitive medical equipment.

Aircraft

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft. If your device offers a “flight mode,” this must be enabled prior to boarding an aircraft.

Interference in Cars

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

Explosive Environments

Gas Stations and Explosive Atmospheres

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

Blasting Caps and Areas

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.

Vehicles Equipped with an Airbag

An airbag inflates with great force. Do not place objects, including either installed or portable wireless equipment, in the area over the airbag or in the airbag deployment area. If in-vehicle wireless equipment is improperly installed and the airbag inflates, serious injury could result.

Third Party Equipment

The use of third party equipment, cables or accessories, not made or authorized by ZTE, may invalidate the warranty of the mobile phone and also adversely affect the mobile phone’s operation. For example, use only the ZTE charger supplied with the mobile phone.

Efficient Use

For optimum performance with minimum power consumption, do not cover the mobile phone with anything. Covering the mobile phone may cause the mobile phone to operate at higher power levels than needed, and may shorten the using time of the battery.

Specifications

Handset specifications are shown in the following table.

Handset Standards	GSM and UMTS 850/1900, AWS 1700
Dimensions (H × W × D)	4.57" (H) x 2.4" (W) x 0.5" (D)
Weight	4.2 oz. (with battery)
Display	3.5" 320 x 480
Camera	3 megapixel camera
Internal memory	ROM: 4GB, RAM: 512MB
Removable memory card	Supports microSD card up to 32GB
Battery	1,300 mAh
Continuous idle time	Up to 2-3 days
Continuous talk time	Up to 9 hours
WAP browser version	WAP 2.0

NOTE: The phone's talk time and idle time are based on ideal working environments. The use of extended backlighting, browser, and network conditions can reduce battery life and talk/idle time.

Notes

