

ZTE V975

Quick Start Guide

LEGAL INFORMATION

Copyright © 2014 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.ztedevice.com) for more information on self-service and supported product models. Information on the website takes precedence.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this guide may differ from the

actual product. Content in this guide may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation.

Google and Android are trademarks of Google, Inc.

The *Bluetooth*[®] trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.


microSDHC logo  is a trademark of the SD-3C, LLC.


Other trademarks and trade names are the property of their respective owners.

Version No. : R1.0

Edition Time : 201404

  Getting to Know Your Phone

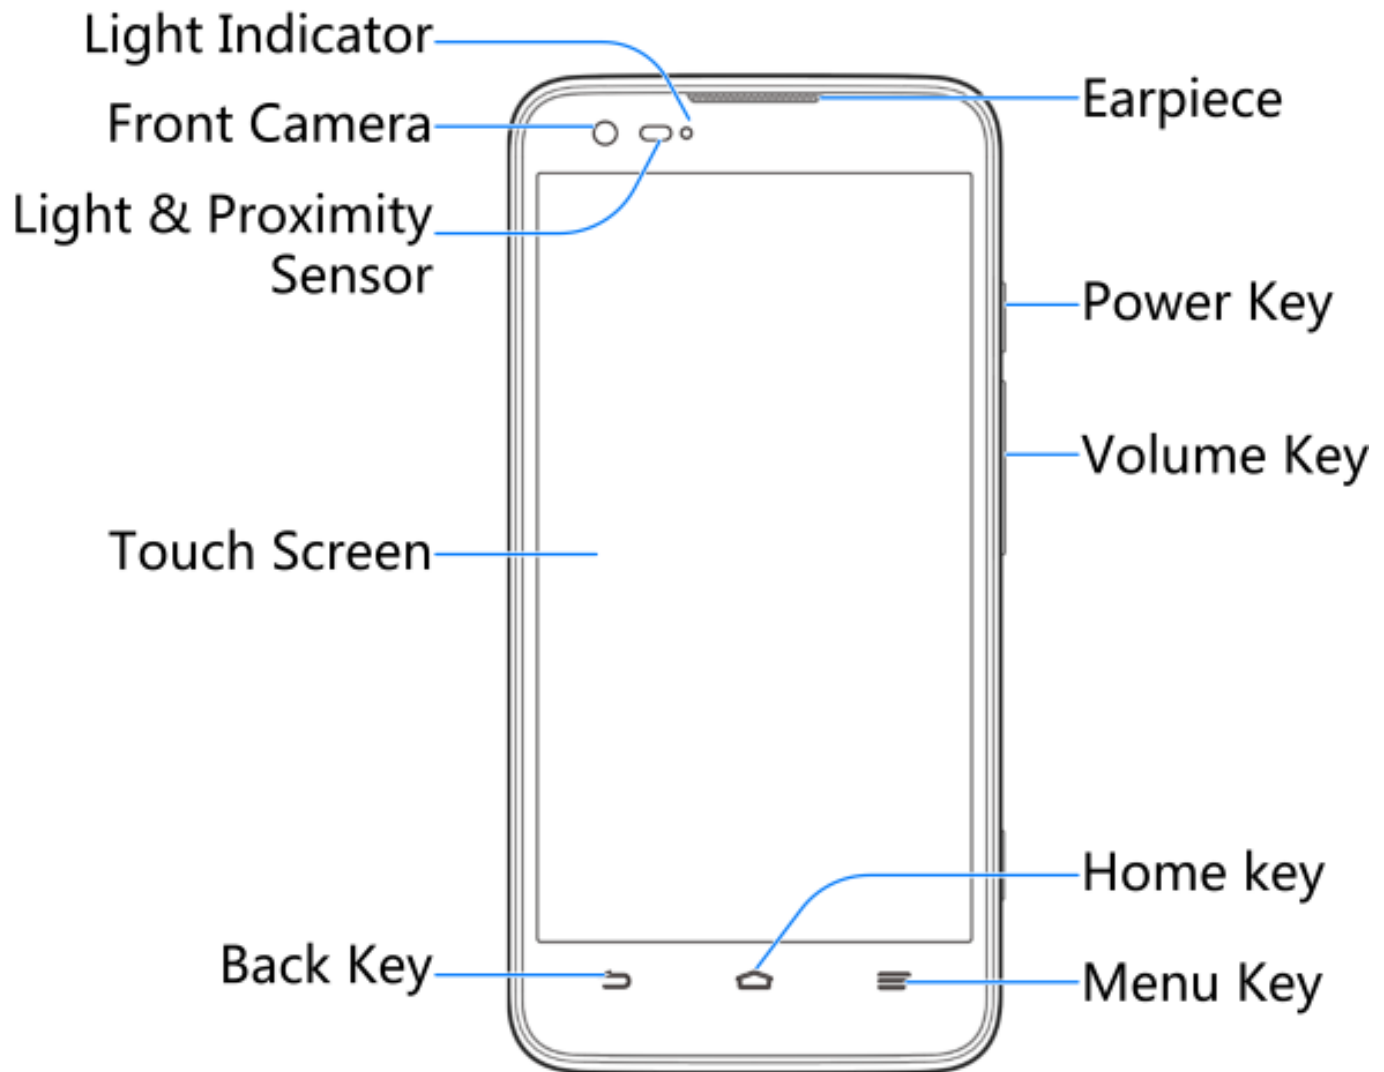

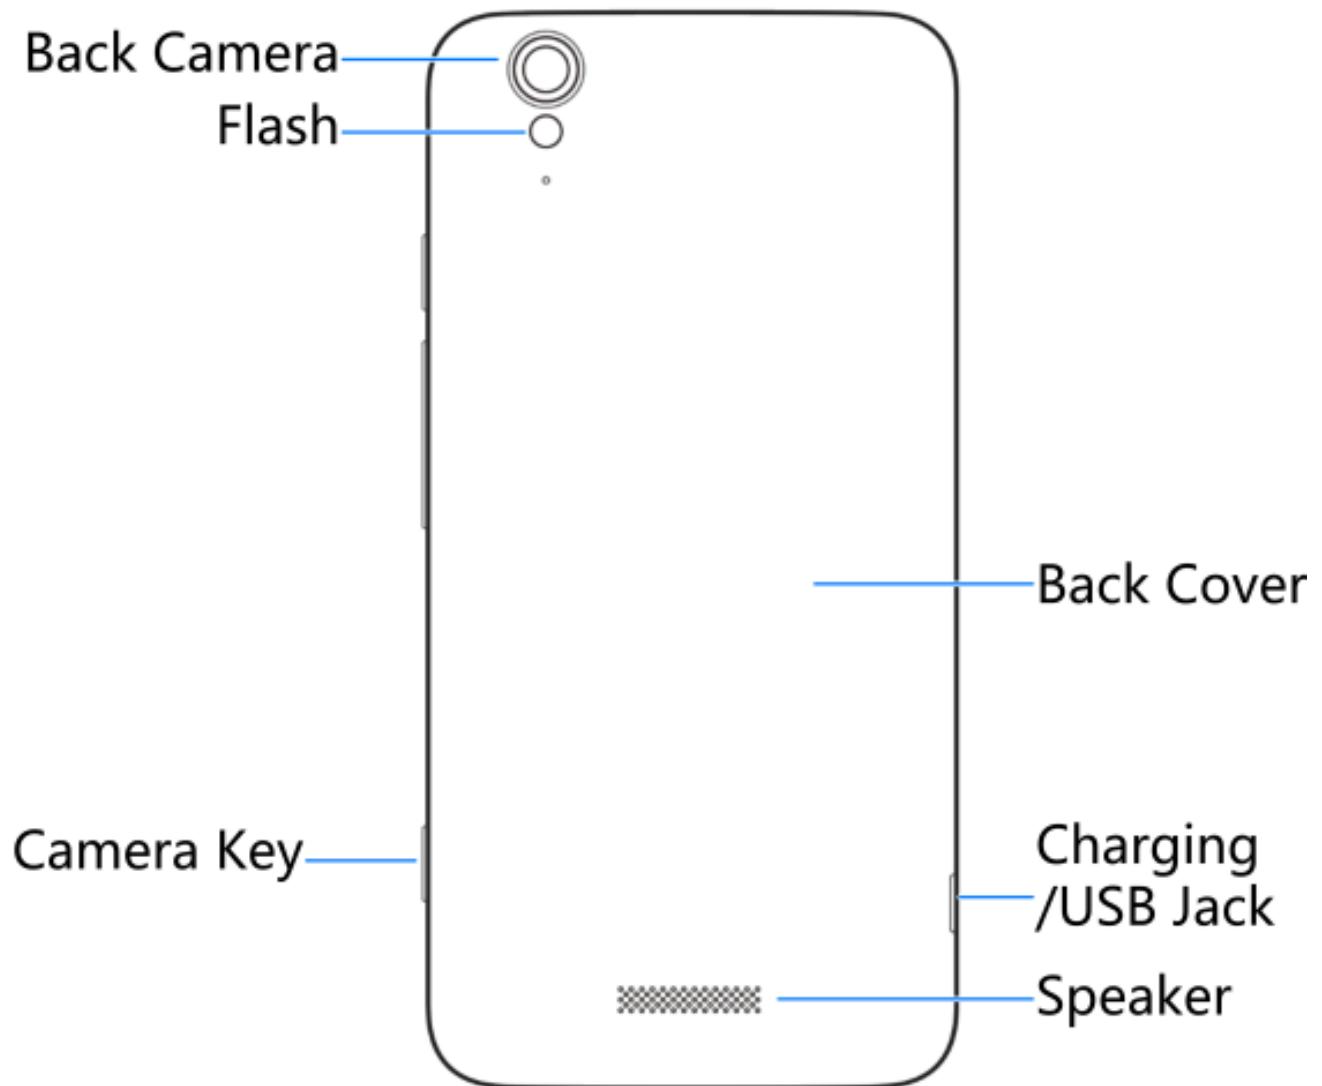

Power Key

- Press and hold to power on, select phone modes, turn on/off airplane mode, reboot or power off your phone.
- Press to turn off or on the screen display.

Home Key

- Touch to return to the home screen from any application or screen.
- Touch and hold to active Google search.

Menu Key

- Touch to get the options for the current screen.
- Touch and hold to see recently used applications.

Back Key

Touch to go to the previous screen.

Volume Key

 
Press or hold to turn the volume up or down.

Starting Up


Switch off your phone before installing or replacing the battery or the SIM card. The microSDHC™ card is optional and can be installed and removed while the phone is turned on. Unmount the

microSDHC card before removing it.


1. Place your finger in the slot at the bottom of the back cover to lift and remove the cover.

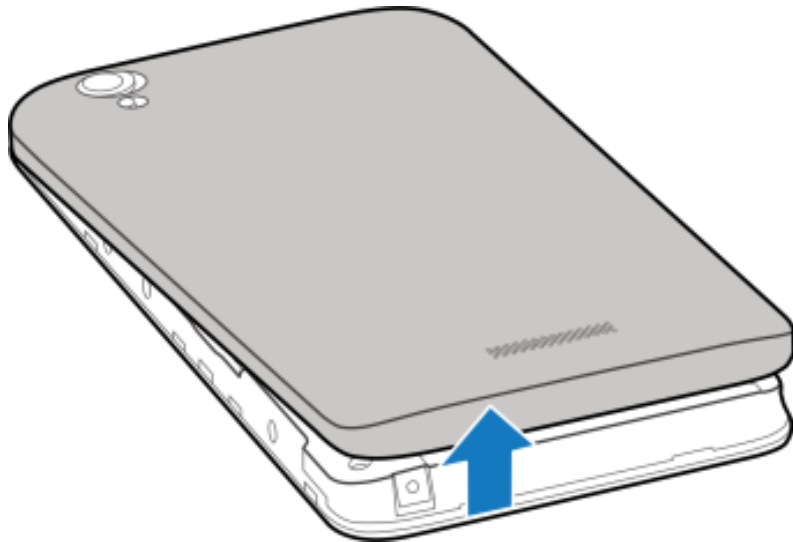

 2. Hold the SIM card with its cut corner oriented as shown and slip it into the card holder.

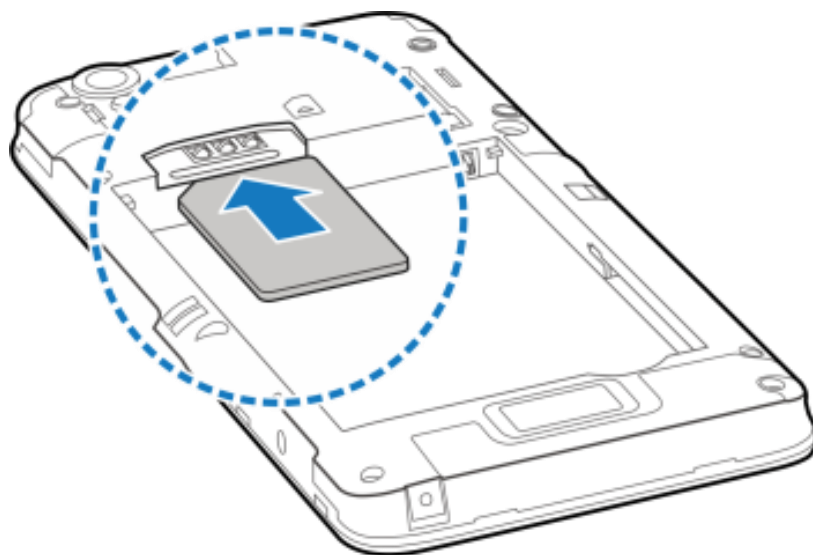


 3. Hold your microSDHC card with the metal contacts facing down and slide it into the microSDHC card slot.

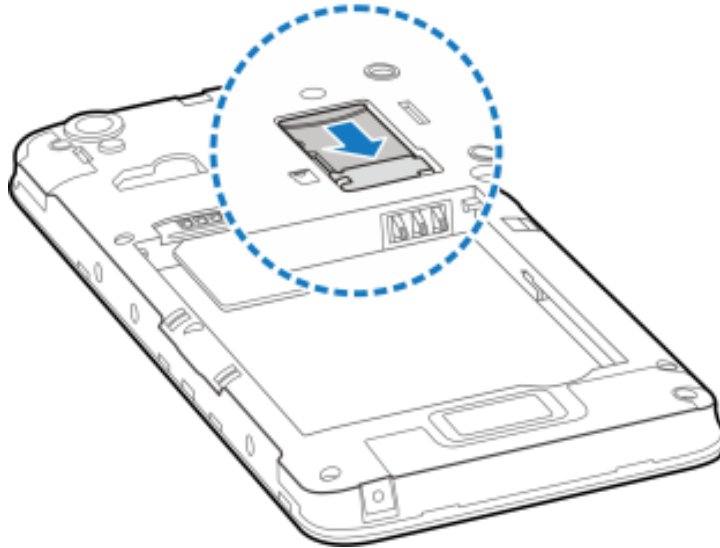

NOTE: Your phone may come with a pre-installed microSDHC card. Some applications may not function normally after you remove the card, pre-installed or otherwise.

 
4. Align the connectors on the phone and the battery and slide the battery into the compartment. Then gently press the battery down until it is secured.

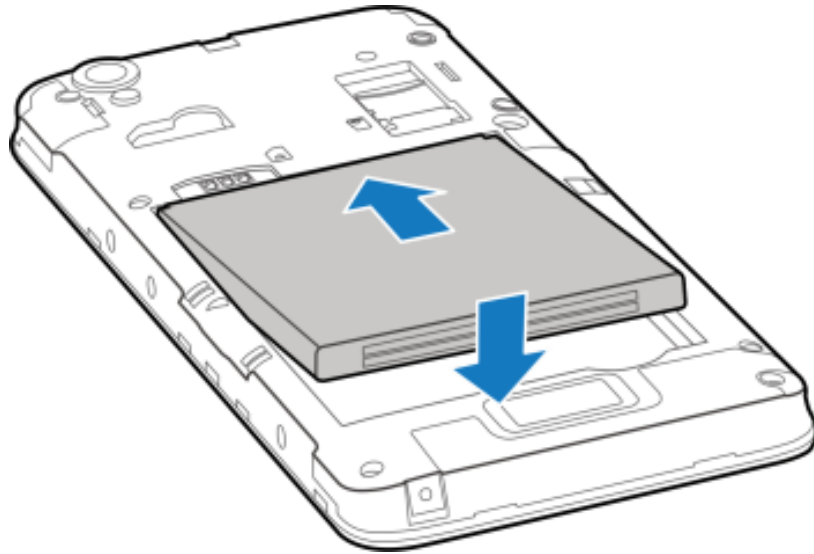

5. Align the back cover with the back of the phone and press the cover back into place. Make sure all the tabs are secure and there are no gaps around the cover.

Charging the Battery

 6. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.

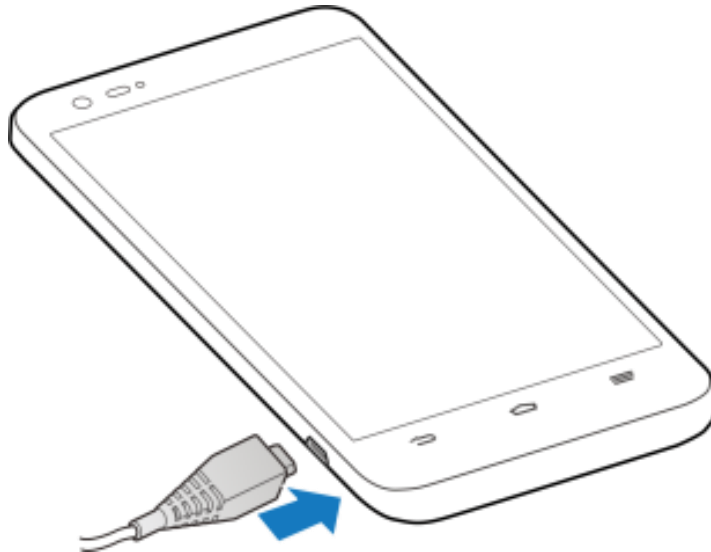

7. Connect the charger to a standard AC power outlet.
8. Disconnect the charger when the battery is fully charged.

Powering On/Off Your Phone

Make sure the battery is charged before powering on.

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off** > **OK**.

Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application shortcuts, folders, widgets, and more.



NOTE: Your home screen extends beyond the initial screen, providing more space for shortcuts, widgets, and folders. Simply swipe left or right to see the extended home screens.

Opening Applications

1. Touch the **Home Key** if the current screen is not the home screen.

2. Touch .

3. Slide left or right on the screen and touch an app to open it.

Adding Shortcuts or Widgets

1. Touch the **Home Key** > .

2. If you want to add a widget, touch **Widgets**.

3. Touch and hold a widget or an app icon and drag it to the home screen.

Removing Shortcuts or Widgets

1. Touch and hold a widget or shortcut on the home screen.

2. Drag it to  **Delete** to remove it.

Organizing Shortcuts With Folders

1. Touch and hold the shortcut on the Home Screen you want to add into a folder until  **Folder** appears.
2. Drag the shortcut to  **Folder** and release it. A new folder will be created and the shortcut is added into the folder.

Applying New Wallpapers

You can set the wallpaper for the home screen or lock screen.

1. Touch the **Home Key > Menu Key > Customization settings**.
2. Touch **Wallpaper for home screen** or **Wallpaper for lock screen**.
3. Select a wallpaper source from **Gallery**, **Live Wallpapers**, or **Wallpapers** and touch the image or animation you want to use as the wallpaper.

4. For Gallery images, touch **Done** at the top of the screen. For Live wallpapers or Wallpapers, touch **Set wallpaper**.

Checking the Phone Status

The status bar at the top of the screen displays phone and service status with various icons on the right side. Below are some of the icons and their meanings.

	GPRS connected		No signal
	EDGE connected		Signal strength
	3G connected		Mobile data in use
	HSPA connected		Flight mode
	No SIM card installed		Bluetooth on
	Ringer off		Connected to a Wi-Fi [®] network

	Vibrate mode		Wi-Fi in use
	Battery low		Speaker on
	Battery partially drained		Phone microphone off
	Battery full		Alarm set
	Battery charging		Wired headset connected

Managing Notifications

The status bar at the top of the screen provides notification alerts with different icons on the left side. Below are some of the icons and their meanings.

The notifications depend on the apps installed and you can touch and drag the status bar down to see more information.

	New SMS/MMS		microSDHC card unmounted
	New email		microSDHC card removed
	New Gmail™ message		Upcoming event
	Problem with SMS/MMS delivery		Call on hold
	Missed call		New Wi-Fi network detected
	Call in progress		Downloading data
	USB connected		Sending data
	Song is playing		USB tethering is on
	Updates available		Portable Wi-Fi hotspot

	GPS on		
---	--------	--	--

Setting Ringtone and Sounds

Setting Ringtone or Notification Sound

1. Touch the **Home Key > Menu Key > System settings > Sound**.
2. Touch **Phone ringtone** or **Default notification sound**.
3. Select the ringtone you want to use.
4. Touch **OK**.

Setting System Sounds

1. Touch the **Home Key > Menu Key > System settings > Sound**.
2. Scroll to the **SYSTEM** section and check the sounds you want to hear or uncheck those you do not need.

Adjusting Volumes

To adjust call volume, press the **Volume Key** while on a call. To adjust other volumes, follow the steps below.

1. Touch the **Home Key > Menu Key > System settings > Sound > Volumes**.
2. Drag the sliders to adjust the volume for music, video, games, and other media, the ringtone and notification volume, and the alarm volume.
3. Touch **OK** to save.

TIP: Press and hold the **Power Key** and then touch  to enable the silent mode, touch  to enable the vibration mode, or touch  to disable the silent mode.

Setting a Screen Lock

You can protect your phone by creating a screen lock. When enabled, you need to touch and hold an icon, draw a pattern, or enter a numeric PIN or password to unlock the phone's screen and keys.

1. Touch the **Home Key > Menu Key > System settings > Security > Screen lock**.
2. Touch **Long press, Pattern, PIN or Password**.
 - ▶ Touch **Long press** to enable unlock with a 'touch and hold' gesture. You can unlock the screen by touching and holding  at the center of the display.
 - ▶ Touch **Pattern** to create a pattern that you must draw to unlock the screen.
 - ▶ Touch **PIN or Password** to set a numeric PIN or a password you must enter to unlock your screen.

Checking Voicemail

1. Touch the **Home Key >** .
2. In the dialer tab , touch and hold . If prompted, enter your voicemail password.
3. Follow the voice prompts to listen to and manage your voicemail messages.

Making a Call

1. Touch the **Home Key** > .
2. In the dialer tab , enter the phone number with the on-screen keypad. Touch  to delete incorrect digits.
3. Touch the  icon below the keypad to make the call.

NOTE: To call a contact, touch the **Home Key** >  >  and touch a contact or a number.

Adding Contacts

Creating a New Contact

1. Touch the **Home Key** >  and touch the all contacts tab .
2. Touch , or **Create a new contact** (if there are no contacts).

3. Enter the contact name, phone numbers, email addresses, and other information, as shown. Touch **Save** to save the contact.

Importing Contacts in Batches

1. Touch the **Home Key** > .
2. Touch the **Menu Key** > **Import/export** > **Import from SIM card** or **Import from SD card**.
3. If prompted, select an account in which to save the contacts.
4. For importing from the SIM card, touch all the SIM contacts you want to import and touch .
For importing from the microSDHC card, select the vCard file(s) on the microSDHC card and touch **OK** to begin importing.

Sending a Message

1. Touch  in the home screen and select **Messaging**, then touch .

2. Enter the recipient(s) and message text. If you want to send an MMS, add subject and attachments.

3. Touch  to send the message.

Setting Up Email Accounts

Setting Up Gmail

1. Touch  in the home screen and select **Gmail**.
2. Touch **Existing** to sign in to your existing Google Account. If you have no Google Accounts, touch **New** to create one.
3. Follow the instructions on the screen to set up the account.

Setting Up Email

1. Touch  in the home screen and select **Email**.
NOTE: If another email account is already set up, touch the **Menu Key > Account settings > Add account**.
2. Enter the email address and password.

3. Touch **Next** and follow the onscreen instructions.

Setting Up an Exchange ActiveSync® Account

1. Touch  in the home screen and select **Email**.
NOTE: If another email account is already set up, touch the **Menu Key > Account settings > Add account**.
2. Enter the email address and password.
3. Touch **Manual setup > Exchange**.
4. If necessary, edit **Domain\Username**, **Password**, and **Server** information.
5. Read the onscreen activation disclaimer and, if prompted, touch **Next**.
6. If prompted, touch **OK** to allow the server to remotely control some of your phone's security features.
7. Configure the settings on the screen, such as **Days to sync**, and then touch **Next**.

8. If prompted, touch **Activate** to activate the Email app as a device administrator.
9. Identify your new account with a unique name and then touch **Next**.

Contact your server administrator for more help.

Connecting With a Bluetooth Headset

1. Turn on the Bluetooth headset and switch it to pairing mode. Refer to the headset's user guide for more information.
2. Touch  in the home screen and select **Settings > Bluetooth**.
3. Slide the **ON/OFF** switch if Bluetooth is off. When Bluetooth is on, the  icon appears in the status bar.
NOTE: Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range. You could touch **Search for devices** if you wanted to scan again.
4. Touch the ID of the headset, or any other device you want to

pair with your phone. Enter a passcode if prompted.

5. If necessary, touch the ID of the paired headset to connect with it. Once connected, the  icon in the status bar turns blue.

TIP: Touch the ID again to end the connection.

Installing Apps From the Google Play™ Store

There are tens of thousands of games and applications in the Google Play Store for you to download and install. You can send feedback or comments on an application.

Before you begin, make sure that you have signed in to your Google account.

NOTE: The content you can access in the Play Store depends on your region and your service provider.

1. Touch the **Home Key** >  > **Play Store**.
The first time you launch **Play Store**, accept the Google Play Terms of Service.

2. Find the apps you need either by category or by touching .
3. Touch the app to see detailed description.
4. Touch **INSTALL** (free apps) or the price (paid apps). If the app is not free, you need to sign in to your Google Wallet™ account and select a payment method.

CAUTION: Once installed, some apps can access many functions or a significant amount of your personal data. The Play Store will show you what the app can access. Touch **ACCEPT** to proceed, or touch the **Back Key** to cancel.

5. Wait for the app to be downloaded and installed automatically. Payment needs to be authorized before paid apps start downloading.

The app is successfully installed when the  icon appears in the status bar. You can find the new app after touching the **Home Key** > .

Taking a Photo

1. Touch  in the home screen and select **Camera**.

2. Aim the camera at the subject and make any necessary adjustment.



Number	Function
1	Switch between the front and back camera.
2	Change the flash setting, only available for the back camera.
3	Select color effect (only available for the back camera).
4	Select scene mode (only available for the back camera). You can take panoramic pictures, take consecutive snapshots or enable smile

Number	Function
	detection.
5	Change the camera settings.
6	Slide to zoom in or out.
7	View pictures and videos you have taken.
8	Touch the shutter button to take a picture.
9	Switch between the camera and camcorder.

3. If **Touch AF/AEC** is turned on in camera settings, touch the area where you want the camera to focus. Green brackets appear around the focused area.
4. Lightly touch  or press the **Camera Key** to take a photo.

Recording a Video

1. Touch  in the home screen and select **Camera**, or switch to the camcorder from the camera screen.
2. Aim the camera at the subject and make any necessary adjustment.



Number	Function
1	Switch between the front and back camera.
2	Turn on/off flash.
3	Change camcorder settings.
4	Slide to zoom.
5	View photos and videos you have captured.
6	Start/end video recording.
7	Switch to camera mode.

3. Touch  to start and  to stop recording.

TIP: While the recording is in progress, you can touch the preview screen to save the frame as a photo.

Music

1. Touch  in the home screen and select **Music**.
2. Touch a category, such as Artists or Albums, to find the song you want to play.
3. Touch the song to play it back.



Number	Function
1	Song and artist information.
2	Album artwork.
3	Touch to play the current playlist in toggle repeat mode: repeating all songs, repeating current song.
4	Touch to open the current playlist.
5	Touch to add the song to Favorite .

6	Touch to turn the shuffle mode on or off.
7	Playback control. Skip songs, pause and resume playback, use shuffle or repeat. Drag the progress bar to jump to any part of the song.

Connecting to PC

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in either direction. Your device stores these files in internal storage or on a removable microSDHC card.

1. Touch and hold the status bar across the top of the screen and flick down.
2. Touch  (**Connected as** [current connection mode]).
3. Choose one of the following options:
 - ▶ **USB Mass storage:** Transfer files between your device and the computer.
 - ▶ **Media device (MTP):** Transfer media files on Windows[®], or using Android File Transfer on Mac[®].

- ▶ **Camera (PTP):** Transfer photos using camera software, and transfer any files on computers that don't support MTP.
- ▶ **Share mobile network:** Turn on USB tethering and share your phone's mobile data with the PC.
- ▶ **Install driver:** Install the driver needed for connecting your phone to your PC.
- ▶ **Connect to PC software:** Connect to PC to sync data or install apps via PC software.

To disconnect the device from the computer, simply unplug the USB cable when you're finished.

Connecting to the Internet

Connecting via Wi-Fi

1. Touch the **Home Key > Menu Key > System settings > Wi-Fi**.
2. Slide the ON/OFF switch if Wi-Fi is off.

Your phone automatically searches for Wi-Fi networks in

range and displays their names and security settings. Your phone also connects to previously linked networks when they are in range.

3. Touch a network name to connect to it.

If the network is secured, enter a password or other credentials. (Ask your network administrator for details.)

Connecting via Mobile Network

To connect to the Internet via mobile network you can use the default Access Point Names (APN). If you want to add a new APN, please contact the service provider to get the necessary information. Do not change the default settings unless instructed by the service provider. Otherwise the service might stop working.

1. Touch the **Home Key > Menu Key > System settings > Mobile networks > Access Point Names**.
2. Touch the **Menu Key > New APN**.
3. Touch each item to enter the information you get from your service provider.

4. Touch the **Menu Key > Save** to complete.

Connecting via Bluetooth Tethering

You can connect to a device that supports Bluetooth tethering to share the device's Wi-Fi or mobile data service with your phone.

1. Enable the device's Bluetooth and Bluetooth tethering capabilities. Make sure the device is 'visible'. Refer to the device's user guide for more information.
2. Touch  in the home screen and select **Settings > Bluetooth**.
3. Turn Bluetooth on and touch the device's ID to pair the phone with the device. Enter a passcode if prompted.
4. Touch  next to the paired device and then check **Internet access**. As the  icon in the status bar turns blue, your phone is able to use data connection shared by the device.

Extending Battery Life

There are several things you can do to make your battery last

longer.

- Turn on Wi-Fi, Bluetooth, GPS, mobile data, auto-sync only when you need to.
- Lower the screen brightness.
- Use Bluetooth tethering or USB tethering (when you have a cable) instead of portable Wi-Fi hotspot to share your phone's data service.
- From the home screen, touch  > **Task Manager** and close the apps you do not need but still run in the background.
- From the home screen, touch  > **Settings** > **Sound** and uncheck **Vibrate on touch**.

Freeing Up Memory Space

Use **Task Manager** to free up memory space and optimize system speed.

1. From the home screen, touch  > **Task Manager**.

2. Touch the **Tasks** tab and touch  next to the application you do not need.
You can also touch **Close All** to stop all running applications.

Managing the Phone Storage

Deleting Old Messages

You can manually delete old messages to free up some storage space. You may also set up auto deletion of the oldest messages when the limits are reached.

1. From the home screen, touch  > **Messaging**.
2. Touch the **Menu Key** > **Settings**.
3. Check **Delete old messages** to enable auto deletion.
4. Touch **Text message limit** or **Multimedia message limit** to set the maximum limit.
5. Touch **Set**.

Clearing Browser's Local Content

1. From the home screen, touch  > **Browser**.
2. Touch the **Menu Key > Settings > Privacy & security**.
3. Touch **Clear cache, Clear history, and Clear all cookie data**.

Product Safety Information

	Do not use hand-held while driving		Do not use while re-fuelling
	For body-worn operation maintain a separation of 15 mm		This device may produce a bright or flashing light
	Small parts may cause a choking hazard		Do not dispose of it in a fire
	This device may produce a loud sound		To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Avoid contact with magnetic media		Avoid Extreme Temperatures

	Keep away from pacemakers and other personal medical devices		Avoid any contact with liquid, keep it dry
	Switch off when instructed in hospitals and medical facilities		Do not attempt to disassemble
	Switch off when instructed in aircrafts and airports		Only use approved accessories
	Switch off in explosive environments		Do not rely on this device for emergency communications

Declaration of RoHS Compliance

To minimize the environmental impacts and take more responsibilities to the earth we live on, this document shall serve as a formal declaration that the ZTE-V975 manufactured by ZTE CORPORATION is in compliance with the Directive 2011/65/EU of the European Parliament - RoHS (Restriction of Hazardous Substances) with respect to the following substances:

1. Lead (Pb)
2. Mercury (Hg)
3. Cadmium (Cd)
4. Hexavalent Chromium (Cr (VI))
5. Polybrominated biphenyls (PBBs)
6. Polybrominated diphenyl ethers (PBDEs)

The ZTE-V975 manufactured by ZTE CORPORATION meets the requirements of EU 2011/65/EU.

Disposal of Your Old Appliance



1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2012/19/EU.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

For this product's recycling information based on WEEE directive, please send an e-mail to weee@zte.com.cn

This equipment may be operated in:				AT	BE
CY	CZ	DK	EE	FI	FR
DE	GR	HU	IE	IT	LV
LT	LU	MT	NL	PL	PT
SK	SI	ES	SE	GB	IS
LI	NO	CH	BG	RO	TR