



# **ZTE Star 1 User Manual**

## About This Manual

Thank you for choosing this ZTE mobile device. In order to keep your device in its best condition, please read this manual and keep it for future reference.

### Copyright

**Copyright © 2014 ZTE CORPORATION**

**All rights reserved.**

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

### Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice. This manual has been designed with the utmost care to ensure the accuracy of its content. However, all statements, information and recommendations contained therein do not constitute a warranty of any kind, either expressed or implied. Please refer to [For Your Safety](#) to be sure to use your phone properly and safely. We offer self-service for our smart terminal device users. Please visit the ZTE official website (at [www.ztedevice.com](http://www.ztedevice.com)) for more information on self-service and supported product models. Information on the website takes precedence.

### Disclaimer

ZTE Corporation expressly disclaims any liability for faults and

damages caused by unauthorized modifications of the software. Images and screenshots used in this manual may differ from the actual product. Content in this manual may differ from the actual product or software.

## **Trademarks**

ZTE and the ZTE logos are trademarks of the ZTE Corporation.

Google and Android are trademarks of Google, Inc.

The *Bluetooth*<sup>®</sup> trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

microSDHC logo  is a trademark of the SD-3C, LLC.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Other trademarks and trade names are the property of their respective owners.

**Version No.:** R1.0

**Edition Time :** Sep 16, 2014

# Contents

|                                                         |           |
|---------------------------------------------------------|-----------|
| <b>Getting Started .....</b>                            | <b>11</b> |
| Getting to Know Your Phone .....                        | 11        |
| Knowing the Keys .....                                  | 12        |
| Installing the micro-SIM Card and microSDHC™ Card ..... | 12        |
| Charging the Battery .....                              | 14        |
| Extending the Battery Life .....                        | 16        |
| Powering On/Off .....                                   | 17        |
| Restarting the Phone .....                              | 17        |
| Setting Up for the First Time .....                     | 17        |
| Locking/Unlocking the Screen and Keys .....             | 18        |
| Using the Touch Screen .....                            | 19        |
| Getting to Know the Home Screen .....                   | 20        |
| <b>Personalizing.....</b>                               | <b>22</b> |
| Changing the System Language .....                      | 22        |
| Setting the Date and Time.....                          | 22        |
| Changing Ringtone and Notification Sound .....          | 22        |
| Turning On/Off Touch Sound.....                         | 23        |
| Adjusting Volume.....                                   | 23        |
| Switching to Silent Mode.....                           | 24        |
| Applying New Wallpapers .....                           | 24        |
| Changing Screen Brightness .....                        | 25        |
| Protecting Your Phone With Screen Locks .....           | 25        |
| Protecting Your Phone With Encryption.....              | 26        |
| <b>Knowing the Basics .....</b>                         | <b>29</b> |

|                                                 |           |
|-------------------------------------------------|-----------|
| Monitoring the Phone Status .....               | 29        |
| Managing Notifications .....                    | 30        |
| Managing Shortcuts and Widgets .....            | 33        |
| Organizing With Folders .....                   | 34        |
| Rearranging the Favorites Tray .....            | 35        |
| Entering Text .....                             | 36        |
| Editing Text .....                              | 38        |
| Opening and Switching Apps .....                | 39        |
| <b>Connecting to Networks and Devices .....</b> | <b>41</b> |
| Connecting to Mobile Networks .....             | 41        |
| Connecting to Wi-Fi® .....                      | 42        |
| Connecting to Bluetooth® Devices .....          | 45        |
| Connecting to Your Computer via USB .....       | 49        |
| Sharing Your Mobile Data Connection .....       | 51        |
| Connecting to Virtual Private Networks .....    | 54        |
| <b>Phone .....</b>                              | <b>56</b> |
| Placing and Ending Calls .....                  | 56        |
| Answering or Rejecting Calls .....              | 57        |
| Calling Your Contacts .....                     | 58        |
| Checking Voicemail .....                        | 58        |
| Using Options During a Call .....               | 59        |
| Managing Multi-party Calls .....                | 60        |
| <b>People .....</b>                             | <b>62</b> |
| Checking Contact Details .....                  | 62        |
| Adding a New Contact .....                      | 62        |

|                                                  |           |
|--------------------------------------------------|-----------|
| Setting Up Your Own Profile.....                 | 63        |
| Importing, Exporting, and Sharing Contacts ..... | 63        |
| Working With Favorite Contacts .....             | 65        |
| Working With Groups.....                         | 66        |
| Searching for a Contact .....                    | 67        |
| Editing Contacts.....                            | 68        |
| <b>Accounts.....</b>                             | <b>70</b> |
| Adding or Removing Accounts .....                | 70        |
| Configuring Account Sync.....                    | 71        |
| <b>Email .....</b>                               | <b>73</b> |
| Setting Up the First Email Account.....          | 73        |
| Checking Your Emails.....                        | 73        |
| Responding to an Email.....                      | 74        |
| Writing and Sending an Email .....               | 75        |
| Adding and Editing Email Accounts.....           | 76        |
| Changing General Email Settings .....            | 77        |
| <b>Gmail™ .....</b>                              | <b>78</b> |
| Opening Your Gmail Inbox .....                   | 78        |
| Switching Accounts.....                          | 78        |
| Writing and Sending a Message.....               | 79        |
| Replying to or Forwarding a Message .....        | 79        |
| Working With Received Attachments.....           | 80        |
| Working With Labels.....                         | 80        |
| Changing Gmail Settings .....                    | 81        |
| <b>Messaging .....</b>                           | <b>82</b> |

|                                              |           |
|----------------------------------------------|-----------|
| Opening the Messaging Screen .....           | 82        |
| Sending a Message .....                      | 82        |
| Replying to a Message.....                   | 83        |
| Forwarding a Message.....                    | 84        |
| Copying a Message .....                      | 84        |
| Changing Message Settings.....               | 84        |
| <b>Calendar .....</b>                        | <b>85</b> |
| Viewing Your Calendars and Events .....      | 85        |
| Creating an Event .....                      | 86        |
| Editing or Deleting an Event .....           | 87        |
| Changing Calendar Settings.....              | 87        |
| <b>Google+™ .....</b>                        | <b>88</b> |
| Getting Started With Google+ .....           | 88        |
| Signing out of Google+ .....                 | 89        |
| <b>Browser .....</b>                         | <b>90</b> |
| Opening the Browser .....                    | 90        |
| Downloading Files.....                       | 91        |
| Changing Browser Settings .....              | 91        |
| <b>Maps .....</b>                            | <b>92</b> |
| Activating Location Services.....            | 92        |
| Getting Your Location .....                  | 92        |
| Searching for a Location .....               | 93        |
| Getting Directions to Your Destination ..... | 93        |
| <b>Google Now™ and Search .....</b>          | <b>95</b> |

|                                          |            |
|------------------------------------------|------------|
| Enabling Google Now .....                | 95         |
| Searching With Text .....                | 95         |
| Searching by Speaking .....              | 96         |
| Changing Search Settings .....           | 96         |
| <b>Camera.....</b>                       | <b>97</b>  |
| Capturing a Photo.....                   | 97         |
| Recording a Video .....                  | 98         |
| Customizing Camcorder Settings.....      | 99         |
| <b>Gallery.....</b>                      | <b>101</b> |
| Opening Gallery.....                     | 101        |
| Working With Albums.....                 | 101        |
| Working With Pictures.....               | 101        |
| Retouching Your Pictures.....            | 103        |
| Working With Videos.....                 | 104        |
| <b>Music.....</b>                        | <b>105</b> |
| Copying Music Files to Your Phone .....  | 105        |
| Viewing Your Music List .....            | 106        |
| Set a Song as the Default Ringtone ..... | 106        |
| Playing Music .....                      | 107        |
| Managing Playlists .....                 | 108        |
| <b>Play Music .....</b>                  | <b>109</b> |
| Playing Your Music .....                 | 109        |
| Managing Playlists.....                  | 111        |
| <b>Video .....</b>                       | <b>112</b> |

 


|                                          |            |
|------------------------------------------|------------|
| Opening the Video Library .....          | 112        |
| Playing and Controlling Videos .....     | 112        |
| Managing Video Files .....               | 112        |
| <b>Sound Recorder .....</b>              | <b>114</b> |
| Recording a Voice Memo .....             | 114        |
| Playing a Voice Memo .....               | 114        |
| <b>More Apps .....</b>                   | <b>116</b> |
| File Manager .....                       | 116        |
| Calculator .....                         | 116        |
| Clock .....                              | 116        |
| Downloads .....                          | 117        |
| Flashlight .....                         | 118        |
| NotePad .....                            | 118        |
| YouTube .....                            | 118        |
| <b>Google Play™ Store .....</b>          | <b>119</b> |
| Browsing and Searching for Apps .....    | 119        |
| Downloading and Installing Apps .....    | 119        |
| Creating a Google Wallet™ Account .....  | 120        |
| Requesting a Refund for a Paid App ..... | 121        |
| Managing Your Downloads .....            | 121        |
| <b>Settings .....</b>                    | <b>123</b> |
| Network .....                            | 123        |
| Personal .....                           | 125        |
| Operation .....                          | 127        |
| System .....                             | 128        |

|                                   |            |
|-----------------------------------|------------|
| <b>Troubleshooting.....</b>       | <b>134</b> |
| <b>For Your Safety .....</b>      | <b>140</b> |
| General Safety.....               | 140        |
| Distraction .....                 | 141        |
| Product Handling .....            | 142        |
| Electrical Safety.....            | 146        |
| Radio Frequency Interference..... | 147        |
| Explosive Environments.....       | 148        |

# Getting Started

## Getting to Know Your Phone

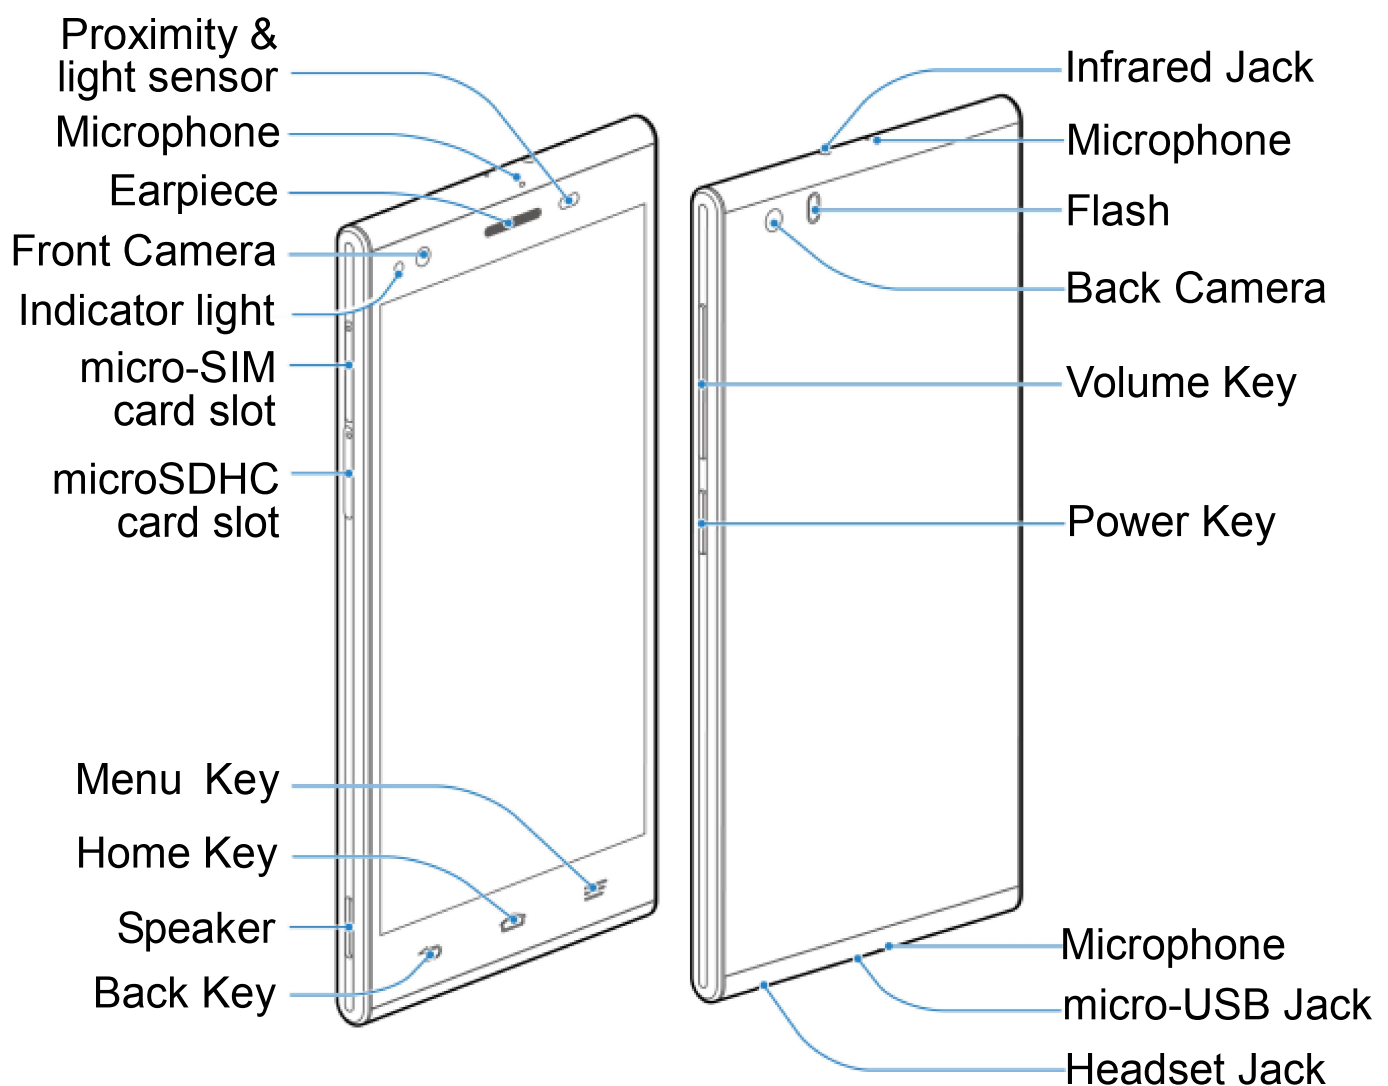


## Knowing the Keys

| Key         | Function                                                                                                                                                                                                                                     |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power Key   | <ul style="list-style-type: none"><li>• Press and hold to turn on or off airplane mode, enable silent mode, vibration mode or sound, or to power off your phone.</li><li>• Press to switch your phone to Sleep mode or wake it up.</li></ul> |
| Home Key    | <ul style="list-style-type: none"><li>• Touch to return to the Home Screen from any application or screen.</li><li>• Touch and hold to use Google search.</li></ul>                                                                          |
| Menu Key    | <ul style="list-style-type: none"><li>• Touch to get the options for the current screen.</li><li>• Touch and hold to see recently used applications.</li></ul>                                                                               |
| Back Key    | Touch to go to the previous screen.                                                                                                                                                                                                          |
| Volume Keys | Press or hold to turn the volume up or down.                                                                                                                                                                                                 |


## Installing the micro-SIM Card and microSDHC™ Card

Switch off your phone before installing or removing the micro-SIM card or the microSDHC card (sold separately). [Unmount the microSDHC card](#) before removing it.

 1. Use the tray eject tool to take out the card tray.

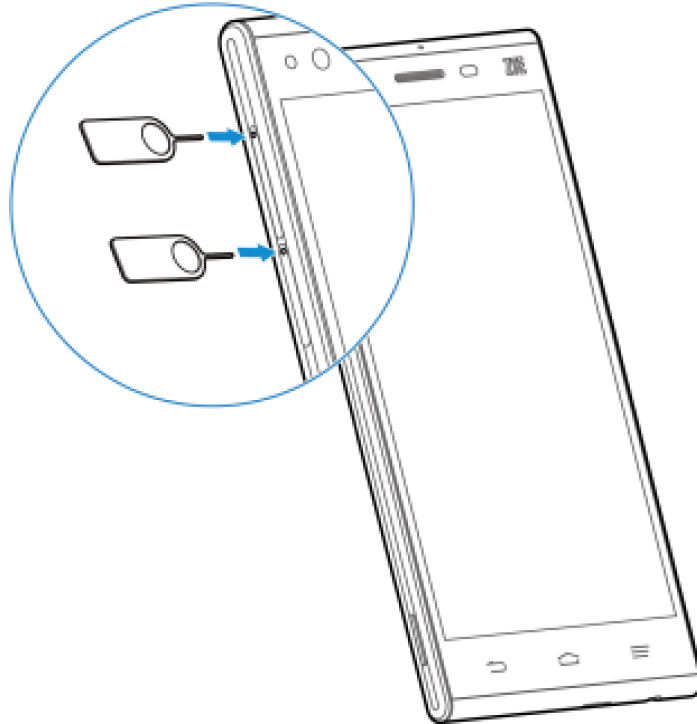

 2. Put the micro-SIM card and microSDHC card into the card tray with the cut corner oriented as shown and slip it into the card slot.

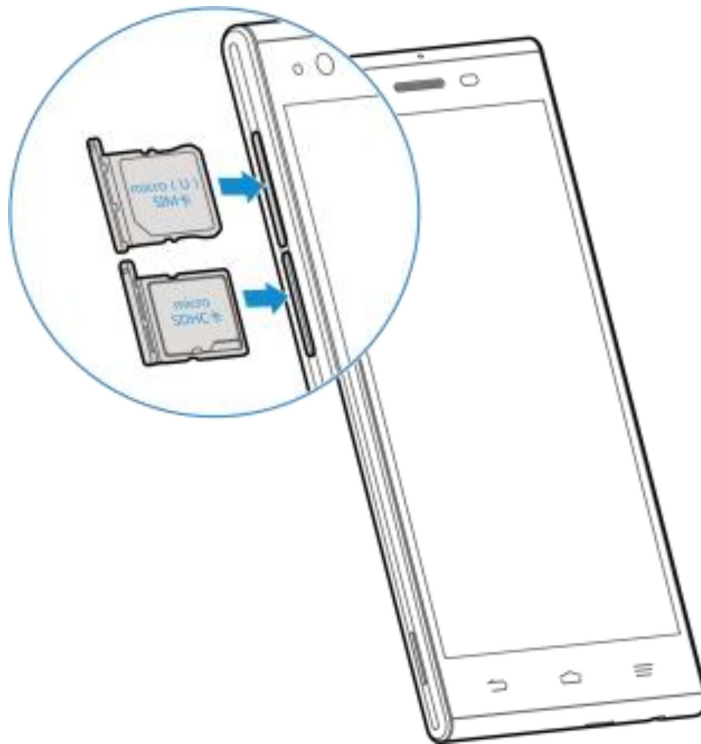

## **WARNING!**

To avoid damage to the phone, do not use any other kind of SIM card, or any non-standard micro-SIM card cut from a SIM card. You can get a standard micro-SIM card from your service provider.



## **NOTE:**

microSDHC logo  is a trademark of SD-3C, LLC.

## **Charging the Battery**

Your phone's battery should have enough power for the phone to turn on, find a signal, and make a few calls. You should fully charge the battery as soon as possible.

If the battery is low, there will be a pop-up message on the screen. As you charge your phone, the screen will tell you the exact battery level each time you wake up your phone.



### **WARNING!**

 
Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.



### **CAUTION:**

Do not change the built-in rechargeable battery in your phone by yourself. The battery can only be changed by ZTE or ZTE authorised service provider.

1. Connect the adapter to the charging jack. Ensure that the adapter is inserted with the correct orientation. Do not force the connector into the charging jack.

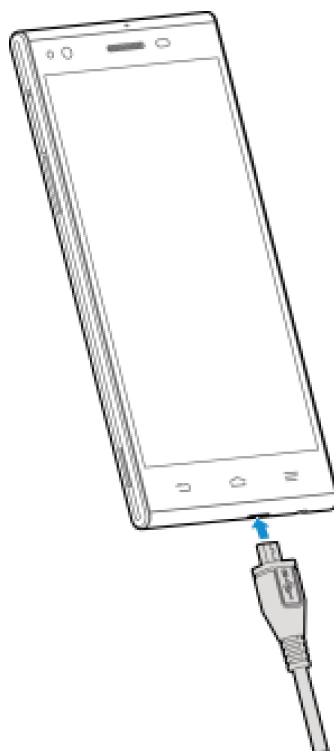

2. Connect the charger to a standard AC wall outlet. If the phone is on, you'll see a charging icon, such as  or  , appear on the status bar.
3. Disconnect the charger when the battery is fully charged.

**NOTE:**

If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 10 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

## Extending the Battery Life

Active applications, screen brightness levels, Wi-Fi usage and GPS functionality and other certain features can all drain your battery. You can follow the helpful tips below to conserve your battery power:

- Reduce the screen backlight time.
- Lower the screen brightness.
- Turn auto-sync, Wi-Fi, and Bluetooth off when not in use.
- Disable the GPS function when not in use. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.



## Powering On/Off

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu. Touch **Power off** and then touch **OK**.

## Restarting the Phone

If the screen freezes or takes too long to respond, try pressing and holding the **Power Key** for about 15 seconds to restart the phone.

## Setting Up for the First Time

When you first power on your phone after you purchase it or reset it to factory settings (see [Settings – System – Factory data reset](#)), you need to do some settings before using it.

4. Flick the language field to select the language and touch . Then follow the prompts to download applications, select theme, and other options.



### NOTE:

If the micro-SIM is not installed, the phone would prompt you to connect to a Wi-Fi network before asking you to sign in to a Google account.

# Locking/Unlocking the Screen and Keys

Your phone allows you to quickly lock the screen and keys (put the phone into sleep mode) when not in use and to turn the screen back on and unlock it when you need it.

## To lock the screen and keys:

To quickly turn the screen off and lock the keys, press the **Power Key**.



### NOTE:

To save battery power, the phone automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages and calls while the phone screen is off.

## To unlock the screen and keys:

5. Press the **Power Key** to turn the screen on.
6. Touch and hold any blank area of the screen to unlock it.



### NOTE:

If you have set an unlock pattern, PIN or Sound Unlock for your phone (see the chapter [Personalizing – Protecting Your Phone With Screen Locks](#)), you'll need to draw the pattern or enter the PIN/ Sound Unlock to unlock your screen.

# Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

- Touch

When you want to type using the onscreen keyboard, select onscreen items such as application and settings icons, or press onscreen buttons, simply touch them with your finger.

- Touch and Hold

To open the available options for an item (for example, a message or link in a Web page), touch and hold the item.

- Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.

- Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.

- Pinch

In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

 
- Rotate the screen

For most screens, you can automatically change the screen

orientation from portrait to landscape by turning the phone sideways.

## Getting to Know the Home Screen

The home screen is the starting point for your phone's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more. Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

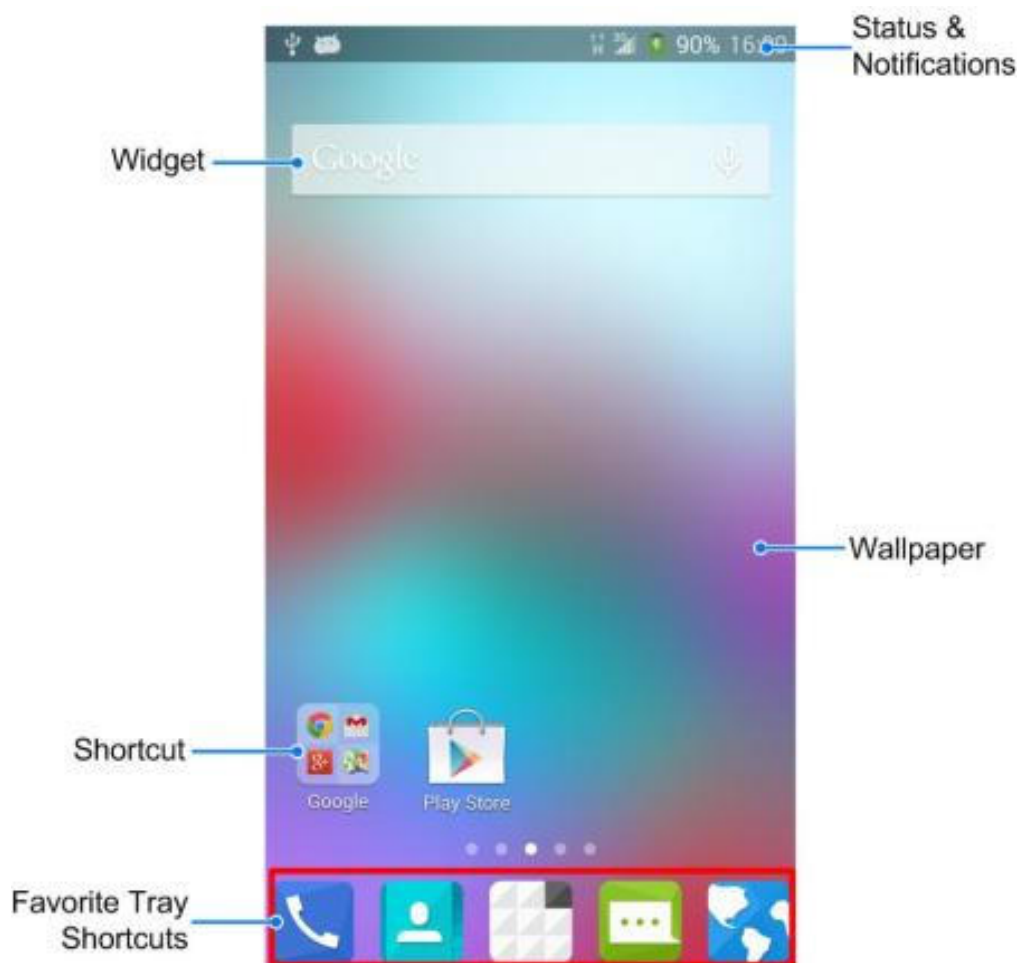

## **Extended Home Screens**

Your home screen extends beyond the initial screen, providing more space to add icons, widgets, and more. Simply swipe left or right on the screen to see the extended Home Screens.

# Personalizing

## Changing the System Language

1. Touch the **Home Key > Menu Key > System settings > System > Language & input > Language**.
2. Select the language you need.

## Setting the Date and Time

1. Touch the **Home Key > Menu Key > System settings > System > Date & time**.
2. Uncheck **Automatic date & time** and **Automatic time zone** if you want to set the date, time and time zone by yourself.
3. Set the date, time, time zone, and date/time format.

## Changing Ringtone and Notification Sound

You can customize the default ringtone for incoming calls and the default notification sound quickly.

1. Touch the **Home Key > Menu Key > System settings > Personal > Sound**.
2. Touch **Phone ringtone** or **Notification tone**.
3. Scroll through the ringtone list and select the ringtone you

want to use.

4. Touch **OK**.



**NOTE:**

See chapter [\*People – Editing Contacts – Set a Ringtone for a Contact\*](#) for how to assign a special ringtone to an individual contact.

## Turning On/Off Touch Sound

1. Touch the **Home Key > Menu Key > System settings > Personal > Sound settings**.
2. Check or uncheck **Touch sounds**.

## Adjusting Volume

1. Touch the **Home Key > Menu Key > System settings > Personal > Volumes**.
2. Drag the sliders to adjust the volume for each type of audio.
3. Touch **OK** to save.



**NOTE:**

You can adjust the media volume when a media application is in use by pressing the **Volume Up/Down Key**. If no media application is active, press the **Volume Up/Down Key** to adjust ringtone volume (or the earpiece volume during a call).

## Switching to Silent Mode

You can set the phone to silent mode by using one of the following methods.

- Press and hold the **Power Key** and then touch  to enable silent mode, touch  to enable silent mode with vibration, or touch  to disable silent mode.
- Keep pressing the **Volume Down Key** when no media application is active. When the  icon appears on the status bar, the phone is set to silent mode with vibration. When the  icon appears on the status bar, the phone is in silent mode.

## Applying New Wallpapers

You can set the wallpaper for the Home Screen or Lock Screen.

1. Touch the **Home Key > Menu Key > System settings > Personal > Wallpaper**.
2. Touch **Wallpaper for both, Home or Lock screen**.
3. Select a wallpaper source from **Gallery, Live Wallpapers, Photos or Wallpapers** and choose the image or animation you want to use as the wallpaper. Some cropping may be needed for **Gallery** images.
4. For Gallery images, touch **SAVE**. For Photos images, touch **SETWALLPAPER**. For Live wallpapers or Wallpapers, touch



**Set wallpaper..**



**NOTE:**

**Live Wallpapers** are not available for the Wallpaper for both. **Live Wallpapers and Photos** are not available for the Lock Screen.

## Changing Screen Brightness

1. Touch the **Home Key > Menu Key > System settings > Personal > Brightness**.
2. Check the **Automatic brightness** box to make the phone adjust the screen brightness automatically, or clear the checkbox to adjust the brightness manually.
3. Touch **OK**.

## Protecting Your Phone With Screen Locks

You can protect your phone by creating a screen lock. When it is enabled, you need to touch and hold certain icon, look at the front camera, draw a pattern or enter a numeric PIN or a password to unlock the phone's screen and keys.

1. Touch the **Home Key > Menu Key > System settings > System > Security**.
2. Touch **Screen lock**.
3. Touch **None, Long Press, Pattern, PIN**.

- ▶ Touch **Long Press** to enable screen lock and allow unlock with a 'touch and hold' gesture. You can unlock the screen by touching and holding any blank area of the screen to unlock it.
- ▶ If you touch **Pattern**, you're guided to create a pattern you must draw to unlock the screen. The first time you do this, a short tutorial about creating an unlock pattern appears. Then you're prompted to draw and redraw your own pattern.
- ▶ If you touch **PIN**, you're prompted to set a numeric PIN or a password you must enter to unlock your screen.



#### **NOTE:**

Screen lock options are listed in the approximate order of the strength of their security, starting with **None** and **Long Press**, which provide no security. A pattern provides minimal security, although it can be more convenient than the stronger options.

## Protecting Your Phone With Encryption

You can encrypt all the data on your phone: Google Accounts, application data, music and other media, downloaded information, and so on. If you do, you must enter a numeric PIN or a password each time you power on your phone.



#### **WARNING!**

Encryption is irreversible. The only way to revert to an unencrypted phone is to perform a factory data reset which erases all your data.

Encryption provides additional protection in case your phone is stolen and may be required or recommended in some organizations. Consult your system administrator before turning it on. In many cases the PIN or password you set for encryption is controlled by the system administrator.

Before turning on encryption, prepare as follows:

- Set a lock screen PIN.
- Charge the battery.
- Keep the phone connected to the charger.
- Schedule an hour or more for the encryption process. You must not interrupt it or you will lose some or all of your data.

When you're ready to turn on encryption:

4. Touch the **Home Key > Menu Key > System settings > System > Security > Encrypt phone**.
5. Read the information about encryption carefully.

The **Encrypt phone** button is dimmed if your battery is not charged or your phone is not plugged in.

If you change your mind about encrypting your phone, touch the **Back Key**.



### **WARNING!**

If you interrupt the encryption process, you will lose data.

6. Touch **Encrypt phone**.
7. Enter your lock screen PIN or password and touch **Next**.
8. Touch **Encrypt phone** again.

The encryption process starts and displays its progress.

Encryption can take an hour or more, during which time your phone may restart several times.

When encryption is completed, you're prompted to enter your PIN or password.

Subsequently you must enter your PIN or password each time you power on your phone in order to decrypt it.

# Knowing the Basics

## Monitoring the Phone Status

The status bar at the top of the home screen provides phone and service status icons on the right side. Below are some of the icons you may see.

|                                                                                     |                |                                                                                     |                             |
|-------------------------------------------------------------------------------------|----------------|-------------------------------------------------------------------------------------|-----------------------------|
|    | GPRS connected |    | No signal                   |
|   | EDGE connected |    | Signal strength             |
|  | 3G connected   |  | Mobile data in use          |
|  | HSPA connected |  | No micro-SIM card installed |
|  | 4G connected   |  | Alarm set                   |
|  | Flight mode    |  | Ringer off                  |
|  | Battery dead   |  | Vibrate mode                |
|  | Battery low    |  | Bluetooth on                |

|                                                                                   |                           |                                                                                   |                              |
|-----------------------------------------------------------------------------------|---------------------------|-----------------------------------------------------------------------------------|------------------------------|
|  | Battery charging          |  | Connected to a Wi-Fi network |
|  | Battery partially drained |  | Wi-Fi in use                 |
|  | Battery full              |  | Wired headset connected      |

## Managing Notifications

### Notification Icons

The status bar at the top of the home screen provides notification icons on the left. Below are some of the icons you may see.

|                                                                                     |                               |                                                                                     |                             |
|-------------------------------------------------------------------------------------|-------------------------------|-------------------------------------------------------------------------------------|-----------------------------|
|  | New SMS                       |  | Upcoming event              |
|  | New MMS                       |  | New Wi-Fi network detected  |
|  | New Email                     |  | New Gmail message           |
|  | Problem with SMS/MMS delivery |  | Downloading data            |
|  | Missed call                   |  | Sending data                |
|  | Call in progress              |  | Tethering or HotSpot active |

|                                                                                                                                                                       |                 |                                                                                   |                   |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|-----------------------------------------------------------------------------------|-------------------|
|                                                                                      | USB connected   |  | GPS on            |
|  /  | Song is playing |  | Updates available |

## Open/Close the Notification Panel

Notifications report the arrival of new messages, calendar events, and alarms, as well as ongoing events, such as when you've configured your phone as a Wi-Fi hotspot. You can open the notification panel to view the details of notifications.

- To open the notification panel, swipe your finger down from the top of the screen.
- To close the notification panel, swipe your finger up from the bottom of the screen or touch the **Back Key**.

## Respond to or Remove a Notification

In the notification panel, you can respond to a notification or remove the notifications. The notification panel also supports expandable notifications that let you perform additional actions right from the notification itself.

- To respond to a notification, just touch it.
- To remove a notification, swipe it left or right.
- To remove all notifications, touch **Clear** in the top of notifications.

- Touch and hold a notification and then touch **App info** to identify the application that created it. To turn off notifications from that application if needed, uncheck **Show notifications** in the App info screen.



#### **NOTE:**

If you turn off notifications for an app, you may miss its important alerts and updates. The notifications of some apps cannot be turned off.

## **Use Quick Settings**

The Quick Settings in the notification panel make it convenient to view or change the most common settings for your phone.

Open the notification panel and touch **CONTROL SWITCH** to find the following Quick Settings.

- **Brightness:** Touch to adjust the screen brightness.
- **Sound:** Touch to switch between vibration and sound.
- **Vibrate:** Touch to turn on or off vibrate mode.
- **WLAN:** Touch to turn on or off WLAN.
- **Data:** Touch to enable or disable data access over the mobile network.
- **Bluetooth:** Touch to turn on or off Bluetooth.
- **GPS:** Touch to turn on or off the GPS function.
- **Mi\_pop:** Touch to turn on or off the mi\_pop.



- **Airplane mode:** Touch to turn on or off the airplane mode.
- **WLAN hotspot:** Touch to turn on or off Wi-Fi hotspot.
- **Flashlight:** Touch to turn on or off flashlight.
- **Auto-rotate:** Touch to turn on or off the Auto-rotate feature.

## Managing Shortcuts and Widgets

### Add Shortcuts and Widgets

1. Touch the **Home Key**.
2. Touch and hold any blank area of the screen, then the page of widgets will appear.
3. Touch **Widgets** or **Apps** to view the available widgets and shortcuts.
4. Touch and hold a widget or shortcut and drag it to the Home Screen.

### Move Shortcuts or Widgets

1. Touch and hold a widget or shortcut on the Home Screen.
2. Drag it to the place you need.

### Remove Shortcuts or Widgets

1. Touch and hold a widget or shortcut on the Home Screen.
2. Drag it to  **Remove** to remove it.

## Adjust Widget Size

1. Touch and hold a widget on the Home Screen and then release it.
2. An outline appears around the widget. Drag the outline to resize the widget.



### NOTE:

Not all widgets can be resized.

## Organizing With Folders

You can create folders on the Home Screen and add several shortcuts to a folder.

### Create a Folder

1. Touch and hold the shortcut on the Home Screen you want to add into a folder until  Folder appears.
2. Drag the shortcut to  Folder and release it. A new folder will be created and the shortcut is added into the folder.
3. If needed, drag more shortcuts and drop them into the folder.

### Rename a Folder

1. Touch a folder to open it.
2. Touch the folder name field and enter a new name.

## Add Shortcuts to a Folder

1. Touch and hold a shortcut and then drag it onto a folder icon.
2. Release the shortcut and it will be added into the folder.

## Remove Shortcuts From a Folder

1. Touch a folder to open it.
2. Touch and hold the shortcut you want to remove and then drag it to the Home Screen.
3. Release the shortcut and it will be removed from the folder.

## Rearranging the Favorites Tray

The Home Screen includes a customizable favorites tray at the bottom visible from all Home Screens. You can drag apps, shortcuts, folders, and other priority items in or out of the favorites tray for instant access from any Home Screen.



### To remove items from the favorites tray:

Touch and hold an item in the favorites tray and drag it out of the tray.

### To add items to the favorites tray:

Touch and hold an item on the Home Screen and drag it into the favorites tray.

If the favorites tray is full, you need to first remove an item from the tray.

## Entering Text

You can enter text using the onscreen keyboard. Some apps open it automatically. In others, you open it by touching where you want to type. You can touch the **Back Key** to hide the onscreen keyboard.

## Change Input Methods

4. When you use the onscreen keyboard to enter text, the icon  appears on the notification bar.
5. Open the notification panel and touch **Choose input method**.
6. Select an input method you need.

## Android Keyboard

The Android Keyboard provides a layout similar to a desktop computer keyboard. Turn the phone sideways and the keyboard will change from portrait to landscape. The landscape keyboard is not supported in all applications.



- Touch the alphabetic keys to enter letters.
- Touch  to use uppercase or lowercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Touch  to delete the text before the cursor.
- Touch  to select numbers and symbols. You can then touch  to find more.

 
## Input Settings

Choose input settings by touching the **Menu Key > System settings > System > Language & input** from the Home Screen.

In the **KEYBOARD & INPUT METHODS** section, you can set the default input method and choose the settings for input methods.

## Editing Text

- **Move the insertion point:** Touch where you want to type. The cursor blinks in the new position, and a tab appears below it. Drag the tab to move the cursor.
- **Select text:** Touch and hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection.
- **Cut or copy:** Select the text you want to manipulate. Then touch the Cut  or Copy  button to cut or copy the text to the clipboard.
- **Replace text with the clipboard text:** Select the text you want to replace. Then touch  or **PASTE**.

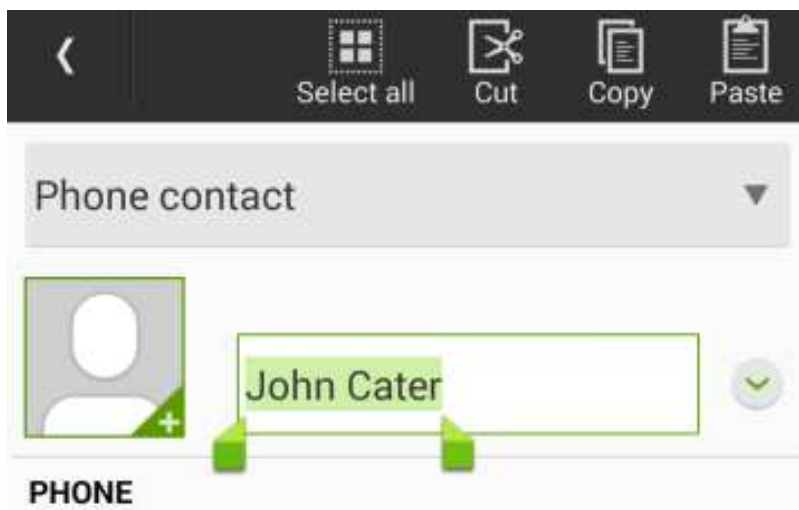

- **Insert text from the clipboard:** Move cursor to the insertion point and then touch and hold the tab below the cursor. Release the finger and touch **PASTE**.



## Opening and Switching Apps

### Open an App

1. Touch the **Home Key** > .
2. Slide left or right on the screen and touch an app to open it.

### Switch Between Recently Opened Apps

1. Touch and hold the **Menu Key**.

A list of the names and thumbnails of apps you've used recently opens. If you've been using more apps recently than can fit on the screen, you can scroll the list up and down.

2. Touch a thumbnail to open that app.



**NOTE:**

You can swipe a thumbnail sideways to remove it from the list.



# Connecting to Networks and Devices

## Connecting to Mobile Networks

### Select Network Operator

1. Touch the **Home Key > Menu Key > System settings > Network > Mobile networks > Network operators**.
2. Touch **Search networks** to search for all available networks.
3. Touch a network in the network list to register manually.

You can also touch **Choose automatically** to select preferred network automatically.

### Control Mobile Data Use

**To enable or disable data access:**

1. Touch the **Home Key > Menu Key > System settings > Network > Mobile networks**.
2. Check **Data enabled** to enable data access over the mobile network. Clear the check box to disable data access.

**To get data services when roaming:**

1. Touch the **Home Key > Menu Key > System settings > Network > Mobile networks**.
2. Check **Data roaming**.



#### **NOTE:**

Data roaming may incur significant roaming charges.

## **Set Access Point Names**

To connect to the Internet you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to get the necessary information.

1. Touch the **Home Key > Menu Key > System settings > Network > Mobile networks > Access Point Names**.
2. Touch the **Menu Key > New APN**.
3. Touch each item to enter the information you get from your service provider.
4. Touch the **Save** to complete.



#### **NOTE:**

To set the APN to default settings, touch the **Menu Key > Reset to default**.

## **Connecting to Wi-Fi®**

Wi-Fi is a wireless networking technology that can provide Internet access at distances of up to 100 meters, depending on the Wi-Fi router and your surroundings.

## Turn Wi-Fi On and Connect to a Wi-Fi Network

1. Touch the **Home Key > Menu Key > System settings > Network > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position to turn on Wi-Fi.
3. Touch a network name to connect to it.
4. If the network is secured, enter the password and touch **Connect**.



### **NOTE:**

Your phone automatically connects to previously used Wi-Fi networks when they are in range.

## Get Notified of Open Networks

1. Touch the **Home Key > Menu Key > System settings > Network > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch the **Menu Key > Advanced**.
4. Check **Network notification**.

When Wi-Fi is on, you receive notifications in the Status bar when your phone detects an open Wi-Fi network. Uncheck the option to turn off notifications.

## Add a Wi-Fi Network

You can add a Wi-Fi network if the network does not broadcast its name (SSID) or add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

1. Touch the **Home Key > Menu Key > System settings > Network > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch **+**.
4. Enter the network SSID (name). If necessary, enter security or other network configuration details.
5. Touch **Save**.

## Forget a Wi-Fi Network

You can make your phone forget about the details of a Wi-Fi network that you added - for example, if you don't want the phone to connect to it automatically or if it is a network that you no longer use.

1. Touch the **Home Key > Menu Key > System settings > Network > Wi-Fi**.
2. Slide the **Wi-Fi** switch to the **ON** position.
3. Touch the Wi-Fi network name and then touch **Forget**.

## Adjust Advanced Wi-Fi Settings

1. Touch the **Home Key > Menu Key > System settings > Network > Wi-Fi**.
2. Touch the **Menu Key > Advanced** to adjust the following settings.
  - ▶ **Network notification:** Get notifications in the status bar when Wi-Fi is on and an open network is available.
  - ▶ **Keep Wi-Fi on during sleep:** Set whether to keep Wi-Fi on in sleep mode.
  - ▶ **Avoid poor connections:** Only use Wi-Fi network when the Internet connection is good.
  - ▶ **Wi-Fi frequency band:** Set the Wi-Fi frequency band.
  - ▶ **Install certificates:** Install certificates needed for connecting to certain Wi-Fi networks.
  - ▶ **Remove all certificates:** Check it to erase the credential storage.
  - ▶ **Wi-Fi optimization:** Minimize battery usage when Wi-Fi is on.
  - ▶ **MAC address:** Check the MAC address.
  - ▶ **IP address:** Check the phone's IP address.

## Connecting to Bluetooth® Devices

Bluetooth® is a short-range wireless communication technology.

Phones or other devices with Bluetooth capabilities can exchange information wirelessly within a distance of about 10 meters. The Bluetooth devices must be paired before the communication is performed.

## Turn Bluetooth On/Off

1. Touch the **Home Key > Menu Key > System settings > Network > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** or **OFF** position.

When Bluetooth is on, the  icon will appear in the status bar.

## Make Your Phone Visible

In order to work with other phones or devices that have Bluetooth, you need to make your phone 'visible' to them.

1. Touch the **Home Key > Menu Key > System settings > Network > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position.
3. Touch your device name on the top of the screen to make your phone visible or invisible.

**NOTE:** Touch the **Menu Key > Visibility timeout** to set the Bluetooth visibility timeout of your phone.

## Change the Device Name

1. Touch the **Home Key > Menu Key > System settings > Network > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position if Bluetooth is off.
3. Touch the **Menu Key > Rename phone**.
4. Edit the name and touch **OK**.

## Pair With Another Bluetooth Device

1. Touch the **Home Key > Menu Key > System settings > Network > Bluetooth**.
2. Slide the **Bluetooth** switch to the **ON** position if Bluetooth is off.

Your phone automatically scans for and displays the IDs of all available Bluetooth devices in range. You could touch **Search for devices** if you want to scan again.

3. Touch the device you want to pair with.
4. Confirm that the Bluetooth passkeys are the same between the two devices and touch **Pair**. Alternately, enter a Bluetooth passkey and touch **Pair**.

Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.



### **NOTE:**

The Bluetooth passkey may be fixed for certain devices such as

headsets and handsfree car kits. You can try entering 0000 or 1234 (the most common passkeys) or refer to the documents for that device.

## Send Data via Bluetooth

1. Open the appropriate application and select the file or item you want to share.
2. Select the option for sharing via Bluetooth. The method may vary by application and data type.
3. Touch a Bluetooth device the phone has paired with or wait for it to search for new devices and touch one of them.

## Receive Data via Bluetooth

1. Turn Bluetooth on before trying to receive data via Bluetooth.



### NOTE:

If the phone has not been paired with the sending device, you may need to check your phone's device name in the **Bluetooth** menu in **Settings** to keep the phone detectable through Bluetooth.

2. When a pop-up box appears, indicating an incoming file via Bluetooth, touch **Accept** to start receiving the data.

Depending on your storage setting, received files are stored automatically in a dedicated folder (*Bluetooth*, for instance) in the phone storage. You can access them with the **File Manager** app. Received contacts (vCard files) are automatically imported to your contact list.



# Connecting to Your Computer via USB

You can connect your phone to a computer with a USB cable and transfer music, pictures, and other files in both directions. Your phone stores these files in internal storage or on a removable microSDHC card.

If you are using USB tethering, you must turn that off before you can use USB to transfer files between your phone and computer.

## Connect Your Phone to a Computer via USB

1. Connect your phone to the PC with a USB cable.
2. Open the Notification panel and touch  (**Connecting to PC**).
3. Choose one of the following options:
  - ▶ **Charge only:** Stop all USB functions. Lets you charge your phone via USB.
  - ▶ **USB mass Storage:** Transfer files between PC and Android devices. Once this mode is enabled. External SD card will be unavailable, and you will have no access to data on it.
  - ▶ **Install driver:** Install the driver needed for some USB connection modes (such as MTP).
  - ▶ **Connect to PC software:** Install apps or manage data on the phone via PC software.
  - ▶ **Media device (MTP):** Transfer media files on Windows<sup>®</sup>

or Mac<sup>®</sup>.

- ▶ **Camera (PTP):** Transfer photos using camera software.

## Connect With Windows Media<sup>®</sup> Player

You can sync music on your phone and the computer installed with Windows Media Player.

1. Connect the phone with your computer via USB and choose **Media device (MTP)**.
2. Open Windows Media Player and synchronize music files.

## Disconnect Your Phone From the Computer

To disconnect the phone from the computer, simply unplug the USB cable when you're finished.

## Remove the microSDHC Card From Your Phone

If you need to remove the microSDHC card while the phone is on, you should unmount it first.

1. Touch the **Home Key > Menu Key > System settings > System > Storage**.
2. Scroll down and touch **Unmount SD card > OK**.
3. You can safely remove the microSDHC card from the phone.

# Sharing Your Mobile Data Connection

You can share your phone's data capabilities through tethering or by activating the mobile hotspot feature to create a portable Wi-Fi hotspot.

## Share Your Mobile Data Connection via USB

You can access the Internet on your computer via the USB tethering feature of your phone. The feature needs data connection on a mobile network and may result in data charges.



### NOTE:

If your phone has a microSDHC card or USB storage, you can't mount it on your computer while USB tethered.

1. Connect your phone to your computer with a USB cable.
2. Touch the **Home Key > Menu Key > System settings > Network > More networks**.
3. Check **USB tethering**. A new network connection will be created on your computer.



### NOTE:

To stop sharing your data connection, uncheck **USB tethering** or disconnect the USB cable.

## Share Your Mobile Data Connection via Bluetooth

If your computer can obtain an Internet connection via Bluetooth,

you can configure your phone to share its mobile data connection with your computer.

1. Pair your phone with your computer via Bluetooth.
2. Configure your computer to obtain its network connection via Bluetooth. For more information, please see your computer's documentation.
3. Touch the **Home Key > Menu Key > System settings > Network > More networks**.
4. Check **Bluetooth tethering**. Your computer is now sharing your phone's data connection.



#### **NOTE:**

To stop sharing your data connection, uncheck **Bluetooth tethering**.

## **Share Your Mobile Data Connection as a Wi-Fi Hotspot**

You can share your phone's data connection with other devices by turning your phone into a portable Wi-Fi hotspot. The feature needs data connection on a mobile network and may result in data charges.



#### **NOTE:**

When the portable Wi-Fi hotspot feature is enabled, you cannot use your phone's applications to access the Internet via its Wi-Fi connection. You still remain connected to the Internet via your mobile data network.

1. Touch the **Home Key > Menu Key > System settings > Network > More networks**.
2. Check **Wi-Fi hotspot**.  
After a moment, the phone starts broadcasting its Wi-Fi network name (SSID).
3. On another device, locate your phone via Wi-Fi and connect with it to start using the phone's mobile data.



#### **NOTE:**

To stop sharing your data connection, uncheck **Wi-Fi hotspot**.

## **Rename or Secure Your Wi-Fi Hotspot**

You can change the name of your phone's Wi-Fi network (SSID) and secure your portable Wi-Fi hotspot.

1. Touch the **Home Key > Menu Key > System settings > Network > More networks > Wi-Fi hotspot > Configure**.
2. Set your name and security options as follows:
  - ▶ **Network SSID:** Enter or edit a network SSID (name) that other devices see when scanning for Wi-Fi networks.
  - ▶ **Hide my device:** Check it to broadcast or hide your network SSID. If the broadcast is disabled, other users need to get your network SSID to find the Wi-Fi hotspot.
  - ▶ **Security:** Choose a security option: **None** (not

recommended), **WPA PSK** or **WPA2 PSK** (other users can access your mobile hotspot only if they enter the correct password). When you select **WPA PSK** or **WPA2 PSK**, touch the Password field to edit the security password.

3. Touch **Save** to save your settings.

## Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly deployed by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your VPN. You can get this information from your network administrator.

### Add a VPN

1. Touch the **Home Key > Menu Key > System settings > Network > More networks > VPN**.
2. Touch **+** and fill in the information provided by your network administrator.

3. Touch **Save**.

The VPN is added to the list on the VPN screen.

## Connect to a VPN

1. Touch the **Home Key > Menu Key > System settings > Network > More networks > VPN**.
2. Touch the VPN that you want to connect to.
3. When prompted, enter any requested credentials, and then touch **Connect**.

When you are connected, the VPN connected icon appears in the Status bar.

## Modify a VPN

1. Touch the **Home Key > Menu Key > System settings > Network > More networks > VPN**.
2. Touch and hold the VPN that you want to modify.
3. Touch **Edit profile** and edit the VPN settings you want.
4. Touch **Save**.

# Phone

You can place calls from the Phone app, the People app, or other apps or widgets that display contact information. Wherever you see a phone number, you can usually touch it to dial.

## Placing and Ending Calls

### Place a Call by Dialing

1. Touch the **Home Key** > .
2. In the phone tab , enter the phone number with the on-screen keypad. Touch  to delete incorrect digits.



#### NOTE:

As you enter digits, your phone searches for contacts that match. If you see the number you want to dial, touch it to place the call immediately without entering the rest of the number.

3. Touch the Phone icon  below the keypad to dial.



#### NOTE:

To make an international call, touch and hold the 0 key to enter



the plus (+) symbol. Next, enter the country code, followed by the city/area code and then the phone number.

## End a Call

During a call, touch  on the screen.

## Answering or Rejecting Calls

When you receive a phone call, the Incoming Call screen opens, displaying the Caller ID or the information about the caller that you've entered in People. You can answer or reject the call, or reject it with a text message.

### Answer a Call

When you receive a phone call, slide  down to answer the call.

#### **NOTE:**

To silence the ringer before answering the call, press the **Volume Keys** up or down.

### Reject a Call

When you receive a phone call, slide  up to reject the call.

You can also slide  up to reject the call and send a preset text message to the caller.



#### **NOTE:**

To edit the text response from within the Phone app, touch  > **Settings > Quick responses.**

## Calling Your Contacts

1. Touch the **Home Key** >  and then touch the All tab .
2. Flick the screen up or down to view all your contacts with phone numbers.
3. Touch a contact or number to call it.

## Checking Voicemail

If you have set the phone to divert calls to voicemail, callers can leave voicemail messages when they cannot reach you. Here's how to check the messages they left.

1. Touch the **Home Key** > .
2. Touch and hold  in the dialer. If prompted, enter your voicemail password.

3. Follow the voice prompts to listen to and manage your voicemail messages.

## Using Options During a Call

During a call, you will see a number of onscreen options. Touch an option to select it.

- Touch  to switch to the dialer, for example to enter a code.
- Touch  to record the phone conversation.
- Touch  to turn on or off the speaker.
- Touch  to hold or unhold the current call.
- Touch  to make another call separately from the first call, which is put on hold.
- Touch  to mute or unmute your microphone.
- Touch  to go to contacts.
- Touch  to merge the separate calls into a single conference call.
- Touch  to put the caller you are speaking to on hold, and switch to the other call that has been put on hold.
- Touch  to end the current call.



## **WARNING!**

Because of higher volume levels, do not place the phone near your ear during speakerphone use.

## **Managing Multi-party Calls**

When the call waiting and three-way call features are available, you can switch between two calls or set up a conference call.



### **NOTE:**

The call waiting and three-way call features need network support and may result in additional charges. Please contact your service provider for more information.

## **Switch Between Current Calls**

When you're on a call and another call comes in, your phone screen informs you and displays the caller ID.

### **To respond to an incoming call while you're on a call:**

Drag  down to answer the call. (This puts the first caller on hold and answers the second call.)

### **To switch between two calls:**

Touch  on the screen.

## Set Up a Conference Call

With this feature, you can talk to two people at the same time.

1. On the dialer screen, enter a number and touch .
2. Once you have established the connection, touch  and dial the second number. (This puts the first caller on hold.)
3. When you're connected to the second party, touch .

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

To end the conference call, touch .

# People

You can put contacts on your phone and synchronize them with the contacts in your Google account or other accounts that support contact syncing.

To see your contacts, touch the **Home Key** > . From there, you can touch the tabs on the top of the screen to quickly switch to the all contacts  or favorite contacts .

## Checking Contact Details

1. Touch the **Home Key** >  and touch the all contacts tab  to access your contact list.
2. Scroll through the list to view all your contacts.
3. Touch a contact to view its details.



### NOTE:

If you have a lot of contacts stored, you'll see a slider when you touch the right side of the screen. To go directly to a letter, touch and hold the slider and drag it to a letter.

## Adding a New Contact

1. Touch the **Home Key** >  and touch the all contacts tab .
2. Touch  to add a new contact.
3. Touch the account field near the top of the screen to choose

where to save the contact. If a sync account is selected, the contacts will be synced automatically with your account online.

4. Enter the contact name, phone numbers, email addresses, and other information.
5. Touch **SAVE** to save the contact.

## Setting Up Your Own Profile

You can create your own name card in your phone.

1. Touch the **Home Key** >  and touch the all contacts tab .
2. Touch **Set up my profile** or your name, whichever is at the top of the contact list.
3. Edit your profile information and touch **SAVE**.

## Importing, Exporting, and Sharing Contacts

You can import/export contacts from/to your SIM or microSDHC card. This is especially useful when you need to transfer contacts between different devices. You can also quickly share your contacts using Bluetooth, Email, Messages, etc.

### Import Contacts From the SIM Card

1. Touch the **Home Key** > .

2. Touch the **Menu Key > Manage contacts > Import contacts > Import from SIM card**.
3. Select an account in which to save the contacts.
4. Touch to select the contacts you need and then touch .

## Import Contacts From the microSDHC Card

1. Touch the **Home Key > **.
2. Touch the **Menu Key > Manage contacts > Import contacts > Import from storage**.
3. Select an account in which to save the contacts.
4. Select the vCard file(s) in the microSDHC card and touch **OK**.

## Export Contacts to the SIM Card

1. Touch the **Home Key > **.
2. Touch the **Menu Key > Manage contacts > Export contacts > Export to SIM card**.
3. Touch to select the contacts you need and then touch .

## Export Contacts to the microSDHC Card

1. Touch the **Home Key > **.
2. Touch the **Menu Key > Manage contacts > Export contacts > Export to storage**.
3. The phone will prompt you with the name of the vCard file. Touch **OK** to create the file on the microSDHC card.



## Share Contacts

1. Touch the **Home Key** >  and touch the all contacts tab .
2. Touch the **Menu Key** > **Share**.
3. Touch the contacts you want to share to select them and then touch **SHARE**.
4. Choose to share the contacts via **Bluetooth**, **Email**, **Gmail** or **Messaging**.

## Working With Favorite Contacts

In the favorite contacts  tab, you can find your favorite contacts and frequently contacted contacts.

## Add a Contact to Favorites

You can add the contacts you use frequently to Favorites so that you can find them quickly.



### NOTE:

Contacts on the SIM card cannot be added to Favorites.

1. Touch the **Home Key** >  and touch the all contacts tab .
2. Touch a contact and then touch  next to the contact name.

## Remove a Contact From Favorites

1. Touch the **Home Key** >  and touch the favorite contacts tab .
2. Touch a favorite contact and then touch  next to the contact name.

## Working With Groups

### View Your Contact Groups

1. Touch the **Home Key** >  and touch the contact groups tab .
2. Scroll through the list to view the preset groups and any groups you have created.
3. Touch a group to view its members.



#### NOTE:

To send messages to the group members, you can touch  next to the group and select message recipients from the listed group members.

### Set Up a New Group

1. Touch the **Home Key** >  and touch the contact groups tab .
2. Touch  to create a new group.

3. Touch the drop-down listbox near the top of the screen, which will be there if you have added accounts to the phone, to choose an account for the group.
4. Enter a group name and touch **SAVE**.
5. Touch  and select the contacts you wish to be the group members.
6. Touch **Add**.

## Delete a Group

1. Touch the **Home Key** >  and touch the contact groups tab .
2. Touch a group and then touch the **Menu Key** > **Delete group**.
3. Touch **OK** to delete the group. The contacts in the group will not be deleted.

## Edit a Group

1. Touch the **Home Key** >  and touch the contact groups tab .
2. Touch a group and then touch the **Menu Key**.
3. Touch **Rename group** to edit the group name.

## Searching for a Contact

1. Touch the **Home Key** > .

2. Touch  at near the top of the screen.
3. Input the contact name you want to search for. The contacts matched will be listed.

## Editing Contacts

### Edit Contact Details

1. Touch the **Home Key** > .
2. Touch a contact you need to edit and then touch the **Edit**.
3. Edit the contact and touch **SAVE**.

### Set a Ringtone for a Contact

Assign a special ringtone to a contact, so you know who is calling when you hear the ringtone.

1. Touch the **Home Key** > .
2. Touch a contact you want to set a ringtone for and then touch the **Edit**, at the **RINGTONE** section, select a ringtone you like and touch **OK**.
3. Touch **SAVE**.



#### NOTE:

The contact must be saved on the phone, not the SIM card.

### Delete Contacts

1. Touch the **Home Key** > .

2. Touch the **Menu Key > Delete**.
3. Touch to select the contacts you want to remove.
4. Touch **DELETE** to confirm, and then touch **OK**.

## Join Contacts

As your phone synchronizes with multiple online accounts, you may see duplicate entries for the same contact. You can merge all the separate information of a contact into one entry in the Contacts list.

1. Touch the **Home Key > **.
2. Touch a contact entry to display the contact's details.
3. Touch the **Menu Key > Join**.
4. Touch the contact whose information you want to join with the first entry.

The information from the second contact is added to the first, and the second contact is no longer displayed in the Contacts list.

You can repeat these steps to join another contact to the main contact.

# Accounts

## Adding or Removing Accounts

You can add multiple Google Accounts and Microsoft Exchange ActiveSync® accounts. You may also add other kinds of accounts depending on the apps installed on your phone.

### Add an Account

1. From the Home Screen, touch the **Menu Key > System settings > System**.
2. Touch **Add account**.
3. Touch the type of account you want to add.
4. Follow the onscreen steps to enter the information about the account. Most accounts require a username and password, but the details may vary. You may also need to obtain some information from IT support or your system administrator.

When the account is successfully added, it is displayed in the **ADD ACCOUNT** list.

### Remove an Account

Removing an account will delete it and all information associated with it from your phone, such as emails and contacts.

1. From the Home Screen, touch the **Menu Key > System**

**settings > System.**

2. Touch the account type.
3. Touch the account you want to remove ,touch **Menu Key > Remove account > Remove account.**

## Configuring Account Sync

### Configure Auto Sync Setting

1. Open the Accounts screen.

Your accounts and sync status are displayed. The  icon turns green if automatic sync is enabled for some or all of the account's data, and gray if automatic sync is disabled.
2. Touch the account whose data you want to sync, then touch the check box right of the account to turn on or off automatic sync.
  - ▶ When automatic sync is turned on, changes you make to information on your phone or on the web are automatically synced with each other.
  - ▶ When auto sync is turned off, you need to sync manually to collect emails, updates, or other recent information.

### Sync Manually

1. Open the Accounts screen.
2. Touch the account whose data you want to sync.

3. Touch the **Menu Key > Sync now**.

## **Change an Account's Sync Settings**

1. Open the Accounts screen.
2. Touch the account whose sync settings you want to change. The Sync settings screen appears, showing a list of information the account can sync.
3. Check or uncheck items as you need. Checked types of information on the phone and the web will be kept in sync when auto-sync is turned on.



# Email

Touch  in the Home Screen and select **Email**. Use it to receive and send emails from your webmail or other accounts, using POP3 or IMAP, or access your Exchange ActiveSync account for your corporate email needs.

## Setting Up the First Email Account

1. When you open **Email** for the first time, enter your email address and password.
2. Touch **Next** to let the phone retrieve the network parameters automatically.



### NOTE:

You can also enter these details manually by touching **Manual setup** or when automatic setup fails.

3. Follow the on-screen instructions to finish the setup.

Your phone will show the inbox of the email account and start to download email messages.

## Checking Your Emails

Your phone can automatically check for new emails at the interval you set when setting up the account.

You can also check new emails manually by touching  in any of the email account's boxes. Touch **Load more messages** at

the bottom of the email list to download earlier messages.

## Responding to an Email

You can reply to or forward a message that you receive. You can also delete messages and manage them in other ways.

### Reply to or Forward an Email

1. Open the email you want to reply to or forward from Inbox.
2. Touch the icons at the bottom to reply or forward the email.
  - ▶ Touch  to reply to the sender.
  - ▶ Touch  to reply to the sender and all recipients of the original email.
  - ▶ Touch  to forward the email to someone else
3. Type your email. If forwarding, enter the email address(es) you want to include.
4. Touch  .

### Mark an Email as Unread

You can return a read email to the unread state—for example, to remind yourself to read it again later. You can also mark a batch of emails as unread.

- While reading a message, touch the **Menu Key > Mark as unread**.
- While in a message list (for instance, the inbox), touch the

checkboxes before the messages and then touch .

## Delete an Email

You can delete an email from its folder. You can also delete a batch of emails.

- While reading a message, touch  > **OK**.
- While in a message list (for instance, the inbox), touch the checkboxes in front of the messages and then touch  > **OK**.

## Writing and Sending an Email

1. Open your email Inbox and touch .



### NOTE:

If you have more than one email account added on the phone, touch the sender line to select the account you want to use for sending the message.

2. Enter a contact name or email address in the 'To' field. Separate each recipient with a comma. You can also touch  to select recipients from your contacts.
3. Enter the email subject and compose the email text.
4. Touch the **Menu Key > Attach file** to add audio files, images, videos and other types of files as attachments.
5. Touch  at the top right of the screen to send the message.

# Adding and Editing Email Accounts

## Add an Email Account

After setting up your first email account (see [Email – Set Up the First Email Account](#)), you can add more email accounts and manage them separately.

1. Open **Email** to get the Inbox screen.
2. Touch the **Menu Key > Account settings** and touch **ADD ACCOUNT** at the top right of the screen.
3. Follow the prompts to set up the account as you did with the first one.

## Edit an Email Account

You can change a number of settings for an account, including how often you check for email, how you're notified of new mails, your email signature, and details about the servers the account uses to send and receive mails.

1. Open **Email** to get the Inbox screen.
2. Touch the **Menu Key > Account settings** and touch the account whose settings you want to change.
3. Make the changes you want and touch the **Back Key** when you're finished.

## Changing General Email Settings

General settings apply to all email accounts you add.

4. Open **Email** to get the Inbox screen.
5. Touch the **Menu Key > Account settings > General**.
6. Make the changes and touch the **Back Key** when you finish.

# Gmail™

After you sign in to your Google account on the phone, you can send and retrieve Gmail messages with the **Gmail** app.



## NOTE:

This feature may not be available in certain regions or with certain service providers.

## Opening Your Gmail Inbox

Touch  in the Home Screen and select **Gmail**. The Inbox screen appears.

If you haven't signed in, you will be prompted to do so or create a new account.

Touch the **Menu Key > Refresh** to refresh your Inbox and download new messages.

## Switching Accounts

Gmail displays conversations, messages, and settings from one Google account at a time. If you have signed in to more than one Google account on your phone, you can switch accounts and view information in each account.

1. From your Inbox, touch the current account at the top of the screen.
2. From the menu that appears, touch the account you want to

see. The account's Inbox will open.

## Writing and Sending a Message

1. Open your Gmail Inbox and switch to the account you want to use for sending the message.
2. Touch .
3. Enter a contact name or email address in the 'To' field. Separate each recipient with a comma.
4. Enter the email subject and compose the email text.
5. To attach an image, touch the **Menu Key > Attach file**.
6. Touch  at the top of the screen to send the message.

## Replying to or Forwarding a Message

7. Open the Gmail message you want to reply to or forward to another person.
8. Do the following as you need.
  - ▶ To reply to the sender, touch .
  - ▶ To reply to the sender and all recipients of the original message, touch  > **Reply all**.
  - ▶ To forward the message, touch  > **Forward**.
  - ▶ Touch  > **Print**, to print the message.
9. Edit your message and touch the send icon .

## Working With Received Attachments

When a message has an attachment, Gmail displays information about it in the **ATTACHMENTS** section of the email.

Depending on the attachment type, the applications installed on your phone as well as your settings, you may touch  to preview, view, or save the attachment.



### NOTE:

For documents with multiple pages, touching the **Preview** option will only download the pages you view, while touching other options may download the entire file and cost more time and data.

 
## Working With Labels

Message labels include both labels you create and default labels such as **Sent**, **Starred**, and **Outbox**. You can organize your emails by labeling them or adding stars to them. Labels also help you sort your messages, just like folders.

### To label or change labels:

10. Open the **Gmail** app and touch in the message list the sender images at the left side of the messages you want to label.



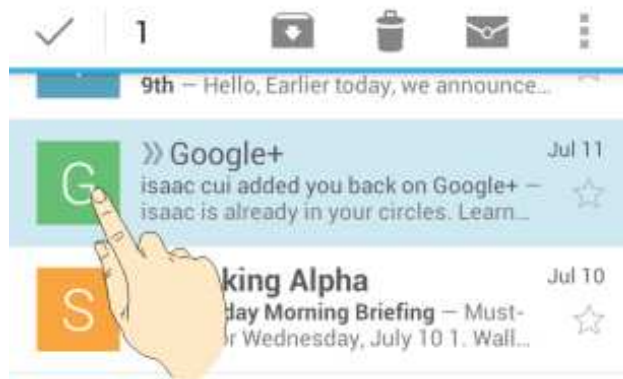

11. At the top of the screen, touch  > **Change labels**.
12. Check or uncheck labels in the new screen and touch **OK**.

#### **To add stars to messages:**

13. Open the **Gmail** app and touch in the message list the sender images in front of the messages you want to star.
14. At the top of the screen, touch  > **Add star**.

#### **To view messages by label:**

15. Open the **Gmail** app and touch the current account at the top of the screen without checking any message.
16. Touch a label below **ALL LABELS** to view messages with that label.

## **Changing Gmail Settings**

Touch the **Menu Key > Settings** in any Gmail screen to change **General settings**, which apply to all Gmail accounts, or other settings that only apply to specific accounts.

# Messaging

You can use Messaging to exchange text messages (SMS) and multimedia messages (MMS).

## Opening the Messaging Screen

Touch  in the Home Screen and select **Messaging**.

The **Messaging** screen opens where you can create a new message, search for messages, or open an ongoing message thread.

- Touch  to write a new text or multimedia message.
- Touch  to search for a message using keywords.
- Touch an existing message thread to open the conversation you've had with a certain number.

## Sending a Message

1. On the **Messages** screen, touch  at the bottom.
2. Add recipients by one of the following ways.
  - ▶ Touch the **To** field and manually enter the recipient's number or the contact name. If the phone presents a few suggestions, touch the one you want to add.
  - ▶ Select recipients from your contacts by touching .
3. Touch the **Type message** field and enter the content of your message.

4. If you want to send a multimedia message, touch the **Menu Key > Add subject** to add a message subject or touch the paper clip icon  to attach a file or a slideshow to the message.

5. Touch  or **Send**.



#### **NOTE:**

You can also include email addresses as recipients for multimedia messages.



#### **NOTE:**

Do not add a message subject or any attachment if you want to send a text message. Otherwise you may be charged for a multimedia message.

## Replying to a Message

Messages you receive are appended to existing threads for the same number. If the new message comes from a new number, a new thread is created.

1. On the **Messages** screen, touch the thread that has the message you want to reply to.
2. Type your reply in the text box at the bottom. You can touch the attach icon  if you want to reply with an MMS.
3. Touch .

## Forwarding a Message

1. On the **Messages** screen, touch the thread that has the message you want to forward.
2. Touch and hold the message.
3. Touch **Forward** in the menu that opens.
4. Enter a recipient for the message and edit the content if you want.
5. Touch .

## Copying a Message

You can copy text messages in the phone storage to the SIM card, or vice versa.

- To copy a text message from the phone to the SIM card, touch and hold the message and select **Copy to SIM card**.
- To copy a text message from the SIM card to the phone, touch the **Menu Key** in the Messaging screen and select **Settings > Manage SIM card messages**. Then touch and hold a message and select **Copy to phone memory**.

## Changing Message Settings

Touch the **Menu Key > Settings** in the Messages screen to change Messages settings.

# Calendar

Calendar on the phone works with the web-based Google Calendar™ service for creating and managing events, meetings, and appointments. It also works with the Microsoft Exchange ActiveSync calendar once you sign into your Exchange account on the phone.

To open Calendar, touch  in the Home Screen and select **Calendar**.

## Viewing Your Calendars and Events

### Select Visible Calendars

1. Open the **Calendar** app.
2. Touch the Menu Key > Calendars to be displayed.
3. In the new screen, touch the calendars to check the calendars you want to see or uncheck the calendars you'd like to hide.

Events from hidden calendars are not shown in the Calendar app.

### Change Calendar Views

You can view your calendars in different forms. The app offers four views: Month, Week, Day, and Agenda.

To change calendar views, touch the time period shown at the

top left and select the view you prefer.

You can also change to Day view from Month view by touching any day in the grid.

- In Month view, swipe vertically to see earlier months and later months.
- In Week or Day view, swipe horizontally to see earlier weeks/days and later weeks/days.
- When you are viewing earlier or later days, weeks, or months, touch  at the bottom to quickly switch to today.

## View Event Details

In Agenda, Day, or Week view, touch an event to view its details.

In Month view, touch a day to switch to Day view. Then touch an event to view its details.

## Creating an Event

1. In any Calendar view, touch .

You can also touch a spot in Day or Week view twice to add an event to that time spot.

2. If you have more than one calendar account, touch the current account at the  to choose one.
3. Enter the event details and touch **Done**.

## Editing or Deleting an Event

1. Find the event you want to edit or delete.
2. Open its details screen (see [Viewing Your Calendars and Events – View Event Details](#) in this chapter).
3. Do one of the following as you need.

| To...            | do...                                                                                                                                                           |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Edit the event   | touch  at the bottom of the screen.<br>Touch <b>Done</b> to save your changes. |
| Delete the event | touch  at the bottom of the screen<br>and then touch <b>OK</b> .               |

## Changing Calendar Settings

To change Calendar settings, open a Calendar view (Day, Week, Month, or Agenda) and touch the **Menu Key > Settings**.

# Google+™

Google+ is a social networking service offered by Google. The Google+ application on your phone enables you to manage your data, chat with online contacts, organize them in different circles, and share your selected information.

Touch  in the Home Screen and select **Google+**. The first time you open the Google+ app, select the photo & video backup and contact sync options.



## NOTE:

For detailed guide for Google+, open Google+ and touch the **Menu Key > Help** to view the online instructions.

## Getting Started With Google+

Open the **Google+** app and touch the Google+ icon at the top left to use the following features:

- **Home:** See posts people have shared with you, a circle you are in, or everyone.
- **People:** Find people to add to your Google+ circles, create new circles, view and organize people into circles based on your relationships. You can also follow content posted by people you find interesting.
- **Profile:** View and edit your basic information, view your posts and photos.
- **Photos:** View photos you uploaded, photos of you, photos



from your posts and more.

- **Communities:** Search and join all kinds of online communities, where people gather for the sharing and discussion of a common topic.
- **Locations:** See your friends' locations on the map and configure your location sharing settings.
- **Hangouts:** Chat with your Google+ contacts through text messages or video call.
- **Events:** Manage your social calendar. You can add events, invite people, and then share photos in real time from the event.
- **Search:** Search for content posted on Google+.

## Signing out of Google+

If you are already signed in to the app, you can sign out by following these steps.

1. Touch  in the Home Screen and select **Google+**.
2. Touch the **Menu Key > Sign out**.

# Browser

Use **Browser** to view web pages and search for information.

## Opening the Browser

Touch  in the Home Screen and select **Browser** to start this function. The last web page you were viewing is displayed. If you have not used **Browser** recently, your home page opens.

Browser also opens when you touch a web link - for example, in an email or a text message.

## Open a Web Page or Search the Web

1. Open the **Browser** app.
2. Touch the address box at the top of the web page. If the address box isn't visible, swipe down a little to show it.
3. Enter the address (URL) of a web page. Or, enter terms you want to search for. You can also touch  to search by voice.
4. Touch a URL or search suggestion or touch **Go** on the keyboard to open the web page or search results.



### NOTE:

Touch the **X** to the left of the address box if you want to stop opening the page.



## NOTE:

Touch the tabs icon  to the bottom of the screen to open a new web page in a new tab.

## Downloading Files

Touch and hold an image or a link to a file or to another webpage. In the menu that opens, touch **Save image** or **Save link**.

The downloaded files are saved to your phone or the memory card. You can view or open them in the **Downloads** app ( > **Downloads** ).

## Changing Browser Settings

You can configure a number of Browser settings to customize the way you browse the web, including several that you can use to control your privacy.

To open the Browser settings screen, touch the **Menu Key** > **Settings**.

# Maps

## Activating Location Services

To find your location on Google Maps, you must have location services turned on your phone.

1. Touch the **Home Key > Menu Key > System settings > System > Location**.
2. Slide the **Location** switch at the top to turn location access on or off.
3. When location access is enabled, touch **Mode** to select location modes you want to use.
  - ▶ **High accuracy:** Get accurate location using both GPS and Wi-Fi as well as mobile networks.
  - ▶ **Battery saving:** Use only Wi-Fi and mobile networks to get your approximate location. This will drain less power from your battery than using GPS.
  - ▶ **Device only:** Use GPS to pinpoint your location.

## Getting Your Location

1. Touch  in the Home Screen and select **Maps**.
2. Touch  at the bottom.

The map centers on a blue blinking dot that indicates your location.

## Searching for a Location

1. Touch  in the Home Screen and select **Maps**.

Enter the address or the type of business or establishment you're looking for in the search box at the top. If suitable suggestions appear below the search box, touch one to search for it.



### NOTE:

You can also touch  beside the search box to use voice search.

2. Touch the search icon on the keyboard. Red points indicating search results appear on the map.
3. Touch a red point to open a card at the bottom with summary information about the location.

Slide the card up to find more information about the location as well as options for getting directions and more.

## Getting Directions to Your Destination

Maps can provide directions for travel by foot, public transportation, or car.

1. Touch  in the Home Screen and select **Maps**.
2. Touch  beside the search box.
3. Select the mode of transportation and then enter a start and end point. If your location is found, it will appear in the start point field by default.

As suggested routes appear, touch one to see it on the map.  
Slide the bottom card up to see the route directions in a list.



**NOTE:**

For driving routes, touch  (**Start**) to use Google Maps Navigation (beta) and get turn-by-turn voice directions for driving.

# Google Now™ and Search

You can search for information on the web or on your phone using Google Search, get information when you need with Google Now without searching, or perform certain tasks by speaking.

## Enabling Google Now

Google Now gets you just the right information at just the right time. It tells you today's weather before you start your day, how much traffic to expect before you leave for work, and more. You can turn Google Now on or off from within the Google app.

The first time you open the Google app, see a brief explanation of how Google Now works and touch **Next**. When you see **Yes, I'm in**, choose it to begin.

3. Touch the **Home Key** >  > **Google**.
4. Touch the **Menu Key** > **Settings**.
5. Slide the ON/OFF switch next to **Google Now**.

## Searching With Text

You can search for information by entering text.

1. Touch  in the Home Screen and select **Google**.
2. Enter the terms you want to search for in the search box and touch the search key on the keyboard, or touch a

search suggestion that appears below the search box.

## Searching by Speaking

You can also search the web or perform certain tasks by speaking.

1. Touch the **Home Key** >  > **Google**.
2. Touch the microphone icon to the right of the search box, or just say 'Google'.



### NOTE:

You can also touch the **Home Key** >  > **Voice Search**.

3. Speak the terms you want to search for or the question you want to ask. When you're finished speaking, your speech is analyzed and the search is initiated.

## Changing Search Settings

Open the **Google** app and touch the **Menu Key** > **Settings** to set Google Now, phone search and voice options, and to change privacy settings for your account.



# Camera

You can use your phone to take photos and record videos. Photos and videos are stored on the phone's memory card or in the phone's internal storage. You can copy them to your computer or access them in the **Gallery** app.

## Capturing a Photo

1. Touch  in the Home Screen and select **Camera**.
2. Aim the camera at the subject and make any necessary adjustment.



| Number | Function                                  |
|--------|-------------------------------------------|
| 1      | Switch between the front and back camera. |

| Number | Function                                                                                                         |
|--------|------------------------------------------------------------------------------------------------------------------|
| 2      | Select expert mode (only available for the back camera). You can set the white balance, exposure, ISO and so on. |
| 3      | Change the flash setting, only available for the back camera.                                                    |
| 4      | View pictures and videos you have taken.                                                                         |
| 5      | Touch the shutter button to take a picture.                                                                      |
| 6      | Change the camera settings.                                                                                      |
| 7      | Select color effect (only available for the back camera).                                                        |



## WARNING!

Keep a safe distance when using the flash. Do not point the flash towards the eyes of people or animals.

**TIP:** You can pinch or spread with two fingers on the screen to zoom in or zoom out.

3. Lightly touch the shutter icon  to take the picture.

## Recording a Video

1. Touch the **Home Key** >  > **Camera**.
2. Aim the camera at the subject and make any necessary adjustment.
3. Touch  to start recording.

4. Touch  to stop recording.

**TIP:** While the recording is in progress, you can touch  to save the frame as a separate photo.

## Customizing Camcorder Settings

Before recording a video, you can touch  to open the following camcorder setting options.

|                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <ul style="list-style-type: none"><li>• <b>Picture size:</b> Adjust the picture size.</li><li>• <b>Grid:</b> Show or hide the composition lines.</li><li>• <b>Self-timer:</b> Set a time delay before the camera takes a picture automatically after you touch the shutter icon, or turn off this feature.</li><li>• <b>Voice control:</b> Control the camera to take a picture by voice.</li><li>• <b>Face detection:</b> Select if open the face detection or not.</li></ul> |
|  | <ul style="list-style-type: none"><li>• <b>Video quality:</b> Set the quality for the video clips.</li><li>• <b>Time lapse:</b> Set the time interval between each frame when you shot time lapse videos.</li><li>• <b>Silent camcorder:</b> Check this option if you want to capture silent video clips.</li></ul>                                                                                                                                                            |



- **Shutter tone:** Select your preferred shutter tone.
- **Geo-tagging:** Select whether to store the GPS location in captured pictures or your recorder video files.
- **Storage location:** Select where to store the pictures and videos.
- **Restore defaults:** Restore the default camera settings.

# Gallery

## Opening Gallery

Touch  in the Home Screen and select **Gallery** to view albums of your pictures and videos.

## Working With Albums

When you open Gallery, all pictures and videos on your phone are displayed in a number of albums.

### To view album contents:

Touch an album to view the pictures and videos it contains.

### To share albums:

1. Touch and hold an album until it is selected.
2. Touch more albums that you want to share.
3. Touch  at the top of the screen and select how you want to share the albums.

### To delete albums:

1. Touch and hold an album until it is selected.
2. Touch more albums that you want to delete.
3. Touch  > **OK**.

## Working With Pictures

Touch a picture in an album to view the picture in full screen. Double-touch the picture, or pinch two fingers together or spread them apart to zoom out or in. Slide left or right to view other pictures in the album.



- Touch the Gallery icon in the upper left corner to return to the album.
- Touch  to browse the album contents in a slideshow.
- Touch  to rotate or rename the picture, view details, or change settings.

**NOTE:** All options may not be available for certain albums or pictures.

# Retouching Your Pictures

You can edit any photos you took and some other pictures in **Gallery**. The changed picture is saved in the same album as the original one, while the original is never affected.

1. Touch  while viewing a picture in full screen to open the PhotoEditor interface.
2. Touch the options along the bottom of the screen to edit the picture.

|                                                                                     |                                                                                     |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|    | Apply effects such as bleach, blue crush, instant, and so on.                       |
|   | Crop, straighten, mirror, or rotate the picture.                                    |
|  | Adjust exposure, vignette, shadows, sharpness or set to auto adjust and so on.      |
|  | Apply a frame to the picture.                                                       |
|  | Decorate people in the picture with comical moustaches, eye glasses, hats and more. |
|  | Apply a blur effect to the picture.                                                 |
|  | Select a color and draw anything on the picture.                                    |
|  | Add some text to the picture and adjust its effect.                                 |

1. To undo or redo the changes you've made to the picture, touch  or  at the top of the screen.

2. Touch **Save** to save the new picture.

## Share Your Pictures

1. Touch an album in the gallery and then touch a picture.
2. Touch  at the bottom of the screen. If the icon is invisible, touch the screen first.
3. Select how you want to share the picture.

## Working With Videos

### Play Videos

1. Touch an album in the gallery and then touch the thumbnail of a video.
2. Touch  at the center to start playing. Touch the video to view the playback controls.

### Share Videos

1. Touch an album in the gallery and then touch the thumbnail of a video.
2. Touch  at the bottom of the screen. If the icon is invisible, touch the screen first.
3. Select how you want to share the video.



# Music

Touch  in the Home Screen and select **Music** to play audio files stored on your phone. **Music** supports a wide variety of audio formats, so it can play music you purchase from online stores, music you copy from your CD collection, and so on.

## Copying Music Files to Your Phone

Before using Music, you need to copy or download audio files to your phone.

### Copy From a Computer

1. Connect your phone and the computer with a USB cable.
2. Touch **Media device (MTP)** to browse the files in the phone storage and on the microSDHC card.
3. Copy the music file from the PC and paste it to the phone storage or microSDHC card.

### Download From the Internet

You can download music files when browsing web pages. See [Downloading Files](#).

### Receive via Bluetooth

You can receive music files from other devices via Bluetooth. See [Receive Data via Bluetooth](#).

## Receive via Wi-Fi

You can receive music files from other devices via Wi-Fi. See [Receive Data via Wi-Fi](#).

## Viewing Your Music List

Touch  in the Home Screen and select **Music** and your music list is displayed. All your audio files are cataloged according to the information stored in the files.

Touch the tabs at the top of the screen to view your music library organized by **My**, **Songs**, **Artists**, or **Online**.

 
## Set a Song as the Default Ringtone

The song will be used as the ringtone for all incoming calls, except those from contacts to whom you have assigned special ringtones (see [People – Editing Contacts – Set a Ringtone for a Contact](#)).

1. Touch  in the Home Screen and select **Music** to see the music library.
2. Touch and hold a song in any list.
3. In the menu that opens, touch **Use as phone ringtone**.
4. Touch **Phone Ringtone** or **Notification Ringtone**.

## Playing Music

Touch a song in the music library to listen to it. The following playback screen appears.

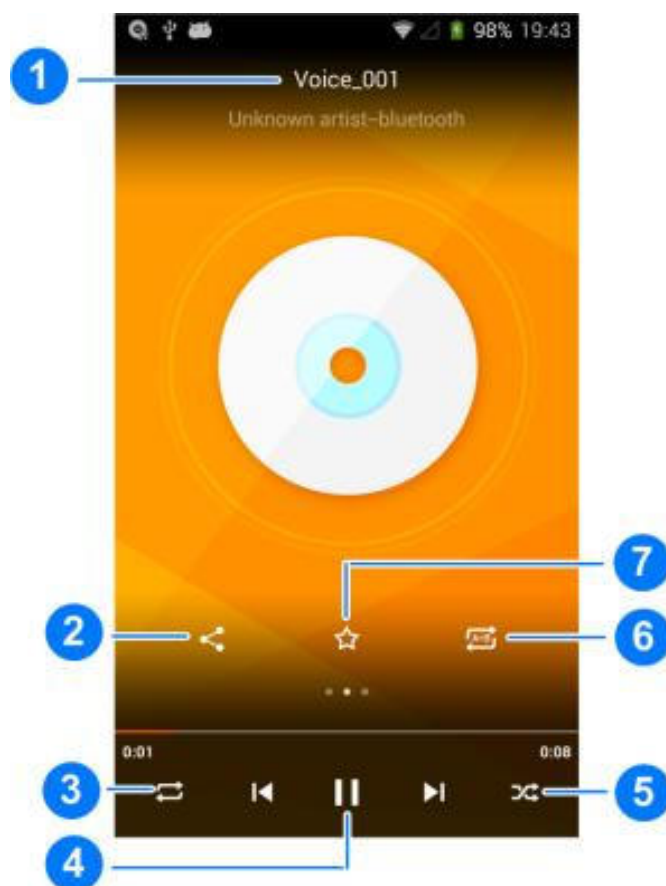

| Number | Function                                                               |
|--------|------------------------------------------------------------------------|
| 1      | Song, album, and artist information.                                   |
| 2      | Share the song by Email, Bluetooth, Messaging, Drive, Gmail and so on. |
| 3      | Switch the repeat mode and change the repeat modes.                    |

|   |                                                                                                             |
|---|-------------------------------------------------------------------------------------------------------------|
| 4 | Playback control. Skip songs or pause and resume playback. Drag the slider to jump to any part of the song. |
| 5 | Touch to shuffle the songs in the playlist or not.                                                          |
| 6 | Repeat a section of the song by your setting.                                                               |
| 7 | Add the song to my favorite playlist.                                                                       |

## Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

- Touch and hold a song until the list appear, touch **Add to playlist** to add it to a playlist or create a new playlist.
- Touch and hold a playlist until the list appear, touch **Delete** to delete the playlist.
- Touch and hold a playlist until the list appear, touch **Rename** to rename the playlist.

Touch a playlist to view its content. You can touch the **Menu Key > Delete** to select the songs you want to remove.

# Play Music

The **Play Music** application () works with Google Music, Google's online music store and streaming service. You can stream via mobile data or Wi-Fi and listen to your favorite songs that you've added to your online Google Music library. You can also play audio files you've copied directly to your phone from a computer.



## NOTE:

 
The availability of Google Music is dependent on your region. If it is not available, or you don't have a mobile data or Wi-Fi connection, you can only play music stored on your phone.

## Playing Your Music

Touch  in the Home Screen and select **Play Music**. If you are prompted, select an account to access its online music library.

The app searches your online library and your phone for music and playlists before displaying your combined music library, organized by **GENRES**, **ARTISTS**, **ALBUMS**, and **SONGS**. You can touch  > **My Library** to view your library or touch  > **Playlists** to view existing playlists.

Touch a song to play it. When the song is playing, touch the summary information at the bottom to display the playback screen.

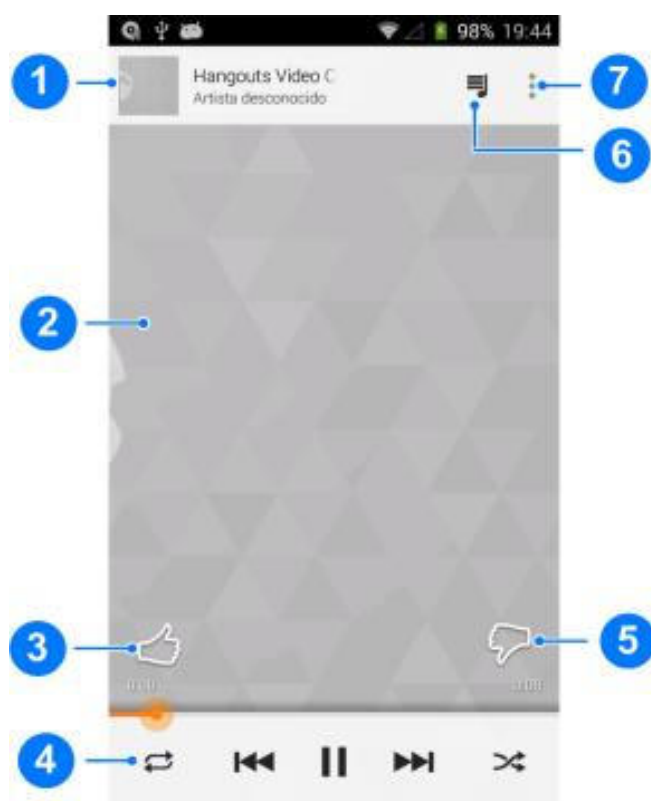

| Number | Function                                                                                                                               |
|--------|----------------------------------------------------------------------------------------------------------------------------------------|
| 1      | Song and artist information. Touch or drag down to return to the music library.                                                        |
| 2      | Album artwork.                                                                                                                         |
| 3      | Give the song a thumbs-up.                                                                                                             |
| 4      | Playback control. Skip songs, pause and resume playback, use shuffle or repeat. Drag the progress bar to jump to any part of the song. |
| 5      | Give the song a thumbs-down.                                                                                                           |
| 6      | Touch to see the current playlist (queue).                                                                                             |

You can still control the music when you are not in the playback screen.

- In the music library of the **Play Music** app, touch the summary information at the bottom of the screen to restore the playback screen.
- In other apps, flick down the notification panel. Touch the song title to restore the playback screen, or just pause/resume playback or skip to the next/previous song.
- When the screen is locked, the song information, album cover as well as playback control is displayed on top of the screen. You can pause/resume playback or skip songs.

## Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer. To view all your playlists, touch  > **Playlists**.

- Touch  > **Add to playlist** next to a song or a playlist to add it to a playlist or create a new playlist.
- Touch  > **Delete** next to a playlist to delete the playlist.
- Touch a playlist to view its content. You can touch  > **Remove from playlist** next to the song you want to remove, or drag the handle icon to the left of each song to rearrange its order in the playlist.

# Video

Use the video player to play various kinds of videos.

## Opening the Video Library

Touch  in the Home Screen and select **Video** to view your video library.

## Playing and Controlling Videos

Touch a video in the video library to play it.

Touch the video to show the playback controls. You can pause and resume the playback, or jump to any part of the video, adjust video brightness, hide the control panel and more.

## Managing Video Files

### To delete videos:

1. Touch  > **Delete** at the top of screen. Touch a video, the video is highlighted.
2. To remove more videos, touch them.
3. Touch **Delete** at the right bottom of the screen.
4. Touch **OK** to confirm.

### To share videos:

1. Touch  > **Share** at the top of screen. Touch a video, the



video is highlighted.

2. To share more videos, touch them.
3. Touch **Share** at the bottom right of the screen and select how you want to share them.

#### **To rename a video:**

1. Touch and hold a video in the video library until the list popup.
2. Touch **Rename**.
3. Type the new video name and touch **OK**.

#### **To view details of a video:**

1. Touch and hold the video you want to view the details of until the list popup..
2. Touch **Details**.

# Sound Recorder

**Sound Recorder** enables you to record voice memos and listen to them whenever you like.

## Recording a Voice Memo

1. Touch  in the Home Screen and select **Sound Recorder**.
2. Touch  to start recording. Touch  to cancel recording if you change your mind. You can touch  to pause and  to continue during the recording.
3. Touch  to stop recording. The memo is automatically saved.

If you don't want to save the memo after recording it, touch  to delete it.

## Playing a Voice Memo

**To play a memo you just recorded:**

Touch  at the bottom of the screen.

**To play any saved memo:**

1. Touch  at the top right of the screen to see all recordings.
2. Touch the title of a memo to play it.



**NOTE:**

You can also touch and hold the memo you want to operate to delete, share, rename, add a tag, trim it, check its file information, or set it as your phone ringtone.

# More Apps

## File Manager

Quickly access all of your images, videos, audio clips, and other types of files on your phone and on the memory card.

Touch  in the Home Screen and select **File Manager**. The folders are organized by category, phone storage and the memory card storage.

- Touch folders and files to access stored items.
- Touch **PHONE / SD Card** >  to create a new folder in the current directory.

## Calculator

Touch  in the home screen and select **Tools > Calculator** to use the phone's convenient built-in calculator for some basic.

## Clock

Touch  in the home screen and select **Tools > Alarm** to use a series of timing tools.

## Set a New Alarm

1. Touch  in the Home Screen and select **Tools > Clock**.
2. Touch .

3. Touch a default alarm to configure it, or touch  at the bottom of the screen to create a new alarm.
4. Set the time and touch **SAVE**. Touch each item below the time to set up the alarm options, such as repeat and alarm sound.

## Stopwatch and Countdown

1. Touch  in **Clock** app to use the countdown or stopwatch.
2. Countdown allows you to set a time and count down to zero, while Stopwatch allows you to record lap times.

## World Time

1. Touch  in **Clock** app to check local time for cities around the world.
2. Touch **+** at the bottom to add a new city or country.

## Downloads

The **Downloads** app keeps a record of the files you have downloaded using the **Chrome**, **Email**, or **Gmail** app.

Touch  in the Home Screen and select **Downloads** to check the record.

- Touch a file to open it with the appropriate applications.

- Touch and hold a file, or check the box in front of it, to delete or share it.

## Flashlight

Touch  in the home screen and select **Tools > Flashlight** to use the phone's flash for illumination.

Touch  to turn on or off the flashlight.

## NotePad

Touch  in the Home Screen and select **NotePad** to save and view your text notes.

- Touch  to create a new note. Then enter your text and touch **Save** to save it.
- Touch a note to view its entire contents. With the option icons at the bottom, you can edit, delete, or share it, or export it as a text file (\*.txt) to your phone storage.

## YouTube

Touch  in the Home Screen and select **YouTube**.

You can watch YouTube videos or upload your own.

# Google Play™ Store

Touch  in the Home Screen and select **Play Store**. You can buy or rent music, books, movies, and apps and download them to your phone.



## NOTE:

The content you can access in Google Play store depends on your region and your service provider.

## Browsing and Searching for Apps

You can browse apps by category and sort them in different ways. Touch a top-level category, such as **GAMES** and touch an app from any subcategory.

You can also search for apps using an app's name or description, or the developer's name. Just touch  and enter the search terms.

## Downloading and Installing Apps

When you find the app you are interested in through browsing or searching, touch it to open its details screen, where more information about the app is displayed.

1. Touch **INSTALL** (free apps) or the price (paid apps). If the app is not free, you need to sign in to your Google Wallet account and select a payment method.



### CAUTION:

Once installed, some apps can access many functions or a significant amount of your personal data. The Play Store will show you what the app can access. Touch **ACCEPT** to proceed, or touch the **Back Key** to cancel.

2. Wait for the app to be downloaded and installed automatically. Payment needs to be authorized before paid apps start downloading.

The app is successfully installed when the  icon appears in the status bar. You can find the new app after touching the **Home Key** > .

## Creating a Google Wallet™ Account

You must have a Google Wallet account associated with your Google Account to purchase items from the Google Play Store app.

Do one of the following:

- On your computer, go to *checkout.google.com* to create a Google Wallet account.
- The first time you use your phone to buy an item from Google Play Store, you're prompted to enter your billing information to set up a Google Wallet account.



### WARNING!

When you've used Google Wallet once to purchase items from the Google Play Store app, the phone remembers your



password so you don't need to enter it the next time. For this reason, you should secure your phone to prevent others from using it without your permission.

## Requesting a Refund for a Paid App

If you are not satisfied with an app, you can ask for a refund within 15 minutes of the purchase. Your credit card is not charged and the app is uninstalled from your phone.

If you change your mind, you can install the app again, but you can't request a refund a second time. For details, please read the Play Store help information.

4. Touch the **Home Key** >  > **Play Store**.
5. Touch  > **My apps**.
6. Touch the app to uninstall for a refund. The details screen for the app opens.
7. Touch **REFUND** and then touch **UNINSTALL**. Your app is uninstalled and the charge is cancelled.

## Managing Your Downloads

After you've downloaded and installed an app, you can rate it, view it in a list with your other downloaded apps, configure it to update itself automatically, and so on.

### View Your Downloaded Apps

1. On the Apps screen of Play Store, touch  > **My Apps**.

2. Your list of installed apps opens. You can touch one to rate it, uninstall it, request a refund and so on.

## Uninstall an App

1. On the Apps screen of Play Store, touch  > **My Apps**.
2. Touch an app to open its details screen.
3. Touch **UNINSTALL > OK**.

# Settings

Touch  in the Home Screen and select **Settings**. The **Settings** app contains most of the tools for customizing and configuring your device.

## Network

### Aeroplane Mode

In the **Settings** app, check **Airplane mode**. All the phone's radios that transmit voice or data are turned off.

### Wi-Fi

Turn Wi-Fi on or off and configure your Wi-Fi connections. See [\*Connecting to Networks and Devices – Connecting to Wi-Fi\*](#).

### Bluetooth

Turn Bluetooth on or off and configure your Bluetooth connections. See [\*Connecting to Networks and Devices – Connecting to Bluetooth Devices\*](#).

## Mobile networks

- **Data enabled:** Touch the **ON/OFF** switch to turn on or off mobile data.
- **Date roaming:** Touch the **ON/OFF** switch to turn on or off

mobile data when roaming.

- **Preferred network type:** Preferred network mode 4G/3G/2G Auto, 3G/2G Auto or 2G only.
- **Access Point Names:** Set up and connect to Access Point Names. See [Connecting to Networks and Devices – Set Access Point Names](#).
- **Network operators:** Choose a network operator. See [Connecting to Networks and Devices – Select Network Operators](#).

## More networks

- **PPPOE:** Set up the custome profile name, username and password to connect to network by dial.
- **Wi-Fi hospot/USB tethering/Bluetooth tethering:** Share your phone's mobile data connection with PCs or other devices via USB, bluetooth or Wi-Fi. See [Connecting to Networks and Devices – Sharing Your Mobile Data Connection](#).
- **VPN:** Set up and connect to virtual private networks. See [Connecting to Networks and Devices – Connecting to Virtual Private Networks](#).

# Personal

## Volumes

Adjust different types of volume (see [Personalizing – Adjusting Volumes](#)), toggle sound and mute (see [Switching to Silent Mode](#)).

## Sound

Set up ringtone and notification sound (see [Personalizing – Changing Ringtone and Notification Sound](#)), and select system sounds (refer to [Turning On/Off Touch Sounds](#)).

## Vibrate

Touch **vibrate** to turn on or off vibrate mode.

## Brightness

Set the brightness of the display.

## Wallpaper

Select a background image for the Home Screen.

## Sound settings

Touch the check box of right side to turn on or off the ring gradually, power on quiet, dial-pad touch tones, touch sounds, screen lock sounds and vibrate on touch.

## Display settings

- **Font size:** Set the font size of the text on the screen.
- **Font style:** Set the font style of the text on the screen.
- **Auto-rotate screen:** Touch the check box of right side to turn on or off Auto-rotate.
- **Sleep:** Set the length of time of inactivity before the screen turns off.
- **Screen effect:** Set the effect of the screen, natural, colorful or gorgeous.
- **Daydream:** To control what happens when the phone is docked and/or sleeping, turn Dreams on.
- **Breathing notification light:** Touch the check box of right side to turn on or off the Breathing notification light.
- **Pulse notification light:** Flash the LED light to notify you of missed calls, new messages, and other events.

## Default SMS app

Select a default app for the SMS user.

## Home selector

Select a screen style for the home screen.

# Operation

## Motion and Gesture

Set the motion and gesture for better experience of apps which supports multi-touch, close three-finger gestures.

## Mi-Pop

Touch the check box of right side to turn on or off the Mi-POP. Once enabled, tap buttons on screen to perform action, convenient for one-hand operation.

## One-hand operations

- **In-call buttons:** Select the buttons of in-call for one-hand.
- **Unlock:** Select the type of unlock for one-hand.

## Quick start

Select the type of start phone for quickly.

## Scheduled power on/off

Set the time and repeat rate of scheduled power on or off, turn it on or off for schedule the phone power on or off.

# System

## Apps manage

See apps installed on your phone and manage them.

Touch an app in the **Running**, **APPS** or **RESOURCE** tab to see its information. You can stop the app, uninstall the app, clear data and cache, or move the app between the internal storage and the memory card.



### NOTE:

Not all applications can be moved or uninstalled.

## Storage

Check memory information for your memory card and internal storage.

- **Unmount SD card:** Unmount the memory card from your phone so that you can safely remove the card while the phone is on.
- **Erase external SD card:** Erase all data on your memory card and prepare it for use with your phone.

Touch the **Save location setting** to set the save location for your phone.

## Battery

Check how much power remains for the battery and what has



been using the battery.

## Date usage

You can check how much data has been used during the time cycle you set, set a mobile data limit and warning, see what apps have been using mobile data, or restrict background data for individual apps.



### NOTE:

The data usage is measured by your phone. Your carrier's data usage accounting may differ.

## Connect to PC

Touch to set the connection type for your phone. See [Connect Your Phone to a Computer via USB](#).

## Add account

Manage your accounts and synchronization settings.

- Touch **Add account** to sign in to or create accounts on your phone.
- Touch an account to set the sync settings for that account. You can then touch the **Menu Key > Sync now** to sync all checked items.
- Touch an account and then touch the **Menu Key > Remove account** to remove the account and all information related to it from your phone.

## Language and input

- **Language:** Select a language and region for your system.
- **Spell checker:** Touch the check box to turn on or off the spell checker, set the language and the contact names of spell checker.
- **Personal dictionary:** Add new words to the phone's dictionary or remove words from the dictionary. The words you add are used for spelling check and word suggestion.
- **KEYBOARD & INPUT METHODS:** Configure text input settings. See [Knowing the Basics – Entering Text – Touch Input Settings](#).
- **Voice Search:**
  - ▶ **Language:** Select the language you use when entering text by speaking or searching by speaking.
  - ▶ **Speech output:** Select to set the speech output.
  - ▶ **“OK Google” Detection:** You can use Google Search filtering to block some results when you use Google search by voice.
  - ▶ **Offline speech recognition:** Select one or more additional language packages so you can use speech recognition when you do not have a network connection.
  - ▶ **Block offensive words:** Replace offensive words with an asterisk (\*) when you use Google voice recognition to transcribe your voice into text.
  - ▶ **Bluetooth headset:** Records audio through Bluetooth

headset if available.

- **Text-to-speech output:**
  - ▶ **PREFERRED ENGINE:** Select the speech synthesis engine you want to use or change its settings.
  - ▶ **Speech rate:** Select how quickly you want the synthesizer to speak.
  - ▶ **Listen to an example:** Play a brief sample of the speech synthesizer, using your current settings.
  - ▶ **Default language status:** Select the default language for support the speech ourput.
- **Pointer speed:** Select how fast the pointer/mouse should scroll when you connect the phone to a trackpad or mouse accessory.

## Date and time

Set date, time, time zone, and how date and time are displayed. You can also use network-provided data.

## Security

- **Screen lock:** Disable the screen lock or enable it with long press, pattern, or PIN. See [Personalizing – Protecting Your Phone With Screen Locks](#).
- **Owner info:** Set the text that you may display on the lock screen.
- **Encrypt phone:** Encrypt your data on the phone to protect

your privacy. See [Personalizing – Protecting Your Phone With Encryption](#).

- **Make passwords visible:** Display passwords as you enter them.
- **Device administrators:** View or deactivate apps you have authorized to be device administrators.
- **App ops:** View or change app permissions.
- **Unknown sources:** Check this option to permit installation of apps from sources other than the Play Store.
- **Verify apps:** Disallow or warn before installation of apps that may cause harm.
- **Start Enhanced Post-sale Service:** Set the Post-sale service start to enhance.
- **Storage type:** Set storage type.
- **Trusted credentials:** Display trusted CA certificates.
- **Install from SD card:** Install certificates from the memory card.
- **Clear credentials:** Delete all certificates.

## Factory data reset

- **Back up my data:** Back up app data, Wi-Fi passwords, and other settings to Google servers after you sign in to your Google account.
- **Automatic restore:** Restore previously backed up settings and data when you reinstall an app.

- **Factory data reset:** Reset your phone to factory default settings. All your personal data from the phone's internal storage will be erased. You can also erase the data on the memory card during the process.

## Location

Activate location services to determine your location. See [Maps, Navigation, Places and Latitude – Activating Location Services](#).

## Updates

Check and update phone system after that update package has been copied to root directory on storage card.

## Accessibility

Configure accessibility plug-ins on your phone, such as using **TalkBack** for low-vision users.

## Printing

Configure cloud printing service options, manage print jobs and more.

## About Phone

View phone status and legal information. You can also upgrade your phone system from update packages copied to the storage card.

# Troubleshooting

If you encounter problems while using the phone, or if it performs abnormally, you can refer to the chart below. If your particular problem cannot be resolved using the information in the chart, contact the dealer where you purchased the phone.

| Problem        | Possible causes                                                                                                                                                           | Possible solution                                                             |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| Poor reception | The network signal is too weak at your current location, for example, in a basement or near a tall building, because wireless transmissions can not effectively reach it. | Move to a location where the network signal can be properly received.         |
|                | The network is busy at the current time (for example, during peak times, there may be too much network traffic to handle additional calls).                               | Avoid using the phone at such times, or try again after waiting a short time. |
|                | You are too far away from a base station for your service provider.                                                                                                       | You can request a service area map from your service provider.                |

| <b>Problem</b>                    | <b>Possible causes</b>                                                                                                   | <b>Possible solution</b>                                                                         |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
| Echo or noise                     | Poor network link quality on the part of your service provider.                                                          | End the call and dial again. You may be switched to a better-quality network link or phone line. |
|                                   | Poor local telephone line quality.                                                                                       | End the call and dial again. You may be switched to a better-quality network link or phone line. |
| Unable to select certain features | Your service provider does not support these features, or you have not applied for services that provide these features. | Contact your service provider.                                                                   |
| Battery not charging              | The battery or battery charger is damaged.                                                                               | Contact the dealer.                                                                              |
|                                   | The phone's temperature is below 0°C or higher than 45 °C.                                                               | Adjust the battery charging environment to avoid extremes of temperature.                        |

| <b>Problem</b>         | <b>Possible causes</b>                                                                                                                                                                             | <b>Possible solution</b>                                                                |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
|                        | Poor contact between the battery and charger.                                                                                                                                                      | Check all connectors to ensure that all connections have been properly made.            |
| Shortened standby time | The standby time is related to your service provider system configuration. The same phone used with different service providers' systems will not provide exactly the same length of standby time. | If you are located in an area where signaling is weak, temporarily power off the phone. |
|                        | The battery is depleted. In high temperature environments, battery life will be shortened.                                                                                                         | Use a new battery.                                                                      |



| <b>Problem</b>            | <b>Possible causes</b>                                                                                                                                                                                          | <b>Possible solution</b>                                                                         |
|---------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
|                           | If you are not able to connect to the network, the phone will continue to send out signals as it attempts to locate a base station. Doing so consumes battery power and will consequently shorten standby time. | Change your location to one where the network is accessible, or temporarily turn off your phone. |
| Cannot turn your phone on | Battery power has been depleted.                                                                                                                                                                                | Recharge the phone's battery.                                                                    |
| Micro-SIM card error      | Micro-SIM card malfunction or damage.                                                                                                                                                                           | Take the micro-SIM card to your service provider for testing.                                    |
|                           | Micro-SIM card inserted improperly.                                                                                                                                                                             | Insert the micro-SIM card properly.                                                              |
|                           | Debris on the micro-SIM card contacts.                                                                                                                                                                          | Use a soft, dry cloth to clean the micro-SIM card contacts.                                      |

| <b>Problem</b>                                 | <b>Possible causes</b>                                          | <b>Possible solution</b>                                                                                                          |
|------------------------------------------------|-----------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Unable to connect to the network               | Micro-SIM card invalid.                                         | Contact your service provider.                                                                                                    |
|                                                | You are not within the network's service area.                  | Check the service area with your service provider.                                                                                |
|                                                | Poor signal.                                                    | Move to an open space, or if you are inside a building, move closer to a window.                                                  |
| PIN Code blocked                               | You have entered an incorrect PIN code three consecutive times. | Contact your service provider. If the service provider provides the SIM card's PUK code, use the PUK code to unlock the SIM card. |
| Unable to enter information into the phonebook | The phonebook's memory is already full.                         | Delete unnecessary data from the contacts.                                                                                        |

| <b>Problem</b>                                          | <b>Possible causes</b>                                       | <b>Possible solution</b>                                                 |
|---------------------------------------------------------|--------------------------------------------------------------|--------------------------------------------------------------------------|
| Phone crashes, reboots, freeze, or cannot be powered on | Some third-party software is not compatible with your phone. | Reset the phone to factory status.                                       |
|                                                         |                                                              | Enter safety mode and uninstall the software that may cause the problem. |
|                                                         |                                                              | Upgrade the phone software.                                              |

# For Your Safety

## General Safety

|                                                                                     |                                                                               |                                                                                     |                                                                                           |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|
|    | Don't make or receive handheld calls while driving. Never text while driving. |    | Don't use at gas stations.                                                                |
|   | Keep your phone at least 15 mm away from your ear or body while making calls. |   | Your phone may produce a bright or flashing light.                                        |
|  | Small parts may cause choking.                                                |  | Don't dispose of your phone in fire.                                                      |
|  | Your phone can produce a loud sound.                                          |  | To prevent possible hearing damage, do not listen at high volume levels for long periods. |
|  | Avoid contact with anything magnetic.                                         |  | Avoid extreme temperatures.                                                               |

|                                                                                    |                                                                 |                                                                                    |                                                        |
|------------------------------------------------------------------------------------|-----------------------------------------------------------------|------------------------------------------------------------------------------------|--------------------------------------------------------|
|   | Keep away from pacemakers and other electronic medical devices. |   | Avoid contact with liquids. Keep your phone dry.       |
|   | Turn off when asked to in hospitals and medical facilities.     |   | Don't take your phone apart.                           |
|   | Turn off when told to in aircrafts and airports.                |   | Only use approved accessories.                         |
|  | Turn off when near explosive materials or liquids.              |  | Don't rely on your phone for emergency communications. |

## Distraction

### Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a phone while driving (even with a hands free kit) can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

### Operating Machinery

Full attention must be given to operating machinery in order to reduce the risk of an accident.

# Product Handling

## General Statement on Handling and Use

You alone are responsible for how you use your phone and any consequences of its use.

You must always turn off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

- Always treat your phone and its accessories with care and keep it in a clean and dust-free place.
- Keep the screen and camera lens clean. Unclean screen or camera lens may slow down the phone's reaction to your operations or lower image quality.
- Clean the device and its accessories with a soft material such as cleaning cloth for eyeglass lenses. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.
- Do not expose your phone or its accessories to open flames or lit tobacco products.
- Do not expose your phone or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your phone or its accessories.
- Do not paint your phone or its accessories.

- Do not attempt to disassemble your phone or its accessories. Only authorized personnel can do so.
- Do not expose or use your phone or its accessories in a environment with or that can reach extreme temperatures, minimum - [5] and maximum + [50] degrees Celsius.
- Do not place your phone inside or near heating equipments or high pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your phone may be damaged.
- Please check local regulations for disposal of electronic products.
- Do not carry your phone in your back pocket as it could break when you sit down.

## **Small Children**

Do not leave your phone and its accessories within the reach of small children or allow them to play with it.

They could hurt themselves or others, or could accidentally damage the phone.

Your phone contains small parts with sharp edges that may cause an injury or may become detached and create a choking hazard.

## **Demagnetization**

To avoid the risk of demagnetization, do not allow electronic

devices or magnetic media to be close to your phone for a long time.

## **Electrostatic Discharge (ESD)**

Do not touch the SIM card's metal connectors.

## **Antenna**

Do not touch the antenna unnecessarily.

## **Normal Use Position**

When placing or receiving a phone call, hold your phone to your ear, with the bottom towards your mouth.

## **Air Bags**

Do not place a phone in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result.

Store the phone safely before driving your vehicle.

## **Seizures/Blackouts**

The phone can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician.



## **Repetitive Strain Injuries**

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your phone:

- Do not grip the phone too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Message Templates and Predictive Text.
- Take many breaks to stretch and relax.

## **Emergency Calls**

This phone, like any wireless phone, operates using radio signals, which cannot guarantee connection in all conditions. Therefore, you must never rely solely on any wireless phone for emergency communications.

## **Loud Noise**

This phone is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, Bluetooth stereo headsets or other audio devices.

## **Phone Heating**

Your phone may become warm during charging and during normal use.

# Electrical Safety

## Accessories

Use only approved accessories.

Do not connect with incompatible products or accessories.

Take care not to touch or allow metal objects, such as coins or key rings, to contact or short-circuit in the battery terminals.

Never puncture the surface of the battery with sharp objects.

## Connection to a Car

Seek professional advice when connecting a phone interface to the vehicle electrical system.

## Faulty and Damaged Products

Do not attempt to disassemble the phone or its accessories.

Only qualified personnel can service or repair the phone or its accessories.

If your phone (or its accessories) has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

# Radio Frequency Interference

## General Statement on Interference

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

## Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this, use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

## Hearing Aids

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source. Increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

## Medical Devices

Please consult your doctor and the device manufacturer to

determine if operation of your phone may interfere with the operation of your medical device.

## **Hospitals**

Turn off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

## **Aircraft**

Turn off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices onboard the aircraft. If your device offers a 'Aeroplane mode', this must be enabled prior to boarding an aircraft.

## **Interference in Cars**

Please note that because of possible interference with electronic equipment, some vehicle manufacturers forbid the use of mobile phones in their vehicles unless a hands-free kit with an external antenna is included in the installation.

## **Explosive Environments**

### **Gas Stations and Explosive Atmospheres**

In locations with potentially explosive atmospheres, obey all

posted signs to turn off wireless devices such as your phone or other radio equipment.

Areas with potentially explosive atmospheres include fueling areas, below decks on boats, fuel or chemical transfer or storage facilities, and areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

## **Blasting Caps and Areas**

Power off your mobile phone or wireless device when in a blasting area or in areas posted power off “two-way radios” or “electronic devices” to avoid interfering with blasting operations.