

 
ALCATEL 1030X ALCATEL 1030D Quick Start Guide

For more information about how to use the phone, please go to www.alcatelone-touch.com to download complete user manual (English version only). Moreover, from the website you can also consult FAQ (English version only).

SAR
This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found on page 21 of this user guide.
When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 10 mm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.

PROTECT YOUR HEARING
To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

Your mobile.....

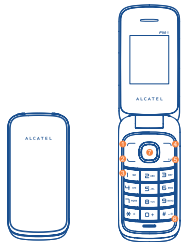

- Left softkey
- Pick up/Send call
- Call log
- Voicemail (press and hold)
- Right softkey
- Switch on/Switch off End call
- Vibration alert (press and hold)
- Navigation key: Menu/Confirm an option
- Messages
- Calendar
- Profiles
- Alarm

4 Contacts.....

4.1 Consulting your contacts
To access the **Contacts** from the main screen, press the key and select the icon from the menu.
For dual SIM model, the complete contacts of both SIM1 and SIM2 are available in this menu¹⁾.

4.2 Adding a contact
You can add a new contact to phone or SIM card by selecting "Add contact".

5 Messages.....

5.1 Create message
From the main menu select "Messages" to create text message. You can type a message and you can also modify a predefined message in **Templates**. While writing a message, select "Options" to access all the messaging options. You can save your messages that you send often to **Drafts**.

Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

6 Call log.....

6.1 Access
You can access the function using the following options:
• Select from main menu
• Press the send key from Home screen

6.2 Available options
When you press "Options", you can have access to **View, Send SMS, Save to Contacts, Edit before call, Add to blacklist, Add to whitelist, Delete** etc.

7 Music.....

Access this feature from the main menu by selecting "Music". You will have full flexibility of managing music on memory card. Make sure your memory card well inserted before activating music.

1.1 Keys

- Navigation key
Confirm an option (press the middle of the key)
- Pick up/Send a call
In idle screen:
Access call log (Redial) (press)
- Switch on/Switch off the telephone (press and hold)
End call
Return to idle screen
- Left softkey
- Right softkey
Access your voicemail (press and hold)
- In Edit mode:
- Press: access the symbols table
- Press and hold: enter zero
- In Edit mode:
- Press: change input methods
- Press and hold: access the language list
- In idle screen:
- Press: #
- Press and hold: activate/deactivate the vibrate mode
- In Edit mode:
- Press: → (space)

1.2 Main screen icons ⁽¹⁾

- In 1030X:
Battery charge level.
- Vibrate alert:** your phone vibrates, but does not ring or beep.
- Headset connected.**
- Call forwarding activated:** your calls are forwarded.
- Alarm or appointments programmed.**
- Level of network reception.**
- Voicemail message arrived.**
- Missed calls.**
- Radio is on.**
- Roaming.**
- SIM card missing.**
- Music activated.**
- Silence mode:** your phone does not ring, beep or vibrate with the exception of the alarm.
- SMS unread.**
- Flight mode.**

⁽¹⁾ The icons and illustrations in this guide are provided for information purposes only.

 
8 FM radio.....

Your phone is equipped with a radio ⁽¹⁾ with RDS functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.

9 My files.....

You will have access to all audio and visual files stored in memory card in **My files**. You can access a number of items with this option: **My audios, My images, My videos, Other files**, etc.

Inserting and removing the memory card:

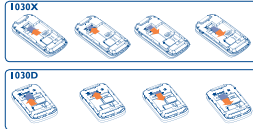

To insert the microSD card with the golden contact downward.
To remove the card, press and slide it out.

⁽¹⁾ 1030D only.
English - CJB2&G0ALAA

10 Settings.....

From the main menu, select the menu icon and select the function of your choice in order to customise your telephone: **Phone settings, Call settings, Security, Network, Restore default, Dual SIM switch⁽¹⁾, Dual SIM settings⁽¹⁾.**

11 Tools.....

11.1 Alarm
Your mobile phone has a built-in alarm clock with a snooze feature.

11.2 Calculator
Enter a number, select the type of operation to be performed, and enter the second number, then press "=" to display the result.

11.3 Calendar
Once you enter this menu from the main menu, there is a monthly-view calendar for your view.

⁽¹⁾ 1030D only.

2 Getting started.....

2.1 Set-up
Removing and installing the back cover

 


Removing and installing the battery



⁽¹⁾ 1030D only.

Inserting and removing the SIM card

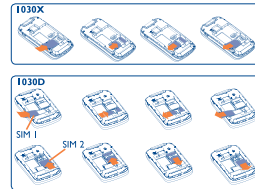

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out.

⁽¹⁾ 1030D only.

Charging the battery



Connect the battery charger to your phone and mains socket respectively.
• The charging may take about 20 minutes to start if the battery is flat.
• Be careful not to force the plug into the socket.
• Make sure the battery is correctly inserted before connecting the charger.
• The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
• When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery ().
• To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug: reduce the backlight time, etc.

The charge is complete when the animation stops.

2.2 Power on your phone

Hold down the key until the phone powers on.

2.3 Power off your phone

Hold down the key from the main screen.

13 Making the most of your mobile.....

ONE TOUCH Upgrade

Using ONE TOUCH Upgrade tool you can update your phone's software from your PC.
Download ONE TOUCH Upgrade from ALCATEL ONE TOUCH website (www.alcatelone-touch.com) and install it on your PC. Launch the tool and update your phone by following the step by step instructions (refer to the User Guide provided together with the tool).

Your phone's software will now have the latest software.

All personal information will be permanently lost following the update process. We recommend you backup your personal data before upgrading.

14 Latin input mode..

To write messages, there are two writing methods:
• Normal: this mode allows you to type a text by choosing a letter or a sequence of characters associated with a key.
• Predictive with the «Z» mode: this mode speeds up the writing of your text.
• + key in edit mode
Press: access the symbols table
Press and hold: enter zero

3 Calls.....

3.1 Making a call
Dial the desired number then press the key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.

To hang up the call, press the key.

Making an emergency call

If your phone is covered by the network, dial emergency number and press the key to make an emergency call. This works even without a SIM card and without typing the PIN code.

3.2 Calling your voicemail ⁽¹⁾

To access your voicemail, hold down the key.

3.3 Receiving a call

When you receive an incoming call, press the key to talk and then hang up using the key.

3.4 Available functions during the call

During a call, you can use your directory, your calendar, short messages, etc. without losing your correspondent.

⁽¹⁾ Contact your network operator to check service availability.

ALCATEL is a trademark of Alcatel-Lucent and used under license by TCT Mobile Limited.

All rights reserved © Copyright 2013 TCT Mobile Limited.

TCT Mobile Limited reserves the right to alter material or technical specification without prior notice.

PROTECT YOUR HEARING
 To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

