


1 Your mobile

Keys in idle mode

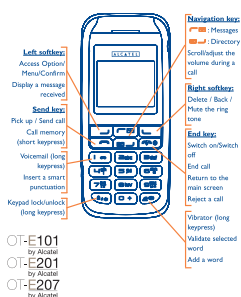

2 Getting started

2.1 Remove the back cover



2.2 Insert the SIM Card

Inserting the SIM card in order to use your phone. To insert your SIM card, turn off your phone by holding down the **End key**.

Fit the SIM card with the chip (indicated by the gold connectors) facing downwards. Slide the SIM card into its compartment taking care of the correct orientation with the angled corner. Push the SIM card with your finger to release it.

2.3 Insert and remove the battery

To remove the battery, make the same thing in the other direction.



3 Menu

Select the item you require using the navigation keys (**Left softkey**, **End key**, **Right softkey**), then press again the left softkey to confirm.

- Tools:**
 - Access the Alarm and Calculator functions.
- Call services:**
 - Access functions such as voicemail number, call memory, call settings, network, forward and call barring.
- Messages:**
 - Read, write and send your SMS. View your messages in your inbox, outbox. Adjust the settings and activate/deactivate SMS CB in message reception.
- Directory:**
 - Access/create directory files and make calls from your directory.
- Sounds:**
 - Change the mode, volume, ringtones, alerts, power on/off sounds, key beep.
- Display:**
 - Change the main screen wallpaper, colours/reverse, power on/off display, screensaver and contrast.
- Settings:**
 - Set the time, date, language, security mode, answer mode, etc.
- Games:**
 - Play one 2 games embedded in your telephone.
- Services:**
 - Access the Operator services.

⁽¹⁾ Contact your network operator to check service availability.
⁽²⁾ Depending on your operator's network.

4 Main screen icons

- Battery charge level.**
- Vibrate mode** ⁽¹⁾
- Silence mode** ⁽²⁾
- Unread message.**
- Message list is full**
- Unanswered call**
- Call forwarding activated:** your calls are forwarded
- Alarm programmed**
- Signal strength indicator.**
- Keypad lock.**
- Roaming.**

⁽¹⁾ For E201/E207 only
⁽²⁾ For E101 also means vibrate mode

5 Tools

- 5.1 Alarm**
 - + = "smooze": The alarm will ring again after 5 minutes.
 - + = "cancel"When the phone is switched off, the alarm will ring.
- 5.2 Calculator**
 - select type of operation

6 Calls

- 6.1 Making a call**
 - Dial number then press **End key**
 - To hang up, press **End key**. Press and hold the key to delete all the digits.
- Making an emergency call**
 - Dial 112 or any other number and press **End key**. Emergency calls can be performed at any time without your SIM card or PIN code. Once the call has been made, the screen will display "SOS".
- Making an international call**
 - Hold down **End key** when "+" is displayed, enter the country and area codes, then complete the number and send the call.
- Calling a number from the directory**
 - Press the **End key** to access the directory. Select the desired phone number and press **End key**.
- 6.2 Calling your voicemail** ⁽¹⁾
 - Make a long keypress on the **End key**.
- 6.3 Available functions during the call**
 - Access the available options during a call by pressing **End key**.

⁽¹⁾ Contact your network operator for more information.

7 Messages

- Press **End key** or press **End key** and select **Messages**.
- 7.1 Create an SMS**
 - Press **End key** → "create" → Abc → **End key** and choose your action:
 - Send:** send the message to a recipient.
 - Send to many:** send the message to a group of people you have defined.
 - Send to email:** send a message to an email address ⁽¹⁾.
 - Save:** save the message in the unseen box and send it later.
 - Templates:** use or modify an existing message.
 - Discard:** discard the message.
 - Predictive (TV):** select this mode to enter the words more quickly.
 - 123:** switch to numeric mode.
 - TV help:** help menu for the predictive mode.
- 7.2 Read an SMS**
 - In the inbox, read and unread messages are shown with different icon. The outbox included sent and unsent messages.
- 7.3 Inbox/Outbox**
 - Select the message and press and choose your option: Reply/Delete/Forward message/Archives/Modify/Extract number/Call number.

⁽¹⁾ Contact your network operator for service availability.

8 Directory

You may store up to 250 entries in the phone memory.

- 8.1 Directory menu**
 - View:** access the list contacts (alphabetic order).
 - Create:** enter number and name of a new contact.
 - Delete:** delete the selected contact.
 - Copy:** copy the selected contact from the SIM memory to the phone memory and vice versa.
 - Caller group:** group together names by category.
 - Select Dir:** select the SIM directory, Phone directory or both at the same time.
 - Memory status:** check the numbers of contacts and the memory space left.
 - My number:** enter your own phone numbers for future reference.
 - Speed Dial:** set up speed dial for each key from **End key** to **End key**.
- 8.2 Creating a contact**
 - Press **End key** select "create" and enter number and name of a new contact.
- 8.3 Consulting your directory ("View")**
 - Select "Dir" then "View" to access the list of your contacts
 - Available options in the contact list**
 - Once you have selected a name, press to access the following options: Call number/Send message/Details/Modify/Delete/Copy/Caller group/Search number.
 - Caller group**
 - You can group together names by category and select a special ringtone. For each group, you can select the following options: Modify/Ringtone/SMS alert/Member/Add member/Delete all.

9 Sounds

From the main screen **End key** → **End key** and select one of the following options in order to customise your telephone.

- 9.1 Mode**
 - Ringtone: only the tone is played.
 - Vibrate: only vibrator is set (but the alarms and low battery sound will be played anyway).
 - Vibrate & ring: vibrator and tone at the same time.
 - Vibrate then ring: vibrator then tone.
 - Vibrate, Beep, Ring: vibrator then warning beep, then tone.
 - Silence: no sound no beep (but the alarms and low battery sound will be played anyway).
- 9.2 Volume**
 - The volume can be adjusted to one of the set levels.

10 Display

- 10.1 Wall paper** ⁽¹⁾
 - Select the image you wish to be displayed as the idle screen.
- 10.2 Colours** ⁽¹⁾/Reverse ⁽²⁾
 - Choose different colors for the presentation of the screen.

⁽¹⁾ OT-E201, OT-E207
⁽²⁾ OT-E101

10.3 Contrast

Set the contrast of your phone by choosing one of the 5 levels proposed.

10.4 Backlight

Select the display backlight duration: 7s, 15s, 20s, 30s.

Settings

- 11.1 Clock**
 - Set time and date, time format, display (show or hide the clock).
- 11.2 Languages**
 - To choose the language in which the messages will be displayed.
- 11.3 Dictionary**
 - Create, modify or delete a word in your personal dictionary. When creating a SMS, the word of this dictionary are automatically called if you choose the Predictive Mode (TV).
- 11.4 Auto keypad lock**
 - To select the timing for the automatic locking of the keypad when the handset is not in use. From this function you may select a timing of 5 to 40 seconds, or to set it "off" if you prefer to lock it manually.
- 11.5 Auto power**
- 11.6 Answer mode**
- 11.7 Factory reset**

⁽¹⁾ Contact your network operator for more information.

12 Call services

- 12.1 Call memory**
 - From the main screen, press **End key** and your phone display a call list. Each call is displayed with an icon indicating the type of the call.
 - Select a telephone number in the list and press **End key** to redial it or press **End key** to access the following options:
 - Details:** display the information of the call selected.
 - Save number:** store the number in your directory.
 - Send message:** create an SMS.
 - Call number:** call the selected number.
 - Modify:** modify the number, then call it or save it.
 - Delete:** delete the number selected.
 - Delete all:** delete the entire list.
- 12.2 Call settings** ⁽¹⁾
 - Minute alert/Call waiting/Auto redial/Billing/Duration/Amount/Hide my ID.
- 12.3 Call services** ⁽¹⁾
 - Network/Call forwarding/Call barring.

⁽¹⁾ Contact your network operator for more information.

13 Games

- 13.1 Russia**
 - The aim of this game is to make as many complete lines of bricks as possible.
 - Key functions:**
 - Rotate the brick
 - Move right
 - Drop the brick
 - Toggle the upgrade level flag if the flag is on, the game level will move up when your score increases 300. The level impacts the speed of the bricks: the higher the level, the higher the speed.
- 13.2 Bricks**
 - The aim is to break as many bricks as possible with a bat and ball.
 - 3 lives per game.
 - Miss a ball = lose a life.
 - Bonus depending on the position in which the ball hits the bricks.
 - Key functions:**
 - Pause and context menu
 - Move left
 - Shoot first ball
 - Move right
 - Shoot first ball
 - Shoot the ball

Alcatel logo and Alcatel name are Trademark of Alcatel-Lucent used under license by T&A Mobile Phones Limited.

All rights reserved © Copyright 2007
T&A Mobile Phones Limited.

T&A Mobile Phones Limited reserves the right to alter material or technical specification without prior notice.

English - TS002308AAAA 02

Safety and use

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

TRAFFIC SAFETY:

- do not place your phone on top of the dashboard or within an airbag deployment area.
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from mobile phone RF energy.

CONDITIONS OF USE:

Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone on when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical devices such as a pacemaker, a hearing aid or insulin pump, etc. In particular, when using the phone, you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" mode because the amplified volume might cause hearing damage.

Do not let small children use the phone without supervision.

When replacing the cover please note that your phone may contain substances that could cause an allergic reaction.

Telephone warranty

Congratulations on choosing this mobile phone - we hope that you will be completely satisfied with it.

Your phone is guaranteed against any deviation from technical specifications for a period of twelve (12) months from the date specified on your original invoice.¹⁾ The warranty terms, defined in the manual also apply to the battery and accessories sold with the phone but for a period of six (6) months²⁾ from the date of purchase shown on your original invoice.

Under the terms of this warranty you must immediately inform your vendor (or any repair centre approved by TAA Mobile Phones Limited or its affiliates, which are listed on our website <http://www.taa-mobile.com>) in case of a confirmed defect on your phone, and present the invoice given to you at the time of purchase. The vendor or maintenance centre will decide whether to replace or repair as appropriate, all or any part of the telephone or accessory found to be defective. This warranty covers the cost of parts and labour but excludes any other costs. Repair or replacement may be carried out using nonstandard components offering equivalent functionality.

Servicing under the terms of this warranty especially repair, modification or replacement of products, shall entitle to a ONE (1) month³⁾ warranty unless there are statutory provisions to the contrary.

This warranty shall not apply to damage or defects to your telephone and/or accessory caused by:

- 1) failure to follow the instructions for use or installation,
- 2) failure to comply with technical and safety standards applicable in the geographical areas where the equipment is used.

¹⁾ The mandatory period may vary if overriding statutory provisions are applicable in your country.

²⁾ The life of a rechargeable Alkaline telephone battery in terms of conversation time, standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your Alkaline phone during the first six months after purchase and for approximately 200 more recharges.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders.

 This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life.

 This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life.

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

In non-European Union countries:

Items of equipment with this symbol are not to be thrown into ordinary bins if your country or your region has suitable recycling and collection facilities instead they are to be taken to collection points for them to be recycled.

PRIVACY:

Please note that you must respect the laws and regulations in force in your country regarding taking photographs and recording sound with your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or a distributor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.

BATTERY:

Before removing the battery from your phone, please make sure that the phone is switched off. Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery.
- Do not burn or dispose of a used battery in household rubbish or store it at temperatures above 60 °C.

Troubleshooting

Before contacting the after-sales department, you are advised to follow the instructions below:

- You are advised to switch off the telephone from time to time to optimise its performance.
- You are advised to fully charge the battery () for optimal operation.
- Avoid storing large amounts of data in your telephone as this may affect the performance of your telephone.

and carry out the following checks:

My mobile phone does not switch on

- Press  until the screen comes on.
- Check the battery charge level.
- Check the battery contacts, remove and reinstall your battery, then turn your telephone back on.

My phone does not respond since several minutes

- Press the  key.
- Remove the battery and re-insert it, then switch the phone back on.

My screen is difficult to read

- Clean your screen.

My mobile phone turns off by itself

- Check that your keypad is locked when you are not using your mobile phone.
- Check the battery charge level.
- Check that the function "Auto OFF" is not activated.

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purposes for which it was designed. Never use damaged batteries or those not recommended by TAA Mobile Phones Limited and/or its affiliates.

CHARGERS:

Heat powered chargers will operate within the temperature range of 0 °C to 40 °C. The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. They should be used for this purpose only.

RADIO WAVES:

Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/EC (R&TTE) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive. THIS MOBILE PHONE COMPLIES WITH INTERNATIONAL AND EUROPEAN REQUIREMENTS REGARDING EXPOSURE TO RADIO WAVES.

Your mobile phone is a radio transmitter/receiver. It was designed and manufactured to comply with the radiofrequency (RF) exposure thresholds recommended by international recommendations (ICNIRP)¹⁾ and by the Council of the European Union (Recommendation 1999/5/EEC)²⁾.

These limits are part of a set of requirements and established, authorised radiofrequency levels for the public. These limits were established by independent groups of experts on the basis of regular and detailed scientific assessments. They include a significant safety margin intended to ensure the safety of all, regardless of age or state of health.

The exposure standard for mobile phones is determined by a measurement unit known as the Specific Absorption Rate or "SAR". The SAR limit is set by international requirements or by the Council of the European Union at 2 W/kg (averaged over 10 g of body tissue). The tests used to determine SAR levels were carried out on the basis of standard usage mode with the phone transmitting at its maximum power level over the entire range of frequency bands.

¹⁾ The ICNIRP requirements are applicable in the following regions: Central America (except Mexico), South America, North and South Africa, Pacific Asia (except Taiwan and Korea), Australia.

²⁾ The European recommendation (1999/5/EEC) is applicable in the following regions: Europe, Israel.

My mobile phone does not charge properly

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet hissing sound.
- Make sure charging is carried out under normal conditions (0°C - 40°C).
- Make sure your battery is inserted. It must be inserted before plugging in the charger.
- Make sure you are using an Alkaline battery and charger.
- When abroad, check that the electrical current is compatible.

My mobile phone does not connect to a network

- Try connecting in another location.
- Verify the network coverage with your operator.
- Check with your operator that your SIM card is valid.
- Try selecting the available network(s) manually.
- Try connecting at a later time if the network is overloaded.

SIM card error

- Make sure the SIM card was correctly inserted.
- Verify with your operator that your SIM card is 3V compatible; the old 5V SIM cards cannot be used.
- Make sure the chip on your SIM card is not damaged or scratched.

Unable to make outgoing calls

- Make sure you have dialled a valid number and pressed the  key.
- For international calls, make sure you have entered the country and area codes.
- Make sure your mobile phone is connected to a network, and that the network is not overloaded or unavailable.
- Check your subscription with your operator (credit, SIM card valid, etc.).
- Make sure you have not barred outgoing calls.

Although the SAR was established at the highest certified level, the actual SAR level for the mobile phone during use is generally much lower than the maximum values. In fact, since mobile phones are designed to operate at very different power levels, they only use the minimum level of power required to provide a connection to the network. In theory, the closer you are to a base station antenna, the lower the power level required by the mobile phone.

The highest tested SAR value for this mobile phone for use at the ear and compliance against the standard is 1.0 W/kg. While there may be differences between the SAR levels on various phones and at various positions, they all meet the relevant international guidelines and EU requirements for RF (radio-waves) exposure.

The World Health Organisation (WHO) considers that present scientific information does not indicate the need for any special precautions for use of mobile phones. If individuals are concerned they might choose to limit their own or their children's RF exposure by limiting the length of calls or using "hands-free" devices to keep mobile phones away from the head and body (see sheet n° 193).

Additional information about electromagnetic fields and public health are available on the following site: <http://www.who.int/emf>

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or damaging it.

General information

Website: www.taa-mobile.com

Hot Line Number: see the "TCL & Alcatel Mobile Phones - Service" leaflet or go to our Internet site.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

Unable to receive incoming calls

- Make sure your mobile phone is switched on and connected to a network (check for overloaded or unavailable network).
- Check your subscription with your operator (credit, SIM card valid, etc.).
- Make sure you are not forwarded incoming calls.
- Make sure that you have not barred certain calls.

The caller's name does not appear when a call is received

- Check that you have subscribed to this service with your operator.
- Your caller has concealed his/her number.

The sound quality of the calls is not optimal

- You can adjust the volume during a call by means of the  key.
- Check the radio reception indicator .

I am unable to use the features described in the manual

- Check with your operator so make sure that your subscription includes this service.
- Check to be sure this feature does not require an Alkaline accessory.

When I select a number from my directory, the number is not dialled

- Make sure that you have correctly recorded the number in your file.
- Make sure that you have selected the country prefix when calling a foreign country.

Your telephone is a transceiver that operates on GSM networks with 900 and 1800 MHz bands.

The  marking indicates that your telephone complies with 1999/5/EC (R&TTE) directive and that the accessories concerned comply with current EC directives. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: www.taa-mobile.com.

Protection against theft¹⁾

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering *143, 6, 4, 9 and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.

 17 Text Input is licensed under one or more of the following U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,978, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573; European Pat. Nos. 0 942 463 (N9327460.B), 1 010 057 (N950367.D), 1 018 040 (N9505708.2); and additional patents are pending worldwide.

¹⁾ Contact your network operator for service availability.

I am unable to create a file in my directory

- Make sure that your directory is not full; delete some files or save the files in the product's directory.

My callers are unable to leave messages on my voicemail

- Contact your network operator to check service availability.

I can't access my voicemail

- Make sure your operator's voicemail number is correctly entered in "Call services/Voicemail".
- Try to use the network's busy.

I am unable to send and receive messages

- Check your phone memory as it might be full. If necessary, delete some messages.
- Contact your network operator to check service availability, see the messages settings.
- Verify the server centre number with your operator.
- The server centre may be saturated; try again later.

The <<-> icon is displayed

- You are outside the network coverage area.

I have already entered 3 incorrect PIN codes

- Contact your network operator to obtain the PUK code (Personal Unblocking Key).