

**ALCATEL**  
mobile phones

One Touch PRO



One Touch SPORT



**ALCATEL**  
mobile phones

[www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com)

OT-I650

## Introduction .....

TCT Mobile Limited would like to thank you for purchasing this mobile phone.

### G-Sensor with fitness application

Used primarily by sports and physical fitness enthusiasts as an everyday exercise motivator, including pedometer, stopwatch and exercise program planner.

### Shake-shake

Easily skip to the previous/next song, channel or image by shaking your phone heavily leftward/rightward.

### Power multimedia player

Listen to your own music or to the FM Radio wherever and whenever you want.

### Webcam

The 1.3 MegaPixel camera is the best companion for PC instant messaging.

### Bluetooth

With Bluetooth 2.0 supporting A2DP profiles, enjoy handsfree conversations.

### High performance battery

Equipped with a 1000mAh battery is uniquely suited to outdoor applications.

## Table of contents .....

### Safety and use .....5

### General information.....10

#### 1 Your mobile .....12

##### 1.1 Keys .....13

##### 1.2 Main screen icons .....14

#### 2 Getting started .....16

##### 2.1 Set-up.....16

##### 2.2 Power on your phone .....18

##### 2.3 Power off your phone .....19

#### 3 Calls .....20

##### 3.1 Making a call .....20

##### 3.2 Calling your voicemail .....20

##### 3.3 Receiving a call .....21

##### 3.4 During the call .....22

##### 3.5 Conference calls .....23

##### 3.6 Line switching .....24

#### 4 Menu.....25

#### 5 Call register .....27

##### 5.1 Call memory .....27

##### 5.2 My numbers .....27

##### 5.3 Billing .....28

##### 5.4 Call settings .....28

#### 6 Directory .....31

##### 6.1 Consulting your directory .....31

##### 6.2 Creating a file.....33

##### 6.3 Available options.....33

|           |                                         |           |
|-----------|-----------------------------------------|-----------|
| <b>7</b>  | <b>Messages .....</b>                   | <b>35</b> |
| 7.1       | Messages: Text/Multimedia message ..... | 35        |
| 7.2       | Voice message .....                     | 37        |
| 7.3       | Photo message.....                      | 37        |
| 7.4       | Voicemail.....                          | 37        |
| 7.5       | Settings .....                          | 37        |
| <b>8</b>  | <b>My settings.....</b>                 | <b>39</b> |
| 8.1       | Ringtones .....                         | 39        |
| 8.2       | Antenna off mode.....                   | 40        |
| 8.3       | Display .....                           | 40        |
| 8.4       | Shake-shake .....                       | 41        |
| 8.5       | Clock .....                             | 42        |
| 8.6       | Keys .....                              | 42        |
| 8.7       | More settings .....                     | 42        |
| <b>9</b>  | <b>Tools .....</b>                      | <b>45</b> |
| 9.1       | Bluetooth™ .....                        | 45        |
| 9.2       | Organizer .....                         | 46        |
| 9.3       | Alarm .....                             | 47        |
| 9.4       | Calculator .....                        | 47        |
| 9.5       | Converter .....                         | 48        |
| 9.6       | Voice memo .....                        | 48        |
| 9.7       | Morse code .....                        | 48        |
| 9.8       | Memory status.....                      | 49        |
| 9.9       | My shortcuts .....                      | 49        |
| <b>10</b> | <b>Sports.....</b>                      | <b>50</b> |
| 10.1      | Pedometer .....                         | 50        |
| 10.2      | Stopwatch .....                         | 50        |
| 10.3      | Training plans .....                    | 50        |
| 10.4      | Profiles.....                           | 50        |
| <b>11</b> | <b>WAP .....</b>                        | <b>51</b> |
| 11.1      | Homepage.....                           | 51        |
| 11.2      | Bookmarks .....                         | 51        |
| 11.3      | Recent pages .....                      | 51        |

|           |                                                     |           |
|-----------|-----------------------------------------------------|-----------|
| 11.4      | Go to URL .....                                     | 51        |
| 11.5      | Profiles.....                                       | 51        |
| <b>12</b> | <b>Media album .....</b>                            | <b>53</b> |
| 12.1      | My audios .....                                     | 53        |
| 12.2      | My images .....                                     | 54        |
| 12.3      | My videos .....                                     | 54        |
| 12.4      | My creations.....                                   | 54        |
| 12.5      | Unknown files .....                                 | 54        |
| 12.6      | Memory card .....                                   | 54        |
| 12.7      | Managing audios, images, videos and creations ..... | 56        |
| 12.8      | Formats and compatibility .....                     | 57        |
| 12.9      | Memory status.....                                  | 57        |
| <b>13</b> | <b>Camera .....</b>                                 | <b>58</b> |
| 13.1      | Access .....                                        | 58        |
| 13.2      | Camera .....                                        | 58        |
| <b>14</b> | <b>Multimedia player .....</b>                      | <b>61</b> |
| 14.1      | Music player .....                                  | 61        |
| 14.2      | Video .....                                         | 63        |
| 14.3      | FM Radio .....                                      | 63        |
| <b>15</b> | <b>Games .....</b>                                  | <b>65</b> |
| 15.1      | Game settings .....                                 | 65        |
| <b>16</b> | <b>Making the most of your mobile.....</b>          | <b>66</b> |
| 16.1      | PC suite.....                                       | 66        |
| <b>17</b> | <b>Latin input mode/character table.....</b>        | <b>67</b> |
| <b>18</b> | <b>Telephone warranty .....</b>                     | <b>71</b> |
| <b>19</b> | <b>Accessories .....</b>                            | <b>73</b> |
| <b>20</b> | <b>Troubleshooting .....</b>                        | <b>74</b> |

## Safety and use .....

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

### • TRAFFIC SAFETY:

Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.

When driving, do not use your phone and headphone to listen to music or to the radio. Using a headphone can be dangerous and forbidden in some areas.

When switched on, your phone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your phone on top of the dashboard or within an airbag deployment area,
- check with your car dealer or the car manufacturer to make sure that the dashboard is adequately shielded from mobile phone RF energy.

### • CONDITIONS OF USE:

You are advised to switch off the telephone from time to time to optimise its performance.

Switch the phone off before boarding an aircraft.

Switch the phone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, mobile telephones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the phone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, petrol station, or chemical plant, or in any potentially explosive atmosphere.

When the phone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump, etc. In particular when using the phone, you should hold it against the ear on the opposite side to the device, if any.

To avoid hearing impairment, pick up the call before holding your phone to your ear. Also move the handset away from your ear while using the "hands-free" mode because the amplified volume might cause hearing damage.

Do not let children use the phone without supervision.

When replacing the cover please note that your phone may contain substances that could create an allergic reaction.

Always handle your phone with care and keep it in a clean and dust-free place.

Do not allow your phone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C to +55°C.

At over 55°C the legibility of the phone's display may be impaired, though this is temporary and not serious.

Emergency call numbers may not be reachable on all cellular networks. You should never rely only on your phone for emergency calls.

Do not open, dismantle or attempt to repair your mobile phone yourself.

Do not drop, throw or bend your mobile phone.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your phone model (see Accessories List, page 73). TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Remember to make back-up copies or keep a written record of all important information stored in your phone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone.

Parents should monitor their children's use of video games or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.
- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.

When you play games on your phone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow the instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders.



Prolonged exposure to music at full volume on the music player may damage the listener's hearing.

Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

#### • **PRIVACY:**

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your mobile phone regarding taking photographs and recording sounds with your mobile telephone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and duplicate or distribute them, as this may be considered to be an invasion of privacy. It is the user's sole responsibility to ensure that prior authorisation be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your mobile phone (including the operator) disclaim any liability which may result from the improper use of the mobile phone.

#### • **BATTERY:**

Before removing the battery from your phone, please make sure that the phone is switched off. Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).
- Do not puncture, disassemble or cause a short-circuit in a battery.
- Do not burn or dispose of a used battery in household rubbish or store it at temperatures above 60 °C.

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your telephone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centres with specific bins for these items of equipment
- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

#### **In European Union countries:**

These collection points are accessible free of charge.

All products with this sign must be brought to these collection points.

#### **In non European Union jurisdictions:**

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

**CAUTION:** RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

#### • **CHARGERS**

Mains powered chargers will operate within the temperature range of: 0 °C to 40 °C.

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

#### • **RADIO WAVES:**

Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/EC (R&TTE) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.

**THIS MOBILE PHONE COMPLIES WITH INTERNATIONAL AND EUROPEAN REQUIREMENTS REGARDING EXPOSURE TO RADIO WAVES.**

Your mobile phone is a radio transmitter/receiver. It was designed and manufactured to comply with the radiofrequency (RF) exposure thresholds recommended by international requirements (ICNIRP) <sup>(1)</sup> and by the Council of the European Union (Recommendation 1999/519/EC) <sup>(2)</sup>.

These limits are part of a set of requirements and establish authorised radiofrequency levels for the public. These limits were established by independent groups of experts on the basis of regular and detailed scientific assessments. They include a significant safety margin intended to ensure the safety of all, regardless of age or state of health.

The exposure standard for mobile phones is determined by a measurement unit known as the Specific Absorption Rate or "SAR". The SAR limit is set by international requirements or by the Council of the European Union at 2 watts/kilogram (W/kg) averaged over 10 grams of body tissue. The tests used to determine SAR levels were carried out on the basis of standard usage modes with the phones transmitting at their maximum power level over the entire range of frequency bands.

Although the SAR was established at the highest certified level, the actual SAR level for the mobile phone during use is generally much lower than the maximum values. In fact, since mobile phones are designed to operate at many different power levels, they only use the minimum level of power required to provide a connection to the network. In theory, the closer you are to a base station antenna, the lower the power level required by the mobile phone.

<sup>(1)</sup> The ICNIRP requirements are applicable in the following regions: Central America (except Mexico), South America, North and South Africa, Pacific Asia (except Korea), Australia.

<sup>(2)</sup> The European recommendation (1999/519/EC) is applicable in the following regions: Europe, Israel.

The highest tested SAR value for this mobile phone for use at the ear and compliance against the standard is 1.0 W/kg. While there may be differences between the SAR levels on various phones and at various positions, they all meet the relevant International guidelines and EU requirements for RF (radio-waves) exposure.

The World Health Organisation (WHO) considers that present scientific information does not indicate the need for any special precautions for use of mobile phones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep mobile phones away from the head and body (fact sheet n° 193). Additional information about electromagnetic fields and public health are available on the following site: <http://www.who.int/peh-emf>.

Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

#### • LICENCES

Obigo® is a registered trademark of Obigo AB.



microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

#### OT-I650 Bluetooth QD ID B014211



T9 Text Input is licensed under one or more of the following: U.S. Pat. Nos. 5,187,480, 5,818,437, 5,945,928, 5,953,541, 6,011,554, 6,286,064, 6,307,548, 6,307,549, and 6,636,162, 6,646,573; European Pat. Nos. 0 842 463 (96927260.8), 1 010 057 (98903671.0), 1 018 069 (98950708.2); and additional patents are pending worldwide.

## General information .....

- **Internet address:** [www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com)
- **Hot Line Number:** see "TCT Mobile Services" leaflet or go to our Internet site.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: [www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com)

Your telephone is a transceiver that operates on GSM networks with 900, 1800 and 1900 MHz bands.

CE This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: [www.alcatel-mobilephones.com](http://www.alcatel-mobilephones.com).

 
### Protection against theft <sup>(1)</sup>

Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your telephone by entering \* # 0 6 # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

### Disclaimer

There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.

## Your mobile .....

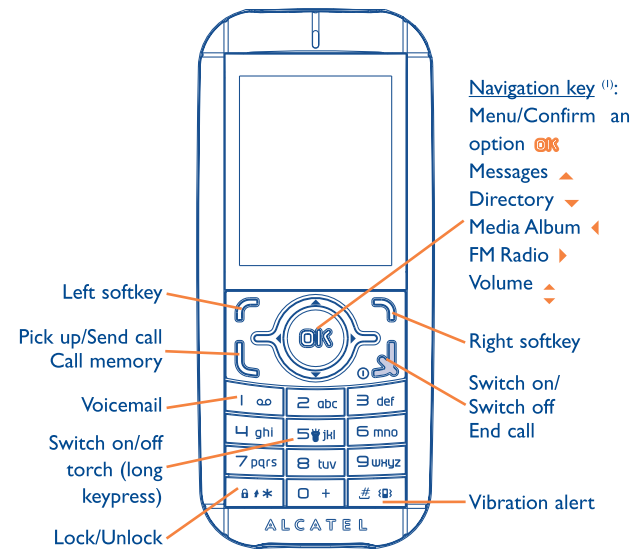

<sup>(1)</sup> Contact your network operator to check service availability.

<sup>(1)</sup> Depending on your network operator.

### 1.1 Keys



Navigation key  
Confirm an option (press the middle of the key)  
Activate/Deactivate "Shake-shake" while playing music/FM Radio or in the idle (long keypress).



Pick up  
Send a call  
Access call memory (Redial) (short keypress)



Switch on/Switch off the telephone (long keypress)  
End call  
Return to the main screen



Left softkey



Right softkey



Access your voicemail (long keypress)



Long keypress to switch on/off torch.



In Edit mode:  
- Short keypress: change input methods  
- Switch from T9 predictive mode to Normal mode  
- Long keypress: access the Symbols table



From main screen  
- Short keypress: #  
- Long keypress: activate/deactivate the vibrator  
In edit mode:  
- Short keypress: (space)  
- Long keypress: add a word

### 1.2 Main screen icons <sup>(1)</sup>



**Battery charge level**



**Vibrate alert:** your phone vibrates, but neither rings nor beeps except for the alarms (see page 39).



**Bluetooth status** (Blue - Activated).



**Bluetooth status** (Connected to an audio device).



**Headset connected.**



**Keypad locked.**



**Call forwarding activated:** your calls are forwarded (see page 28).



**Alarm clock or appointment(s)** (see page 47).



**Level of network reception.**



**Voicemail message arrived.**



**Unanswered calls.**



**FM Radio is on.**



**Torch is switched on.**



**Shake-shake is active.**



**Pedometer is running in background.**



**Training plan(s) programmed.**



**Stopwatch is active.**

<sup>(1)</sup> The icons and illustrations in this guide are provided for informational purposes only.



-  **WAP alerts** <sup>(1)</sup>.
-  **Roaming.**
-  **Memory card scanning in progress.**
-  **Memory card scanning completed.**
-  **Double line** <sup>(2)</sup>: indicates the selected line.
-  **GPRS connection status** (Blue - Activated).
-  **Multimedia player active.**
-  **USB cable connected.**
-  **Reception of a message in progress.**
-  **Sending a message.**
-  **Silence mode:** your phone neither rings, beeps nor vibrates except for the alarms (see page 39).
-  **Message unread**
-  **Message list is full:** your terminal cannot accept any new messages. You must access the message list and delete at least one message on your SIM card.
-  **Preferred tariff areas** <sup>(2)</sup>.
-  **Antenna off mode.**
-  **A2DP connected.**

<sup>(1)</sup> Depending on your network operator.

 
<sup>(2)</sup> Contact your network operator to check service availability.

## 2 Getting started .....

### 2.1 Set-up


#### Inserting and removing the SIM card <sup>(1)</sup>

You must insert your SIM card to make phone calls.

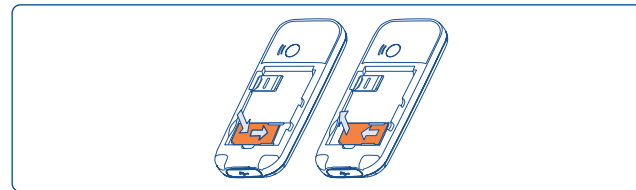

Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press it and slide it out. Please power off your phone before you remove the SIM card.


#### Installing the battery

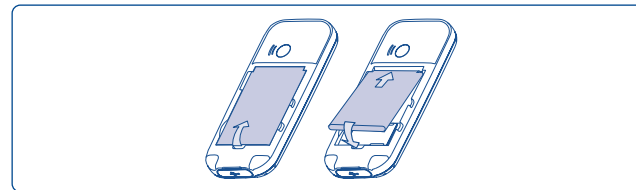 

Insert and click the battery into place, then close the telephone cover.

<sup>(1)</sup> Check with your network operator to make sure that your SIM card is 3V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

### Charging the battery

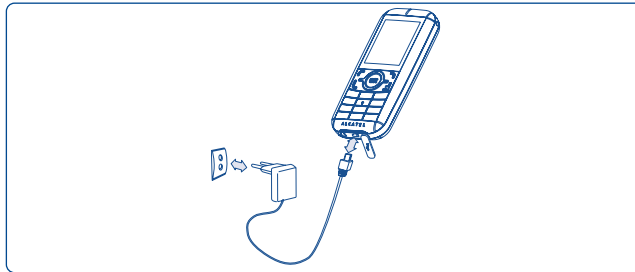 


Connect the battery charger

- The charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The mains socket must be near to the phone and easily accessible (avoid electric extension cables).
- When using your telephone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery (  ).



The charge is complete when the animation stops. Only use Alcatel chargers.

### Removing and installing the back cover

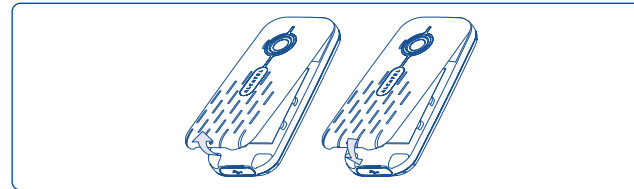 

## 2.2 Power on your phone

Hold down the  key until the telephone powers on, type in your PIN code if necessary and then confirm with the  key. The main screen is displayed.



If you don't know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code near your telephone and store your card in a safe place when not in use.

If cell broadcast messages are displayed, use the  key to browse through them in full or press the right softkey to return to the main screen.

While the phone is searching for a network, "**Searching/Emergency**" will be displayed.

In the power on screen, you also have access to "**Media album**", "**Camera**" and "**Multimedia player**" functions even if no SIM card inside.

## 2.3 Power off your phone

Hold down the  key from the main screen.

# 3 Calls .....

## 3.1 Making a call

Dial the desired number then press the  key to place the call. If you make a mistake, you can delete the incorrect digits by pressing the right softkey.

To hang up the call, press the  key.



To enter characters "+", "V" (for tonewait) or "P" (used to store a number with extension number), hold down the  + key (the following characters will scroll by: 0, +, P, V).

### Making an emergency call

If your phone is covered by the network, dial emergency number and press the  key to make an emergency call. This works even without a SIM card and without typing the PIN code or unlocking the keypad.

## 3.2 Calling your voicemail <sup>(1)</sup>

Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time. To access your voicemail, hold down the  key.

<sup>(1)</sup> Contact your network operator to check service availability.

If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number at a later date, refer to **"My numbers"** (see page 27).



To use your voicemail service from abroad, contact your network operator before leaving.

### 3.3 Receiving a call

When you receive an incoming call, press the  key to talk and then hang up using the  key.

If the  icon is displayed, the vibrator is activated and there is no ringtone. If the  icon is displayed, the phone neither rings nor vibrates.



The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

#### Muting the ringtone

Press the right softkey once while the telephone is ringing. Answer the call by pressing the  key.

#### Rejecting a call

Press the  key once or the right softkey twice.

### 3.4 During the call

#### Available functions

During a call, you can use your directory, your diary, short messages, etc. without losing your correspondent by pressing the  key.



Call on hold



Ongoing call



Handsfree

**WARNING:** move the handset away from your ear while using the **"handsfree"** option because the amplified volume might cause hearing damage.



Directory



Messages



Organizer



Services <sup>(1)</sup>



Voice memo (record your current call).

Besides, you can switch the audio speech from handset to BT device when connected.

<sup>(1)</sup> Contact your network operator to check service availability.

### Adjusting the volume

You can adjust the sound level during a call using the  key.

### Handling two calls

- Answering a second call (Ensure that **“Call waiting”** is activated, see page 28).
- To call a second party during a call, dial the number directly.

### 3.5 Conference calls <sup>(1)</sup>

Your phone allows you to talk to several people at the same time (up to 5). If you are on a double call, press **“Options”** and select **“Conference”** then confirm with the  key. If a third call comes in, answer it by pressing the  key and speak with your new correspondent.

This correspondent becomes a member of the conference if you press **“Options”** and select **“Add to conference”**, and then confirm by pressing . Pressing  disconnects the current call.

To end the conference call, press **“Options”** and select **“End conf.”**.

<sup>(1)</sup> Contact your network operator to check service availability.

### 3.6 Line switching <sup>(1)</sup>

Your SIM card can contain two distinct telephone numbers. Under **“Call register”**, choose **“Line switching”** and then select a default line; all your outgoing calls will be made from this number. Incoming calls, however, will continue to use the two lines.



The services programmed on the default line do not impact those selected on the other line.

<sup>(1)</sup> Contact your network operator to check service availability.

## 4 Menu .....

From the menu interface, you may directly access features by pressing the corresponding key (number keys and  and  keys).

### 1. GAMES

### 2. MEDIA ALBUM

- My audios
- My images
- My videos
- My creations
- Unknown files
- Memory card
- Memory status

### 3. TOOLS

- Bluetooth
- Organizer
- Alarm
- Calculator
- Converter
- Voice memo
- Morse code
- Memory status
- My shortcuts

### 4. CAMERA

- Camera
- My creations

### 5. DIRECTORY

### 6. MESSAGES

- Messages
- Voice message
- Photo message
- Voicemail
- Settings

### 7. CALL REGISTER

- Call memory
- My numbers
- Billing
- Call settings

### 8. MY SETTINGS

- Ringtones
- Antenna off mode
- Display
- Shake-shake
- Clock
- Keys
- More settings

### 9. SPORTS

- Pedometer
- Stopwatch
- Training plans
- Profiles

### \*. SERVICES <sup>(1)</sup>

- VAS
- Service dial number
- Data account
- My One Touch

### 0. MULTIMEDIA PLAYER

- Music player
- Video
- FM Radio

### #. WAP

- Homepage
- Bookmarks
- Recent pages
- Go to URL
- Profiles

<sup>(1)</sup> Contact your network operator to check service availability.

## 5 Call register .....

### 5.1 Call memory

You can access your call memory by pressing the  key from the main screen. Choose the option of the desired list:

-  Unanswered calls
-  Outgoing calls (Redial)
-  Answered calls

Select a number of the call memory and press the “**Options**” softkey to **View** call details, **Create text/multimedia message**, **Save** or **Delete** the selected number or clear the entire list (**Delete all**).

### 5.2 My numbers

Type in or modify your telephone number or the number to access your voicemail and confirm by pressing . Your telephone number is usually written on your SIM card.

### 5.3 Billing

You can access different items with this option:

- Amount**
  - You can view the total cost of charged calls, modify it or reset it and enter the cost of a Telecom Unit in the currency of your choice.
- Duration**
  - You can view the total duration of all outgoing calls or reset it.
- GPRS counter**
  - Management of the volume of data communications charged for (in kilobytes).
- Beep duration**
  - You can activate or cancel the beep emitted during a call with a specified frequency (enter the frequency and confirm by .

### 5.4 Call settings <sup>(1)</sup>

You can access a number of items with this option:

#### 5.4.1 Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

#### 5.4.2 Call forwarding

You can activate, cancel or verify the status of the call forwarding to the voicemail or to a specified number. The following configurations are possible:

- Unconditional: systematic forwarding of all your calls. The  icon is displayed.

<sup>(1)</sup> Contact your network operator to check service availability.

- Conditional: if your line is busy, if you don't answer or if you are outside the network range.
- If busy, no reply or unreachable.

#### 5.4.3 Call barring

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

- |                                  |                                                                                         |
|----------------------------------|-----------------------------------------------------------------------------------------|
| <b>Outgoing calls</b>            | • The following configurations are possible:                                            |
| • All calls                      | • All outgoing calls are barred.                                                        |
| • All calls except SIM directory | • All outgoing calls except those in SIM directory are barred.                          |
| • International calls            | • Outgoing international calls are barred.                                              |
| • International except home      | • Outgoing international calls except those to your country of subscription are barred. |
| <b>Incoming calls</b>            | • The following configurations are possible:                                            |
| • All calls                      | • All incoming calls are barred.                                                        |
| • All calls except SIM directory | • All incoming calls except those in SIM directory are barred.                          |
| • Roaming                        | • Incoming calls are barred when you are abroad.                                        |
| <b>Cancel all barring</b>        | • Deactivate all call barring.                                                          |

- Change barring PW** • Change the original PW for activating call barring.

#### 5.4.4 Caller ID

Query CLIP status and activate/deactivate CLIP.

#### 5.4.5 Conceal ID

Query CLIR status and activate/deactivate CLIR.

#### 5.4.6 Line switching <sup>(1)</sup>

Line switch between line 1 and line 2.

#### 5.4.7 Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not get through the first time.

<sup>(1)</sup> Depending on your SIM card.



## 6 Directory .....

### 6.1 Consulting your directory

To access the **directory** from the main screen, press the ▼ key <sup>(1)</sup> or press the  key and select the  icon from the menu.

You can also customise a quick access to your contact with the keypad customisation (see page 41).

You have 4 directories:

-  SIM directory
-  General
-  Phone directory
-  Group

In addition to the directories already provided, you can create up to 5 groups (maximum 100 entries per group).

#### Searching for a name by its first letter

You can search for the person's name by pressing the key associated with the first letter of his/her name.

#### Read a file

Select a name from your directory, then press  to read the file.

#### Sending Vcard via Bluetooth

Selecting the Vcard you wish to transfer ("**Options\Send vCard\By Bluetooth**").

#### Making the call

Press the  key once the name is selected. If several numbers are associated with the name to be called, you must first choose the number from the list (Mobile, Home, Office, etc.) using the  key. Press the  key to make the call.



Information in the directory and the diary may be sent to and received from a computer using the PC suite.

<sup>(1)</sup> Depending on your network operator.

## 6.2 Creating a file

Select the directory in which you wish to create a file, press the **"Options"** softkey, select **"Create file"** then **OK**.

When you create a new contact in the product directory, at least one of the following fields must be filled in: First name, Last name, Group, Mobile, Home, Ringtone, Image, Video, Work, Fax, Email, Birthday, Company.

You can move from one field to another using the key.



If you use your phone abroad, store the numbers in your directories in international format "+" followed by the country code (see page 20).

## 6.3 Available options

From the list of names in SIM directory, General directory or Group you can access the following options via left softkey:

- |                                                |                                                                                                                                    |
|------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| <b>View</b>                                    | <ul style="list-style-type: none"> <li>• View a complete file: name, numbers, address, e-mail, etc.</li> </ul>                     |
| <b>Create file</b>                             | <ul style="list-style-type: none"> <li>• Create a file (name, numbers, address, e-mail, etc.) in the desired directory.</li> </ul> |
| <b>Create text/<br/>multimedia<br/>message</b> | <ul style="list-style-type: none"> <li>• Send an SMS/MMS to a contact you selected from the directory.</li> </ul>                  |
| <b>Edit</b>                                    | <ul style="list-style-type: none"> <li>• Modify the contents of a file: name, number, ringtone, image, etc.</li> </ul>             |
| <b>Delete</b>                                  | <ul style="list-style-type: none"> <li>• Delete the selected file.</li> </ul>                                                      |

## Copy

## Move

## Delete all

## Copy all

## Send vCard

## Settings

## Create group

## Delete group

## Associate/

## Not associate

- Copy a file from SIM directory to Phone directory, vice versa.
- Move a file from SIM directory to Phone directory, vice versa.
- Delete all the files in the current directory.
- Copy the whole directory to the SIM or General directory only if there is sufficient memory.
- Exchange data via MMS or Bluetooth (see page 45).
- More information and setting.
- Create a group of files.
- The group and its files will be completely deleted.
- If the original one in SIM or General directory is modified, the one in a group will be updated accordingly, otherwise not.

## 7 Messages.....

You can create, edit and receive SMS, MMS and email with this mobile phone.

MMS is a message whereby you can send images, photos, animations and sounds to other compatible mobiles and e-mail addresses.



The MMS function can only be used if the service is provided by your operator, and if your contract includes the MMS option and if all the parameters for MMS have been entered (see page 38).

### 7.1 Messages:Text/Multimedia message <sup>(1)</sup>

#### 7.1.1 Create message

From the main menu select "**Messages**" to create text/multimedia message.

You can type a message but you can also modify a predefined message in **Templates** or customize your message by adding pictures, photos, sounds, titles, etc (only available while editing a MMS). While writing a message, select "**Options**" to access all the messaging options.

<sup>(1)</sup> Depending on your network operator.

You can save your messages that you send often to **Drafts** or **Templates**.



An SMS message of more than 160 characters (the number of characters depends on the languages you writing in) will be charged as several SMS. An MMS message containing photos and/or sounds may also be billed as more than one message.

#### 7.1.2 Inbox

All received messages (read and unread) are stored in the same Inbox.

When viewing your messages, you will find the following status icons, depending on the type of message:  unread SMS in phone,  unread SMS in SIM card,  read SMS in phone,  read SMS in SIM card,  unread MMS in phone,  read MMS in phone,  message reception in progress and  message sending in progress.

#### Receiving and reading SMS/MMS

When you receive a new message, the following message is displayed: "**X new message!**", a beep sounds, the  icon shows up, a line with the number of messages appears on the screen. Select this line and press **OK** to read it directly from the main screen.

Once you have read the message, the following options are given: **Reply**, **Forward** the message to another person, **Edit**, **Delete**, **Delete all** and extract number or URL (**Use number/Use URL**).

#### 7.1.3 Unsent

All failed to be sent messages.

#### 7.1.4 Sent

All sent messages.

### 7.1.5 Drafts

All drafts messages.

### 7.1.6 WAP alerts

Store WAP push messages.

### 7.1.7 Empty folder

Delete all messages in “Inbox/Unsent/Sent/Drafts”.

### 7.1.8 Templates

A list of predefined messages is available. Select one, edit it if required, and then send it. You can also create your own predefined text messages.

## 7.2 Voice message

Record voice and send as MMS.

## 7.3 Photo message

Take a photo and send as MMS.

## 7.4 Voicemail

All vocal messages received.

## 7.5 Settings

### 7.5.1 Text message

**Profile settings** • Profiles can be retrieved directly from SIM card. Alternatively, you can create your own profile.

**General setting** • Delivery report, request for acknowledgement of delivery report On/Off. Reply path <sup>(1)</sup> show reply path.

**Memory status** • Memory used on the phone.

**Preferred storage** • Select default message storage, SIM or phone.

**Pref. Bearer** • Bearer preference.

### 7.5.2 Multimedia message

**Edit** • Set edit mode, image size and signature.

**Sending** • Set the values for validity period, Read report, etc.

**Retrieve** • Set the values for Home network, Roaming network, etc.

**Filter** • Set criteria for filtering.

**Profiles** • Follow the same procedure as for setting your WAP connection.

**Memory status** • Memory used on the phone.

### 7.5.3 Broadcast SMS <sup>(1)</sup>

**Receive mode** • Enable to receive broadcast SMS.

**Read message** • Store the received messages.

**Languages** • Language selection.

**Channel setting** • Add/Edit channels.

<sup>(1)</sup> Depending on your network operator.

## 8 My settings .....

From the main screen, select the icon menu  and select the function of your choice in order to customise your telephone.

### 8.1 Ringtones

#### Available functions

To modify the sound settings, select an option using the ◀ ▶ key:

-  A group of predefined settings that allows you to quickly adapt your phone to your environment.
-  Select a melody from the list using the ◀ ▶ key then confirm by pressing **OK** (see page 61).
-  Mode: you may set your phone ringtone to Normal, Discreet (ring with beep), Vibrate (all sounds are replaced by vibrations except for alarms), Vibrate and ring, Vibrate then ring, Beep and vibrate, Silence (no sounds except for alarms, the  icon will be displayed). Ringtones sound with increasing volume.
-  Adjust the volume using the ◀ ▶ key.
-  Select the type of key beep.
-  Select a melody for a new incoming message.
-  Select a melody for an alarm or appointment.
-  Power on beep.
-  Power off beep.

### 8.2 Antenna off mode

Antenna off mode, under which you will have no voice call, Bluetooth or messaging functions, can be used to increase music playback time.

### 8.3 Display

#### 8.3.1 Main screen

The main screen is displayed when you switch on your telephone.

You can access the main functions from the main screen either with the navigation key or by pressing **OK** and by selecting the icons displayed on the screen <sup>(1)</sup>.

By selecting “**Main screen**” you can customise it by replacing the default image or animation displayed on your telephone.



When you receive an event (incoming call, SMS/MMS, notifications, etc.) the icon, type and number of events will be displayed on your main screen allowing you to consult them directly.

#### 8.3.2 Screen saver

If you activate this option, the screen saver will be displayed a little while after the main screen. You can choose a picture or an animation as your screen saver.

#### 8.3.3 Power On/Off <sup>(2)</sup>

You can customise your welcome animation or image that appears when you switch on your phone.

You can also customise your OFF screen with an image or animation.

<sup>(1)</sup> Depending on the operator.

<sup>(2)</sup> Depending on the model.

### 8.3.4 Menu display

- Board**
  - All the main menu icons displayed on one screen.
- Image**
  - One full-screen icon displayed at a time.
- List**
  - Main menus displayed line by line.

### 8.3.5 Special effects

Liven up menu display with selecting "On".

 
## 8.4 Shake-shake

While playing music, listening to FM Radio, being in the idle or alarming, easily skip to the previous/next song, channel, image or snooze alarm by shaking your phone heavily leftward/rightward when it is "On".

Hold down the  key to Activate/Deactivate "Shake-shake" while playing music/FM Radio or in the idle.



For better performance of battery, please turn off "Shake-shake" when unnecessary.

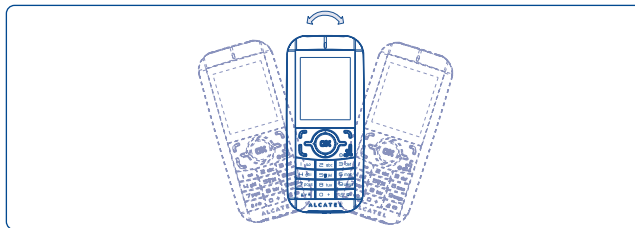

Only the images stored in "Media album\My images" would be detected while shaking and the resolution of images is up to 1280x1280.

## 8.5 Clock

It allows you to have settings of date and time, including 12/24h format. Also you can set the daylight saving adjustment.

## 8.6 Keys

### 8.6.1 Softkeys & Navigation key

These keys have predefined functions, which vary from one model to another (operator services, games access, or Games & Applications, ...). You can customise <sup>(1)</sup> them, assigning the functions, numbers from directory and URL you wish to each key.

### 8.6.2 Keys

By customising your keys, you can access any function directly from the main screen.

## 8.7 More settings...

### 8.7.1 Auto lock

Your keypad would be locked automatically or you may also lock it manually by holding down the  key.

#### Unlock the keypad

Hold down the  key when locked.



The keypad will be unlocked automatically on receiving a call or plugging in the charger.

<sup>(1)</sup> Depending on your network operator.

### 8.7.2 Backlight

#### Screen

- It allows you to reduce brightness for better performance of batteries and save power during periods of expected inactivity.

#### Keypad

- You may customise your keypad light by selecting On/Off when activated.

### 8.7.3 Languages <sup>(1)</sup>

Display language for messages (select using ). The "**Automatic**" option selects the language according to the home network (if available).

### 8.7.4 Dictionary

You have a dictionary to which you can add your own words in addition to those suggested by the predictive input system. When you consult your dictionary, you can add, modify or erase words by using the "**Options**" softkey.

### 8.7.5 Input mode <sup>(2)</sup>

Please see chapter "Latin input mode", page 67. In addition to the specific characters table for Cyrillic, Chinese, other data input modes are also available in your telephone. This feature allows you to write short messages and add names with special characters to your directory.

### 8.7.6 Security

#### Activate PIN

- The SIM card protection code is requested each time as the phone is powered on if this code is activated.

<sup>(1)</sup> Contact your network operator to check service availability.

<sup>(2)</sup> Depending on the language.

### Change PIN

- Change PIN code.

### Change PIN2

- A protection code for certain SIM card features (Billing/Cost/FDN, etc.) will be requested if you attempt to access it, if the code is activated. Select to update it with a new one (between 4 and 8 digits).

### Activate phone code

- It is requested each time as the phone is powered on if this code is activated.

### Change phone code

- Change phone password, its initial one is 1234.

### Fixed dialed number

- It allows the phone to be "locked" so that it can only dial certain numbers, or numbers with certain prefixes. To activate this function, PIN2 code is mandatory.

### 8.7.7 Networks

#### Network selection

- Preferred networks
- List of networks to which you wish to be connected in order of priority (update this list using .
- Select network
- The choice of the network connection is left up to the user.
- Search mode
- Network connection switching between "**Manual**" and "**Automatic**".

#### GPRS connection <sup>(1)</sup>

- When needed
- GPRS mode active depending on connection requirements.
- Always
- GPRS mode continuously active.

<sup>(1)</sup> Depending on network availability.

## 9 Tools .....

### 9.1 Bluetooth™ <sup>(1)</sup>

Access this feature by selecting “**Tools**” from the main menu, then “**Bluetooth**”.

To use your phone with a Bluetooth device, you need to proceed in two steps:

- Pair and register the device to your phone,
- Select it to use hands-free communication. Only one Bluetooth audio device (your Bluetooth headset or your Bluetooth car kit) can be connected during the communication.

#### Pair and register your Bluetooth device

Activate the Bluetooth feature by selecting the “**Tools\Bluetooth\Activation\On**” option. Then enter the “**Device list**” menu to search for connectable Bluetooth devices and select the device you want to be paired with in the list. If the Bluetooth device has no keyboard, enter its default password to register it with your phone. If the Bluetooth device has keyboard/keypad, enter the same set of password on both handset and the device to get it registered.

From the list, press the “**Options**” softkey to connect/disconnect, rename, search for new devices or delete an unconnected one from the list.

<sup>(1)</sup> You are highly recommended to use Alcatel OT-BM81 (mono) and OT-BM61 (stereo) Bluetooth headsets, which have been tested and proved fully compatible with OT-I650.



Don't forget to turn on your Bluetooth device and activate the pairing mode while pairing it with your phone.

#### Available functions

- Data transmit** • Exchange files with another bluetooth device.
- Handle a call** • Initiate or receive a phone call with a Bluetooth headset.
- Listen to music** • Support A2DP profile.

#### Settings

- **Visibility:** Select whether you want to hide (“**Hidden**”) or show to all (“**Shown to all**”) your phone.
- **My phone's name:** you may change your phone name, which is visible to the others.



Always activate Bluetooth in your phone first before connecting it to a Bluetooth device. Be aware that Bluetooth activation will slightly affect battery life of your phone.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within short range. Please make sure that the Bluetooth headset or the Bluetooth car kit and your mobile phone are in this range and set as “**Visibility**”.

Your phone is Bluetooth™ v1.1, v1.2 and v2.0 compatible.

### 9.2 Organizer

Once you enter this menu from “**Tools**”, there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.



**Available options:**

- Create**
  - Create an appointment.
- View appointments**
  - See today's appointments.
- List all appointments**
  - See all the created appointments.
- Jump to date**
  - Input the required date and it will be immediately highlighted.

**9.3 Alarm**

Your mobile phone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.

- Repeat**
  - You may select Once (default)/Every day/Days.
- Snooze**
  - The alarm will repeat at regular intervals. You may snooze it by shaking your phone (see page 41).

**9.4 Calculator**

You can use it to perform basic calculations. Hold down the  key to get the decimal point. Confirm with the  key or the left softkey.

**9.5 Converter****9.5.1 Unit converter**

You can use the Weight and Length conversion by selecting the unit you wish to convert via , then press  to input the digits. Finally confirm with  key or left softkey.

**9.5.2 Currency converter**

The currency converter allows you to:

- Convert a currency directly into euros and vice versa <sup>(1)</sup>.
- Convert between international currencies, both currencies must be selected by   keys. You are requested to input the appropriate exchange rate.

**9.6 Voice memo**

This feature enables you to record a call by selecting “**Voice memo**” while communicating. To record a sound, select “**Voice memo**”, then “**New record**”.

**9.7 Morse code**

Your phone is embedded with 20 pcs of morse messages to be sent by torch, where it blinks to attract people's attention.

<sup>(1)</sup> For the former European national currencies, the currency converter uses the final Euro conversion rates set on 31/12/1998, which are used in accordance with official conversion rules.

## 9.8 Memory status

It will indicate how much space is used and how much is currently free on your phone and memory card (if any).

### 9.8.1 Phone memory

View available memory space.

Your phone's memory is shared among several functions: directory, scheduler, messages, voice messages, images, melodies, games and video clips.

### 9.8.2 Memory card (MicroSD card)

View the memory available on your MicroSD card.



You are advised to save large files (like songs,...) on your microSD card. File name with up to 35 characters will be supported.

## 9.9 My shortcuts

Access the shortcuts already programmed.

To programme new shortcuts: select **"My shortcuts"** if you want to create a quick access to a function, Directory, or WAP Bookmarks, etc.

## 10 Sports .....

In **"Sports"** mode, you can monitor and record your exercise, make an exercise plan, review your progress and perform tests.

### 10.1 Pedometer

Used originally by sports and physical fitness enthusiasts, pedometer help you to measure speed, distance, steps and calories burned, even you may set goals, which it could track.



An optional position, your pocket of trousers to place your phone or strapping it onto your waist is recommended for its reasonable accuracy when pedometer is activated.

### 10.2 Stopwatch

StopWatch is simple application for measuring time with possibility to register several results and suspend/resume measurement.

### 10.3 Training plans

There would be a monthly-view calendar for you to set several simultaneous targets.

### 10.4 Profiles

Up to 3 profiles to be varied from people to people for Pedometer's better performance.

## **WAP** .....



### **11.1 Homepage**

Launch the WAP browser with the homepage of the default profile.

### **11.2 Bookmarks**

Access your favorite sites.

### **11.3 Recent pages**

Pages which you recently browsed.

### **11.4 Go to URL**

Enter the URL of WAP site.

### **11.5 Profiles**

#### **11.5.1 Edit profile**

Edit existing profile or create new profile.

#### **11.5.2 Browser options**

Set the value for timeout and auto loading of image.

#### **11.5.3 Push message settings**

Enable or disable receiving service message from WAP.

#### **11.5.4 Clear cache**

Empty the phone's cache memory.

#### **11.5.5 Clear cookies**

Clear cookies from website.

#### **11.5.6 Trusted certificates**

Certificates of trusted sites.

## 12 Media album

You will have an access to all audio and visual files stored in phone or memory card in Media Album.

### 12.1 My audios

Choose an audio for the ON/OFF screen, for an incoming call, a message alert, power on/off ringtone or an alarm and scheduler.

The “**My audios**” album contains the following folders <sup>(1)</sup>:

- Music: full track music.
- Melodies: melodies that can be set as ringtone.
- Recorded: all recorded sounds.
- General: contains all audio files stored in phone or memory card.



DRM: Digital Rights Management feature allows sounds and images to be played while protecting the associated copyright. DRM counter-based files and files with expired rights will not be automatically played when scrolling the list.

<sup>(1)</sup> The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.

### 12.2 My images

You can select an image or a photo as main screen or the ON/OFF screen. You may also change it, send it by MMS or Bluetooth or assign it to a contact in the directory.



The images will be displayed in alphabetical order.

### 12.3 My videos

The “**My videos**” album contains all video clips embedded and downloaded in phone or memory card.

### 12.4 My creations

This feature stores all the photos captured by your mobile phone.

Thumbnails are displayed for preview. In addition, you can use “**Mark**” function, to select multiple files.

### 12.5 Unknown files

Store files of unsupported format.

 
### 12.6 Memory card

You will have access to all files stored in memory card here.



When a memory card is inserted for the first time, it will be scanned and the default folders will be created.

**Insert the memory card:**

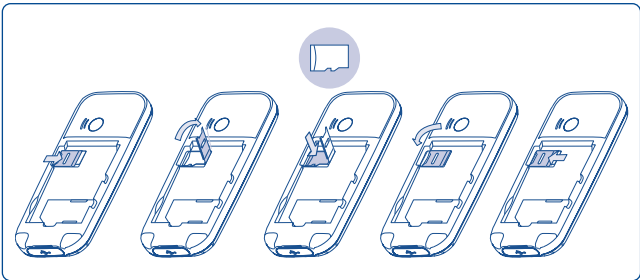

To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.

**Available options**

- New folder** • Create more folders.
- Delete folder** • Remove folders.
- Rename folder** • Rename folder's name.
- Empty folder** • Delete all files in one folder.
- Memory card** • To format it or to query its memory status.

**12.7 Managing audios, images, videos and creations**

According to the item chosen, you can access some of the functions below:

- View** • View the selected image. If you want to view all the pictures in your folder in a slideshow hold down  on the current picture.
- Play** • Play the selected video.
- Send <sup>(1)</sup>** • Send the audio/image/video.
- Delete** • Delete the audio/image/video selected (not applicable for embedded items).
- Set as** • - Image->main screen, screen saver, switch ON/OFF, assign it to a contact.  
• - Sound->ringtone, message beep, switch ON/OFF, assign it to a contact.  
• - Video->Screen saver, switch ON/OFF or assign it to a contact.
- Modify** • Modify an image <sup>(2)</sup>.
- Download** • Download new items.
- Rename** • Rename the audio/image/video.
- Sort** • Sort the files by name, type, time and size.

<sup>(1)</sup> Files marked with  cannot be sent.  
<sup>(2)</sup> Only applies to images that can be cleared but not for copyrighted files.

- Move to phone/ memory card** • Move a file from the product memory to the memory card and vice-versa.
- Properties** • Display part of the ID3 Tag content of an MP3 file.
- Activate** • DRM file option.
- Copy to phone/ memory card** • Copy a file to the phone memory or the memory card.
- Delete** • Delete the files except the embedded ones.
- Delete all** • Delete all the files except the embedded ones.
- List view** • View the files in the type of list.
- Slideshow <sup>(1)</sup>** • Show the images continuously.
- Capture** • Access “**Camera**” function directly.
- Mark/Unmark** • Mark/Unmark a click on a file for further operation.
- Mark/Unmark all** • Mark/Unmark a click on all files.
- Delete marked** • Delete all the marked files.

## 12.8 Formats and compatibility <sup>(2)</sup>

- Sounds: mp3, m4a, aac, midi, wav, amr
- Images: jpg, gif
- Videos: 3gp, mp4

## 12.9 Memory status

See page 49.

<sup>(1)</sup> Only applies to images that can be cleared but not for copyrighted files.

<sup>(2)</sup> Depending on product and market.

# 13 Camera .....

Your mobile phone is fitted with a camera for taking photos that you can use in different ways:

- store them in your “**Media album**”.
- send them in a multimedia message (MMS) to a mobile phone or an email address.
- customise your main screen (see page 40).
- select them as incoming call image to a contact in your directory.
- transfer them by data cable or microSD card to your computer.
- modify your photos through adding frames (see page 60).

## 13.1 Access

To access the function from the main screen: press the  key to access the menu and select the  icon.


## 13.2 Camera

### 13.2.1 Take a photo, save or delete

The screen acts as the viewfinder. Position the object or landscape in the viewfinder and press  to take the picture and the pictures will be automatically saved. But if you don't want it, you may directly delete it by pressing right softkey “**Delete**”.

### 13.2.2 Settings in framing mode

Before taking the photo, you can adjust a number of settings by using the following shortcuts:

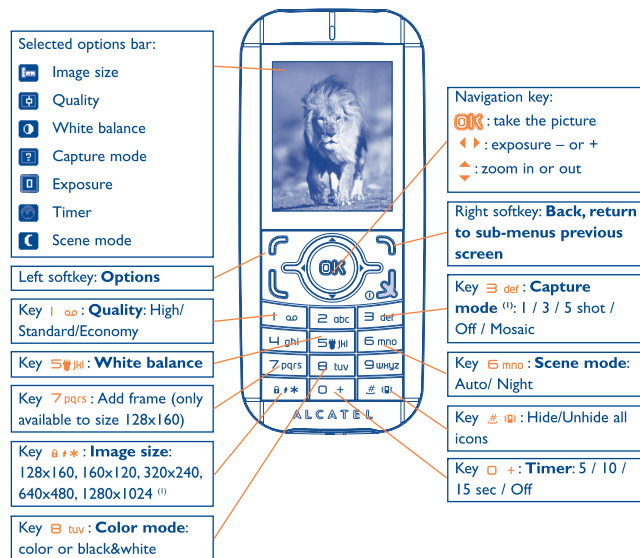 

<sup>(1)</sup> No "3 shot / 5 shot" for the image size of "1280x1024".

From the photo shot screen, press the “Options” softkey not only to access: “Image size”, “Capture mode”, “Quality”, “Timer”, “White balance”, “Color mode”, “Add frame”, but also following ones:

- Media album** • Go to the media album feature.
- Saving location** • You may choose saving location if MicroSD card is inserted.
- Restore default** • Make all settings recover as default value.
- Hotkeys** • List all hotkeys.

### 13.2.3 Options available after taking the photo

Once you have taken a photo, you can **Send** your photo, assign it to a contact or a main screen, etc, or **Delete** it, **Modify** it (see below), or access your **Media album**.

### 13.2.4 Modifying images

Access the “Media album\My creations” after taking a photo, and then select “Modify”.

## 4 Multimedia player .....

Access this feature from the main menu by selecting “**Multimedia player**”. You will have full flexibility of managing music both on your mobile and memory card.

### 14.1 Music player <sup>(1)</sup>

You can have access to your music files through one of the following:

- All songs**
  - Contains all songs both on phone memory and memory card.
- Playlist**
  - List created on the PC.
- Update songs**
  - Update the information of songs saved in memory card.
- Album/Artist/Genre**
  - Music files are categorized by Album, Artist or Genre based on information stored in the tags. Those missing such information will be classified as “**Unknown files**”.
- My star list**
  - You can simply add your favorite songs to “**My star list**” by holding down  during playing music (max 100).

<sup>(1)</sup> Only music files in mp3, m4a and aac format will be visible in Multimedia player.

Use keys to manage the Multimedia player:

- : Set the volume level
- : Go to previous/next title (short keypress)  
Fast play backward/forward (long keypress)
- : Switch sound between handset and Bluetooth.
- : Activate/deactivate “Shake-shake” (long keypress).

#### 14.1.1 Settings

 
Access by pressing the right navigation key for following options:

- Play mode**
  - Normal, Repeat current, Repeat all, Shuffle and Repeat shuffle. You may also customise it simply by pressing  during playing music.
- Equalizer**
  - Different music styles preset in the phone. You may also customise it simply by pressing  during playing music.
- Play in Bluetooth**
  - In playing screen, press the  key to shift between play in speaker and play in BT stereo bluetooth.
- Play in Bluetooth/Play in phone/Play in Phone & Bluetooth**
  - Play musics in Bluetooth, Phone or both in Phone & Bluetooth. In playing screen, press the  key to shift between play in speaker and play in BT stereo bluetooth.
- Display**
  - Enable your player to display spectrum, song info. or lyric.



**Turn on(off)  
quick navigation**

- Playlist could be viewed by inclining your phone onward/backward.

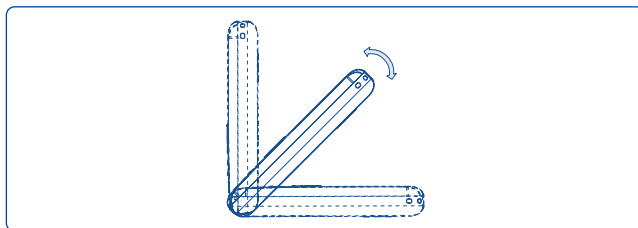**14.1.2 Playing with lyrics**

Lyrics can be displayed in synchronization with the music.

**14.2 Video**

Contains all video clips both in phone and memory card and supports playback.



Only the videos in the predefined folders could be recognized.

**14.3 FM Radio**

Your phone is equipped with an FM Radio <sup>(1)</sup> with RDS functionality. You can use the application as a traditional FM radio and saved channels or with parallel visual information related to the radio program on the display, if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.



To use it, you must plug in your headset, which works as an antenna connected with your phone.

<sup>(1)</sup> The quality of the radio depends on the coverage of the radio station in that particular area.

**Available options:****Channel list**

- Open the list of saved stations.

**Save channel**

- Save the current tuned station to the "**Channel list**".

**Auto search**

- Start auto search and stations will be automatically saved to "**Channel list**".

**Enter the  
frequency**

- Enter the frequency manually.

**Turn off**

- Stop playing the radio.

**Record**

- Record the radio and files will be automatically saved to "**Tools\Voice memo\List**".

**Settings**

- Use ◀ ▶ navigation keys to do settings.

**Activate  
loudspeaker/Play  
in headset**

- Listen to the radio using loudspeaker or headset.

**Activate mono  
mode/stereo mode**

- Switch between mono and stereo mode.

**Play in Bluetooth**

- Play radio in Bluetooth if connected.

**Update station  
name <sup>(1)</sup>**

- Save RDS information as station name in the channel list.



Hold down the ▶ key to enter the mode of "**Manual tuning**" and go to the previous/next station by pressing the ◀ ▶ navigation keys in the interface of FM Radio.

<sup>(1)</sup> Availability on RDS information detected.

## 15 Games .....

Your Alcatel phone may include 2 G-sensor games, which use motion detection as an interface to control the games.

### 15.1 Game settings

It allows you to manage game settings, in which you may set "**Sound effect**" and "**Vibration**".

## 16 Making the most of your mobile.....

### 16.1 PC suite

A CD-ROM of PC suite is provided in box. You can download software upgrade for free from the website. The PC suite includes:

- Backup/restore
  - You can backup the important data in your mobile and restore them when needed.
- GPRS Modem
  - Use your mobile phone to connect PC to the internet.
- Multimedia Personalization
  - Customize your mobile with images, animations and melodies.
- Music management
  - Create and transfer playlists with music files and provide lyrics editing.
- Messaging
  - You can compose SMS/MMS easily on your PC and transfer them to phone.

#### Supported Operating Systems

- Windows 2000/XP/Vista

## 17 Latin input mode/ character table <sup>(1)</sup> .....

To write messages, there are two writing methods:

- Normal
- Predictive with the T9 mode

### Normal

This mode allows you to type a text by choosing a letter or a sequence of characters associated with a key. Press the key several times until the desired letter is highlighted.

When you release the key the highlight character is inserted into the text.



 
 
### Predictive T9 mode

This mode speeds up the writing of your text.


Write the word by pressing a key between **2 abc** and **9 wxyz**. Press the key once and the word will be modified each time you press a key. As you go on, the word will keep changing.

Example: For “**Tomorrow**”, press on the following keys:

**8** tuv, **6** mno, **6** mno = Too -> **6** mno -> tomorrow

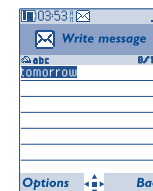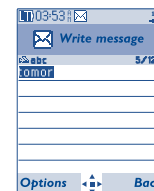
 
<sup>(1)</sup> For specific languages as Chinese, please see specific input leaflets.

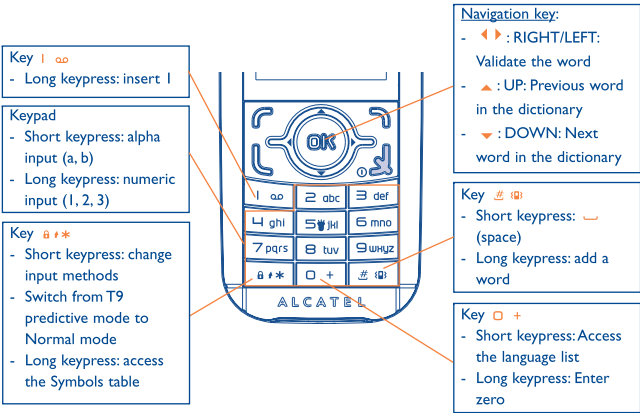


| Key    | Latin uppercase | Latin lower case |
|--------|-----------------|------------------|
| 1 ∞    | .,-?!'@:1       | .,-?!'@:1        |
| 2 abc  | ABC2ÃÄÅÆÇ       | abc2äåæç         |
| 3 def  | DEF3ÊËĚŁ        | def3ëéěł         |
| 4 ghi  | GHI4ĞĠİĬ        | ghi4ğġîï         |
| 5 jkl  | JKL5ĶĻŁ         | jkl5ķļł          |
| 6 mno  | MNO6ÑŇÕÖØ       | mno6ñņõöø        |
| 7 pqrs | PQRS7ŔŖŠŠ       | pqrs7ŗŗšš        |
| 8 tuv  | TUV8ȚȚŮŮ        | tuv8țțůů         |
| 9 wxyz | WXYZ9ÝŽŽŽ       | wxyz9ýžžž        |

This characters table is generic. All available characters are not displayed. The candidate letters may vary according to languages.

Symbol table

 Hold down the ∅ \* key to display the symbols table; the cursor is positioned in the centre. Use the navigation key to move it and the OK key to select.

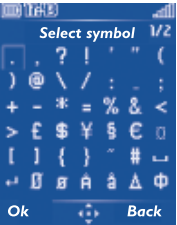

## 8 Telephone warranty.....

Congratulations on choosing this mobile phone - we hope that you will be completely satisfied with it.

Your phone is guaranteed against any deviation from technical specifications for a period of twelve (12) months from the date specified on your original invoice, subject to any other specific provisions <sup>(1)</sup>.

The warranty terms defined in the manual also apply to the battery and accessories sold with the phone but for a period of six (6) months <sup>(2)</sup> from the date of purchase shown on your original invoice.

Under the terms of this warranty, you must immediately inform your vendor (or any repair centre approved by TCT Mobile Limited or its affiliates, which are listed on our website <http://www.alcatel-mobilephones.com>) in case of a conformity defect on your phone, and present the invoice given to you at the time of purchase. The vendor or repair centre will decide whether to replace or repair, as appropriate, all or any part of the telephone or accessory found to be defective; this warranty covers the cost of parts and labour but excludes any other costs. Repair or replacement may be carried out using reconditioned components offering equivalent functionality.

Servicing under the terms of this warranty, especially repair, modification or replacement of products, shall entitle to a ONE <sup>(1)</sup> month warranty unless there are statutory provisions to the contrary.

This warranty shall not apply to damage or defects to your mobile phone and/or accessory caused by:

- 1) not following the instructions for use or installation,
- 2) not being compliant with technical and safety standards applicable in the geographical area where the equipment is used,

<sup>(1)</sup> The mandatory warranty period may vary if overriding statutory provisions are applicable in your jurisdiction.

<sup>(2)</sup> The life of a rechargeable mobile phone battery in terms of conversation time, standby time, and total service life, will depend on the conditions of use and network configuration. Batteries being considered expendable supplies, the specifications state that you should obtain optimal performance for your mobile phone during the first six months after purchase and for approximately 200 more recharges.

- 3) improper maintenance of sources of energy, and of the overall electric installation,
- 4) accidents or consequences of theft of the vehicle in which the telephone is transported, acts of vandalism, lightning, fire, humidity, infiltration of liquids, inclement weather,
- 5) connecting to or integrating into the phone any equipment not supplied or not recommended by TCT Mobile Limited or its affiliates, without their express written consent for such,
- 6) any servicing, modification or repair performed by individuals not authorised by TCT Mobile Limited or its affiliates, the vendor or the approved maintenance centre,
- 7) use of the mobile phone and/or its accessory for a purpose other than that for which it was designed,
- 8) normal wear,
- 9) malfunctions caused by external causes (e.g., radio interference from other equipment, power voltage fluctuations),
- 10) modifications made to the equipment even if required by changes in regulations and/or modification of network parameters,
- 11) faulty connections resulting from unsatisfactory radio transmission or caused by the absence of radio relay coverage.
- 12) Equipment on which markings or serial numbers have been removed or altered, and handsets on which labels have been removed or deteriorated shall be excluded from the warranty.

In accordance with the applicable law, your product is warranted against hidden defects (defects inherent in the design, manufacture, etc.).

There are no express warranties, whether written or oral, other than this printed limited warranty, express or implied, of any nature whatsoever.

In no event shall TCT Mobile Limited or its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited to trading loss, commercial loss, to the full extent those damages can be disclaimed by law. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

 
## 19 Accessories <sup>(1)</sup> .....

The latest generation of Alcatel GSM mobile phones offers a built-in handsfree feature that allows you to use the telephone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.



Standard charger

Stereo headset

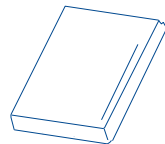

Battery



Only use your telephone with Alcatel batteries, chargers and accessories compatible with your model.

<sup>(1)</sup> Pictures for reference only.

## 20 Troubleshooting .....

Before contacting the aftersales department, you are advised to follow the instructions below:

- You are advised to switch off the telephone from time to time to optimise its performance.
- You are advised to fully charge (  ) the battery for optimal operation.
- Avoid storing large amounts of data in your telephone as this may affect the performance of your telephone.

and carry out the following checks:

### **My mobile phone will not switch on**

- Press  until the screen comes on
- Check the battery charge level
- Check the battery contacts, remove and reinstall your battery, then turn your telephone back on

### **My phone has not responded for several minutes**

- Press the  key
- Remove the battery and re-insert it, then switch the phone back on

### **My screen is difficult to read**

- Clean your screen
- Use your mobile phone in accordance with the recommended conditions of use

### **My mobile phone turns off by itself**

- Check that your keypad is locked when you are not using your mobile phone
- Check the battery charge level

**My mobile phone has a low level of autonomy**

- Make sure you respected the complete charge timing (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication

**My mobile phone will not charge properly**

- Make sure that your battery is not completely discharged; the battery charge indicator can take several minutes and may be accompanied by a quiet whistling sound
- Make sure charging is carried out under normal conditions (0°C +40°C)
- Make sure your battery is inserted. It must be inserted before plugging in the charger
- Make sure you are using an Alcatel battery and charger
- When abroad, check that the electrical current is compatible

**My mobile phone will not connect to a network**

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 44)
- Try connecting at a later time if the network is overloaded

**SIM card error**

- Make sure the SIM card has been correctly inserted (see page 16)
- Verify with your operator that your SIM card is 3V compatible; the old 5V SIM cards cannot be used
- Make sure the chip on your SIM card is not damaged or scratched

**Unable to make outgoing calls**

- Make sure you have dialled a valid number and press the  key
- For international calls, check the country and area codes
- Make sure your mobile phone is connected to a network, and that the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not barred outgoing calls (see page 29)

**Unable to receive incoming calls**

- Make sure your mobile phone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 28)
- Make sure that you have not barred certain calls

**The caller's name does not appear when a call is received**

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her number

**The sound quality of the calls is not optimal**

- You can adjust the volume during a call by means of the  key
- Check the radio reception icon level 

**I am unable to use the features described in the manual**

- Check with your operator to make sure that your subscription includes this service
- Make sure this feature does not require an Alcatel accessory

**When I select a number from my directory, the number is not dialled**

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

**I am unable to create a file in my directory**

- Make sure that your SIM card directory is not full; delete some files or save the files in the product directory (i.e. your professional or personal directories)

**My callers are unable to leave messages on my voicemail**

- Contact your network operator to check service availability

**I cannot access my voicemail**

- Make sure your operator's voicemail number is correctly entered in "**My Numbers**"
- Try later if the network is busy

**I am unable to send and receive messages MMS, Vox MMS**

- Check your phone memory available as it might be full
- Contact your network operator to check service availability and check MMS parameters (see page 38)
- Verify the server centre number or your MMS profile with your operator
- The server centre may be saturated; try again later

**The  icon is displayed on my standby screen**

- You have saved too many short messages on your SIM card; delete some of them or archive them in the product memory

**The << - >> icon is displayed**

- You are outside of the network coverage area

**I have already entered 3 incorrect PIN codes**

- Contact your network operator to obtain the PUK code (Personal Unblocking Key)

**I am unable to connect my telephone to my computer**

- Install first of all Alcatel's PC suite
- Use "Install the connection" and perform the installation
- Check that your computer meets the requirements for Alcatel's PC Suite installation

**I am unable to download new files**

- Check for free space
- Delete some files
- Select the MicroSD Card to store the files you downloaded
- Check your subscription status with your operator

**The phone can't be detected by others via Bluetooth**

- Make sure that Bluetooth is turned on and your mobile phone is visible to other users (see page 45)

ALCATEL is a trademark of Alcatel-Lucent  
and used under license by  
TCT Mobile Limited.

All rights reserved © Copyright 2008  
TCT Mobile Limited.

TCT Mobile Limited reserves  
the right to alter material or technical  
specification without prior notice.