

HUAWEI nova 2 Plus

User Guide



Contents

Foreword

Unboxing your Phone

Inserting a SIM card and microSD card	2
Charging your device	2
Quick charging	4
Viewing the battery status	5

Getting Started

Initial setup	6
Enabling or disabling a SIM card	6
Naming a SIM card	7
Selecting the default mobile data SIM	7
Setting the default SIM card	7
Connecting to the Internet	7

Screen and Display

Home screen	9
Locking and unlocking the screen	17
Notification panel and status bar	20
Navigation bar	23
Themes	25
Global search	25
Screenshot	27
Screen recording	32
Split-screen mode	34
Using motion gestures	38
Eye comfort mode	39
Display settings	40

Network and Sharing

Mobile Internet	42
Wi-Fi	44
Bluetooth	46
Multi-screen	47
VPNs	48
Using Huawei Share to transfer files between two Huawei devices	49
Using a USB port to transfer data	50

Security and Backup

Fingerprint recognition	52
-------------------------	----

Security settings	53
Camera and Gallery	
Camera options	55
Photos and video recordings	55
Object recognition and Pro camera mode	59
Taking a beautiful photo in Portrait mode	60
Portrait mode	61
Blurring the background of your photos	61
Using Gesture control to take a photo	61
Using Moving picture mode	62
Slow motion recording	62
Time-lapse mode	62
Adding watermarks to photos	63
Audio notes	63
Managing shooting modes	63
Configuring the camera settings	64
Viewing photos and videos	65
Organising albums	66
Editing a photo	68
Editing Videos	70
Configuring Gallery	71
Calls and Contacts	
Making calls	72
Answering calls	74
Making a conference call	75
In-call options	76
Managing call logs	77
Call settings	78
Creating a contact card	80
Creating a new contact	81
Importing and exporting contacts	83
Managing contacts	84
Searching for contacts	85
Sharing contacts	86
Adding a contact to your favourites	86
Changing contact photos	87
Viewing call records for individual contacts	87
Assigning a ringtone to a contact	87
Contact groups	88
Messaging and Email	
Sending a message	89

Setting apps to close automatically when the screen is locked	105
Configuring Phone Manager	105

Tools

Logging in to two social media accounts at the same time	106
Clock	106
Sound recorder	107

System Features and Settings

Power on and off timer	109
Restarting your device	109
Changing the system language	109
Changing the input method	109
Input method settings	110
Editing text	110
Airplane mode	111
Configuring the sound settings	111
One-hand mode	112
Do not disturb mode	113
Viewing memory and storage information	114
Setting the date and time	114
Enabling location access	114
Restoring factory settings	115
OTA updates	115
Viewing product information	116
Accessibility features	117

Obtaining help

Personal Information and Data Security

List of safety features

Legal Notice

Foreword

Read this guide carefully before using your device.

All pictures and illustrations in this document are for your reference only and may differ from the final product.

Some features in this guide may not be supported by certain devices or carriers.

Symbols and definitions

	Description	Highlights important information and tips, and provides additional information.
	Reminder	Indicates potential problems that may arise if proper care or attention is not given, such as device damage or data loss.
	Warning	Warns you about potential hazards that could cause serious injury.


Unboxing your Phone

Inserting a SIM card and microSD card

Your phone features a 2-in-1 SIM card slot. You can insert two nano-SIM cards, or one nano-SIM card and one microSD card.

- The SIM card slot only supports nano-SIM cards. Contact your network provider for a new or replacement nano-SIM card.
- Only use standard nano-SIM cards to avoid damaging the SIM card tray.
- Ensure that the card is in the correct position and keep the card tray level when inserting it into your device.
- Be careful not to hurt yourself or damage your device when using the SIM eject pin.
- Store the SIM eject pin out of the reach of children to prevent accidental swallowing or injury.
- The SIM eject pin should only be used to eject the SIM card tray. Inserting the SIM eject pin into other holes may damage your device.

- 1 Touch and hold the power button and touch  to turn off your device.
- 2 To remove the card tray, insert the SIM eject pin included with your device into the small hole next to the card tray.

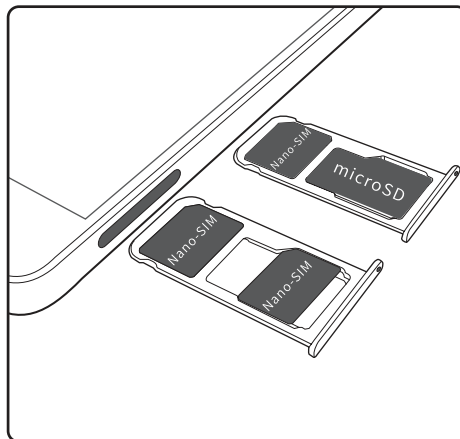

- 3 Insert a SIM card or microSD card into the card tray.
- 4 Insert the card tray back into your phone in the correct orientation.

Charging your device

Your device displays a low battery warning when the battery is nearly empty. Charge your device immediately to prevent it from switching off automatically.

Using a charger to charge your device

Connect your device to a socket using the factory-provided charger and USB cable.

