

Copyright © 2010 Huawei Technologies Co., Ltd. All Rights Reserved

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permission

 , HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other product, service and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers, thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED “AS IS”. EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Safety Precautions

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section “Warnings and Precautions”.



Do not switch on your phone when it is prohibited to use mobile phones or when the phone may cause interference or danger.



Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not use your phone while driving.



Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



 
Follow any rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.



Do not place your phone or its accessories in containers with strong electromagnetic field.



Switch off your phone in aircraft. The phone may cause interference to control signals of the aircraft.

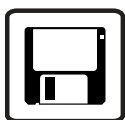

Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.



 
Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Observe any laws or regulations on the use of wireless device. Respect others' privacy and legal rights when using your wireless device.



Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.

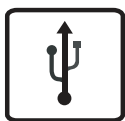

Strictly follow the relevant instructions of this manual while using the USB cable. Otherwise your phone or PC may be damaged.



Use only approved batteries and chargers to avoid the risk of explosions.

Contents

1.Introduction

Your Phone	1
Security	8
Text Input	8

2.Customized Settings

Phone Settings	11
Display Settings	11
Call Settings	12
Network Settings	12

3.Call Function

Making or Ending a Call	13
Answering or Rejecting a Call	13
Managing Contacts	13
Viewing the Call Records	14

4.Message Function

Message	15
-------------------	----

5.Connection Function

Connectivity Settings	16
USB	16

6.Entertainment Function

Music Player	19
Camera	19

Browser	19
-------------------	----

7.Business Function

Calendar Management	20
File Management	20

8.Warnings and Precautions

Electronic Device	22
Medical Device	22
Potentially Explosive Atmospheres	22
Traffic Security	23
Operating Environment	24
Preventing Hearing Damage	24
Safety of Children	25
Accessories	25
Battery and Charger	25
Cleaning and Maintenance	26
Emergency Call	27
Disposal and Recycling Information	28
Reduction of Hazardous Substances	29
EU regulatory conformance	29

 
1. Introduction

Your phone can operate in virtually all countries, automatically switching between WCDMA 900/2100 and GSM/GPRS 900/1800 networks.

NOTE: The services supported by your phone should be also supported by the network from where you use the phone. For details, contact your service provider.

Your Phone

Appearance and Keys

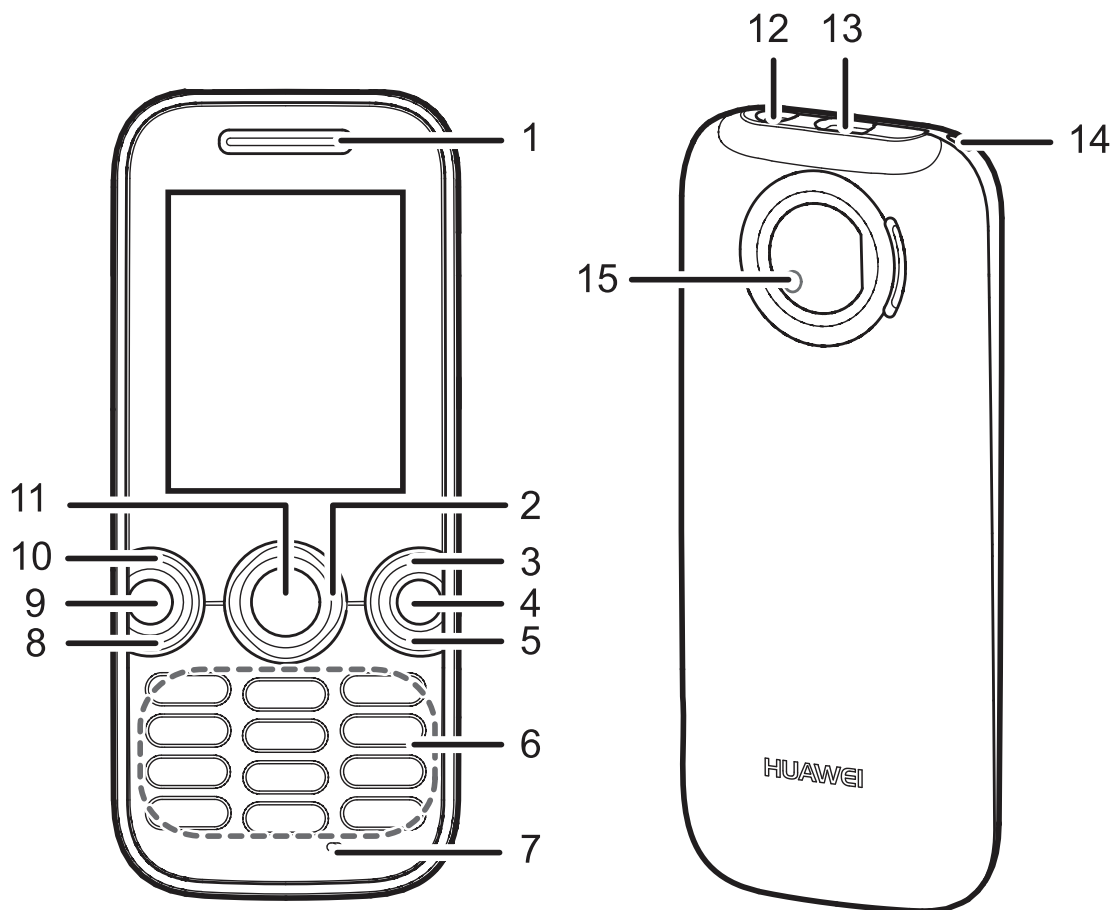

1. Earpiece

2. Scroll key

3. Right
function key

4. Clear key	5. Power/End key	6. Number keys
7. Microphone	8. Send key	9. Music key
10. Left function key	11.OK key	12. Headset Jack
13. Charger connector/ Cable connector	14. Strap hole	15. Main camera

Left function key	Active the function indicated at the left of the prompt bar.
Scroll key	• Up scroll key: Scroll through a menu. • Down scroll key: Scroll through a menu. • Left scroll key: Switch to the previous shortcut menu on the standby screen or decrease the volume during a call. • Right scroll key: Switch to the next shortcut menu on the standby screen or increase the volume during a call.
Send key	• Make or answer a call. • Enter the Call log screen in standby mode.
Music key	Launch the Music player .

Right function key	Active the function indicated at the right of the prompt bar.
Clear key	Delete a character before the cursor.
Power /End key	• End an ongoing call or reject an incoming call. • Return to the standby mode. • Press and hold it to power on or power off the phone.
OK key	Confirm a selection.

 
SIM/USIM Card and Memory Card

Load your SIM/USIM card before using your phone. And only unload the SIM/USIM card and the battery after powering off your phone. To use the SIM/USIM card properly, please read the following instructions carefully.

NOTE:


- *Keep the SIM/USIM card out of the reach of children.*
- *The SIM/USIM card and its metal contacts can be easily damaged by scratching or bending. Ensure care when you carry , load or remove it.*
- *Always disconnect the charger from the phone before loading or removing the SIM/USIM card.*

To load the SIM/USIM card, please according to the following figures.

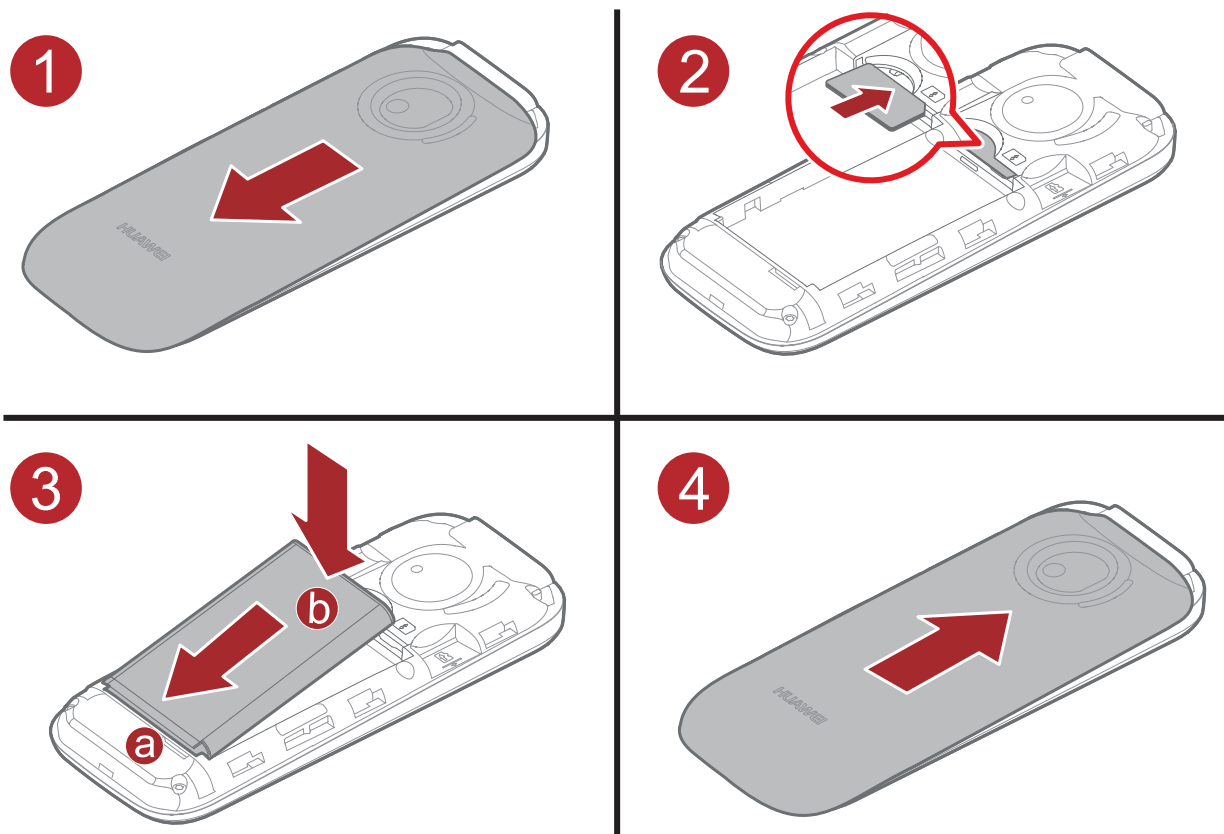

Your phone supports a memory card (microSD) with a capacity up to 8 GB.

 To load the memory card, please according to the following figure.

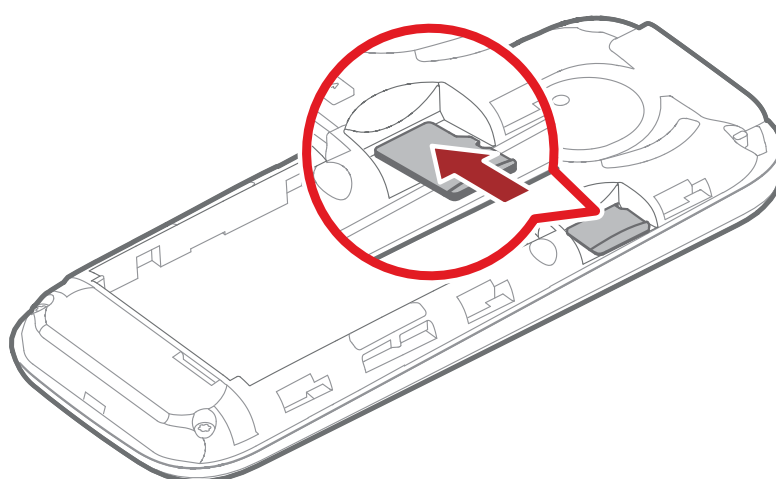

Charging the Battery

 
NOTE:

- *The battery discharges even while not being used. If you have not used it for a long time, please recharge it first.*
- *The charging time depends on the environmental temperature and the age of the battery.*
- *Do not strike, throw or cause any kind of violent shock to the battery, otherwise liquid leakage, body damage, overheating, fire or explosion may occur.*
- *The battery can be recharged but eventually wears out. If the battery lasts for a shorter time period than usual after being charged normally, replace it with a battery of the same type.*
- *Charge the battery by using the charger supplied with your phone.*

Before charging the battery with a cable charger, ensure that the battery has been properly loaded into your phone.

To charge the battery, first plug in the charger connector to a power socket, and then insert the plug of the cable into the connector of the phone as shown in the following figure.

The figure is for reference only. The actual appearance is subject to your mobile phone and accessories delivered.

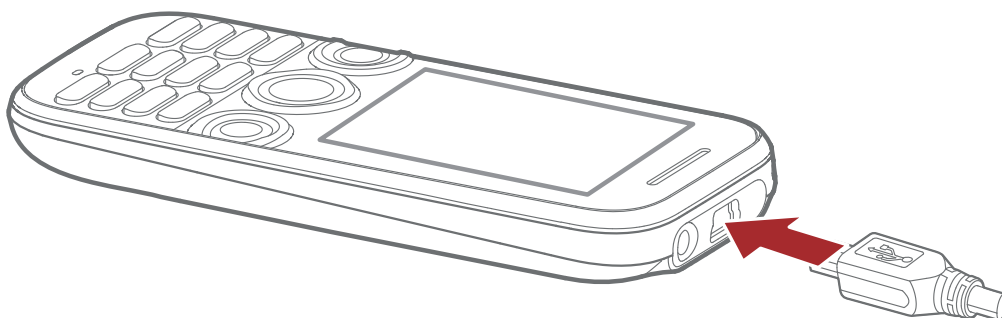

NOTE:

- *The plug of the charger is in trapezium shape. Reversely inserting the plug may damage the mobile phone and charger.*
- *When the battery power level is very low, the phone makes alert sounds and displays a prompt. When the battery power level is too low, the phone will power off automatically.*
- *When the battery is being charged, the charging indicator blinks continuously. When the charging indicator stops blinking, it indicates that the battery is full.*

Screen Icons

The icon bar displays the phone status. The following table illustrates the icons that may appear on this bar.

	Indicates signal strength.		Indicates power level of the battery.
	The general profile is activated.		The silent profile is activated.
	The Meeting profile is activated.		The Outdoor profile is activated.



The Offline profile is activated.



My profile 1 profile is activated.



My profile 2 profile is activated.



The headset is plugged in.



The phone is currently in a GSM or WCDMA network.



Your PC connects to the Internet through your phone.



You are using the roaming service.



You have new text messages.



The microSD card is installed.



You have new multimedia messages.



The phone is in a call.



Alarm clock is enabled.



You have new PUSH messages.



Music player runs in the background.

Security

Phone or SIM/USIM Card Security Settings

NOTE:

- *For certain SIM/USIM cards, you need to enter the PIN2 code to use certain special functions.*
- *If you enter a wrong PIN code or wrong PIN2 code for three consecutive attempts, the SIM/USIM card is locked. To unlock the SIM/USIM card, enter the PIN Unlocking Key (PUK) code or PUK2 code.*
- *The PIN code, PIN2 code, PUK code, or PUK2 code is provided together with the SIM/USIM card. For details, consult your service provider.*
- *The initial phone lock code is **000000**.*

Select **Settings > Security**.

- Enable or disable the phone lock and PIN lock.
- Change the phone lock code, PIN code, and PIN2 code.
- Reset your phone to the factory settings.
- If your SIM/USIM card supports the Fixed Dialer Number (FDN) function, you can set the limit for phone numbers.

Text Input

NOTE: While entering text:

- *Press the # key to switch between input methods. The current input method name displayed on the upper right corner of the screen.*

- *Select **Settings** > **Phone** > **Text input settings** > **Predictive input** to enable or disable the predictive input method.*
- *Select **Settings** > **Phone** > **Text input settings** > **Input language** to set the input language.*
- *Press the * key to display the symbols list.*
- *Press the Clear key to delete the letter before the cursor.*

Predictive Input Method

With the predictive input method, you can easily and quickly enter words. Press the relevant key that corresponds to the desired letter and this method will offer you candidate words.

Press each key carrying the desired letter once, and then the predictive text scheme will present the candidate words composed by the letters you have entered in the drop-down menu.

Traditional Input Method

When predictive input method is off, you can use traditional input method for entering alphabetic characters.

Repeatedly press the number key that carries the letter to be entered when it appears on the screen.

Number Input Method

In a text editing screen, press and hold the number keys to enter corresponding numeric characters.

You can also press successively the # key to switch to the "123" numeric input method, and enter corresponding numeric characters by pressing the number keys.

Symbol Input Method

You can press the * key to display the symbols list and then select symbols to input.

You can also press the key with number 1 to input the commonly-used symbols in a text editing screen (except numeric input method).

2. Customized Settings

Phone Settings

Select **Settings** > **Phone**, you can change the settings of the phone.

- Set the profiles.
- Set the system date and time.
- Set the storage location.
- Set the phone language.
- Set the text input settings.
- Set the keypad to be locked on or off automatically.
- Set your phone to power on or off automatically.
- Set power saving mode.
- See the memory status of phone, memory card and smart card.
- See the version information of the phone.

NOTE: *In the standby mode, you can press and hold the * key to switch between the current profile and the meeting profile.*

Display Settings

Select **Settings** > **Display**. You can change the settings for the phone display.

- Set the wallpaper layout for the home screen.
- Set the standby screen to shortcuts mode or consise mode.
- Set the backlight delay time for the screen.

- Set the operator name on or off.

Call Settings

Select **Settings** > **Call**. You can change the call settings.

- Active or deactivate the call waiting.
- Set the network to forward voice calls or data and video calls to another number.
- Set the network to bar the calls.
- Set the phone to remind you of the call duration before the end of each minute.
- Set to answer a call by answer key or by any key.
- Set the call duration on or off.
- Set the headset to answer the call automatically when no one answers it in 2 seconds, 5 seconds, or 10 seconds, if this function is enabled.
- Set the auto redial on or off.
- Set the network to show your number or hide your number.

Network Settings

Select **Settings** > **Network**. You can change the settings for the network. Following options are available: **Mode**, **Select network**, **Primary operator** and **Cell info display**.

3. Call Function

Making or Ending a Call

1. Enter a number or select a contact. Press the send key to make a voice call.
2. During a call, you can select **Options** to perform operations in the option list.
3. Press the end key to terminate the call.

Answering or Rejecting a Call

1. Answer a call according to the different answer modes.
 - If the answer mode is **Any key**, press any key except the end key.
 - If the answer mode is **Answer key**, press the send key.
 - If the headset is in use, press the control key on the headset.
2. Press the end key or select **Options** > **Reject** to reject a call.

Managing Contacts

Creating a Contact

To add a new contact, perform one of the following operations:

- Enter a number in standby mode, and then select **Options** > **Save number**.

- In **Contacts** screen, select **Options > Create contact** to create a new contact.
- Select a record from **Call log** screen, and then select **Options > Save to Contacts** to add number to a new contact or an existing contact.

Searching for a Contact

You can find a contact from the contacts list. Enter the contact name you are searching for directly. The contact is displayed. You can also find a contact by entering the initials of the first name or the last name of the contact.

Managing a Group

In the **Contacts** screen, press the left or right scroll key to select **Groups**. And then select a group:

- Select **Options** for the following options: **Open**, **Add group**, **Create Group message**, **Edit**, **Delete**, **Memory status**, and **Manage contacts**.
- Press the OK key to view the details. And then select **Add member** to add members. To delete a group member, select a member from the group member list, and then select **Options > Remove contact**.

Viewing the Call Records

Select **Call log** in the main menu and then press the left or right scroll key to select **All**, **Missed**, **Received** or **Dialed** . Then select **Options** to perform operations in the option list.

4. Message Function

Message

The screen displays the number of words or bytes of a message. If the characters you enter exceed this limit, the text is divided into two or more continuous messages when it is sent.

Sending a Message

1. Select **Messages** > **Create message** to access the message editing screen.
2. During editing a message:
 - You can select **Options** > **Add attachment** to add attachment files.
 - You can select **Options** to perform operations in the option list.
3. After editing the message, select **Options** > **Add recipient** to add a recipient's number.
4. Press the OK key to send the message.

Viewing a Message

Your phone provides four mailboxes for message. **Inbox** stores received messages. **Drafts** stores created and saved messages. **Outbox** stores the messages that failed to be sent. **Sent** stores sent messages.

1. Select a mailbox from **Messages**.
2. Select a message, and then select **Options** to perform the operations of the option list.

5. Connection Function

Connectivity Settings

Select **Settings** > **Connectivity**. You can set the Network access point.

NOTE:

- *Your phone supports USB 2.0.*
- *The USB driver is embedded in the mobile phone.*
- *The PC Options software supplied on your phone will run automatically after you connect your phone to the PC .*

USB

You can synchronise data between your phone and PC, surf the Internet with your phone and read the memory card by USB cable.

1. Connect your phone with a PC through USB cable delivered with your phone.
2. The *PC Options* software supplied on your phone will run automatically.
3. Select *HUAWEI Mobile Connect via the phone* to perform the USB-Based Internet Access operation; and select *File Transfer* to perform the microSD Card Reader operation.
4. For the first time, follow the guide to complete the installation.

NOTE:

- *To connect your phone with a PC through USB cable, first connect the USB connector to your phone, and then connect the other end of the cable to the PC. To disconnect your phone from the PC, first disable the PC Options, then disconnect the USB connector from the PC, and finally disconnect the USB cable from your phone.*
- *If the PC cannot recognise your phone when connecting through the USB cable, power off and restart the PC and then retry.*
- *Please do not plug the USB cable in and out of your phone frequently.*

USB-Based Internet Access

To access the Internet by USB, make sure that your PC supports the USB function and your SIM/USIM card supports the Internet access service. You may need the username and the password. For details, please contact your service provider.

NOTE:

- *Only Windows 2000, Windows XP, Windows 7, and Windows Vista are supported.*
- *You can also use the built-in Internet wizard of the Windows operating system to access the internet.*

microSD Card Reader

The function of microSD card reader and the other functions using the USB cable are incompatible. If you enable the microSD card reader, other functions using the USB cable are unavailable.

After reading the files, right-click on the device icon at the notification area of your PC to delete the device on your PC.

6. Entertainment Function

Music Player

Select **Media > Music player** to start music player. You can play kinds of music, sort music by artists, albums, set the playlist, and view the latest playlist.

Adding a Music Playlist

1. On the **Music player** screen, select **Options > Media library > Playlist** to see all the playlists.
2. Select **Options > Create** to create a new playlist.
3. Enter this playlist, select **Add** to add songs to the playlist.

Playing Music

On the **Music player** screen, select **Options > Media library > Playlist** to see all the playlists. Select a playlist to play.

Camera

Select **Media > Camera** to start the camera.

When the camera is started, you can press the OK key to take a picture. Select Options to perform operations in the option list.

Browser

The built-in browser makes it easy to browse any webpage. You can access the browser by selecting **Browser** from the main menu.

7. Business Function

Calendar Management

Using the Alarm Clock

Select **Organizer** > **Alarm**. You can select one alarm from the list, and then press the OK key to set an alarm clock.

When it is time for an alarm clock to ring, the selected alarm tone is played and a prompt is displayed. You can stop the ringing and snooze by pressing any key (except left function key and power key).

If your phone is powered off, the alarm clock will still ring. When the alarm rings, you can choose to power on the phone.

Select an alarm clock from the list, and press the left function key to deactivate it.

Using the Calendar

Select **Calendar**. You can select **Options** > **Add** to create task, event, anniversary or business trip for the current day. The schedule prompt is the same with alarm prompt.

Creating a Memo

Select **Organizer** > **Memo**. You can store important events on your phone.

File Management

Select **File mgmt.** You can manage the **Camera album**, **Pictures**, **Music**, **Recorders**, **Videos**, **Games&Apps** and

Others files conveniently. Select a file, then select **Options** to perform the operations of the list.

NOTE:

- *When the phone detects and recognizes the memory card, **Memory card** is displayed as a tab on the **File mgmt** screen.*

8. Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the mobile safely. Read this information carefully before using your device.

Electronic Device

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

Potentially Explosive Atmospheres

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths.

Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of

the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp or dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between 0°C and 40°C while the device is being charged. Keep the ambient temperature between 0 °C to 40 °C for using the device powered by battery.

Preventing Hearing Damage

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

Safety of Children

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

Accessories

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors such as metal materials, keys or jewelries. Otherwise, the battery may be short-circuiting and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte

touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.

- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.
- Danger of explosion if battery is incorrectly replaced. Recycle or dispose of used batteries according to the local regulations or reference instruction supplied with your device.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, or charger in places where it can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they

may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may get damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

 
This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 1.2 W/kg, and when properly worn on the body is 1.31 W/kg.

Disposal and Recycling Information

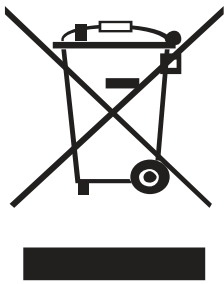

This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of

their life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of the Council). For more information about the REACH compliance of the device, visit the Web site www.huaweidevice.com/certification. You are recommended to visit the Web site regularly for up-to-date information.

EU regulatory conformance

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site www.huaweidevice.com/certification.

C € 0682

Notice: Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

Version: V100R001C34_02 Part Number:31010ECV