

Wonderful Communication, Mobile Life.

Welcome to U526 Handset from Huawei Technologies Co., Ltd.

HUAWEI U526 Handset

User Manual

Copyright © 2006 Huawei Technologies Co., Ltd.

All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks



and HUAWEI are trademarks of Huawei Technologies Co., Ltd. All other trademarks mentioned in this manual are the property of their respective holders.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute the warranty of any kind, expressed or implied. The handset, accessories and battery are authorized to be used in France.

Huawei Technologies Co., Ltd.

Address: Administration Building, Huawei Technologies Co., Ltd.,
Bantian, Longgang District, Shenzhen, P. R. China

Postal Code: 518129

Website: <http://www.huawei.com>

Safety Precautions

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, see the section of “Warnings and Precautions”.

	Do not switch on your phone when it is prohibited to use mobile phones or when the phone may cause interference or danger.
	Do not use your phone while driving.
	Follow any rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.
	Switch off your phone in aircraft. The phone may cause interference to control signals of the aircraft.
	Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.
	Do not attempt to disassemble your phone or its accessories. Only qualified personnel is allowed to service or repair the phone.
	Do not place your phone and its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
	Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.
	Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.
	Use approved batteries and chargers only to avoid explosions.
	Observe any laws or regulations on the use of wireless device. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions on page 163 of this manual while using the USB cable. Otherwise, your phone or PC may be damaged.

Table of Contents

1 Getting to Know Your Phone.....	1
Packing List.....	1
Your Phone.....	2
2 Getting Started.....	11
Loading the Battery.....	11
Unload the Battery	11
Charging the Battery	12
Loading the USIM Card.....	14
Loading and Removing a Memory Card	16
Switching On/Off.....	17
3 Call Services.....	19
Making and Answering Calls	19
Operations during a Call	23
4 Text Input	27
“Pinyin” Text Input	27
Stroke Simplified Chinese.....	29
Stroke Traditional Chinese	31

Table of Contents

Bopomofo Chinese.....	31
“Abc” Text Input	33
T9 English Text Input.....	34
“123” Numeric Input.....	35
Symbol Input.....	36
5 Using the Functions Menu.....	37
6 Contacts.....	39
Viewing Details.....	39
Searching for a Contact Entry	40
Adding a New Contact Entry	41
Deleting a Contact Entry	42
Copying a Contact Entry	42
Mark All.....	43
Unmark All.....	44
Sending a Contact Entry.....	44
Viewing the Memory Status	45
My Business Card	45
Backup Contacts	46
Restore Contacts	46
Speed Dialing Numbers	46
Groups.....	47

Table of Contents

7 Calls	51
Missed Calls	51
Received Calls	53
Dialed Calls	54
8 Messages	57
Creating Text Messages	57
Creating Multimedia Messages	58
Text Message (SMS)	61
Multimedia Message (MMS)	67
New Postcard	73
Push Inbox	74
Settings	75
9 Multimedia	79
Camera	79
Video Camera	82
Voice Recorder	84
Viewing Images	85
Playing Video	87
Playing Music	88
Streaming	89
10 Tools	91

Table of Contents

STK	91
Calendar	91
To Do	95
Memo Pad	97
Alarm Clock.....	97
Calculator.....	99
World Time	99
Stopwatch.....	100
Timer.....	100
Unit Converter.....	100
Currency Converter.....	101
Service Dial Number	102
11 Gallery	103
Images	103
Music	104
Videos	105
eBooks.....	106
Java	106
Personal.....	106
Memory Card	106
12 Browser	107

Table of Contents

Homepage	107
Bookmarks	109
Go to URL.....	110
Saved pages.....	110
Push Inbox	111
Select Profile	111
13 Streaming	113
Playing Stream Media Files	113
Operations during Playing Stream Media Files.....	114
Operations on URL Files.....	114
14 V-Call	117
Introduction to the Screen Functions.....	117
Function Options.....	118
15 Connections.....	121
USB.....	121
Notes to the Functions of the Connections.....	126
Data Account.....	127
SYNCML.....	127
16 APPS	131
Applications & Games	131
Download More	133

Table of Contents

Memory Status	134
17 DRM.....	135
18 Settings	137
Call Forwarding	137
Phone Setup.....	139
Profiles	142
Wallpaper	144
Colour Themes	144
Connect	144
Video Call Setup	145
Call Setup.....	146
Network Setup.....	152
Security Setup	153
19 Warnings and Precautions.....	157
Electronic Device	157
Hospital	157
Area with Inflammables and Explosives	157
Traffic Safety.....	158
Storage Environment.....	159
Children Safety	159
Operating Environment.....	159

Table of Contents

Cleaning and Maintenance	160
Environmental Protection.....	161
Emergency Call.....	161
Battery.....	161
Charger.....	162
Using the USB Cable	163
Rules for Exposure to Radio Frequency Energy	163
20 Acronyms and Abbreviations.....	165

1

Getting to Know Your Phone

Your U526 can operate in WCDMA 2100 and GSM/GPRS 900/1800/1900. It can switch from one network to another automatically. So you can enjoy the mobile telecommunication services at any time.

Note:

The services supported by your phone must be supported by the network where your phone locates. For details, please consult your local network operator.

Packing List

Your phone package box contains the following articles:

- One U526 mobile phone
- One cable charger
- One Li-polymer battery
- One USB data cable
- One stereo headset
- One hand strap
- One user manual
- One CD-ROM disk which contains HUAWEI U526 MOBILE PHONE PC Assistant

 
1 Getting to Know Your Phone

Your Phone


Front View and Back View



1 Getting to Know Your Phone

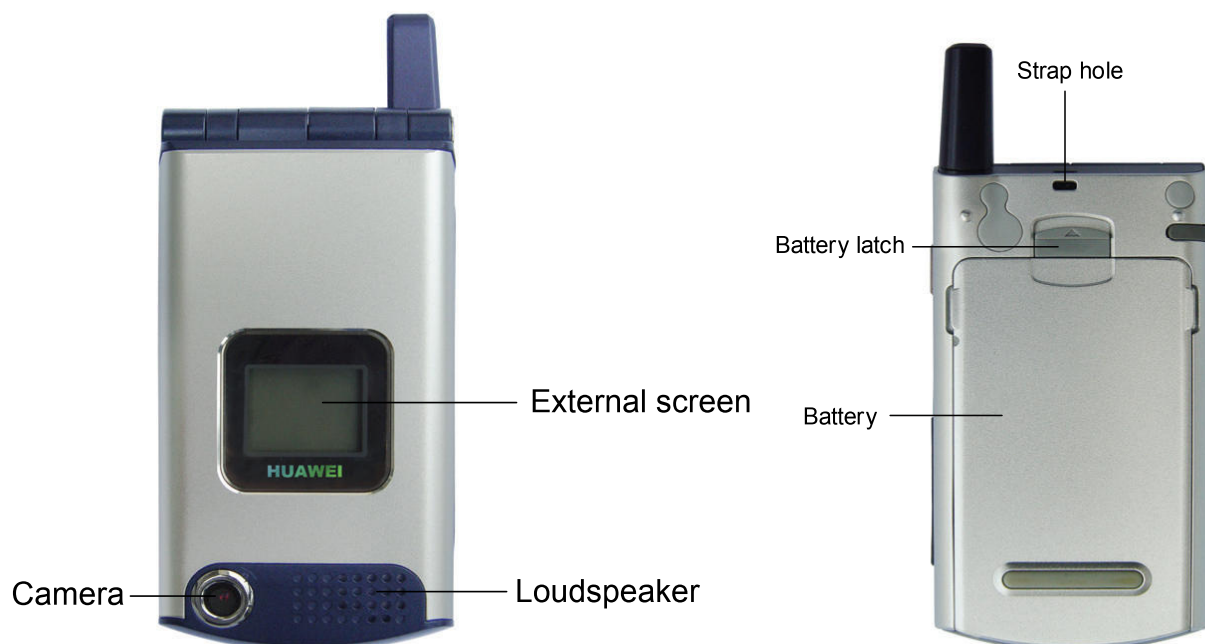


Side View

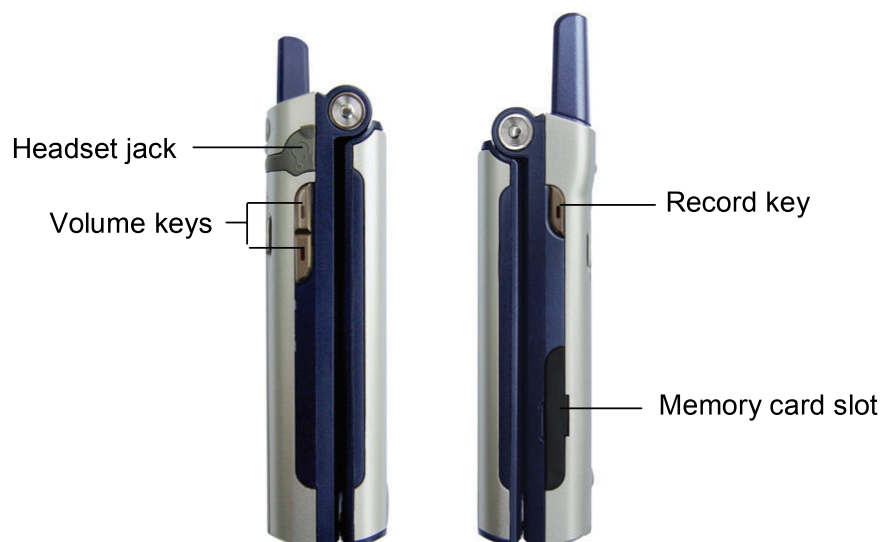 

1 Getting to Know Your Phone

 Key-board View

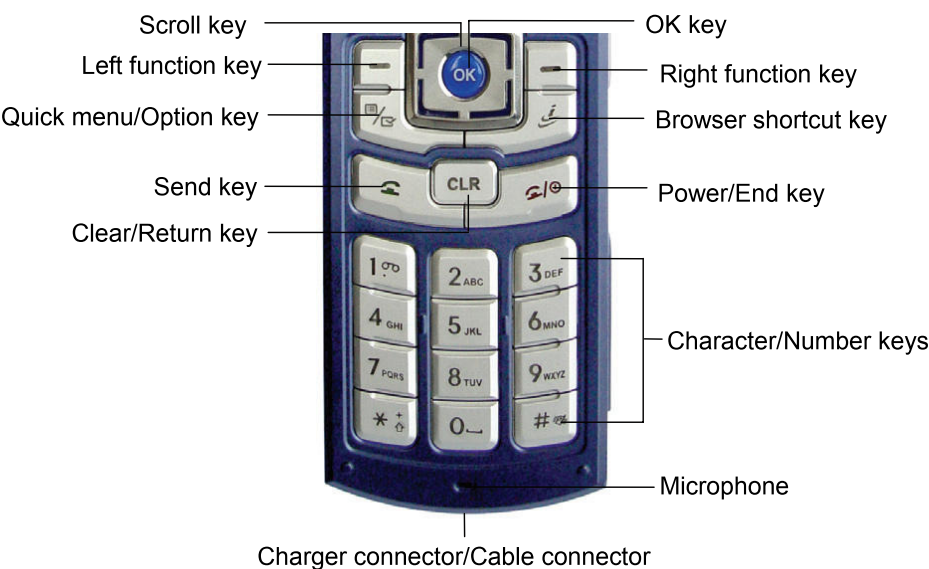

Keys

Key	Description
	• Make or answer a call. • In standby mode, press this key to access the Calls screen.
	• Press this key to end an ongoing call or reject an incoming call. • When it is not on the Home screen, press this key to return to the Home screen. • Press and hold this key to power on; or press and hold it to power off in standby mode.

Key	Description
	- It is a clear key when in editing mode. Press it to delete a character before the cursor. However, when you press and hold it for a moment, you will clear all the characters you have entered. - Go back to the previous menu.
	- Press it to activate the function indicated at the left of the prompt bar on the screen. - In standby mode, press it to access the Gallery screen.
	- Press it to activate the function indicated on the right of the prompt bar on the Home screen. - In standby mode, press it to access the AAPS screen.
	- In standby mode, press it to access the Quick Menu screen. - On an option list screen, press it to check the checkboxes to the right of the options.
	In standby mode, press it to access the Bookmarks screen.
	- Press it to start the prompt functions on the prompt bar. - In standby mode, press it to access the main menu.

1 Getting to Know Your Phone

Key	Description
	Up: • On a menu or on a mode selection screen, press it to scroll upward. • In standby mode, press it to access the Tools screen. Down: • On a menu or on a mode selection screen, press it to scroll downward. • In standby mode, press it to access the Profiles screen. Left: • On a menu or on a mode selection screen, press it to scroll leftward. • In standby mode, press it to access the Contacts screen. Right: • On a menu or on a mode selection screen, press it to scroll rightward. • In standby mode, press it to access the Messages menu.
Character/ Number keys	• Used to enter numbers or characters. • When menu items are numbered, press one of them to access a corresponding menu item. • On the main menu screen, press a Character/Number key to access a menu whose location on the screen corresponding to that of the key. For instance, you can press  to access the APPS screen, or  to access the Browser screen.

Key	Description
Record key/Camera shortcut key	• In standby mode with the flip opened, press and hold it for a moment to activate the camera. • During a call, press it to activate the voice recorder. • In standby mode with the phone folded, press and hold it to start recording, and press it again to end the recording. • In standby mode with the phone folded, press it to activate the external screen and display relevant information. • During charging with power off and the flip closed, press it to display a blinking cylinder on the external screen. When the charging completed, the cylinder stops blinking.
Volume keys	• In standby mode or during a call, press it to adjust the volume of the earpiece. • In standby mode with the phone folded, press it to activate the external screen and display relevant information. • During charging with power off and the flip closed, press it to display a blinking cylinder on the external screen. When the charging completed, the cylinder stops blinking.

1 Getting to Know Your Phone

Home Screen



Icon bar

This area displays the phone status. The following table illustrates all the icons that may appear on this bar.

Icon	Description
	Indicating signal strength. The more the horizontal bars appear, the stronger the signal is.
	The phone is in GSM network currently.
	The phone is in WCDMA network currently.
	You are using the roaming service.
	Network connection state.
	Security connection state of the network.
	The phone is in a call.
	Alarm clock is enabled.
	You have new text messages.
	You have new PUSH messages.
	You have new multimedia messages.
	You have new voice mail.
	The vibration mode is enabled.
	In mute mode.
	The normal profile is activated.
	Call line 1 is enabled currently.
	Forwarding all incoming voice calls to line 1.
	Call line 2 is enabled currently.
	Forwarding all incoming voice calls to line 2.
	The headset is plugged in.

1 Getting to Know Your Phone

Icon	Description
	Your PC connects to the Internet through your phone.
	Indicating battery power level.

Desktop

This area displays the operations and the function options.

Prompt Bar

This area displays the available operations at present. The content displayed here varies with different screens.

- Press  to execute the operation indicated on the left of the prompt bar.
- Press  to execute the operation indicated on the right of the prompt bar.
- Press  to start the selected function in the menu or the function option interface.

2

Getting Started

Loading the Battery

To load the battery:

1. Fit the battery into the battery slot on back of the phone.
2. Press the battery down until it clicks into place.



Unload the Battery

Always unload the battery after your phone is switched off. Otherwise, your phone may be damaged.

To unload the battery:

1. Push the battery latch upward.
2. Take out the battery.



Charging the Battery

Before charging the battery, please read carefully the following precautions.

Cautions:

- When you charge the battery for the first time, please charge it for at least 12 hours.
- The battery discharges if you do not use it for a long time, please charge it before you use it again.
- The charging time depends on the environmental temperature and the age of the battery.
- The battery can be recharged repeatedly, but it will eventually wear out. After normal charging, if the time that the battery powers your phone becomes much shorter than usual, please replace the battery with one of the same type.
- Do not strike or shock violently the battery or toss it; otherwise, liquid leakage, body damage, overheating, explosion or fire may occur to the battery.
- Charge the battery by using the charger supplied with your phone.
- You can charge the battery at any time you want and use your phone during charging.

- When you charge the battery with your phone powering on, the battery level icon will appear on the upper right corner of your phone screen. In battery charging, the horizontal bars of the icon will blink continuously. When the horizontal bars fill up the whole icon and the icon stops blinking, it indicates that the charging is completed.
- During charging with your phone powered off, a cylinder icon indicating the power level of the battery will appear on the screen and will blink continuously. When the cylinder is filled and stops blinking, it indicates that the charging is completed.

Note:

When the battery power level is very low, the phone makes alert sounds and displays the corresponding prompt boxes. When the battery power level is too low to support normal operation of the phone, the phone will switch off automatically.

Charging with a Cable Charger

Before charging the battery with a cable charger, please make sure that the battery has been properly loaded into your phone.

To charge the battery:

1. Plug in the connector of the charger to an electrical outlet.
2. As shown in the following figure: Insert the plug of the charger into the connector of the phone. Before the insertion, please make sure that the arrow on the charger output jack points to the front side of the phone.

2 Getting Started



3. After charging, pull out the charger plug from the electrical outlet at first, and then press and hold the gray buttons on both sides of the charger output jack and pull out the charger plug from the phone.

Loading the USIM Card

Your USIM card contains such information as phone numbers and contacts. Load your USIM card before using your phone. To use the USIM card properly, please read the following instructions carefully:

 
Note:

- Keep the USIM card out of the reach of children.
- The USIM card and the metal contactors are easily damaged by scratching or bending. So be careful when you carry, load or remove it.
- Always disconnect the charger from the phone before loading or removing the USIM card.

Loading the USIM Card

To load the USIM card:

1. Switch off the phone and remove the battery.
2. Put the card at the card slot entrance. Be aware of the direction of the card.

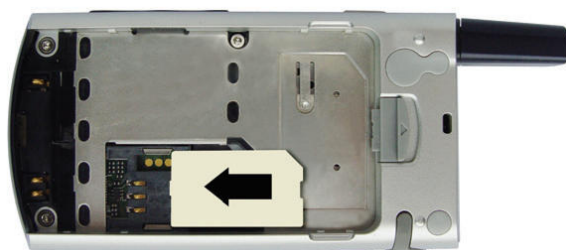


3. Slide the USIM card into the card slot as shown in the following figure.

**Removing the USIM Card**

 To remove the USIM card, power off your phone and take out the battery. Then press the

2 Getting Started


USIM card with one finger and slide it out of the slot.

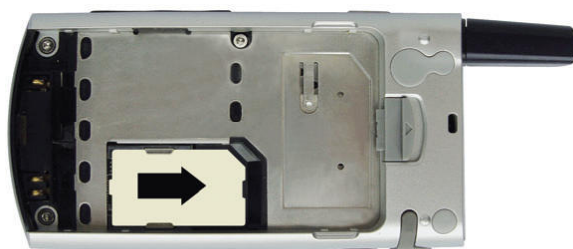

Loading and Removing a Memory Card

The U526 phone supports a memory card (mini-SD) with a capacity up to 512MB.

 
1. Remove the rubber cap from the memory card slot; then insert the memory card into the slot, as shown in the following figure.

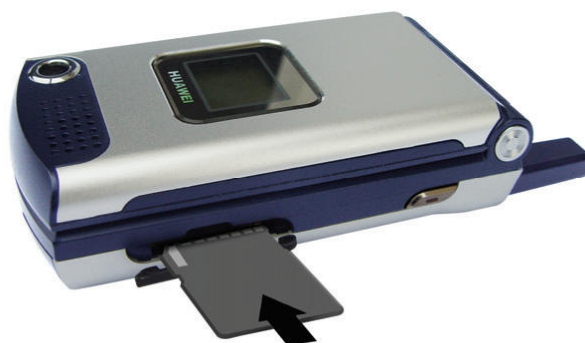

2. After inserting the memory card completely, put on the rubber cap.



 3. To remove a memory card, open the rubber cap and press the memory card gently. Now the memory card will pop up automatically. Then take it out as shown in the following figure.

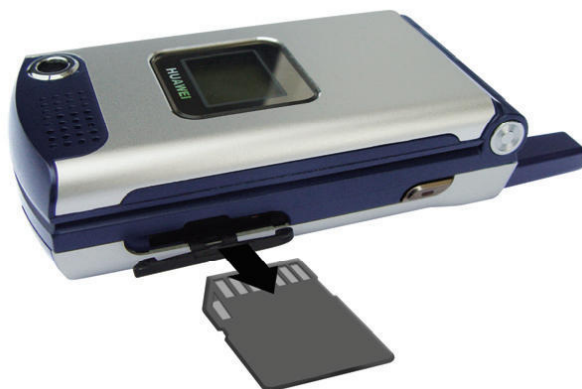

Switching On/Off

Switching On

Ensure that the USIM card is in your phone and that the battery has been charged.

Press and hold  until power is on.

Switching Off

Press and hold  until power is off.

Access Codes

If you have set the phone password and the PIN is **ON**, you have to enter the corresponding

2 Getting Started

access codes when you switch on your phone. For setting and changing the access codes, please refer to “Settings/Security Setup” on page 153.

Phone Password

The phone password is used to protect your phone from unauthorized use. The phone password is preset as 0000 for a U526 phone.

PIN

The PIN (Personal Identification Number) code is used to protect your USIM card from unauthorized use. Usually you are supposed to get the PIN code when you get the card from your USIM card provider. If you have not got or you have lost it, please consult your service provider.

PIN 2

Some USIM cards provide PIN 2 code. Some special functions such as the “Fixed Dialer Number” are not available until you enter the PIN 2 code and, at the same time, your USIM card must support these functions.

PUK

To unlock the locked USIM card, you have to enter the PUK (PIN Unblocking Key) code. Usually you are supposed to get the PUK code when you get the card from your USIM card provider. If you have not got or you have lost it, please consult your service provider.

PUK 2

Some USIM cards provide PUK 2 code which is used to unlock the locked PIN 2 code. Usually you are supposed to get the PUK 2 code when you get the card from your USIM card provider. If you have not got or you have lost it, please consult your service provider.

3

Call Services

Making and Answering Calls

Making Video Calls

With the video call function, you can use your U526 to make video calls. To make such a call, the phone you are calling must be capable of video calls.

Step	Operation
1	• Enter a phone number by the keypad, and then choose V-Call to dial out. • Select a number from the call logs lists, and press  to access the Edit number screen. Then, choose V-Call to dial out.

Notes:

- To correct a wrong input number, just press . Press once to delete the digit in front of the cursor; press and hold  to delete the whole number.
- Maybe you have to wait for a moment to get through a video call. The time you need to wait also depends on the response time of the other party.

-
- | | |
|---|--|
| 2 | Press  to end the call. |
|---|--|
-

3 Call Services

Making Voice Calls

Step	Operation
1	• Enter a phone number by the keypad. • Select a number from the call logs lists, and press  to access the Edit number screen.
2	Press  to dial out.
3	Press  to end the call.

Making Voice/Video Calls Using the Contacts

You can make voice/video calls by choosing a number from the contacts list.

Step	Operation
1	Access the Contacts  .
2	Press the left or right scroll key to choose Phone  or USIM  .
3	Choose a contact and then, • Press  to view the details. After selecting a number, press  to access the Edit number screen. Then, you can press  again to make a voice call or select V-Call to make a video call. • Press  to access the Edit number screen. Then, you can press  again to make a voice call or select V-Call to make a video call.

Step	Operation
4	Press  to end the call.

Making Voice Calls Using Speed Dialing Numbers

You can save the phone numbers you often dial to positions titled with numbers from “2” through “9” respectively; then, in standby mode, press one of the number keys from “2” through “9” you can dial the number that you have saved under it instantly. For more information, please refer to “Contacts/Speed Dialing Numbers” on page 46.

To make an instant call by speed dialing, follow these steps:

Step	Operation
1	Press and hold a number key which you have saved during speed dialing setting.
2	The phone number you have saved under this number will be dialed out.

Answering/Rejecting Incoming Calls

The phone will ring or vibrate to prompt an incoming call. If the call number has been saved in the **Contacts**, the name of the calling party will be displayed on the screen.

You can set an answering mode for your phone: “**Open flip**”, “**Any key**” or “**Send key**”. The method for answering a call is different under different answering modes. To set the answering modes, please refer to “Settings/Call Setup/Answer Mode” on page 146.

You can also launch and set the auto answer mode for your phone. For more information, please refer to “Settings/Call Setup/Auto Answer” on page 146.

3 Call Services

Note:

The control key on the headset is available for answering or ending a call only. It cannot be used to reject an incoming call.

With the Auto Answer Mode Disabled

If you have disabled the auto answer mode of your phone, you will answer or end an incoming call as follows:

Note	Operation
Answering a call	If you have selected one of the following answering modes: • Open flip: You can answer a call by unfolding the phone. • Any key: You can answer a call by pressing any key except for  and  with your phone unfolded. • Send key: You can answer a call by pressing . • If the headset is used: You can answer a call by pressing the answer key on the headset.
Ending a call	• If the headset is not in use, you can fold the phone or press  to end a call. • If the headset is in use, you can press the control key of the headset to end a call.

Note:

When the phone is folded and not in a call, you can press and hold the record key to mute the incoming call ring, or press and hold the volume keys to reject the call.

With Auto Answer Mode Enabled

You can set your phone to automatically answer or end a call; the steps are shown as follows:

Note	Operation
Answering a call	If you have selected one of the following answering modes: • Immediate answer: The phone will answer a call automatically in 5 seconds. • Text message: The phone will automatically send the preset message to the calling party in 20 seconds. • Recorded message: The phone will automatically answer a call in 20 seconds by playing the audio file you recorded and preset.
Ending a call	• If the headset is not in use, you can end a call by folding the phone or by pressing . • If the headset is in use, you can end a call by pressing the control key on the headset.

Operations during a Call

Basic Operations

Dialing a Second Number

You can directly enter a second number, or select **Contacts** from the main menu to choose a phone number, and then press  to dial out.

Answering a New Call

When a call is going on, you can also answer a new call if your network operator supports the function. You can use the U526 phone to answer up to 6 incoming calls simultaneously.

3 Call Services

When a new call comes, the icon  and the caller's information will appear on the screen.

To answer it, select this information and press .

Icons Description



A call is going.



This call is held on.



A new call comes during a call.

Other Operations During a Call

Answer/Reject

During a call, you can press the left function key and select to **Answer** or **Reject** from the popup menu.

Swap

During a call, you can press the left function key and select **Swap** from the popup menu to **Resume** the held call or hold the ongoing call.

Resume and Reject

During a call, you can press the left function key and select **Resume and reject** from the popup menu to reject a coming call and resume the held call.

Handfree/Earpiece Switching

During a call, you can press  or the left function key and then select **Handfree** or **Earpiece** from the popup menu to switch between the two modes.

Mute

During a call, you can press the right function key to make your voice mute or to restart the conversation by pressing it again.

Contacts

During a call, you can press the left function key to pop up a menu, and then select **Contacts** from the menu for operations.

SMS

During a call, you can press the left function key to pop up a menu, and then select **SMS** from the menu for operations.

Hold/Resume a Call

During a call, you can press the left function key to pop up a menu, and then select **Hold** or **Resume** to pause or restart the call.

Conference Call

If there are three or more parties involved in the same call, you can press the left function key to pop up a menu, and select **Conference** to add all the saved parties into a conference.

Private Talk

During a conference call, you can press the left function key to pop up a menu from where you can select **Private** to talk privately to one of the parties who are involved in the call conference.

End Current/All Calls

During a call conference, you can press the left function key and select **End call** or **End connect calls** from the popup menu to end the current or all calls.

If you select to end the current talk, press the left function key at the selected talk, and then execute the relevant operations.

3 Call Services

End Active/Held Calls

During a call, you can press the left function key and select **End active calls** or **End held calls** from the popup menu to end all the ongoing or held calls.

Start/Stop Recording

During a call, you can press the left function key to pop up a menu, and then select **Start record** or **Stop record** to record or stop recording the other party's voice.

New Call

During a call, you can press the left function key and select **New call**. At the same time, the DTMF tone of your pressing keys is not sent to the other party.

4

Text Input

You can use the keypad to enter simplified Chinese, traditional Chinese, and English characters, symbols and numbers. For example, when you add entries to the **Contacts**, write messages or schedule events on the calendar, you need to enter text.

Note:

While entering characters or symbols:

Press and hold the number key corresponding to the number over the desired character or symbol on the lower part of the screen, and then the desired character or symbol appears on the editing field.

Press the scroll keys to select the desired characters or symbols to the editing field.

“Pinyin” Text Input

Based on the most common-used Pinyin combinations, the Pinyin text input method helps you input Chinese characters quickly and conveniently.

- Press the keys carrying the desired letters in turn of the desired Pinyin combination. Press a key for once without regard to the position of the desired letter on the key. The Pinyin text input method will select the most suitable Pinyin combination automatically according to the rules of Pinyin.

4 Text Input

- The selected combination in the list of Pinyin combinations for candidate is highlighted. You can select the wanted Chinese character from the corresponding list of Chinese characters for candidate.
- After inputting a Chinese character, a list of Chinese characters belonging to some common-used Chinese phrases initialized by the inputted Chinese character will be displayed. This intelligent function can improve the efficiency of inputting Chinese characters.

Let's take inputting the Chinese phrase “拼音” by the Pinyin text input method for example. Follow these steps:

Step	Operation
1	Press in turn  ,  and  that carries the letter of “P”, “I” and “N” respectively. The Pinyin combinations composed of the letters carried by these three keys will be displayed on the screen.
2	Press the left/right scroll key to select “pin”.
3	You can operate this step in two ways: • Press and hold  corresponding to “拼”. • Press  to highlight a Chinese character in the candidate bar, and press the left/right scroll key to select “拼”. Then, press  to confirm. Now the character of “拼” appears in the editing field.
4	The next Chinese characters of some common-used Chinese phrases initialized by “拼” are listed on the candidate bar. Now you can select the character of “音” in two ways: • Press and hold  to select “音”. • Press  to confirm.

Stroke Simplified Chinese

With this method of inputting Chinese characters, you can input the strokes of a Chinese character, and then select the wanted Chinese character from the candidate characters listed

4 Text Input

on the screen.

The strokes of Simplified Chinese used in the U526 phone are shown in the following table:

Key	Stroke	Key	Stroke
	一		丨
	丿		㇏
	㇏		? Wildcard

For instance, to input the Chinese character “简” with the “Stroke Simplified Chinese” text input method, you can operate the following steps:

Step	Operation
1	Press  ,  and  in turn.
2	The Chinese characters containing the strokes carried by these three keys are listed on the screen: Press can hold the key  corresponding to the character “简”. Press , and then press the left/right scroll key to highlight the character “简”. Then, press  to choose it.

Stroke Traditional Chinese

This method is used to input Traditional Chinese. You can input the strokes of a Chinese character, and then select the wanted Chinese character from the candidate characters listed on the screen.

The strokes of Traditional Chinese used in the U526 phone are the same as those of the Simplified Chinese. Please refer to it.

For instance, to input the Chinese character “簡” with the “Stroke Traditional Chinese” text input method, you can operate the following steps:

Step	Operation
1	Press  ,  and  in turn.
2	The Chinese characters containing the strokes carried by these three keys are listed on the screen: • Press can hold the key  corresponding to the character “簡”. • Press  , and then press the left/right scroll key to highlight the character “簡”. Then, press  to choose it.

Bopomofo Chinese

With this text input method, you can input Chinese characters according to the phonetic notation symbols. The following table shows the comparison of the phonetic notation symbols and the keys:

4 Text Input

Key	Phonetic Notation	Key	Phonetic Notation
	ㄅ ㄆ ㄇ ㄉ		ㄅ ㄆ ㄇ
	ㄊ ㄋ ㄌ		ㄊ ㄋ ㄌ
	ㄐ ㄑ ㄒ ㄙ		ㄐ ㄑ ㄒ
	ㄙ ㄜ ㄝ ㄞ		ㄙ ㄜ ㄝ ㄞ
	ㄠ ㄡ ㄣ ㄤ		ㄠ ㄡ ㄣ

For instance, to input “注音” with the “Bopomofo Chinese” text input method, you can operate the following steps:

Step	Operation
1	Press  to display the character “ㄐ”.
2	Press  repeatedly till the desired character “ㄠ” appears on the screen.

Step	Operation
3	You can operate this step in two ways: - Press and hold the key  corresponding to the character “注”. - Press  to highlight a candidate Chinese character, and then press the scroll key to choose the character “注”. Then, press  to confirm. Now the character “注” appears in the editing field.
4	The other character of some common-used Chinese words initialized by “注” are listed on the screen for candidate. Then, you can choose the character “音” in two ways: - Press and hold  to choose the character “音”. - Press the scroll key to select the character “音”, and then press  to confirm.

“Abc” Text Input

The “Abc” text input method is a common method for entering alphabetic characters. You can press repeatedly the key that carries the letter to be entered until it appears on the screen.

For example, to enter the word “Hello” with the “Abc” text input method, you can do as follows:

4 Text Input

Step	Operation
1	Press  that carries the letter “h” repeatedly and you will see several characters successively on the screen. Now the current letter is highlighted. Stop until you see an “h” on the screen.
2	Wait until the desired letter is not highlighted and the cursor moves to the right of the letter, you can enter another letter. However, you can also press the right scroll key to move the cursor to the right of the letter and enter another letter.
3	Enter “e”, “l”, “l” and “o” in the same way.

Notes:

- Press  repeatedly and you will see “abc”, “Abc” or “ABC” on the top left corner of the screen; indicating you are going to enter small letters, words with the first letter being capitalized or words with all letters being capitalized respectively.
- Press  repeatedly and you can enter commonly-used punctuation marks and symbols.

T9 English Text Input

With the T9 English text input method, you can enter easily and quickly words with predictive wording scheme.

- Press once the key carrying the desired letter, regardless in which sequence the letter is supposed to appear normally at the key; the predictive wording scheme will present a most commonly used word, which is highlighted.
- After entering all the letters, if the current word is not the expected one, you can press the up/down scroll key to choose another one. Stop pressing the up/down scroll key until you

find the expected word and then press the right scroll key or the space key to move the cursor to the right of the word.

For example, to enter the word “Hello” with the T9 text input method, you can do as follows:

Step	Operation
1	Press successively  ,  ,  ,  and  which “h”, “e”, “l”, “l” and “o” belong to, and the screen will show the word that consists of these letters that the keys represent.
2	The word “Hello” appears on the screen.

Notes:

- If you choose T9 English text input method and press  repeatedly, “T9 english”, “T9 English” and “T9 ENGLISH” appears on the top left corner of the screen in succession, indicating the word to be entered will be all in small letters, first letter capitalized or all letters capitalized.
- Press , and then press the up/down scroll key to enter commonly used punctuation marks and symbols.

“123” Numeric Input

With the “123” numeric input method, you can enter corresponding numeric characters by pressing the Character/Number key.

For example, to enter “1” with the “123” numeric input method, you can press . Then “1” appears on the screen.

Symbol Input

The U526 provides an independent symbol input method.

For example, you have chosen the symbol input method and you want to enter “:.”. You can enter this punctuation mark in two ways:

- Press and hold  that is corresponding to “:.”.
- Or press the left/right scroll key to select “:.”, and then press .

Note:

In current input method, you can press  to switch among different input methods.

5

Using the Functions Menu

The function menu of the U526 phone includes the following items: Contacts, Calls, Messages, Camera, Tools, Gallery, Browser, APPS and Settings.

The operations of the menu are shown as follows:

Step	Operation
1	In standby mode, press  to display the main menu.
2	Press the scroll key to choose a menu item, and then press  to enter a submenu.
3	Press a scroll key to choose an item from the submenu, and then press  to enter the mode you want.
4	Operate according to the prompt on the screen.
5	Press  to return to the previous menu.
6	Press  to return to the standby mode.

6

Contacts

The **Contacts**  enables you to save and manage such information as phone numbers and addresses of your contacts. You can save such information on your phone or your USIM card. Meanwhile, you can also set some often-used numbers for speed dialing for your convenience.

Viewing Details

With this function, you can view the detailed information of the selected contact.

Step	Operation
1	In the Contacts  screen, press the left/right scroll key to select Phone  or USIM  .
2	Press the up/down scroll key to select a contact.
3	- Press the left function key to enter Options, and then select Details from the submenu. - Press  to view the details.

On the screen for viewing the details, you can press the left function key to select **Options**, and then you can perform the following operations: editing, saving, sending text messages,

6 Contacts

sending multimedia messages and sending postcards.

Searching for a Contact Entry

With this function, you can find the information of the desired contact from the contacts list easily and quickly. You can perform this function on either the Phone screen or the USIM screen.

Step	Operation
1	In the Contacts  screen, press the left/right scroll key to select Phone  or USIM  .
2	Press the left function key to enter Options , and select Search from the submenu.
3	Press the left function key to enter Options , select Search , enter letters contained in the name to be searched for, and then press  . The phone will display the related information of the contacts whose names contain the letters you entered.

Note:

No matter you search in the **Phone** screen or the **USIM** screen, the search will cover all the contacts from the both memories.

You can also use quick search in the **Phone** or **USIM** interface:

Step	Operation
1	In the Contacts  screen, press the left/right scroll key to select Phone  or USIM  .
2	Press one of the Character/Number keys from  to  . Then the letters carried by this key are displayed at the bottom of the list, and the contact entries whose names contain one of these letters are listed on the screen. You can also find an entry by inputting the first letters of the first name and the second name of the entry. For example, to find an entry named “Alice”, inputting any one letter in “Alice”, such as “a”, the entry is in the list on the screen.

Adding a New Contact Entry

To add a new contact entry to your phone, you can add the contact's Name, Mobile phone number, Office telephone, Home telephone, Address, Email address and Fax number. You can also select icons, groups and ring tones for the incoming calls.

To add a new contact entry to the USIM card, you can only enter the Name, Phone number, Fax number and Email address of the contact (whether Email addresses and Fax number can be added depends on your USIM card).

Step	Operation
1	Enter Contacts  screen, and then press the left/right scroll key to select Phone  or USIM  .
2	Press the left function key to display the Options menu, and then select Add .

6 Contacts

Step	Operation
3	Enter the relevant information and then press the left function key to select Save from the submenu to end the operation.

Deleting a Contact Entry

You can delete entries from the phone or USIM card. You can select to delete them one by one or to delete all of them at one time.

Step	Operation
1	In the Contacts  screen, press the left/right scroll key to select Phone  or USIM  .
2	• Select the entry to be deleted. Then, press  or select Options > Mark to check the checkbox to the right of the entry. You can also select Unmark from the submenu to cancel the selection on the entry. • To delete one entry, just perform the next step directly.
3	Press the left function key to pop up the Options submenu and select Delete .
4	Select Yes to confirm the deletion, or press No to cancel it.

Copying a Contact Entry

You can copy one or several entries from your phone memory to your USIM card or from your USIM card to your phone.

Step	Operation
1	In the Contacts  screen, press the left/right scroll key to select Phone  or USIM  .
2	- Select the entry to be copied. Then, press  or select Options > Mark to check the checkbox to the right of the entry. You can also select Unmark from the submenu to cancel the selection on the entry. - To copy one entry, just perform the next step directly.
3	Press the left function key to pop up the Options , and then select Copy to USIM or Copy to phone .
4	Select Yes to confirm the copy, or press No to cancel it.

Note:

To copy entries from the phone to the USIM card, you can only copy the names, the first non-empty number and Email addresses. To copy the email address and other numbers to the USIM card are USIM-dependent.

Mark All

To select the all the records in the menu of the phone and the USIM card. You can perform this function on the phone screen or the USIM card screen separately:

Step	Operation
1	In the Contacts  screen, press the left/right scroll key to select Phone  or USIM  .

6 Contacts

Step	Operation
2	Press the left function key to pop up the Options , and then select Mark all .
3	Press  to confirm the operation.

Unmark All

You can perform this function on the phone screen or the USIM card screen separately:

Step	Operation
1	In the Contacts  screen, press the left/right scroll key to select Phone  or USIM  .
2	Select Options , and then select Unmark all .
3	Press  to confirm the operation.

Sending a Contact Entry

This option is used to send the selected contact entries by short messages to other devices supporting SMS.

Note:

You can send only one entry each time, and the entry can contain the name, phone number and Email address while sending it by SMS. Other information (such as home address) cannot be sent in this way.

Viewing the Memory Status

You can view the memory status of both the phone and the USIM card, including the number of the saved entries and the total capacity of the phone and the USIM card. You can access it from either the Phone screen or the USIM screen.

Step	Operation
1	In the Contacts  screen, press the left/right scroll key to select Phone  or USIM  .
2	Select Options , and then select Memory status .
3	Press  to view it.

My Business Card

This option is used to save the handset owner's information including name, mobile phone number, office telephone number, fax number, Email address and so on. You can send the information out by Short Messages Service.

6 Contacts

Step	Operation
1	In the Contacts  screen, press the left/right scroll key to select Phone  or USIM  .
2	Select Options , and then select My business card .
3	Enter the editing screen, select Options , and then • Select Save to store the business card information you entered. • Select Send by SMS to send the existing information out by short messages. • Select Delete to clear the business card information you entered. Press  to confirm.

Backup Contacts

This option is used to copy and save the contact entries from the phone to the memory card.

Restore Contacts

This option is used to copy and save the contact entries from the memory card to the phone.

Speed Dialing Numbers

You can save the often-used numbers to the positions for speed dialing keys. You can select one from the numbers from “2” to “9”.

Step	Operation
1	In the Contacts  screen, press the left/right scroll key to select Speed Dial No.  .
2	Select a position for saving the speed dialing number, and then press the left function key to select Edit or press  to display the Search screen.
3	- Press the left function key and then select Search to find the desired phone number. - Press the up/down scroll key to select the desired number, and then press the left function key to choose Select or press  to confirm.

Groups

You can manage the group information by renaming a group, adding group members, or deleting a group.

Note:

You cannot edit or delete the group names preset in the U526 phone.

Step	Operation
1	In the Contacts  screen, press the left/right scroll key to select Groups  .
2	Select the expected group, and follow the prompt for corresponding operation.

6 Contacts

Renaming a Group

You can select the group to be modified from the **Groups** list, and then press the left function key to choose **Rename**.

Adding/Deleting a Group Member

You can add a member to a group preset in your U526 or a group that has been renamed, or delete a member from it. Follow these steps.

Step	Operation
1	Select a group and press  to view the details.
2	Press the left function key and then select Add to access the screen for adding members to a group.
3	- Press the left function key and then select Search to find the contact to be added, and then press . - Press the up/down scroll key to select the desired number, and then press the left function key to select Select or press  to confirm. Note: Only the contact entries saved in the phone can be added.
4	After adding a member, return to the “Group member list” screen. Now, the member you added appears on the group member list.
5	Select a member from the group member list, and then press the left function key and then select Delete to remove it.

Deleting a Group

Select the group you want to delete from the Groups list. Press the left function key and select **Delete** to delete the group. Once a group is deleted, all the members in this group are deleted as well.

7 Calls

Missed Calls

Access the **Calls**  screen from the main menu and then select **Missed** .

Making Voice Calls/V-Calls

You can select a call number from the missed call logs, and then press  to access the screen for editing numbers to make a voice call or select **V-Call** to make a video call.

Relevant Options

On the missed calls screen, select **Options** and then you can perform the following operations:

Details

This option is used to view the detailed information of incoming and dialed calls, including the calling time, call duration and so on.

You can perform this operation on any one of the missed calls, received calls and dialed calls screens.

Save number

This option is used to save the numbers of the selected missed calls to the phone, the USIM

7 Calls

card, or an existing entry of the Contacts.

- Save to phone: to save the number to the phone.
- Save to USIM: to save the number to the USIM card.
- Add to exist: to add the number to an existing entry of the Contacts list.

Send SMS

This option is used to send a message to the number of a selected missed call.

Delete

This option is used to delete the information of missed calls you select.

Mark

This option is used to select the information of one or more missed calls.

Unmark

This option is used to cancel your selection upon the information of a missed call.

Mark All

This option is used to select the information of all the missed calls.

Unmark All

This option is used to cancel all your selections upon the information of the missed calls.

Calls status

This option is used to display the information of voice calls, video calls or data services.

You can perform this function on the screen of missed calls, the received calls or the dialed calls.

- Voice call/V-Call: Displaying the last call duration, the incoming call duration, the outgoing call duration, the total time of all calls, and the last reset time.

- **Data:** Displaying the total uplink flow, the total downlink flow, and the total connecting duration; the last uplink flow, the last downlink flow and the last connecting duration; and the last reset time.
- From any of the Voice call, V-Call or Data service screens, you can reset all the statistic information on that screen by selecting **Reset**.

Received Calls

In the **Calls**  screen, select **Received** .

Making Voice/Video Calls

You can select a call number from the received call log, and then press  to access the screen for editing numbers to make a voice call or select **V-Call** to make a video call.

Relevant Options

On the received calls screen, select **Options**, then, you can execute the following operations:

Save number

This option is used to save the number of a selected received call to the phone or the USIM card.

- **Save to phone:** to save the number to the phone.
- **Save to USIM:** to save the number to the USIM card.
- **Add to exist:** to save the number to an existing entry of the contacts list.

Send SMS

This option is used to send a message to the number of a received call you select.

7 Calls

Delete

This option is used to delete the numbers of selected received calls.

Mark

This option is used to select the information of one received call.

Unmark

This option is used to cancel your selection upon the information of a received call.

Mark All

This option is used to select the information of all the received calls.

Unmark All

This option is used to cancel all your selections upon the information of the received calls.

Dialed Calls

In the **Calls**  screen, select **Dialed** .

Making Voice/Video Calls

You can select a call number from the dialed call log, and then press  to access the screen for editing numbers to make a voice call or select **V-Call** to make a video call.

Relevant Options

On the dialed calls screen, select **Options**. Then you can execute the following operations:

Save number

This option is used to save the number of a selected dialed call to the phone or the USIM card.

- Save to phone: to save the number to the phone.
- Save to USIM: to save the number to the USIM card.
- Add to exist: to save the number to an existing entry of the contacts.

Send SMS

This option is used to send a message to the number of a selected dialed call.

Delete

This option is used to delete the numbers of selected dialed calls.

Mark

This option is used to select the information of one dialed call.

Unmark

This option is used to cancel your selection upon the information of a dialed call.

Mark All

This option is used to select the information of all the dialed calls.

Unmark All

This option is used to cancel all your selections upon the information of the dialed calls.

8 Messages

Creating Text Messages

Before using the messages service, you need to set the message center number. For more information, please refer to “Messages/Settings/Text Message Settings” on page 75.

A text message to be sent can contain 160 English letters or 70 Chinese characters at most. If the characters you entered are more than this limit, the text will be divided into two or more continuous messages for sending.

Step	Operation
1	In the main menu, select Messages  .
2	Select New SMS , and press  .
3	From the screen of editing the message, select Options : • You may select one of the text entry methods to enter the message contents. • Selecting Common phrases, you can speed up the text entry. • Selecting Insert number, you can insert a phone number saved on the phone or the USIM card. Press  to confirm.

8 Messages

Step	Operation
4	Access the “Edit numbers” screen: • Enter the phone number, and then select Options > Send or press  to send the message. • Select Options > Group or Contacts to choose a number and send the message. • Select Options > Save to save the message.

Creating Multimedia Messages

Before using the multimedia messages service, you need to perform relevant settings for the service. For more information, please refer to “Messages/Settings/Multimedia Message Settings” on page 76.

You can send messages attached with images, text and music under this mode.

Creating a Multimedia Message

Step	Operation
1	In the main menu, select Messages  .
2	Select New MMS , and press  to display the Edit MMS screen.

Step	Operation
3	Select To, Cc or Bcc, and press  to confirm. • Select an entry from the recipients list, and then press  or select Options > Edit to enter a phone number. • Select a position from the recipients list, and press the left function key to select Contact or Group, and then select phone numbers.
4	From the recipients list window select phone numbers you need for To, Cc or Bcc. Then select Options and select Set To, Set Cc or Set Bcc. Meanwhile you may also select Delete or Delete all to delete the selected numbers or all numbers.
5	Select Back to go back to the “Edit MMS” screen, select Subject to enter text as subject, and then press .
6	Select Content to edit the pages, and then go back.
7	• Select Options > Send to send this multimedia message. • Select Options > Save to save this message to Messages/MMS/Drafts. • Select Options > Add to template to save this message at Messages/MMS/Templates. • Select Options > Send settings to set relevant sending parameters for sending multimedia messages. For details, please refer to “Messages/Settings/Multimedia Message Settings” on page 76. • Select Options > Size to view the size of this multimedia message.

8 Messages

Making Multimedia Pages

Step	Operation
1	In the Edit MMS screen, make a multimedia message.
2	Select  to access the text entry field, and then edit text.
3	Select  to enter the image-editing field and then you can choose images or video files in Gallery .
4	Select  to enter the music-editing field and then you can choose audio files in Gallery .
5	Enter the field indicated by  and press the left/right scroll key to select one from different pages if there are more pages.
6	Enter the field indicated by  and press the left/right scroll key to adjust the playing time (in seconds) of the current page.
7	Select Options and you have the following options: • Remove object: to remove the content from the selected field. • Insert page: to insert a new page. • Delete page: to delete the current page. • Preview: to preview this page.

Note:

If the video file is chosen in the image-editing field, you cannot edit the music-editing field any more.

Text Message (SMS)

The U526 provides three mailboxes for SMS (Short Messages Service), namely, Inbox , Outbox  and Draft .

Inbox

You can save the received messages in **Inbox**.

Icons in Inbox

Icon	Description
	A read message on the phone
	An unread message on the phone
	A read message on the USIM card
	An unread message on the USIM card
	A message report

Viewing Messages in Inbox

Step	Operation
1	Select Messages > SMS from the main menu.
2	Select Inbox  .
3	Press the up/down scroll key to view the messages.
4	Select a message and then press  to view the details.

8 Messages

Step	Operation
5	• Press  to reply with a text message. • Press  to access the Edit number screen. Then, you can press  again to make a voice call or select V-Call to make a video call.
6	To view the text message page, select Options, and then you can do the following operations: • Reply: to reply the message. • Delete: to delete the message. • New: to create a message. • Forward: to forward the message. • Save number: to obtain a phone number from the message (If there are several numbers, you will be prompted to make selections.) and save it to your phone or USIM card or to add it to an existing entry in the Contacts. • Copy to USIM: to copy the message to the USIM card. • Extract URL: to obtain an URL address from the message and use it (If there are several URL addresses, you will be prompted to make selections.) to access the Internet or stream media. • Save email address: to obtain an Email address from the message (If there are several addresses, you will be prompted to make selections.) and save it.

Other Operations for Inbox

Step	Operation
1	Select Messages > SMS from the main menu.
2	Select Inbox  .

Step	Operation
3	Select Options, and then you can do the following operations: • Details: to view the selected message. • Delete: to delete the selected message. • Reply: to reply to the selected message. • New: to create a new message. • Forward: to forward the selected message. • Mark/Unmark: to choose the current message, or to cancel your choice upon the current message. • Mark all: to choose all the messages in Inbox. • Unmark all: to cancel all the selections in Inbox. • Save number: to save the sender's number corresponding to the selected message. You can save it to the phone or the USIM card as a new entry, or add it to an existing entry in Contacts. • Copy to USIM: to backup one or more selected messages to the USIM card. • Memory status: to view the memory status of the phone and the USIM card, including quantity of saved messages and the total capacity.

Outbox

Outbox is used to save the messages that have been sent out.

Icons in the Outbox

Icon	Description
	A text message that has been sent out and saved to the phone
	A text message that has been sent out and saved to the USIM card

8 Messages

Viewing Messages in the Outbox

Step	Operation
1	Select Messages > SMS from the main menu.
2	Select Outbox  .
3	Press the up/down scroll key to view the messages.
4	Select a message and press  to view the details.
5	• Press  to forward this message. • Press  to access the Edit number screen. Then, you can press  again to make a voice call or select V-Call to make a video call.
6	You can select Options to execute the same operations as that of Inbox of SMS. You can also edit the selected messages.

Other Operations for Outbox

Step	Operation
1	Select Messages > SMS from the main menu.
2	Select Outbox  .

Step	Operation
3	Select Options, and then you can do the following operations: • Details: to view the selected message. • Edit: to edit the selected message. • Delete: to delete the selected message. • New: to create a new message. • Forward: to forward the selected message. • Mark/Unmark: to select the current message, or to cancel your selection upon the current message. • Mark all: to select all the messages in Outbox. • Unmark all: to cancel all the selections in Outbox. • Save number: to save the recipient's number corresponding to the selected message. You can save it to the phone or the USIM card as a new entry, or add it to an existing entry in Contacts. • Copy to USIM: to backup one or more selected messages to the USIM card. • Memory status: to view the memory status of the phone and the USIM card, including quantity of saved messages and the total capacity.

Draft

The Draft box is used to save the messages you created and saved and those failed to be sent.

Icons in the Draft

Icon	Description
	A text message saved to the phone
	A text message saved to the USIM card

8 Messages

Viewing and Editing Messages in the Draft

Step	Operation
1	Select Messages > SMS from the main menu.
2	Select Drafts  .
3	Press the up/down scroll key to view the messages.
4	Select the message to be viewed and press  to edit it.

Other Operations for the Draft

Step	Operation
1	Select Messages > SMS from the main menu.
2	Select Drafts  .

Step	Operation
3	Select Options, and then you can execute the following operations: • Edit: to edit the selected message. • New: to create a new message. • Delete: to delete the selected message. • Forward: to forward the selected message. • Mark/Unmark: to select the current message, or to cancel your choice upon the current message. • Unmark all: to cancel all the selections in the Draft. • Mark all: to select all the messages in the Draft. • Save number: to save the recipient's number corresponding to the selected message. You can save it to the phone or the USIM card as a new entry, or add it to an existing entry in the Contacts. • Copy to USIM: to backup one or more selected messages to the USIM card. • Memory status: to view the memory status of the phone or the USIM card, including quantity of saved messages and the total capacity.

Multimedia Message (MMS)

The U526 provides four mailboxes for MMS (Multimedia Messages Service), namely, Inbox , Drafts , Sent  and Templates .

Inbox

Inbox is used to save the multimedia messages you receive.

8 Messages

Icons in Inbox

Icon	Description
	A read message
	An unread message
	A read notice or delivery report for MMS
	An unread notice or delivery report for MMS

Viewing Messages in Inbox

Step	Operation
1	Select a multimedia message to view its contents.
2	During the playing, you can select Stop to stop playing.
3	During the playing, select Options to perform the following operations: • Next page: to play the next page. • Previous page: to play the previous page. • Rewind: return to the first page. • Object list: After entering the content list of this message, you may select an item and select Save to save the message to a corresponding directory of the folder.

Other Operations for Inbox

Step	Operation
1	Access the Inbox  of MMS.

Step	Operation
2	Select Options, and then you can do the following operations: • Reply: to reply to a selected multimedia message. • Forward: to forward a selected multimedia message. • Delete: to delete a selected multimedia message. • Move: to move selected multimedia message(s) to a specified folder. • Folder: to save the multimedia message(s) you moved. • Callback: to call back a selected multimedia message sender. • Save contact: to save a selected multimedia message sender's information. • Sort: to sort the messages in the Inbox by senders or by date. • Unmark all: to cancel all the selections in the Inbox. • Mark all: to select all the multimedia messages in the Inbox. • Memory status: to view the memory status of multimedia messages, including the occupied memory of every mailbox, Template and Folder and that of the total.

Drafts

The Drafts is used to save the multimedia messages you created and saved and those failed to be sent.

Icons in Drafts

Icon	Description
	A multimedia message saved after you created it
	A multimedia message failed to be sent

8 Messages

Viewing and Editing Messages in Drafts

Step	Operation
1	Enter the Drafts and select a multimedia message.
2	Press  to enter the editing screen.
3	Now you can edit the message. The operations are the same as those for creating a multimedia message.

Other Operations for the Drafts

Step	Operation
1	Access the Drafts  of the MMS .
2	Select Options , and you can perform the following operations: • Edit: to edit the selected multimedia message. • Mark: to choose the current multimedia message. • New MMS: to create a new multimedia message. • Delete: to delete the selected multimedia messages. • Move: to move the selected multimedia messages to a specified folder. • Folder: to save the multimedia messages you moved. • Sort: to sort the messages in the Drafts by recipients or by date. • Unmark all: to cancel all the selections in the Drafts. • Mark all: to select all the multimedia messages in the Drafts. • Memory status: to view the memory status of multimedia messages, including the occupied memory of every mailbox, Template, Folder, and that of total.

Sent

The **Sent** is used to save the multimedia messages that have been sent successfully.

Icons in the Sent

Icon	Description
	A multimedia message that has been sent

Viewing Messages in the Sent

Step	Operation
1	Select a multimedia message and then select View .
2	During playing, you can select Stop to stop playing.
3	During playing, you may select Options to do the following operations: • Next page: to play the next page. • Previous page: to play the previous page. • Rewind: return to the first page. • Object list: After entering the content list of this message, you may select an item and select Save to save this item to a directory of the folder.

Other Operations for the Sent

Step	Description
1	Access the Sent  of the MMS .

8 Messages

Step	Description
2	Select Options and you have the following options: • Forward: to forward a selected multimedia message. • Delete: to delete selected multimedia messages. • Move: to move selected multimedia messages to a specified folder. • Sort: to sort the messages in the Sent by recipients or by date. • Unmark all: to cancel all the selections in the Sent. • Mark all: to select all the multimedia messages in the Sent. • Settings: to set parameters relating to multimedia messages. For details, please refer to “Messages/Settings/Multimedia Message Settings” on page 76. • Memory status: to view the memory status of multimedia messages, including the occupied memory of every mailboxes, Template and Folder and that of total.

Templates

To send messages quickly, you can turn the content of commonly used multimedia messages into samples and save them. All operations on the **Templates** menu are basically the same as those for the **Drafts**. Please refer to "Drafts" on page 69 for details.

Folder

You can categorize your multimedia messages into different folders.

You can access **Folder** from the four tabs of **Inbox**, **Drafts**, **Sent** or **Template**. The management of the **Folder** is similar to that for the **Drafts** or **Template**. Please refer to these sections for details.

Now let us take entering the **Inbox** screen as an example for description.

Select **MMS** > **Inbox** . Then select **Options** > **Folder**. You can perform the following operations:

- **Rename**: to rename a folder.
- **Select**: to enter a folder. Operations for that folder are similar to those for the Drafts or Template. Please refer to them for details.

New Postcard

Before you use the postcard service, you have to set relevant parameters first. Please refer to “**Messages/Settings/Multimedia Message Setting**” on page 76. You are allowed to send messages with pictures and text through postcard message.

Step	Operation
1	In the main menu, select Messages  .
2	Select New postcard , and press  to enter.
3	On the Edit Postcard screen, press the up/down scroll key to look through the setting items, including Name , Additional Info , Street , City , Postal code , State/Province , Country and Content .
4	In the Edit Postcard screen and select Options : • Select Edit to enter postcard content. • Select Save to save the postcard to Messages/MMS/Drafts. • Select Send to send out the edited postcard. • Select Contact to insert the contacts recorded in the phone. • Select Save contact to save the contacts to which the postcard will be sent. Press  to confirm.

Push Inbox

The Push Inbox is used to save the Push messages you received.

To receive Push messages, you need to switch on the Push Inbox at first. For details, please refer to “Browser/Homepage/Settings” on page 109. To use the browser functions, you need to set the network. For more information, please refer to “Browser/Select Profile” on page 111.

Viewing Push Messages

In the **Push Inbox**, select a Push message. Select **Detail** to view the properties of the Push message. Then, select **Load** to start the WAP browser. Connect a URL specified by the Push message and view the details.

- : A read Push message
- : An unread Push message

Other Operations for the Push Inbox

In the **Push Inbox**, select **Options** to perform the following operations:

Load

Start the WAP browser and connect a URL specified by the Push message.

Delete

It is used to delete the selected messages.

Unmark all

It is used to cancel all the selections upon the Push messages.

Mark all

To select all the Push messages.

Settings

Text Message Settings

You can change the SMS settings by performing the following steps.

Step	Operation
1	Select Messages > Settings > SMS from the main menu.
2	Set the parameters related to messages: • Message center: The U526 phone can automatically read the number of the message center from the USIM card. If no such information or you have deleted the information by accident, please contact your network operator. • Message validity: The time of keeping a message in the message center after it is sent. • Auto save: You can set whether a message will be saved automatically to Outbox when it is sent. You have three options: Yes, No and Remind before. • Save to: To set the position for saving newly created messages, received messages, and sent messages. You have two alternatives: Phone or USIM. • Signature: To set whether your signature will be sent along with the message. You can edit the signature by yourself. • Status report: You can set it to On or Off. If you set it to On, the network will send you the information on whether the message has reached to the recipient.

8 Messages

Multimedia Message Settings

Select **Messages > Settings > MMS**, and then you can set parameters related to multimedia messages. It contains the following submenus.

Sending

This option is used to set parameters related to sending multimedia messages.

- **Message validity:** The time for a multimedia message to be stored in the message center since it has been sent.
- **Send report:** You have two alternatives: On and Off. With this mode enabled (On), the network will send a report for successfully sending a multimedia message.
- **Send limit:** To set the size limit of a multimedia message to be sent.
- **Save on send:** To decide whether a multimedia message will be saved to the Sent after it has been sent.
- **Sender visibility:** To set whether the sender information will be displayed when a multimedia message is sent.

Retrieval

This option is used to set parameters related to retrieval of multimedia messages.

- **Send delivery report:** You have two alternatives: On and Off. With this mode enabled (On), the network will reply to the sender's multimedia message with a report indicating that you have received the message.
- **Retrieval limit:** To set the size limit of a multimedia message that you can receive.
- **Auto retrieval:** To set whether the phone automatically receives multimedia messages or not.

Data account

This option is used to choose the information about the data account to be adopted when you send multimedia messages. For more information, please refer to “Connections/Data Account” on page 127 or consult your network operator.

WAP gateway

This option is used to set relative information of the WAP gateway, including the WAP gateway, HTTP Port, User name and Password. Please consult your network operator for detailed settings.

When entering the various parameters of the WAP gateway, you can press the up/down scroll key to access different items.

MMS center

The number of the multimedia center has been preset on your phone. If you delete or change it by accident, please contact your network operator.

Connection type

This option is used to set the connection type of multimedia messages.

Push Inbox Settings

Select **Messages > Settings > Push messages** to display the **Push Inbox Settings** screen. The submenu in the settings includes:

Push setting

- **Accept all:** to set to accept all Push messages.
- **Accept trusted:** to set to accept only the trusted Push messages.
- **Accept MMS Push:** to set to accept only the Push messages prompting you with a multimedia message.
- **Accept none:** to set to accept no Push message.

Voice Mail Number

To use the voice mail services, you need to apply to your network operator. After setting the correct number provided by your network operator, if you press and hold  in standby

8 Messages

mode, the phone will dial out the voice mail number automatically to access the voice mailbox.

Step	Operation
1	Select Messages > Settings > Voice mail No. from the main menu.
2	Input the voice mail number and select OK .

Common Phrases

Your U526 has been preset with some commonly used phrases in inputting message, sending messages while making a call and auto replying. You can edit them if you want.

Step	Operation
1	Select Messages > Settings from the main menu.
2	Select Common phrases .
3	Select the phrase to be modified; and then select Modify .

9 Multimedia

Multimedia  provides you with various multimedia services such as taking photos, making videos, recording voice, viewing images, playing music and playing video.

Camera

With this function, you can take photos with your phone at any moment.

Access the Camera function to display the viewfinder screen. You can select **Options** > **Internal view** or **Options** > **External view** to change the direction of viewfinder.

In the viewfinder mode, press  to capture a picture. You can press and hold  to capture pictures continually. After capturing a picture, you can press  and then select **Send MMS** to send the latest picture out at once.

The pictures taken with the phone will be saved to the **Gallery** > **Images** > **Camera** folder.

9 Multimedia

Note:

If you exit from the camera function and access it again, it takes pictures with the resolution used in the last time. If you select the full screen mode, you can open the screen function menu in this way: under the full screen viewfinder mode, press the left function key, and select **Normal size** from the popup menu to access the non-full-screen mode.

Introduction to the Screen Functions

The screen function menu contains the following functions:

Function	Description
	The brightness: You can press the left/right scroll key to adjust the brightness.
	The foci: You can press the up/down scroll key to adjust the foci of the camera lens.

Note:

If you set the resolution to 640 % 480, you cannot adjust the foci.

Introduction to the Menu Functions

In the viewfinder mode, press the left function key to open a menu. You can execute the following operations:

Operation	Description
Snapshot	To capture a picture.

Operation	Description
Frame	With this function, you can select a frame file, or cancel using frames in the process of taking pictures.
Normal size/Screen size	With this function, you can adjust the size of viewfinder frame.
Gallery	Select this function to access the camera folder. Then you can view the existing pictures in the folder.
Internal/External view	With this function, you can change the direction of viewfinder.
Self timer	With this function, you can take pictures based on timing. After selecting this function, press  to take photos. The countdown time is 10 seconds.
Settings	• Size: to adjust the solution. • Effects: to select an effect for your picture. • Image quality: to select an image quality for your picture. • White balance: The phone provides you with several modes, including Auto, Fluorescent, Incandescent, Daylight, Cloudy and Night mode. • Save to: to select to save your pictures in your Phone or on the Memory card. • Shutter tone: to select a sound for the shutter. • Reset: to restore the default settings of the camera.
Video camera	With this function, you can access the functions of video camera.

Video Camera

With this function, you can make videos with your phone at any moment.

From the main menu, select **Multimedia**  > **Video camera**, and press  to access the viewfinder screen.

In the viewfinder mode, you can press  to make video.

Introduction to the Functions on Viewfinder Screen

Access the Video camera function to display the viewfinder screen. You can select **Options** > **Internal view** or **Options** > **External view** to change the direction of viewfinder.

Introduction to the Screen Functions

The screen function menu contains the following functions:

Function	Description
	The brightness: You can press the left/right scroll key to adjust the brightness.
	The foci: You can press the up/down scroll key to adjust the foci of the lens.

Introduction to the Menu Functions

In the state of viewfinder, press the left function key to open a menu where you can execute the following operations:

Operation	Description
Record	Select this option to start making video.
Zoom display	With this function, you can adjust the size of the viewfinder at the same solution. When the solution is set to 176×144 , this function is unavailable.
Internal/External view	With this function, you can change the direction of viewfinder.
Gallery	Select this function to access the video camera folder and then you can view the existing video files in the folder.
Settings	• Size: to adjust the solution. • Quality: to select an image quality for your video. • Frame rate: to select frame rate for your picture. • Audio: to select whether to record audio while making video. • Duration: to select the duration for making a video. • Save to: to select to save your pictures in your Phone or on the Memory card. • Reset: to restore the default settings of the video camera.
Memory size	With this function, you can view the ratio of the used space to the total space and the duration for the free space.
Send MMS	After making a video, you can select this function to send the video file out at once.
Camera	With this function, you can access the functions of camera.

Introduction to the Functions During Recording

In the state of viewfinder, you can press  to make video. In the state of shooting, you

9 Multimedia

can press  to switch between pause and going on the shooting; or you can press the right function key to stop the shooting.

In the state of making video, if you press the right function key to stop making video, you can either choose to delete or save the video. The video files will be saved at the **Gallery > Videos > Video camera** folder.

Voice Recorder

The U526 phone provides you with the function of recording voice. You can set the duration for the recording.

Select **Multimedia**  > **Voice recorder** from the main menu, and then press  to access the voice recorder screen. You can execute the following operations:

Preparations Before the Recording

1. Set the duration: On the standby screen of the voice recorder, you can select **Options > Duration** to set the duration.
2. View records: On the standby screen of the voice recorder, you can select **Options > Gallery** to view the audio files.
3. Start recording: On the standby screen of the voice recorder, you can press  to start recording.

Operations During the Recording

1. Pause: In the process of recording, you can press  to stop the current recording, and press  again to continue.

2. Stop and save: In the process of recording, you can press the left scroll key to stop the current recording. The audio file is saved in **Gallery > Music > Voice recorder** automatically.
3. Exit the current audio file: In the process of recording, you can press the right function key or press  to exit the current audio file.

Operations After the Recording

To play an audio file instantly: When the recording is finished, you can press the right scroll key to play it instantly. You can press the left scroll key to stop the playing, and press  key to switch between the two functions of playing and pausing.

Note:

While playing a recorded audio file instantly, you can press the volume keys to adjust the volume.

Viewing Images

With this function, you can view various images including those coming with the phone, those shot by yourself with the phone, those downloaded from the Internet and those attached to messages.

The phone supports images of many formats, including JPG, BMP, WBMP, PNG, GIF 87a/89a, GIF animation, BCI, and SVG.

Note:

For those too large images of some format, the phone may not be able to display.

9 Multimedia

You can view an image in two ways: browse it; or zoom it in to view it in the original size.

You can press  to switch between the two modes. The detailed description is as follows:

Browsing the Images

Select one or several images from the image list. Then, press  to view them in the state of browsing.

The image is zoomed proportionally and displayed when you view it on the screen of browsing status, during which you can see such information as the name and size of the image.

In the state of browsing images, you can execute the following operations according to the prompts:

Operation	Description
	Press the up scroll key to view the previous image.
	Press the down scroll key to view the next image.
	Press  to view the image in its original size.
Edit the image	Press the left function key and select Edit to access the screen for editing the image. Then select Options and you can perform the following operations: • Cut picture: to crop the image. • Add text: to add texts to the image. • Add frame: to add a frame to the image.
Set as the wallpaper	You can press the left function key and then select Wallpaper to set this image as the wallpaper.

Zoom Status

In the state of browsing, you can press  to view the image at its original size.

While viewing the image at its original size, if the solution is more than 240×320 , you can press the up/down/left/right scroll key to move it to view the whole image.

While viewing the image at its original size, you can press  to switch to the state of browsing the image.

Playing Video

With this function, you can play various video files including those coming with the phone, those shot by yourself with the phone, those downloaded from the Internet, those attached to the messages and those shot by yourself when you make video calls. You can also enjoy online video files.

The phone supports video files of many formats, including MP4, 3GP, 3G2, and PMD.

Select one or several video files from the video list, and then press  to play, during which you can execute the following operations upon the video files.

Operation	Description
	Press the up scroll key to play the previous video file.
	Press the down scroll key to play the next video file.
	Press the right scroll key to fast forward the video file.
	Press the left scroll key to rewind the video file.

9 Multimedia

Operation	Description
Pause	Press  , the playing pauses; press  again, the playing continues.
Zoom in/out the video image	You can press the left function key to zoom in or out the video image and change its direction.
Adjust the volume	Press the volume keys to adjust the volume.

Note:

When a call is coming:

- If a video file is being played, the video file continues to play from where it was interrupted after the call;
- If a video has been paused, the video file is still in the pausing state after the call.

Playing Music

With this function, you can play various music files, including those coming with the phone, those recorded by yourself with the phone, those downloaded from the Internet, those attached to the messages. You can also enjoy the online audio files.

The phone supports audio files of many formats, including MP3, AAC/AAC+, AMR, MID, WAV (ADPCM), MMF, QCP, XMF/DLS and RAM.

Select one or several music files from the music list, and then press  to play, during which you can execute the following operations upon the music files.

Operation	Description
	Press the up scroll key to play the previous music file.
	Press the down scroll key to play the next music file.
	Press the right scroll key to fast forward the music file.
	Press the left scroll key to rewind the music file.
Pause	Press  , the playing pauses; press  again, the playing continues.
Adjust the volume	Press the volume keys to adjust the volume.

Note:

When a call is coming:

- If a music file is being played, the music file continues to play from where it was interrupted after the call;
- If the music has been paused, the music file is still in the pausing state after the call.

Streaming

With this function, you can enjoy streaming files online. For detailed operations, please refer to “Streaming” on page 113.

10 Tools

This function provides you with various assistant tools for the phone, including STK, Calendar, To Do, Memo Pad, Alarm clock, Calculator, World Time, Stopwatch, Timer, Unit converter, Service dial number and Currency converter. You can access the **Tools** screen by selecting  from the main menu.

STK

The U526 supports STK functions. The contents depend on the USIM card you are using. For more information, please consult your USIM card provider.

Calendar

With this function, you can view the calendar and manage your schedules.

Select **Calendar** from the **Tools** , and press  to access the calendar functions:

- On the Month view screen, you can press the up/down/left/right scroll key to switch among the days and select the needed day. Then, press  to access the schedule event entries of the day.

10 Tools

- On the Week view screen, you can press the up/down scroll key to switch among different weeks; and press the left/right scroll key to switch among the days of a week. Then, press  to create a schedule event or view the details of a schedule.
- On the Day view screen, you can press the left/right scroll key to switch among different days of a week; and press the up/down scroll key to switch among the events of a day.
Then, press  to create a schedule event or view the details of a schedule event.

Calendar Functions

With this function, you can view the calendar in different modes and go to a certain date.

Operation	Description
Calendar display mode	Three modes of displaying the calendar are available: • Month view • Week view • Day view On the Month/Week view screen, you can press the left function key to open a menu where you can switch the display modes.
Go to...	With this function, you can switch to a certain date directly. It is used in the state of Month view.

New Schedule

Ways to Create Schedules

Operation	Description
Create schedule events on the Month view screen	Two ways are available: • Select a date and press  to access the schedule event list of the current day. Press the left function key to open a menu from which select New. Then, you can create the schedule events of the current day (If it is empty, you can press , and then create schedule events). • Select a date and press the left function key to open a menu from which select New. Then, you can create the schedule events of the current day.
Create schedule events on the Week view screen	Select a date and press the left function key to open a menu from which select New. Then, you can create the schedule events of the current day (If it is empty, you can press , and then create schedule events).
Create schedule events on the Day view screen	Select a date and press the left function key to open a menu from which select New. Then, you can create the schedule events of the current day (If it is empty, you can press , and then create schedule events).

Creating a Schedule

Access the screen for editing schedule, and then you can set the following items:

10 Tools

- Schedule title
- Schedule location
- Schedule type
- Start time of the schedule
- End time of the schedule
- When to alarm before the start time
- Alarm cycle of the schedule
- Schedule details
- Alarm tone
- Image files

Note:

- With the calendar function, a maximum of 1000 schedule entries can be created, and a maximum of 30 schedule events can be created or displayed in a day.
- When creating a new schedule, you have to set the alert time before you set the alert cycle, the alert tone and the image.

Operations on the Schedule

You cannot only create schedules but also edit, delete, and copy them, send them by SMS, display all of them, view the memory status, deleting all of them and so on.

Operations on the Schedule Prompt Interface

When the alerting time is up, the alert rings and a prompt interface appears. You can stop the ringing by pressing any key or by folding/unfolding your phone. On the prompt interface, you can operate to delay or stop the alert.

- Delay: on the prompt interface of an alert, press  or the left function key to delay.

- **Stop:** on the prompt interface of an alert, press the right function key to close the prompt interface.

Note:

The operation of delaying can be executed for many times and the delay time is five minutes.

To Do

This function helps you to manage and set the events to be conducted before a certain time.

Select **To Do** from the **Tools** , and press  to access it.

To Do Tasks Classification

The To Do events are tracked and managed in the form of tasks. It is classified into the following conditions:

- **Pending:** a list of the events that are at term but have not been done
- **Done:** a list of the events that have been done
- **All Tasks:** a list of all the events to do

New To Do Tasks

If there is no To Do task, you can press  or select **Options** > **New** to create one after you access this function. See the following steps:

10 Tools

Step	Description
1	Input the title of the new To Do task.
2	Set the deadline date of the new To Do task.
3	Set the priority level.
4	Set the accomplishment status of the To Do task according to the process.
5	Select whether to alarm. If you select alarm, you need to set the time for alarm.
6	Set the alert time of the To Do task.
7	Set the type of the To Do task.
8	Press the left function key to save it.

Note:

A maximum of 1000 tasks can be created with the function of To Do.

Other Operations on the To Do Tasks

Other operations on the tasks include delete, edit, copy, send by SMS, mark finished, view the memory status and delete all.

Operations on the To Do Task Prompt Interface

When the alerting time is up, the alert rings and a prompt interface appears. You can stop the ringing by pressing any key or by folding/unfolding your phone. On the prompt interface, you can operate to delay or stop the To Do task prompt.

- Delay: on the prompt interface of an alert, press  or the left function key to delay.

- **Stop:** on the prompt interface of an alert, press the right function key to close the prompt interface.

Note:

The operation of delaying can be executed for many times and the delay time is five minutes.

Memo Pad

With the Memo Pad function you can use your phone as paper and pen to record the important events at any time. A maximum of 100 entries can be saved.

Select **Memo Pad** from the **Tools** , and then press  to access it. If the **Memo Pad** is empty, you are required to create an entry at first after you access it.

The operations on the **Memo Pad** include creating, delete, edit, send by SMS, view the memory status and delete all.

Alarm Clock

With this function, you can set several alarms. You also can set the prompt messages, alerting ring tones and the cycle time for alarm clocks.

Setting Alarm Clocks

Your U526 phone supports alarm clocks. See the following steps:

10 Tools

Step	Description
1	Select one from the alarm list, and press  to set an alarm clock.
2	Set the alarm time.
3	Select a ring tone. The U526 phone provides standard ring tones and supports the downloaded ring tones.
4	Input the prompt information.
5	Set the alarm cycle.
6	Press the left function key to start the alarm clock.

Prompt Interface of an Alarm

When the time for an alarm clock is up, the alerting rings and a prompt interface appears. You can stop the ringing by pressing any key or by folding/unfolding your phone. On the prompt interface, you can operate to snooze or stop the alarm clock prompt.

- Snooze: on the prompt interface of an alert, press  or the left function key to make the alarm clock snooze.
- Stop: on the prompt interface of an alert, press the right function key to close the prompt interface.

The operation of snooze can be executed for many times and the interval is five minutes.

No matter whether the power is on or off, the alarm clock can alarm. If the power is off, it will prompt you whether to power on when the clock alerts.

Note:

If you do not turn off the clock when it alerts, the clock will automatically snooze and alert again in five minutes. The clock can snooze for three times.

Stopping the Alarm Clock

Select an entry of alarm clock from the alarm clock list, and press the left function key to deactivate the alarm clock.

Calculator

With this function, you can do the operations of addition, subtraction, multiplication, division and extraction. You can:

- Press the number keys to input the figures.
- Press the up/down/left/right scroll key to input the operators.
- Press the left function key to clear.
- Press the right function key to exit from the Calculator.

- Press  to input the radix point.

- Press  to delete the character on the left of the cursor.

- Press  to do the operation of extraction.

- Press  to enter the operator of equal mark.

World Time

With this function, you can view the time of the important cities throughout the world. You can press the left/right scroll key to switch among the time zones.

If the daylight saving time (DST) is used in the place where you are, you need to set to DST. Then, you can get the exact local time. Follow this way: move to the desired time zone, then, press **Options** > **DST** to select whether to set to DST.

Stopwatch

With the stopwatch function provided by the U526 phone, you can save five items of stopwatch information at most.

- Start: press the left function key to start timing.
- Lap: press the left function key to save the first item of timing. Then, the second item starts automatically. You can go on operating in this way.
- Pause: press the right function key in the process of timing, it pauses.
- Continue: press  or select **Options** > **Continue**, it continues to time from where it paused.
- Reset: in the state of pause, select **Options** > **Reset** to reset the stopwatch and clear all the records.

Timer

With this function, you can set a timer with at most 99 hours and 59 minutes. After you set it, the timer is displayed on the home screen.

On the Timer screen, you can execute the operations of pause, continue and reset.

Unit Converter

The U526 phone provides you with the function of converting units, by which you can convert length and weight units.

Step	Description
1	Press the up/down scroll key to select the unit type bar, input unit bar or output unit bar.
2	On the unit type selection bar, press the left/right scroll key to select weight or length.
3	On the input unit bar, press the left/right scroll key to select the unit of the numeric value that will be converted from.
4	On the output unit bar, press the left/right scroll key to select the unit of the numeric value that will be converted to.
5	Press the number keys to enter a numeric value in the number bar. Then, you can view the conversion result.
6	Press the left function key to clear the numeric values you entered.

Currency Converter

The U526 phone provides you with the function of converting currencies. Access the screen of currency converter, and then you can press the up/down scroll key to switch the setup items.

Step	Description
1	On the Input bar, press the number keys to enter the numeric value of the currency that will be converted.
2	On the From bar, press the left/right scroll key to select the currency type that will be converted from.

10 Tools

Step	Description
3	On the To bar, press the left/right scroll key to select the currency type that will be converted to.
4	On the Rate bar, enter the currency rate to view the result.
5	Press  to clear the numeric value you entered.

Note:

Press **Setting** in the currency converter interface, and you can select the frequently used currency units. Thus, you can just switch between the selected units on the **Form** or **To** bar.

Service Dial Number

With this function, you can dial the service numbers provided by the service provider.

11 Gallery

This function helps you manage such files as image, music, video and eBook conveniently.

You can access the **Gallery** screen by selecting  from the main menu.

Images

The U526 phone supports images of many formats including BMP, JPG, PNG, BCI, GIF87a/89a, GIF animation, WBMP and SVG.

Select **Gallery**  and then select **Images** to access the function of image management. The phone provides two folders including **Camera** and **Download**.

You can execute the following operations upon the image files:

Function	Description
View	To view an image file.
Cut	To cut a file.
Copy	To copy a file.
Delete	To delete a file.
Paste	To paste a file (you should cut or copy a file at first. Then you can execute the operation of pasting).

11 Gallery

Function	Description
Mark	To select one or more image files.
Unmark	To cancel the selection of the image file.
Unmark all	To clear away all the selected items.
Mark all	To select all the files.
Rename	To rename a file.
Properties	To view the properties of one or more files.

Note:

The **Camera** folder and the **Download** folder are preset in the phone. You cannot delete them. The Camera folder does not support the function of paste.

Music

The U526 phone supports audio files of many formats including MP3, MID, WAV (ADPCM), QCP, AAC/AAC+, MMF, AMR, and XMF/DLS.

The phone provides two folders including **Voice recorder** and **Download**.

You can execute the following operations upon the music files in the folder, namely, play, cut, copy, delete, mark, unmark, unmark all, mark all, cycle current, cycle all, rename and view properties.

The operations of cycle current and cycle all are as follows:

Operation	Description
Cycle current	Play the currently selected one or more files cyclically.

Operation	Description
Cycle all	Play all the music files in the list cyclically.

Note:

The **Voice recorder** folder and the **Download** folder are preset in the phone. You cannot delete them. The **Voice recorder** folder does not support the function of paste.

Videos

The U526 phone supports video files of multiple formats including 3GP, MP4, 3G2, and PMD.

The phone provides four folders, including **Video camera**, **Download**, **Streaming** and **Video call**.

Folder	Saved files
Video camera	The 3GP files shot by the video camera of your phone are saved in this folder automatically.
Download	The video files downloaded by the WAP browser are saved in this folder automatically.
Streaming	In this folder, you can perform such operations as create, edit, copy and delete URL files of stream media links.
Video call	The video files recorded in video calls are saved in this folder.

11 Gallery

Note:

The **Video camera** folder, **Download** folder, **Streaming** folder and **Video call** folder are preset in the phone. You cannot delete them. The **Video camera** folder and **Video call** folder do not support the function of paste.

eBooks

The phone supports to browse the eBooks in such formats as TXT and HTML.

Java

The **Java** folder is for saving the uninstalled JAVA files.

Personal

In the **Personal** folder, you can create first-level folders to manage the classified files.

Memory Card

When the phone finds the inserted memory card, **Memory card** is displayed in the file management list of the Gallery automatically. You can execute operations on the contents of the memory card. At the same time, the U526 phone provides the function of formatting the memory card.

12 Browser

With the build-in browser, you can easily and pleasantly tour around the Internet world. You can access the Browser screen by selecting  from the main menu.

To use the browser, you have to configure the network. For more information, please refer to “Browser/Select Profile” on page 111.

Homepage

After launching the browser, you will see “Homepage”, the first option. You need to set the name of the homepage. For more information, please refer to “Browser/Select Profile” on page 111.

Browsing Web Pages

In the Homepage, select a link from the page; and then select **OK** to browse the page.

Note:

During browsing, you can press the scroll keys to select a link to be accessed. The selected link is highlighted. Press **OK** to enter it.

Other Operations for the Homepage

After selecting **Options** from the homepage, you can perform the following operations:

12 Browser

Homepage

To access the homepage. The name of the homepage you have set is displayed here.

Forward

To go forward when you browse web pages.

Bookmarks

To access the bookmark directory and view the saved bookmarks.

Go to URL

To enter a web site address and connect it.

Recent pages

To access pages you have browsed recently. Ten entries of records can be saved.

Save

To save the pages or contents on the pages to your phone, you may select **Save page** or **Save item**. Web pages will be saved to the **Saved pages**, and contents will be saved to the folders on your phone.

Refresh

To refresh the current web page.

Saved pages

To access the saved pages.

Select **OK** to browse saved web pages in offline mode.

Select **Options** to perform the following operations:

- Go to: To select whether to connect again to the Web server to retrieve updated pages.
- Delete: To select whether to delete a selected page.

Settings

Select **Settings**, and then you have the following options:

- Save as homepage: to save the current page as the homepage. You can press the up/down scroll key to switch between the title editing bar and the address editing bar.
- Multimedia: to set whether to show images or play background music.
- Cache: to set the cache to On/Off and clear the cache.
- Cookies: to enable (On) or disable (Off) cookies and clear cookies.
- Accept push: to enable (On) or disable (Off) the “Accept push” function.
- Security: to show the “Current certificate” and “CA certificates”.
- Character set: to select one of the character sets, which include the following options: “Automatically”, “Unicode (UTF-8)”, “UCS-2”, “GB2312” (for Simplified Chinese), and “BIG-5” (for Traditional Chinese). After selecting a character set, press  or the left function key to confirm.

Bookmarks

With this option you can save and edit the information of the websites that you often access.

The U526 supports OTA function. You can use the WAP service to obtain the Bookmarks information provided by the operator (or the service provider).

Some bookmarks that have been preset on the phone are saved in this catalog. Select any one of them, and then you can perform the following operations:

Adding a Bookmark

Select **Options** > **Add** to add a Title and Address for a bookmark.

12 Browser

Goto a Bookmark

Select a bookmark and select **OK** to connect the selected bookmark; you may also connect to the server to get the latest web page by selecting **Options > Goto**.

Editing a Bookmark

Select a bookmark and then select **Options > Edit** to edit the selected bookmark. The preset bookmarks cannot be edited.

Deleting a Bookmark

Select a bookmark and then select **Options > Delete** to delete the selected bookmark.

Go to URL

Access the **Go to URL** screen, and then you can enter the address of the web page to be accessed.

You can select **Goto**, **Edit**, **Delete** or **Delete all** from the **Options** to perform corresponding operations upon the entered address.

Saved pages

It is used to save web pages for your offline browsing.

Browsing Web Pages

Select a web page and then click **OK** to display the page. You may also select **Options > Goto** to connect the selected web page.

Deleting Web Pages

Select a web page and then select **Options** > **Delete** to delete the selected web page.

Push Inbox

For more information on the Push inbox, please refer to “Messages/Push Inbox” on page 74.

Select Profile

For your convenience of switching among the networks, the U526 phone provides several profiles for setting network.

The U526 supports OTA functions. You can use the WAP service to obtain such information as homepage, WAP gateway, data account and connection type provided by the operator (or service provider).

Enter the Browser and select **Select profile**; then press  to display the **Select profile** screen. You can select **Options** > **Rename** to rename a selected profile.

Select a profile and press  or select **Options** > **Edit**, to set the following items:

Homepage

Select **Homepage** and press  to display the **Edit homepage** screen to enter the Title and Address information.

You may press the up/down scroll key to switch between the Title editing bar and the Address editing bar.

12 Browser

WAP Gateway

After accessing the **Wap gateway** screen, you may enter IP address of the gateway, IP port, User name, and Password.

Press the up/down scroll key to switch across the input bars.

For details of the requirements for setting this information, please contact your network operator; you can also obtain them by the OTA download mode.

Timeout Settings

It is used to set the overtime (in seconds) of a connection. If exceeding the set timeout limit, the connection will be disconnected.

Data Account

For setting a data account, please refer to “Connections/Data Account” on page 127 or consult your network operator for detailed parameters. You can also obtain them by the OTA download mode.

Press the up/down scroll key to select a data account, and then press  to access the screen for editing data account. After editing the items, select **Save** to exit the screen for editing. Press **Select** to activate the data account.

Connection Type

It is to set connection type for the browser.

13 Streaming

The U526 phone supports the stream media services. To enjoy the online stream media services, you need to select a data account at first. For details, please refer to “Operations on URL files” on page 114.

Playing Stream Media Files

The U526 allows you to enjoy the stream media services by the following methods:

- Method 1: In the process of browsing the Internet, press  at the stream media files link provided by the network. For details on how to access the Internet, please refer to “Browser” on page 107.
- Method 2: In **Gallery > Videos > Streaming**, select **Options > New link** and then enter the link address. Select a URL file and press  to play it.
- Method 3: In **Multimedia > Streaming**, select **Options > New link** and then enter the link address. Select a URL file and press  to play it.
- Method 4: On the screen of a short message, select **Options > Extract URL**. If there is only one URL in this message, the Stream media will be played directly; if there are many URLs, select one in the URL list and then press  to play the stream media.

Operations during Playing Stream Media Files

In the process of enjoying stream media files, you can perform the following operations:

Operation	Description
Fast forward	Press the right scroll key to fast forward the stream media file.
Rewind	Press the left scroll key to rewind the stream media file.
Pause	Press  to pause the playing; press  again to resume the playing.
Full Screen Mode	Press the left function key to switch to play the stream media file in full screen. Full screen mode still supports fast forward, rewind, pause and volume adjustment.
Adjust volume	Press the volume keys to adjust the volume.

Note:

The functions of pause, fast forward and rewind are available for VOD (Video on demand) only. They are unavailable for living TV.

Operations on URL Files

In **Gallery > Videos > Streaming** or **Multimedia > Streaming**, select **Options**, and then you can perform the following operations:

Option	Description
Enter	To enter the address of the selected stream media link.
New link	You can input a new link address. The link will be saved as a URL file automatically.
Edit link	You can edit the contents of the existing URL file (Stream media link address).
Settings	In the Settings screen, you have the following options: • Data account: to select the data account needed by stream media services. For details on setting data account, please refer to “Connections/Data Account” on page 127. • Streaming: to set the gateway and port of the stream media. • QoS: to guarantee the stream media, please enable this function.
Cut	To cut files.
Copy	To copy files.
Delete	To delete files.
Paste	To paste files. (To perform this operation, you must cut or copy files at first. Furthermore, only URL files can be pasted.)
Mark	To select one or several URL files
Unmark	To cancel the selection to one or several URL files
Unmark all	To cancel all the selections on the files.
Mark all	To select all the files.
Rename	To rename files.
Properties	To view the properties of one or more files.

14 V-Call

Video call service is one of the featured services provided by the 3G network. It has ended up a historic age of traditional voice call service, featuring “Hearing the voice, imagining the looks”.

Introduction to the Screen Functions

When a video call is connected, you can see the V-Call screen which contains three parts: the phone number of the other party, current call duration, and the function menu of this screen.

Functions on the Screen

A V-Call screen contains the following adjustable functions:

Icon	Description
	Press the up/down scroll key to adjust the brightness.
	Press the left/right scroll key to adjust the foci of the camera lens.
	Press the volume keys to adjust the volume of the earpiece.

14 V-Call

Functions of Some Keys

During a call, you can press some keys to switch audio devices and to make video of the other party:

- To switch audio devices: You can press  to switch between the earpiece mode and the handfree mode.
- To make video of the other party: You can press the right function key to make video of the other party during a call. You can press the right function key to stop making video. Otherwise, it will automatically stop when the memory is not enough or when the duration is up to 30 minutes.

Note:

The video files you made are saved to **Gallery > Videos > V-Call** by default.

Function Options

When a video call is connected, you will see the video call screen. Press the left function key, and you have the following options:

Handfree/Earpiece

During a call, you can press the left function key to switch between **Handfree** and **Earpiece**.

P-in-P

During a video call, your image can be shown on your phone screen. You can select **P-in-P** to arrange the positions of your image. You can also close your image window.

Switch Display

With this option you can switch between image windows: to display your image in the small window and the other party's image in the large window or to display yours in the large window and the other party's in the small window.

External View/Internal View

With this option you can adjust the direction of the camera lens.

Open/Forbid Video

With this option you can open or close the video channel of your party during a video call.

Open/Forbid Audio

With this option you can open or close the audio channel of your party during a video call.

Image Quality

With this option you can choose **Best quality** or **More smooth** for the image quality.

Play Media File

With this function you can play media files on the phone during a video call.

During a video call, you can select **Options > Play media file** to access the Gallery screen and select an image or a video file. Press the left function key to confirm, and the other party will enjoy the file.

Then, select **Options > Close media file**. The screen recovers to the camera viewfinder.

14 V-Call

Note:

To play a video file, the video coding format of the file must be the same as that of the current video call.

Contacts

With this option you can use the **Contacts** during a video call.

SMS

With this option you can send messages during a video call.

Note:

You can also set such common functions as P-in-P, Zoom display, Switch display and Image quality at **Settings > Video call setup**.

15

Connections

The data connection function of the U526 provides you with many data communication functions. You can access the **Connect** screen by selecting  from the main menu. You can realize the data synchronization between your phone and a PC through a USB cable. You also can use the built-in modem of your phone to establish a dialup connection to a PC to access the Internet through this interface.

USB

With the USB cable, you can realize the data synchronization between your phone and PC, surf the Internet with your phone and read the memory card.

Caution:

- To use the USB cable, please strictly obey the following rules. Otherwise, your phone or PC may be damaged: To connect your phone and PC with the USB cable, connect to the phone at first, and then connect to the PC; To disconnect your phone and PC from the USB cable, disable the *HUAWEI U526 MOBILE PHONE PC Assistant* at first, and then disconnect from the PC, and finally disconnect from the phone.
- If the PC cannot recognize the U526 phone, when connecting them with the USB cable, power off the PC and restart it a moment later and try to connect again.
- Do not plug the USB cable in and out the U526 phone frequently.

USB-Based Synchronization

The U526 phone supports the synchronization requests from a PC to your phone.

With the USB cable and the *HUAWEI U526 MOBILE PHONE PC Assistant* coming with your phone, your phone can communicate with a computer. You can backup and edit the contact entries and messages saved on your phone and the USIM card on a computer. You can also synchronize contacts, schedule events and To Do tasks between your phone and the Outlook or the Outlook Express.

Follow these steps to operate the USB-based synchronization with your U526 phone.

Step	Description
1	Install the <i>HUAWEI U526 MOBILE PHONE PC Assistant</i> coming with your phone: Insert the disk and select “Install PC Assistant” and “Instruction to install driver”. Then click Continue and follow the guide to complete the installation.
2	Access the main menu screen, and select Settings > Connect > Modem setup and set the port to USB modem .
3	Connect your phone and PC with the USB cable.
4	Run the application program of the <i>HUAWEI U526 MOBILE PHONE PC Assistant</i> on the PC.
5	Now you can operate the synchronization.

Note:

For details of the operation, please refer to the Help of the *HUAWEI U526 MOBILE PHONE PC Assistant*.

Note:

While running the *HUAWEI U526 MOBILE PHONE PC Assistant* on the PC, you can select **Options > Communication**, and then click **Default** to connect the port corresponding to the USB Modem.

Accessing the Internet by USB

Connecting your phone and PC with the USB cable enables the PC to use the phone as a modem to establish a dial-up connection to the Internet.

To access the Internet by using the USB, two way are available: one is to use the *HUAWEI U526 Mobile Phone PC Assistant* coming with the U526 phone; the other is to use the Windows operation system to set the service.

Note:

Windows 2000 and Windows XP are supported.

Using HUAWEI U526 Mobile Phone PC Assistant to Access the Internet through USB Cable

To use the *HUAWEI U526 Mobile Phone PC Assistant* coming with the U526 phone to access the Internet, see the following steps:

Step	Description
1	Ensure that your USIM card supports the Internet access service.
2	Access the main menu, and select Settings > Connect > Data account , and then select a profile from the list to set relevant information.
3	On the main menu screen, select Settings > Connect > Modem setup and set the port to USB modem .

15 Connections

Step	Description
4	Install the <i>HUAWEI Mobile Phone PC Assistant</i> that come in with your U526 phone package: Insert the CD carrying the application software, select Instruction to install driver and Install Dial-up Wizard and click Continue . Then, follow the prompts to complete the installation.
5	Connect your phone and PC with the USB cable.
6	Confirm there is USB Modem in the Modem of the Device Manager of your PC.
7	1. Run the U526 Dial-up wizard on the PC. 2. Select OK from the pop-up window. 3. Select New Dialup Connection (Modem) and press OK to confirm. 4. Select the Modem that is connected in USB mode from the Modem list. 5. Enter the information of setting the dial-up connection to the Internet provided by the service provider to the Dialup Setting field and click Create. 6. Select HUAWEI Phone Connection on your PC to make dial-up connection.

Using Windows Operation System to Set the Function of Accessing the Internet with Your Phone

You can also connect your phone and PC with the USB cable, and then use the Windows operating system to set the function of accessing the Internet by your phone. Follow these steps:

Step	Description
1	Make sure that your USIM card supports the function of accessing the Internet.
2	On the main menu screen, select Settings > Connect > Data account , and set relevant information.

Step	Description
3	On the main menu screen, select Settings > Connect > Modem setup and set the port to USB modem .
4	Install the <i>HUAWEI U526 Mobile Phone PC Assistant</i> coming with your U526 phone package: Insert the CD carrying the application software, select Instruction to install driver and then click Continue . Then, follow the prompts to complete the installation.
5	Connect your phone and PC with the USB cable.
6	Make sure that there is USB Modem in the Modem of the Device manager of your PC.
7	On your PC, you can select Network Connections from the Control Panel and click Create a new connect . Then you can follow the guides to create a new connection.
8	Execute the new connection to dial up.

SD Card Reader

You can use the USB cable to read the files saved on the SD card.

On the main menu screen, select **Settings > Connect > SD card reader**, and press  to access it.

Follow these steps to use the SD card reader:

1. Insert the SD card to your phone.
2. Select **Connect > SD card reader > On**.
3. Connect your phone and PC with the USB cable.

15 Connections

4. **Found New Hardware** is displayed on your PC, and an icon indicating a new mobile memory driver appears, by which you can operate the data in the SD card on your PC.

Notes:

- The function of SD card reader and the other functions using the USB cable are incompatible. If you enable the SD card reader, the other functions using the USB cable will be unavailable at once. If you need to recover the other USB functions, disable the function of card reader.
- After the function of SD card reader is enabled, you cannot access the SD card through the **Gallery** of your phone. To access it, disable the function of SD card reader at first.
- Since the function of SD card reader is enabled, if your phone had been restarted and then you want to use the USB Modem function, you need to disable the function of SD card reader and set the USB Modem again.

Notes to the Functions of the Connections

Some of the data connection functions of the U526 phone cannot be used simultaneously. It is described in detail as follows:

	SD card reader	USB Modem	USB-based synchronization
SD card reader	-	Unsupported	Unsupported
USB Modem	Unsupported	-	Unsupported
USB-based synchronization	Unsupported	Unsupported	-

Data Account

You need to set the data account before you use your phone to access the Internet, send multimedia messages and synchronize data through wireless network.

Note:

The U526 provides five data accounts. Those preset by the network operators can be browsed but cannot be set, and others can be browsed and set.

The setup of the data account is different due to different networks and operators. For details, please consult the local network operator.

On the main menu screen, select **Settings** > **Connect** > **Data account**:

1. Select a data account and press  to access the editing screen, and then press the up/down scroll key to switch among the setting items. Press  to edit each item. Notice that the data accounts preset by the network operator cannot be edited.
2. When the setting is finished, select **Save**. The settings are saved and the interface returns to the screen of data account.
3. On the **Data account** screen, select a profile and then select **Options** > **Rename** to rename the data account.

SYNCML

With this function, you can synchronize the information in the phone and that on the server through the wireless network. The information includes the **Contacts**, the **Calendar** and **To do**.

15 Connections

Set Mode

Before you use the SYNCML function, you need to set the synchronization mode.

Step	Operation
1	Select Settings in the main menu and press  .
2	Select Connect > SYNCML > Set Mode .
3	Press the up/down scroll key in the Sync Item screen to select the desired item and select OK .
4	Press the left/right scroll key to enter the Sync Item Setting screen and then enter the database path of the synchronization items.
5	Press the left/right scroll key to enter the Server Setting screen and then enter the user name, password and server URL.
6	Press the right soft key to back to the previous menu and enter DataProfile and then select the desired profile.
7	Select Synchronize to start SYNCML.
SYNCML: Synchronization Extensible Markup Language	

Note:

To use the remote SYNCML service, apply to your service provider. For server database path, user name, password and server URL and other details, contact your service provider.

Synchronize

Before start synchronization, set the synchronization mode first. Then select **Synchronize** to start synchronization.

View Log

You can view the latest synchronization log.

Data account

To use the synchronization service, set the data profile first. Enter **Data account** and select a desired profile. For setting the data profile, refer to “Connect/Data account” on page 127.

16 APPS

This phone supports Java. You may download games or other applications and run them on the phone. You can access the **JAVA** screen by selecting  from the main menu.

Applications & Games

You may download the latest Java games and applications by the browser. These downloaded games and applications are automatically saved to the **Applications and games** folder.

Select a Java game or an application and then press  to run it. You can mute the music by pressing the record key and adjust the volume by pressing the volume keys.

Select **Options**, and then you can perform the following operations: update the version, delete the application, view the application information, create, move and delete a folder, set the confirmation mode of permission, view the DRM properties, and backup.

Select

You can access the selected Java games and applications.

Update

You can update the downloaded Java games and applications.

16 APPS

Delete

You can delete the selected content.

Description

You can view the description of Java games and applications.

New Folder

You can create folders to classify and manage the downloaded Java games and applications. The U526 phone supports to create 50 folders at most.

Move

You can move downloaded Java games and applications from one folder to another.

Permission

You can set whether your Java games and applications are protected, and select a protected function according to actual demands.

Properties

You can view the Digital Right Management (DRM) information of the Java applications, such as the duration limit and using times.

Backup

You can backup the applications and games to **emory card** or the **Java Folder**.

Note:

You can perform backup operations upon the files that the DRM allows to be backed up only.

Download More

You can select a bookmark from the **Download** catalog to open a corresponding link to download the desired games or applications. You can also open a web page from **Browser** to download Java games and applications. Before downloading, you should select a profile first. For details, please refer to “Browser/Select Profile” on page 111.

Select **Download more**, and the preset bookmark and created ones are displayed.

Entering a Bookmark Link

Select a bookmark and press  or press **Options** > **Select** to enter it.

Creating a Bookmark

Select **Options** > **New** to display the screen for creating a bookmark. Input a bookmark name and bookmark URL, and then select **Save**. The U526 supports to create up to 10 bookmarks.

Modifying a Bookmark

You can modify a bookmark created by yourself. To do this, select **Option** > **Modify**, and then you can modify the name and URL of the bookmark.

Deleting a Bookmark

You can delete a bookmark created by yourself. To do this, select **Options** > **Delete**, and then

confirm the deletion.

Setting to Default

You can set the default bookmark. Select the desired bookmark and then select **Options** > **Default** to set it to default. When you enter the downloading page next time, the default bookmark is highlighted.

Viewing Details

This option is used to view the details of a bookmark: “Bookmark Name” and “Bookmark URL”.

Memory Status

Selecting this option, you can view the current free memory of your phone.

17

DRM

The U526 supports “Forward Lock”, “Combined delivery” and “Separated delivery” modes defined in OMA DRM1.0. DRM (Digital Rights Management) is the solution for preventing the digital contents from piracy and protecting the provider’s interests. Here, the digital contents include Java applications and the multimedia contents such as images, audio and video. Being attached with the copyright information, these contents are protected by DRM. The DRM function controls the usages of these contents on terminals.

The contents that are forbidden to forward and that are protected by DRM (the contents obtained by “Forward lock” and “Combined delivery” modes) cannot be forwarded to other devices through USB, serial port, MMS and so on. They cannot generate copies on the same phone either. However, the contents that are protected by DRM and that are allowed to be forwarded (the contents obtained by “Separated delivery” mode) can be forwarded to other devices in any way the phone supports. They cannot generate copies on the same phone.

Attaching copyright information may restrict the using times, using period and validity period in accessing the protected contents. If the protected content cannot be accessed, it indicates that the corresponding copyright has been overdue or used up. You can re-obtain the right for the DRM files in “Separated delivery” mode.

You can find out the copyright information by viewing the properties of the DRM files. You can also delete, switch and update the copyright.

The statuses of the files supported by the U526 are described as follows:

Type	Common File	File with Copyright Protected File			
		Usable (Green lock)		Unusable (Red lock)	
		Forward-able	Unforward-able	Forward-able	Unforward-able
Audio					
Video					
Image					

Select **Settings** > **Security** > **DRM setting**, and then press . Enter the correct phone password and press  to confirm, and you will have the following options:

Operation	Description
Delete the invalid right	To delete the invalid rights.
Delete the right without media file	To delete the rights without media file.
Delete all rights	To delete all the rights.

18 Settings

With this function you can change the settings of your phone. You can access the **Settings** screen by selecting  from the main menu.

Call Forwarding

It is used to select a mode for forwarding incoming calls.

Select **Call forwarding** from the **Settings** screen and then press . You will have the following options:

All Calls

From the **All calls** menu, select one from the four items: **Voice call**, **Fax call**, **Data call**, and **All services**. Then you have the following options:

Option	Description
Activate	Enter a number to be forwarded to and press  . Since then, all the incoming calls will be forwarded unconditionally to that number.
Deactivate	To cancel the service of forwarding all calls.
Check status	To view the status of the service of forwarding all calls.

18 Settings

If out of Reach

From the **If out of reach** menu, you can select one from the four items: **Voice call**, **Fax call**, **Data call** and **All services**. Then you have the following options:

Option	Description
Activate	Enter a number to be forwarded to and press  . Now all the unreachable calls will be forwarded unconditionally to this number.
Deactivate	To cancel the service of forwarding on unreachable calls.
Check status	To view the status of forwarding unreachable calls.

If Busy

From the **If busy** menu, you can select one from the four items: **Voice call**, **Fax call**, **Data call** and **All services**. Then you have the following options:

Option	Description
Activate	Enter a number to be forwarded to and press  . Now all the incoming calls will be forwarded unconditionally to this number when the phone is busy.
Deactivate	To cancel the service of forwarding when the phone is busy.
Check status	To view the status of forwarding when the phone is busy.

If not Answered

From the **If not answered** menu, you can select one from the four items: **Voice call**, **Fax call**, **Data call** and **All services**. Then you have the following options for each:

Option	Description
Activate	You can select a forward call delay time and press  to enter a number to be forwarded to, and then press  to confirm. Now the unanswered calls will be forwarded to this number according to the delay time you have set.
Deactivate	To cancel the service of forwarding unanswered calls.
Check status	To view the status of forwarding unanswered calls.

Note:

It is possible that the network you are using does not support you to select **Forward now** from the delay time list if not answered. For more information, please consult the network operator.

Disable All

From the **Disable all** menu, you can select one from the four items: **Voice call**, **Fax call**, **Data call** and **All services**. Then press  to disable all services of call forwarding.

Phone Setup

With this option you can change the settings related to the phone, including **Language**, **Date and time**, **Date format**, **Brightness**, **Backlight delay**, **Keypad backlight**, **Auto On and Off** and **Greeting message**.

18 Settings

Language

The U526 phone supports multiple languages. Select **Settings > Phone setup > Language** from the main menu, and press  to select a language:

Setup	Description
Auto	This option is used to set the language to be used in the phone according to the language used in your USIM card: • If the language used in the USIM is simplified Chinese, traditional Chinese or English, the language used in the phone will be set automatically to the simplified Chinese, traditional Chinese or English respectively. • If the language used in USIM is not simplified Chinese, traditional Chinese nor English, the language used in the phone will be set to English automatically.
简体中文	Set to simplified Chinese.
繁體中文	Set to traditional Chinese.
English	Set to English.

Date and time

This option is used to change the system time of the phone.

Date format

This option is used to change the display format of the date of the phone. Three formats are available: **yy/mm/dd**, **mm/dd/yy**, **dd/mm/yy**.

Brightness

It is used to set the brightness of the screen. Three levels are available.

Backlight delay

It is used to set the backlight delay time of the screen. You can select one from **5 seconds**, **15 seconds**, **30 seconds** and **Always on**.

Keypad backlight

It is used to turn on or off the keypad backlight.

Auto ON and OFF

This option is used to set your phone to power on or off automatically.

Step	Operation
1	Press the up/down scroll key to select the function of Auto ON and Auto OFF .
2	Press  to set the time for Auto On and Auto Off . Press  to select the desired item.
3	Select Option > Save to save your settings.

Greeting message

On the **Greeting message** screen, you can enter a welcome note that appears on the screen when you switch on the phone.

Profiles

With this option you can select different profiles for the phone to fit different environmental situations.

The U526 phone provides eight profiles including **Normal**, **Meeting**, **Activity**, **Sleep**, **Car**, **Off Line**, **Silent** and **My profile**.

You can select a profile and press  or press **Options** > **On** to activate this profile. You can also select **Options** > **Edit** to edit it.

The relevant settings include incoming call ring tone setting, incoming message ring tone setting, ring volume setting, earpiece volume setting, key tone volume setting, vibration setting, silent setting, flip tone setting, prompt tone setting, startup and shutdown tones setting.

Note:

In standby mode, you can press and hold  to switch the current profile to the meeting profile. If the current profile is offline, you cannot execute this function.

Call tone

The U526 phone provides standard ring tones for you to select. You can also download some tones for incoming calls by selecting **Download**.

Message tone

The U526 phone provides four standard ring tones for you to select. You can also download some tones for incoming messages by selecting **Download**.

Tone volume

This option is used to set the volume of incoming call rings, incoming message rings and alarm clock tones. You can press the up/right scroll key to increase the volume, and press the down/left scroll key to decrease the volume.

Earpiece volume

It is used to adjust the volume of the earpiece. You can press the up/right scroll key to increase the volume, and press the down/left scroll key to decrease the volume.

Key tone volume

It is used to adjust the volume of the keybeep. You can press the up/right scroll key to increase the volume, and press the down/left scroll key to decrease the volume.

Vibration

This option is used to enable or disable the vibration prompt mode.

Silent

This option is used to enable or disable the silent mode.

Flip tone

This option is used to set whether to make a sound when you fold/unfold your phone.

Prompt tone

This option is used to set whether to make a sound on a prompt.

Wallpaper

With this option you can select a type of wallpaper and set the wallpaper layout for the home screen.

The U526 phone provides standard wallpaper for you to select. You can also download some wallpaper by selecting **Download**.

While setting the wallpaper, you can select **Layout** to set the layout of the wallpaper. Three options are available: **Tile**, **Fit-to-screen** and **Center**.

Colour Themes

With this option you can change the colour theme: You can select a different color theme for the menu, prompt bar, title bar and the cursor.

Connect

The data connection function provides you with many data communication functions. You can synchronize data between your phone and a PC through a USB cable. Then you can use the built-in modem of your phone to establish a dialup connection to a PC to access the Internet through this interface. For detailed information, please refer to “Connections” on

page 121.

Video Call Setup

You can set the V-Call functions such as P-in-P, switching display, image quality, forbidding video and auto voice call.

P-in-P

During a video call, your image can be shown on your phone. You can select **P-in-P** function to arrange the positions of your image. You can also choose to close your image window.

Switch display

With this option, you can switch between image windows: to display your image in the small window and the other party's image in the large window, or display yours in the large window and the other party's in the small window.

Image quality

You can choose **Best quality** or **More smooth** for the image quality.

Forbid video

You can set to open or close the video.

Auto voice call

If the other party's phone does not support the V-Call service, with this option, your phone will make a voice call automatically.

Call Setup

You can set the features for making calls, including the following options: **Auto redial**, **Answer mode**, **Call waiting**, **Auto answer**, **Select line**, **Call barring**, **My number**, **Calling ID**, and **Call barring password**.

Auto redial

This function is used to auto redial the dialed number after dialing failed.

Answer mode

It is used to decide the mode for answering an incoming call. Three options are available: **Open flip**, **Any key** and **Send key**.

Call waiting

It is used to enable or disable the call waiting function. You can also view whether the call waiting function is enabled by checking the status.

The call waiting function needs supports from the network. For more information, please consult the service provider.

Auto answer

It is used to select a way for automatically answering calls. Select **Auto answer** from the **Call setup** screen and then press .

Option	Description
Immediate answer	To answer an incoming call immediately.
Text message	To send a text message that is preset and chosen from the “Common phrases” to the caller automatically when a call is coming.
Recorded message	To answer an incoming call by playing recorded voice automatically.
Disable	To disable the auto answer function.

Select line

It is used to set the call line for your phone. Two options are available: **Line 1** and **Line 2**.

Call barring

It is used to set the call barring mode for the phone.

Select **Call barring** from the **Call setup** menu, and you will have the following options:

All Outgoing Calls

From the **All outgoing calls** screen, you can select one from the four items: **Voice call**, **Fax call**, **Data call** and **All services**. Then you have the following options:

Option	Description
Activate	Enter call barring password and press  to disable the call service.

18 Settings

Option	Description
Deactivate	Enter call barring password and press  to resume the call service.
Check status	View whether the phone has started the call barring service for barring all outgoing calls.

Intl. Calls

From the **Intl. calls** screen, you can select one from the four items: **Voice call**, **Fax call**, **Data call** and **All services**. Then you have the following options:

Option	Description
Activate	Enter call barring password and press  to disable the international calls.
Deactivate	Enter call barring password and press  to resume the international calls.
Check status	View whether the phone has started the call barring service for making international calls.

Intl. Calls Except to Home Country

From the **Intl. calls except to home ctry.** screen, you can select one from the four items: **Voice call**, **Fax call**, **Data call** and **All services**. Then you have the following options:

Option	Description
Activate	Enter call barring password and press  to start the service of barring Intl. Calls Except to Home Country. Then, you cannot dial out international call numbers except to those of the host countries with your phone when it is in international roaming.
Deactivate	Enter call barring password and press  to cancel the service of barring Intl. Calls Except to Home Country. Then, you can dial out international call numbers with your phone when it is in international roaming.
Check status	View whether the phone has enabled the service of barring Intl. Calls Except to Home Country.

All Incoming Calls

From the **All incoming calls** screen, you can select one from the four items: **Voice call**, **Fax call**, **Data call** and **All services**. Then you have the following options:

Option	Description
Activate	Enter call barring password and press  to bar the incoming calls.
Deactivate	Enter call barring password and press  to resume answering calls.
Check status	View whether the phone has started the call barring service for barring all incoming calls.

18 Settings

Incoming Calls when Abroad

From the **Incoming calls when abroad** screen, you can select one from the four items: **Voice call**, **Fax call**, **Data call** and **All services**. Then you have the following options for each:

Option	Description
Activate	Enter call barring password and press  to bar to answer calls when it roaming out of the home country.
Deactivate	Enter call barring password and press  to cancel the call barring service to resume answering calls when the phone roaming out of the home country.
Check status	View whether the phone has started the call barring service for barring incoming calls when the phone roaming out of the home country.

Disable All

From the **Disable all** screen, you can select one from the four items: **Voice call**, **Fax call**, **Data call** and **All services**, and enter call barring password. Then press  to cancel all call barring services.

My number

With this function, you can view the phone numbers saved on the USIM card. You can select **Options** to edit or delete the records.

Calling ID

With this function, you can select whether your phone number to be shown on the called phone.

Select **Calling ID** from **Call setup** screen, and then you will have the following options:

Option	Description
Auto	Whether your phone number will be shown on the called phone depends on the network.
Send	Your phone number will be shown (if the network has enabled this service).
Hide	Your phone number will not be shown (if the network has enabled this service).

Call Barring Password

This function is used to change the password for call barring.

Select **Call barring password** from the **Call setup** screen. Now you can change the call barring password.

Operation	Description
Enter old password	Enter the old call barring password (It is provided by your network operator if it is the first time for you to change the password).
Enter new password	Enter a new call barring password.

Operation	Description
Re-enter new password	Enter once again the new call barring password, and then press  or the left function key to save it.

Network Setup

From here you can change settings related to the network.

Select **Network** from the **Settings** screen. Then you have the following options for setting the network:

Setting	Description
Mode	You can specify a network from the following: • WCDMA • GSM • Auto If you select Auto, the phone will automatically search for the signal of the network where your phone is located.
Network selection	You can select a network run by different operators. The phone provides you with two modes: • Auto • Manual The “Auto” mode enables the phone automatically to search for networks and register it to a network. The “Manual” mode enables the phone to search for networks, after which you can specify a network from a list for register.

Setting	Description
Cell information	You can display the cell information in the standby mode.
My PLMN List	You can view and edit the network information saved in the USIM card at present; you also can add new information to it.

Security Setup

You can change settings related to the phone security.

Select **Security** from **Settings**, and then enter the correct phone password if you have set the phone lock to **On** (The initial password is 0000). Then press  to display the following security setting items:

Reset

If you select **Reset**, the settings you performed will be reset to the factory defaults.

Password lock

This option is to enable or disable the “Phone lock” and “PIN lock”.

Follow these steps:

Operation	Description
Phone lock	1. Select Phone lock. 2. Press the up/down scroll key to select On or Off. 3. If selecting On, press  or the left function key. 4. Enter the phone password and finish the setting.
PIN locked	1. Select PIN lock. 2. Press the up/down scroll key to select On or Off. 3. If the desired status is the same as the current status, just press . Conversely, you need to select the desired status and enter the PIN code after pressing .

Change password

You can modify the phone password and PIN code.

Select **Change password** from **Security settings**, and you will have the following options:

Operation	Description
Change phone password	1. Enter the old phone password (The initial password of the U526 is 0000). 2. Enter a new phone password. 3. Enter the new phone password again and finish the setting.
Change PIN	1. Enter the old PIN code. 2. Enter a new PIN code. 3. Enter the new PIN code again to finish the setting.
Change PIN2	1. Enter the old PIN2 code. 2. Enter a new PIN2 code. 3. Enter the new PIN2 code again to finish the setting.

Notes:

- To modify the PIN code, you must set the “PIN locked” to “On” first.
- If you enter the wrong PIN or PIN2 for three times, the USIM card will be locked. You need the PUK or PUK2 to unlock the USIM card. If you entered the wrong PUK or PUK2 for 10 times in total, the USIM card will be locked permanently.
- PUK or PUK2 are delivered with the USIM card. If you do not have one or forget it, contact your service provider.

Fixed Dialer Number

If your USIM card supports the FDN (Fixed Dialer Number) function, you can set limits for phone numbers.

Select **Fixed dialer number** from **Security settings** and you will have the following options:

Operation	Description
On	If you select this option, you will be able to dial the numbers in the FDN list only. To enable this function, you need to enter the correct PIN2 code.
Off	If you select this option, you will be able to dial any number.
FDN list	It is used to preset the fixed dialer numbers. To set it, you need to enter the correct PIN2 code.

DRM

For details, please refer to “DRM” on page 135.

19

Warnings and Precautions

Electronic Device

Turn off your phone near high-precision electronic devices. The phone may affect the performance of these devices.

Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic-control devices. If you are using an electronic medical device, consult the device manufacturer to confirm whether the radio wave affects the operation of this device.

Hospital

Pay attention to the following points in hospitals or health care facilities:

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Do not use your phone at places for medical treatment where phone use is prohibited.
- When using your phone near someone who is suffering from a heart disease, turn down the ring tone volume or vibration properly so that it does not affect the person.

Area with Inflammables and Explosives

In any area with inflammables and explosives, turn off your phone and do not take out, install or charge the battery to avoid explosion and fire. Areas with inflammables and explosives

19 Warnings and Precautions

include, but are not limited to:

- Gas station
- Area for storing fuels (such as the bunk under the deck of a ship)
- Device/Vehicle for transporting and storing fuels or chemical products
- Area with chemical substances and particles (such as: granule, dust, metal powder) in the air
- Area with the sign of "Explosives"
- Area with the sign of "Turn off bi-direction wireless equipment"
- Area where it is generally suggested to stop the engine or a vehicle

Traffic Safety

- Please observe local laws and regulations on phone use. Do not use your phone while driving to avoid traffic accident.
- Secure the phone on its holder. Do not place the phone on the seat or other places where it can get loose in a sudden stop or collision.
- Use the phone after the vehicle stops at a safe place.
- If your phone supports the hands-free function, or the phone can be used with earphones, or there is any vehicle-mounted equipment with hands-free function, use them in emergency.
- Do not place the phone over the air bag or in the air bag outspread area. Otherwise, the phone may hurt you owing to the strong force when the air bag inflates.
- Observe the rules and regulations of airline companies. When boarding or approaching a plane, turn off the phone and take out the battery. In areas where phone use is prohibited, turn off the phone. Otherwise, the radio signal of the phone may disturb the plane control signals. Turn off your phone before boarding an aircraft.

Storage Environment

- Do not place magnetic storage media such as magnetic cards and floppy disks near the phone. Radiation from the phone may erase the information stored on them.
- Do not put your phone, battery, or other accessories in containers with strong magnetic field, such as an induction cooker and a microwave oven. Otherwise, circuit failure, fire, or explosion may occur.
- Do not leave your phone, battery, or charger in a very hot or cold place. Otherwise, malfunction of the products, fire, or explosion may occur.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the phone.
- Do not subject your phone, battery, and charger to serious collision or shock. Otherwise, battery leakage, phone malfunction, overheat, fire, or explosion may occur.
- Do not put your phone in the back pocket of your trousers or skirt to avoid phone damage while seated.

Children Safety

- Put your phone, battery, and charger in places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.
- Do not allow children to put the battery in mouth, for electrolyte in the battery is poisonous.
- Do not allow children to touch the small fittings. Otherwise, suffocation or gullet jam can be caused if children swallow the small fittings.

Operating Environment

- The phone, battery, and charger are not water-resistant. Keep them dry. Protect the phone, battery and charge from water or vapor. Do not touch the phone with a wet hand. Otherwise, short-circuit and malfunction of the product or electric shock may occur.

19 Warnings and Precautions

- Do not use the phone in dusty, damp and dirty places or places with magnetic field. Otherwise, malfunction of the circuit may occur.
- Do not turn on or off the phone when it is near your ears to avoid negative impact on your health.
- When carrying or using the phone, keep the antenna at least one inch (2.5 centimeters) away from your body, to avoid negative impact on your health caused by radio frequency leakage.
- If you feel uncomfortable (such as falling sick or qualm) after playing games on your phone for a long time, please go to see a doctor immediately.
- On a thunder stormy day, do not use your phone outdoors or when it is being charged.
- Do not touch the antenna when a call is going on. Touching the antenna may affect call quality and cause the phone to operate with more power. As a result, the talk time and standby time are shortened.
- The phone may interfere with nearby TV sets, radios and PCs.
- In accordance with international standards for radio frequency and radiation, use phone accessories approved by the manufacturer only.

Cleaning and Maintenance

- Before you clean or maintain the phone, turn off the phone and disconnect it from the charger. Otherwise, electric shock or short-circuit of the battery or charger may occur.
- Do not use any chemical detergent, powder, or other chemical agent (such as alcohol and benzene) to clean the phone and the charge. Otherwise, part damage or a fire can be caused. You can clean the phone and the charger with a piece of soft antistatic cloth that is a little wet.
- Do not scratch the shell of the phone. Otherwise, the shed coating may cause skin allergy. Once it happens, stop using the phone at once and go to see a doctor.
- Keep the plug dry when you clean it, to prevent fire.
- If the phone or any of its fittings does not work, turn to the local authorize service center for help.

Environmental Protection

Please observe the local regulations regarding the disposal of your packaging materials, exhausted battery and old phone and please promote their recycling. Do not dispose of exhausted battery or old phone in municipal waste or fire. Otherwise, explosion may occur.

Emergency Call

You can use your phone for emergency calls. However, connections in all conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

Battery

- Use the battery approved by the manufacturer only. Otherwise, explosion may occur.
- Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.
- Do not connect two poles of the battery with conductors such as cables, jewelries or any other metal material. Otherwise, the battery is short-circuited and it may burn your body.
- Do not disassemble the battery or solder the battery poles. Otherwise fluid leakage, overheat, fire, or explosion may occur.
- If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion. Then turn to an authorized maintenance engineer for help.
- If the battery fluid contacts your skin or cloth, wash with clean water immediately to avoid irritation to the skin.
- If the battery fluid gets into eyes, do not rub your eyes. Otherwise, your eyes can be hurt. Wash with clean water and go to see a doctor immediately.
- If there is battery deformation, color change or abnormal heating while you charge or store the battery, take it out immediately and stop using it. Otherwise, battery leakage, overheat, explosion, or fire may occur.

19 Warnings and Precautions

- When installing the battery, do not push the battery by force lest battery fluid leak out or the battery crack.
- Do not take out the battery when the phone is turned on.
- If you do not use the battery for a long time, store it in normal temperature after charging.

Charger

- Use the charger approved by the phone manufacturer only. Any violation of this rule may result in fire or malfunction of the charger.
- Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.
- If the power cord is damaged (for example, the lead is exposed or broken), or the plug becomes loose, stop using the cable at once. Otherwise, electric shock, short-circuit of the charger, or fire may occur.
- Keep the charger dry. Once water or other liquid leaks into the charger, electrical leakage or other faults may occur.
- Do not use the charger in a dusty and damp environment. Keep the power cord away from any heating appliance.
- Ensure the charger is properly plugged into the power socket properly when charging the battery. Improper insertion may result in electric shock, fire, or explosion. To unplug the charger, pull the plug off rather than tear the power cord.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage can cause fire or malfunction of the charger.
- Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord. Otherwise electric shock or fire may occur.
- When you are charging the battery with the charger, do not touch the plug, power cord or the charger with a wet hand. Otherwise, electric shock can be caused.
- Once the liquid such as water leaks into the charger, remove the plug of the charger from the socket immediately. Otherwise, overheating, fire and other malfunction may occur.

Using the USB Cable

To use the USB cable, please strictly obey the following rules. Otherwise, your phone or PC may be damaged:

- To connect your phone and PC with the USB cable, connect to the phone at first, and then connect to the PC.
- In the process of communication between your phone and PC, it is strictly forbidden to plug or pull out the USB cable.
- To disconnect your phone and PC from the USB cable, disconnect from the PC at first, and then disconnect from the phone.

Rules for Exposure to Radio Frequency Energy

THIS DEVICE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO FREQUENCY ELECTROMAGNETIC FIELD.

Your mobile phone is a low-power radio transmitter and receiver. When it is turned on, it emits low levels of radio frequency energy (also known as radio waves or radio frequency fields).

Governments around the world have adopted comprehensive international safety guidelines, developed by scientific organizations, e.g. ICNIRP (International Commission on Non-Ionizing Radiation Protection) and IEEE (Institute of Electrical and Electronics Engineers Inc.), through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure for the public. The levels include a safety margin designed to assure the safety of all persons, regardless of age and health, and to account for any variations in measurements.

Specific Absorption Rate (SAR) is the unit of measurement for radio frequency energy absorbed by the body when using a mobile phone. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the mobile phone while operating can be well below the value. This is because the mobile phone is

19 Warnings and Precautions

designed to use the minimum power required to reach the network.

All models of Huawei's mobile phone are designed to meet radio frequency exposure guidelines. Before a phone model is available for sale to the public, it must be tested according to the IEEE Std C95.1 – 1999, RSS-102, Canada's Safety Code 6, and EN 50361 and does not exceed the limit of FCC rule §2.1093, the ANSI/IEEE C95.1:1999, the NCRP Report Number 86 for uncontrolled environment, and the Health Canada's Safety Code 6 and the Industry Canada Radio Standards Specification RSS-102 for General Population/Uncontrolled exposure, and also does not exceed the limit established by the European Council Recommendation: 1999/519/EC for safe exposure. The tests are performed in using positions (that is, at the ear) as required by the EN50361 for each model.

The SAR limit adopted by the IEEE Std C95.1 – 1999, RSS-102, and Canada's Safety Code 6 is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value for this device type when tested at the head is 0.752 W/kg.

The SAR limit adopted by the IEEE Std C95.1 – 1999, RSS-102, and Canada's Safety Code 6 is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value for this device type when tested at the body is 0.490 W/kg.

The SAR limit adopted by the 1999/519/EC is 2.0 watts/kilogram (W/kg) averaged over ten gram of tissue. The highest SAR value for this device type when tested at the ear is 0.890 W/kg.

20

Acronyms and Abbreviations

DCF	DRM Content Format
DRM	Digital Rights Management
FDN	Fixed Dial Number
GPRS	General Packet Radio Service
GSM	Global System for Mobile communication
OTA	Over-The-Air
PIN	Personal Identification Number
PUK	PIN Unblocking Key
SD	Secure Digital Card
SAR	Specific Absorption Rate
STK	SIM Tool Kit
URL	Universal Resource Locator
USB	Universal Serial Bus
WAP	Wireless Application Protocol
WCDMA	Wideband code division multiple access



Ver: V1.10 BOM: 31016101