

Wonderful Communication, Mobile Life.

Welcome to use U626 Handset from Huawei Technologies Co., Ltd.

HUAWEI U626 Handset

User manual

Copyright © 2005 Huawei Technologies Co., Ltd.

All Rights Reserved

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks



and HUAWEI are trademarks of Huawei Technologies Co., Ltd. All other trademarks mentioned in this manual are the property of their respective holders.

Notice

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute the warranty of any kind, expressed or implied.

Huawei Technologies Co., Ltd.

Address: Administration Building, Huawei Technologies Co., Ltd.,
Bantian, Longgang District, Shenzhen, P. R. China

Postal Code: 518129

Website: <http://www.huawei.com>

Safety Precautions

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, see the section of “Warnings and Precautions”.

	Do not switch your wireless device on when the use of wireless devices is prohibited or when the wireless device may cause interference or danger.
	Do not use your wireless device while driving.
	Follow relevant rules or regulations in hospitals and health care facilities. Switch your wireless device off near medical devices.
	Switch your wireless device off in aircraft. The radio signal from it may cause interference to control signals of the aircraft.
	Switch your wireless device off near high-precision electronic devices. It may affect the performance of these devices.
	Do not attempt to disassemble your wireless device or its accessories. Only qualified personnel may service or repair the wireless device.
	Do not place your wireless device and its accessories in containers with strong electromagnetic field.
	Do not place magnetic storage media near your wireless device. Radiation from the wireless device may erase the information stored on them.
	Do not put your wireless device in a high-temperature place or use it in a place with flammable gas such as a gas station.
	Keep your wireless device and its accessories away from children. Do not allow children to use your wireless device without guidance.
	Observe any laws or regulations on the use of wireless device. Respect others' privacy and legal rights when using your wireless device.



Operate strictly abiding by the relevant descriptions on page 168 of this manual while using the USB cable. Otherwise, your phone or PC may be damaged.

Table of Contents

1 Getting to Know Your Phone.....	1
Packing List.....	1
Your Phone	2
2 Getting Started.....	11
Loading the Battery	11
Unload the Battery	11
Charging the Battery	12
Loading the USIM Card.....	14
Loading and Removing a Memory Card (SD/MMC).....	16
Switching On/Off	17
3 Call Services.....	19
Making and Answering Calls	19
Operations during a Call	24
4 Text Entry	27
“Pinyin” Text Input	27
Stroke Simplified Chinese.....	29
Bopomofo Chinese.....	30

Table of Contents

Stroke Traditional Chinese	32
“Abc” Text Input	32
“T9 English” Text Input	33
“123” Numeric Input	34
Symbol Input	35
5 Using the Menu Functions	37
6 Contacts	39
Searching for a Contact Entry	39
Adding a New Contact Entry	40
Deleting a Contact Entry	41
Copying a Contact Entry	42
Unselecting All Contact Entries	42
Selecting All Contact Entries	43
Sending a Contact Entry	43
Viewing Memory Status	44
Speed Dialing Numbers	44
Groups	45
7 Call Logs	47
Missed Calls	47
Received Calls	48
Dialed Calls	49

Table of Contents

8 Messaging.....	51
Creating Text Messages.....	51
Creating Multimedia Messages	52
Creating Emails.....	54
Text Message (SMS)	55
Multimedia Message (MMS)	63
Email	72
Alert Inbox	79
Voice Mail Number	80
Text template.....	81
9 Multimedia	83
Camera	83
Video Camera.....	86
Voice Recorder	88
Viewing Images.....	90
Playing Video	91
Playing Music	92
Playing Voice Records.....	93
10 Tools	95
Calendar	95
To Do	99

Table of Contents

Memo Pad	101
Alarm Clock.....	101
Calculator.....	103
World Time	103
Stopwatch.....	104
Timer.....	104
11 Gallery.....	105
Images.....	105
Music	106
Videos	107
eBook.....	108
Personal Folder	108
Other	108
Memory Card	108
12 Browser	109
Homepage	109
Bookmarks	111
Go to URL.....	112
Saved pages.....	112
Alert Inbox	113
Select Profile	113

Table of Contents

13 Stream Media	115
Playing Stream Media Files	115
Operations during Playing Stream Media Files	115
Operations on URL Files.....	116
14 V-Call	119
Introduction to the Screen Functions.....	119
Function Options.....	120
15 Connections	123
Bluetooth.....	123
USB.....	133
Notes to the Functions of the Connections	138
Data Account.....	139
16 Applications (APPS).....	141
Applications & Games	141
Download More	142
Memory Status	144
17 STK Services.....	145
18 Settings.....	147
Call Setup.....	147
Video Call Setup	155
Sound and Vibration.....	156

Table of Contents

Display	158
Colour Themes	158
Wallpaper	158
ON and OFF Setup.....	159
Profiles	159
Phone Setup.....	160
19 Warnings and Precautions.....	165
Electronic Device	165
Hospital	165
Traffic Safety.....	165
Operating Environment.....	166
Emergency Call.....	167
Battery.....	167
Charger.....	167
Using the USB Cable	168
Rules for Exposure to Radio Frequency Energy	168
Environmental Protection.....	169
20 Abbreviations and Acronyms.....	171

1

Getting to Know Your Phone

Your U626 can operate in WCDMA 2100 and GSM/GPRS 900/1800. It can switch from a network to another automatically. So you can enjoy the mobile telecommunication services at any time.

Note:

The services supported by your phone must be supported by the network where your phone is in. For details, please consult your local network operator.

Packing List

Your phone package box contains the following articles:

- One U626 mobile phone
- One cable charger
- One Li-polymer battery
- One USB data cable
- One stereo headset
- One hand strap
- One user manual
- One CD-ROM disk which contains a user manual in PDF format and the software, HUAWEI U626 MOBILE PHONE PC Assistant

1 Getting to Know Your Phone

Your Phone


Front View




1 Getting to Know Your Phone



Side View and Back View

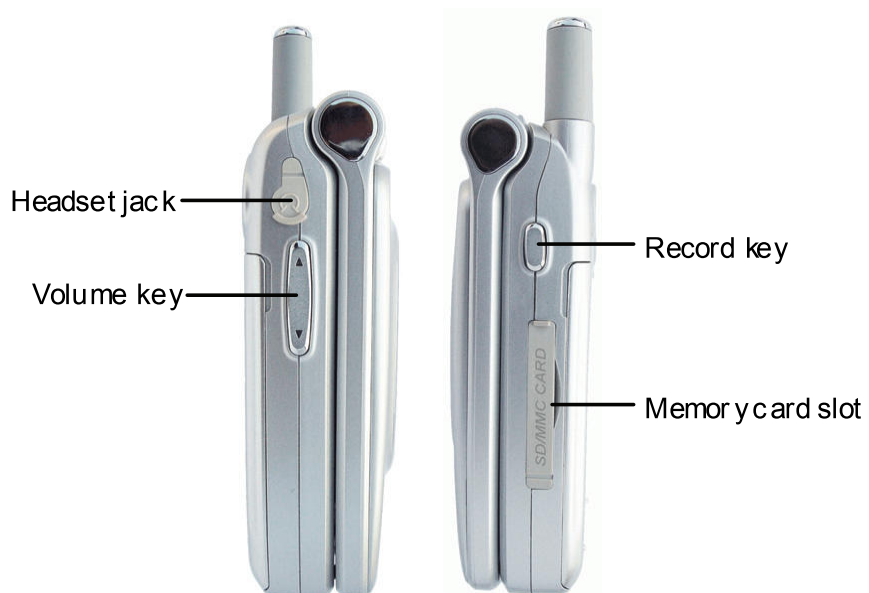

1 Getting to Know Your Phone

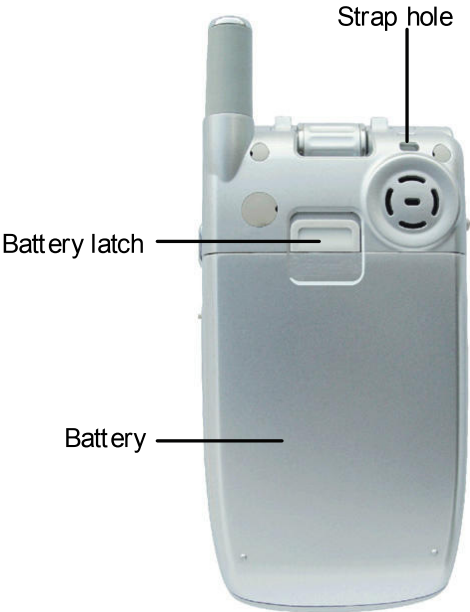

Keys


Key	Description
	• Making or answering a call. • In standby mode, press this key to access the Calls screen.
	• Press this key to end an ongoing call or reject an incoming call. • When it is not on Home screen, press this key to return to the Home screen. • Press this key to turn power on; or press and hold it to turn power off in standby mode.
	• It is a clear key when in editing mode. Press it to delete a character before the cursor. However, when you press and hold it down for a moment, you will clear all the characters you have entered. • Go back to the previous level menu.

Key	Description
	- Press it to activate the function indicated at the left of the prompt bar on the screen. - In standby mode, press it to access the Gallery.
	- Press it to activate the function indicated on the right of the prompt bar on the home screen. - In standby mode, press it to access the APPS screen.
	- In standby mode, press it to access the camera screen. - In viewfinder mode, press it to rotate the image.
	In standby mode, press it to open the Web homepage.
	- Press it to start the prompt functions on the middle of the prompt bar on the screen. - In standby mode, press it to access the main menu.
	- On a menu or on a mode selection screen, press it to scroll upward. - In standby mode, press it to access the Tools screen.
	- On a menu or on a mode selection screen, press it to scroll downward. - In standby mode, press it to access the Profiles screen.
	- On a menu or on a mode selection screen, press it to scroll leftward. - In standby mode, press it to access the Contacts screen.
	- On a menu or on a mode selection screen, press it to scroll rightward. - In standby mode, press it to access the Messages menu.

1 Getting to Know Your Phone

Key	Description
Character/ Number key	- Used to enter numbers or characters. - When menu items are numbered, press one of them to access a corresponding menu item. - On the main menu screen, press a Character/Number key to access a menu whose location on the screen corresponds to that of the key. For instance, you can press  to access the Browser menu, or  to access the Tools menu.
Record key	- In standby mode with the flip opened, press and hold it for a moment to activate the voice recorder. - During a call, press it to activate the voice recorder. - In standby mode with the phone folded, press and hold it to start recording, and press it again to end the recording. - In standby mode with the phone folded, press it to activate the external screen and display relevant information; and press it again within five seconds, the information will be displayed in a scroll bar on the external screen. - During charging with power is off and the phone folded, press it to display the percentage of the battery power on the external screen.
Volume key	- In standby mode or during a call, press it to adjust the volume of the earpiece. - In standby mode with the phone folded, press it to activate the external screen and display relevant information; and press it again within five seconds, the information will be displayed in a scroll bar on the external screen. - During charging with power is off and the phone folded, press it to display the percentage of the battery power on the external screen.

Home Screen

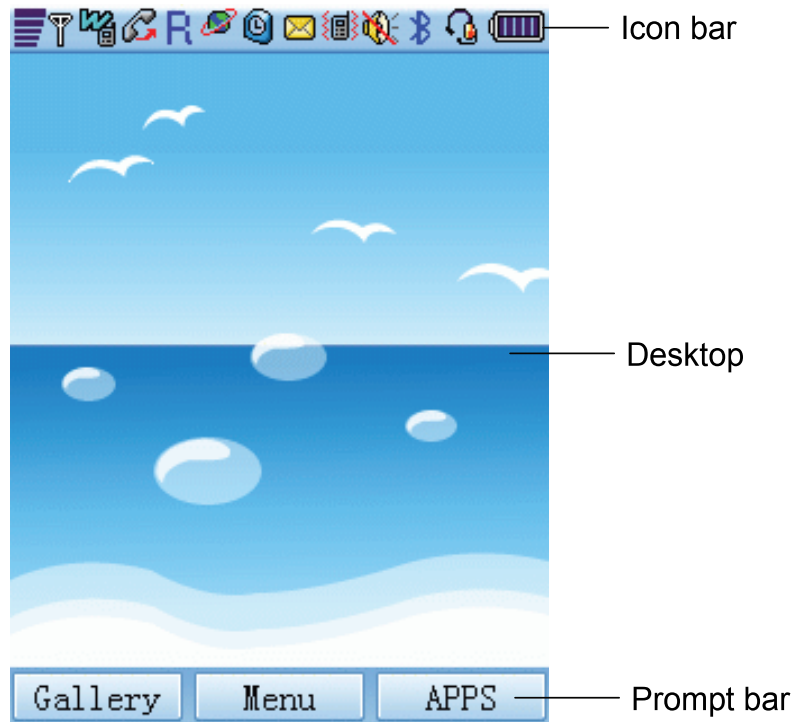

Icon bar

This bar displays the phone status. The following table illustrates all the icons that may appear on this bar.

Icon	Description
	Indicating signal strength. The more horizontal bars indicate the stronger signal.
	The current network is a GPRS. The horizontal bars indicate the signal strength. The more horizontal bars indicate the stronger signal.
	The current network is a GSM.

1 Getting to Know Your Phone

Icon	Description
	It is in WCDMA currently.
	You are using the roaming service.
	Internet connection status
	Security connection
	Forwarding all incoming calls
	In a call
	Alarm clock is enabled.
	You have one or several new messages.
	You have one or several PUSH messages.
	You have one or several new multimedia messages.
	The vibration mode is enabled.
	In mute mode
	Bluetooth is enabled
	Bluetooth findable
	Bluetooth connected

Icon	Description
	The headset is plugged in.
	Your PC is connected to the Internet via your phone.
	Indicating battery power level. The more bars indicate more power.

Desktop

This field displays the options of the operations and functions.

Prompt Bar

This field displays the currently available operations. The content displayed here differs according to the content of the screen.

- Press  to execute the operation indicated on the left of the prompt bar.
- Press  to execute the operation indicated on the right of the prompt bar.
- Press  to execute the operation indicated in the middle of the prompt bar.

2

Getting Started

Loading the Battery

To load the battery:

- 1 Fit the battery into the battery slot on back of the phone.
- 2 Press the battery down until it clicks into place.




Unload the Battery

Always unload the battery after your phone is switched off. Otherwise, your phone may be damaged.

To unload the battery:

- 1 Push the battery latch upward.
- 2 Take out the battery.

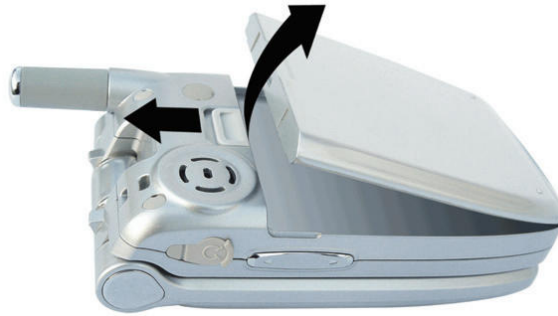

Charging the Battery

Before charging the battery, please read carefully the following precautions.

Caution:

- When you charge the battery for the first time, please charge it for at least 12 hours.
- The battery discharges if you do not use it for a long time, please charge it before you use it again.
- The charging time depends on the environmental temperature and the age of the battery.
- The battery can be recharged repeatedly, but it will eventually wear out. After normal charging, if the time that the battery powers your phone becomes much shorter than usual, please replace the battery with one of the same type.
- Do not strike or shock violently the battery or toss it; otherwise, liquid leakage, body damage, overheating, explosion or fire may occur to the battery.
- Charge the battery by using the charger supplied with your phone.

You can charge the battery at any time you want. And you can use your phone during charging.

When the battery power level is too low to support normal operation of the phone, the

phone will switch off automatically.

- When you charge the battery with your phone powers on, the battery level icon  will appear on the upper right corner of your phone screen. In battery charging, the vertical bars of the icon will blink continuously. When the vertical bars fill up the whole icon and the icon stops blinking, it indicates that the charging is completed.
- During charging with your phone powers off, a cylinder icon indicating the power level of the battery will appear on the screen and will blink continuously. When the cylinder is filled and stops blinking, it indicates that the charging is completed.

Charging with a Cable Charger

Before charging the battery with a cable charger, please make sure that the battery has been properly loaded into your phone.

To charge the battery:

- 1 Plug in the connector of the charger into an electrical outlet.
- 2 As shown in the following figure: Insert the plug of the charger into the connector of the phone. Before the insertion, please check whether the arrow on the charger output jack points to the front side of the phone.



- 3 After charging, please pull out the charger plug from the AC socket at first, and then press and hold the gray buttons on the two sides of the charger output jack and pull out the charger plug from the phone.

Loading the USIM Card

Your USIM card contains such information as phone numbers and contacts. Load your USIM card before using your phone. To use the USIM card properly, please read carefully the following instructions:

Note:

- Put the USIM card in a place that is unreachable for a child.
- The USIM card and the metal contactors are easily damaged by scratch or bend. So be careful when you carry, load or remove it.
- Always disconnect the charger from the phone before loading or removing the USIM card.

Loading the USIM Card

To load the USIM card:

- 1 Switch off the phone and remove the battery.
- 2 Put the card at the card slot entrance. Be aware of the direction of the card.



- 3 Slide the USIM card into the card slot as shown in the above figure.



2 Getting Started

Removing the USIM Card

To remove it, follow the procedures reversed to those when the USIM card is loaded.

Loading and Removing a Memory Card (SD/MMC)

The U626 phone supports a memory card with a maximum of 512MB.

- 1 Remove the rubber cap from the memory card slot; then insert the memory card into the slot, as shown in the following figure.



- 2 After inserting the memory card completely, put on the rubber cap again.



- 3 To remove a memory card, open the rubber cap and press the memory card gently. Now the memory card will pop up automatically. Then take it out as shown in the following figure.



Switching On/Off

Switching On

Ensure that the USIM card is in your phone and that the battery has been charged.

Press and hold  until power is on.

Switching Off

Press and hold  until power is off.

Access Codes

If you have set the phone password, PIN1 to be ON, then you have to enter the corresponding access codes when you switch on your phone. For setting and changing the

2 Getting Started

access codes, please refer to “Settings/Phone setup/Security” on page 162.

Phone Password

The phone password is used to protect your phone from unauthorized use. No phone password is preset for a U636 phone. You may set it.

PIN1

The PIN (Personal Identification Number) 1 code is used to protect your USIM card from unauthorized use. Usually you are supposed to get the PIN1 code when you get the card from your USIM card provider. If you have not got or you have lost it, please consult your service provider.

PUK

To unlock the locked USIM card, you have to enter the PUK (PIN Unblocking Key) code. Usually you are supposed to get the PUK code when you get the card from your USIM card provider. If you have not got or you have lost it, please consult your service provider.

3

Call Services

Making and Answering Calls

Making Video Calls

With the video call function, you can use your U626 to make video calls. To make such a call, the phone you are calling must be capable of video calls.

Step	Operation
1	• Enter a phone number by the keypad, and then choose V-Call to dial out. • Press , choose a number from the call lists, and then choose V-Call to dial out. Note: • To correct a wrong input number, just press . Pressing once you can delete the digit in front of the cursor; pressing and holding , you can delete the whole number. • Maybe you have to wait for a moment to get through a video call. The time you need to wait also depends on the response time of the other party.
2	You can also adjust the shooting direction of your camera.

3 Call Services

Step	Operation
3	Press  to end the call.

Making Voice Calls

Step	Operation
1	• Enter a phone number by the keypad. • Press , and choose a number from the call log lists.
2	Press  to dial out.
3	Press  to end the call.

Making Voice/Video Calls Using the Contacts

You can make voice/video calls by choosing a number from the contacts list.

Step	Operation
1	Access the Contacts .
2	Press the scroll key to choose Phone or USIM .
3	Choose a contact and press  to access the Details screen.
4	Choose a number and press  to make a voice call; or choose V-Call to make a video call.

Step	Operation
5	Press  to end the call.

Making Voice Calls Using Speed Dialing

You can save the phone numbers you often dial to positions titled with numbers from “2” through “9” respectively; then, in standby mode, press one of the number keys from “2” through “9” you can dial the number that you have saved under it instantly. For more information, please refer to “Contacts/Speed Dialing Numbers” on page 44.

To make an instant call by speed dialing, follow these steps:

Step	Operation
1	Press and hold a number key which you have saved during speed dialing setting.
2	The phone number you have saved under this number will be dialed out.

Answering/Rejecting Incoming Calls

The phone will ring or vibrate to prompt an incoming call. If the call number has been saved in the Contacts, the name of the calling party will be displayed on the screen.

You can set an answering mode for your phone: “Open flip”, “Any key” or “Send key”. The method for answering a call is different under different answering modes. To set the answering modes, please refer to “Settings/Call Setup/Answer Mode” on page 147.

You can also launch and set the auto answer mode for your phone. For more information, please refer to “Settings/Call Setup/Auto Answer” on page 148.

3 Call Services

Note:

The control key on the headset is available for answering or ending a call only. It can not be used to reject a coming call.

With Auto Answer Mode Disabled

If you have disabled the auto answer mode of your phone, you will answer or end an incoming call as follows:

Note	Operation
Answering a call	If you have selected one of the following answering modes: • Open flip: You can answer a call by unfolding the phone. • Any key: You can answer a call by pressing any key except for  and  with your phone unfolded. • Send key: You can answer a call by pressing . • If the headset is used: You can answer a call by pressing the answer key on the headset.
Ending a call	• If the headset is not in use, you can fold the phone or press  to end a call. • If the headset is in use, you can press the control key of the headset to end a call.

Note:

When a call comes, if the phone is folded and is not during a call:

- Press and hold the volume key to reject the call.
- Press and hold the record key to dumb the ring.

With Auto Answer Mode Enabled

You can set your phone to automatically answer or end a call, the steps are shown as below:

Note	Operation
Answering a call	If you have selected one of the following answering modes: • Immediate answer: The phone will answer a call automatically in 5 seconds. • Text message: The phone will automatically send the preset message to the caller in 20 seconds. • Recorded message: The phone will automatically answer a call in 20 seconds by playing the audio file you recorded and preset.
Ending a call	• If the headset is not in use, you can end a call by folding the phone or by pressing . • If the headset is in use, you can end a call by pressing the control key on the headset.

Operations during a Call

Basic Operations

Dialing a Second Number

You can directly enter a second number, or select **Menu/Contacts** to choose a phone number, and then press  to dial out.

Answering a New Call

When a call is going on, you can also answer a new call if your network operator supports the function. You can use the U626 phone to answer up to 6 incoming calls simultaneously.

When a new call comes, the icon  and the caller's information will appear on the screen. To answer it, select this information and press .

Icons Description

: A call is going.

: This call is held on.

: A new call comes during a call.

Other Operations During a Call

Answer/Reject

During a call, you can press the left function key and select **Answer** or **Reject** from the popup menu to answer or reject a coming call.

Swap

During a call, you can press the left function key and select **Swap** from the popup menu to resume the held call and keep the ongoing call.

Resume and Reject

During a call, you can press the left function key and select **Resume and reject** from the popup menu to reject a coming call and resume the held call.

Handfree/Earpiece Switching

By pressing  you can switch between the loud speaker of the phone and the earpiece (or the headset) for listening.

Mute

During a call, you can press the right function key to make your voice mute or to restart the conversation by pressing it again.

Contacts

During a call, you can press the left function key to pop up a menu, and then select **Contacts** from the menu for operations.

SMS

During a call, you can press the left function key to pop up a menu, and then select **SMS** from the menu for operations.

Hold/Resume a Call

During a call, you can press the left function key to pop up a menu, and then select **Hold /Resume** to pauses or restart the call.

Conference Call

If there are three or more parties involved in the same call, you can press the left function key to pop up a menu, and select **Conference** to add all the saved parties into a conference.

3 Call Services

Private Talk

During a conference call, you can press the left function key to pop up a menu from where you can select **Private** to talk privately to one of the parties who are involved in the call conference.

Ending Current/All Calls

During a call conference, you can press the left function key and select **End call** or **End connect calls** from the popup menu to end the current or all calls.

If you select to end the current talk, press the left function key at the selected talk, and then execute the relevant operations.

Ending Active/Held Calls

During a call, you can press the left function key and select **End active/held calls** from the popup menu to end all the ongoing or held calls.

Start/Stop Record

During a call, you can press the left function key to pop up a menu, and then select **Start record/Stop record** to record or stop recording the other party's voice.

New Call

During a call, you can press the left function key and select **New call**. Then, the DTMF tone of your pressing keys is not sent to the other party.

4

Text Entry

You can use the keypad to enter English letters, symbols and numbers. For example, when you add entries to the Contacts, write messages or schedule events on the calendar, you need to enter text.

Note:

While entering characters or symbols:

- Press and hold the number key corresponding to the number over the character or symbol to be entered on the lower part of the screen, the character or symbol to be entered appears on the editing field.
- Press the up/down scroll key to turn the pages of the displayed characters or symbols for candidates.

“Pinyin” Text Input

Based on the most common-used Pinyin combinations, the Pinyin text input method helps you input Chinese characters quickly and conveniently.

- Press the keys carrying the wanted letters in turn of the wanted Pinyin combination. Press a key for once without regard to the position of the wanted letter on the key. The Pinyin text input method will select the most suitable Pinyin combination automatically according to the rules of Pinyin.

4 Text Entry

- The current selected combination in the list of Pinyin combinations for candidate is highlighted. You can select the wanted Chinese character from the corresponding list of Chinese characters for candidate.
- After inputting a Chinese character, a list of Chinese characters belonging to some common-used Chinese words initialized by the inputted Chinese character will be displayed. This intelligent function can improve the efficiency of inputting Chinese characters.

Let's take inputting the Chinese word “拼音” by the Pinyin text input method for example. Follow these steps:

Step	Operation
1	Press in turn  ,  and  that carries the letter of “P”, “I” and “N” respectively. The Pinyin combinations composed of the letters carried by these three keys will be displayed on the screen.
2	Press the left/right scroll key to select “pin”.
3	You can operate this step in two ways: • Press and hold  corresponding to “拼”. • Press  to highlight a Chinese character in the candidate bar, and press the left/right scroll key to select “拼”. Then, press  to confirm. Now the character of “拼” appears in the editing field.
4	The next Chinese characters of some common-used Chinese words initialized by “拼” are listed on the candidate bar. Now you can select the character of “音” in two ways: • Press and hold  to select “音”. • Press the left/right scroll key to select “音”, and then press  to confirm.

Stroke Simplified Chinese

With this method of inputting Chinese characters, you can input the strokes of a Chinese character, and then select the wanted Chinese character from the candidate characters listed on the screen.

The strokes of Simplified Chinese used in the U626 phone are shown in the following table:

Key	Stroke	Key	Stroke
	—		
	丿		\
	→		? Wildcard

For instance, to input the Chinese character “简” with the “Stroke Simplified Chinese” text input method, you can operate the following steps:

4 Text Entry

Step	Operation
1	Press  ,  and  in turn.
2	The Chinese characters containing the strokes carried by these three keys are listed on the screen: • Press can hold the key  corresponding to the character “简”. • Press , and then press the left/right scroll key to highlight the character “简”. Then, press  to choose it.

Bopomofo Chinese

With this text input method, you can input Chinese characters according to the phonetic notation symbols. The following table shows the comparison of the phonetic notation symbols and the keys:

Key	Phonetic Notation	Key	Phonetic Notation
	ㄅ ㄆ ㄇ		ㄅ ㄆ ㄇ
	ㄉ ㄊ ㄋ		ㄉ ㄊ ㄋ
	ㄌ ㄍ ㄎ		ㄌ ㄍ ㄎ
	ㄏ ㄏ ㄏ		ㄏ ㄏ ㄏ
	ㄩ ㄩ ㄩ		ㄩ ㄩ ㄩ

Key	Phonetic Notation	Key	Phonetic Notation
	ㄅ ㄆ ㄇ		

For instance, to input “注音” with the “Bopomofo Chinese” text input method, you can operate the following steps:

Step	Operation
1	Pressing  and  in turn, combinations of phonetic notation symbols indicated by these two keys are listed on the screen.
2	Select “ㄗ ㄙ”.
3	You can operate this step in two ways: • Press and hold the key  corresponding to the character “注”. • Press  to highlight a candidate Chinese character, and then press the left/right scroll key to choose the character “注”. Then, press  to confirm. Now the character “注” appears in the editing field.
4	The other character of some common-used Chinese words initialized by “注” are listed on the screen for candidate. Then, you can choose the character “音” in two ways: • Press and hold  to choose the character “音”. • Press the left/right scroll key to select the character “音”, and then press  to confirm.

4 Text Entry

Stroke Traditional Chinese

This method is used to input Traditional Chinese. You can input the strokes of a Chinese character, and then select the wanted Chinese character from the candidate characters listed on the screen.

The strokes of Traditional Chinese used in the U626 phone are the same as those of the Simplified Chinese. You can refer to it.

For instance, to input the Chinese character “簡” with the “Stroke Traditional Chinese” text input method, you can operate the following steps:

Step	Operation
1	Press  ,  and  in turn.
2	The Chinese characters containing the strokes carried by these three keys are listed on the screen: • Press and hold the key  corresponding to the character “簡”. • Press , and then press the left/right scroll key to highlight the character “簡”. Then, press  to choose it.

“Abc” Text Input

The “Abc” text input method is a common method for entering alphabetic characters. You can press repeatedly the key that carries the letter to be entered until it appears on the screen.

For example, to enter the word “hello” with the “Abc” text input method, you can do as

follows:

Step	Operation
1	Press  that carries the letter “h” repeatedly, you will see g, h, i, and 4 successively on the screen. Now the current letter is in contrast background. Stop until you see an “h” on the screen.
2	Wait until the background disappears and the cursor goes to the right of the letter you entered just now, you can enter another letter. However, you can also use the scroll key to move the cursor to the right of the letter and enter another letter.
3	Enter “ello” in the same way.

Note:

- Press , you will see “abc”, “Abc” or “ABC” on the lower left corner of the screen; representing you are going to enter small letters, words with the first letter being capitalized or words with all letters being capitalized.
- Press  repeatedly, you can enter commonly used punctuation marks and symbols.

“T9 English” Text Input

With the “T9 English” text entry method, you can enter easily and quickly English words with predictive wording scheme.

- Press once the key where the expected letter belongs to, regardless in which sequence the letter is supposed to appear normally at the key; the predictive wording scheme will present a most commonly used word, which is in contrast background.

4 Text Entry

- After entering all the letters, if the current word is not the expected one, you can press the up/down scroll key to choose another one. Stop pressing the up/down scroll key until you find the expected word and then press the right scroll key to move the cursor to the right of the word.

For example, to enter the word “hello” with the “T9 English” text entry method, you can do as follows:

Step	Operation
1	Press successively  ,  ,  ,  and  which “h”, “e”, “l”, “l” and “o” belong to, the screen will show the English word that consists of these letters that the keys represent.
2	The word “hello” appears on the screen.

Note:

- Pressing , “T9 abc”, “T9 Abc” or “T9 ABC” appears on the lower left of the screen in succession, indicating the word to be entered will be all in small letters, first letter capitalized or all letters capitalized.
- Pressing , and then pressing the up/down scroll key, you can choose to enter commonly used punctuation marks and symbols.

“123” Numeric Input

With the “123” numeric input method, you can enter corresponding numeric characters by pressing the Character/Number key.

For example, to enter “1” with the “123” numeric input method, you can press . Then

“1” appears on the screen.

Note:

Under any other entry method, you can press and hold  to switch between the “123” numeric input method and the current input method.

Symbol Input

The U626 provides an independent symbol entry method.

For example, you have chosen the symbol input method and you want to enter “?”. You can enter this punctuation mark in two ways:

- Press and hold  that is corresponding to “?”.
- Or press the left/right scroll key to select “?”, and then press .

Note:

In any other entry method, you can press and hold  to switch between the symbol entry method and the current entry method.

5 Using the Menu Functions

The function menu of the U626 phone includes the following items: Contacts, Calls, Messages, Media, Tools, Gallery, Browser, Profiles, Connect, APPS, STK and Settings.

The operations of the menu are shown as follows:

Step	Operation
1	In standby mode, press  to enter the main menu.
2	Press a scroll key to choose a menu item, and then press  to enter a submenu.
3	Press a scroll key to choose an item from the submenu, and then press  to enter the mode you want.
4	Operate according to the prompt on the screen.
5	Press  to return to the previous menu.
6	Press  to return to the standby mode.

6

Contacts

The Contacts function enables you to save and manage such information as phone numbers and addresses of your contacts. You can save such information on your phone or your USIM card. Meanwhile, you can also set some often-used numbers for speed dialing for your convenience.

Searching for a Contact Entry

With this function, you can find the information of the desired contact from the contacts list easily and quickly. You can perform this function on either the Phone screen or the USIM screen.

Step	Operation
1	Enter the Contacts screen, and then press the left/right scroll key to select Phone or USIM .
2	Press the left function key to enter Options , and select Search from the submenu.
3	Press the left function key to choose Search , and then enter letters or Chinese characters contained in the name to be searched for, and then press  . The phone will display the related information of the contacts whose names contain the letters or Chinese characters you entered.

6 Contacts

Note:

No matter you search in the **Phone** screen or the **USIM** screen, the search will cover all the contacts from the both memories.

You can also search contacts in speed on the Phone or USIM screen. Perform the following steps:

Step	Operation
1	Enter the Contacts screen, and then press the left/right scroll key to select Phone or USIM .
2	Pressing one of the character/number keys from  through , the first one of the entries whose names are initialized by the letter corresponding to the key you pressed will be highlighted. While selecting letters, if you press a key once, the first letter signed on the key will be selected; if you press a key quickly twice, the second letter signed on the key will be selected. The third and the forth letters signed on the keys can be entered analogically. For instance, to search for the information of a contact whose name is initialized with C, you can press  quickly for three times, and then the cursor skips to the first entry of the contacts whose names are initialized with C.

Adding a New Contact Entry

To add a new contact entry to your phone, you can add the contact's Name, Mobile phone number, Office telephone/address, Home telephone/address, Email address and Fax number. You can also select icons, groups and ring tones for the incoming calls.

To add a new contact entry to the USIM card, you can only enter the Name, Phone number and Email address of the contact (Whether Email addresses can be added depends on your

USIM card.

Step	Operation
1	Enter Contacts screen, and then press the left/right scroll key to select Phone or USIM .
2	Press the left function key to activate the Options menu, and then select Add .
3	Enter relevant information, and select Save to end the operation.

Deleting a Contact Entry

You can delete entries from the phone or USIM card. You can select to delete them one by one or to delete all of them in one time.

Step	Operation
1	Enter the Contacts screen, and press the left/right scroll key to select Phone or USIM .
2	- Press the right function key to select entries to be deleted one by one (the selected entry will be checked on the checkbox to the right of the entry). - To delete one entry, just highlight the entry to be deleted; then go to the Delete step directly without checking the entry.
3	Press the left function key to pop up the Options submenu and select Delete .
4	Select Yes to confirm the deletion, or press No to cancel it.

Copying a Contact Entry

You can copy one or several entries from your phone memory to your USIM card or from your USIM card to your phone.

Step	Operation
1	Enter the Contacts screen, and then press the left/right scroll key to select Phone or USIM .
2	• Press the right function key to select the entries to be copied one by one. The checkboxes of entries are checked. • To copy one entry, you can just highlight the entry, and then select Copy without checking the entry with the right function key.
3	Press the left function key to pop up the Options , and then select Copy to USIM or Copy to phone .
4	Select Yes to confirm the copy, or select No to cancel it.

Note:

To copy entries from the phone to the USIM card, you can only copy the names, the first non-empty number and Email addresses.

Unselecting All Contact Entries

You can perform this function on the phone screen or the USIM card screen separately:

Step	Operation
1	Enter the Contacts screen, and then press the left/right scroll key to select Phone or USIM .
2	Press the left function key to pop up the Options , and then select Unselect all .
3	Press  to confirm the operation.

Selecting All Contact Entries

You can select all the entries on the phone or those on the USIM card separately:

Step	Operation
1	Enter the Contacts screen, and then press the left/right scroll key to select Phone or USIM .
2	Press the left function key to pop up the Options , and then select Select all .
3	Press  to confirm the operation.

Sending a Contact Entry

This option is used to send the selected contact entries to other Bluetooth devices via Bluetooth.

Before sending via Bluetooth, you need to switch on the Bluetooth device.

Viewing Memory Status

You can view the memory status of both the phone and the USIM card, including the number of the saved entries and total capacity of the phone and the USIM card. You can access it from either the Phone screen or the USIM screen.

Step	Operation
1	Enter the Contacts screen, and then press the left/right scroll key to select Phone or USIM .
2	Press the left function key to pop up the Options , and then select Memory status .
3	Press  to view it.

Speed Dialing Numbers

You can save the often-used numbers to the positions for speed dialing keys. You can select one from the numbers from “2” through “9”.

Step	Operation
1	Enter the Contacts screen, and then press the left/right scroll key to select Q-Dial .
2	Select a position for saving the speed dialing number, and then select Edit .
3	Select Search to find the desired phone number.

Groups

You can manage the group information by renaming a group, adding group members, or deleting a group.

Note:

You can not edit or delete the group names preset in the U626 phone.

Step	Operation
1	Enter the Contacts screen, and then press the left/right scroll key to select Groups .
2	Select the expected group, and follow the prompt for corresponding operation.

Renaming a Group

You can select the group to be modified from the **Groups** list, and then choose **Rename**.

Adding/Deleting a Group Member

You can add a member to a group preset in your U626 or a group that has been renamed, or delete a member from it. Follow these steps:

Step	Operation
1	Select a group and press  to view the details.
2	Select Add to access the screen for adding members to a group.

6 Contacts

Step	Operation
3	Select Search to select the contact to be added and then press  .
Note: Only the contact entries saved in the phone can be added.	
4	After adding a member, return to the “Group member list”. Now, the member you added appears on the group member list.
5	Select a member from the group member list, and then press the left function key to delete it.

Deleting a Group

Selecting the group to be deleted from the Groups list, and then selecting **Delete**, you can delete the group and all the members of this group.

7

Call Logs

Missed Calls

Access the **Calls** screen from the main menu and select **Missed**.

Making Voice Calls/V-Calls

You can select a call number from the missed call logs, and then press  to make a voice call or select **V-Call** to make a video call.

Relevant Options

On the missed calls screen, select **Options**, then, you can perform the following operations:

Save number

This option is used to save the numbers of the selected missed calls to the phone, the USIM card, or an existing entry of the Contacts.

- Save to phone: to save the number to the phone.
- Save to USIM: to save the number to the USIM card.
- Add to the existing one: to add the number to an existing entry of the Contacts list.

Send SMS

This option is used to send a message to the number of a selected missed call.

7 Call Logs

Delete

This option is used to delete the numbers of missed calls you select.

Unselect all

This option is used to cancel all the selections in the missed calls list.

Select all

This option is used to select the numbers of all the missed calls.

Calls status

This option is used to display the information of voice calls, video calls or data services.

You can perform this function on the screens of missed calls, the received calls or the dialed calls.

- Voice call/V-Call: Displaying the last call duration, the incoming call duration, the outgoing call duration, the total time of all calls, and the last reset time.
- Data: Displaying the total uplink flow, the total downlink flow, and the total connecting duration; the last uplink flow, the last downlink flow and the last connecting duration; and the last reset time.
- From any of the Voice call, V-Call or Data service screens, you can reset all the statistic information on that screen by selecting **Reset**.

Received Calls

Enter the **Calls** screen from the main menu and select **Received**.

Making Voice/Video Calls

You can select a call number from the received call log, and then press  to make a voice call or select **V-Call** to make a video call.

Relevant Options

On the received calls screen, select **Options**, then, you can execute the following operations:

Save number

This option is used to save the number of a selected received call to the phone or the USIM card.

- Save to phone: to save the number to the phone.
- Save to USIM: to save the number to the USIM card.
- Add to the existing one: to save the number to an existing entry of the contacts list.

Send SMS

This option is used to send a message to the number of a received call you select.

Delete

This option is used to delete the numbers of selected received calls.

Unselect all

This option is used to cancel all the selections on received calls screen.

Select all

This option is used to select all the entries on the received calls screen.

Dialed Calls

Enter the **Calls** screen from the main menu and select **Dialed**.

7 Call Logs

Making Voice/Video Calls

You can select a call number from the dialed call log, and then press  to make a voice call or select **V-Call** to make a video call.

Relevant Options

On the dialed calls screen, select **Options**, then, you can execute the following operations:

Save Number

This option is used to save the number of a selected dialed call to the phone or the USIM card.

- Save to phone: to save the number to the phone.
- Save to USIM: to save the number to the USIM card.
- Add to the existing one: to save the number to an existing entry of the contacts.

Send SMS

This option is used to send a message to the number of a selected dialed call.

Delete

This option is used to delete the numbers of selected dialed calls.

Unselect All

This option is used to cancel all the selections on the dialed calls screen.

Select All

This option is used to select all the entries on the dialed calls screen.

8 Messaging

Creating Text Messages

Before using the messaging service, you need to set the message center number. For more information, please refer to “Text Message (SMS)/Settings” on page 62.

A text message to be sent can contain 160 English characters or 70 Chinese characters at most. If the characters you entered are more than this limit, the text will be divided into two or more continuous messages for sending.

Step	Operation
1	Enter the Menu , and select Messages .
2	Select New SMS , and press  to enter the “Edit SMS” screen.
3	From the “Edit SMS” screen, select Options : • You may select one of the text entry methods to enter the message contents. • Selecting Text template, you can speed up the text entry. Press  to confirm.
4	Access the “Edit numbers” screen: • Enter the phone number and select Send. • Select Options/Group or Contacts to choose a number and send the message. • Select Options/Save to save the message.

Creating Multimedia Messages

Before using the multimedia messaging service, you need to perform relevant settings for the service. For more information, please refer to “Multimedia Message/Settings” on page 70.

You can send messages attached with images, text and music under this mode.

Creating a Multimedia Message

Step	Operation
1	Enter the Menu , and select Messages .
2	Select New MMS , and press  to enter the “Edit MMS” screen.
3	Select < To >, < Cc > or < Bcc >, and then select Options/Group to add all the numbers of a group to the related recipients list; or select < To >, < Cc > or < Bcc >, and then select Edit : • Select a position from the recipients and press Edit to enter a phone number. • Select a position from the recipients and press Options, then select Contact and phone numbers.
4	From the recipients list window select phone numbers you need for To, Cc or Bcc. Then, select Options , select Set To , Set Cc or Set Bcc . Meanwhile you may also select Delete or Delete all to delete the selected numbers or all numbers.
5	Press Back to go back to the “Edit MMS” screen, select < Subject > to enter text as subject, and then press  .
6	Select < Content > to edit the pages, and then go back.

Step	Operation
7	• Select Send to send this multimedia message. • Select Options/Save to save this message to Messages/MMS/Drafts. • Select Add to sample from the Options to save this message at Messages/MMS/Sample. • Select Send settings from Options to set relevant sending parameters for sending multimedia messages. For details, please refer to “MMS/Settings” on page 70.

Making Multimedia Pages

Step	Operation
1	Enter the “Message editor” to make a multimedia message.
2	Select  to access the text entry field, and then edit text.
3	Select  to enter the image editing field where you can choose images or video files.
4	Select  to enter the music editing field where you can choose audio files.
5	Enter the field indicated by  and press the left/right scroll key to select one from different pages if there are more pages.
6	Enter the field indicated by  and press the left/right scroll key to adjust the playing time (in seconds) of the current page.

8 Messaging

Step	Operation
7	Select Options and you have the following options: • Remove object: to remove the content from the selected field. • Insert page: to insert a new page. • Delete page: to delete the current page. • Preview: to preview this page.

Note:

If the video file is chosen, you can not edit the audio files any more.

Creating Emails

To send Emails, you need to set up corresponding accounts. For more information, please refer to “Email/Settings” on page 78.

Step	Operation
1	Select Messages from the Menu .
2	Select New Email and press  .
3	Select  and press  .
4	• Select a position from the recipient list and then select Edit to input an Email address. • Select Options and then select Contact, Group or History, and then select an Email address.

Step	Operation
5	From the recipients list interface, select Email addresses and select Options . From the pop-up menu, you can select Set To, Set Cc or Set Bcc; or select Delete , or Clear to delete the selected or all Email addresses.
6	Go back to the “Edit Email” screen, select  and press  to write a subject.
7	Go back to the “Edit Email” screen, select the content field and press  to write the content.
8	Go back to the “Edit Email” screen, select the attachment field and press  , you can Add files of images, music, video clips, eBooks, and so on. From the “Attachment” screen, select Options and you can do the following operations • Open: to open a selected attachment. • Delete: to delete a selected attachment. • Clear: to delete all attachments.
9	Go back to the “Edit Email” screen: • Select Send to send the Email. • Select Save to save the Email to the Drafts of the Messages/Email.

Text Message (SMS)

The U626 provides three mailboxes for SMS (Short Messaging Service), namely, the Inbox, Outbox and Draft.

8 Messaging

Inbox

You can save the received messages in the **Inbox**.

Icons in the Inbox

Icon	Description
	A read message on the phone
	An unread message on the phone
	A read message on the USIM card
	An unread message on the USIM card
	A message report

Viewing Messages in the Inbox

Step	Operation
1	Select Messages/SMS from the Menu .
2	Select Inbox .
3	Press the up/down scroll key to view the messages.
4	Select a message and then select Details to view the details.
5	• Select Reply to reply with a text message. • Select V-Call to make a video call.

Step	Operation
6	Select Options, and then you can do the following operations: • Delete: to delete the message. • Reply: to reply the message. • New: to create a message. • Forward: to forward the message. • Save number: to obtain a phone number from the message (If there are several numbers, you will be prompted to make selections.) and save it to your phone or USIM card or to add it to an existing entry in the Contacts. • Copy to USIM: to copy the message to the USIM card. • New Email: to obtain an Email address from the message and use it (If there are several addresses, you will be prompted to make selections.) to create an Email. • Extract URL: to obtain an URL address from the message and use it (If there are several URL addresses, you will be prompted to make selections.) to access the Internet or stream media. • Settings: To set parameters related to messages. Please refer to the “SMS/Settings” on page 62 for details. • Save address: to obtain an Email address from the message (If there are several addresses, you will be prompted to make selections.) and save it.

Other Operations for the Inbox

Step	Operation
1	Select Messages/SMS from the Menu .
2	Select Inbox .

8 Messaging

Step	Operation
3	Select Options, and then you can do the following operations: • Reply: to reply to the selected message. • Delete: to delete the selected message. • New: to create a new message. • Forward: to forward the selected message. • Save number: to save the sender's number corresponding to the selected message. You can save it to the phone or the USIM card as a new entry, or add it to an existing entry in the Contacts. • Copy to USIM: to backup one or more selected messages to the USIM card. • Unselect all: to cancel all the selections in the Inbox. • Select all: to select all the messages in the Inbox. • Settings: to set parameters relating to messaging. Please refer to "SMS/Settings" on page 62 for details. • Memory status: to view the memory status of the phone or the USIM card, including quantity of saved messages and the total capacity.

Outbox

The Outbox is used to save the messages that have been sent out.

Icons in the Outbox

Icon	Description
	A text message that have been sent out and saved to the phone
	A text message that have been sent out and saved to the USIM card

Viewing Messages in the Outbox

Step	Operation
1	Select Messages/SMS from the Menu .
2	Select Outbox .
3	Press the up/down scroll key to view the messages.
4	Select a message and press Details to view the details.
5	• Select Forward to forward this message. • Select V-Call to make a video call.
6	You can select from the Options to execute the same operations as that in the Inbox of SMS. You can also edit the selected messages.

Other Operations for the Outbox

Step	Operation
1	Select Messages/SMS from the Menu .
2	Select Outbox .

8 Messaging

Step	Operation
3	Select Options, and then you can do the following operations: • Edit: to edit the selected message. • Delete: to delete the selected message. • New: to create a new message. • Forward: to forward the selected message. • Save number: to save the recipient's number corresponding to the selected message. You can save it to the phone or the USIM card as a new entry, or add it to an existing entry in the Contacts. • Copy to USIM: to backup one or more selected messages to the USIM card. • Unselect all: to cancel all the selections in the Outbox. • Select all: to select all the messages in the Outbox. • Settings: to set parameters relating to messaging. Please refer to "SMS/Settings" on page 62 for details. • Memory status: to view the memory status of the phone or the USIM card, including quantity of saved messages and the total capacity.

Draft

The Draft box is used to save the messages you created and saved and those failed to be sent.

Icons in the Draft

Icon	Description
	A text message saved to the phone
	A text message saved to the USIM card

Viewing and Editing Messages in the Draft

Step	Operation
1	Select Messages/SMS from the Menu .
2	Select Draft .
3	Press the up/down scroll key to view the messages.
4	Select the message to be viewed and select Edit to edit it.

Other Operations for the Draft

Step	Operation
1	Select Messages/SMS from the Menu .
2	Select Draft .

8 Messaging

Step	Operation
3	Select Options, and then you can execute the following operations: • Delete: to delete the selected message. • Edit: to edit the selected message. • New: to create a new message. • Forward: to forward the selected message. • Save number: to save the recipient's number corresponding to the selected message. You can save it to the phone or the USIM card as a new entry, or add it to an existing entry in the Contacts. • Copy to USIM: to backup one or more selected messages to the USIM card. • Unselect all: to cancel all the selections in the Draft. • Select all: to select all the messages in the Draft. • Settings: to set parameters relating to messaging. For details, please refer to "SMS/Settings" on page 62. • Memory status: to view the memory status of the phone or the USIM card, including quantity of saved messages and the total capacity.

Settings

You can change the SMS settings from the three tabs of Inbox, Outbox or Draft.

Let's take the Inbox screen as an example:

Step	Operation
1	Select Messages/SMS from the Menu .
2	Select Inbox .

Step	Operation
3	Select Options, and then select Settings to set the parameters related to messaging: • Message center: The U626 phone can automatically read the number of the message centre from the USIM card. If no such information or you have deleted the information by accident, please contact your network operator for it. • Valid period: The time of keeping a message in the message centre after it is sent. • Auto save: You can set whether a message will be saved automatically to the Outbox when it is sent. You have three options: Yes, No and Remind before. • Save to: For setting the location for saving a newly created message. You have two alternatives: Phone preferred or USIM preferred. • Signature: For setting whether your signature will be sent along with the message. You can edit the signature by yourself. • Status report: You can set it to “On” or “Off”. If you set it to “On”, the network will send you the information on whether the message has reached to the recipient.

Multimedia Message (MMS)

The U626 provides four mailboxes for MMS (Multimedia Messaging Service), namely, Inbox, Drafts, Sent and Sample.

Inbox

The Inbox is used to save the multimedia messages you received.

8 Messaging

Icons in the Inbox

Icon	Description
	A message that has been read
	A message that has not been read
	A notice that has been read for receiving a multimedia message, or a report that has been read for having sent a multimedia message.
	An unread notice for receiving a multimedia message, or an unread report for having sent a multimedia message.

Viewing Messages in the Inbox

Step	Operation
1	Select a multimedia message to view its contents.
2	During the playing, you can select Stop to stop playing.
3	During the playing, select Options to perform the following operations: • Next page: to play the next page. • Previous page: to play the previous page. • Rewind: return to the first page. • Object list: After entering the content list of this message, you may select an item and select Save to save the message to a corresponding directory of the folder.

Other Operations for the Inbox

Step	Operation
1	Access the Inbox of MMS .
2	Select Options, and then you can do the following operations: • Reply: to reply to a selected multimedia message. • Forward: to forward a selected multimedia message. • Delete: to delete a selected multimedia message. • Move: to move selected multimedia message(s) to a specified folder. • Folder: to save the multimedia message(s) you moved. • Callback: to call back a selected multimedia message sender. • Save contact: to save a selected multimedia message sender's information. • Sort: to sort the messages in the Inbox by senders or by date. • Unselect all: to cancel all the selections in the Inbox. • Select all: to select all the multimedia messages in the Inbox. • Settings: to set parameters relating to multimedia messaging. For details, please refer to "MMS/Settings" on page 70. • Memory status: to view the memory status of multimedia messages, including the occupied memory of every mailbox, Sample and Folder and that of the total.

Drafts

The Drafts is used to save the multimedia messages you created and saved and those failed to be sent.

8 Messaging

Icons in the Drafts

Icon	Description
	A multimedia message saved after you created it
	A multimedia message failed to be sent

Viewing and Editing Messages in the Drafts

Step	Operation
1	Enter the Drafts and select the multimedia message to be viewed or edited.
2	Press  to enter the editing screen.
3	Now you can edit the message. The operations are the same as those for creating a multimedia message.

Other Operations for the Drafts

Step	Operation
1	Access the Drafts of the MMS .
2	Select Options, and you can perform the following operations: • New: to create a new multimedia message. • Delete: to delete the selected multimedia messages. • Move: to move the selected multimedia messages to a specified folder. • Folder: to save the multimedia messages you moved. • Sort: to sort the messages in the Drafts by recipients or by date. • Unselect all: to cancel all the selections in the Drafts. • Select all: to select all the multimedia messages in the Drafts. • Settings: to set parameters related to multimedia messaging. For details, please refer to “MMS/Settings” on page 70. • Memory status: to view the memory status of multimedia messages, including the occupied memory of every mailboxes, Sample and Folder and that of the total.

Sent

The **Sent** is used to save the multimedia messages that have been sent successfully.

Icons in the Sent

Icon	Description
	A multimedia message that has been sent

Viewing Messages in the Sent

Step	Operation
1	Select a multimedia message and then select View .
2	During playing, you can select Stop to stop playing.
3	During playing, you may select Options to do the following operations: • Next page: to play the next page. • Previous page: to play the previous page. • Rewind: return to the first page. • Object list: After entering the content list of this message, you may select an item and select Save to save this item to a directory of the folder.

Other Operations for the Sent

Step	Description
1	Access the Sent of the MMS .
2	Select Options and you have the following options: • Forward: to forward a selected multimedia message. • Delete: to delete selected multimedia messages. • Move: to move selected multimedia messages to a specified folder. • Folder: to save the multimedia messages you moved. • Sort: to sort the messages in the Sent by recipients or by date. • Unselect all: to cancel all the selections in the Sent. • Select all: to select all the multimedia messages in the Sent. • Settings: to set parameters relating to multimedia messages. For details, please refer to “MMS/Settings” on page 70. • Memory status: to view the memory status of multimedia messages, including the occupied memory of every mailboxes, Sample and Folder and that of the total.

Sample

To send messages quickly, you can turn the content of commonly used multimedia messages into templates and have them saved. All operations on the Sample menu are basically the same as those for the Drafts. Please refer to the Drafts for details.

Folder

You can save your multimedia messages into different folders.

You can access the Folder from the four tabs of Inbox, Drafts, Sent or Sample. The

8 Messaging

management of the Folder is similar to that for the Drafts or Sample. Please refer to these sections for details.

Now let's take the operations in the Inbox screen as example for description.

Select **MMS/Inbox**. Then, select **Options/Folder**. You can perform the following operations:

- **Rename**: to rename a folder.
- **Select**: to enter a folder. Operations for that folder are similar to those for the Drafts or Sample. Please refer to them for details.

Settings

You can set parameters related to multimedia messages from any of the four tabs of Inbox, Drafts, Sent or Sample.

Now let's take the operations in the Inbox screen as example for description.

Select **MMS/Inbox**. Then, select **Options/Settings**. You have the following options:

Sending

This option is used to set parameters related to sending multimedia messages.

- **Expire time**: The time for a multimedia message to be stored in the message centre since it has been sent.
- **Send report**: You have two alternatives: On and Off. With this mode being enabled (On), the network will send a report for successfully sending a multimedia message.
- **Send limit**: To set the size limit of a multimedia message to be sent.
- **Save on send**: To decide whether a multimedia message will be saved to the Sent after it has been sent.
- **Sender visibility**: To set whether the sender information will be displayed when a multimedia message is sent.

Retrieval

This option is used to set parameters related to retrieval of multimedia messages.

- **Send delivery report:** You have two alternatives: On and Off. With this mode being enabled (On), the network will reply to the sender's multimedia message with a report indicating that you have received the message.
- **Retrieval limit:** To set the size limit of a multimedia message that you can receive.
- **Auto retrieval:** To set whether the phone automatically receives multimedia messages or not.

Data Account

This option is used to choose the information about the data account to be adopted when you send multimedia messages. For more information, please refer to "Connections/Data account" on page 139. And please consult your network operator for the content to be set.

WAP Gateway

This option is used to set parameters related to the WAP gateway: including the WAP gateway address, HTTP Port, User name and Password. Please consult your network operator for specific parameters.

When entering different parameters of the WAP gateway, you can use the up/down scroll key to access different items.

MMS Center

The number of the multimedia centre has been preset on your phone. If you have deleted or changed it by accident, please contact your network operator.

Connection Type

This option is used to set the connection type of multimedia messages.

Email

Select **Email** from the Messages screen, you can see four tabs: Inbox, Drafts, Outbox and Sent.

Inbox

The received Emails are saved in the Inbox.

Icons in the Inbox

Icon	Description
	An Email that has been read
	An Email that has not been read

Viewing an Email

Step	Operation
1	Select an Email.
2	Select View . If the selected Email contains only the title, you will be prompted whether to “Download” more information from the server.
3	Accessing the screen with the detailed content of the message, you can select Reply to reply the sender.

Other Operations for the Inbox

Step	Operation
1	Enter the Inbox tab from the Email .
2	Select Options, and you have the following options: • Reply: to reply to a selected Email. • Forward: to forward a selected Email. • Delete: to delete a selected Email. • Move to: to move a selected Email to a specified folder. • My folders: to enter “My folders” screen for saving your moved Emails in a different folder. • Sort: to sort the Emails in the Inbox by date, by sender or by subject. • Sync inbox: to retrieve Emails from the Email server. • Unselect all: to cancel all the selections in the Inbox. • Select all: to select all the Emails in the Inbox. • Settings: to set parameters related to Emails. For more information, please refer to “Email/Settings” on page 78.

Drafts

The Drafts is used to save the Emails you created.

Icon in the Drafts

Icon	Description
	An Email ready for being sent

8 Messaging

Viewing and Editing Emails in the Drafts

Step	Operation
1	Enter the Drafts and select an Email to be viewed or edited.
2	Press  to edit the Email.
3	The methods of editing an Email are the same as those of creating a new Email.

Other Operations for the Drafts

Step	Operation
1	Enter the Drafts tab from the Email .
2	Select Options , and you have the following options: • New Email: to create a new Email. • Delete: to delete the selected Email. • Move to: to move the selected Email to a specified folder. • My folders: to enter the “My folders” screen. • Sort: to sort the Emails in the Draft by date or by subject. • Unselect all: to cancel all the selections in the Draft. • Select all: to select all the Emails in the Draft. • Settings: to set parameters related to Emails. For more information, please refer to “Email/Settings” on page 78.

Outbox

The Outbox is used to save the Emails that failed to be sent.

Icon in the Outbox

Icon	Description
	An Email that failed to be sent

Viewing and Editing Emails in the Outbox

Step	Operation
1	Select an Email and press  to enter the “Edit email” screen.
2	Now you can edit the Email. The methods of editing an Email are the same as those of creating a new Email. For details, please refer to “New Email” on page 54.

Other Operations for the Outbox

Step	Operation
1	Enter the Outbox tab from the Email .
2	Select Options, and you have the following options: • Send: to send the selected Emails. • Delete: to delete the selected Emails. • Move to: to move the selected Emails to a specified folder. • My folders: to enter the “My folders” screen. • Sort: to sort the Emails in the Outbox by date or by subject. • Unselect all: to cancel all the selections in the Outbox. • Select all: to select all the Emails in the Outbox. • Settings: to set parameters related to Emails. For more information, please refer to “Email/Settings” on page 78.

8 Messaging

Sent

It is used to save the Emails that have been successfully sent to the Email server.

Icons in the Sent

Icon	Description
	An Email that has been read
	An Email that has not been read

Viewing the Sent Emails

Step	Operation
1	Select an Email and press  to enter the “View Email” screen.
2	On the screen with detailed content of an Email, you can select Reply to answer the sender.

Other Operations for the Sent

Step	Operation
1	Enter the Sent tab from the Email .
2	Select Options to perform the following operations: • Forward: to forward a highlighted Email. • Delete: to delete selected Emails. • Move to: to move selected Emails to a specified folder. • My folders: to enter the “My folders” screen. • Sort: to sort the Emails in the Sent by date or by subject. • Unselect all: to cancel all the selections in the Sent. • Select all: to select all the Emails in the Sent. • Settings: to set parameters related to Emails. For more information, please refer to “Email/Settings” on page 78.

My Folders

You can store your Emails into different folders.

You can access folders from any of the Inbox, Drafts, Outbox or Sent. The management of the information in the folders is the same as that for the Sent. For more information, please refer to the descriptions for it.

Now let's take the operations in the Inbox as example for description.

Select **Email/Inbox**. Then, select **Options/My folders**. You have the following options:

- Rename: to rename a folder.
- Select: to enter a folder. Operations for that folder are similar to those for the Sent. For more information, please refer to that section.

8 Messaging

Settings

You can set parameters related to Emails from the options of any of the Inbox, Drafts, Outbox, Sent or a directory of My folders.

Now let's take the operations in the Inbox screen as example for description.

Select **Email/Inbox**. Then, select **Options/Settings**. You have the following options:

Accounts

It is used to add, edit and delete Email accounts.

- 1 Select **Options/Add account**. You can enter the account name and then press  to enter "General settings" screen.
- 2 You can enter parameters related to your account, including "From name", "From addr", "Protocol", "Incom. server", "User name", "Password" and "Outgo. server".
- 3 Select **Advanced** to enter the "Advanced settings" screen. The advanced settings include "Signature for" (whether your signature is used), "Edit signature", "Delete on server", "Incom. port" (the port for incoming Emails), "Outgo. port" (the port for outgoing Emails) "Use authentication", "Same as incoming" (whether it is the same as the settings for incoming Emails), "User name" and "Password". After the setting, press **General**.

Note:

For more information of the requirements on the account settings, please contact your Email service provider.

- 4 On the "General settings" screen, select **Save** to save this account setting.
- 5 On the "Accounts" screen, select **Activate** to activate this account.
- 6 To delete an account, select the account to be deleted from the "Accounts" screen, then select **Options** and select **Delete account**.

Common Options

- Reply include origin: to reply to an Email with the original text included.
- Save sent messages: to save an Email that has been sent to the Sent.
- Send limit: to set the size limit of an Email to be sent.
- Receive limit: to set the size limit of an Email that can be received. When an Email comes, if the size of it is more than the limit, you will only receive the header of the Email. If you have enabled **Only header**, you will only receive the header when an Email comes.
- Data account: to set the data account information for sending your Emails. For more information, please refer to “Connections/Data Account” on page 139 and consult your Email service provider for data account parameters.

After the setting, select **Back** to exit.

Memory Status

It displays the occupied memories of the Inbox, Drafts, Outbox, Sent and My folders respectively and the Total (occupied memory) by Emails.

Alert Inbox

The Alert Inbox is used to save the Push messages you received.

To receive Push messages, you need to switch on the Alert Inbox at first. For details, please refer to “Browser/Homepage/Settings” on page 111. To use the browser functions, you need to set the network. For more information, please refer to “Browser/Select Profile” on page 113.

Viewing Push Messages

Enter the Alert Inbox and select a Push message. Select **Detail** to view the properties of the Push message. Then, select **Load** to start the WAP browser. Connect a URL specified by the Push message and view the details.

8 Messaging

- : A Push message that has been read
- : A Push message that has not been read

Other Operations for the Alert Inbox

Enter the Alert Inbox and select **Options** to perform the following operations:

Load

Start the WAP browser and connect a URL specified by the Push message.

Delete

It is used to delete the selected messages.

Unselect all

It is used to cancel all the selections upon the Push messages.

Select all

To select all the Push messages.

Voice Mail Number

To use the voice mail services, you need to apply to your network operator for it. After setting the correct number provided by your network operator, if you press and hold  in standby mode, the phone will dial out the voice mail number automatically to access the voice mailbox.

Step	Operation
1	Select Menu/Messages/Voice mail No.
2	Input the voice mail number and select OK .

Text template

Your U626 has been preset with some commonly used phrases in inputting message, sending messages while making a call and auto replying. You can edit them if you want.

Step	Operation
1	Select Menu/Messages .
2	Select Text template .
3	Select the phrase to be modified; and then select Modify .

9 Multimedia

The Multimedia function provides you with various multimedia services such as taking photos, making videos, recording voice, viewing images, playing music and playing video.

Camera

With this function, you can take photos with your phone at any moment.

Access the Camera function to display the viewfinder screen. If the image on the screen is a reversal one, you can press  to overturn it manually. You can also find views by rotating the camera lens.

In viewfinder mode, press  to capture pictures.

In viewfinder mode, pressing the right function key to select the **Gallery**, you can access the camera gallery to view the existing pictures. Then, you can press  to back to viewfinder.

The pictures taken with the phone will be saved to the **Gallery/Images/Camera** folder.

Note:

If you exit from the camera function and access it again, it takes pictures with the resolution used in the last time. If you select the full screen mode with resolution of 240×320 , you can open the screen function menu in this way: under the full screen viewfinder mode, press the left function key, and select **Zoom display** from the popup menu to access the non-full-screen mode with resolution of 240×320 .

Introduction to the Screen Functions

The control panel at the bottom of the viewfinder screen contains two parts, namely, the screen function menu and the resolution of the current photo.

The screen function menu contains the following functions:

Function	Description
	The brightness: You can press the up/down scroll key to adjust the brightness.
	The contrast: You can press the up/down scroll key to adjust the contrast.
	The foci: You can press the up/down scroll key to adjust the foci of the camera lens.
	The resolution: You can press the up/down scroll key to adjust the resolution.
	The frame: You can add a frame for each of the pictures. To select a frame, you can press the up/down scroll key.

Introduction to the Menu Functions

In the viewfinder mode, press the left function key to open a menu where you can execute

the following operations:

Operation	Description
Frame	With this function, you can select a frame file, or cancel using frames in the process of taking pictures.
Zoom display	With this function, you can adjust the size of the viewfinder without changing the solution.
Image quality	With this function, you can select an image quality for your picture.
Effects	With this function, you can select an effect for your picture.
White balance	The phone provides you with several kinds of white balance including Auto , Fluorescent , Incandescent , Daylight and Cloudy .
Self timer	With this function, you can take pictures on the basis of timing. The count-down time is 10 seconds.
Save prompt	If this function is enabled, you will be prompted whether to save the photo after you take a photo; If this function is disabled, the photo will be saved automatically.
Rotate image	With this function, you can rotate the picture when you find a view. You can also press  to rotate it.
Save to	With this function, you can select to save your pictures in your Phone or on the Memory card .
Shutter tone	With this function, you can select a sound for the shutter.
Reset	With this function, you can restore the defaulted settings of the camera.
Video camera	With this function, you can access the functions of video camera.

Video Camera

With this function, you can make video with your phone at any moment.

In the menu, select **Media/Video camera**, and press  to access the viewfinder screen.

In the viewfinder mode, you can press  to make video.

In the viewfinder mode, you can press the right function key to select the **Gallery** to view the recorded video files. Then, you can press  to back to the viewfinder mode.

Introduction to the Functions on Viewfinder Screen

After accessing the viewfinder, if the image is a reversal one, you can press  to overturn it manually. You can also rotate the lens to adjust the shoot angle.

Introduction to the Screen Functions

The control panel at the bottom of the viewfinder screen displays the progress bar, the screen function menu and the resolution.

The screen function menu contains the following functions:

Function	Description
	The brightness: You can press the up/down scroll key to adjust the brightness.
	The contrast: You can press the up/down scroll key to adjust the contrast.
	The foci: You can press the up/down scroll key to adjust the foci of the lens.

Function	Description
	The resolution: You can press the up/down scroll key to adjust the resolution.

Introduction to the Menu Functions

In the state of viewfinder, press the left function key to open a menu where you can execute the following operations:

Operation	Description
Zoom display	With this function, you can adjust the size of the viewfinder without changing the solution.
Quality	With this function, you can select an image quality for your picture.
Frame rate	With this function, you can select frame rate for your picture.
Audio	With this function, you can select to record audio while making video.
Duration	With this function, you can select the duration for making a video.
Rotate image	With this function, you can rotate the picture. You can also press  to rotate it.
Save to	With this function, you can select to save your video files in the Phone or on the Memory card .
Memory size	With this function, you can view the ratio of the used space to the total space and the duration for the free space.

9 Multimedia

Operation	Description
Reset	With this function, you can restore the defaulted settings of the video camera.
Camera	With this function, you can access the functions of camera.

Introduction to the Functions During Shooting

In the state of viewfinder, you can press  to make video. In the state of shooting, you can execute the following functions:

Introduction to the Screen Functions

In the state of making video, you can adjust the brightness, contrast and foci. You can use the left/right scroll key to select a function from the screen function menu, and use the up/down scroll key to adjust it.

Introduction to the Softkey Functions

In the process of making video, you can press  to switch between pause and going on the shooting; or you can press the right function key to stop the shooting.

In the state of making video, if you press the right function key to stop making video, the video files will be saved at the **Gallery/Videos/Video camera** folder.

Voice Recorder

The U626 phone provides you with the function of recording voice. You can set the duration for the recording.

Select **Menu/Media/Voice recorder**, then, press  to access the voice recorder screen where you can execute the following operations:

Preparations Before the Recording

- 1 Setting duration: On the standby screen of the voice recorder, you can press the left function key to set the duration.
- 2 Viewing record: On the standby screen of the voice recorder, you can press the right function key and select **Gallery** to view the audio files.
- 3 Starting recording: On the standby screen of the voice recorder, you can press  to start recording.

Operations During the Recording

- 1 Pause: In the process of recording, you can press  to stop the current recording, and press  again to continue.
- 2 Stopping and saving: In the process of recording, you can press the left scroll key to stop the current recording. And the audio file is saved in **Gallery/Music/Voice recorder** automatically.
- 3 Exiting the current audio file: In the process of recording, you can press the right function key or press  to exit the current audio file.

Operations After the Recording

To play an audio file instantly: When the recording is finished, you can press the right scroll key to play it instantly. You can press the left scroll key to stop the playing, and press the right scroll key to switch between the two functions of play and pause.

9 Multimedia

Note:

While playing a recorded audio file instantly, you can press the Volume key to adjust the volume.

Viewing Images

With this function, you can view various images including those coming with the phone, those shot by yourself with the phone, those downloaded from the Internet and those attached to messages and Emails.

The phone supports images of many formats including JPG, BMP, WBMP, PNG, GIF 87a/89a, GIF animation and BCI.

You can view an image in two ways: browse it; or to zoom it in to view it in the original size. You can press  to switch between these two modes. The detailed description is as follows:

Browsing the Images

Select one or several images from the image list. Then, press  to view them in the state of browsing.

The image is zoomed proportionally and displayed when you view it on the screen of browsing status, during which you can see such information as the name and size of the image.

In the state of browsing images, you can execute the following operations by following the prompts of the functional keys:

Operation	Description
	Press the left scroll key to view the previous image.

Operation	Description
	Press the right scroll key to view the next image.
Setting as the wallpaper	You can press the left function key to set an image as the wallpaper.
Switching the display mode	In the state of browsing, press  to view the image at its original size.

Zoom Status

In the state of browsing, you can press  to view the image at its original size.

While viewing the image at its original size, you can press the up/down/left/right scroll key to move it so as to view the whole image. At the same time, you can press the left scroll key to set it as the wallpaper.

While viewing the image at its original size, you can press  to switch to the state of browsing the image.

Playing Video

With this function, you can play various video files including those coming with the phone, those shot by yourself with the phone, those downloaded from the Internet, those attached to the messages and Emails and those shot by yourself when you make video calls. You can also enjoy online video files.

The phone supports video files of many formats including MP4, 3GP, 3G2 and PMD.

Select one or several video files from the video list, and press  to play, during which

9 Multimedia

you can execute the following operations upon the video files.

Operation	Description
	Press the left scroll key to play the previous video file.
	Press the right scroll key to play the next video file.
Pause	Press  , the playing pauses; press  again, the playing continues.
Zoom in/out the video image	You can press the left function key to zoom in or out the video image and change its direction.
Adjust the volume	Press the Volume key to adjust the volume.

Note:

In the case of a coming call when a video file is being played, after you answer the call and ring off, the video file continues to play starting from where it was interrupted; if you pressed the **Pause**, the video file is still in pause status after you answer the call and ring off.

Playing Music

With this function, you can play various music files including those coming with the phone, those recorded by yourself with the phone, those downloaded from the Internet, those attached to the messages and Emails. You can also enjoy the online audio files.

The phone supports audio files of many formats including MP3, AAC/AAC+, AMR, MID, WAV (PCM), MMF and QCP.

Select one or several music files from the music list, and press  to play, during which you can execute the following operations upon the music files.

Operation	Description
	Press the left scroll key to play the previous music file.
	Press the right scroll key to play the next music file.
Pause	Press  , the playing pauses; press  again, the playing continues.
Adjust the volume	Press the Volume key to adjust the volume.

Note:

In the case of a coming call when a music file is being played, after you answer the call and ring off, the music file continues to play starting from where it was interrupted; if you pressed the **Pause**, the music file is still in pause status after you answer the call and ring off.

Playing Voice Records

With this function, you can play the audio files recorded by yourself with the phone.

The phone supports to play voice record files in AMR and QCP formats.

Select one or several audio files from the audio list, and press  to play, during which you can execute the following operations upon the audio files.

Operation	Description
	Press the left scroll key to play the previous audio file.
	Press the right scroll key to play the next audio file.
Pause	Press  , the playing pauses; press  again, the playing continues.
Adjust the volume	Press the Volume key to adjust the volume.

Note:

In the case of a coming call when an audio file is being played, after you answer the call and ring off, the audio file continues to play starting from where it was interrupted; if you pressed the **Pause**, the audio file is still in pause status after you answer the call and ring off.

10 Tools

This function provides you with various assistant tools for the phone, including Calendar, To Do, Memo Pad, Alarm Clock, Calculator, World Time, Stopwatch and Timer.

Calendar

With this function, you can view the calendar and manage your schedules.

Select **Calendar** from the **Tools**, and press  to access the calendar functions:

- On the Month view screen, you can press the up/down/left/right scroll key to switch among the days and select the needed day. Then, press  to access the schedule event entries of the day.
- On the Week view screen, you can press the up/down scroll key to switch among different weeks; and press the left/right scroll key to switch among the days of a week. Then, press  to create a schedule event or view the details of a schedule.
- On the Day view screen, you can press the left/right scroll key to switch among different days of a week; and press the up/down scroll key to switch among the events of a day. Then, press  to create a schedule event or view the details of a schedule event.

Calendar Functions

With this function, you can view the calendar in different modes, go to a certain date and

10 Tools

create commemorations.

Operation	Description
Calendar display mode	Three modes of displaying the calendar are available: • Month view • Week view • Day view On the Month/Week view screen, you can press the left function key to open a menu where you can switch the display modes.
Go to...	With this function, you can switch to a certain date directly. It is used in the state of Month view.
Commemoration	On the Month view screen, the green number represents a commemoration day. You can create 20 commemorations at most.

New Schedule

Ways to Create Schedules

Operation	Description
Create schedule events on the Month view screen	Two ways are available: • Select a date and press  to access the schedule event list of the current day. Press the left function key to open a menu from which select “New”. Then, you can create the schedule events of the current day (If it is empty, you can press , then, create schedule events). • Select a date and press the left function key to open a menu from which select “New”. Then, you can create the schedule events of the current day.
Create schedule events on the Week view screen	Select a date and press the left function key to open a menu from which select “New”. Then, you can create the schedule events of the current day (If it is empty, you can press , then, create schedule events).
Create schedule events on the Day view screen	Select a date and press the left function key to open a menu from which select “New”. Then, you can create the schedule events of the current day (If it is empty, you can press , then, create schedule events).

Creating a Schedule

Step	Description
1	Input the title of the new schedule event.
2	Set the start time of the new schedule event.
3	Set the end time of the new schedule event.
4	Select when to alarm before the start time.
5	Select a schedule type.
6	Select a cycle for the alarm of a schedule.
7	Input the content of the schedule event.
8	Press the left function key to save the new schedule.

Note:

With the calendar function, a maximum of 2000 schedule entries can be created, and a maximum of 30 schedule events can be created or displayed in a day.

Operations on the Schedule

You can not only create schedules but also edit, delete, and copy them, send them as attachments to Emails, send them by Bluetooth, select alert, view memory status, deleting all of them and so on.

Operations on the Schedule Prompt Interface

When the time for alert you set for a schedule event is up, the alert bell rings and a prompt interface appears. You can stop the ringing by pressing any key or by folding/unfolding your phone. On the prompt interface, you can operate to delay or stop the alert.

- Delay: on the prompt interface of an alert, press  or the Volume key to delay. If no operation is executed, the schedule alert will be delayed automatically.
- Stop: on the prompt interface of an alert, press the right function key or the Record key to close the prompt interface.

Note:

The operation of delaying can be executed once only. And the delay time is five minutes.

To Do

This function helps you to manage and set the events to be conducted before a certain time.

Select **To Do** from the **Tools**, and press  to access it.

To Do Tasks Classification

The To Do events are tracked and managed in the form of tasks. It is classified into the following conditions:

- All Tasks: a list of all the events to do
- Due: a list of the events to do that are at term but have not been done
- Done: a list of the events to do that have been done

New To Do Tasks

If there is no To Do task, you are required to create one after you access this function. Follow these steps:

10 Tools

Step	Description
1	Input the title of the new To Do task.
2	Set the deadline date of the new To Do task.
3	Set the priority level.
4	Set the accomplishment status of the To Do task according to the process.
5	Select whether to alarm. If you select alarm, you need to set the time for alarm.
6	Set the type of the To Do task.
7	Input the content of the new To Do task.
8	Press the left function key to save it.

Note:

A maximum of 1000 tasks can be created with the function of To Do.

Other Operations on the To Do Tasks

Other operations on the tasks include deleting, editing, copying, sending them as attachments by Email, sending by Bluetooth, marking finished, selecting alert, memory status and deleting all.

Operations on the To Do Task Prompt Interface

When the time for alert you set for a To Do task is up, the alert bell rings and a prompt interface appears. You can stop the ringing by pressing any key or by folding/unfolding your phone. On the prompt interface, you can operate to delay or stop the To Do task prompt.

- Delay: on the prompt interface of an alert, press  or the Volume key to delay. If no operation is executed, the To Do task alert will be delayed automatically.

- **Stop:** on the prompt interface of an alert, press the right function key or the Record key to close the prompt interface.

Note:

The operation of delaying can be executed once only. And the delay time is five minutes.

Memo Pad

With the Memo Pad function you can use your phone as paper and pen to record the important events at any time. A maximum of 100 entries can be saved.

Select **Memo Pad** from the **Tools**, and press  to access it. If the Memo Pad is empty, you are required to create an entry at first after you access it.

The operations on the Memo Pad include creating, deleting, editing, sending by Bluetooth, sending short messages, viewing memory status and deleting all.

Note:

You can receive Memo Pad information sent by Bluetooth only when the Memo Pad is not accessed.

Alarm Clock

With this function, you can set several alarms, including setting prompting messages, prompting ring tones and the cycle time for alarm clocks.

Setting Alarm Clocks

Your U626 phone supports to set eight alarms. Follow these steps:

Step	Description
1	Select the one to be edited from the alarm list, and press  to set an alarm clock.
2	Set the alarm time.
3	Input the prompting information.
4	Select a ring tone. The U626 phone provides standard ring tones and supports to use the downloaded ring tones.
5	Set the alarm cycle.
6	Press the left function key to start the alarm clock.

Prompt Interface of an Alarm

When the time for an alarm clock is up, the alert bell rings and a prompt interface appears. You can stop the ringing by pressing any key or by folding/unfolding your phone. On the prompt interface you can operate to delay or stop the alarm clock prompt.

- Delay: on the prompt interface of an alert, press  or the Volume key to delay.
- Stop: on the prompt interface of an alert, press the right function key or the Record key to close the prompt interface.

The operation of delaying can be executed once only. And the delay time is five minutes. If no operation is executed, the alarm clock prompt will be delayed automatically.

No matter the power is on or off, the alarm clock can alarm. If the power is off, it will prompt you whether to power on when the clock alarms.

Note:

If you set it to alarm for once (that is, you did not set the cycle of the prompt), you can not execute the operation of delaying.

Stopping the Alarm Clock

Select an entry of alarm clock from the alarm clock list, and press the left function key to deactivate the alarm clock.

Calculator

With this function, you can do the operations of addition, subtraction, multiplication, division and extraction. You can:

- Press the number keys to input the figures.
- Press the up/down/left/right scroll key to input the operators.
- Press the left function key to clear.
- Press the right function key to exit from the Calculator.
- Press  to input the radix point.
- Press  to delete the character on the left of the cursor.
- Press  to do the operation of extraction.
- Press  to enter the operator of equal mark.

World Time

With this function, you can view the time of the main cities throughout the world. You can press the left/right scroll key to switch among the time zones.

10 Tools

If the daylight saving time (DST) is used in the place where you are, you need to set to DST. Then, you can get the exact local time. Follow this way: move to the desired time zone, then, press  and select whether to set to DST.

Stopwatch

With the stopwatch function provided by the U626 phone, you can save five items of stopwatch information at most.

- Start: press  to start timing.
- Save: press the left function key to save the first item of timing. Then, the second item starts automatically. You can go on operating in this way.
- Pause: press  in the process of timing, it pauses.
- Continue: press , it continues to time from where it paused.
- Reset: in the state of pause, press the left function key to reset the current stopwatch.
- Clear: in the state of resetting, press the left function key to clear all the records of the current stopwatch.

Timer

With this function, you can set a timer with at most 99 hours and 59 minutes. After you set it, the phone backs to the Home screen automatically, and the timer is displayed on the Home screen.

On the Timer screen, you can execute the operations of pausing, continuing and resetting.

11 Gallery

This function helps you manage such files as image, music, video and eBook conveniently.

Images

The U626 phone supports images of many formats including BMP, JPG, PNG, BCI, GIF87a/89a, GIF animation, WBMP and so on.

Selecting **Gallery/Images** can access the function of image management. The phone provides two folders including **Camera** and **Download**.

You can execute the following operations upon the image files in the Gallery:

Function	Description
Send	You can send files with the Bluetooth technology.
Cut	To cut a file.
Copy	To copy a file.
Delete	To delete a file.
Paste	To paste a file (you should cut or copy a file at first, then, you can execute the operation of pasting).
Unselect all	To clear away all the selected items.
Select all	To select all the files.

11 Gallery

Function	Description
Rename	To rename a file.
Properties	To view the properties of one or more files.

Note:

The **Camera** folder and the **Download** folder are pre-configured in the phone. You can not delete them. The Camera folder does not support the function of pasting.

Music

The U626 phone supports audio files of many formats including MP3, MID, WAV (PCM), QCP, AAC/AAC+, MMF, AMR and so on.

The phone provides two folders including **Voice recorder** and **Download**.

You can execute the following operations upon the music files in the folder, namely, sending, cutting, copying, deleting, unselecting all, selecting all, cycling current, cycling all, renaming and viewing properties.

The operations of cycling current and cycling all are as follows:

Operation	Description
Cycle current	Play the currently selected one or more files cyclically.
Cycle all	Play all the music files in the list cyclically.

Note:

The **Voice recorder** folder and the **Download** folder are pre-configured in the phone. You can not delete them. The Voice recorder folder does not support the function of pasting.

Videos

The U626 phone supports video files of multiple formats including 3GP, MP4, 3G2 and PMD.

The phone provides four folders including **Video camera**, **Download**, **Stream Media** and **Video call**.

Folder	Saved files
Video camera	The 3GP files shot by the video camera function of your phone are saved in this folder automatically.
Download	The video files downloaded by the WAP browser are saved in this folder automatically.
Stream Media	In this folder, you can perform such operations as creating, editing, copying and deleting URL files of stream media links.
Video call	The video files recorded in the process of having V-calls are saved in this folder.

Note:

The **Video camera** folder, **Download** folder, **Stream Media** folder and **Video call** folder are pre-configured in the phone. You can not delete them. The **Video camera** folder and **Video call** folder do not support the function of pasting files.

eBook

The phone supports to browse the eBooks in such formats as TXT and HTML.

Personal Folder

In the **Personal** folder, you can create first-level folders to manage the classified files.

Note:

The files received by Bluetooth will be saved to **Personal/Inbox** automatically.

Other

You can save various files in this folder which provides you with a real “sundries box” for files.

Memory Card

When the phone finds the inserted memory card, **Memory card** is displayed in the file management list of the Gallery automatically. You can execute operations on the contents of the memory card. At the same time, the U626 phone provides the function of formatting the memory card.

12 Browser

With the build-in browser, you can easily and pleasantly tour around the Internet world.

To use the browser, you have to configure the network. For more information, please refer to “Browser/Select Profile” on page 113.

Homepage

After launching the browser, you will see “Homepage”, the first option. You need to set the name of the homepage. For more information, please refer to “Browser/Select Profile” on page 113.

Browsing Web Pages

Enter the **Homepage** and select a link from the page; then select **OK** to browse the page.

Note:

During browsing, you can press the scroll keys to select a link to be accessed. The selected link is highlighted. Now press **OK** to enter it.

Other Operations for the Homepage

After selecting **Options** from the homepage, you can perform the following operations:

Homepage

To access the homepage. The name of the homepage you have set is displayed here.

Forward

To go forward when you browse Web pages.

Bookmarks

To access the bookmark directory. You can access the web pages linked by saved bookmarks.

Go to URL

To enter a web site address and connect it.

Recent pages

To access pages you have browsed recently. Ten entries of records can be saved.

Save

To save the pages or contents on the pages to your phone. You may select “**Save page**” or “**Save item**”. Web pages will be saved to the **Saved pages**, and contents will be saved to the folders on your phone.

Refresh

To refresh the current Web page.

Saved pages

To access the saved pages.

Select **OK** to browse saved Web pages in offline mode.

Select **Options** to perform the following operations:

- Go to: To select whether to connect again to the Web server so as to retrieve updated pages.

- **Delete:** To select whether to delete a selected page.

Settings

Select **Settings**, and then you have the following options:

- **Save as homepage:** to save the current page as the homepage. You can press the up/down scroll key to switch between the Title editing bar and the Address editing bar.
- **Multimedia:** to set whether to show images or play background music.
- **Cache:** to set the cache to be On/Off and clear the cache.
- **Cookies:** to enable (On) or disable (Off) cookies and clear cookies.
- **Accept push:** to enable (On) or disable (Off) “Accept push” function.
- **Security:** to show the “Current certificate” and “CA certificates”.
- **Character set:** to select one of the character sets, which include the following options: “Automatically”, “Unicode (UTF-8)”, “UCS-2”, “GB2312” (for Simplified Chinese), and “BIG-5” (for Traditional Chinese). After selecting a character set, select **Select** and press



to confirm.

Bookmarks

With this option you can save and edit the information of the websites that you often access.

The U626 supports OTA function. You can use the WAP service to obtain the Bookmarks information provided by the operator (or the service provider).

Some bookmarks that have been preset on the phone are saved in this catalog. Select any one of them, and then you can perform the following operations:

Adding a Bookmark

Select **Options/Add** to add a Title and Address for a bookmark.

Goto a Bookmark

Select a bookmark and select **OK** to connect the selected bookmark; you may also connect a selected bookmark by selecting **Options/Goto**.

Editing a Bookmark

Select a bookmark and then select **Options/Edit** to edit a selected bookmark. The preset bookmarks can not be edited.

Deleting a Bookmark

Select a bookmark and then select **Options/Delete** to delete the selected bookmark. The preset bookmarks can not be deleted.

Go to URL

Access the **Go to URL** screen, and then you can enter the address of the webpage to be accessed.

You can select **Edit**, **Delete** or **Delete all** from the **Options** to perform corresponding operations upon the entered address.

Saved pages

It is used to save web pages for your offline browsing.

Browsing Web Pages

Select a web page and then **OK** to enter the page; you may also select **Options/Goto** to connect the selected web page.

Deleting Web Pages

Select a web page and then select **Options/Delete** to delete the selected web page.

Alert Inbox

For more information on the Alert inbox, please refer to “Messages/Alert Inbox” on page 79.

Select Profile

For your convenience of switching among the networks, the U626 phone provides several profiles for setting network.

The U626 supports OTA functions. You can use the WAP service to obtain such information as homepage, WAP gateway, data account and connection type provided by the operator (or service provider).

Enter the Browser and select **Select profile**; then press  to enter the Select profile screen. You can select **Rename** to rename a selected profile.

Select a profile and select **Edit**, you can set the following items:

Homepage

Select **Homepage** and press  to access the **Edit homepage** screen to enter the Title and Address information.

You may press the up/down scroll key to switch between the Title editing bar and the Address editing bar.

WAP Gateway

Access the **WAP gateway** screen, you may enter IP address of the gateway, IP port, User

12 Browser

name and Password.

Press the up/down scroll key to switch across the input bars.

For details of the requirements for setting this information, please contact your network operator; you can also obtain them by the OTA download mode.

Timeout Settings

It is used to set the overtime (in seconds) of a connection. If it exceeds the set timeout limit, a trial connection will stop.

Data Account

Select a data account to be used. Please refer to “Connections/Data Account” on page 139 for setting a data account. And please consult your network operator for detailed parameters. You can also obtain them by the OTA download mode.

After selecting a data account, select **Select** to activate it. Select **View** to view details.

Connection Type

It is used to set connection type for the browser.

13 Stream Media

The U626 phone supports the Stream Media services. To enjoy the online Stream Media services, you need to select a data account at first. For details, please refer to “Operations on URL files” on page 116.

Playing Stream Media Files

The U626 allows you to enjoy the Stream Media services by the following methods:

- Method 1: In the process of browsing the Internet, press  at the Stream Media files link provided by the network to play Stream Media files. For details on how to access the Internet, please refer to “Browser” on page 109.
- Method 2: In **Gallery/Videos/Stream Media**, select **Options/New link** to input the link address. Select a URL file and press  to play it.
- Method 3: On the screen of a short message, select **Options/Extract URL**. If there is only one URL in this message, the Stream Media will be played directly; if there are more URL, a URL list will be displayed, from where you can select the URL to be connected, and then press  to play Stream Media.

Operations during Playing Stream Media Files

In the process of enjoying Stream Media files, you can perform the following operations:

13 Stream Media

Operation	Description
▶▶	Press the right scroll key to fast forward the stream media file. Press once to move forward quickly for a 10 seconds' playing.
◀◀	Press the left scroll key to rewind the stream media file. Press once to move backward quickly for a 10 seconds' playing.
Pause	Press  , the playing pauses; press  again, the playing goes on.
Zoom in/out images	Press the left function key to switch between different sizes of an image.
Adjust volume	Press the Volume key to adjust the volume.

Note:

The functions of pause, fast forward and rewind are available for VOD (Video on demand) only. They are unavailable for Living TV.

Operations on URL Files

In **Gallery/Videos/Stream Media**, select **Options**, and then you can perform the following operations:

Option	Description
New link	You can input a new link address. The link will be saved as a URL file automatically.
Edit link	You can edit the contents of the existing URL file (Stream Media link address).
Data account	Select the data account needed by Stream Media services. For details on setting data account, please refer to “Connections/Data Account” on page 139.
Send	To send files by Bluetooth.
Cut	To cut files.
Copy	To copy files.
Delete	To delete files.
Paste	To paste files. (To perform this operation, you must cut or copy files at first. Furthermore, only URL files can be pasted.)
Unselect all	To cancel all the selections on the files.
Select all	To select all the files.
Rename	To rename files.
Properties	To view the properties of one or more files.

14

V-Call

Video call service is one of the featured services provided by the 3G network. It has ended up a historic age of traditional voice call service featuring “Hearing the voice, imagining the looks”.

Introduction to the Screen Functions

When a video call is connected, you can see the V-Call screen which contains three parts: the phone number of the other party, current call duration, and the function menu of this screen.

Functions on the Screen

Press the left or right scroll key, you can switch across different function icons; and press the up or down scroll key, you can adjust the selected function.

A V-Call screen contains the following adjustable functions:

Icon	Description
	For adjusting brightness.
	For adjusting contrast.
	For adjusting the foci of the camera lens.

14 V-Call

Icon	Description
	For switching on/off the audio channel of your party.
	For switching on/off the video channel of your party.

Functions of Some Keys

During a call, you can press some keys to switch audio devices and to make video of the other party:

- To switch audio devices: You can press  to select to use the earpiece or the loud speaker.
- To make video of the other party: You can press the right function key to make video of the other party during a call. You can press the right function key to stop making video. However, if you do not stop it, it will automatically stop when the memory space is not enough or when the duration is up to 30 minutes.

Note:

The video files you made are saved to **Gallery/Videos/Video call** by default.

Function Options

When a video call is connected, you will see the video call screen. Pressing the left function key, you have the following options:

P-in-P

During a video call, your image can be shown on your phone screen. You can select **P-in-P**

to arrange the positions of your image. You can also choose to close your image window.

Zoom Display

With this option you can adjust the size of the images of both parties shown on your phone.

Switch Display

With this option you can switch between image windows: to display your image in the small window and the other party's image in the large window; or vice versa.

Rotate Display

With this option you can rotate your image to be upside down; additionally, you can press



to do so.

Image Quality

With this option you can choose **Best quality** or **More smooth** for the image quality.

Contacts

With this option you can use the **Contacts** during a video call.

SMS

With this option you can send messages during a video call.

Note:

You can also set such common functions as P-in-P, Zoom display, Switch display and Image quality at **Settings/Video call setup**.

15 Connections

The data connection function of the U626 provides you with many data communication functions: You can synchronize data between your phone and a PC by means of the Bluetooth technology or a USB cable. You can transfer files between your phone and other Bluetooth devices. And you can use the built-in modem of your phone to establish a dialup connection to a PC to access the Internet through these interfaces.

Bluetooth

You may use the built-in Bluetooth function of your phone to synchronize data between a PC and your phone, or to use the built-in modem of your phone to access the Internet from a PC, or to exchange data with other Bluetooth devices. You can also talk by the Bluetooth headset or Bluetooth loud speaker.

Note:

The Bluetooth function supported by U626 meets the requirements of Bluetooth specification 1.1. However, whether it is workable between the phone and other Bluetooth devices also depends on the compatibility of both. For more information, please refer to the user manuals of related devices, or consult the manufacturer of related devices.

Bluetooth-Based Synchronization

The U626 phone can respond data synchronization request from a computer.

With the Bluetooth technology and the *HUAWEI U626 MOBILE PHONE PC Assistant* coming along with your phone, the phone can communicate with a PC. You can backup and edit the contact entries and short messages saved on your phone and USIM card on a PC. You can also synchronize contact entries, schedule events and To Do tasks between your phone and the Outlook or the Outlook Express. In addition, with the Memo Pad applications of your phone, you can receive and send Outlook mails by Bluetooth.

Follow these steps to operate the Bluetooth synchronization with your U626 phone.

Step	Description
1	Your PC should support Bluetooth function.
2	Install the <i>HUAWEI U626 MOBILE PHONE PC Assistant</i> coming with your phone: Insert the disk and select “Install HUAWEI PC Assistant”, then, click <Continue> and follow the guide to complete the installation.
3	Access Connect/Bluetooth/Switch On/Off , and select On to enable the Bluetooth device.
4	Run the driver software for Bluetooth on the PC, and partner the HUAWEI U626 phone. After finding the HUAWEI U626 serial port service, activate the Bluetooth serial port service of your U626 phone.
5	Run the application program of the <i>HUAWEI U626 MOBILE PHONE PC Assistant</i> on the computer.
6	Now you can operate the synchronization.

Note:

For details of the operation, please refer to the Help of the *HUAWEI U626 MOBILE PHONE PC Assistant*.

The Bluetooth Headset

You can answer a call by a Bluetooth headset or Bluetooth loud speaker (Please refer to corresponding user manual of a Bluetooth headset or loud speaker).

Select **Connect/Bluetooth** from the **Menu** and press  to enter the Bluetooth Settings screen.

The following table lists the procedures to use a Bluetooth headset:

Step	Description
1	Select Switch On/Off , and then On from the Bluetooth settings list to enable the device. A Bluetooth device icon appears on the icon bar.
2	Select the Devices from the Bluetooth Settings list to enter the screen.
3	Set the Bluetooth headset to the status that allows detection.
Note: Only when authentication is needed, the Bluetooth headset needs to be set to the status that allows detection. If the authentication has been performed, you just need to turn on your Bluetooth headset. For more information, please refer to the user manual of your Bluetooth headset.	
4	Select Search from the Devices list screen. If a Bluetooth headset has been found, you will see its profile on the device list.

15 Connections

Step	Description
5	If a Bluetooth headset is found for the first time, it should be authenticated by PIN code. 1 Select the found Bluetooth headset from the Devices screen and press the left function key; then select Connect from the pop-up menu. 2 Please get the Bluetooth PIN code of the headset from the user manual of the Bluetooth headset and enter it to the phone. 3 If the connection is successful, a headset icon will be shown on the icon bar.

Now you can use the Bluetooth headset as the connection has been established between your phone and the Bluetooth headset. On the **Devices** screen, press the left function key to pop up a submenu listing the following operations that you can do:

Operation	Description
Connect/ Disconnect	• If the connection between the phone and the Bluetooth headset is not established, you will see Connect on the menu. (Please refer to the above descriptions for how the connection is established.) • If the connection between the phone and the Bluetooth headset has been established, you will see Disconnect on the menu. Selecting it can disconnect from the Bluetooth headset.
Delete	You can delete the Bluetooth from the device list.
Rename	You can rename the Bluetooth device.
Speaker volume	You can adjust the volume of the Bluetooth headset speaker.
Mic volume	You can adjust the volume of the Bluetooth headset microphone.
Device details	You can view the device information of the Bluetooth headset.

Note:

- The device list will keep all the authenticated devices. If your Bluetooth headset is connected for the first time, connection must be established between the phone and the headset by entering the PIN code. From then on you can connect the headset directly to the phone without authentication any more.
- Such operations as the connecting of Bluetooth handfree devices are similar to those of the Bluetooth headset. For details, please refer to the user manual coming with your Bluetooth Bluetooth handfree device.
- Only when the connection has been established can you adjust the volume of the Bluetooth headset.

Bluetooth-Based Data Transfer

You can exchange data between your Bluetooth phone and other Bluetooth devices.

The operating procedures are as follows:

Step	Description
1	Select Switch On/Off and then On from the Bluetooth settings list to enable the Bluetooth device. A Bluetooth device icon will appear on the icon bar.
2	Select the Devices from the Bluetooth Settings list to enter the screen.
3	Select Search from the Devices list screen.

Note:

If you want to exchange data between your phone and another device, that device must support Bluetooth function, and the Bluetooth function must be enabled.

Step	Description
4	When a Bluetooth device is found for the first time, authentication is required. • Select the Bluetooth device that you will exchange data with your phone from the Devices screen and press the left function key; and then select Authent from the pop-up menu. • The data exchange initiator enters the PIN code that is agreed by the two parties to invite the other party to establish connection. On the invitation, the invited party should enter the same PIN code. • If the authentication is successful, the connection will be established between your phone and the other Bluetooth device.
5	Now you can exchange data between your phone and the other Bluetooth devices. Data that can be exchanged by Bluetooth includes the contact entries, Memo Pad records, schedule events and To Do tasks as well as such media files as images, videos, music, ring tones and various data files in the Gallery.

Note:

In transferring data by Bluetooth, the received contacts, Memo Pad records, schedule events and To Do tasks will be saved to the Contacts, Memo Pad application and To Do application, other media and data files will be saved to **Gallery/Personal/Inbox**.

Bluetooth-Based Internet Access

Connecting your phone to a PC through Bluetooth technology enables the PC to use the phone as a modem to establish a dial-up connection to an Internet service provider.

You can get Bluetooth-based Internet access through the Mobile Phone PC Assistant available in the U626 phone package; or you can do it through the built-in Internet wizard of the Windows operating system, or through the Internet access wizard program for driving

15 Connections

the Bluetooth devices on the PC.

Note:

Windows 2000 and Windows XP are supported.

Accessing the Internet through the HUAWEI Mobile Phone PC Assistant

To access the Internet by Bluetooth through the *HUAWEI Mobile Phone PC Assistant* that is available in the U626 phone package, perform the following procedures:

Step	Description
1	• Your PC should support Bluetooth function. • Your USIM card should allow Internet access service.
2	Select a profile from Menu/Connect/Data account , and setting relevant information.
3	Select Menu/Connect/Modem setup/Modem via Bluetooth . Then, select Settings and select the data account to be used.
4	Select Menu/Connect/Bluetooth/Switch on/Off , and then select On .
5	Make sure that, on the PC operating system, the Bluetooth modem exists in the Device Manager/Modem . Run the driver software for Bluetooth on your PC, partner the HUAWEI U626 phone. After finding the HUAWEI U626 dial-up network service, activate the dial-up network service of your U626 phone.
6	Install the HUAWEI Mobile Phone PC Assistant that comes in with your U626 phone package: Insert the CD carrying the application software, select “Install Dial-up Wizard” and click < Continue >. Then follow the prompts to complete the installation.

Step	Description
7	1 Run the U626 Dial-up wizard on the PC. 2 Select <OK> from the pop-up window. 3 Select “New Dialup Connection (Modem)” and press <OK> to confirm. 4 Select the Modem that is connected in Bluetooth mode from the “Modem” list. 5 Enter the information of setting dial-up connection to the Internet provided by the service provider to the “Dialup Setting” field and click <Create>. 6 Select “HUAWEI Phone Connection” on your PC to make dial-up connection.

Bluetooth-based Internet Access by Using the Software Coming with the Bluetooth Drive

You can access the Internet on the basis of Bluetooth by using the software coming with the Bluetooth drive.

Follow these steps to operate:

Step	Description
1	• Ensure your PC has the function of Bluetooth. • Ensure your USIM card supports the Internet access service.
2	Select a data account from Menu/Connect/Data account , and set relevant information.
3	Select Modem via Bluetooth from Menu/Connect/Modem setup . Then select Settings and select the data account to be used.
4	Select On from Menu/Connect/Bluetooth/Switch On/Off .

Step	Description
5	On your PC, open the Bluetooth manager and partner the HUAWEI U626. After finding the HUAWEI U626 dial-up network server, you can access this service.
6	After accessing the dial-up network service successfully, your PC will create “Dial-up Connections” automatically. Then, input the dial-up number “*99#” or “*98#” or other numbers specified by the operator (For more information, please consult the service provider.), and click “Dial”.
7	You can use your PC to access the Internet by your phone.

Note:

For the usages of the Bluetooth manager software, please refer to the user manual.

Other Operations for the Bluetooth

After entering the Bluetooth menu, you can execute the basic settings for the Bluetooth functions.

Select **Connect/Bluetooth** and execute the following operations:

- Switch On/Of: It is used to set the Bluetooth device to **On** or **Off**.
- Rename: It is used to rename your phone.
- Devices allowed: It is used to set what devices are allowed to connect when the Bluetooth function is used:

Option	Description
None	Do not respond to the requests for authentication.
In the list	Respond to requests for authentication from the devices in the list only.
All devices	Respond to requests for authentication from any devices.

- Local information: It is used to view the relevant information of your phone, such as the device name, device address, device type and the supported services.

USB

With the USB cable, you can synchronize data between your phone and PC, use your phone to surf the Internet and read the memory card.

Caution:

- To use the USB cable, please operate abiding by the following rules, otherwise, your phone or PC may be damaged: To connect your phone and PC with the USB cable, connect to the phone at first, and then connect to the PC; To disconnect your phone and PC from the USB cable, disable the *HUAWEI U626 MOBILE PHONE PC Assistant* at first, and then disconnect from the PC, and disconnect from the phone at last.
- When you use the USB cable to connect your phone and a PC, if the PC cannot recognize the U626 phone, shut down the PC and restart it a moment later. Then, connect the USB cable to the PC.
- Do not plug the USB cable in and out the U626 phone frequently.

USB-Based Synchronization

The U626 phone supports the synchronization requests from a PC to your phone.

With the USB cable and the *HUAWEI U626 MOBILE PHONE PC Assistant* coming with your phone, your phone can communicate with a computer. You can backup and edit the contact entries and messages saved on your phone and USIM card on a computer. You can also synchronize contacts, schedule events and To Do tasks between your phone and the Outlook or the Outlook Express.

Follow these steps to operate the USB-based synchronization with your U626 phone.

Step	Description
1	Install the <i>HUAWEI U626 MOBILE PHONE PC Assistant</i> coming with your phone: Insert the disk and select “Install HUAWEI PC Assistant” and “Install USB Data Cable Driver”, then, click <Continue> and follow the guide to complete the installation.
2	Select Menu/Connect/Modem setup , and then set to Modem via USB .
3	Connect your phone and PC with the USB cable.

Step	Description
4	Run the application program of the <i>HUAWEI U626 MOBILE PHONE PC Assistant</i> on the PC.
5	Now you can operate the synchronization.

Note:

For details of the operation, please refer to the Help of the *HUAWEI U626 MOBILE PHONE PC Assistant*.

Note:

While running the *HUAWEI U626 MOBILE PHONE PC Assistant* on the PC, you can select “Communication” from the “Options”, and then click <Default> to connect the port corresponding to the USB Modem.

Accessing the Internet by USB

Connecting your phone and PC with the USB cable enables the PC to use the phone as a modem to establish a dial-up connection to the Internet.

To access the Internet by using the USB, two ways are available: one is to use the HUAWEI U626 Mobile Phone PC Assistant coming with the U626 phone; the other is to use the Windows operation system to set the service.

Note:

Windows 2000 and Windows XP are supported.

Using HUAWEI U626 Mobile Phone PC Assistant to Access the Internet through USB Cable

To use the *HUAWEI U626 Mobile Phone PC Assistant* coming with the U626 phone to access the Internet, follow these steps:

Step	Description
1	Ensure that your USIM card supports the Internet access service.
2	Select the Menu/Connect/Data account , and then select a profile from the list to set relevant information.
3	Select Menu/Connect/Modem setup , and set to Modem via USB . Then, select Settings to select a data account to be used.
4	Install the HUAWEI Mobile Phone PC Assistant that come in with your U626 phone package: Insert the CD carrying the application software, select “Install USB Data Cable Driver” and “Install Dial-up Wizard” and click <Continue> . Then, follow the prompts to complete the installation.
5	Connect your phone and PC with the USB cable.
6	Confirm there is USB Modem in the Modem of the Device Manager of your PC.
7	1 Run the U626 Dial-up wizard on the PC. 2 Select <OK> from the pop-up window. 3 Select “New Dialup Connection (Modem)” and press <OK> to confirm. 4 Select the Modem that is connected in USB mode from the “Modem” list. 5 Enter the information of setting the dial-up connection to the Internet provided by the service provider to the “Dialup Setting” field and click <Create>. 6 Select “HUAWEI Phone Connection” on your PC to make dial-up connection.

Using Windows OS to Set the Function of Accessing the Internet with Your Phone

You can also connect your phone and PC with the USB cable, and then use the Windows operating system to set the function of accessing the Internet by your phone. Follow these steps:

Step	Description
1	Ensure that your USIM card supports the function of accessing the Internet.
2	Select a data account from Menu/Connect/Data account , and set relevant information.
3	Select Modem via USB from Menu/Connect/Modem setup . And select Settings to select a data account to be used.
4	Install the <i>HUAWEI U626 Mobile Phone PC Assistant</i> coming with your U626 phone package: Insert the CD carrying the application software, select “Install USB Data Cable Driver” and click < Continue >. Then, follow the prompts to complete the installation.
5	Connect your phone and PC with the USB cable.
6	Ensure that there is “USB Modem” in the “ Modem ” of the “ Device manager ” of your PC.
7	On your PC, you can select “ Network Connections ” from the “Control Panel” and click Create a new connect . Then you can follow the guides to create a new connect.
8	Execute the new connection to dial up the Internet.

SD/MMC Card Reader

You can use the USB cable to read the files saved on the SD/MMC card.

15 Connections

Select **Menu/Connect/SD/MMC card reader**, and press  to access it.

Follow these steps to use the SD/MMC card reader:

- 1 Insert the SD/MMC card to your phone.
- 2 Select **Connect/SD/MMC card reader/On**.
- 3 Connect your phone and PC with the USB cable.
- 4 “**Found New Hardware**” is displayed on your PC, and an icon indicating a new mobile memory driver appears, by which you can operate the data in the SD/MMC card on your PC.

Note:

- The function of SD/MMC card reader and the other functions using USB cable are incompatible. If you enable the SD/MMC card reader, the other functions using the USB cable will be unavailable at once. If you need to recover the other USB functions, disable the function of card reader.
- After the function of SD/MMC card reader is enabled, you can not access the SD/MMC card through the **Gallery** of your phone. To access it, disable the function of SD/MMC card reader at first.
- Since the function of SD/MMC card reader is enabled, if your phone had been restarted and then you want to use the USB Modem function, you need to disable the function of SD/MMC card reader and set the USB Modem again.

Notes to the Functions of the Connections

Some of the data connection functions of the U626 phone can not be used simultaneously. It is described in detail as the following:

	Bluetooth headset	Bluetooth Modem	Bluetooth-based synchronization	SD/MMC card reader	USB Modem	USB-based synchronization
SD/MMC card reader	Supported	Supported	Supported	--	Unsupported	Unsupported
USB Modem	Supported	Unsupported	Supported	Unsupported	--	Unsupported
USB-based synchronization	Supported	Supported	Unsupported	Unsupported	Unsupported	--
Bluetooth headset	--	Unsupported	Unsupported	Supported	Supported	Supported
Bluetooth Modem	Unsupported	--	Supported	Supported	Unsupported	Supported
Bluetooth-based synchronization	Unsupported	Supported	--	Supported	Supported	Unsupported

Data Account

You need to set the data account before you use your phone to access the Internet and send multimedia messages or Emails. The setup of the data account is different due to different networks and operators. For details, please consult the local network operator.

Select **Menu/Connect/Data account**, the U626 phone provides five profiles for you to set.

15 Connections

- 1 Select a data account and press  to access the editing screen, and then use the up/down scroll key to switch among the setting items. Press  to access the editing status.
- 2 When the setting is finished, select **Save**.
- 3 On the **Data account** screen, select a profile and then select **Rename** to rename the data account.

16 Applications (APPS)

This phone supports Java. You may download games or other applications and run them on the phone.

Applications & Games

Games preset on your phone include BlockCity, DragonFire and FiveStones.

For details, please refer to the Help information of each game on the phone.

You may download the latest Java games and applications by means of WAP. These downloaded games and applications are automatically saved to the Applications and games folder.

Select a Java game or an application and then press  to run it. You can mute the music by pressing the Record key and adjust the volume by pressing the Volume key.

Select **Options**, and then you have the following options:

Update

You can update the downloaded Java games and applications. However, you cannot update the three built-in games in the U626 phone.

16 Applications (APPS)

Delete

You can delete the downloaded games and applications. However, you can not delete the three built-in games.

Properties

You can view the properties of Java games and applications.

New Folder

You can create folders to classify and manage the downloaded Java games and applications. However, the three built-in games cannot be moved to other folders. The U626 phone supports to create 50 folders at most.

Move

You can move downloaded Java games and applications from one folder to another.

Delete Folder

You can delete the folders. Please move the contents in them away before deleting them.

Permission

You can set whether your Java games and applications are protected (for example, to access the Internet), or get your permission before implementing the function of being protected.

Download More

You can select a bookmark from the Download catalog to open a corresponding link to download games or applications you need. You can also open a Web page from the Browser

to download Java games and applications. To download, you have to configure the network. For more information, please refer to “Browser/Select Profile” on page 113.

Entering the **Download More**, the screen displays the preset or created bookmark(s).

Entering a Bookmark Link

Press the up/down scroll key to highlight a bookmark and press  to enter it.

Creating a Bookmark

Select **Options/New**, you can enter the screen for creating a bookmark. Enter a bookmark name and bookmark URL, and then select **Save**. The U626 supports to create up to 10 bookmarks.

Modifying a Bookmark

You can modify a bookmark created by yourself. To do this, select **Options/Modify**.

Deleting a Bookmark

You can delete a bookmark created by yourself. To do this, select **Options/Delete**, and then select **Yes** to confirm the deletion.

Setting to Default

The first bookmark on the download list on the “Download” screen is the default bookmark. However, you can change the default bookmark setting. Select a bookmark that you want to make it into a default and then select **Options/Default**.

Viewing Details

This option is used to view the details of a bookmark: “Bookmark Name” and “Bookmark URL”.

Memory Status

Selecting this option, you can view the current memory status of your phone, including the occupied memory space and the total available memory space.

17

STK Services

The U626 supports STK functions. The contents depend on the USIM card you are using. For more information, please consult your USIM card provider.

18 Settings

Selecting **Menu/Settings**, you can change the settings of your phone.

Call Setup

You can set the features for making calls, including the following options: Auto redial, Answer mode, Call waiting, Auto answer, Call forwarding, Call barring, Calling ID, call barring password.

Auto Redial

It is used to redial automatically after a failed dialing.

Answer Mode

It is used to decide the mode for answering an incoming call. You can set an answering mode for your phone: “Open flip”, “Any key” or “Send key”.

Call Waiting

It is used to enable or disable the call waiting function. You can also view whether the call waiting function is enabled by checking the status.

Auto Answer

It is used to select a way for automatically answering calls:

Select **Auto answer** from the **Call setup** screen and then press .

Option	Description
Immediate answer	To answer an incoming call immediately.
SMS	To send a text message that is preset and chosen from the “Text template” to the caller automatically when a call is coming.
Recorded message	To answer an incoming call by playing recorded voice automatically.
Disable auto answer	To disable the auto answer function.

Call Forwarding

It is used to select a mode for forwarding incoming calls.

Selecting **Call forwarding** from the **Call setup** screen and then press , you will have the following options:

All Calls

From the **All calls** menu, select one from the four items: “Voice call”, “Fax call”, “Data call”, and “All services”. And then you have the following options for each:

Option	Description
Activate	Enter a number to be forwarded to and press  . Since then, all the incoming calls will be forwarded unconditionally to that number.

Option	Description
Deactivate	To cancel the service of forwarding all calls.
Check status	To view the current status of the service of forwarding all calls.

If out of Reach

From the **If out of reach** menu, you can select one from the four items: “Voice call”, “Fax call”, “Data call” and “All services”. And then you have the following options for each:

Option	Description
Activate	Enter a number to be forwarded to and press  . Now all the unreachable calls will be forwarded unconditionally to this number.
Deactivate	To cancel the service of forwarding on unreachable calls.
Check status	To view the current status of forwarding unreachable calls.

If Busy

From the **If busy** menu, you can select one from the four items: “Voice call”, “Fax call”, “Data call” and “All services”. And then you have the following options for each:

Option	Description
Activate	Enter a number to be forwarded to and press  . Now all the incoming calls will be forwarded unconditionally to this number when the phone is busy.
Deactivate	To cancel the service of forwarding when the phone is busy.
Check status	To view the current status of forwarding when the phone is busy.

If not Answered

From the **If not answered** menu, you can select one from the four items: “Voice call”, “Fax call”, “Data call” and “All services”. And then you have the following options for each:

Option	Description
Activate	You can select a forward call delay time and press  to enter a number to be forwarded to, and then press  to confirm. Now the unanswered calls will be forwarded to this number according to the delay time you have set.
Deactivate	To cancel the service of forwarding unanswered calls.
Check status	To view the current status of forwarding unanswered calls.

Note:

It is possible that the network you are using does not support you to select **Auto** from the delay time list if not answered.

Disable All

From the **Disable all** menu, you can select one from the four items: “Voice call”, “Fax call”, “Data call” and “All services”. And then press  to disable all services of call forwarding.

Call Barring

It is used to set the call barring mode for the phone.

Select **Call barring** from the **Call setup** menu, and then press . You will have the

following options:

All Outgoing Calls

From the **All outgoing calls** menu, you can select one from the four items: “Voice call”, “Fax call”, “Data call” and “All services”. And then you have the following options for each:

Option	Description
Activate	Enter call barring password and press  to start the call barring service so that the phone cannot be used to make calls.
Deactivate	Enter call barring password and press  to cancel the call barring service so that the phone resumes call service.
Check status	View whether the phone has started the call barring service for barring all outgoing calls.

Intl. Calls

From the **Intl. calls** menu, you can select one from the four items: “Voice call”, “Fax call”, “Data call” and “All services”. And then you have the following options for each:

Option	Description
Activate	Enter call barring password and press  to start the call barring service so that the phone cannot be used to make international calls.
Deactivate	Enter call barring password and press  to cancel the call barring service so that the phone can be used to make international calls again.
Check status	View whether the phone has started the call barring service for making international calls.

Intl. Calls Except to Home Country

From the **Intl. calls except to home ctry.** menu, you can select one from the four items: “Voice call”, “Fax call”, “Data call” and “All services”. And then you have the following options for each:

Option	Description
Activate	Enter call barring password and press  to start the service of barring Intl. Calls Except to Home Country. Then, you cannot dial out international call numbers except to those of the host countries with your phone when it is in international roaming.
Deactivate	Enter call barring password and press  to cancel the service of barring Intl. Calls Except to Home Country. Then, you can dial out international call numbers with your phone when it is in international roaming.
Check status	View whether the phone has enabled the service of barring Intl. Calls Except to Home Country

All Incoming Calls

From the **All incoming calls** menu, you can select one from the four items: “Voice call”, “Fax call”, “Data call” and “All services”. And then you have the following options for each:

Option	Description
Activate	Enter call barring password and press  to start the call barring service so that all the incoming calls will be barred.
Deactivate	Enter call barring password and press  to cancel the call barring service so that the phone can be used to answer calls.
Check status	View whether the phone has started the call barring service for barring all incoming calls.

Incoming Calls when Abroad

From the **Incoming calls when abroad** menu, you can select one from the four items: “Voice call”, “Fax call”, “Data call” and “All services”. And then you have the following options for each:

Option	Description
Activate	Enter call barring password and press  to start the call barring service so that the phone cannot be used to answer calls when it roaming out of the home country.
Deactivate	Enter call barring password and press  to cancel the call barring service so that the phone can be used to answer calls when it is roaming out of the home country.

18 Settings

Option	Description
Check status	View whether the phone has started the call barring service for barring incoming calls when it is roaming out of the home country.

Disable All

From the **Disable all** menu, you can select one from the four items: “Voice call”, “Fax call”, “Data call” and “All services”, and enter call barring password. Then, press  to cancel all call barring services.

Calling ID

This option allows you to select whether your phone number will be shown on the called phone.

Select **Calling ID** from **Call setup** screen and press , and then you will have the following options:

Option	Description
Auto	Whether your phone number will be shown on the called phone depends on the network.
Unhidden	Your phone number will be shown (if the network has enabled this service).
Hidden	Your phone number will not be shown (if the network has enabled this service).

Call Barring Password

This function is used to change the password for call barring.

Select **Call barring password** from the **Call setup** screen and then press . Now you can change the call barring password.

Operation	Description
Enter old password	Enter the old call barring password (It is provided by your network operator if it is the first time for you to change the password).
Enter new password	Enter a new call barring password (which is preferred by yourself).
Re-enter new password	Enter once again the new call barring password, and then press  or the left function key to save it.

Video Call Setup

Here, you can perform some common settings for the V-Call functions:

P-in-P

During a video call, your image can be shown on your phone. You can select **P-in-P** function to arrange the positions of your image. You can also choose to close your image window.

Zoom Display

With this option you can adjust the sizes of both parties' images shown on your phone.

Switch Display

With this option you can switch between image windows: to display your image in the small window and the other party's image in the large window, or vice versa.

Image Quality

Here, you can choose Best quality or More smooth for the image quality.

Auto Voice Call

If the other party's phone does not support the V-Call service, with this option, your phone will make a voice call automatically.

Sound and Vibration

With the **Sound and vibration** option, you can set the audio parameters of your phone such as volume settings, vibration settings, mute settings, flip tone, prompt tone, startup and shutdown tone, ring tones for incoming calls and incoming messages.

Select **Sound and vibration** from **Settings** to enter the menu:

Volume

This option is used to set the volume of ring, earpiece and key pressing tones:

- Incoming call: in charge of the volume of ring for prompting incoming calls and messages, as well as the volume of the alarm clock ring.

- Earpiece: in charge of the volume of the earpiece.
- Key tone: in charge of the volume of pressing keys.

Press the up/down scroll key to adjust the volume.

Vibration

This option is used to enable or disable the vibration prompt mode.

Silent

This option is used to enable or disable the silent mode.

Flip Tone

This option is used to set whether to make a sound when you fold/unfold your phone.

Prompt Tone

This option is used to set whether to make a sound on a prompt.

Startup and Shutdown Tone

This option is used to set whether to be accompanied by music when you switch on or off the phone.

Incoming Call

This option is used to select a ring tone for prompting an incoming call.

Incoming Message

This option is used to select a ring tone for prompting an incoming message.

Display

From here you can set parameters related to the display, including the brightness of the screen, the backlight delay time and on/off of the keypad backlight.

Brightness

It is used to set the brightness of the screen.

Backlight Delay

It is used to set the backlight delay time of the screen.

Keypad Backlight

It is used to turn on or off the keypad backlight.

Colour Themes

With this option you can change the color theme: You can select a different color theme for the menu, prompt bar, title bar and the cursor.

Wallpaper

With this option you can select a type of wallpaper for the Home screen.

ON and OFF Setup

With this option you can set features related to switching on/off the phone. On the **ON and OFF setup** screen, select **Auto ON and OFF** and press  to access it:

Auto ON and OFF

This option is used to set your phone to power on or off automatically.

Step	Operation
1	Select to enable or disable the function of Auto ON and OFF . If you enable the function of Auto ON or Auto OFF , you need to set the cycle time for them.
2	Set the time for auto powering on and off.
3	Select Save to save your settings.

Welcome Note

On the “Welcome note” screen, you can enter a welcome note that appears on the screen when you switch on the phone.

Power On/Off Animation

On the “Power On/Off Animation” screen, you can select different power on/off animation.

Profiles

With this option you can select different profiles for the phone so that it fits different

18 Settings

environmental situations.

You can access the Profiles function and see the profiles list by select **Profiles** from the **Menu** or by selecting **Profiles** from the **Settings**.

You can select a profile and press the left function key to edit it. Then, press  to activate this profile.

The U626 phone provides eight profiles including Normal, Silent, Meeting, Activity, Car, Off Line, My profile 1 and My profile 2.

Phone Setup

With this option you can change the settings related to the phone, including Language, Network, Security, Date format, and Date and time.

Language

The U626 phone supports three languages: Simplified Chinese, Traditional Chinese, and English.

Select **Settings/Phone setup/Language** from the **Menu**, and press  to select a language:

Setup	Description
Auto	This option is used to set the language to be used in the phone according to the language used in your USIM card: • If the language used in the USIM is Simplified Chinese, the language used in the phone will be set to the Simplified Chinese automatically. • If the language used in USIM is Traditional Chinese, the language used in the phone will be set to the Traditional Chinese automatically. • If the language used in USIM is neither Simplified Chinese nor Traditional Chinese, the language used in the phone will be set to English automatically.
Simplified Chinese	Set to the Simplified Chinese.
Traditional Chinese	Set to the Traditional Chinese.
English	Set to English.

Network

From here you can change settings related to the network.

Select **Network** from the **Phone setup** screen and press . Then, you have the following options for setting the network:

18 Settings

Setting	Description
Mode	You can specify a network from the following: • WCDMA • GSM • Auto If you select “Auto”, the phone will automatically search for the signal of the network where your phone is located.
Network selection	You can select a network run by different operators. The phone provides you with two modes: • Auto • Manual The “Auto” mode enables the phone automatically to search for networks and register it to a network. The “Manual” mode enables the phone to search for networks, after which you can specify a network from a list for register.
Roaming	You can set your phone to be in roaming status.

Security

Here you can change settings related to phone security.

Select **Security** from **Phone setup**, and press  to confirm. Then, the following security setting items appear:

Reset

If you select **Reset**, the settings you performed will be reset to the default ones preset by the manufacturer.

Password lock

This menu is used to enable or disable the “Phone password locked” and “PIN1 locked” modes.

Follow these steps:

Operation	Description
Phone password locked	1 Select the option and press  to enter. 2 Press the up/down scroll key to select On or Off. 3 Then, press  to enter. 4 Enter the phone password and finish the setting.
PIN1 locked	1 Select the option and press  to enter. 2 Press the up/down scroll key to select On or Off. 3 If the selected status is the same as the current status, press  to set directly the PIN1. However, if the selected status is different from the current status, after pressing  you need enter the PIN1 code.

Change password

Here you can modify the phone password and PIN1 code.

Select **Change password** from **Security settings**, and then press , you will have the following options:

18 Settings

Operation	Description
Change phone password	1 Enter the old phone password. 2 Enter a new phone password. 3 Enter the new phone password again and finish the setting.
Change PIN1	1 Enter the old PIN1 code. 2 Enter a new PIN1 code. 3 Enter the new PIN1 code again and finish the setting.

Date format

This option is used to change the display format of the system time of the phone.

Date and time

This option is used to change the system time of the phone.

19

Warnings and Precautions

Electronic Device

Switch your phone off near high-precision electronic devices. The phone may affect the performance of these devices.

Such devices include hearing aids, pacemakers, fire alarm systems, automatic gates, and other automatic-control devices. If you are using an electronic medical device, consult the device manufacturer and confirm whether the radio wave affects the operation of this electronic device.

Hospital

Pay attention to the following points in hospitals or health care facilities:

- Do not take your phone into the operating room (OR), intensive care unit (ICU), or coronary care unit (CCU).
- Switch your phone off near medical devices.
- Observe any instructions wherever the use of mobile phones is prohibited.

Traffic Safety

- Do not use your phone while driving. Secure the phone on its holder. Do not place the phone on the seat or other places where it can get loose in a sudden stop or collision.

19 Warnings and Precautions

- Observe the rules and regulations of airline companies. Switch your phone off before boarding an aircraft.

Operating Environment

- Do not place magnetic storage media such as magnetic cards and floppy disks near the phone. Radiation from the phone may erase the information stored on them.
- Do not put your phone, battery, or other accessories in containers with strong magnetic field, such as the induction cooker and microwave oven. Otherwise, circuit failure, fire, or explosion may result.
- Do not leave your phone, battery, or charger in a high-temperature place or use them in a place with flammable gas. Otherwise, malfunction of the products, fire, or explosion may result.
- The phone, battery, and charger are not water-resistant. Keep them dry. Otherwise, short-circuit and malfunction of the product or electric shock may result.
- Do not subject your phone, battery, and charger to serious collision or shock. Otherwise, battery leakage, phone malfunction, overheat, fire, or explosion may result.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the phone.
- Do not place the phone in the area over the air bag or in the air bag deployment area. Otherwise, the phone may hurt you owing to the strong force when the air bag inflates.
- Do not use your phone that is being charged when there is lightning strike.
- Put your phone, battery, and charger in places beyond the reach of children. Do not allow children to use the phone, battery, or charger without guidance.
- Do not touch the antenna when a call is going on. Touching the antenna may affect call quality and cause the phone to operate at a power level higher than needed.
- Your phone is designed to conform to the authoritative international radio frequency (RF) specifications. Use phone accessories approved by Huawei only.

Emergency Call

You can use your phone for emergency calls. However, connections in all conditions cannot be guaranteed. You should never rely solely on the phone for essential communications.

Battery

- If the battery fluid gets into eyes, do not rub them. Wash with clean water and seek medical assistance immediately.
- If the battery fluid contacts skin or cloth, wash with clean water immediately to avoid irritation to the skin.
- Do not dispose of the battery in fire. Otherwise, the battery may ignite or explode.
- When installing the battery on your phone, do not push the battery by force lest battery fluid leak out or the battery crack.
- Do not connect two poles of the battery with metallic materials such as cables.
- Do not disassemble the battery or solder the battery poles. Otherwise fluid leakage, overheat, fire, or explosion may result.
- If there is battery leakage, smoke, or strange smell, stop using the battery and keep it away from open flame to avoid fire or explosion.
- Dispose of the battery according to local laws or regulations.

Charger

- Use AC power as specified for the charger. Any violation of this rule may result in fire or malfunction of the charger.
- Do not short-circuit the charger. Short-circuiting the charger may cause fire or malfunction of the charger.
- Remove the dust on the power plug regularly.

19 Warnings and Precautions

- Do not use worn-out power cords. Otherwise, electric shock, short-circuiting of the charger, or fire may result.
- Do not put the charger near the container filled with liquid such as water. If the liquid comes into the charger, electrical leakage or other faults may result.
- If the liquid such as water comes into the charger accidentally, remove the plug of the charger from the socket immediately.
- Disconnect the charger from the socket before cleaning or maintaining it. Otherwise, electric shock or short-circuiting of the battery or charger may result.
- Ensure the plug of the charger is properly inserted into the power socket when charging the battery. Improper insertion may result in electric shock, fire, or explosion.
- Do not place any heavy object on the power cord of the charger. Do not damage, change, or pluck the power cord.

Using the USB Cable

To use the USB cable, you need operate abiding by the following rules, otherwise, your phone or PC may be damaged:

- To connect your phone and PC with the USB cable, connect to the phone at first, and then connect to the PC;
- To disconnect your phone and PC from the USB cable, disconnect from the PC at first, and then disconnect from the phone.

Rules for Exposure to Radio Frequency Energy

The phone is designed not to exceed the limits for exposure to RF energy set by ICNIRP (International Commission on Non-ionizing Radiation Protection). The limits include a margin designed to assure the safety of all persons, regardless of age and health.

The rules for exposure to radio frequency energy adopt SAR as the measurement unit. SAR is measured with a standard mode. That is, the wireless device is transmitted with

authorized maximum transmit power in all used bands. The SAR limit suggested by ICNIRP is 2W/kg (10 g Average). The maximum SAR value of the U626 mobile phone is 0.599 W/kg (10g Average) when it is put beside your ear during a call.

Environmental Protection

Please abide by the local laws in disposing of the package materials of your handset, consumed batteries and used handsets, and try to recycle them.

20

Abbreviations and Acronyms

DTMF	Dual-Tone Multi-Frequency
GPRS	General Packet Radio Service
GSM	Global System for Mobile communications
MMC	Multimedia Card
OTA	Over-The-Air
PIN	Personal Identification Number
PUK	PIN Unblocking Key
SD	Secure Digital Card
SAR	Specific Absorption Rate
STK	SIM Tool Kit
URL	Universal Resource Locator
USB	Universal Serial Bus
WAP	Wireless Application Protocol
WCDMA	Wideband code division multiple access

Ver: V1.12 BOM: 31015013