

HUAWEI Y7P

User Guide



Contents

Exciting Features

Featured Usage Tips	1
Camera Tips	1
More Features	4

New Device

New Device Configuration	7
--------------------------	---

Gestures and Operations

Smart Recognition	9
Screenshots and Screen Recording	10
Split-screen	12

Home Screen

Navigation Bar	15
Use Shortcut Switches to Quickly Enable Frequently Used Features	16
Notification Panel and Status Bar	16
Screen Lock and Unlock	19
Go Back to Basics with Simple Mode	20
Home Screen Management	21

Contacts

Share Contacts Using Electronic Business Cards	23
Search Contacts	24
Managing Contacts	24

Dialling

Basic Calling Functions	26
VoLTE	27
Use VoWi-Fi for a New Calling Experience	28

Camera

Basic Camera Functions	29
AI enhanced , Intelligent Photo Scene Identification	31
Use Portrait Mode to Shoot Like a Pro	31
Use Wide Aperture Mode to Highlight Your Shooting Subjects	32
Use Panorama Mode to Take Panoramic Photos	32
Use Pro Mode to Take Scenic Photos	33
Light Painting Mode	34
More Capture Modes	39

Gallery

	Photo Management	41
Optimiser		
	Use Optimise	43
	Manage Mobile Data Usage	43
	Use Auto-launch to Prevent Unwanted App Activities	43
	Enable Virus Scanner	44
Email		
	Add Email Accounts	45
	Manage Email Accounts	45
	Manage VIP Email Contacts	46
	Import Important Events to Calendar	46
Calendar		
	View Global Holidays	47
Clock		
	Use the Clock	48
Notepad		
	Manage Your Notes to Keep Your Records in Order	49
Utilities		
	Check Your Screen Time	50
	Recorder	50
	Phone Clone	51
Device Connection		
	Bluetooth	53
	Device Projection	55
	Transfer Data between Your Phone and Computer	56
	Huawei Share	57
Security and Privacy		
	Face Unlock	60
	Fingerprint	61
	Enable or Disable Location Services	62
	Enable App Lock	63
Wi-Fi and Network		
	Wi-Fi	64
	Share Your Mobile Network with Other Devices	66
Apps and Notifications		
	App Twin: Log in to Two Social Media Accounts at Once	67
	Customise App Permissions to Use Your Device Your Way	67

Sound and Display

Set Up Do Not Disturb Mode	68
Configure the Sound Settings	68
Enable Eye Comfort Mode	69
More Display Settings	69

Storage

Enable Memory Cleanup	71
-----------------------	----

Smart Assistance

Access Device Functions from Anywhere with Navigation Dock	72
--	----

System

Change the Input Method	73
Accessibility	73
General Settings	73

System Update

Update the Device System Online	76
---------------------------------	----

Legal Notice

Legal Notice	77
Personal Information and Data Security	79
Obtaining help	79
For more information	79

Exciting Features

Featured Usage Tips

Access Device Functions from Anywhere with Navigation Dock

 
In order to close an app or return to the home screen, you must use the navigation bar at the bottom of your device. You can enable the Navigation dock feature on your device to avoid using navigation buttons and to comfortably operate your device with one hand.

Open  **Settings**. Go to **System > System navigation > Navigation dock** and enable **Navigation dock**. The Navigation dock will appear on the screen. You can then drag it to your preferred location. The Navigation dock can perform the following actions:

- **Back:** Touch the Navigation dock once to go back one step, or touch it twice to go back two steps.
- **Home:** Touch and hold the Navigation dock and then release it to go to the home screen.
- **View background apps:** Touch and hold the Navigation dock and then swipe left or right to view any apps that are running in the background.

Use Shortcut Switches to Quickly Enable Frequently Used Features

Want to quickly enable or disable mobile data or hotspot? You can enable frequently used features by using shortcut switches.

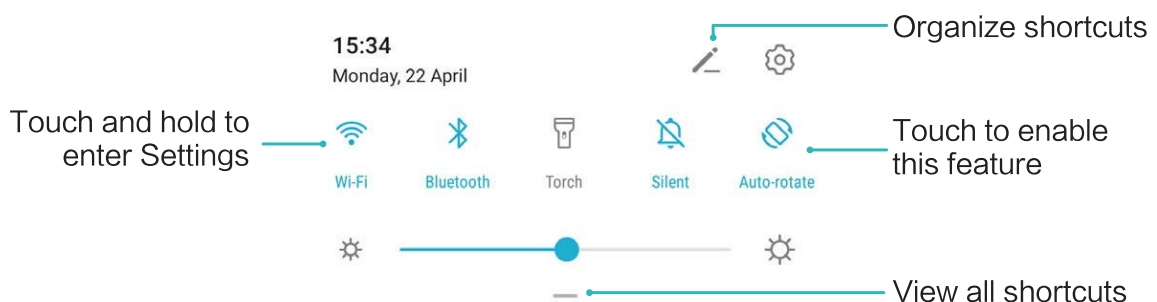

Camera Tips

AI enhanced, Intelligent Photo Scene Identification

AI enhanced can automatically identify your current photography scene and intelligently adjust the colour and brightness of the photo, so you don't need to repeatedly adjust your camera for the perfect shot.

AI enhanced is a preset camera feature on your device that intelligently identifies your current photography scene and automatically adjusts the colour and brightness of your photo to help you achieve better effects.

AI enhanced provides you with the following features:

- **Intelligently identifies photographing scenes and improves photo effects:** **AI enhanced** supports multiple scenes, such as the stage, beach, blue sky, greenery, and text scenes. After smart identification, **AI enhanced** automatically adjusts the colour and brightness of the camera and recommends an optimal mode (such as the portrait, greenery, or text mode) to improve photo effects.
- **Enable AI enhanced to automatically configure and adjust camera settings:** When you open the camera and enter Standard camera mode, touch  to enable **AI enhanced** as required. Once enabled, this feature will intelligently identify the photography scene, which saves you the trouble of repeated manual adjustments.
- **AI enhanced** is only available when you take photos using the rear camera.
- **AI enhanced** is automatically disabled when you switch to Portrait mode, Wide aperture mode, or Moving picture mode.

Use Portrait Mode to Shoot Like a Pro

Go to  **Camera > Portrait**, adjust the following settings, then touch  to take a portrait.

- **Blur and lighting effects:** Touch the  icon in the viewfinder and select a blur or lighting effect.
 - A light source (such as a neon or street light) in a relatively well-lit background will contribute to better results. Taking photos at long distance will reduce the effect.
- **Beauty effect:** Touch  in the viewfinder and drag the slider to adjust beauty settings. A larger value will produce a more distinct beauty effect.
 - To disable the beauty effect, touch the  icon in the viewfinder and drag each setting to its lowest value.

Use Panorama Mode to Take Panoramic Photos

Panoramas provide a wider viewing angle than ordinary photos, letting you take sweeping landscape shots.

To capture a panorama shot, the camera takes multiple photos of objects within our visual field and stitches them together into a single photo.

- When taking a panorama, find a wide, open space that is some distance away from the subject and try to avoid backgrounds that are all in one colour.

- 1 Go to  **Camera > More > Panorama**.
- 2 Touch  at the bottom of the screen to configure the shooting direction.
- 3 Hold your Phone steady, and then touch  to start shooting. Slowly move the Phone in the direction indicated, holding the device steady and ensuring that the arrow stays level with the centre line.

- 4 Touch  when you are finished. The camera will automatically stitch the photos together to create a panorama.



Use Pro Mode to Take Scenic Photos

Want to make your scenic photos more vibrant and interesting? Use Pro mode to take unique and personalised scenic photos.

Go to  **Camera > More > Pro** to enter Pro mode.

Select a metering mode based on the shooting subject: Touch , and select a metering mode.

Metering Mode	Application Scenario
Matrix	Broad landscapes and seas
Centre	The subject is in the centre of the picture, and stands out from the background.
Spot	The subject to be highlighted in the picture is relatively small, such as a flower or a tree.

Adjust brightness based on the shooting environment:

- **Adjust ISO:** Touch ISO , and drag the ISO slider to adjust its value.
 -  To avoid excessive noise, the recommended ISO is below 400. The recommended ISO for the daytime is between 100 and 200 and around 400 for night scenes.
- **Adjust the shutter speed:** Touch S (shutter speed), and drag the shutter speed slider to your desired speed.
 -  The recommended shutter speed for static scenes (such as mountains) is between 1/80 and 1/125, and faster for moving subjects (such as waves). For best results, use a tripod when shooting a moving subject.
- **Adjust exposure compensation:** Touch EV , and drag the EV slider to your desired value.

Adjust AWB: Touch AWB , and drag the AWB slider to your desired value.

- When shooting under sunlight, you can select . In a weak light environment, you can select .
- Touch  to adjust the colour temperature. If you want to give your photo a cosy, nostalgic tone, increase the K value. For a cold, calm or futuristic tone, lower the K value.

Adjust AF based on the shooting subject: Touch , and drag the AF slider to your desired value.

Focusing Mode	Application Scenario
AF-S mode	Static scenes (such as mountains)
AF-C mode	Moving scenes (such as flowing water and waves)
MF mode	Protruding objects (such as a close-up of a flower)

Hold your device steady when shooting: Touch  and enable **Horizontal level**. After this feature is enabled, two horizontal guiding lines will appear on the viewfinder. When the dotted line overlaps with the solid line, the camera is horizontally aligned.

- Some options in Pro mode may change after you modify settings.
- The aforementioned recommended settings are for reference only. You may adjust them based on the actual usage conditions to achieve your desired effect.

More Features

Enable App Lock

App lock allows you to set a password for your important apps. Once you restart your device or unlock the screen, you will be asked to enter your App lock password when opening these apps. App lock adds an extra layer of protection for your private information and prevents unauthorised access to important apps on your device.

Enable App lock: Open  **Settings**. Go to **Security & privacy > App lock**. When you first access App lock, select **Lock screen password** or **Custom PIN** as your **App lock** verification password. Enter your password as prompted and on the **App lock** screen, toggle on the switch for the apps you want to lock.

Set your App lock password: Touch  on the **App lock** screen, then touch **Password type**. Select **Lock screen password** or **Custom PIN**.

Set Your Home Screen Wallpaper

Tired of default wallpapers? Set a photo you like as your home screen wallpaper to personalise your home screen.

Open  **Settings**, and then go to **Home screen & wallpaper > Wallpaper**. You can:

Set a picture as your home screen wallpaper: Touch **Gallery** or select a preset wallpaper in your device, and follow the onscreen instructions to select **Lock screen**, **Home screen** or **Both**.

Set a photo as your wallpaper from Gallery: Have a great photo you want to set as your wallpaper? In  **Gallery**, open the photo that you like, go to  > **Set as** > **Wallpaper**, and follow the onscreen instructions to set the photo as your home screen wallpaper.

Manage Your Home Screen Widgets

Want to quickly add widgets such as screen lock, weather, notepad, clock, contacts, or calendar to your home screen? You can add, move or delete home screen widgets to tidy up your home screen and ease your usage experience.

Add widgets: Pinch in with your fingers on the home screen to enter home screen editing mode. Touch **Widgets**, touch and hold a widget and drag it to an empty area on the home screen, or touch the widget you want.

-  Check that there are enough empty spaces on the home screen for the widget. If there is not enough space, add an empty screen page or free up some space on the current home screen page.

Delete widgets: Touch and hold a widget on the home screen until your device vibrates, and then select **Remove**.

Move widgets: Touch and hold a widget on the home screen until your device vibrates. Drag the widget to any position on the screen.

Use App Drawer to Store Apps

Want to store your apps in one location on your home screen to make your home screen look cleaner? You can enable app drawer on your home screen to store all your apps and free up space on your home screen.

Open  **Settings**, go to **Home screen & wallpaper** > **Home screen style**, and select **Drawer**. If you want to switch back to a standard home screen, select **Standard**.

-  **Add an app icon from app drawer to the home screen:** After you enable app drawer, touch  on the home screen to enter the app list. From the app list, touch and hold the app icon that you want to add until your Phone vibrates, and then drag it to the desired position on the home screen.

Enable Memory Cleanup

Your device may slow down over time as your storage space gets smaller. Use Memory cleanup to free up storage space, improve system performance, and keep your device running smoothly.

Open  **Optimiser**, then touch **Cleanup** to clean up memory and clear the cache to optimise performance. If your storage space is still low, perform a deep clean to free up additional storage space.

New Device

New Device Configuration

Connecting to the Internet

Connect to Wi-Fi networks effortlessly with your device.

Connecting to a Wi-Fi network

- 1 Swipe down from the status bar to open the notification panel.
- 2 Touch and hold  to open the Wi-Fi settings screen.
- 3 Switch on **Wi-Fi**. Your device will list all available Wi-Fi networks at your location.
- 4 Select the Wi-Fi network you want to connect to. If you select an encrypted network, you will also need to enter the Wi-Fi password.

Connecting using mobile data

-  Before using mobile data, ensure that you have a data plan with your network provider to avoid incurring excessive data charges.
- 1 Swipe down from the status bar to open the notification panel.
 - 2 Touch  to enable mobile data.
 -  To save battery power and reduce data usage, disable your mobile data connection when you don't need it.

Enrol Your Facial Information and Enable Face Unlock

Face unlock allows you to unlock your device quickly and securely, without the need of a password.

-  • Face unlock can only be used when the owner account is logged in. It is not supported by PrivateSpace.
 - Face unlock is not available if the lock screen password has not been entered for three or more days in a row, or if your device has been remotely locked or restarted.
 - When using Face unlock, keep your eyes open, and face your device straight on from a distance of 20–50 cm (about 8–20 in.). In order to scan your face accurately, avoid using this feature when you are in a dark environment or facing direct light.
 - Currently, only one face can be enrolled. Delete the current facial data to enrol again.
- 1 Open  **Settings**. Go to **Security & privacy > Face recognition** and enter your lock screen password.
 -  If you haven't set up a lock screen password, set one first. Besides the 6-digit PIN, you can set up other types of passwords: **Pattern**, **4-digit PIN**, **Custom PIN**, or **Password**.

2 Selecting **Enable raise to wake** will allow the screen to turn on and unlock when you pick up your device and hold it to your face. If you do not need this feature, leave it deselected. Touch **Get started**, and enrol your face.

3 Face unlock modes:

- **Select an unlock method:** On the **Face recognition** screen, touch **Unlock device**. If you select **Direct unlock**, your device identifies your facial features and unlocks your screen when the screen is on. If you select **Slide to unlock**, after your device identifies your facial features, you can slide the lock screen to unlock. Selecting **Off** will disable Face unlock.
- **Smart display of lock screen notifications:** Enable **Show notifications**. On the lock screen, your device hides notification details and displays them only after recognizing the owner's face.
- **Access App lock:** Enable **Access App lock** to access App lock and locked apps using Face unlock.

Enrol a Fingerprint

Enrol a fingerprint on your device to use your fingerprint to unlock your screen, or to access Safe or App lock without having to enter a password.

- ⚠️ • Fingerprint unlock is only available when your unlock method is set to **Pattern**, **PIN**, or **Password**. You are required to unlock your device with the lock screen password when you restart your device or when your fingerprint is not recognised.
- Before enrolling a fingerprint, make sure that your finger is clean and dry.

1 Open  **Settings**.

2 Front fingerprint and in-screen fingerprint: Go to **Security & privacy > Fingerprint ID > Change unlock method**; Rear fingerprint: Go to **Security & privacy > Fingerprint ID > Fingerprint management > Change unlock method**. Select **Pattern**, **4-digit PIN**, **Custom PIN**, or **Password**, then set a lock screen password.

3 Once you have set a password, touch **New fingerprint** to enrol a fingerprint.

4 Place your fingertip on the fingerprint sensor. Press down lightly on the sensor until your device vibrates. Repeat this step using different parts of your fingertip.

5 After the enrolment is complete, touch **OK**.

To unlock the screen, simply place your fingertip on the fingerprint sensor.

Gestures and Operations

Smart Recognition

Read QR Codes and Barcodes

- 1 Swipe down on the home screen, and touch  to open **HiVision**.
- 2 Touch  and place the QR code or barcode within the scan frame to acquire information.
- 3 From the results screen, you can:
 - Touch  to copy the information to the clipboard and paste anywhere you like.
 - If the QR code contains contact information, touch  to add the information to your **Contacts**.

Scan Products

When you encounter an unknown item, you want to buy but can't find it. After scanning goods, you can get the purchase recommendations of similar items, which is convenient for you to buy favourite things.

-  This feature requires an Internet connection. Connect to a Wi-Fi network to avoid incurring unnecessary data charges.
- 1 Once your device is unlocked, swipe down from the centre of the home screen, and touch  to open **HiVision**.
 - 2 On the HiVision screen, touch , then you can shop by scanning a product or by taking a screenshot.
 - Take a screenshot to purchase: Frame the item in the viewfinder, then touch  to take a screenshot. The system will automatically recognise and recommend similar items.
 - Scan the product to purchase: Frame the item in the viewfinder, the system will automatically scan and recommend similar items.

HiTouch: Find Out More

HiTouch offers you more information about the products that you read about on your device.

 
- 1 To enable HiTouch, go to **Settings > Smart assistance > HiTouch**, and enable **HiTouch**.
 - 2 Spread two fingers over a picture or a QR code to enable **HiTouch**. Products will be recommended based on the images. You can select a recommended product to be redirected to a third-party app for details.
-  This feature is only supported in some countries and regions.

Screenshots and Screen Recording

Take Scrolling Screenshots to Capture Entire Pages

Tired of having to take several screenshots to capture long articles or chat records? You can use your Phone's scrolling screenshot feature to take a screenshot that scrolls all the way down to the bottom of the page, capturing all of the information on the page in a single screenshot.

Use shortcuts to take a scrolling screenshot: Swipe down from the status bar to open the notification panel, then touch  to take a scrolling screenshot. Touch  within two seconds of taking the screenshot, and the screen will automatically scroll down and keep taking the screenshot. During the scrolling process, touch the scrolling area to end the screenshot.

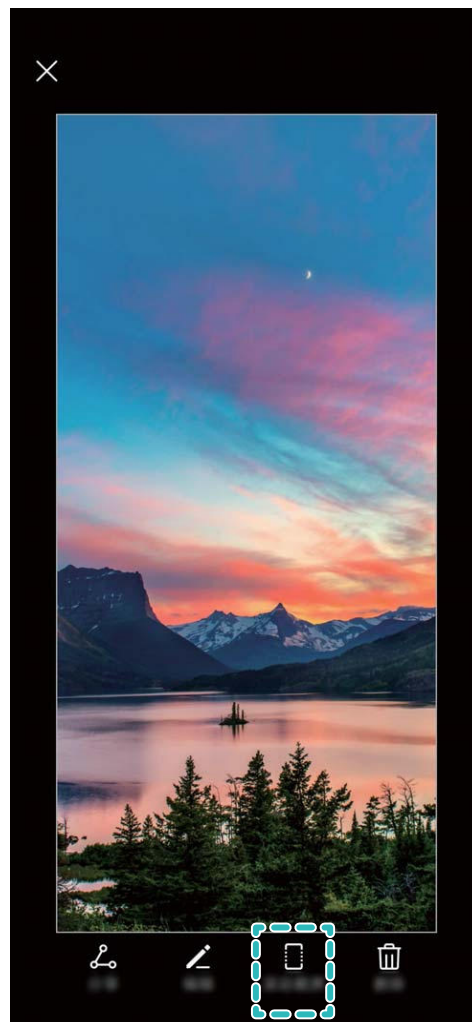


After taking the screenshot, touch  or  to edit or share the screenshot. The screenshot will be saved in **Gallery** by default.

Record Exciting Moments on Your Screen

Screen recording comes in handy when you are making tutorial videos or if you want to record your gameplay to share with your friends using your device.

-  Screen recording will end if you make or answer a call.
- If you are making audio recordings on your device before screen recording,  is disabled by default.
- Touching  during recording will enable or disable the microphone.
 - Enable microphone: You can record the ambient sounds and the system sounds (system sounds can be played via the speaker).
 - Disable microphone: You are unable to record the ambient sounds, but you can record the system sounds (system sounds can be played via the speaker).
 - Disable microphone and mute the device: The screen will be recorded in silence.

 Use shortcut to start recording: Swipe down the notification panel, and then touch  to start recording the screen. You can turn on or off  based on your needs. To end the recording, touch the red timer in the upper left corner of the screen.

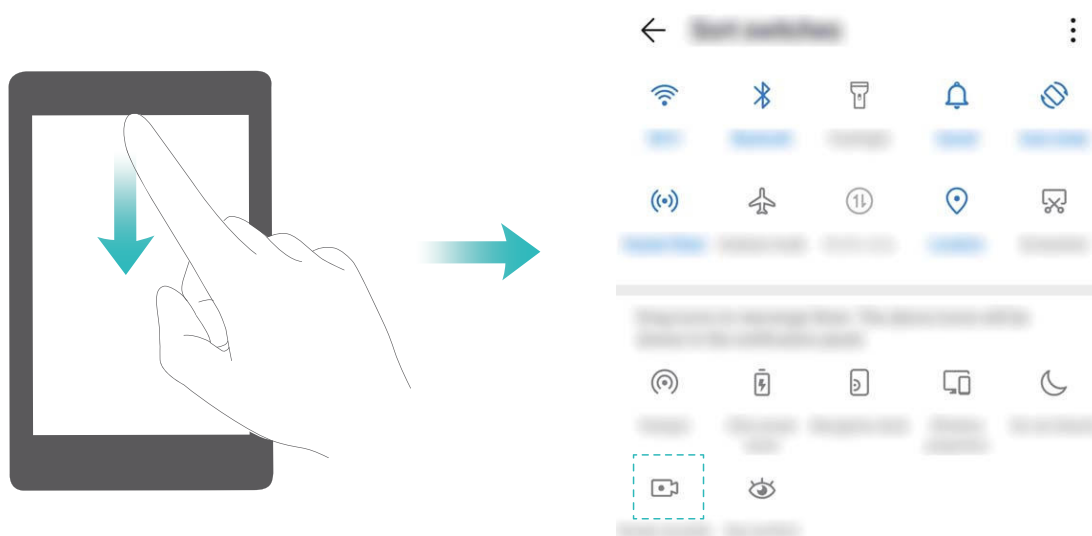

Use key combination to start recording: Simultaneously press and hold the **Power** button and the **Volume up** button to begin recording. You can turn on or off  based on your needs. To end the recording, simultaneously press and hold the **Power** button and the **Volume up** button again.



You can view your screen recordings in **Gallery**.

Take a Screenshot of Your Entire Screen

Use combo key to take screenshot: Simultaneously press and hold the Power button and the Volume down button to take a screenshot of the full screen.

Use shortcut switch to take screenshot: Swipe down from the status bar and open the shortcuts panel, then touch  to take a screenshot of the full screen.

Use knuckle to take screenshot: Use a knuckle to gently double-tap the screen in quick succession to take a screenshot of the full screen.

Split-screen

Enable Split-Screen Mode

Split-screen mode can help you multitask by separating your screen into two panes, allowing you to display and operate two different apps simultaneously.

 Not all devices or apps support Split-screen mode. Some apps may be not able to run properly in this mode.

Use your knuckle to enable Split-screen mode: Open a compatible app, touch your knuckle to the screen and draw a line across the middle. Draw a horizontal line when the screen is in portrait mode, and a vertical line when in landscape mode.

 
Use the Recent key to enable Split-screen mode: Open a compatible app, then touch and hold .

 For devices featuring a front navigation button, the virtual navigation bar is disabled by default. If you want to enable the virtual navigation bar, go to **Settings > System > Phone navigation > Three-key navigation > Settings**. After enabling the virtual navigation bar, the front navigation button will be disabled and will not respond if you touch and hold it or swipe it.

Use  at the top of an app to enable Split-screen mode: If you are using **Three-key navigation**, touch  on the navigation bar to access the recent tasks screen. If you are using **Gestures**, swipe up from the bottom of the screen and hold to access the recent tasks screen. Select a compatible app and touch  at the top of the app.

Use three fingers to enable Split-screen mode: Open a compatible app and swipe up on the screen with three fingers. Make sure not to swipe up from the very bottom of the screen.

Intelligent Split-screen: If you receive an SMS message or app notification while watching a video in full screen mode, a banner will be displayed to prompt you to split the screen.

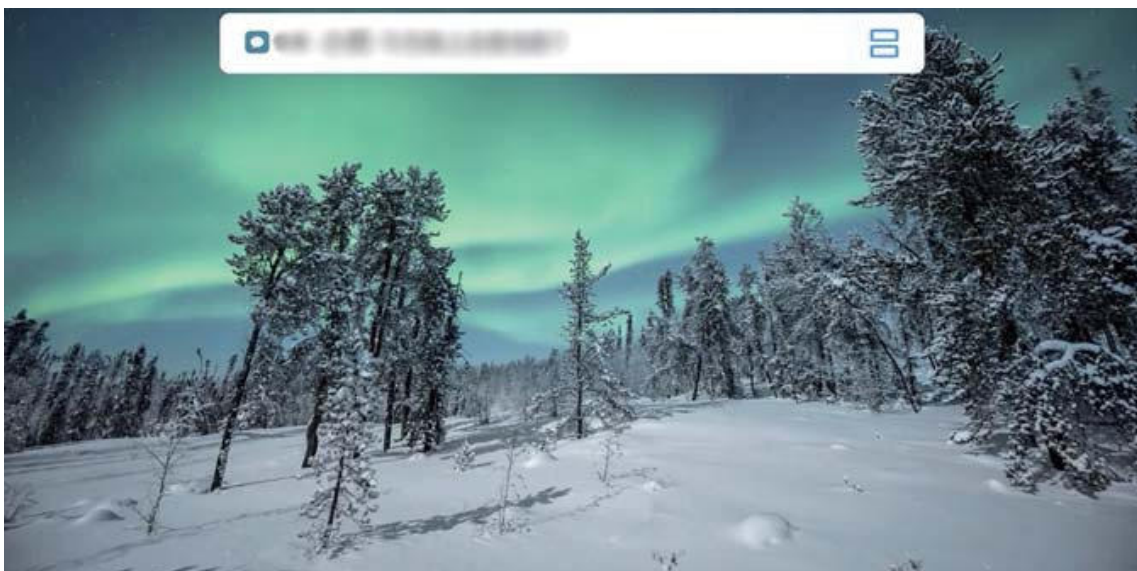

Adjust the Screen Display While in Split-Screen Mode

In split-screen mode, you can switch to full-screen mode, move screen positions, change screen orientation, and access the home screen.

Switch to full screen-mode: In split-screen mode, touch and hold  and swipe up or down to switch to full-screen mode.

Swap screen locations: In split-screen mode, touch  , and then touch  to switch the position of the screens.

Change the orientation of the screen: Swipe down from the status bar to open the notification panel. Touch the  switch to enable automatic screen rotation.

 The screen can be switched to horizontal view only when both active apps support horizontal view.

Access the home screen: In split-screen mode, touch  on the navigation bar to access the home screen. If you are using **Gestures**, swipe up from the bottom edge of the screen to enter the home screen.

Exit Split-Screen Mode

How to exit Split-screen mode.

To exit Split-screen mode, touch  and select .

 
Home Screen

Navigation Bar

Configure Your Navigation Bar Layout

Using the navigation bar, you can conveniently access the home screen, return to the previous page, exit an app, or view recent apps used.

To configure your navigation bar layout, open  **Settings**, then go to **System > System navigation > Three-key navigation > Settings**, and select the navigation key combination and enable or disable **Hide navigation keys** based on your usage habits.

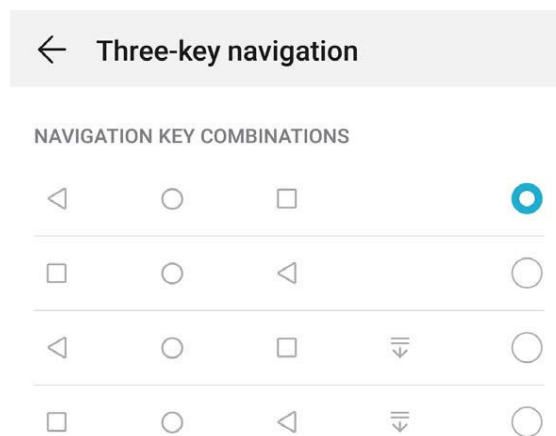

-  **Back key:** Touch to return to the previous page or exit an app. Touch to close the onscreen keyboard when inputting text.
-  **Home key:** Touch to return to the home screen.
-  **Recent key:** Touch to open a list of recently used apps. Touch and hold to enable split screen mode.
-  **Downward swipe notification key:** Touch to open the notification panel.

Use the Recent Key to Manage Background Apps

If you want to quickly switch to a recently used app, you might try using the Recent key. The Recent key can help you quickly switch between several recently used apps. You can also use it to close your background apps to increase your Phone's operating speed.

Touch  . You can view, switch to, close, or lock recently used background apps:

- **View recently used apps:** Recently used apps will be displayed on the screen and you can check them by swiping left or right.

- **Switch to a recently used app:** Swipe left or right on the screen to find the app you want to use, and touch the app tab.
- **Close an app:** Swipe up on an app tab to close the corresponding app.
- **Close all apps:** Touch  to close all apps.

Navigate with Gestures

 
Navigate with gestures to quickly go back to the previous screen, return to the home screen, or view recent tasks.

Open  **Settings**, go to **System > System navigation**, and select **Gestures**. From here you can:

- **Go back to the previous screen:** Swipe inward from one side of the screen.
- **Return to the home screen:** Swipe upwards from the bottom of the screen.
- **View recent tasks:** Swipe upwards from the bottom of the screen and hold. Swipe up on an app's preview to close the app, or touch  to close all apps.

Use Shortcut Switches to Quickly Enable Frequently Used Features

Want to quickly enable or disable mobile data or hotspot? You can enable frequently used features by using shortcut switches.

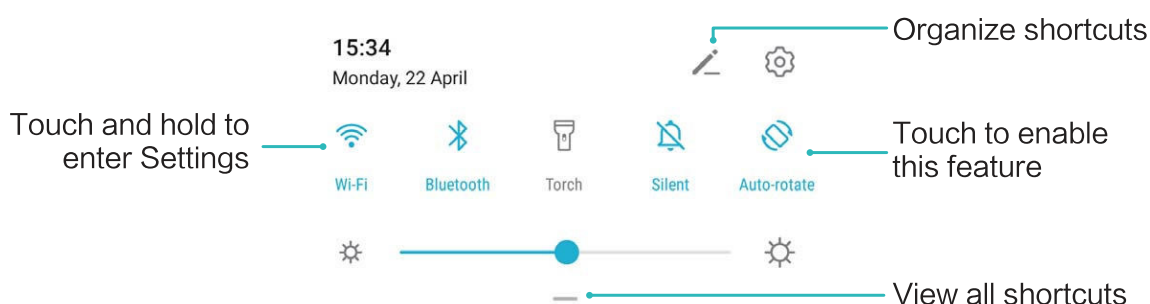

Notification Panel and Status Bar

Notification and Status Icons and Descriptions

The icons on the status bar give you a quick overview of the general status of your device, including its network connection, battery level, and any new messages received when your device is in Silent mode.

Status icons: By glancing at the status icons, you can quickly learn the status of your device, such as its network connection, signal strength, battery level, time, and more.

 The network status icons may vary by regions and service providers.

	Signal strength		No signal
4G⁺	4G+ network connected	3G	3G network connected
4G	4G network connected	H	HSPA network connected
2G	2G network connected	LTE	LTE network connected
LTE⁺	LTE+ network connected		NFC enabled
H⁺	HSPA+ network connected		Airplane mode enabled
	VoLTE available		Wi-Fi network connected
R	Roaming		Receiving location data from GPS
	Bluetooth enabled		Silent mode enabled
	Wi-Fi network available		Charging
	Vibration mode enabled		Battery level low
	Alarms enabled		No SIM card detected
	Battery fully charged		Headset plugged in
	Power saving mode enabled		Performance mode enabled
	Wired or wireless projection in use		Super charging
	Quick charging		Eye comfort mode enabled
	Do not disturb mode enabled		USB cable connected
	Data saving mode enabled		Bluetooth power
	Hotspot enabled		Optimiser reminder
	Unstable signal		Can't connect a call on current network
	Select-to-speak enabled		Screen time management enabled

Notification icons: When there is a new message, notification or reminder on your device, the relevant icon will be displayed in the status bar.

	Missed calls		New emails
---	--------------	---	------------


↓	Downloading data	∞	New voicemails
📅	Events reminder	↑	Uploading data
🔄	Synchronising data	💿!	Memory full
⚠️	Sign-in or synchronisation problem	❗	Synchronisation failed
🔑	VPN connected	...	More notifications

Open the Notification Panel to Get Important Information

Check the notifications and the operating status of your device on the status bar.

When there is a notification reminder, you can turn on the screen and swipe down from the status bar to view the notification.

 Access notification panel when the screen is unlocked: Swipe down from the status bar to open the notification panel. You can turn on or off shortcut switches, or touch notifications to view the details.

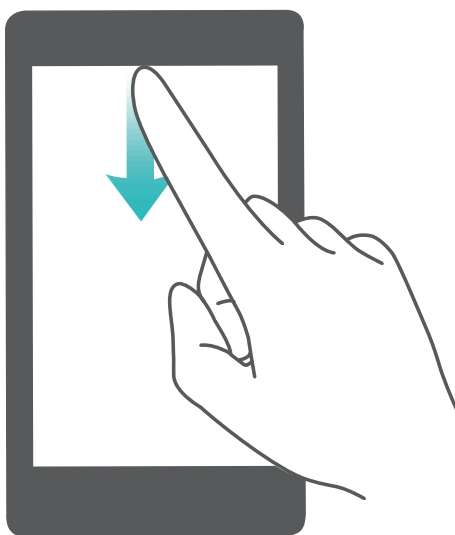

Disable App Notifications

Open  **Settings** and touch **Notifications**. From here you can:

- **Block notifications from an app:** Select the app, then disable **Allow notifications**.
- **Block notifications from multiple apps:** Touch **Batch management**, then disable **All**.

 To block notifications from an app, you can also swipe down from the status bar to open the notification panel, touch and hold an app notification, then disable **Allow notifications**.

Customise Notification Settings

Customise the notification settings to use your device the way you want.

Open  **Settings**, then go to **Notifications > More notification settings**. From here you can:

- **Enable Notifications turn on screen:** Enable **Notifications turn on screen** to set the screen to turn on when notifications are received.

Screen Lock and Unlock

Set a Lock Screen Password to Protect Your Privacy

Your Phone stores a lot of sensitive information, such as personal photos, contact information, banking apps (for example, Alipay). Set a lock screen password so that a password is required each time you unlock your Phone. A lock screen password helps to protect your private information if your Phone is lost or accessed by an unauthorised user.

Set a lock screen password: Open  **Settings**, go to **Security & privacy > Lock screen password**, and set the type of lock screen password you prefer.

- **Set a PIN:** A PIN number is a sequence of digits. Entering a PIN to unlock your Phone is quick and simple. For better security, use a long sequence of random numbers as your PIN. Go to **Set lock screen password**, follow the prompts to set up a PIN. Alternatively, touch **Change unlock method**, and set **4-digit PIN** or **Custom PIN**.
- **Set a pattern:** Unlock your Phone by drawing a preset pattern on the screen. For better security, use a pattern that includes overlapping line segments. Go to **Set lock screen password > Change unlock method > Pattern** and draw the same pattern twice. The pattern must connect at least 4 dots.
- **Set a password:** A password made up of numbers, letters, and special characters is more secure than a PIN or pattern. For better security, use a password with 8 or more characters that includes numbers, letters, and special characters. Be sure to memorize the password so that you don't get locked out of your Phone if you forget it. Go to **Set lock screen password > Change unlock method > Password**, follow the prompts to set up a password.
- **Unlock your device using a smart band:** If your device supports unlocking with a smart band, the screen will automatically light up when the band comes within 80 cm of your device. Swiping on the screen of your Phone will instantly unlock the device. Touch **Smart lock**, and follow the onscreen prompts to complete the setup.

- **Unlock your device using a fingerprint:** If your device supports fingerprint unlock, this is the recommended unlock method. Using a fingerprint is a secure and quick way to unlock the device. After setting a lock screen password, touch **Add** in the dialog box that pops up and follow the onscreen prompts to enrol your fingerprints.
- **For security reasons, please do not disable the lock screen password:** A lock screen password prevents unauthorised access to your device. For the security of your device, do not select **Disable lock screen password** as the screen lock method.
- **Regular password prompts help you to remember your password:** If you have not entered your screen lock password for 3 days, the system will require that you enter the password to unlock your device.

Lock the Screen to Quickly Secure Your Phone

If you don't use your Phone for a set period of time, the screen will turn off and lock. As long as the screen stays on, you can use your Phone without needing to unlock the screen. Lock your screen when you are not using your Phone to protect your privacy and prevent mistaken inputs.

- Set a lock screen password to help protect your privacy. You can lock your device in the following ways:

Lock the screen instantly with the Power button: Press the Power button to lock the screen at any time.

Lock the screen with one-touch screen lock: Pinch two fingers together on the home screen to enter the editing screen. Touch **Widgets > Screen Lock** and add the **Screen Lock** widget to your home screen. This helps reduce wear and tear on your power button. After leaving the home screen editing mode, touch the **Screen Lock** widget to instantly lock your screen. To lock your screen this way, first switch to the home screen page where the **Screen Lock** widget is located.

Go Back to Basics with Simple Mode

Does your home screen look cluttered with app icons and small text? Simple mode maximises the system volume and displays larger icons and fonts on the home screen, adopting a more concise layout which is easy to navigate.

Open  **Settings**, go to **System > Simple mode**, and touch **Enable**.

In Simple mode, you can:

- **Edit home screen icons:** Touch and hold any icon to drag or uninstall certain non-system apps.
- **Exit Simple mode:** Touch **Settings** and select **Exit Simple mode**.

- i** In **Simple mode**, go to **Settings > More settings > System > Reset > Reset all settings**. You will be directed to the default system home screen and all your settings in **Simple mode** will be reset.

Home Screen Management

Manage Home Screen Icons

Move an app icon or folder: On the home screen, touch and hold an app or folder icon until your device vibrates, then drag it to any position on the home screen.

Delete an app icon: On the home screen, touch and hold the icon of the app you want to uninstall until your device vibrates, then touch **Uninstall**.

- i** To ensure that the system runs normally, some pre-installed system apps cannot be uninstalled.

Lock the home screen layout: Open  **Settings**, go to **Home screen & wallpaper > Home screen settings**, and enable **Lock layout**.

Create a folder: On the home screen, touch and hold an app icon until your device vibrates, then drag it on top of another app icon. The two icons will be placed in a new folder.

Delete a folder: Open a folder, touch , deselect all the apps, then touch **OK**. The folder will be deleted and all app icons in the folder will be moved to your home screen.

Rename a folder: Open a folder and touch the folder name to enter a new name.

Add or remove app icons from a folder: Open a folder and touch . Select the apps you wish to add to the folder, deselect those you wish to remove, then touch **OK**.

- i** Another way to remove an app icon from a folder is to touch and hold the icon in the folder until your device vibrates, then drag it to an empty space on the home screen.

Manage Your Home Screen

Too many icons on your home screen? You can add a new page to your home screen and customise it to your liking.

Pinch in with your fingers on the home screen to enter home screen editing mode. You can do the following:

- **Add a new screen page:** Touch  at the left or right side of the screen to add a new screen page.
- **Delete an empty screen page:** Touch  to delete the page.
 - i** Screen pages with app icons or widgets on them cannot be deleted.
- **Modify screen page order:** Touch and hold the screen page you want to move, then drag it to the desired position.

- **Set a default home screen page:** Touch  in the upper part of the home screen to set the selected screen page as your default home screen page.

Set Your Home Screen Wallpaper

Tired of default wallpapers? Set a photo you like as your home screen wallpaper to personalise your home screen.

Open  **Settings**, and then go to **Home screen & wallpaper > Wallpaper**. You can:

Set a picture as your home screen wallpaper: Touch **Gallery** or select a preset wallpaper in your device, and follow the onscreen instructions to select **Lock screen**, **Home screen** or **Both**.

Set a photo as your wallpaper from Gallery: Have a great photo you want to set as your wallpaper? In  **Gallery**, open the photo that you like, go to  > **Set as > Wallpaper**, and follow the onscreen instructions to set the photo as your home screen wallpaper.

Manage Your Home Screen Widgets

Want to quickly add widgets such as screen lock, weather, notepad, clock, contacts, or calendar to your home screen? You can add, move or delete home screen widgets to tidy up your home screen and ease your usage experience.

Add widgets: Pinch in with your fingers on the home screen to enter home screen editing mode. Touch **Widgets**, touch and hold a widget and drag it to an empty area on the home screen, or touch the widget you want.

-  Check that there are enough empty spaces on the home screen for the widget. If there is not enough space, add an empty screen page or free up some space on the current home screen page.

Delete widgets: Touch and hold a widget on the home screen until your device vibrates, and then select **Remove**.

Move widgets: Touch and hold a widget on the home screen until your device vibrates. Drag the widget to any position on the screen.

Use App Drawer to Store Apps

Want to store your apps in one location on your home screen to make your home screen look cleaner? You can enable app drawer on your home screen to store all your apps and free up space on your home screen.

 
Open  **Settings**, go to **Home screen & wallpaper > Home screen style**, and select **Drawer**. If you want to switch back to a standard home screen, select **Standard**.

-  **Add an app icon from app drawer to the home screen:** After you enable app drawer, touch  on the home screen to enter the app list. From the app list, touch and hold the app icon that you want to add until your Phone vibrates, and then drag it to the desired position on the home screen.

Contacts

Share Contacts Using Electronic Business Cards

Share your business card: Open  **Contacts** and touch **My card** to set your profile picture and enter your name, work address, telephone number, and other information. Then touch  and your device will automatically generate your QR code business card. You can share your business card directly using the QR code. Alternatively, touch , select a sharing method, and follow the onscreen instructions to share.

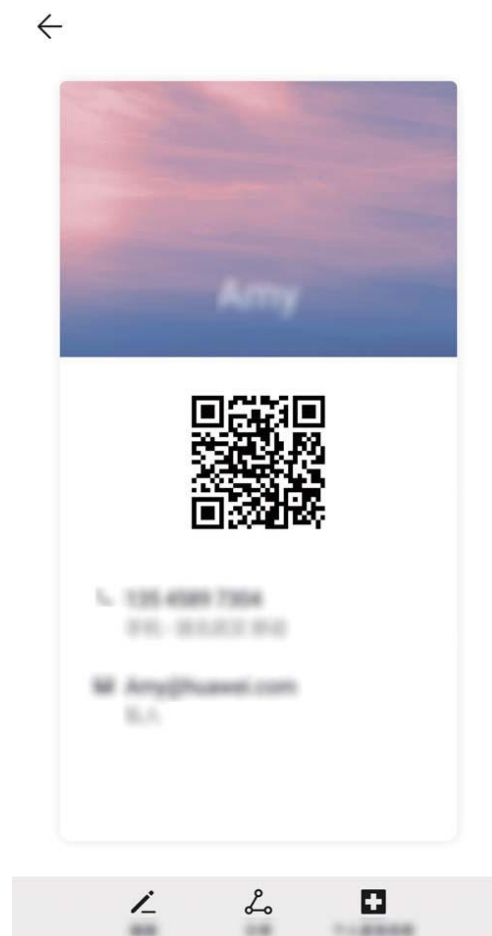

Share contacts: Open  **Contacts**, select the contact you want to share, and touch the QR code icon in the upper right corner to share the contact using the QR code. You can also touch **Share**, select a sharing method, and follow the onscreen instructions to complete the sharing process.

-  If the other party's device supports QR code analysis, they can directly take pictures of or scan QR codes to add contacts.

Search Contacts

Open  **Contacts**. Use any of the following search methods:

-  For better results, make sure your device is displaying all contacts. From the contacts list screen, go to  > **Settings** > **Display preferences** and touch **All contacts**.
- Drag the index on the right to quickly scroll through the contacts list.
- In the search bar at the top of the contacts list, enter the contact's name, initials, phone number, or email address. The search results will be displayed below the search bar. Enter multiple keywords for your search, such as "John London", to quickly find matching contacts.

Managing Contacts

Manage Contact Groups

Want to send a message to a group of colleagues or host a get-together? Smart groups automatically groups your contacts by company, city, and most recent contact time, so you can quickly send a group email or message.

Create a contact group: From the groups list, touch  , enter the group name (such as Family or Friends), and then touch **OK**. Follow the onscreen instructions to add contacts, and then touch .

Edit a group: From the groups list, select the group you want to edit and touch  to add a contact, or touch  to **Remove members**, **Group ringtone**, or **Rename**.

Delete a group: From the groups list, touch and hold a group, and then touch **Delete**.

Add Contacts to the Blocklist or Trustlist

To add a contact to the blocklist, open  **Contacts**, touch the contact, then go to  > **Block contact**. All calls and messages from this contact will be blocked.

 You can also add contacts to the blocklist in **Optimiser**. Go to **Blocked** >  > **Blocklist**, touch  , and add the contacts you want to block.

To add contacts to the trustlist, open **Optimiser**, go to **Blocked** >  > **Trustlist**, touch  , and add the desired contacts.

 When **Block all incoming calls** is enabled, all calls, including those from the trustlist, will be blocked.

View contacts in the blocklist: Open  **Optimiser**, and go to **Blocked** >  > **Blocklist**.

View contacts in the trustlist: Open  **Optimiser**, and go to **Blocked** >  > **Trustlist**.

Remove a contact from the blocklist: Open  **Contacts**, touch the contact you want to remove from the blocklist, then go to  > **Remove from blocklist**.

 You can also remove a contact from the blocklist in **Optimiser**. Go to **Blocked** >  > **Blocklist**, then touch and hold the desired contact to remove it.

Remove a contact from the trustlist: Open **Optimiser**, go to **Blocked** >  > **Trustlist**, then touch and hold the desired contact to remove it.

Erase Call and Message Records

Use Erase traces to erase call and message records for a contact to protect your privacy.

Open  **Contacts**, select a contact, and go to  > **Erase traces** > **Erase**. All of your call and message records for that contact will be erased.

Dialling

Basic Calling Functions

Make Calls

On the dialler screen of your device, enter part of the phone number, the first letter of the contact's name, or the contact's initials to find a contact.

Open  **Dialler**. From the dialler screen, enter the phone number, the first letter of the contact's name, or the contact's initials (for example, enter "jl" for John Lucas) to find a contact. Touch the contact you want to call from the list. If you are using a dual-SIM device, touch  or  to make the call. Touch  to hang up.

 You will be prompted to paste recently copied phone numbers when you enter the dialler screen.

Press the Power button to hang up: If a number has been dialled accidentally and the call screen is hidden, you can still hang up quickly. The **Power button ends call** feature hangs up the call when the Power button is pressed. On the **Dialler** screen, go to  > **Settings** > **More**, and enable **Power button ends call**.

Make Emergency Calls

In an emergency situation, if your device is powered on and in service, emergency calls can be made even if the screen is locked or there is no reception.

 The emergency call feature is subject to local regulations and your Internet service provider. Network or environmental factors may affect emergency call performance. In emergency situations, do not rely on your device as your only method of communication.

Open  **Dialler** or touch **Emergency** on the lock screen, enter a local emergency number, and touch . Strong mobile reception and an Internet connection with location services enabled will allow your location to be displayed on your device for reference.

Enable Call Waiting to Never Miss Important Third-Party Calls

Receiving an incoming call while you're already on a call? Call waiting allows you to answer the new call and then switch between the two calls.

 Some network providers may not support this feature.

Open  **Dialler**, go to  > **Settings** > **More**, and enable **Call waiting**. When receiving another call, touch  to answer the call and place your first call on hold. Touch  or the call on hold in the call list to switch between calls.

Enable Call Forwarding and Never Miss a Call

If you are unavailable to answer calls, you can set your device to forward calls to another number.

 Some network providers may not support this feature.

Open  **Dialler**, and go to  > **Settings** > **Call forwarding**. If you have a dual-SIM device, in the **SIM 1** or **SIM 2** section, touch **Call forwarding** and select a forwarding method. Enter the number you want to forward your calls to, then confirm. When call forwarding is enabled, your device will automatically forward eligible calls to the preset number.

Delete Call Logs

You can delete call logs that you no longer need.

Open  **Dialler** and touch  to hide the dialpad. You can now perform one of the following:

- **Delete a single record:** Touch and hold an entry, then touch **Delete entry**.
- **Delete multiple records:** Go to  > **Delete multiple entries**, select the entries you want to delete or **Select all**, then touch .

Set a Video Ringtone

Set a video ringtone for all incoming calls: Open  **Dialler**, go to  > **Settings** > **Ringtone**, touch **Video ringtones**, then select a video.

Set a video ringtone for an individual contact: Open  **Dialler**, touch the **Contacts** tab at the bottom of the screen, then select a contact. On the contact details screen, go to **Ringtone** > **Video ringtones** and select a video.

Activate International Roaming for Borderless Communication

When you travel abroad for work or a holiday, you can make calls when your device is roaming without having to dial the country code.

- 1 Contact your network provider to activate the international call or roaming service.
- 2 Open  **Dialler** or  **Contacts**, and make a call.

VoLTE

VoLTE: Make Calls and Use Data at the Same Time

VoLTE (Voice over LTE) allows both call and data services to be carried on the same 4G network, which means you can use the Internet even while making calls. VoLTE also provides you with shorter call connection times and higher quality voice and video calls.

Both of your Phone's SIM card slots support 4G, VoLTE, and VoWiFi, so there is no need to switch SIMs back and forth.

- **Dual 4G:** Both of your Phone's SIM card slots support 4G.
 - **Dual VoLTE:** Both of your Phone's SIM card slots support VoLTE, allowing you to use the Internet while making HD calls.
 - **Dual VoWiFi:** Both of your Phone's SIM card slots support VoWiFi, which allows calls to be made using Wi-Fi. You can use VoWiFi to make calls even in Airplane mode.
-  Some network providers may not support this feature.

Use VoWi-Fi for a New Calling Experience

You can use **VoWi-Fi** to make voice and video calls in any location that has a Wi-Fi network, even when there is no mobile Phone network reception.

-  This feature must be supported by your carrier. Contact your carrier for more information, including fees and charges.

Open  **Dialler**, go to  > **Settings** > **Wi-Fi calling**, enable **Wi-Fi calling**. Touch **Mode** and follow the onscreen instructions to set the preferred network.

Camera

Basic Camera Functions

Use Basic Camera Features

Learn about the basic features of your camera to take better photos.

Take a photo: Open  **Camera**. In the viewfinder, touch  or press the Volume down button to take a photo.

Select a camera mode: Open  **Camera** and choose a preinstalled camera mode in the lower part of the screen.

Adjust the focal length: In the viewfinder, spread two fingers to zoom in or pinch two fingers to zoom out. When the distance between your device and shooting object is greater than the optical zoom of the camera, the photo quality decreases. When zooming in or out, a zoom bar will appear on the side of the screen. You can also adjust the zooming level with the zoom bar.

Adjust the exposure: Your camera will adjust its exposure automatically depending on the ambient light level. The larger the exposure, the brighter the picture. To manually adjust the exposure, touch the viewfinder screen and drag the  icon up or down.

Turn on or off the flash: When taking photos in a dark environment, turn on the flash to increase the ambient brightness. In the viewfinder, touch  to select one of the following flash modes:

-  **Auto:** The camera automatically determines whether to turn on the flash according to the ambient light.
-  **Off:** The flash is disabled.
-  **On:** The flash is enabled.
-  **Always on:** The flash is always on.

Enable or disable Master AI: In the viewfinder, touch  to enable or disable **Master AI**.

Use an Assistive Grid to Compose Your Photos

Avoid skewed and off-centre photos. Use your camera's assistive grid feature to help you line up the perfect shot.

Open  **Camera**, touch  to enter the **Settings** screen, and enable **Assistive grid**. Grid lines will now appear when you take photos. The four intersecting points on the grid are the focus areas of the picture. Place the subject of your photo on one of the intersecting points to achieve a good composition.



Use Wide Angle to Take Photos

Fit a tall building into a photo even when shooting near it with wide angle.

Open  **Camera** and point your camera at a building. **Wide** mode will be automatically enabled to fit more of the image into your photo.

-  . Before using **Wide** mode, touch  to enable **Master AI**.
- Touch the zoom box on the right side of the viewfinder and select **Wide** at the bottom, or spread and pinch your fingers on the screen to adjust the zoom level. The smaller the zoom level, the more you can fit into the viewfinder.

Take Long-Focus Shots

Use the camera of your device to take long-focus shots.

Open  **Camera**. In **Photo** mode, focus on a subject in the distance, and slide on the zoom bar or spread two fingers on the viewfinder to zoom in to a suitable level. Touch the subject in the viewfinder to focus, then touch  once the image is clear to take a photo.

-  You will not be able to adjust the focal length when the resolution is set to the maximum.

AI enhanced, Intelligent Photo Scene Identification

AI enhanced can automatically identify your current photography scene and intelligently adjust the colour and brightness of the photo, so you don't need to repeatedly adjust your camera for the perfect shot.

AI enhanced is a preset camera feature on your device that intelligently identifies your current photography scene and automatically adjusts the colour and brightness of your photo to help you achieve better effects.

AI enhanced provides you with the following features:

- **Intelligently identifies photographing scenes and improves photo effects:** **AI enhanced** supports multiple scenes, such as the stage, beach, blue sky, greenery, and text scenes. After smart identification, **AI enhanced** automatically adjusts the colour and brightness of the camera and recommends an optimal mode (such as the portrait, greenery, or text mode) to improve photo effects.
- **Enable AI enhanced to automatically configure and adjust camera settings:** When you open the camera and enter Standard camera mode, touch  to enable **AI enhanced** as required. Once enabled, this feature will intelligently identify the photography scene, which saves you the trouble of repeated manual adjustments.
-  **AI enhanced** is only available when you take photos using the rear camera.
 - **AI enhanced** is automatically disabled when you switch to Portrait mode, Wide aperture mode, or Moving picture mode.

Use Portrait Mode to Shoot Like a Pro

Go to  **Camera > Portrait**, adjust the following settings, then touch  to take a portrait.

- **Blur and lighting effects:** Touch the  icon in the viewfinder and select a blur or lighting effect.
 -  A light source (such as a neon or street light) in a relatively well-lit background will contribute to better results. Taking photos at long distance will reduce the effect.
- **Beauty effect:** Touch  in the viewfinder and drag the slider to adjust beauty settings. A larger value will produce a more distinct beauty effect.
 -  To disable the beauty effect, touch the  icon in the viewfinder and drag each setting to its lowest value.

Use Wide Aperture Mode to Highlight Your Shooting Subjects

Wide aperture mode produces photographs with a shallow depth of field. This creates a blurred background that lends greater emphasis to the photo's subject.

Take a wide aperture photo: Go to  **Camera > Aperture**. When shooting, touch the screen to select a focal point, and then touch  to take the photo.

-  • For optimal results, ensure that the subject is positioned no more than 2 m away from the camera.
- Touch  and swipe left or right on the slider to adjust the aperture level. The smaller the aperture value, the more blurred the background will appear.

Use Panorama Mode to Take Panoramic Photos

Panoramas provide a wider viewing angle than ordinary photos, letting you take sweeping landscape shots.

To capture a panorama shot, the camera takes multiple photos of objects within our visual field and stitches them together into a single photo.

-  When taking a panorama, find a wide, open space that is some distance away from the subject and try to avoid backgrounds that are all in one colour.

- 1** Go to  **Camera > More > Panorama**.
- 2** Touch  at the bottom of the screen to configure the shooting direction.
- 3** Hold your Phone steady, and then touch  to start shooting. Slowly move the Phone in the direction indicated, holding the device steady and ensuring that the arrow stays level with the centre line.
- 4** Touch  when you are finished. The camera will automatically stitch the photos together to create a panorama.



Use Pro Mode to Take Scenic Photos

Want to make your scenic photos more vibrant and interesting? Use Pro mode to take unique and personalised scenic photos.

Go to  **Camera** > **More** > **Pro** to enter Pro mode.

Select a metering mode based on the shooting subject: Touch , and select a metering mode.

Metering Mode	Application Scenario
Matrix	Broad landscapes and seas
Centre	The subject is in the centre of the picture, and stands out from the background.
Spot	The subject to be highlighted in the picture is relatively small, such as a flower or a tree.

Adjust brightness based on the shooting environment:

- **Adjust ISO:** Touch ISO , and drag the ISO slider to adjust its value.
 To avoid excessive noise, the recommended ISO is below 400. The recommended ISO for the daytime is between 100 and 200 and around 400 for night scenes.
- **Adjust the shutter speed:** Touch S (shutter speed), and drag the shutter speed slider to your desired speed.
 The recommended shutter speed for static scenes (such as mountains) is between 1/80 and 1/125, and faster for moving subjects (such as waves). For best results, use a tripod when shooting a moving subject.
- **Adjust exposure compensation:** Touch EV , and drag the EV slider to your desired value.

Adjust AWB: Touch AWB , and drag the AWB slider to your desired value.

- When shooting under sunlight, you can select  . In a weak light environment, you can select  .
- Touch  to adjust the colour temperature. If you want to give your photo a cosy, nostalgic tone, increase the K value. For a cold, calm or futuristic tone, lower the K value.

Adjust AF based on the shooting subject: Touch  , and drag the AF slider to your desired value.

Focusing Mode	Application Scenario
AF-S mode	Static scenes (such as mountains)
AF-C mode	Moving scenes (such as flowing water and waves)
MF mode	Protruding objects (such as a close-up of a flower)

Hold your device steady when shooting: Touch  and enable **Horizontal level**. After this feature is enabled, two horizontal guiding lines will appear on the viewfinder. When the dotted line overlaps with the solid line, the camera is horizontally aligned.

- Some options in Pro mode may change after you modify settings.
- The aforementioned recommended settings are for reference only. You may adjust them based on the actual usage conditions to achieve your desired effect.

Light Painting Mode

Light Painting: Shoot Light Trails

Light painting mode automatically sets a slow shutter speed to take long-exposure shots of light trails. This mode produces stunning photos that have an ethereal quality.

Light painting mode offers four creative shooting modes for different subjects and light conditions:

- **Traffic trails:** Captures light trails created by cars at night.
- **Light graffiti:** Captures trails created by a moving light source in low-light conditions.
- **Silky water:** Captures silky-smooth photos of waterfalls and flowing water.
- **Star trails:** Captures stunning photos of star trails in the night sky.



Use Tail Light Trails to Capture the Lights of the City

Tail light trails lets you create artistic photos of car tail lights at night.

- Shoot from a distance and slightly above your subject for best results. Ensure that car headlights do not point directly at the camera, as this can overexpose the image.
- Place your device on a tripod or solid surface so that it does not move during the exposure.

Open  **Camera > More > Light painting > Traffic trails**. Hold your Phone steady, and then touch  to start shooting. A preview of the image is displayed in the viewfinder. Touch  when you are finished.



Use Light Graffiti to Create Light Patterns

Light graffiti lets you create patterns or write words by moving a light source in front of the camera.

- Find a dark location away from other light sources and ensure that the subject's silhouette is not visible. Choose a suitably bright light source of an appropriate colour, such as a small torch or glow stick.
- Place your device on a tripod or solid surface so that it does not move during the exposure.

Open  **Camera > More > Light painting > Light graffiti**. Hold your Phone steady, and then touch  to start shooting. A preview of the image is displayed in the viewfinder. Touch  when you are finished.



 
Capture Rivers and Waterfalls with Silky Water

The Silky water feature lets you capture silky smooth photos of waterfalls and rivers.

- This feature works best with a stream or waterfall with lots of water.
- Place your device on a tripod or solid surface so that it does not move during the exposure.

Go to  **Camera** > **More** > **Light painting** > **Silky water**. Hold your device steady, then touch  to start shooting. A preview of the image will be displayed in the viewfinder.

Touch  when you are finished.

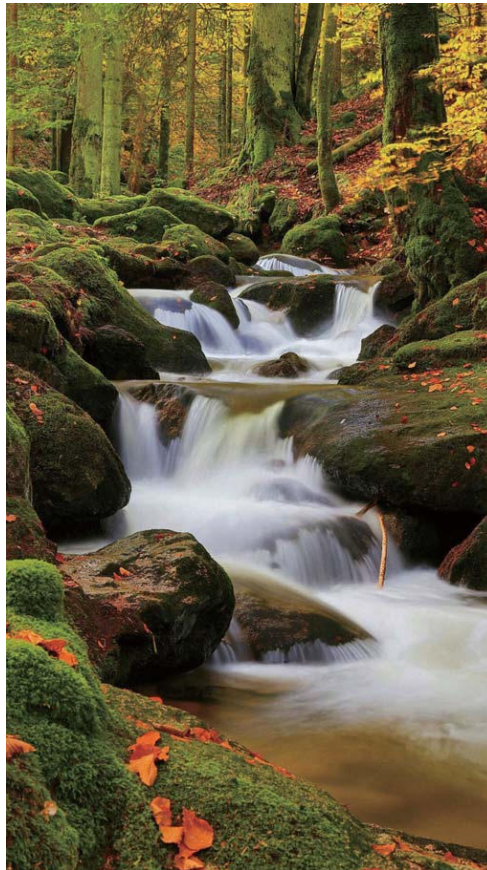

Use Star Track to Capture the Beauty of Stars

Star track allows you to capture the movement of stars in the night sky.

- For best results, choose a clear night in a location free of light pollution with an unobstructed view of the sky.
- Place your device on a tripod or solid surface so that it does not move during the exposure.

Go to  **Camera > More > Light painting > Star trails**. Hold your device steady, then touch  to start shooting. A preview of the image will be displayed in the viewfinder. Touch  when you are finished.



More Capture Modes

Use Time-Lapse to Create a Short Video

Use Time-lapse mode to capture images over a long period of time and condense them into a short video. Capture and watch nature in its entirety: blooming flowers, drifting clouds, or even star trails against the night sky.

- i • Recording a time-lapse video continuously for long period of time may consume battery power and use up storage space.
 - Place your device on a tripod or flat surface to keep it steady while recording.
 - Before you start, ensure that the scene is well lit and the camera is in focus. Position the camera carefully to fit relevant background objects as much as possible.
- 1** Go to  **Camera** > **More** > **Time-lapse**, and touch  to start recording a time-lapse video.
 - 2** Touch  to finish recording.
 - 3** You can then go to **Gallery** to play your time-lapse video.
 - i For best and optimal result, the recording and playback speeds are automatically adjusted by the system.

Take Moving Pictures

Make your photos more dynamic and fun by taking moving pictures to prolong life's wonderful moments.

With moving pictures, you can record a scene approximately one second before and after pressing the shutter button. When browsing photos in Gallery, view the static picture taken or play a dynamic moving picture effect and sound.

Take moving pictures: Open  **Camera**, go to **More > Moving picture**, then touch  to take a moving picture.

View moving pictures: Moving pictures will be saved to **Gallery** in JPG format. Go to  **Gallery > Albums > Camera**, touch pictures with the  icon, and touch  on the top of the picture to view a dynamic effect. The moving picture automatically stops after a complete playback. You can also touch the screen to stop the playback.

Share moving pictures: Go to  **Gallery > Albums > Camera**, touch the moving picture you want to share, then touch  to select a sharing method.

-  Moving pictures can be shared directly through Wi-Fi, Bluetooth, Huawei Share, and more. The receiving device must be a Huawei device that supports the capture of moving pictures in order to play the moving picture effect. When you share moving pictures to third-party apps or incompatible devices, moving pictures will be displayed as static images.

Gallery

Photo Management

Edit Videos

Crop a video: Open  **Gallery**, select the video you want to edit, and touch  to enter the video editing screen. You can drag the slider in the crop area to select the segment you want to keep, and touch  to finish cropping the video.

Adjust the video resolution: As you drag the slider to select the video segment you want to keep, you can touch  to preview the cropped video. You can also touch the video resolution options on the editing screen to adjust the video resolution.

 The higher the resolution, the clearer the video, but also the greater the storage space required. Choose according to your needs.

Adjust Slow Motion Video Playback

Open  **Gallery**, select the recorded slow motion video, and touch  to play. Touch the screen and drag the slider in the edit area to select the segment you want to play in slow motion.

Edit Photos

Crop, rotate, and apply a variety of effects (such as graffiti, custom watermarks, and filters) to your photos in Gallery.

Open  **Gallery**, select the photo you want to edit, then touch . Edit the photo in the following ways:

- **Rotate:** Touch  and drag the angle wheel to the desired orientation. You can also touch **Rotate** to rotate your photo 90 degrees or touch **Mirror** to flip it.
- **Crop:** Touch  and drag the grid or its corners to make your selection. You can also select a fixed ratio and drag the corners of the grid to crop the photo.
- **Add filter effects:** Touch  to select a filter.
- **Colour splash:** Touch  to select the colours you want to highlight. Other parts of the photo will be black and white.
- **Blur:** Touch , select a blur mode, and drag the slider to adjust the blurriness.
- **Adjust photo effects:** Touch  to adjust the brightness, contrast, saturation, and other qualities of a photo.
- **Beautify a portrait:** **Beauty** is provided for portraits. Touch  to apply features such as **Smooth**, **Blemishes**, **Thin face**, and **Enhance eyes** to make a portrait more attractive.

- **Pixelate:** Touch  to select a mosaic style and size to censor parts of a photo.
- **Graffiti:** Touch  to select a brush and colour to add graffiti.
- **Add watermarks:** Touch  to select a watermark (such as **Time**, **Location**, **Weather**, or **Mood**).
- **Add a text element:** Touch  to select an element style and font format.

Organise Albums

Add an album: From the **Albums** tab, touch **Add album**, name the album, then touch **OK**. Select the photos or videos you want to add.

Move photos and videos: Move photos and videos from various albums into the same one for easy management and browsing. Touch and hold a photo or video you want to move until  is displayed, then select all the photos and videos that you want to move. Touch  to select the desired album. Once the items are moved, they will no longer be in their original albums.

Add photos and videos to favourites: Add photos and videos to favourites for easier viewing. Open the photo or video that you want to add to the **My favourites** album, then touch . Favourited photos and videos will remain in their original albums and have a  icon on their thumbnails.

Delete photos and videos: Touch and hold a photo or album until the  icon appears. Select the items you want to delete, then go to  > **Delete**. Deleted photos and videos will remain for a time in the **Recently deleted** album before being permanently deleted. Days remaining before deletion are marked on the photos. To permanently delete a photo or video manually, touch and hold its thumbnail, then go to  > **Delete**.

Recover deleted photos and videos: In the **Recently deleted** album, touch and hold a photo or video until the  icon appears. Select the items you want to recover and touch  to restore them to their original albums. If the original album has been deleted, a new one will be created.

Optimiser

Use Optimise

Have you noticed that your device has slowed down recently? Do you worry that it might be vulnerable to malware and other security threats? Use Optimise to make your device run smoother and protect it from security threats.

Open  **Optimiser**, and touch **OPTIMISE**. Your device will automatically optimise its overall performance, security, battery performance, and device management. You can also customise the optimisation options. The system will recommend that you use Optimise. This will help you increase running speed, check for security risks, optimise power consumption, and monitor and block unknown phone numbers and harassment calls.

Manage Mobile Data Usage

Manage mobile data usage to avoid incurring extra charges.

Open  **Optimiser** and touch **Data usage** to view data usage statistics or enable **Smart data saver**.

- **Data usage this month:** Check the data usage ranking of apps.
- **Network access:** Manage Internet access permissions for each app.
- **Smart data saver:** Enable the data saver and select the apps that are allowed to use mobile data while running in the background.

Use Auto-launch to Prevent Unwanted App Activities

Worried about third-party apps secretly running, occupying system resources, and consuming power in the background? Use Auto-launch to help you identify and prohibit unwanted app activities.

Open  **Optimiser**, touch  > **App launch**, and you can:

- **Automatically manage apps:** Enable **Manage all automatically** or toggle on the switches for individual apps. The system will automatically analyse app usage and prohibit apps from automatic launch, secondary launch, and background running.
- **Manually manage apps:** If you have not enabled **Manage all automatically**, touch the switch of a desired app and enable or disable automatic launch, secondary launch, and background running accordingly.
- **View launch records:** Go to  > **Launch records** to view the detailed launch history for each app.

Enable Virus Scanner

Accessing unauthorised ads or links may infect your device with Trojans and malware that may secretly install themselves and steal your personal data. Running a virus scan can locate and remove potential threats on your device.

Virus scan is enabled by default. To view it, open  **Optimiser** and touch **Virus scan**. The **Secure** icon indicates that your device is safe. You can also return to the **Optimiser** home screen and go to  to configure the following settings:

- **Smart tune-up:** If this option is selected, the system will obtain the latest app configuration data from the cloud to ensure better app performance.
 - **Auto-clean junk files:** If this option is selected, the system will automatically identify junk files and permanently delete them after 14 days.
 - **Auto-update cleanup database** and **Online virus scan:** Auto-update the cleanup database, or scan for viruses under the conditions of **Wi-Fi only** or **Wi-Fi and mobile data**. Select **Never** to disable these options.
-  The virus scan reminder is enabled by default. You will be notified if no anti-virus scan has been performed for more than 30 days.

Email

Add Email Accounts

Add your email account to your Phone for convenient email access at any time. If you have questions about specific settings while configuring your email, please consult your email account provider.

Add a personal email account: Open , select an email service provider or touch **Other**, enter your email address and password, then touch **Sign in** and follow the onscreen instructions to configure your account. The system will automatically connect to the server and check server settings.

Add an Exchange account: Exchange is developed by Microsoft and used by companies as their internal email system. If your company email uses Exchange servers, you can log in to your work email on your Phone. Go to  > **Exchange**, enter your email address, username, and password, then touch **Sign in** and follow the onscreen instructions to configure your account. The system will automatically connect to the server and check server settings. After configuration, the system will open the **Inbox** screen by default.

Manage Email Accounts

You can manage multiple email accounts concurrently on your Huawei Phone.

Open  **Email**. You can:

- **Check emails:** On the **Inbox** screen, touch , and then select an email account to view the list of your emails. Swipe down to refresh the list of emails. Open an email to read, reply, forward, or delete it. Swipe left or right on the screen to view the previous or next email. To delete multiple emails, touch and hold an email to go to the email management screen, select the emails, and touch .
- **Sync emails:** Swipe down on the **Inbox** screen to refresh the emails list. Go to  > **Settings**, touch an account, and then enable **Sync Email**. To sync automatically, touch **Sync frequency** and select the syncing time to complete configuration.
- **Search emails:** On the emails list screen, touch the search bar, and enter a keyword, such as email subject and content.
- **Add multiple email accounts:** Go to  > **Settings** > **Add account**, select your email service provider, and enter your information.
- **Switch between email accounts:** On the accounts screen, touch , and then touch an account name to switch to.

- **Configure email accounts:** On the account screen, go to  > **Settings**, select an account to set **Account name**, **Default account**, and **Remove account**.

Manage VIP Email Contacts

Worried about missing an important contact's email among a sea of emails? You can add important contacts to the VIP list. Your device will automatically copy emails from VIP contacts to the VIP mailbox.

Open  **Email**, and go to  > **Settings** > **VIP contacts**. From the **VIP list** screen, go to **Add** > **Create** or **Add from contacts**.

Add or remove VIP contacts: On the **VIP list** screen, touch  or  to manage VIP contacts.

Import Important Events to Calendar

Worried about missing an important event among a sea of emails? You can import important events to Calendar and view them at anytime and anyplace.

Open  **Email**, select the event from the email, and select  > **Add to calendar**.

Calendar

View Global Holidays

Travelling overseas for work or holiday? Download your destination country's holiday information ahead of time to better plan your work and schedule.

 This feature requires an Internet connection. Connect to a Wi-Fi network to avoid incurring unnecessary data charges.

Open  **Calendar**, go to  > **Settings** > **National/Regional holidays**, and enable the corresponding switch for your destination country. Your device will automatically download the holiday information.

Clock

Use the Clock

You can find various functions, including alarm, world clock, stopwatch, or timer in Clock.

View the time all over the world: Open  **Clock**, touch  on the **World clock** tab, and enter the name of a city or select one from the list of cities.

Display the time in two different regions: Open  **Settings**, and then go to **System > Date & time**. Enable **Dual clocks**, and set **Home city** to display the time in the region where you are currently located and the time in your home city on the lock screen.

-  Two times will only be displayed if you are in a different region than the one you selected as your home city; otherwise you will only see one.

Notepad

Manage Your Notes to Keep Your Records in Order

Want to share important notes or add something to favourites? Manage your notes to keep your records in order.

Share a note: Want to send your meeting notes to your colleague? On the list page of **All notes** or **All to-dos**, open the note you want to share, then touch  to select a sharing method and follow the onscreen prompts.

Add a note to favourites: Want to add a note to favourites so you can refer to it later? On the list page of **All notes**, swipe left on a note and touch . Alternatively, open the note you want to add to favourites and touch .

Delete a note: Want to delete an outdated note? On the list page of **All notes** or **All to-dos**, swipe left on a note, then touch . Alternatively, touch and hold a note to view options, select the note(s) you want to delete, and touch .

Search notes: Want to quickly find a note? Touch the search bar on the list page of **All notes** and enter the keywords into the search bar. Alternatively, swipe down on the home screen to access the search bar, and enter the keywords into the search bar.

Generate a to-do list: Want to create a shopping list? On the page of **Notepad**, touch  > , enter an item, and then touch **Save**. Add multiple items to generate a to-do list.

 After completing an item, go to the editing page of **All to-dos**, and select  on the left of the completed item.

Add a handwritten note: Want to quickly record your drawing or handwriting? Go to **Notes** > , touch , write your notes, and touch  to save it. You can write and draw in Notepad.

Add tags to notes: Want to easily view the categories of your notes? On the editing page of **Notes**, touch , and use different coloured tags to categorise different content for a clearer view of your notes.

Utilities

Check Your Screen Time

Digital balance allows you to check the app usage, helps you manage your screen time and guides you towards healthier device usage habits.

To check your device usage, open  **Settings**, and go to **Digital balance > More**.

Check today's screen time: Touch **Today**, and you can check your **Screen time**, **App usage**, **Unlocks**.

Check last seven days' screen time: Touch **Last seven days**, and then check your **Screen time**, **App usage**, **Unlocks**.

Recorder

Use Recorder to Make Audio Notes

Have you ever felt like you do not have enough time to take important notes during a meeting? Do you need to sort out a pile of notes from an interview or class? Recorder lets you record audio files that you can conveniently play back later.

Open  **Recorder**, and touch  to begin recording. While recording, you can add tags at important points. Touch  to finish recording and save the audio file.

After the recording is completed, you can:

- **Play recording from tag:** In the recording file list, touch a recording to go to the play screen. On the play screen, you can then touch a tag that you have added and play the recording from that point.
- **Manage recordings:** Touch and hold a recording for options such as sharing or deleting the recording.

 In the recording file list, touch and hold a recording file, and then touch  > **Details** to view its storage location.

Edit a Recording

Share, Delete, or Rename a Recording

- 1 Go to  **Recorder**.
- 2 Select a recording and touch  to share, delete, or rename it.

Edit a Recording

- 1 Go to  **Recorder**.
- 2 Touch  to display the waveform of the recording.

- 3 Drag the start and end bars to adjust the clip length.
- 4 Touch  and select **Keep selected part** or **Delete selected part**.
- 5 Touch  to save the clip as a new file.

Convert a Recording to Text

- 1 Go to  **Recorder**.
- 2 Select a recording and touch **translate** to convert it into text.

Tag a Recording

- 1 Go to  **Recorder**.
- 2 Select a recording, and tag it where you want by touching . Touch the tag you have added to play the recording from where the tag is located.
- 3 To delete a tag, swipe left on the tag and touch .

Set the Recording Playback Mode

- 1 Go to  **Recorder**.
- 2 Select a recording, then you can:
 - Touch **Speed** to play the recording at 1.5, 2.0, or 0.5 times the normal speed. The default playback speed is 1.0 times the normal speed.
 - Touch **Skip silences** to skip the mute or low volume parts during playback.

Phone Clone

Data Backup to a USB Storage Device

If you are running out of storage space on your Phone or you want to back up your important data to an external storage device, you can connect your Phone to a USB storage device using a USB OTG cable and back up your data to the storage device. USB storage devices compatible with your Phone include USB flash drives, card readers, and devices with an SD card inserted.

Open  **Settings**, go to **System > Backup & restore > Data backup > External storage > USB storage**, then touch **BACK UP**. On the **Select data** screen, select the data you want to back up and touch **Back up**.

-  • You can go to **⋮ > Backup encryption > Encrypt backups** to enable **Backup encryption** on the backup page, and then set a password when prompted. The password will be used when you want to restore files later. Always remember your backup password or set security questions to help remember the password as you will not be able to retrieve your backup files without it.

Reset Your Phone

If the operating speed of your Phone starts to slow down due to long-term accumulation of caches and residual files, you can reset your Phone to erase these cached files completely and restore your device's factory settings.

Reset network settings: This will restore your Wi-Fi, mobile data network, and Bluetooth settings, including hotspot tethering and Bluetooth pairing information. It won't change other settings on your Phone, or delete any data or files.

Open  **Settings**, go to **System > Reset > Reset network settings**, touch **Reset network settings**, and follow the onscreen instructions to reset the settings.

Restore all settings: This will restore your device's initial network settings, fingerprint data, face data, and lock screen passwords. It won't reset settings for Find my Phone or HUAWEI ID, nor will it delete any data or files.

Open  **Settings**, go to **System > Reset > Reset all settings**, touch **Reset all settings**, and follow the onscreen instructions to reset the settings.

Restore factory settings: This will delete all data in your device's memory and storage, including your account settings, system settings, app data, installed apps, music, images, and documents, and restore your Phone to its original factory settings. Back up your data before restoring your device to its factory settings.

Open  **Settings**, go to **System > Reset > Reset phone**, touch **Reset phone**, enter the screen unlock password (if any), and follow the onscreen instructions to reset the settings.

Data Backup by Shared Folders to Your Computer or Home NAS Devices

Did you store important data, pictures, or large files on your Phone? You can back up your data to a computer or home NAS device by using a shared folder to prevent data loss and free up storage space on your Phone.

Open  **Settings**, go to **System > Backup & restore > Data backup > External storage**, and touch **Scan for shared folders**. After your Phone detects PCs or NAS devices on the same network through Wi-Fi scanning, touch to access a device and add its shared folder. Then touch **BACK UP**, select the data you want to back up in **Select data** and touch **Back up**.

 
-  . You can touch  > **Backup encryption > Encrypt backups** to enable **Backup encryption** on the backup page, and then set a password when prompted. The password will be used when you want to restore files later. Always remember your backup password or set security questions to help remember the password as you will not be able to retrieve your backup files without it.

Device Connection

Bluetooth

Connect Your Phone to Bluetooth Devices

Use Bluetooth to connect your Phone to Bluetooth headsets and in-car Bluetooth to navigate or listen to music while you drive. You can also connect your Phone to Bluetooth wearables to record and manage fitness data. Connecting Bluetooth devices to your Phone does not increase power consumption significantly.

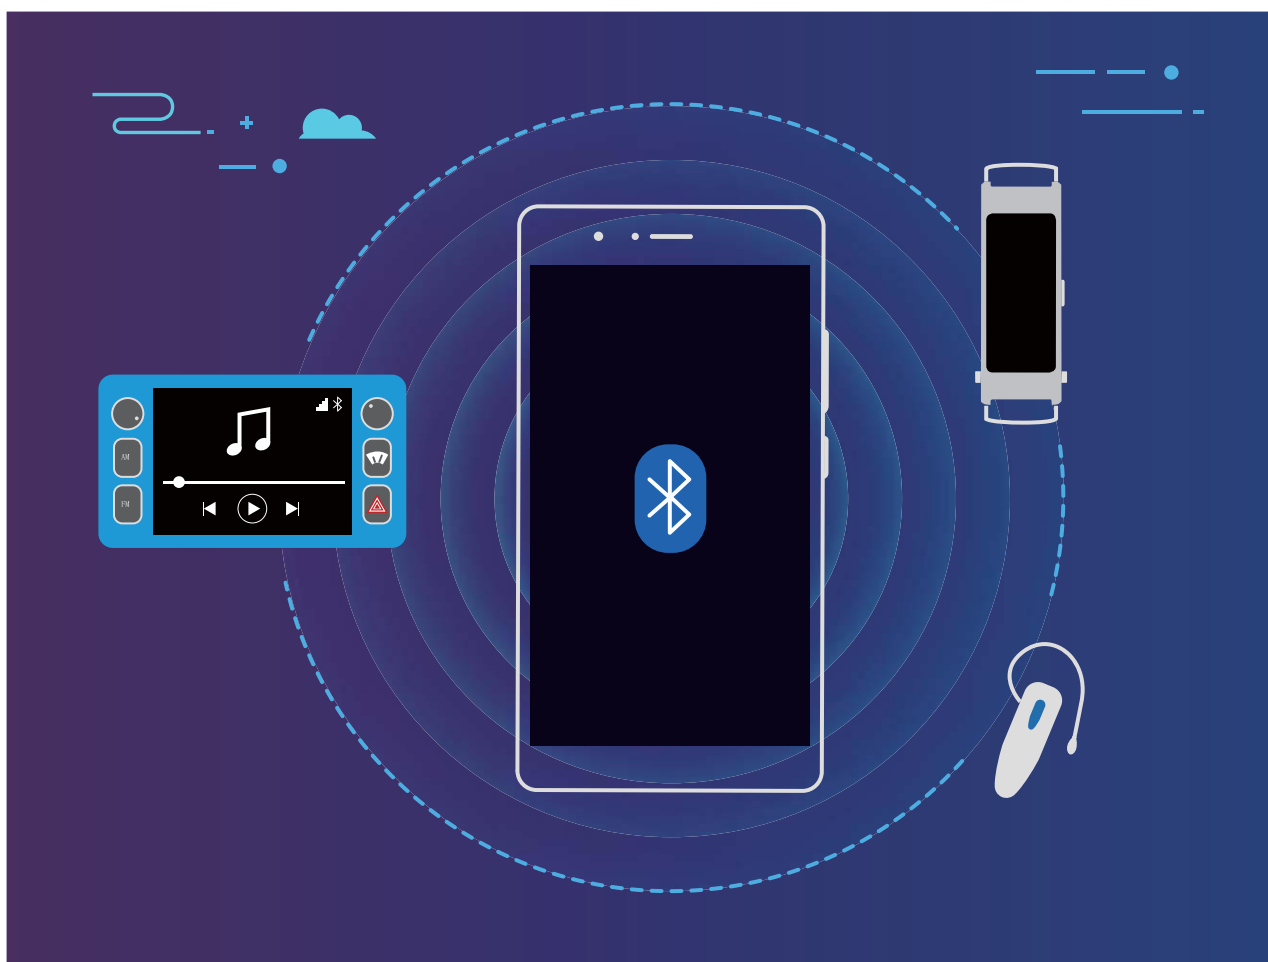

Bluetooth protocols used by Huawei devices and their functions:

HFP, HSP	Make calls
A2DP	Play music
AVRCP	Control music playback
OPP	Transfer files
PBAP	Sync contacts
MAP	Sync text messages

HID	Operate Bluetooth keyboards and mouses
PAN	Tethering
BLE	Connect to Bluetooth Low Energy (BLE) devices

Enable or disable Bluetooth: From the home screen, swipe down from the status bar, open the shortcuts panel, and then touch  to enable or disable Bluetooth. Touch and hold  to open the Bluetooth settings screen.

Pair a Bluetooth device: Enable **Bluetooth** from the Bluetooth device's settings screen. Check that the Bluetooth device is set to visible. From **Available devices**, touch the device you want to pair and then follow the onscreen instructions to complete pairing.

Unpair a Bluetooth device: Enable **Bluetooth** from the Bluetooth device's settings screen. Touch  next to the name of the paired device and then touch **Unpair**.

Change Bluetooth device name: From the Bluetooth settings screen, enable **Bluetooth**. Touch **Device name**, enter a new name for the device, and then touch **Save**.

View Bluetooth help: From the Bluetooth settings screen, touch  to view information on how to establish Bluetooth connections with in-car systems, headsets, speakers, wearables, phones, tablets, and computers.

Use Bluetooth to Share Data

Connect your Phone to another device over Bluetooth to share data, import and export contacts, and set up Internet tethering.

Use Bluetooth to send files: Ensure that your Phone is within Bluetooth range of the other device (10 m or 32 ft). You can then establish a Bluetooth connection and share multimedia files, web pages, contacts, documents, and apps between the two devices. Open  **Files**, touch and hold the file that you want to send, and then go to **More > Share > Bluetooth**. Follow the onscreen instructions to enable Bluetooth. When the other device is detected (Bluetooth must be enabled and the device must be visible), touch the name of the device to establish a connection and start sending files.

Receive files over Bluetooth: From the home screen, swipe down from the status bar, open the shortcuts panel, and then touch  to enable Bluetooth. Touch **Accept** on the file transfer notification to begin receiving the files. Received files are saved to the **Bluetooth** folder in **Files** by default.

Import or export contacts over Bluetooth: Open  **Contacts** and go to  **> Settings > Import/Export** to perform the following:

- **Import contacts:** Touch **Import via Bluetooth** and follow the onscreen instructions to establish a Bluetooth connection with the other device. Contacts from the other device will then be imported to your Phone automatically.

 
- **Export contacts:** Touch **Share contacts**, select the contacts that you want to share, touch  and select **Bluetooth**. Follow the onscreen instructions to establish a Bluetooth connection with the other device. Those contacts selected will be exported from your Phone to the other device automatically.

Device Projection

When you connect your device to an external display, it behaves like a computer, so you no longer need to lug your laptop back and forth between office and home. Simply use an adapter (such as a USB Type-C to HDMI adapter cable) or the wireless projection feature to connect your device to a display device, such as a TV. You can then combine all the benefits of a desktop computer with the convenience of a device.

Connect your device to an external display to enjoy the following features:

- **Privacy protection:** Notifications, incoming calls, and chat messages will show as red dots in the notification panel, but will not be visible on the external display.
- **Dual displays:** Display work-related content on the external display while you chat with friends on your device.
- **Desktop experience:** Open multiple windows, manage files, search your device, or change the wallpaper. You can also connect a mouse, keyboard, and other peripherals.
- **Wireless projection:** Wirelessly project your device to an external display.
- **Big-screen meetings:** Project slides onto the external display. Use the pointer feature to write notes on the slides.

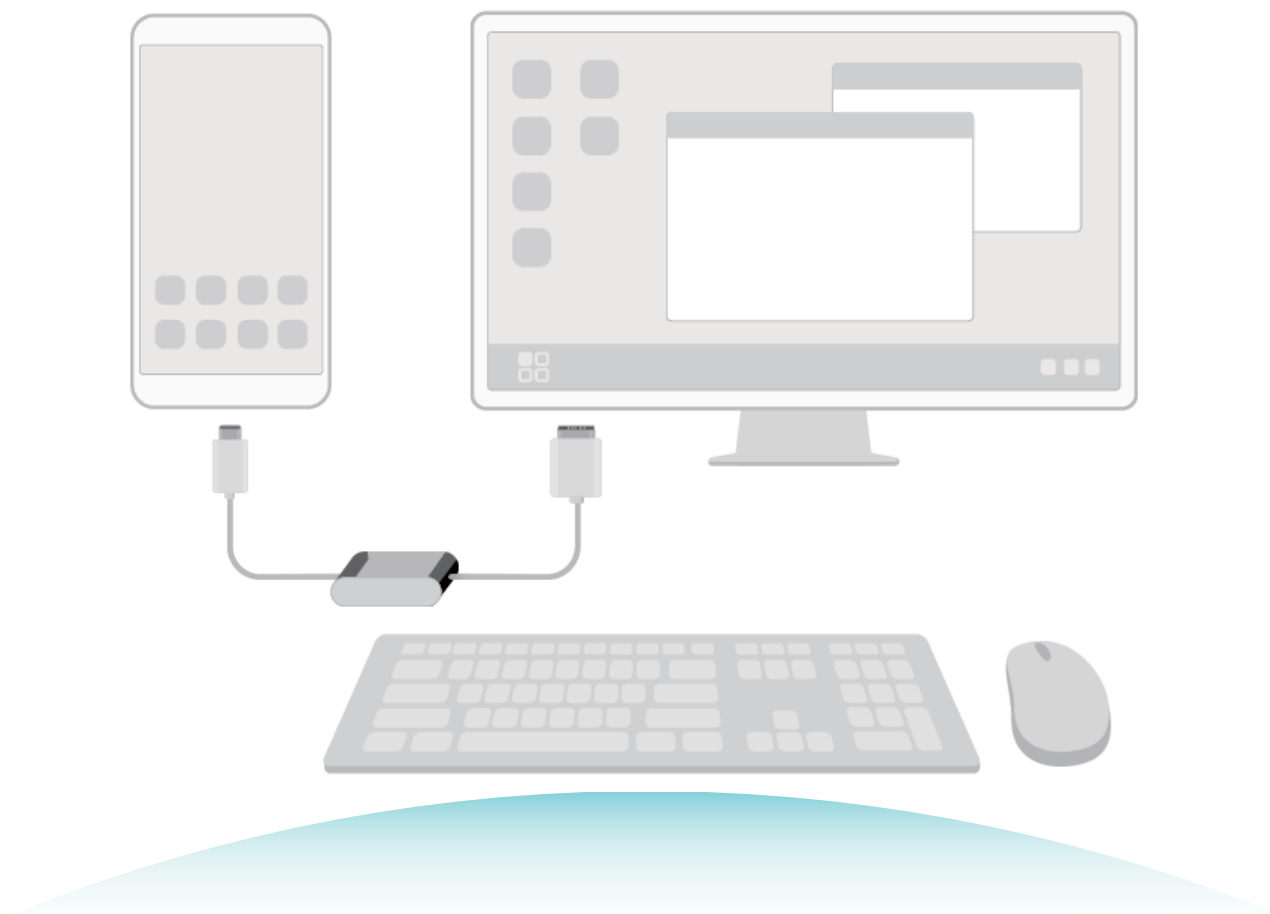

Transfer Data between Your Phone and Computer

Use a USB cable to connect your Phone to your computer and transfer data.

Select USB connection mode

Use a USB cable to connect your Phone to the computer, you can then select a default connection method. You can transfer photos and files between your Phone and computer, or charge your Phone through the USB connection to your computer.

Swipe down from the status bar to open the notification panel, then touch **Settings > Touch for more options** and select a method for connecting your device and your computer.

- **Transfer photos:** Transfer photos between your Phone and computer.
- **Transfer files:** Transfer files between your Phone and computer.
- **Charge only:** Charge your Phone with just a USB cable.
- **Input MIDI:** Use your Phone as a MIDI input device and play music on your computer.

Transfer data over a USB port

Connect your Phone to your Computer using a USB cable to transfer data and perform other tasks.

- **Transfer files:** Media Transfer Protocol (MTP) is a type of transmission protocol for media files. You can transfer files between your Phone and computer using this connection method. First, install Windows Media Player 11 or later on your computer.

Swipe down from the status bar to open the notification panel, and then set your USB connection method to **Transfer files**. Your computer will automatically install the necessary drivers. After the installation is complete, click the new drive icon named Phone on the computer to view the files on your Phone. You can use Windows Media Player to view the media files on your Phone.

- **Transfer images:** Picture Transfer Protocol (PTP) is a protocol that allows you to transfer images. You can upload and share photos between your Phone and computer using this connection method.

Swipe down from the status bar to open the notification panel, and then set your USB connection method to **Transfer photos**. Your computer will automatically install the necessary drivers. After the installation is complete, click the new drive icon named Phone on the computer to view the images on your Phone.

- **Transfer MIDI data to your Phone:** MIDI (Musical Instrument Digital Interface) is an industry standard audio format for composing music established by electronic instrument manufacturers.

Swipe down from the status bar to open the notification panel, and then set your USB connection method to **Input MIDI**. You can then use Phone to receive and process MIDI messages transmitted by other devices.

Huawei Share

Use Huawei Share to Quickly Share Files between Huawei Devices

You can use Huawei Share to quickly transfer photos, videos and other files between Huawei devices. Huawei Share uses Bluetooth to detect other nearby Huawei devices and then uses Wi-Fi Direct to quickly transfer files without using mobile data.

- Huawei Share uses Wi-Fi and Bluetooth to transfer data. When Huawei Share is enabled, Wi-Fi and Bluetooth are both automatically enabled.

Use Huawei Share to send files: Select the files you want to share and then touch **Share**. To send files, select the receiving device from the list of nearby devices and confirm.

Use Huawei Share to receive files: Swipe down from the status bar to open the notification panel, and then touch  to enable Huawei Share. Touch **ACCEPT** when the file transfer notification is displayed. Received files are saved by default to your **Files's Huawei Share** folder.

- No confirmation is required if the two Huawei devices have been logged in using the same HUAWEI ID.

Transfer Files Between Your Device and Computer with Huawei Share

Want to quickly transfer pictures and videos from your device to computer (Windows PC or Mac)? Huawei Share makes it simpler than before, without even needing a USB cable.

From your device to your Windows PC

- 1 To start, make sure your device is connected to the same network (for example, the same Wi-Fi network) as your computer.
- 2 Open  **Settings** on your device, go to **Device connectivity** > **Huawei Share**, then enable **Huawei Share** and **Computer share**.
- 3 On the same screen, check and record the **Name shown on computers**, then touch **Verification on computers** to view and record the username and password.
- 4 On your Windows PC, go to **Computer** > **Network**, double click **Name shown on computers**, and enter the username and password you recorded in the previous step. The Internal storage or Albums folders on your device are then displayed on your computer.
 -  The content of these folders is not automatically saved to your Windows PC, but can be accessed, copied, and saved locally as needed on the computer.
- 5 You can also edit the files or photos in Internal storage or Albums on your Windows PC, and the changes will be synced to your device automatically. Similarly, if you edit any files or photos on your device, the changes will be synced to your computer as well.

From your device to Mac

- 1 To start, make sure your device is connected to the same network (for example, the same Wi-Fi network) as your computer.
 - 2 Open  **Settings** on your device, go to **Device connectivity** > **Huawei Share**, then enable **Huawei Share** and **Computer share**.
 - 3 On the same screen, check and record the **Name shown on computers**, then touch **Verification on computers** to view and record the username and password.
 - 4 On the Mac, go to **Finder** > **Go to** > **Network**, double-click **Name shown on computers**, choose to register a user account, and enter the username and password you recorded in the previous step. The Internal storage or Albums folders are then displayed on your Mac.
 -  The content in these folders is not automatically saved to your Mac, but can be accessed, copied, and saved locally as needed on your computer.
 - 5 You can also edit the files or photos in Internal storage or Albums on your Mac, and the changes will be synced to your device automatically. Similarly, if you edit any files or photos on your device, the changes will be synced to your Mac as well.
-  This function is supported on Mac computers running iOS 10.8 or later.

One-Touch Printing with Huawei Share

How do I quickly print travel photos, work files, or my children's homework from my device? Experience the ease of one-touch printing with Huawei Share.

-  • Huawei Share now supports one-touch printing for images and PDF files.
 - For a list of supported printers, touch **Learn more** in the Huawei Share section (access this section by touching the Share icon on the picture or PDF you want to share), swipe left on the screen, then touch **What printers are supported?** to see the list.

Huawei Share's one-touch printing feature is convenient and easy to use. To start using it, swipe down from the status bar to display all shortcuts, and enable **Huawei Share**, then follow the steps below to pair with different types of printers:

- **Wi-Fi printer/Wi-Fi Direct printer:**

- 1 Power on the printer, and make sure that it connects to the same network as your device, or that Wi-Fi Direct is enabled.
- 2 Preview the file you want to print on your device, and then touch **Share**. Once the printer has been discovered, touch its name, and adjust specifications on the preview screen. Then simply touch **PRINT** to print.

- **Bluetooth printer:** Power on the printer, preview the file you want to print on your device, and then touch **Share**. Once the printer has been discovered, touch its name, and adjust specifications on the preview screen. Then simply touch **PRINT** to print.

-  When pairing the Bluetooth printer for the first time, start by making sure your device can find the printer, then press the power button on the printer for 1 second to ensure successful pairing.

Security and Privacy

Face Unlock

Enrol Your Facial Information and Enable Face Unlock

Face unlock allows you to unlock your device quickly and securely, without the need of a password.

- ⚠ • Face unlock can only be used when the owner account is logged in. It is not supported by PrivateSpace.
- Face unlock is not available if the lock screen password has not been entered for three or more days in a row, or if your device has been remotely locked or restarted.
- When using Face unlock, keep your eyes open, and face your device straight on from a distance of 20–50 cm (about 8–20 in.). In order to scan your face accurately, avoid using this feature when you are in a dark environment or facing direct light.
- Currently, only one face can be enrolled. Delete the current facial data to enrol again.

- 1 Open  **Settings**. Go to **Security & privacy > Face recognition** and enter your lock screen password.
 -  If you haven't set up a lock screen password, set one first. Besides the 6-digit PIN, you can set up other types of passwords: **Pattern**, **4-digit PIN**, **Custom PIN**, or **Password**.
- 2 Selecting **Enable raise to wake** will allow the screen to turn on and unlock when you pick up your device and hold it to your face. If you do not need this feature, leave it deselected. Touch **Get started**, and enrol your face.
- 3 Face unlock modes:
 - **Select an unlock method:** On the **Face recognition** screen, touch **Unlock device**. If you select **Direct unlock**, your device identifies your facial features and unlocks your screen when the screen is on. If you select **Slide to unlock**, after your device identifies your facial features, you can slide the lock screen to unlock. Selecting **Off** will disable Face unlock.
 - **Smart display of lock screen notifications:** Enable **Show notifications**. On the lock screen, your device hides notification details and displays them only after recognizing the owner's face.
 - **Access App lock:** Enable **Access App lock** to access App lock and locked apps using Face unlock.

Delete Face Data

If you no longer use Face unlock or want re-input your face data, you can delete the current face data.

Open  **Settings**, go to **Security & privacy > Face recognition**, follow the onscreen instructions and enter the lock screen password, then touch **Delete facial data** and follow the onscreen instructions to delete your current face data.

-  • Facial data will be erased if you reset all settings, restore your device to its factory settings, or set your password to none.
- Facial data will not be erased after online update.

Fingerprint

Fingerprint Recognition: Enjoy Faster Navigation and Enhanced Security

Fingerprint recognition not only allows you to unlock your Phone faster, it also provides added security to your personal information.

You can use your fingerprint to:

- **Unlock your screen with a single touch:** Want to avoid the hassle of using PIN codes and patterns to unlock your screen? Use your fingerprint to quickly and securely unlock your screen with a single touch.
- **Access your private files:** Afraid of forgetting your password for the Safe or app lock, or having it fall into the hands of someone you don't trust? Set fingerprint access for the Safe and app lock to keep your files and apps secure and accessible by only you.

Enrol a Fingerprint

Enrol a fingerprint on your device to use your fingerprint to unlock your screen, or to access Safe or App lock without having to enter a password.

-  • Fingerprint unlock is only available when your unlock method is set to **Pattern**, **PIN**, or **Password**. You are required to unlock your device with the lock screen password when you restart your device or when your fingerprint is not recognised.
- Before enrolling a fingerprint, make sure that your finger is clean and dry.

- 1** Open  **Settings**.
- 2** Front fingerprint and in-screen fingerprint: Go to **Security & privacy > Fingerprint ID > Change unlock method**; Rear fingerprint: Go to **Security & privacy > Fingerprint ID > Fingerprint management > Change unlock method**. Select **Pattern**, **4-digit PIN**, **Custom PIN**, or **Password**, then set a lock screen password.
- 3** Once you have set a password, touch **New fingerprint** to enrol a fingerprint.
- 4** Place your fingertip on the fingerprint sensor. Press down lightly on the sensor until your device vibrates. Repeat this step using different parts of your fingertip.
- 5** After the enrolment is complete, touch **OK**.

To unlock the screen, simply place your fingertip on the fingerprint sensor.

Add or Modify a Fingerprint

You can enrol a maximum of five fingerprints on your device. You can also delete or rename your fingerprints.

- 1 Open  **Settings**.
- 2 Front fingerprint and in-screen fingerprint: Go to **Security & privacy > Fingerprint ID**;
Rear fingerprint: Go to **Security & privacy > Fingerprint ID > Fingerprint management**.
- 3 Enter the lock screen password to access the fingerprint settings screen.
- 4 You can:
 - **Enrol a new fingerprint:** Touch **New fingerprint**, then follow the onscreen instructions to enrol a fingerprint.
 - **Rename or delete a fingerprint:** Touch a previously enrolled fingerprint to rename or delete it.
 - **Identify a fingerprint:** Touch **Identify fingerprint** to identify and highlight enrolled fingerprints.

Use a Fingerprint to Quickly Access Private Information

- 1 Open  **Settings**.
- 2 Front fingerprint and in-screen fingerprint: Go to **Security & privacy > Fingerprint ID**;
Rear fingerprint: Go to **Security & privacy > Fingerprint ID > Fingerprint management**.
- 3 Enter the lock screen password to access the fingerprint settings screen. Enable **Access Safe** and **Access App lock** as needed, then enter the password.

Now you can use your fingerprint to:

- Access Safe by opening  **Files** and touching **Safe**.
- Access locked apps on your home screen.

Enable or Disable Location Services

After obtaining the location information permission, apps can obtain your location at any time. If your location information is obtained by a malicious app, you may be at risk of harm or fraud. You can enable or disable location services as needed and regularly monitor and manage the allowed permissions for your apps to protect your privacy and security.

Enable or disable location services: Open  **Settings**, go to **Security & privacy > Location access**, and enable or disable **Access my location**. When location services are disabled, aside for pre-installed software (such as Find my Phone), your Phone will stop all apps and services from collecting and using your location information. The system will ask you to enable location services when you attempt to use these apps.

- Features may vary depending on your network provider.
- Huawei only uses location data to provide you with necessary functions and services, not for the purpose of identifying and collecting your private information.

Set indoor positioning assistance: Open  **Settings**, go to **Security & privacy > Location access > Advanced settings**, and enable or disable Wi-Fi and Bluetooth scanning. Scanning Wi-Fi networks and Bluetooth devices will improve the accuracy of indoor positioning.

Enable App Lock

App lock allows you to set a password for your important apps. Once you restart your device or unlock the screen, you will be asked to enter your App lock password when opening these apps. App lock adds an extra layer of protection for your private information and prevents unauthorised access to important apps on your device.

Enable App lock: Open  **Settings**. Go to **Security & privacy > App lock**. When you first access App lock, select **Lock screen password** or **Custom PIN** as your **App lock** verification password. Enter your password as prompted and on the **App lock** screen, toggle on the switch for the apps you want to lock.

Set your App lock password: Touch  on the **App lock** screen, then touch **Password type**. Select **Lock screen password** or **Custom PIN**.

Wi-Fi and Network

Wi-Fi

Introduction to Wi-Fi+

Wi-Fi+ intelligently connects to Wi-Fi networks to save mobile data consumption. When your device detects a known or free Wi-Fi network, it will automatically turn on Wi-Fi and connect to the network. Your device will also automatically select the optimal network in the area for the best Internet connection.

Once you have enabled Wi-Fi+, your device will:

- **Automatically select and connect to the optimal network:** Automatically select and connect to Wi-Fi networks you've previously connected to, free networks, or your mobile data network, depending on the signal strength at your current location.
 -  You can view the connection status by checking the icons in the status bar:
 - The  icon indicates that your device is connected to the Internet over Wi-Fi.
 - The  icon in the bottom left of the signal bar indicates that your device is connected to the Internet over mobile data.
- **Automatically turn Wi-Fi on:** Depending on the Wi-Fi networks you have connected to previously, Wi-Fi will be automatically enabled in specific locations. This will prevent your device from constantly searching for new networks.
- **Assess the quality of available networks:** Evaluate currently available network hotspots and prevent your device from automatically connecting to networks with no Internet connection.

Share a Wi-Fi Network with Wi-Fi Bridge

Wi-Fi bridge allows you to share your home Wi-Fi to friends and guests without having to reveal the password to them.

Enable Wi-Fi bridge: Open  **Settings**, go to **Wireless & networks > Personal hotspot > More**, and enable **Wi-Fi bridge**.

Set Wi-Fi bridge: Touch **Set Wi-Fi bridge** to view or set a temporary name and password for the shared Wi-Fi network.

Once you provide your friends or guests with the temporary name and password, they will be able to connect to the network until the feature is disabled.

-  Up to 4 devices can be connected to your home Wi-Fi through Wi-Fi bridge at any given time.

Transfer Data Using Wi-Fi Direct

Wi-Fi Direct allows you to rapidly transfer data between Huawei devices. Wi-Fi Direct is faster than Bluetooth and does not require devices to be paired. It is better suited to transferring large files over short distances.



Send files with Wi-Fi Direct: Open  **Files**, touch and hold a file you want to send, and go to **More** > **Share** > **Wi-Fi Direct**. When another device is detected, touch its name to establish the connection and begin file transfer.

Receive files with Wi-Fi Direct: Enable **Wi-Fi**. In the Wi-Fi settings screen, touch  > **Wi-Fi Direct** to enable detection. When you receive an incoming file prompt, touch **Accept** to begin the transfer. The received file will be saved under **Files** in the **Wi-Fi Direct** folder by default.

Turn Wi-Fi+ On or Off

Open  **Settings**, go to **Wireless & networks** > **Wi-Fi** >  > **Wi-Fi+**, and choose to enable or disable **Wi-Fi+**.

- Your Phone will automatically connect to the optimal network available after Wi-Fi+ is enabled.
- Wi-Fi+ may automatically switch to your mobile data network, depending on strength of Wi-Fi+ signals in your area. Note that using mobile data to download or view videos and other large files may incur additional data usage fees. To avoid excessive data charges, purchase an appropriate data plan.
- After Wi-Fi+ is enabled, even if Wi-Fi is disabled manually, the device may automatically switch to a Wi-Fi network when it detects a viable Wi-Fi network you have previously connected to.

Share Your Mobile Network with Other Devices

You can share your mobile data with your friends.

Use personal hotspot to share mobile data: Open  **Settings** and go to **Wireless & networks > Personal hotspot**. Set **Device name** and **Password**, then enable the hotspot to use it.

- **Set data limit for shared mobile data:** Go to **Settings > Wireless & networks > Personal hotspot > More**, and touch **Data limit** to set the data limit for a single session. When this limit is reached, your device will automatically disable the hotspot.

Use Bluetooth to share mobile data: Connect your device to another device using Bluetooth, then enable Bluetooth tethering to share your mobile data. Open  **Settings**, go to **Wireless & networks > Personal hotspot > More**, and enable **Bluetooth tethering**. On the **Bluetooth** settings screen of the paired device, touch  next to the paired device, then enable **Internet access** to establish an Internet connection and share your mobile data.

Use USB to share mobile data: Use a USB cable to connect your device to a computer. Open  **Settings**, go to **Wireless & networks > Personal hotspot > More**, and enable **USB tethering** to start sharing your mobile data.

- Depending on your computer's operating system, you may need to install device drivers or establish the relevant network connection on your computer before using this feature. Refer to your computer's operating system guide for more information.

Apps and Notifications

App Twin: Log in to Two Social Media Accounts at Once

Have you ever wished you could log in to two WeChat and Facebook accounts on your Phone without the hassle of constantly switching between them? App twin lets you log in to two WeChat and Facebook accounts at the same time, allowing you to keep your work and private life separate.

-  The App twin feature only works with WeChat, QQ, LINE, Facebook, Snapchat, WhatsApp, and Messenger. Download the latest versions of these apps before using this feature.

Open  **Settings**. Go to **Apps > App twin** and enable App twin for WeChat, QQ, LINE, Facebook, Snapchat, WhatsApp, or Messenger as required.

When App twin is enabled, two WeChat, QQ, LINE, Facebook, Snapchat, WhatsApp, or Messenger app icons are displayed on the home screen. This means that you can log in to two accounts at the same time. Touch and hold the twinned app icon on the home screen to quickly disable App twin.

Customise App Permissions to Use Your Device Your Way

Worried about third-party apps obtaining too many important permissions and disclosing your personal information? You can monitor the permissions of each app and deny unwanted permissions.

-  Disabling a permission may cause an app function to become unavailable. For example, if the location permission for a map app is disabled, the app will be unable to provide you with location and navigation services.

Set app permissions: Want to deny unwanted permissions? Open  **Settings**, and go to **Apps > Apps**, select the app and touch **Permissions** on the **App info** screen and then enable or disable the unwanted permissions.

Check and modify permissions: Want to check which apps are allowed important permissions? Open  **Settings** and touch **Apps > Permissions**, select the permission you want to view and touch the switch next to an app to allow or deny the permission for that app.

Sound and Display

Set Up Do Not Disturb Mode

Do not disturb mode blocks calls from strangers and only notifies you when you receive calls and messages from chosen contacts.

Open  **Settings**, then go to **Sounds > Do not disturb** to do the following:

- **Do not disturb:** Touch **Do not disturb** to immediately enable or disable this function.
- **Schedule rule:** Prevent interruptions at set times, such as weekends or evenings. Touch **Scheduled** to set the time period and repeat cycle.
- **Allow calls from important contacts:** Select **Calls**, then select **Contacts only** or **Favourites only**.
- **Allow messages from important contacts:** Select **Messages**, then select **Contacts only** or **Favourites only**.
- **Allow repeated calls to ring:** **Repeated calls** is enabled by default. Your device will ring when the same phone number calls more than once within 3 minutes.

Configure the Sound Settings

-  The availability and functionality of certain features may vary according to the device model, due to software and hardware differences.

Stereo sound in landscape mode: With the **Stereo+** feature enabled by default, your device will automatically switch to stereo sound when in landscape mode so you can enjoy stereo sound when watching films or gaming. To disable this feature, open  **Settings**, go to **Sounds > More sound settings**, and disable **Stereo+**.

Adjust system volume: Press a volume button and slide to adjust the media volume.

Alternatively, touch  to display the sound settings screen and adjust the ringtone, media, and alarm volume from there.

-  You can also adjust the volume in the system settings. Open  **Settings**, then touch **Sounds** and slide to adjust the volume.
- On the sound settings screen, touch **Default volume button control** and select **Ringtone volume**. You can now use the Volume buttons to adjust the ringtone volume.

Switch between sound, vibration, and silent mode: Swipe down the notification panel.

Touch  to switch between **Sound** mode, **Silent** mode, and **Vibration** mode.

Enable keypad and notification sounds: Open  **Settings**, and go to **Sounds > More sound settings** to enable or disable keypad touch sounds, notification sounds, and touch vibrations.

Set your device to Silent mode: From the **Sounds** screen, enable **Silent mode**, then enable **Silent mode** and **Vibrate in silent mode**. Now when you receive an incoming call, your screen will light up and your device will vibrate.

Customise your ringtone and notification sounds: From the **Sounds** screen, choose a ringtone or notification sound according to your preferences.

Enable Eye Comfort Mode

Eye Comfort mode can effectively reduce blue light and adjust the screen to display warmer colours, relieving eye fatigue and protecting your eyesight.

Enable Eye Comfort: Open  **Settings**, go to **Display > Eye Comfort**, then enable **Eye Comfort**. The  icon will then be displayed in the status bar. Once **Eye Comfort** mode is enabled, blue light will be filtered out and the screen will take on a yellowish tint.

Quickly enable or disable Eye Comfort mode: Swipe down from the status bar to open the notification panel. From the notification panel, expand the shortcuts panel, then touch  to enable or disable **Eye Comfort** mode.

Enable Eye Comfort mode on a schedule: Open  **Settings**, go to **Display > Eye Comfort**, then enable **Scheduled**. Specify a **Start** and **End** time for **Eye Comfort** mode to take effect.

Adjust the colour temperature in Eye Comfort mode: Once **Eye Comfort** mode is enabled, blue light will be filtered out and the screen will take on a mild yellowish tint. This is normal, and you can adjust the colour temperature as needed. After you enable **Eye Comfort** mode, drag the colour temperature slider for a cooler or warmer screen colour.

-  • After every half hour of screen time, rest your eyes for at least 10 minutes.
- Look into the distance to adjust the focusing muscles of your eyes and to avoid eye fatigue.
- Cultivating good eye care habits will protect your vision and prevent near-sightedness.

More Display Settings

Use Shortcuts to Access Frequently Used Features

-  If you touch and hold an app icon and no shortcut is created, the app does not support home screen shortcuts.

Each app supports up to four frequently used features. These are preset by the app and cannot be changed.

Quickly access frequently used app features: Touch and hold an app icon, and then touch a frequently used feature to access it. For example, to take a selfie, touch and hold the Camera icon, and then touch **Selfie** in the pop-up menu to create a selfie shortcut.

Add shortcuts to your home screen: Touch and hold an app icon on your home screen to bring up the menu. Touch and hold the desired feature and drag it to your home screen to create a shortcut. For example, you can add a shortcut for the camera's selfie feature to the home screen.

Storage

Enable Memory Cleanup

Your device may slow down over time as your storage space gets smaller. Use Memory cleanup to free up storage space, improve system performance, and keep your device running smoothly.

Open  **Optimiser**, then touch **Cleanup** to clean up memory and clear the cache to optimise performance. If your storage space is still low, perform a deep clean to free up additional storage space.

Smart Assistance

Access Device Functions from Anywhere with Navigation Dock

In order to close an app or return to the home screen, you must use the navigation bar at the bottom of your device. You can enable the Navigation dock feature on your device to avoid using navigation buttons and to comfortably operate your device with one hand.

Open  **Settings**. Go to **System > System navigation > Navigation dock** and enable **Navigation dock**. The Navigation dock will appear on the screen. You can then drag it to your preferred location. The Navigation dock can perform the following actions:

- **Back:** Touch the Navigation dock once to go back one step, or touch it twice to go back two steps.
- **Home:** Touch and hold the Navigation dock and then release it to go to the home screen.
- **View background apps:** Touch and hold the Navigation dock and then swipe left or right to view any apps that are running in the background.

System

Change the Input Method

You can change the input method on your device as desired.

Switch the input method: Open  **Settings**, go to **System > Language & input > Default keyboard**, and select an input method.

Accessibility

Use Text-to-Speech Output with TalkBack

The text-to-speech feature can read aloud texts on the screen of your device. It can also be used with TalkBack to help you interact with your device when you can't read content on your screen clearly.

Open  **Settings**, go to **Smart assistance > Accessibility > Text-to-speech**, then configure your preferred engine and adjust the speech rate and pitch.

Enable Colour Correction

Colour correction enables your device to compensate for colour blindness.

-  When colour correction is enabled, users with normal colour vision may have difficulty viewing some colours.

Open  **Settings**, go to **Smart assistance > Accessibility > Colour correction**, then enable **Colour correction**. Touch **Correction mode** to select the required colour correction mode.

General Settings

Change Your System Language

You can change the system language on your device as needed.

Open  **Settings**, go to **System > Language & input > Language and region**, then select the language you want to use. If the language you want to use is not listed, touch **Add language** to search for additional languages. You can also touch **Region** to select the country/region. The system interface is displayed according to the local habits of the selected region.

Set the System Date and Time

If you travel abroad or change your SIM card, your device will automatically display the date and time provided by the local mobile network. You can also adjust the date and time manually, change the time format, or set dual clocks on your lock screen.

Open  **Settings**, and go to **System > Date & time**. From here you can:

- **Change the date and time:** Enable **Set automatically** to sync your device's date and time with that of your mobile network. Disable **Set automatically** to set your date and time manually.
- **Change the time zone:** Enable **Set automatically** to sync your device's time zone with that of your mobile network. Disable **Set automatically** to set your time zone manually.
- **Change the time format:** Enable **24-hour time** to set your time format to 24 hours. Disable **24-hour time** to set your time format to 12 hours.
- **Set dual clocks on your lock screen:** When you are roaming outside of your home country, your device will automatically display the local date and time provided by the local mobile network. Enable **Dual clocks** and set **Home city** to display dual clocks on your lock screen. One clock will display the local time and the other clock will display the time in your home country.

Print Documents and Photos from Your Phone

Connect your Phone to a printer over Wi-Fi to print out documents and photos with ease.

-  • Mopria allows you to print directly from your Phone to a Mopria-certified printer. The printer connects to your Phone over Wi-Fi.
 - If your printer is not Mopria-certified, contact the printer manufacturer to obtain a plug-in for your model.
- 1** Connect your Phone and printer to the same Wi-Fi network.
 - **Connect to your printer's hotspot:** If your printer has a wireless hotspot, follow the instructions in the printer manual to enable the hotspot and set a password. On your Phone, open  **Settings** and go to **Wireless & networks > Wi-Fi**. Enable **Wi-Fi**, select the printer hotspot, and then follow the onscreen instructions to establish the connection.
 - **Connect with Wi-Fi Direct:** If your printer supports Wi-Fi Direct, follow the instructions in the printer manual to enable this feature. On your Phone, open  **Settings** and go to **Wireless & networks > Wi-Fi**. Enable **Wi-Fi**, touch  > **Wi-Fi Direct**, and then select your printer from the list of detected devices.
 - **Connect to your router:** On your printer, enable Wi-Fi and connect to your home router. On your Phone, open  **Settings** and go to **Wireless & networks > Wi-Fi**. Enable **Wi-Fi**, select your router, and then follow the onscreen instructions to complete the settings.
 - 2** Open  **Settings**. Go to **Device connectivity > Printing > Default Print Service** and check that **Default Print Service** is enabled. Select a printer from the search results, follow the onscreen instructions to manually add a printer.
 - 3** You can now print directly from your Phone:

- **Print an image:** Go to **Gallery**. Open the image that you want to print, go to **More** > **Print or export to PDF**, and then follow the onscreen instructions to send the image to the printer.
- **Print a webpage:** In your browser, open the webpage that you want to print, and then select the print option from the menu.
- **Print a document:** Open the document that you want to print in a productivity app and select the print option from the menu.
- **Print a note:** Open  **Notepad**. Open the note that you want to print, go to **Print**, and then follow the onscreen instructions to send the note to the printer.

Set Scheduled Power On/Off

Use the Schedule power on/off feature to power your device on and off at set times in order to save power and prevent interruptions while resting.

Open  **Settings**, go to **Smart assistance** > **Scheduled power on/off**, enable **Scheduled power on/off**, then set the power on and power off times as well as the repeat cycle. Your device will power on and off automatically at the selected times.

To disable **Scheduled power on/off**, toggle the switch off.

View Memory and Storage Status

Unsure of how much memory and storage you have left after using your Phone for a long time? You can view your Phone's memory and storage information to help you monitor your memory and storage use and decide whether to perform a cleanup.

 Not all devices support microSD cards.

Open  **Settings**, and touch **Storage** to view the memory usage, and free up more space in a timely manner based on the available storage space.

Clean up space (recommended): If you select **CLEAN UP**, you can view the usage details of apps. Based on the scan result, you can also manually clean up the system as recommended or specify items to clean up.

System Update

Update the Device System Online

-  Before installing the update, connect your device to the Internet. Online updates consume mobile data, so it is recommended that you use a Wi-Fi network.
- Make sure that the battery level remains above 30% during the update.
- Using unauthorised third-party software to update your device may damage your device or put your personal information at risk. You are advised to update your device online or bring your device and proof of purchase to an authorised Huawei Customer Service Centre for updates.
- Back up important data before updating your device.
- After the update, certain third-party apps, such as e-banking and game apps, may be incompatible with the new system. Regularly update such third-party apps to fix compatibility issues.

1 Open  **Settings**.

2 Go to **System > Software update**. When the system detects a new version, go to **New version > DOWNLOAD AND INSTALL**.

-  To disable system updates, go to  and disable **Auto-download over Wi-Fi**.

Device updates take some time. Do not perform any operations during the update. After an update, your device will automatically restart.

Legal Notice

Legal Notice

Copyright © Huawei Technologies Co., Ltd. 2019. All rights reserved.

This document, whether in part or whole, shall not be reproduced or transmitted in any way, shape, or form without the prior written consent of Huawei Technologies Co., Ltd. and its affiliates ("Huawei").

The product described in this document may include software that is the copyright of Huawei or its licensors. Such software shall not be reproduced, distributed, modified, decompiled, disassembled, decrypted, extracted, reverse engineered, leased, assigned, or sublicensed unless such restrictions are prohibited by law or such actions are approved by the copyright holder.

Trademarks and Permissions



HUAWEI, HUAWEI, and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Android is a trademark of Google LLC.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by *Bluetooth SIG, Inc.* and any use of such marks by Huawei Technologies Co., Ltd. is under license.

Other trademarks, products, services and company names mentioned herein may be the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed or the capacities and settings of the local network, and therefore may not be activated or may be limited by local network operators or network service providers.

Therefore, the descriptions herein may not exactly match the purchased product or its accessories.

Huawei reserves the right to change or modify any information or specifications contained in this document at any time without prior notice and without any liability.

Third-Party Software Statement

Huawei does not own the intellectual property of the third-party software and applications that are delivered with this product. Therefore, Huawei will not provide any warranty of any kind for third-party software and applications. Neither will Huawei provide support to customers who use third-party software and applications, nor be responsible or liable for the functions or performance of third-party software and applications.

Third-party software and applications services may be interrupted or terminated at any time, and Huawei does not guarantee the availability of any content or service. Third-party service

providers provide content and services through network or transmission tools outside of the control of Huawei. To the greatest extent permitted by applicable law, it is explicitly stated that Huawei shall not compensate or be liable for services provided by third-party service providers, or the interruption or termination of third-party contents or services.

Huawei shall not be responsible for the legality, quality, or any other aspects of any third-party software installed on this product, or for any uploaded or downloaded third-party works in any form, including but not limited to texts, images, videos, or software etc.

Customers shall bear the risk for any and all effects, including incompatibility between the software and this product, which result from installing software or uploading or downloading the third-party works.

This product is based on the open-source Android™ platform. Huawei has made necessary changes to the platform. Therefore, this product may not support all the functions that are supported by the standard Android platform or may be incompatible with third-party software. Huawei does not provide any warranty or representation in connect with any such compatibility and expressly excludes all liability in connection with such matters.

DISCLAIMER

ALL CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL HUAWEI BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, OR LOSS OF PROFITS, BUSINESS, REVENUE, DATA, GOODWILL SAVINGS OR ANTICIPATED SAVINGS REGARDLESS OF WHETHER SUCH LOSSES ARE FORSEEABLE OR NOT. THE MAXIMUM LIABILITY (THIS LIMITATION SHALL NOT APPLY TO LIABILITY FOR PERSONAL INJURY TO THE EXTENT APPLICABLE LAW PROHIBITS SUCH A LIMITATION) OF HUAWEI ARISING FROM THE USE OF THE PRODUCT DESCRIBED IN THIS DOCUMENT SHALL BE LIMITED TO THE AMOUNT PAID BY CUSTOMERS FOR THE PURCHASE OF THIS PRODUCT.

Import and Export Regulations

All applicable export or import laws and regulations must be complied with and all necessary governmental permits and licenses must be obtained before exporting or importing the product, including the software and technical data, described in this document.

Personal Information and Data Security

The use of some functions or third-party applications on your device could result in your personal information and data being lost or becoming accessible to others. Use the following measures to help you protect your personal information:

- Put your device in a safe place to prevent unauthorised use.
- Set your device screen to lock and set a password or unlock pattern.
- Periodically back up personal information stored on your SIM card, memory card or your device memory. If you change to a different device, be sure to move or delete any personal information on your old device.
- Do not open messages or emails from strangers to prevent your device from becoming infected with a virus.
- When using your device to browse the Internet, do not visit websites that might pose a security risk to avoid your personal information from being stolen.
- If you use services such as the portable Wi-Fi hotspot or Bluetooth, set passwords for these services to prevent unauthorised access. Turn these services off when they are not in use.
- Install device security software and regularly scan for viruses.
- Be sure to obtain third-party applications from a legitimate source. Downloaded third-party applications should be scanned for viruses.
- Install security software or patches released by Huawei or authorised third-party application providers.
- Using unauthorised third-party software to update your device may damage your device or put your personal information at risk. It is recommended that you update through your device's online update feature or download official update packages for your device model from Huawei.
- Some applications require and transmit location information. As a result, a third-party may be able to share your location information.
- Some third-party application providers may collect detection and diagnostic information on your device to improve their products and services.

Obtaining help

Read the Quick Start Guide included with your phone.

Touch **Settings** > **System** > **About phone** > **Legal** to read the legal information.

Visit <http://consumer.huawei.com/en/> for more information.

For more information

For more information, you can enter a feature name in the search box of **Tips**.

This guide is for your reference only. The actual product, including but not limited to the colour, size, and screen layout, may vary. All statements, information, and recommendations in this guide do not constitute a warranty of any kind, express or implied.

Please visit <http://consumer.huawei.com/en/support/hotline> for up to date support hotline and email address information for your country or region.

Model: ART-L28
ART-L29

EMUI 9.1.1_01