



KAZAM Life C4

User Manual

ALL RIGHTS RESERVED

©2013 Kazam Mobile Ltd. All rights are reserved. Kazam, the Kazam logo and the Kazam icon are trademarks of Kazam Mobile Ltd. No part of this document can be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners.

While all the efforts have been made to ensure the accuracy of contents in this manual, we presume no responsibility for errors or omissions or statements of any kind, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause. We operate a policy of continuous development and reserve the right to make changes, modifications and improvements to the device, device features/specifications or any of its parts without prior notice.

Your device may have preinstalled bookmarks and links for third party internet sites and may allow you to access third party sites. These are not affiliated with us, and we do not endorse or assume liability for them. If you access such sites take precautions for security or content.

The limited warranty does not cover user manuals or any third party software, settings, content, data or links, whether included in, or downloaded to the product, whether included during installation, assembly, shipping or any other time in the delivery chain, or otherwise and in any way acquired by you. To the extent permitted by applicable law(s), we do not warrant that any of our software will meet your requirements, will work in combination with any hardware or software applications provided by a third party, that the operations of the software will be uninterrupted or error free or that any defects in the software are correctable or will be corrected.

 **User Manual is provided to guide the user about the functionality of the device. It does not constitute any certificate of technology. Some functions may vary due to modifications and upgrades of software, or due to printing mistake.**

SAFETY PRECAUTIONS

Please read the following safety guidelines before using the device.

- ⚠ Do not use the mobile phone while you are driving.
- ⚠ Do not place magnetic storage media near your mobile phone, as the magnetic force from the device may erase the information stored on it.
- ⚠ Keep your mobile phone and its accessories away from children.
- ⚠ Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. People with active medical implants should keep their mobile phone at least 15 cm away from the implant.
- ⚠ Permanent hearing loss may occur if you use earphones or headphones at high volume.
- ⚠ Use a wireless hands-free system (headphone/ headset) with a low power Bluetooth emitter.
- ⚠ Make sure the mobile phone has a low SAR.
- ⚠ Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- ⚠ Use mobile phone when the signal quality is good.

Notice:

- ⚠ Warranty is invalidated if the mobile phone or accessories are dismantled, the manufacturer will not be liable to pay for damages.
- ⚠ Only use original batteries and charging devices.
- ⚠ Back up important data regularly and store it properly. The manufacturer is not liable for any loss of data due to mis-operation, poor signal or power cut, etc.
- ⚠ All screen images in this manual are for reference only, content displayed may depend on the pre-setting of the service provider, the network operator or the SIM card. If any functions referred to in this manual are different from those of your device, please follow your device.
- ⚠ Do not put use it in a place with flammable gas such as a petrol pumps. The temperature recommended for using the device is 10-55 °C. Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.
- ⚠ Our cellular phones are in accordance with the communication industry standards of PRC, and also according in accordance with standards of European, and are approved for GSM networks.
- ⚠ Your phone may be used internationally with various networks depending on your roaming arrangements with your service provider.
- ⚠ Only use the chargers listed in the manufacturer's catalogue should be used. Using any other charger may be dangerous and would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.
- ⚠ Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15cm be maintained between the phone and an implant.

⚠ If your mobile phone or any of its accessories do not function normally, please contact Kazam customer support. The qualified personnel will assist you, and if necessary will arrange for a repair.

TABLE OF CONTENTS

ALL RIGHTS RESERVED	1
SAFETY PRECAUTIONS	2
TABLE OF CONTENTS	4
1. UNDERSTANDING YOUR DEVICE	5
1.1. GENERAL INFO	5
1.2. DEVICE OVERVIEW	5
2. GETTING STARTED	6
2.1. INSTALLING CARDS & BATTERY	6
2.2. POWERING ON/OFF THE DEVICE	7
3. BASIC OPERATIONS	8
3.1. CALLING	8
3.2. MESSAGING	9
3.3. PHONEBOOK	10
4. CALL HISTORY	11
5. SETTINGS	12
5.1. PROFILES	12
5.2. PHONE SETTINGS	12
5.3. SOS SETTINGS	12
5.4. CALL SETTINGS	13
5.5. FAMILY NUMBER	13
5.6. NETWORK SETTINGS	13
5.7. CONNECTIVITY	14
5.8. SECURITY SETTINGS	14
5.9. RESTORE SETTINGS	15
6. PROFILES	15
7. MULTIMEDIA	15
7.1. CAMERA	15
7.2. IMAGE VIEWER	15
7.3. VIDEO RECORDER	16
7.4. VIDEO PLAYER	16
7.5. AUDIO PLAYER	16
7.6. SOUND RECORDER	16
7.7. FM RADIO	17
8. EXTRAS	17
8.1. CALENDAR	17
8.2. ALARM	17
8.3. CALCULATOR	17
8.4. WORLD CLOCK	19
8.5. TORCH LIGHT	19
9. SPECIFICATIONS	20

1. UNDERSTANDING YOUR DEVICE

1.1 GENERAL INFO

KAZAM Life C4 is an easy to use, clamshell, feature phone 2.2" VGA screen with 176*220 resolution. It has a fixed focus front camera, an 800mAh battery and expandable memory. It supports MMS, SMS and Bluetooth.

1.2 DEVICE OVERVIEW



- | | |
|---------------------|-------------------------|
| 1. Earpiece | 2. Display |
| 3. Quick dial keys | 4. Navigation key |
| 5. End key | 6. Dial key |
| 7. Keypad | 8. SOS key |
| 9. Speaker | 10. Volume key |
| 11. Camera lens | 12. SMS indication |
| 13. Call indication | 13. Charging indication |
| 14. Camera key | 15. Charging socket |
| 17. Torch | |

2. GETTING STARTED

2.1 INSTALLING SIM CARDS & BATTERY

Please switch off your device before removing the battery, inserting a SIM or memory card.

Installing Battery

To install the battery please follow the steps below:-

- ✎ Remove the back cover of the device.
- ✎ Hold the device with the front facing downwards.
- ✎ Insert the battery ensuring it is the correct way round.
- ✎ Replace the battery cover until it clicks into place.

Charging the Battery

The device prompts a warning tone and message indicating insufficient battery when the battery power is low. Please follow the instructions below to charge your device:-

- ✎ Plug the connector of the charger into the micro USB port on the device.
- ✎ Plug the charger into a standard AC wall outlet.


Charging.....  Fully Charged..... 

It is recommended to fully charge the battery before using the device for the first time.

Installing SIM Card

In order to install you SIM card, follow the steps below:-


- ✎ Remove the back cover of the device.
- ✎ Hold the device with the front facing downwards.
- ✎ Remove the battery.
- ✎ Insert the SIM card into the device as shown below.
- ✎ Replace the battery.
- ✎ Replace the battery cover until it clicks into place.

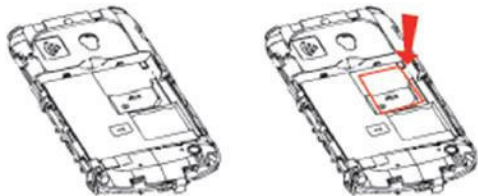

Installing Memory Card

Your device supports micro SD card, which is a multimedia memory card used to increase the memory of the device. The micro SD card is small and should be installed carefully to avoid any kind of damage. Please follow the steps below to install the memory card in the device:

- ✎ Remove the back cover of the device.
- ✎ Hold the device with the front facing downwards.
- ✎ Remove the battery
- ✎ Slot the micro SD card into the device as shown below.
- ✎ Replace the battery.
- ✎ Replace the battery cover until it clicks into place.

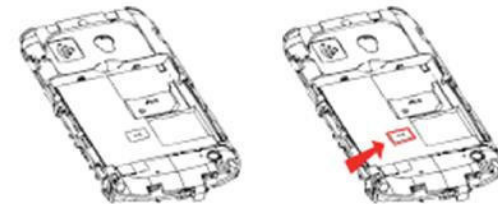

2.2 POWERING ON/OFF THE DEVICE

Turning On the Device

After installing the SIM card and charging the battery, you are now ready to turn on your device.

- ✎ Press and hold the Power Key to turn on the device.

Turning Off the Device

- ✎ Press and hold the Power Key for 3 seconds.

3. BASIC OPERATIONS

3.1 CALLING

Making Calls

If the icon  is visible in the information bar at the top of the screen, then you can make or receive calls. To make a call, follow the steps below:

- ✦ Direct dial
In standby mode, press the corresponding numeric keys to enter the phone number that you want to dial, including necessary area codes. Short Press the Right soft key [Clear] to delete.
- ✦ International call
To make an international call, long press * key until the prefix symbol "+" of international call displays in screen.
- ✦ Dialling from contact list
Enter the Phonebook via the menu, use the Up/Down Navigator keys to scroll to the desired contact, or press the first letter of the name of the desired contact for quick search.
- ✦ Dialling from call history
Enter the Call centre (press the Green key from standby or via the menu), use the Up/ Down navigator keys to scroll to the desired contact, press the green key to direct dial.

Answer/Reject an Incoming Call

When you receive an incoming call, details of the contact name/number are displayed.

Press the call key or left soft key to answer the incoming call.

Press the power key once to reject the call.

Other Options during the call

To put a call on hold

If you are on a call you can put the call on hold by selecting Options - Hold.

In call options menu:-

Swap – Switch between active calls
Conference – Multi-call options. The availability of this option depends on your service provider.
End single call - End the current call.
End all calls- End all active calls
New call – Launches the dialler and a new call can be initiated
Phonebook – Launched phonebook interface
Messages – Launches messaging menu
Sound recorder - Record the current call. Note - Recording of the call, in some countries is illegal. Therefore, when you record calls, should seek prior approval from the other party.

3.2 MESSAGING

Your device is capable of sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service).

Creating an SMS

- ✦ From the main menu, select 'Messages' – 'Write message' - 'Text message'
- ✦ Select 'Options' – 'Send to' to enter a number or select a recipient contact
- ✦ Once recipient is specified, select 'Options' – 'Send' to send the message.

Creating an MMS

Your device comes preloaded with some MMS settings. Additional settings can be added and activated by accessing: –

Settings -> Connectivity -> Data Accounts -> Options -> Add PS Account

A multimedia message or MMS can contain letters, pictures, audio files or video files. To create and send a MMS follow the steps below:-

- ✦ From the main menu, select 'Messages' – 'Write message' - 'Multimedia message'
- ✦ Select 'Options' – 'Send to' to enter a number or select a recipient contact
- ✦ Select 'Options' to display MMS options where sounds, images and videos can be attached to the message.
- ✦ Once recipient is specified, select 'Options' – 'Send' to send the message.
- ✦ Please note: In order to maximise the MMS feature on the KAZAM Life C4, please use the feature when a memory card is inserted into the phone. This expands the internal memory and allows you to send messages over 200kb. Also, ensure the default memory in use is set to 'Memory Card' through the following menu structure:-
Messaging – Message settings - Multimedia message – Common settings – Preferred storage

Inbox

Received SMS and MMS messages are accessed here.

In message list, select Options – View Details to read the selected message or press the left soft key [Options] to launch the following menu:

View details: view the current message
Reply by SMS: Reply SMS to the message sender directly.
Reply by MMS: Reply MMS to the message sender directly.
Call Sender: Select to call the sender number.
Forward: forward the current message to other number.
Delete: Delete the highlighted message.
Delete all: Delete all messages in inbox.
Save to phonebook: Save the information in the sender number to the phonebook.

3.3 PHONEBOOK

Contact details (name and number) are stored in the phonebook. You can save information such as name and phone number.

To add a Contact

- ✦ From the home screen press the right soft key [Names] or select 'Phonebook' from the main menu.
- ✦ Select the 'Add new contact' option
- ✦ Select 'To SIM' or 'To Phone'.
- ✦ Enter contact information (Name and number)
- ✦ Select 'Options' – 'Save' to save the newly added contact.

Contact options

View: View the selected contact

Send text message: Send SMS to the selected contact

Send multimedia message: Send MMS to the selected contact

Call: Call the selected contact

Edit: You can edit the details of the highlighted contact

Delete: Delete the highlighted contact

Copy: Copy the highlighted contact to "SIM" or "phone"

Phonebook settings

Speed dial - Contacts can be assigned to numbered shortcuts.

'Enable speed dial' option to turn speed dial function on or off through the status option. Select 'Set number', scroll to a key number (8 available, from 2 to 9), select 'Edit', scroll to the desired contact to set as speed dial number for the key and press the OK key.

When a number is assigned to a speed dial and the function is enabled, you can simply press and hold the corresponding numeric key on idle screen to dial the assigned contact automatically.

Memory status: View the used memory of the SIM card and phone's phone book. The capacity of SIM card depends on different SIM card.

Copy contacts: Contacts can be copied between SIM and Phone memories

Move contacts: Contacts can be moved between SIM and Phone memories

Delete all contacts: Select to delete the contacts from SIM or the phone memory.

4. CALL HISTORY

- ✦ All received calls, dialled numbers and missed calls as well as their call time are recorded in the call history section of your phone.
- ✦ Call history can be accessed by pressing the Green key from standby or accessed through the 'Call History' item through the main menu.

If accessed through the menu item, the submenus are as follows:-

- ✦ Dialled calls
- ✦ Missed calls
- ✦ Received calls
- ✦ Delete call logs

Missed/dialled/Received

In the missed, dialled and received calls lists the following actions are applicable:-

- ✦ Green key – Make a call to the highlighted number/contact
- ✦ Centre key [OK] - View the details of highlighted call record
- ✦ Left soft key to launch the options menu as displayed below

View: View the details of current call record.

Call: call current record.

Send text message: send SMS to the select number

Save to phonebook: Store the number as a phonebook entry.

Delete: Delete the current call record.

Delete call logs: You can select dialed calls/Missed calls/Received calls/All calls to delete.

5. SETTINGS

5.1 PROFILES

The phone provides you with four profiles: general, silent, meeting, outdoor. The profiles tailor the phone settings according to different environments by using a range of different tones and alerts. These profiles can be personalised according to your requirements.

5.2 PHONE SETTINGS

Time and date

Set home city: You can choose a home city from the list to set as the phone home time zone.

Set time/date: Under this you can set the phone to the current date and time. The phone allows you to set the date range of calendar 2000 to 2030.

Set format: Under this you can set the time and date display format

Language

Under this you can choose the language that the phone menus are displayed in.

Display

LCD backlight: Select the brightness (1-5) and the timeout value of the backlight

Wallpaper: The standby image displayed for background wallpaper. You can choose from the built-in wallpaper and an image saved on the phone memory or memory card.

Screen auto lock

Under this you can set the time before the screen automatically locks. After the screen has automatically locked press and hold the lock key on the right hand side of the handset.

Show date and time: You can set the idle screen time display on or off.

Flight mode

Switch between normal and flight mode. When flight mode is active all network and data related functions will be restricted.

5.3 SOS SETTING

Four SOS numbers can be assigned to the smart SOS feature. When the SOS key, on the back of the handset, is pressed for 3 seconds the first number is called. If there is no answer from any of the assigned numbers after attempting to call each three times then the specified message will be sent to all of the assigned numbers.

Status: The Smart SOS feature can be enabled and disabled through this menu option. If the SOS key is pressed when the feature is not enabled, the option to enable the SOS feature will be presented to the user.

SOS list: Select this to assign specific numbers or contacts that will be called when the

Smart SOS feature is activated

If the SOS key is pressed when no number is assigned (but the feature is enabled) 112 emergency number is automatically called.

SOS message: The message that is sent to the assigned contacts when they are not available can be edited in this menu.

The phone has a message assigned by default which is 'Emergency, call me!'

5.4 CALL SETTINGS

Call waiting

You can choose to Activate, Deactivate or Query status of this feature.

If activated, you will be notified when a call is received whilst another call is ongoing.

Call divert

This feature allows you to divert to your phone calls to your voice mailbox or another phone number you specify. This function needs the support of network operator.

Call barring

Barring restrictions can be set on incoming and outgoing calls. This function needs the support of network operator, please contact the network operator.

Call restrictions can be set for activate, deactivate and query status

Advanced settings

Call time reminder

When set, an in call beep will sound after the selected time period. This can be after a specified number of seconds or you can select a time period after which the beep will sound.

Answer mode

Any key – When set, any key will answer incoming calls with the exception of the right soft key and the end key.

Auto answer when headset - When set, incoming calls will automatically be answered when a headset is inserted.

5.5 FAMILY NUMBER

Three individual contacts can be assigned to the quick dial keys found above the keypad.

Once assigned, these contacts can be called by selecting the quick dial keys when on idle screen.

5.6 NETWORK SETTINGS

Set network related settings such as network selection and the use of GPRS.

Automatic or manual network selection is available to determine the network that is camped onto.

5.7 CONNECTIVITY

✦ Data account

Preloaded MMS accounts are displayed.

These accounts can be manually edited, deleted and added.

✦ Bluetooth

You can transfer data, such as music to other device using Bluetooth. Search the device and accept/transfer data. The received data is automatically stored in the directory.

Bluetooth options

Power: Switch Bluetooth on and off

Visibility: If your device is visible other Bluetooth devices can find the phone; if you select off, other Bluetooth devices can't find the phone.

My device: Select to add new equipment, search for Bluetooth devices within range of the signal. After the Bluetooth device is found, you can select the the device you wish to connect with.

My name: Modify the Bluetooth device name that other users can identify your device with.

5.8 SECURITY SETTINGS

✦ SIM security

You can set and enable the PIN code and PIN" codes

Note that, if the input PIN code wrong three times, the SIM card will automatically lock and unlock and a PUK code will be required to unlock. Please contact your SIM card provider for more details regarding PUK codes.

PIN lock

Under this you can enable or disable PIN password, PIN code on or off are required to enter the correct PIN password. When open this feature, every time you turn the phone prompts you to enter the PIN password.

Change PIN

If the current PIN password is already open, you can make changes to the PIN password. First enter the old PIN password, after repeated twice to determine and identify new password.

Change PIN2

PIN2 password is used to access a particular function (such as setting a fixed number, set the call billing, etc.)

If PIN2 is entered incorrectly 3 times a PUK2 code will be required to unlock.

✦ Phone security

A phone passcode can be set there you can set the phone to avoid unauthorized use of your mobile phone.

Phone lock

Under this you can enable or disable phone password. To do so, the phone password

must be entered. **The default code is 0000.**

When this feature is enabled, every time you turn the phone on you are prompted to enter the password.

Change password

You can make changes to the phone password. First enter the old phone password, and then enter the newly selected password twice to confirm.

5.9 RESTORE SETTINGS

Reset the phone settings to default using this feature. The phone password is required to use this feature.

Default password is 0000.

7. MULTIMEDIA

7.1 CAMERA

Your phone is fitted with camera which allows you to take photos. You can store the pictures on the phone memory or on the inserted memory card.

- ✦ In the multimedia menu, select the camera to launch the camera preview screen.
- ✦ Press the OK key to take photo, press the right soft key to return, press the left soft key to launch the following options menu:-

Camera Options

Switch to video recorder: Switch to video preview screen.

Photos: Launches the image viewer list

Camera settings: Modify settings such as Anti-flicker and Delay timer.

Image settings: Image quality and image size can be modified

White balance: Image effect can be set

Scene mode: Select between automatic and night camera modes

Storage: Choose the default image saving location as phone memory or memory card.

Restore default: Camera parameters can be restored back to their default values/

7.2 IMAGE VIEWER

This feature is convenient for users to view the photos stored in on the phone or memory card. Press the OK key to open the picture or press the left soft key to open the option menu:

View: Open the current image to view.
 Image information: Display the current image information.
 Send : Pictures can be sent via "MMS" or "Bluetooth".
 Use as: Picture can be set as idle screen wallpaper.
 Rename: Change the name of the selected picture.
 Delete : Delete the selected image.
 Storage : Phone or memory card can be set as the default image viewer

7.3 VIDEO RECORDER

- ✦ In the multimedia menu, select the video recorder to launch the video preview screen
- ✦ Press the centre key to start recording
- ✦ Press up/down navigation key to adjust the focal distance
- ✦ Press the left soft key the launch the options menu

Switch to camera: Switch to still camera
 Camcorder settings: Anti-flicker settings can be modified.
 Video settings: Can set the video quality
 Storage: You can set phone or memory card as storage location for recorded videos.

7.4 VIDEO PLAYER

This feature can be used to play video files stored on the phone memory or inserted memory card.
 The supported video formats are 3gp, mp4 and .avi files.
 In the multimedia menu, select the video player into the video list, press left soft key open the option menu:
 Play : Play the current video file
 Send: Videos can be sent via "MMS" or "Bluetooth"
 Rename : Change the name of the selected video.
 Delete : Delete the selected video.
 Storage : Phone memory or memory card videos can be displayed by default

7.5 AUDIO PLAYER

Audio files saved in the phone or memory card can be played through this menu item.

7.6 SOUND RECORDER

Audio can be recorded through this feature.

- ✦ Launch Sounds Recorder through the multimedia menu
- ✦ Press the left soft key [Options]
- ✦ Select 'New Record' and the recording starts.
- ✦ Whilst recording is on progress, the left soft key will pause and resume the recording and the right soft key will stop the recording.

The recorded audio files can also be renamed, sent and deleted when the options in list view is accessed.

7.7 FM RADIO

You can use your mobile phone to listen to FM radio stations once a supported headset is plugged into the handset. Please press the side key to adjust music volume.

- ✦ Ensure headset in inserted
- ✦ Launch FM Radio form multimedia menu
- ✦ Press middle key to switch radio on and off.
- ✦ The up and down navigation keys manually scroll through radio frequencies.
- ✦ The left and right navigation keys scroll through radio stations.

Radio options menu
 Channel list – Radio stations names and frequencies can be saved. When in FM Radio pressing the corresponding key will tune into the specified frequency.
 Manual input – Radio frequency can be manually entered.
 Auto search – Automatically searches and saves the found frequencies.

8. EXTRAS

8.1 CALENDAR

Calendar can be used to check the current date and plan events.

Calendar options
 Jump to date: Jump the selected date.
 Go to today: the date of the input query calendar information
 Go to weekly/monthly view: can set the calendar display mode through week or month.

8.2 CALCULATOR

Calculator helps you perform basic arithmetic functions, such as addition, subtraction, multiplication and division.
 The navigation keys correspond to the arithmetic function displayed in the calculator display.

Left navigation key – Multiply
 Right navigation key – Divide
 Up navigation key – Add
 Down navigation key – Subtract
 Middle key - Equals

8.3 ALARM

Alarms can be set to sound at the specified time. To add a new alarm follow these steps:-

- ✦ Launch the alarm feature through the 'Extras' menu.
- ✦ Highlight an alarm and select 'Edit'.
- ✦ In the status menu select 'On'.
- ✦ Select time for alarm to sound and repeat value.
- ✦ Select 'Options' – 'Save' and alarm is set.

When an alarm is active a bell icon is displayed at the top of the idle screen and the alarm will be checked in the list.

8.4 TORCH

Torch can be switched on through the torch menu or from an idle screen shortcut.

Torch menu

- ✦ Launch the torch light through the 'Extras' menu
- ✦ Highlight 'Torch light' and the middle key or the left soft key to toggle the torch on and off.

Idle screen shortcut

- ✦ On idle screen, press and hold the 0 key to switch the torch on and off.

8.5 SERVICES

The toolkit of the inserted SIM card can be accessed here. Please contact your network provider for more information and supported services.

8.6 FILE MANAGER

Files saved on the phone or memory card can be viewed and used here.

File manager options

- Open: Open the file or folder.
- New Folder – Create a new folder in which files can be stored
- Rename – The selected file or folder can be renamed.
- Delete – The selected file or folder can be deleted.
- Use as – If the selected file is an audio files it can be set as the ringtone for incoming calls. If the selected file is image file, it can be set as wallpaper.
- Sort by: can "name", "time", "size", "type" or "none".
- Send - The selected file can send by MMS or Bluetooth
- Copy: you can copy the select file to other folders.
- Move: you can move the select file to other folders.
- Details: you can view the select file information.

9. SPECIFICATION

Specification Sheet

KAZAM

Brand	KAZAM
Model	KAZAM Life C4
Available Colours	Dark Grey
Premium Easy to Use Clam Easy to use keypad; large screen and large menu icons; 3 dedicated quick dial keys; side keys for camera, volume; Camera; Torch; MMS; Smart SOS system	

Main Specification

Display

GSM Bands (MHz)	900/1800
3G Bands (MHz)	n/a
Internal User Memory	250kb (approximately) for MMS and Pictures
SD Expandable To	16GB
SIM Card Slots	Single
Size (mm)	97 x 48.5 x 17.7mm
Weight with Battery	81.2g

Size	2.2"
Type	TFT
Resolution	176x220
Camera	
Resolution	VGA
Type	Fixed Focus
Flash	no
Video	15FPS/ 25FPS

Connectivity

Bluetooth	YES
WiFi	NO
USB	YES
AUDIO	Micro USB

Applications and Features

MMS	YES
WAP	NO
Alarm	YES
World Clock	YES
Calendar	YES
Games	YES
Calculator	YES
FM Radio	YES
Torch	YES

Charging/Battery/Certifications

Charger	Type	USB
Battery	Removable	YES
Battery	Type	Li-Ion
Battery	Size	800mAh
Battery	Standby time	240 hours
Battery	Talk Time	200 mins
In box content	Phone, Charger, Quick start Guide, Warranty Card, Headset	

* The standby time and maximum talk time depend upon the network signals and settings.

ACCESSORIES

Use only batteries, chargers, and accessories approved by the manufacturer with this device. Use of any other types will invalidate the warranty and may be dangerous. Check with your dealer for available accessories. You may opt to buy:

Extra Battery

Extra batteries of various capacities are available from our company or through your dealer.

Charger Plug, charger cable

Charger plug used to connect with the charger cable for charging on wall outlets. Also you can use the charger cable to connect with the other devices such as the personal computers to charge the phone.

Charging time is about 2 to 3 hours. The charging condition is displayed on screen. You may use your phone while charging.

Earphone

A mini, practical, hands-free device; you can use its button to answer and end calls. Some models may also come with a volume control knob.

Do not plug or unplug the earphone when connecting dialed or incoming calls.

ENVIRONMENTAL CONCERN

Help us save the environment...GO GREEN!

All our endeavours are directed towards providing environmentally aware products to you. The materials used in our devices are recyclable and can be reused to make new products. We strive to make products that are safe for our consumers as well as the environment.

Preserve natural resources for future generations by recycling your mobile phone. Your mobile phone contains some metals which, when recycled properly, can be put back into circulation, decreasing the need for new metal mining.

Recycling reduces the need for raw materials, saves energy, helps mitigate global warming and reduces pollution, therefore preserving natural resources for the future.

Follow some simple steps and contribute towards saving the planet:

DO

- ☒ Recycle your handset and its accessories.
- ☒ To protect natural resources and to promote re-use of the material, kindly separate batteries from other type of waste.

DONT

- ☒ Do not dispose of your mobile and its battery in fire.
- ☒ Do not dispose your mobile with the regular waste.
- ☒ Do not over charge your handset. Remove the charger when battery is full.



This logo signifies that this product and/or its accessories should not be disposed of with other household waste.

Hazards of improper handling, accidental breakage, damage and /or improper recycling of hazardous elements, can result in the following:

- ☒ Birth defects, brain, heart, liver, kidney and skeletal system damage. Significant affect to the nervous and reproductive systems.
- ☒ When burned, cancer-producing dioxins can be released into the air we breathe; If thrown in landfills, leaching into groundwater affecting your local community
- ☒ In warm climates, the oxidation of mercury in the environment can be accelerated, leading to the creation of oxidized Hg atoms that are known to be associated with ozone depletion.
- ☒ Improper recycling additionally results in data security issues, as private electronic information remains on hard drive, if not properly removed before disposal.

How to Recycle

Please get your electronics products recycled only through authorised recyclers, approved by Pollution Control Board. We provide facility of recycling of our products, for details please visit our website or call our customer care. Help us to GO GREEN.

Constitution of Hazardous Elements in your Device:

Your device does not contain the following hazardous elements in a proportion higher than the limits provided hereunder: maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers; and maximum concentration value of 0.01% by weight in homogenous materials for cadmium.

EU Declaration of Conformity for R&TTE Directive 1999/5/EC

We **Kazam Mobile Limited**

Of **Suite 4B, 43 Berkeley Square, London, W1J 5FJ, United Kingdom**

Declare under our sole responsibility that the product

Product name: **Feature phone**

Trade name: **KAZAM**

Model name: **Life C4**

(Detailed description of product including name, type, model and supplementary

Information such as lot, batch or serial number, sources and number of items)

To which this declaration relates, is in conformity with the following standards

And/or other normative documents.

Standard	Report NO.
ETSI EN 301 489-1 V1.9.2 (2011-09) ETSI EN 301 489-7 V1.3.1 (2005-11) ETSI EN 301 489-17 V2.2.1 (2012-09)	RSZ140225004-02
EN 60950- 1:2006+A11:2009+A1:2010+A12:2011	RSZ140225004-03
EN 301 511 V9.0.2 (2003-03)	RSZ140225004-11
EN 50360:2001+A1:2012	RSZ140225004-20
ETSI EN 300 328 V1.7.1 (2006-10)	RSZ140225004-22

We hereby declare that (all essential radio test suites have been carried out and that) the above named product is in conformity to all the essential requirements Of Directive 1999/5/EC.

The Conformity assessment procedure referred to in Article 10 and detailed in Annex [III] or [IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

SIEMIC, INC., 775 Montague Expressway, Milpitas, CA 95035, USA


Identification mark: 1313 the equipment will also carry the
(Notified Body number) class 2 equipment identifier

Signature: 

Printed name/title: **Daniel Readman** / Manager

Tel: **+44 (0) 20 7491 6930**

Address: **Suite 4B, 43 Berkeley Square, London, W1J 5FJ, United Kingdom**

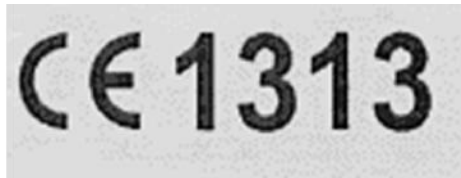

SAR Information

Head: 0.029 W/kg@10g (CE)

Body: 0.312 W/kg@10g (CE)

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.5 cm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.