

❒ The magnetic field produced during charging may prevent the magnetic sensor from working properly.

 
Charging with a Wireless Charging Pad (Sold Separately)

How to use the Wireless Charging Pad 01 (sold separately) for charging is explained here.
For usage precautions and details, also see the instructions included with the Wireless Charging Pad 01 (sold separately).


Simply placing the product on top of an au-specified wireless charger product (sold separately) displaying the mark on the left allows charging without the need to connect a cable. Be sure to use the mark for the instructions for any supported product.

Products with the mark are compliant with the wireless charging specifications of the Wireless Power Consortium (WPC).

This product supports "au 充電マーク" (okudake juden) "au 充電マーク" and the "au 充電マーク" logo are registered trademarks of NTT DOCOMO, INC.

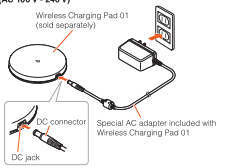

 2 Connect the DC connector of the special AC adapter into the DC jack of the Wireless Charging Pad 01 (sold separately) and plug the special AC adapter into an outlet (AC 100 V - 240 V)

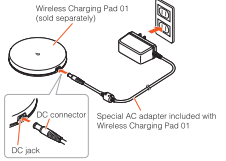


3 Place the product, with the wireless charging area downward and centered on the mark on the Wireless Charging Pad 01 (sold separately)

Check that the charging indicator is blue, and that the product's charging light is red. If the charging indicator is red, the product is not placed where it can charge; adjust the product's position.

Once charging completes, the charging light goes out.

 
* With the product, the charging indicator on the Wireless Charging Pad 01 (sold separately) continues to be lit even after charging completes. For further details on charging indicator display patterns or charging conditions, see the instructions included with the Wireless Charging Pad 01 (sold separately).



3 Once charging completes, remove the product, and unplug the special AC adapter



 4 Check the orientation of the microUSB plug of Common AC Adapter 05 (sold separately) and insert it straight into the external connection terminal

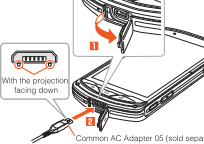

Common AC Adapter 05 (sold separately)

 
Charging with a Specified AC Adapter (Sold Separately)

Charging with Common AC Adapter 05 (sold separately) is explained. For information on specified AC adapters (sold separately), see "Related Accessories" (P.42).

1 Open the external connection terminal cover of the product




2 Check the orientation of the microUSB plug of Common AC Adapter 05 (sold separately) and insert it straight into the external connection terminal

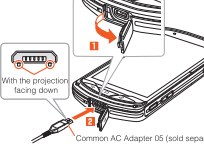

Common AC Adapter 05 (sold separately)

3 Insert the power plug of Common AC Adapter 05 (sold separately) into an outlet (100 VAC or 240 VAC)

 Check that the charging light on the product lights in red. When the battery power turns on, the charging light turns off.

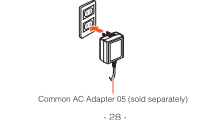

When charging ends, pull out the microUSB plug of Common AC Adapter 05 (sold separately) straight from the external connection terminal

Close the external connection terminal cover

Pull out the power plug of Common AC Adapter 05 (sold separately) from the outlet

memo

❒ Note that applying unnecessary force with the external connection terminal connected to the external device might cause damage.

❒ When charging stops with the battery empty, the charging light may not light immediately. But charging has started.

Turning the Power On/Off

Turning the Power On

1 **Press and hold for at least 2 seconds**

The start screen is displayed (P.31 "The Start Screen").

* For the first time the product turns ON, the initial settings such as "au Easy Setting" activate. Make the settings as required.

memo

- ❒ While logos are displayed after the power is on, initial settings for touch panel are in process. Do not touch the screen. The touch panel may not work properly.
- ❒ "au Easy Setting" can be set up later even though it is skipped.
- ❒ If the charging light blinks in yellow when you turn the power on, the remaining battery is not sufficient for activating the product. Charge the battery before use.

Turning the Power Off

1 **Press and hold for at least 1 second**

2 **"Power off" → "OK"**

Force Shutdown and Restarting

Force shutdown and restart the product when the screen freezes or the power cannot be turned off.

1 **Press and hold for at least 11 seconds**

memo

- ❒ If the product is forced shutdown and restarted, unsaved data will be erased. Do not force shutdown when the product becomes unresponsive.

Switching to English Display

You can switch the display from Japanese to English.

1 **Home screen → "アプリ一覧 (Apps)" → [設定 (Settings)] → (言語と入力 (Language & Input)) → (言語 (Language)) → "English"**

The Start Screen

The start screen is displayed when you turn the power on or cancel sleep mode.

Displaying the Home screen from the Start screen

After the start screen is displayed, you can display the Home screen as follows.

1 **Touch "HOME" and swipe (lick) toward "START"**

The Home screen is displayed (P.33). Or, the screen just before entering sleep mode is displayed.

 
* Tap "HOME" to change settings for the Address Book Plus display.

* Swiping (licking) toward "CAMERA" "PHONE" activates camera/phone.

* If "HOME" is displayed at screen top, the Start screen "Security type" is set to "Pattern", "PIN", or "Password". Unlock the security feature to display the Home screen.

❒ If Smart Lock is set, tapping "HOME" at screen top temporarily cancels Smart Lock, and the screen for the security feature you have set is displayed.

❒ If a description for the Home screen appears, read the information and tap "OK".

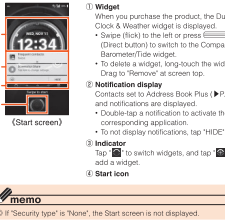

❒ If "Security type" is "None", the Start screen is not displayed.

Sleep Mode

White screen backlight is turned on, press "CE" or leave the product for a certain period of time without any operations to turn off the screen temporarily and the product goes into sleep mode. To cancel sleep mode, operate the following steps.

1 **While in sleep mode, "CE" or "CE"**

The Start screen is displayed (P.31 "The Start Screen").

* The first time activating, a description of the Start screen is displayed. Read the information and tap "OK".

memo

❒ Do not touch the screen when pressing "CE" and displaying the screen. The touch panel may not work properly.

 
Using the Home Screen

The Home screen consists of multiple screens. Slide left or right to switch them. Also, press "CE" to go to the Home screen any time.



Using the Apps List

A list of installed apps is displayed.

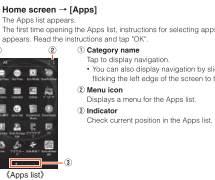


Monitoring the Product's Status

Notification icons appear on the left of the status bar, showing missed calls, new mail, operations in progress, etc., and status icons appear on the right, showing the status of the product.

Icons

Notification icons appear on the left of the status bar, showing missed calls, new mail, operations in progress, etc., and status icons appear on the right, showing the status of the product.

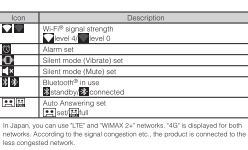 

* In Japan, you can use 3G and "VMAX 2+" networks. "4G" is displayed for both networks. According to the signal congestion etc., the product is connected to the less congested network.

Notification Panel

Slide the status bar down to display the notification panel and on/off icons, where you can check notifications and activate communication applications as well as quickly set frequently used functions on/off.

In the Address Book Plus display, display contacts in "Favorites" and "Recent Calls". Use with your preferred setting.



1 **Address Book Plus display**

Display different information registered to the address book. You can also display favorites and other contacts you call frequently.

* Tap "HOME" to change settings for the Address Book Plus display.

2 **Notification area**

You can check the status of the product or details of information. For some information, tap to activate the corresponding application.

memo

- ❒ You can slide the notification panel up to hide it.
- ❒ When a new notification arrives, a notification is displayed at screen top. If there are notifications that can be erased, tap [CLEAR ALL] at bottom right of screen.

Displaying a Menu

There are two types of methods to display a menu screen: by tapping "HOME" and by long-pressing the touch panel.

Using the au Disaster Countermeasure Application

The au Disaster Countermeasure application allows you to use the Disaster Message Board, Emergency Rapid Mail (Earthquake Early Warning, Disaster and Evacuation Information, Tsunami Warning), Disaster Voice Messaging Service, and Disaster Information.

1 **Apps list → [au災害対策 (au Disaster Countermeasure)]**

au災害対策 (au Disaster Countermeasure) menu appears. When activating the application for the first time, the agreement for use and initial settings appear. Follow the onscreen instructions.

Using the Disaster Message Board

Disaster Message Board services enable you to register information of well-being from an area of distress via LTE, NET, or cable of large-scale disaster such as earthquake with a seismic intensity of over 4 lower. Registered information can be viewed on all cell phones and PDA besides by au cell phone users.

1 **au災害対策 (au Disaster Countermeasure) menu screen → [災害伝言板 (Disaster Message Board)]**

Follow the onscreen instructions to register/info.

memo

- ❒ To register information of well-being, E-mail address (e-mail no. g) is required. Set up E-mail address beforehand.
- ❒ Deleting or changing the setting for information of well-being is unavailable during Wireless LAN (Wi-Fi) connection.
- ❒ The Company makes no guarantees about the quality of this service. The Company is not liable in the event of any nonconformities about registration of well-being information or damages by loss of well-being information arising from remote access to this service or equipment failure or damages caused by registered well-being information.

Using Emergency Rapid Mail

Emergency Rapid Mail is a service that distributes Earthquake Early Warning or Tsunami Warning delivered from the meteorological bureau or Disaster and Evacuation Information delivered from the government or local public information to all au cell phones in specified areas simultaneously.

When you purchase the product, "au災害対策 (Disaster Countermeasure)" is set to "On" (Default). Reception setting of Tsunami Warning is available in the settings of Disaster and Evacuation Information.

When you receive Earthquake Early Warning, ensure your safety and take proper action according to the situation around you. When you receive a disaster warning, dial an emergency number immediately and evacuate to safe place such as upland or well-built high building.

1 **au災害対策 (au Disaster Countermeasure) menu → [緊急通報メール (Emergency Rapid Mail)]**

Set a mail you want to view to check the detail.

