

Lenovo Mobile Phone

User's Manual

Model: Lenovo A600e

Read this manual carefully
before operating the phone

Contents

Technical parameters	1
Initial setup procedure	2
Charging the phone	2
Inserting the SIM card	2
Inserting the memory card	2
Key layout	3
Key tips	3
Powering on/off	5
Powering on	5
Powering off	5
Gravity sensor and multi-touch	6
Using the multi-touch function	7
Opening an application	7
Scrolling	7
Zooming in or out	8
Home screen	9
Quick start	9
Working with Menus	9
Opening and closing the Launcher	11
Applications	11
Widgets	12
Shortcuts	12
Arranging your Home screen	12
Changing the background of your Home screen	13
Google Play	14
Accessing Google Play	14
Adding a Google account in your phone	14
Downloading an application from Google play	14

Application menu.....	15
Opening the Application menu.....	15
Browsing the Application menu	15
Creating an application shortcut to the Home screen	15
Removing an application shortcut from the Home screen.....	15
Phone status bar and notifications.....	16
Checking notifications and current activities.....	16
Toolkit	17
Status icons.....	17
Making and answering calls.....	19
Making a call	19
Answering a call	19
Rejecting a call	20
Ending a call.....	20
Adjusting the volume	20
Turning the speaker on or off.....	20
Adding one call.....	20
Options available during a call	20
Text entry	22
On-screen keyboard.....	22
Android keyboard input method	22
Entering text.....	22
Entering other characters.....	22
Editing text	22
Selecting text.....	23
Cutting/Copying/Pasting text.....	23
Communication	24
Messaging.....	24
Contacts.....	25
Call log.....	28

Email	28
Multimedia.....	31
Camera.....	31
Music	32
FM Radio.....	35
Gallery.....	36
Sound recorder.....	37
Browser.....	38
Opening the web browser.....	38
Managing bookmarks	38
Browser options	38
Changing browser settings.....	39
Tools	40
Calendar.....	40
Clock.....	40
Calculator.....	41
ES File Explorer.....	41
Connecting to networks and devices.....	42
Determining the network you are using.....	42
Editing or creating new access points.....	42
WLAN networks.....	42
Bluetooth.....	43
Connecting hands-free kit	44
Tethering & portable hotspot	44
Connecting to a computer via USB.....	45
PC sync software	45
Settings	46
WLAN.....	46
Bluetooth.....	46
More.....	46

Airplane mode	46
Dual SIM settings	47
Call settings.....	47
Audio profiles	47
Display	47
Storage.....	47
Battery.....	48
Apps.....	48
Accounts & sync.....	48
Location services.....	48
Security	48
Language & input	49
Backup & reset	49
Data & time.....	49
Schedule power on & off	49
Accessibility	49
Developer options	49
About phone.....	49
Precautions and tips for the A600e.....	50
Recycling and environmental information	51
General recycling statement	51
Important WEEE information.....	51
Recycling information for India	52
Battery recycling marks	52
Restriction of Hazardous Substances Directive (RoHS).....	53

Technical parameters

Product: CDMA2000 digital mobile phone

Model: Lenovo A600e

System: Android 4.0.4

Size: Approximately 124.5 mm × 64 mm × 11.9 mm

Weight: Approximately 163.8 g (including battery)

Standby time: Maximum 663 hours *

Battery capacity: 2500 mAh

*may vary depending on local signal strength

SAR Information

0.664W/Kg@1g(HEAD) 0.943W/kg@1g(BODY)

Body-worn operation

This phone was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the phone, including the antenna.


Third-party belt-clips, holsters, and similar accessories used by this phone should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result.


Please contact your local dealer for replacement antenna.

Initial setup procedure


Charging the phone

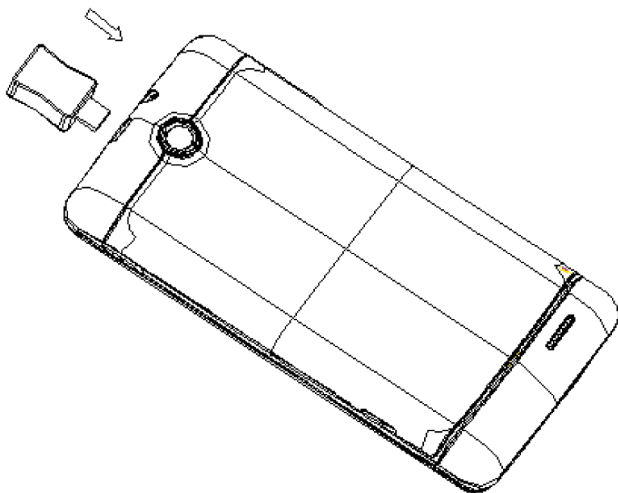

Inserting the SIM card

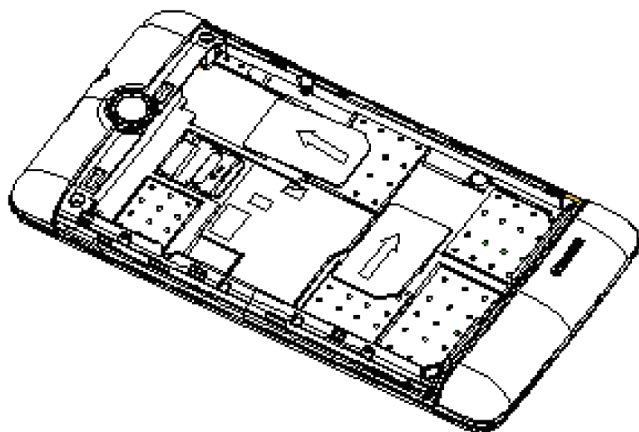

Inserting the memory card

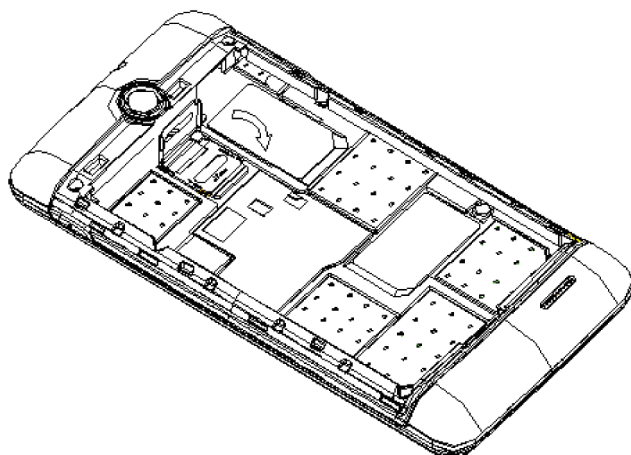

Key layout

Key tips



Power key

- When the phone is off, press and hold the **Power** key to turn on the phone.
- When the phone is on, press and hold the **Power** key to enter phone options. (**Power off**, **Airplane mode**, etc.)
- To save your battery charge, prevent accidental touches or when you want to wipe smudges off your touch screen, put the touch screen to sleep by pressing the **Power** key.

- To wake up the touch screen, just press the **Power** key again, then drag the Lock icon to the right on the screen to unlock, according to the dialog on the screen.

Menu key

- Opens a menu with items related to the current screen/application.

Home key

- Touch the **Home** key to return to the **Home** screen. If you are viewing the left or right of the Extended **Home** screen, touching the **Home** key to open the central **Home** screen.
- Touch and hold the **Home** key to view the applications you have used recently.

Back key

- Touch the **Back** key to return to the previous screen you were viewing.

Volume key

- Press the **Volume** key to change the volume. When playing music or video files, press the **Volume** key to adjust media volume.

Powering on/off

Powering on

Press the **Power** key until the phone vibrates.

Note: You may need to enter the Personal Identification Number (PIN) or draw the unlock pattern if you have set a PIN or unlock pattern.

Powering off

Press and hold the **Power** key to display the phone options menu, then select **Power off**.

Gravity sensor and multi-touch

This feature automatically rotates the screen according to the orientation of the phone. You can lock the A600e screen in the current direction by turning the rotation lock downward. To lock or unlock the screen direction, select **Launcher > Settings > Display > Auto-rotate screen**.

You can use the A600e in the landscape or portrait mode.

After launching an application, you can rotate the screen to your preferred direction.



Using the multi-touch function

The multi-touch function enables you to perform various operations on the screen.

Opening an application

To open an application, touch the icon of the application on the screen. Touch the **Home** key to return to the **Home** screen.



Scrolling

Scroll the screen by dragging up or down on the content.



Zooming in or out


You can zoom in or out of a map or web page. To do so, just touch the screen with two fingers and move them apart or together.



Home screen

Quick start

The **Home** screen gives you all your latest information in one place. It is the equivalent of the desktop screen on a computer and is displayed when you turn on the phone. It is your gateway to the main features in your phone. You can customize your **Home** screen with shortcuts, widgets, folders, and wallpapers.

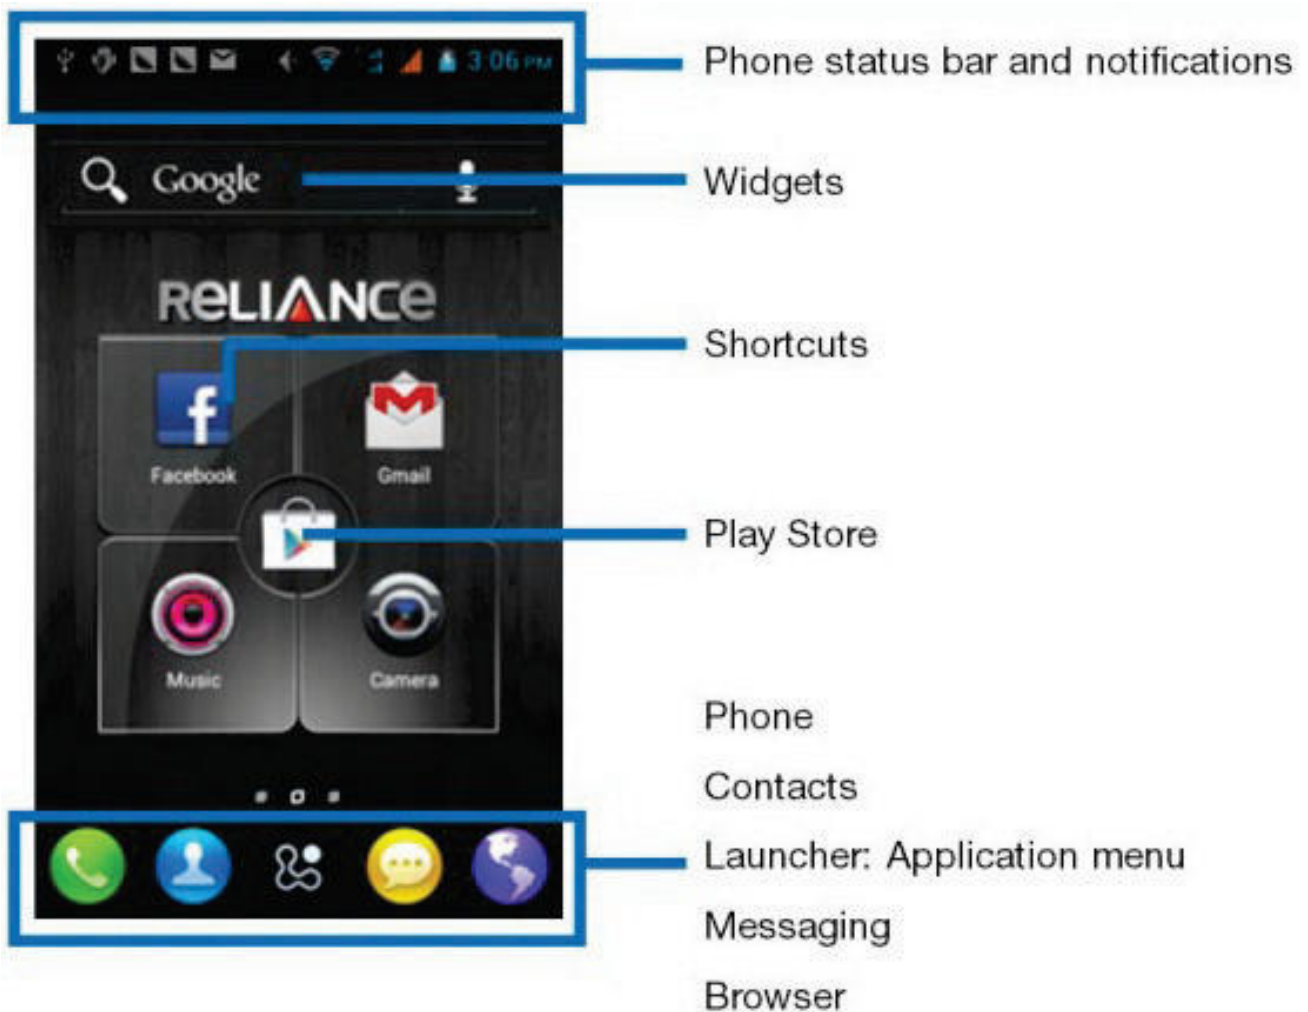

Slide the **Home** screen left or right to view more content in other panels on the **Home** screen. You can add shortcuts, widgets, folders, etc., to the **Home** screen.


Note: Your **Home** screen might look different from the illustration above.

Working with Menus

The phone provides you with options menus and context menus.

Options menus


- Options menus contain tools that apply to the activities of the current screen or application; not to any specific item on the screen. You can open the options menu by touching the **Menu** key.
- Not all screens have options menus. If you touch the **Menu** key on a screen that has no options menu, no menu will appear.

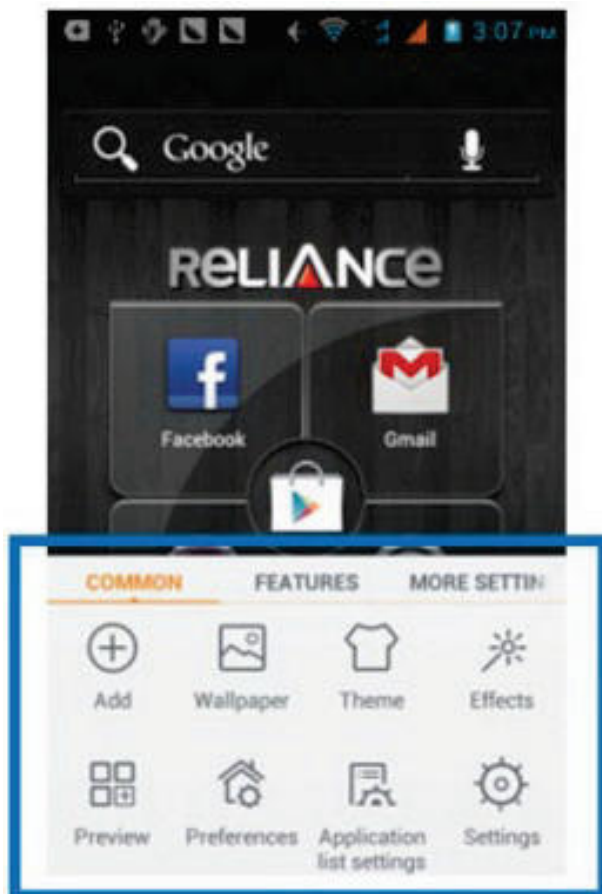

The options menu contains items that apply to the current screen or to the application as a whole.

Context menus

- Context menus contain tools that apply to a specific item on the screen. You can open a context menu by touching and holding an item on the screen. Not all items have context menus. If you touch and hold an item that has no context menu, no menu will appear.
- Example of a Contacts screen and context menu.

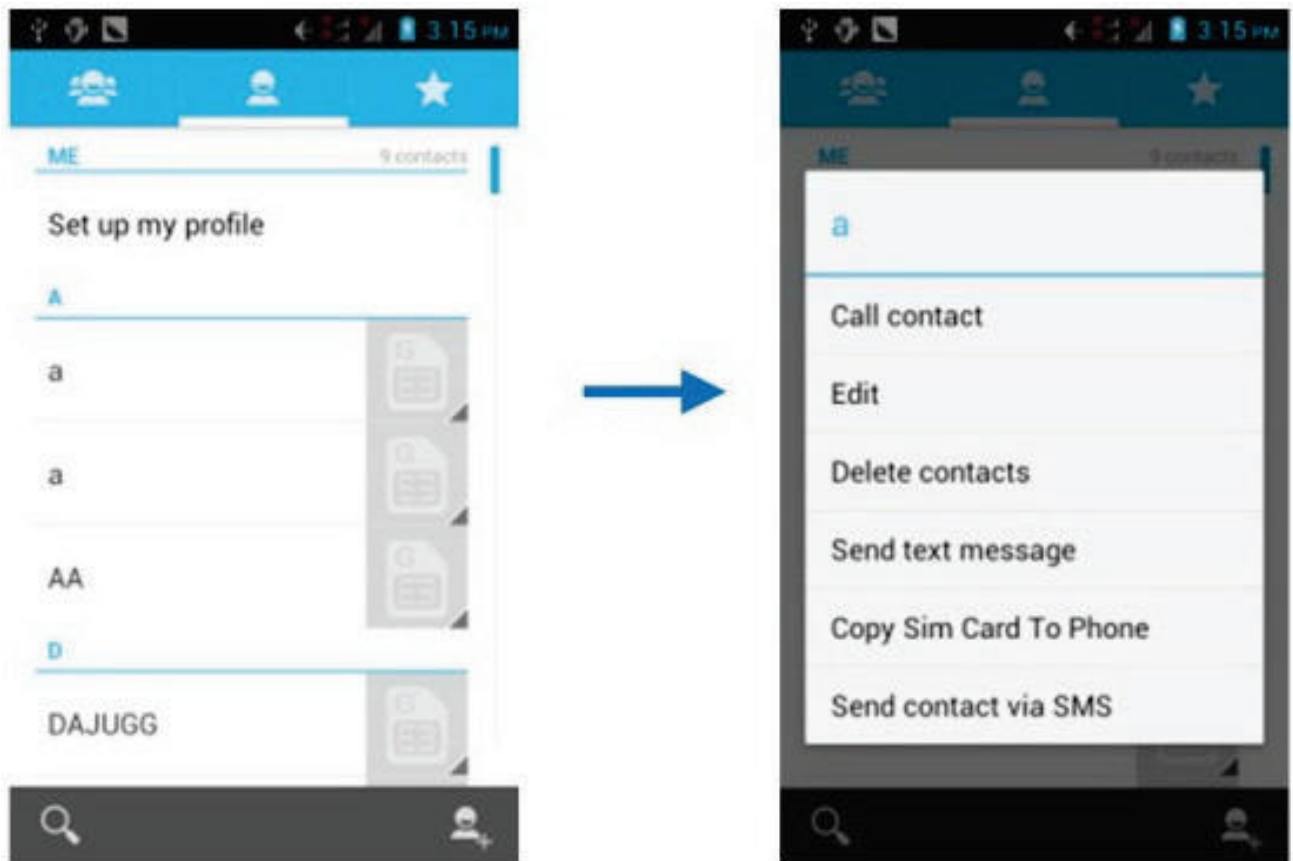

Opening and closing the Launcher

Touch the **Launcher**, you can slide the screen left or right to view more applications.

After opening the **Launcher**, touch an icon to enter the desired application.

Touch the **Back** key to return to the previous screen. Touch the **Home** key to return to the **Home** screen.

Applications

Adding an application to the Home screen

Touch and hold the **Home** screen, then touch **Applications**. You can select applications to add to the **Home** screen, such as **Calculator**, **Clock**, etc.

Removing an application from the Home screen

Touch and hold the application icon on the **Home** screen until it vibrates, then drag it to the **Remove** tab.

Widgets

A widget is small application on the **Home** screen that displays as an icon, such as a music symbol, an analog clock, etc., which you can use directly from your **Home** screen. For example, the Music widget allows you to start playing audio files directly from **Home** screen, and the **Analog clock** widget shows the current time.

You can download additional widgets from the library of Android widgets.

Adding a widget to Home screen

Touch and hold the **Home** screen, then touch **Widgets**, you will see widget options menu.

Touch the icon to select the widget, then back to the **Home** screen. You can use the widget easily on **Home** screen.

Removing a widget on Home screen

Touch and hold the widget icon on **Home** screen until it vibrates, then drag it to the **Remove** tab.

Shortcuts

Adding a shortcut to Home screen

Touch and hold the **Home** screen, then touch **Shortcuts**, you can select shortcuts to add to **Home** screen, such as **Bookmark**, **Contact**, **Direct message** and so on.

Removing a shortcut on Home screen

Touch and hold the shortcut icon on **Home** screen until it vibrates, then drag it to the **Remove** tab.

Arranging your Home screen

Touch and hold an item on **Home** screen until it vibrates, then drag it where you want.

Adding a folder to the Home screen

Touch and hold the **Home** screen, touch **Folders**, enter the name of the folder, select the applications you want to add to the folder, then confirm. The new folder will be created and added to **Home** screen.

Organizing your applications with folders

To make a new folder on your **Home** screen, stack one application on top of another.

Naming folder on the Home screen

Touch the applications stack on the **Home** screen. Then touch the **Unnamed Folder** to show the name folder field and enter the folder name.

Moving shortcuts on the Home screen to a folder

Touch and hold the item on **Home** screen until it vibrates, then stack the application on top of others.

Moving shortcuts in a folder to the Home screen

Touch and hold the item in a folder until it vibrates, then drag the item out of the folder.

Changing the background of your Home screen

Adapt the **Home** screen to your own style using wallpapers from **Gallery**, **Live wallpapers**, or **Static wallpapers**.

Touch and hold the **Home** screen to select **Wallpaper**, and select a wallpaper from **Gallery**, **Live wallpapers**, or **Static wallpapers**. Then set it as the wallpaper.

Tip: You can use the camera to take a photo, then set it as the wallpaper.

Google Play

Google Play, formerly known as the Android Market, is a digital application distribution platform, which provides a world of applications and games, and allows users to browse and download music, magazines, books, games, and applications.

Accessing Google Play

From the central **Home** screen, touch the **Play Store**.

Alternatively, touch **Launcher > Play Store**.

Note: You need a Google account to use the **Play Store**.

Adding a Google account in your phone

1. Touch **Launcher > Settings > Accounts & sync > ADD ACCOUNT > Google**.
2. Create a new Google account, or sign in if you already have one, according to the **Add account** wizard. Your phone is now ready to use with **Gmail, Play store**, etc.

Downloading an application from Google play

You can download a variety of applications, which are available either for free or at a cost. You need to have a working internet connection to download from Google play, which may incur data traffic charges.

1. Find an application you are interested in by browsing through the categories, or by using the search function.
2. Touch the item to view its description, and follow the instructions to complete the installation or purchase.

Application menu

The Application menu, which you open from your **Home** screen, contains the applications that come installed with your phone.

The Application menu extends beyond the screen width. Slide the screen left and right to view all content.

Opening the Application menu

Touch the **Launcher**.

Browsing the Application menu

Open the Application menu, then slide the screen right or left.

Creating an application shortcut to the Home screen

Touch and hold an application on the Application menu until it vibrates, then drag it to the **Home** tab, and place it where you want on the **Home** screen.

Removing an application shortcut from the Home screen

Touch and hold the shortcut until it vibrates, then drag it to the **Remove** tab.

Phone status bar and notifications

The status bar at the top of the screen contains icons that alert you about new messages, missed calls, signal strength, battery status, and other information.

Checking notifications and current activities

Drag down the status bar to open the Notification panel and get more information. For example, you can see missed calls, and which applications are running, such as the **Music**.

Opening the Notification panel


Drag the status bar downwards.

Closing the Notification panel

Drag the bottom of the Notification panel upwards.


Opening a running application from the Notification panel

Touch the icon for the running application.

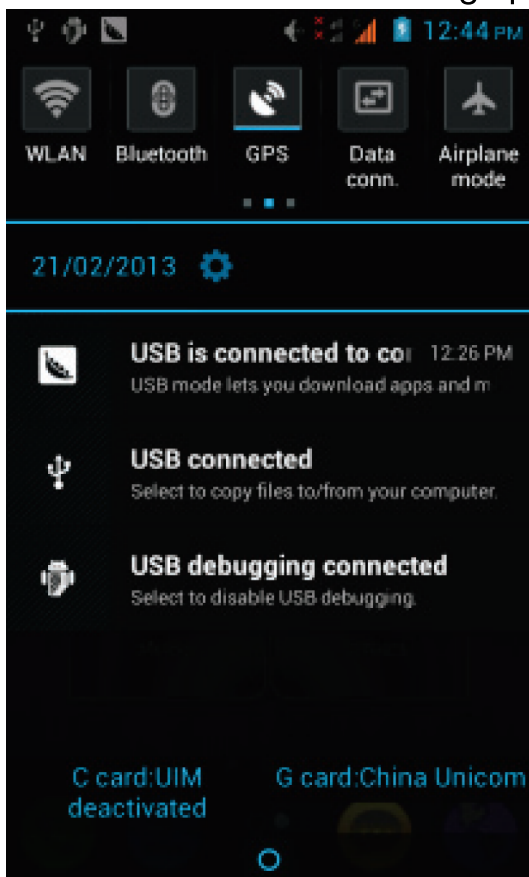

Toolkit

In the Toolkit you can quickly start common applications such as **Bluetooth**, **WLAN**, etc.

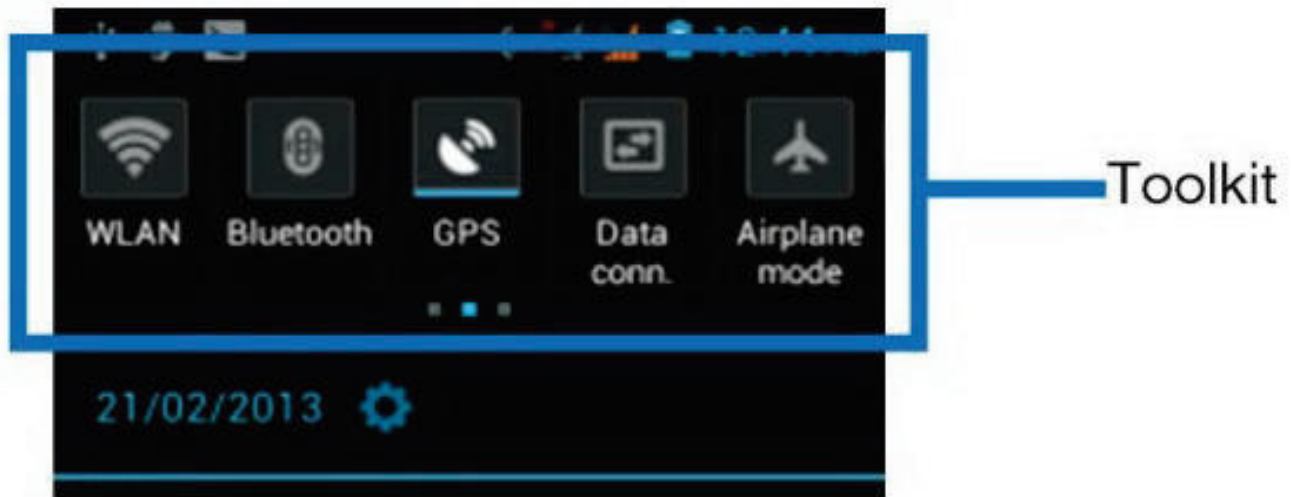

Status icons

The following status icons may appear on your screen:

Icon	Statement
	No cards
	Failed search for Card1 Network
	Failed search for Card2 Network
	Card1 "CDMA1x only" Network
	Card1 Network signal level
	Card2 Network signal level
	Unread SMS messages
	Missed calls
	Bluetooth is activated
	USB is connected
	Alarm is activated
	Battery is being charged
	Ring

Icon	Statement
	Silent
	WLAN is connected
	Roaming
	USB debugging
	Airplane mode
	Full battery
	Low battery
	Vibrate on
	GPS searching
	GPS is connected
	Card1 EVDO Data connection
	Card1 1x Data connection
	Card2 EDGE Data connection
	Card2 GPRS Data connection

Making and answering calls

Making a call

Directly making a call

Touch the **Phone** to display the dialing keypad. Touch the numeric buttons of the telephone number, then touch the **Dial** button to make the call.

Making a call from Contacts

Touch **Launcher** > **Contacts** to display the list of contacts, touch the desired contact, then touch the **Dial** button that is located next to the number to make the call.

Making a call from Call log

Touch **Launcher** > **Call log** to select the log, then touch the **Dial** button that is located next to the number to make the call.

Making an international call

Touch the **Phone** to display the dialing keypad. Touch and hold the “**0**” key until “+” appears on the screen, then input the country code or region code, city code and phone number.

Dialing from Messaging

1. Touch **Launcher** > **Messaging** to open the message interface.
2. Touch one conversation.
3. Touch the **Dial** button that is located at the top of the conversation screen.

Answering a call

Your phone will ring or vibrate (depending on the current mode and settings) upon an incoming call.

To answer an incoming call, drag  towards the right side according to the dialog on the screen.

If the earphone is inserted into the phone, press the key on the earphone to

answer the call.

Rejecting a call

If you want to reject an incoming call, slide  towards the left side according to the dialog on the screen.

Ending a call

Touch the **End** button to disconnect the call.

Adjusting the volume

You can raise or lower the volume by pressing the **Volume** key.

Turning the speaker on or off

Touch the **Speaker** button to turn on the speaker, and touch it again to turn off speaker.

Adding one call

In a call, touch the **Add call** button to add one call. This function requires the support of the network operator.

Options available during a call

The following call options can be activated only during a call. When a call is in progress, you can put it on hold, initiate a phone conference, mute your microphone, etc.

Call options	
Key pad: Display the key pad.	Touch 
Speaker: Turn on/off the speaker.	Touch 
Mute: Deactivate the microphone so that the other party cannot hear you.	Touch 
Hold: Place a call on hold.	Touch 
Add call: Open the dial pad to dial a second call.	Touch 

Call options	
End: End a call.	Touch 


Press the **Volume** key to adjust the call volume.

Text entry

On-screen keyboard

Touch the keys of the on-screen QWERTY keyboard to enter text. You can open this keyboard by touching the text field.

Android keyboard input method

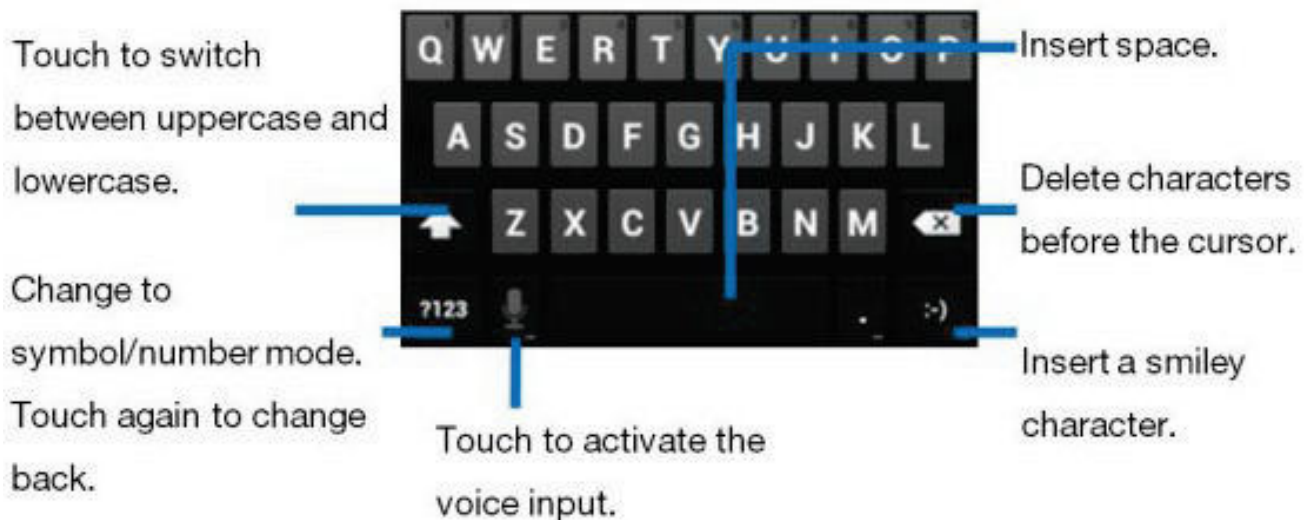

Entering text

- Touch the keys on the keyboard to type.
- Use the **Delete** key  to erase characters to the left of the cursor.
- When you have finished typing, touch the **Back** key to close the keyboard.

Entering other characters

- Touch the **Symbols** key  to switch to the numbers and symbols keyboard.
- Touch the  on the symbols keyboard to view additional symbols.


Editing text

You can edit the text you enter in text fields to cut, copy, and paste text, within or across applications. Some applications do not support editing of some or all of the text they display. Other applications may offer their own way to select the text you want to work with.

Selecting text

You can select text for cutting or copying. The selected text is highlighted in blue.

- Touch and hold the portion that contains the text. Some options open with icons.
- Move the cursor to select the text.

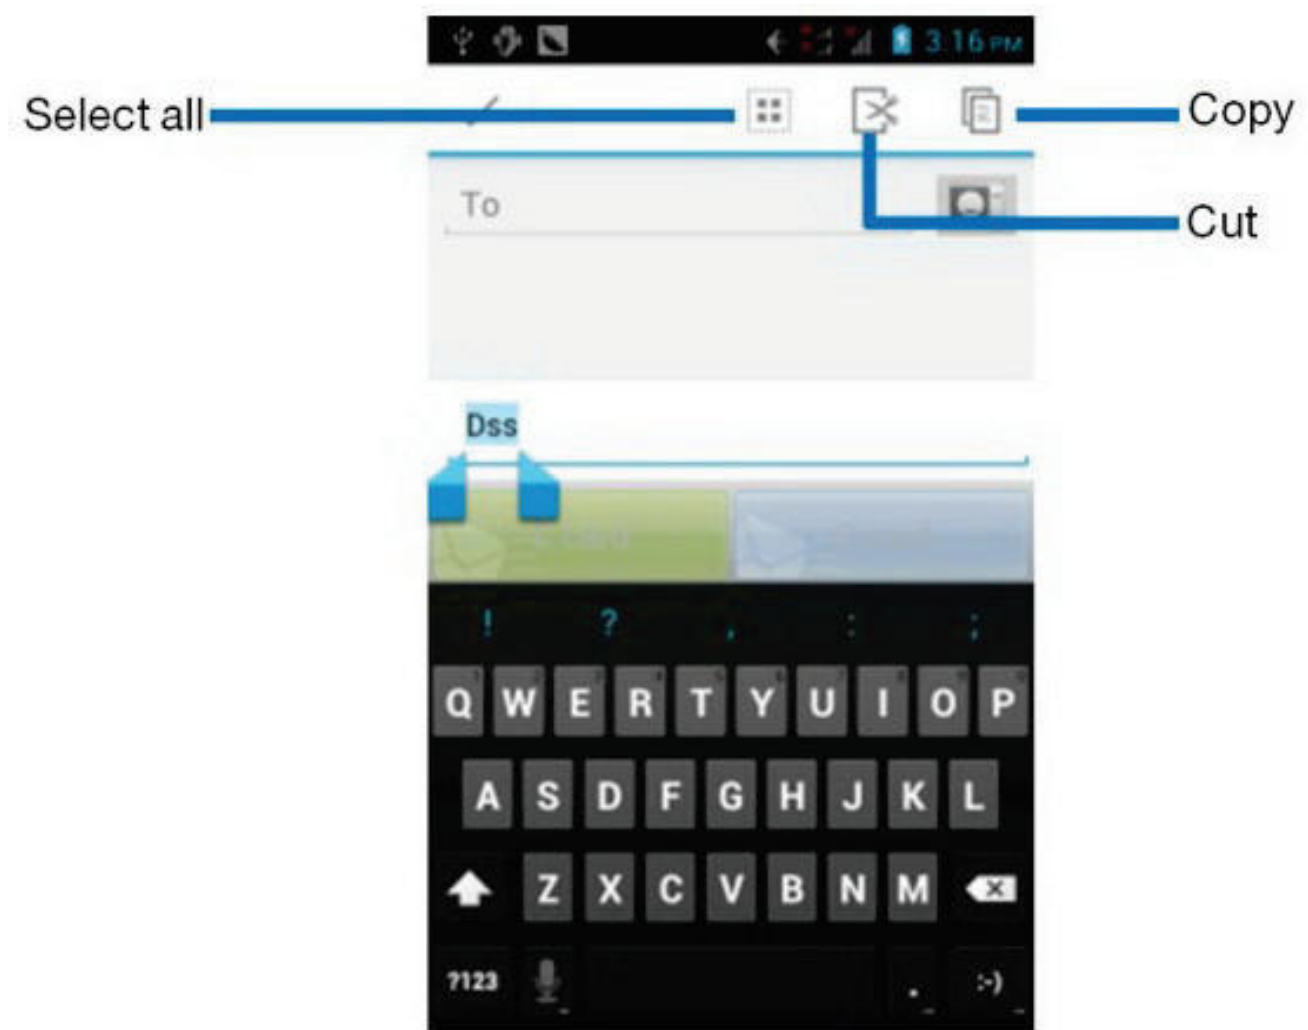

Cutting/Copying/Pasting text

1. Touch the **Cut** or **Copy**.
2. Touch and hold the text field where you want to paste the text.
3. Touch **PASTE**. The text is inserted at the cursor.

You can paste the text that you copied from one application into other text fields in any application.

Communication

Messaging

Touch **Launcher > Messaging**.

You can compose, send and receive text messages from your phone, and also compose, send and receive multimedia messages, which contain media files such as pictures, videos and audios.

When you view your messages, they appear as conversations, which means that all messages to and from a particular person are grouped together.

Composing a new message

1. Touch **Launcher > Messaging**.
2. Touch .
3. To add a recipient, touch , then find and mark the contact name. To send to more than one recipient, mark the contact name(s) for the other recipient(s). You can also enter the recipient's phone number manually.
4. Touch **Type message** to enter your message text.
5. If you want to insert a media file, touch , and select an attachment.
6. Choose SIM card, to send the message.

When editing a message, touch the **Menu** key, some additional options will be available to you; for example, **Add subject**, **Insert smiley**, etc. You can touch the options to do their associated actions.

Deleting message threads

1. Touch **Launcher > Messaging**.
2. Touch and hold the message thread.
3. Select the conversations you want to delete.
4. Touch , then touch **Delete** in the menu that pops up.

You can also touch the **Menu** key and touch **Delete all threads** to delete all message threads from the window.

Forwarding a message

1. Touch **Launcher** > **Messaging**.
2. Touch the conversation containing the message you want to forward.
3. Touch and hold the message you want to forward.
4. Touch **Forward** in the menu that opens.
5. To add a recipient, touch , then find and mark the contact name. To add more than one recipient, mark the contact name(s) for the other recipient(s). You can also enter the recipient's phone number manually.
6. Choose SIM card to send the message.

Locking a message

You can lock a message.

1. Touch **Launcher** > **Messaging**.
2. Touch the conversation containing the message you want to lock.
3. Touch and hold the message you want to lock.
4. Touch **Lock** in the menu that opens. A Lock icon appears. Unlock a message by touching and holding the message then touch **Unlock**.

Messaging settings


1. Touch **Launcher** > **Messaging**.
2. Touch the **Menu** key, then select **Settings** in the menu that opens.
3. You can change the messages settings, such as delete old messages when limits are reached, request a delivery report for each message you send, etc.

Contacts

Touch **Launcher** > **Contacts**.

The **Contacts** application offers you to store and manage all your contacts.

Contacts screen overview

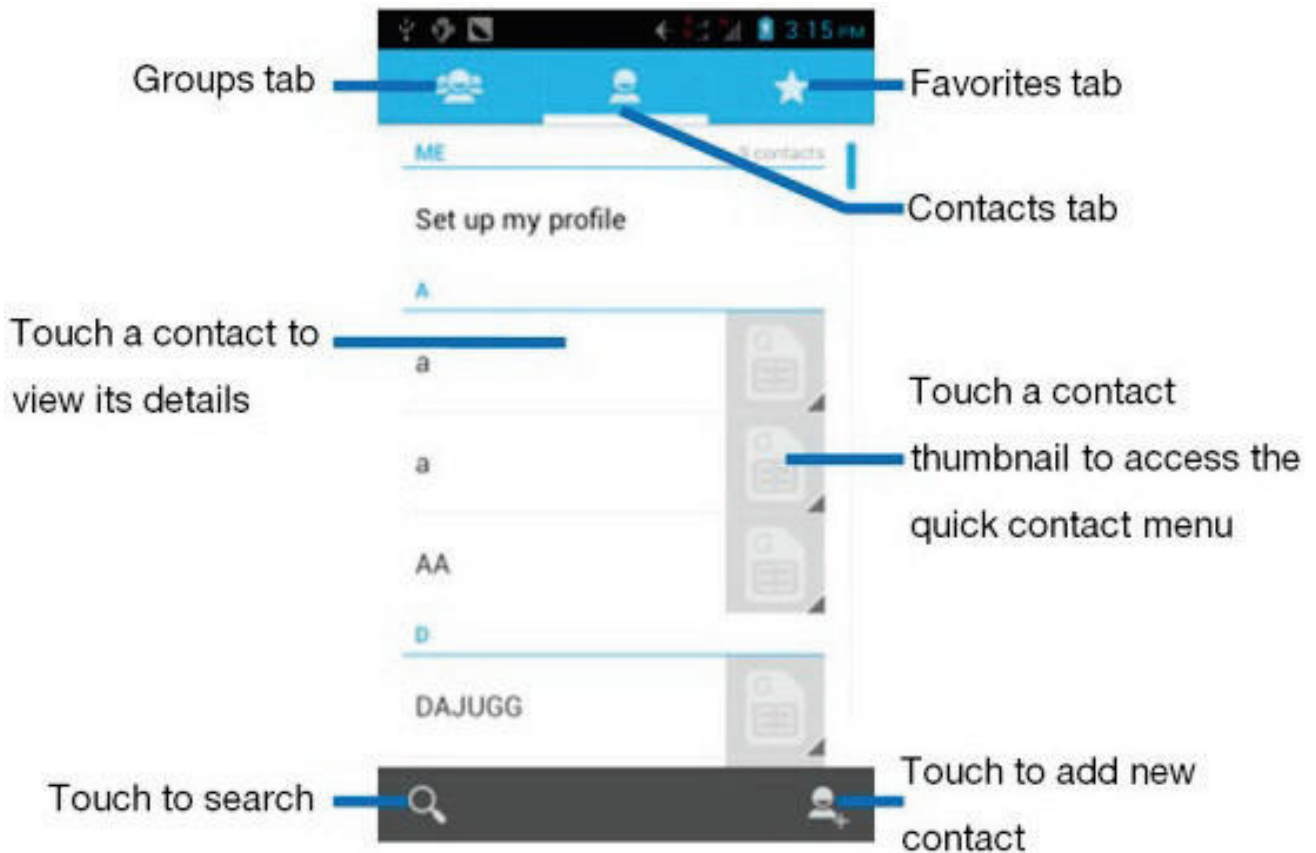

Adding a contact

1. Touch **Launcher** > **Contacts**.
2. Touch .
3. Select account to which you want to add this new contact.
4. Enter the information for the contact.
5. Touch **DONE**.

Searching for a contact

1. Touch **Launcher** > **Contacts**.
2. Touch .
3. Input the first character of the name you are searching for. All records having a contact name beginning with that character will be displayed.

Additional options

From the contacts list screen, touch the **Menu** key. Some additional options will

be available to you; for example, **Import/export**, **Share contact**, etc.

- **Contacts to display:** To select which contacts to display in the contacts list.
- **Import/export:** Import/export contacts from one account to other one.
- **Delete contacts:** You can mark more than one contact, then delete these marked contacts.
- **Share contact:** You can share contacts via **Bluetooth**, **Email**, etc.
- **Accounts:** You can synchronize your phone contacts with a synchronization account.
- **Settings:** Change the settings related to the displayed options.
- **Memory status:** Check the amount of memory used for contacts.

Contact groups

You can assign contacts to groups to get quicker access to them from the **Contacts** application. It allows you to create a new group; such as VIPs, schoolmates, friends, family, co-workers, etc.

Creating a new group

1. Touch **Launcher > Contacts**.
2. Touch the **Groups** tab.
3. Touch .
4. Input the information for the group, then touch **DONE**.

Assigning a contact to a group

1. Touch **Launcher > Contacts**.
2. Touch the **Groups** tab.
3. Touch a group to which you want to assign contacts.
4. Touch  to choose contacts to add. You can also edit the group, touch **Type person's name** to input the contact's name, then the corresponding contact entry will pop up. Select the desired contact entry.
5. Touch **DONE**.

Only the contacts stored in phone memory can be assigned to groups.

Favorites

You can set contacts as favorites to access to them from the Contacts application. Only the contacts stored in phone memory can be set as favorites.

Setting a contact as a favorite

1. Touch **Launcher > Contacts**.
2. From contacts list, touch the contact which you want to set as a favorite.
3. Touch  to set the contact as a favorite.

To cancel a favorite, touch .

Call log

Touch **Launcher > Call log**.

Touch the required tab, such as All, Received, Dialed, and Missed calls, on the upside screen of the **Call log** interface. You can also switch UIM/SIM card to view different logs.

Select a log, then touch and hold the log. You can remove the item from the **Call log**, and send text message to the phone number.

Email

Touch **Launcher > Email**.

The **Email** application in your phone allows you to compose, send and receive emails through your regular email account.

You need create account first, then create email to send. You can configure email for most accounts in just a few steps.

Setting up an email account in your phone

1. Touch **Launcher > Email**.
2. Enter your email address and password, then touch **Next**.
3. If the settings for the email account cannot be downloaded automatically, complete the setup manually. If necessary, contact your email service provider for detailed settings.

4. When you are prompted, enter a name for your email account, so that it is easily identifiable. The same name shows in the emails you send from this account.
5. Touch **Next**.

Creating and sending an email

1. Touch **Launcher** > **Email**.
2. Touch .
3. Enter recipients' addresses, and subject.
4. Compose email. Touch the **Menu** key, you can attach a file.
5. If you want to add Cc/Bcc, touch the **Menu** key, then touch **Add Cc/Bcc**.
6. Touch  to send the email.

Receiving emails

1. Touch **Launcher** > **Email**.
2. Touch  to refresh, you can download new emails.

Reading your emails

1. Touch **Launcher** > **Email**.
2. In the email inbox, scroll up or down, and touch the email you want to read.

Replying to an email

1. Touch **Launcher** > **Email**.
2. In the email inbox, scroll up or down, and touch the email to which you want to reply.
3. Touch , or touch  to select **Reply all**.
4. Enter your reply, touch  to send the email.

Forwarding an email

1. Touch **Launcher** > **Email**.
2. In the email inbox, scroll up or down, and touch the email you want to forward.

3. Touch  to select **Forward**.
4. Enter recipients' addresses.
5. Touch  to send the email.

Viewing all folders

1. Touch **Launcher > Email**.
2. Touch  at the top of the screen, then select **Show all folders**. You can also touch  at the bottom of the email inbox.


Multimedia

Camera

Touch **Launcher** > **Camera**.

Take a photo or record a video with the camera in your phone. You can hold the camera horizontally or vertically. Share a photo or a video with your friends, or upload your photos and videos to a web service.

Camera control overview

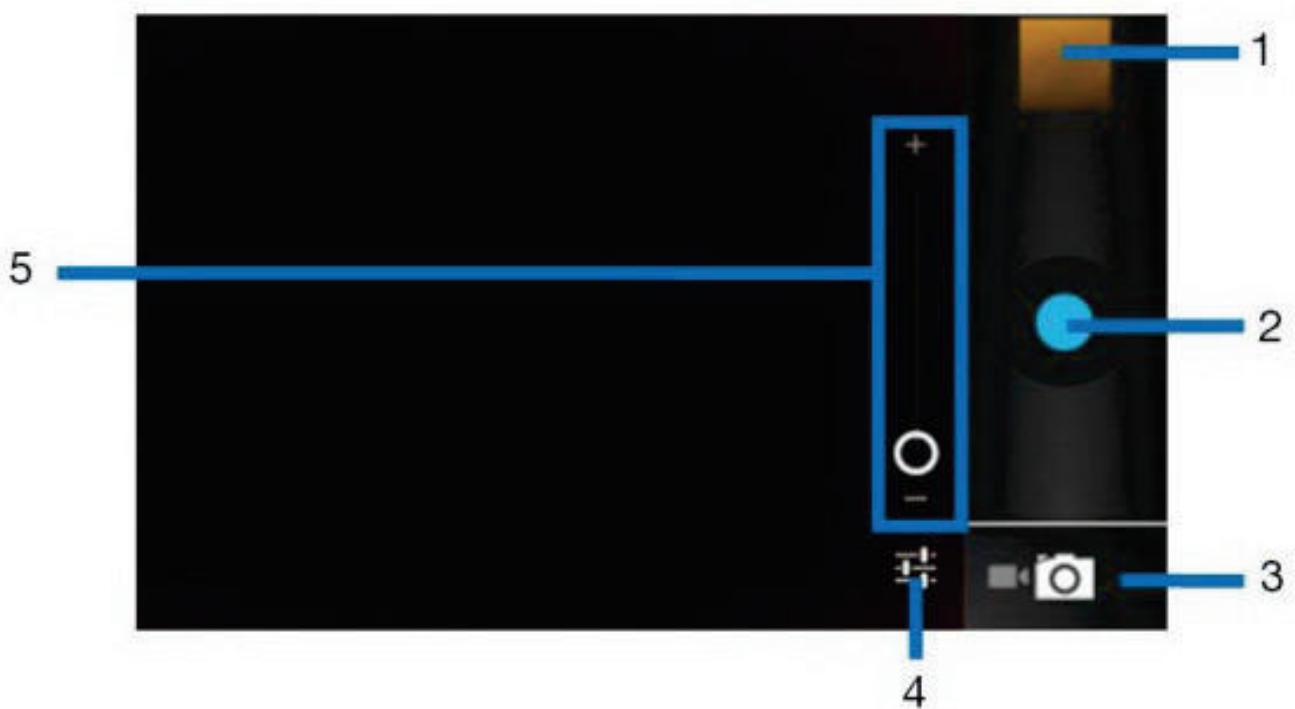

Camera controls	
1	Preview your pictures or videos you captured
2	Take photos or record videos
3	Switch between camera mode, camcorder mode
4	Settings
5	Zoom in or out

Taking a photo

- Adjust your picture size, picture quality, color effect, and other settings if you wish.
- Frame your subject on the screen. You can zoom in or out by touching the **Zoom** icon.
- Touch the **Shutter** icon on the screen.

The picture you just took is displayed for a moment, then is displayed as a thumbnail.

Shooting a video

- Switch to the camcorder mode
- Adjust the video duration, color effect, and other settings if you wish.
- Point the lens to the scene you want to shoot
- Touch the **Start** icon.
- Touch the **Stop** icon to stop shooting.

 
Music

Touch **Launcher > Music**.

The phone comes with a Music player that plays songs, listen to audio book and podcasts you have stored. It gives you a host of setting options to make your listening experience interesting.

You can easily transfer your favorite music from your PC to the SD card and experience a whole world of interesting and melodious music.

When you copy music to your SD card, the Music player searches the card for music files and builds a catalog of your music, based on information about each file.

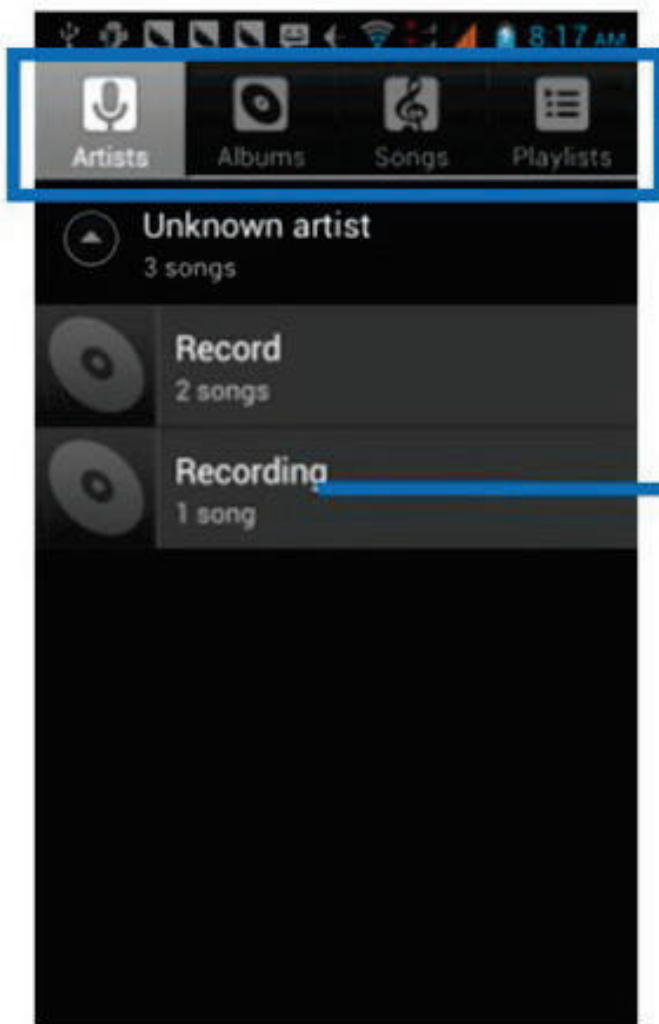

Categories

Touch to select Artists, Albums, Songs or Playlists.

Touch to open the album, songs or playlist.


Music library

The Music library offers the following multiple categories that you can select.

Categories	
Artists:	Songs classified by singers
Albums:	Songs classified by albums
Songs:	Display all songs
Playlists:	Display playlists

If you touch and hold an artist, a song, or an album, some options will be available to you; for example, **Play**, **Add to playlist**, **Delete**, etc.

 Music player

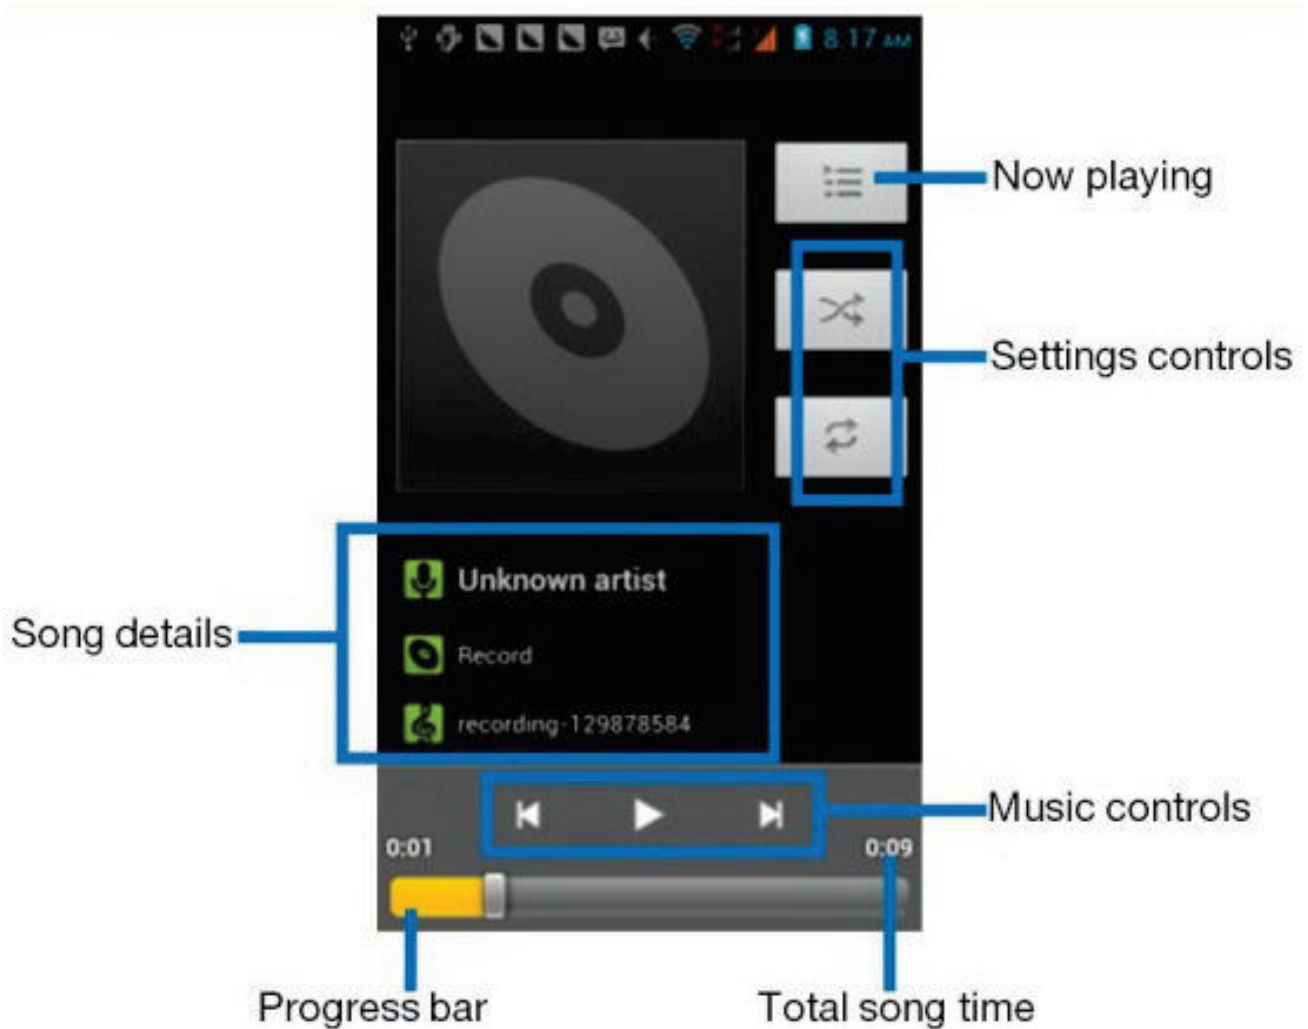

You can return to the Music library screen from the Music player screen in the **Music** applications by touching **Menu** key, then touching **Library**.

Music player controls	
Play/Pause	Touch ▶ / ⏸
Previous/Next	Touch ⏮ / ⏭
Rewind/Forward	Touch and hold ⏮ / ⏭
Volume adjust	Touch Volume key
Now playing	Touch ☰
Shuffle	Touch ✂
Repeat: Touch to repeat all songs; touch again to repeat current song.	Touch ↺

Touch the **Menu** key, some additional options such as **Library**, **Party shuffle** and **Add to playlist** will be available to you.

FM Radio

Touch **Launcher > FM Radio**.

The phone comes with an in-built **FM Radio**. You can listen to **FM Radio** stations, and add them to channel list. You have to plug in an earphone, as the antenna of the **FM Radio**. You can listen to the radio either through an earphone, or through the speaker in the phone.



FM Radio controls	
1	To fine-tune the FM frequency
2	To fine-tune the FM frequency
3	To search for the previous effective frequency
4	To search for the next effective frequency

FM Radio controls	
5	Touch an unused button to save the current frequency to the frequency list, then you can touch it to play. Touch and hold the button, some additional options are available to you.

Touch the **Menu** key, some additional options will be available to you: **Edit local frequency**, **Delete frequency list**, **Search**, **Enable speaker**, and **Exit**.

Gallery

Touch **Launcher** > **Gallery**.

The **Gallery** offers you to view photos and play videos which are downloaded as well as those taken by the phone camera.

From **Gallery**, you can also share your photos and videos with your friends, via **Bluetooth**, **Email**, or **Messaging**, etc.

Touch an album to open it and view its contents.

Touch a picture or a video in an album to view it.

Gallery controls	
Slide show	
Share albums or files via various ways	
Delete	

When viewing a picture, touch the **Menu** key, some additional options will be available to you, such as **Delete**, **Slideshow**, **Edit**, **Rotate left**, **Rotate right**, **Crop**, **Details**, and **Set picture as**.

Sharing an Album

1. Touch **Launcher** > **Gallery**.
2. Touch the **Menu** key, touch **Select album** in the menu that opens.
3. Select the albums you want to share.
4. Touch .
5. In the menu that opens, touch the application to use to share the selected

albums. You can share via **Bluetooth**, **Email**, **Messaging**, etc.

Sound recorder

Touch **Launcher** > **Sound recorder**.

Record sound and play sound file.



Sound recorder controls	
1	To start recording
2	Review and play recorded file after recording
3	To stop recording
4	Recording file list

Browser

Use your web browser to view and navigate web pages, add pages as bookmarks, and save pages for offline reading. You can open several windows at the same time and switch among them easily.

Opening the web browser

Touch **Launcher** > **Browser**.

Searching and address bar



Managing bookmarks

Bookmarks let you access your favorite and frequently visited web pages quickly. You can add bookmarks directly from your phone browser.

Bookmarking a web page

1. When you are viewing the web page, touch the **Menu** key.
2. Touch **Save to bookmarks**.
3. If desired, you can edit the bookmark.
4. When you're done, touch **OK**.

Browser options

When you are viewing the web page, touch the **Menu** key, some options are available to you, such as **Save to bookmarks** which allows you to add a URL to

your bookmark list, **Save for offline reading** which allows you to store the current page in memory so that it can be read later even if you lose your internet connection.

Changing browser settings

You can change the browser settings and customize your browser view, such as set homepage, clear locally cached content and data bases, override a website's request to control zoom behavior.

Tools

Calendar

Touch **Launcher** > **Calendar**.

Your phone has a calendar for managing your time schedule. You can use the calendar to keep track of important events. After entering the calendar function menu, you can select year, month and date.

Setting the calendar view

1. Touch **Launcher** > **Calendar**.
2. Touch .
3. Select **Day**, **Week**, or **Month** in the menu that opens.

Adding a calendar event

1. Touch **Launcher** > **Calendar**.
2. Touch .
3. Enter the name, location, time, and description for the event.
4. Select a reminder for the event.
5. Touch **DONE**.

Clock

Touch **Launcher** > **Clock**.

The **Clock** allows you to view time and date. You can also add an alarm, set the alarm and turn it on. Then, the alarm can ring at a specific time you set.

Adding an alarm

1. Touch **Launcher** > **Clock**.
2. Touch **Set alarm**.
3. Touch **Add alarm**.
4. You need set time, repeat, ringtone, vibrate, etc. Then, turn it on.
5. Touch **OK**. The alarm will ring at the time you have set.

Calculator

Touch **Launcher > Calculator**.

Keep your calculations on your finger tips with the calculator. Using this application allows you to make calculations. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division. You can also use an advanced panel.

How to use the calculator

1. Touch **Launcher > Calculator**.
2. Enter the first number using the numeric keys.
3. Enter the operation for your calculation by touching the **Plus, Minus, Multiplication, or Division** key.
4. Enter the next number.
5. To view the result, touch the “=” (equals) key.

Touch the **Menu** key, you can open advanced panel to do calculation.

ES File Explorer

Touch **Launcher > ES File Explorer**.

ES File Explorer is a featured local/LAN/FTP/NET manager.

Access the **ES File Explorer**, from **Local manager**, touch **Favorites** to choose **/external_sd/** (external SD card) or choose **Home** (internal storage), touch the **Menu** key, choose **More > Help center > Help**, to view its details.

Connecting to networks and devices

Your phone can connect to a variety of networks and devices, including **WLAN**, **Bluetooth**. You can also transfer files to/from your PC through the data cable.

Determining the network you are using

1. Touch **Launcher** > **Settings**.
2. Touch **More...** > **Mobile networks** > **Network settings** > **Access point names**. The name of the wireless service provider you are currently registered with is selected in the list.

Editing or creating new access points

If you and your wireless service provider determine that you need to change the settings of your current access point name (APN) or to create a new one, you must obtain the APN and detailed settings from your provider.

1. Touch **Launcher** > **Settings**.
2. Touch **More...** > **Mobile networks** > **Network settings** > **Access point names**.
3. Touch an existing APN to edit it, or touch the **Menu** key, then touch **New APN**. Enter the APN settings that you obtained from your wireless service provider.
4. Touch the **Menu** key, then **Save**.
5. If you created a new APN, touch it in the APNs screen to start using it.

WLAN networks

WLAN is a wireless networking technology that can provide internet access at distance of up to 100 meters. To use **WLAN** on your phone, you access a wireless access point, or “hotspot”. Some hotspots are open and you can simply connect to them. Others are hidden or implement other security features, so you must configure your phone so it can connect to them.

Tip: Turn off **WLAN** when you are not using it, to extend the life of your battery.

Connecting to WLAN network

1. Touch **Launcher** > **Settings** > **WLAN**.
2. Check **WLAN** to turn it on. The phone scans for available **WLAN** networks and displays the names of those it finds. Secured networks are indicated with a Lock icon.
3. Touch a network to connect to it

If the network is secured, you are prompted to enter a password or other credentials (Ask your network administrator for details)

Receiving notifications

By default, when **WLAN** is on, you receive notifications in the status bar when your phone detects an open **WLAN** network.

1. Turn on **WLAN**, if it's not already on.
2. In the **WLAN** list screen, touch the **Menu** key to open **Advanced** options, check **Network notification**. You can uncheck this option to stop receiving notifications.

Bluetooth

Bluetooth is a short-range wireless communications technology that devices can use to exchange information over a distance of about 10 meters.

Turning Bluetooth on/off

1. Touch **Launcher** > **Settings** > **Bluetooth**.
2. Check or uncheck **Bluetooth** to turn it on or off.

Pairing with Bluetooth devices

You must pair your phone with a device before you can connect to it. Once you pair your phone with a device, they stay paired unless you unpair them.

1. Touch **Launcher** > **Settings** > **Bluetooth**.
2. If **Bluetooth** is not turned on, check **Bluetooth** to turn it on. Your phone scans for and displays the IDs of all available **Bluetooth** devices in range.

3. If the device you want to pair with is not in the list, touch **SEARCH FOR DEVICES**.
4. Touch the ID of the desired device in the list to pair it.

Connecting hands-free kit

You are provided with a hands-free earpiece set with your phone, which can be used to listen to your MP3 songs and listen and speak while on a call. To connect the hands-free earpiece, simply connect the connector into the connecting socket.

Tethering & portable hotspot

You can share your phone's mobile data connection via USB, as a portable WLAN hotspot, or Bluetooth.

Turning on/off portable WLAN hotspot

1. Touch **Launcher > Settings > More...**
2. Touch **Tethering & portable hotspot**, Check or uncheck **Portable WLAN hotspot** to turn it on or off.

Note: As **Portable WLAN hotspot** is enabled, **WLAN** function shall automatically close.

Portable WLAN hotspot settings

1. Touch **Launcher > Settings > More...**
2. Touch **Tethering & portable hotspot**, Check **Portable WLAN hotspot** to turn on hotspot.
3. Touch **Configure WLAN hotspot** to set the hotspot name and password.
4. After the password for hotspot is set, this password needs to be entered when other **WLAN** devices connect to the phone through **WLAN**.

USB tethering

You can share your phone's mobile data connection with a single computer using a USB cable.

1. Connect your phone to a computer by using the USB cable that came with your phone.
2. Touch **Launcher > Settings > More....**
3. Touch **Tethering & portable hotspot**, check the **USB tethering**.

Connecting to a computer via USB

You can connect your phone to a computer with a USB cable to transfer music, pictures, and other files between your phone's SD card and the computer. You cannot share your phone's data connection and SD card via USB cable at the same time. If you are using USB tethering, you must turn that off first. The connection to USB interfaces has to be limited to USB 2.0 version or higher. The connection to so called power USB is prohibited.

PC sync software

Suggestions: connect phone to computer, copy the [HandsetDriver] folder on the **CD-ROM** to your computer first, then backup it.

How to enable/disable CD-ROM mode

1. Open handset menu [**Settings > Developer options**].
2. Touch **CD-ROM mode** to enable/disable **CD-ROM mode**.

How to install Lenovo tool

Connect your handset to the computer, click LenovoTool_*.*)_os.exe to install Lenovo tool.

How to install handset USB driver

1. Click [HandsetDriver\DriverInstall.exe] to install handset USB driver.
2. Disable the **CD-ROM mode** (Open handset menu [**Settings > Developer options**], uncheck **CD-ROM mode**).
3. Handset USB driver will install automatically.

How to uninstall handset USB driver

Click [HandsetDriver\DriverUninstall.exe] to uninstall handset USB driver.

Settings

Get to know the settings in your phone so that you can personalize them to your own requirements. Go to **Settings** to configure how your phone looks, sounds, communication, privacy, and operations in a variety of ways.

WLAN

Turn **WLAN** on or off, scan available WLAN networks, or add the WLAN network. The detailed information is available in the section named Connecting to networks and devices.

Bluetooth

Turn **Bluetooth** on or off, search for available Bluetooth devices, and make your phone visible or invisible to other Bluetooth devices. The detailed information is available in the section named Connecting to networks and devices.

More...

Turn **Airplane mode** on or off, and configure settings for **VPN** and **Mobile networks**, and enable your phone to share its mobile data connection as a portable WLAN hotspot, or through USB tethering.

Airplane mode

In areas where the use of mobile phones is restricted, you can activate the Airplane mode to disable phone function but still use other functions of your phone such as calendar, music and games. You will not be able to make/answer calls, send/receive messages or browse the internet in **Airplane mode**.

1. On the **Home** screen, touch the **Menu** key, then touch **Settings > More....**
2. Check the box for **Airplane mode**. The phone will turn off all wireless connections when **Airplane mode** is enabled.

Tip: You can press and hold the **Power** key, then select **Airplane mode**.

Dual SIM settings

Set preferences on how you use SIM/UIM inserted in your phone.

Call settings

Let you configure phone call settings, such as voicemail service, and other special features offered by your carrier.

Voicemail service

When you are unable to answer a call, you can let the caller leave a message for you to listen to later.

This service requires network support so make sure you apply for it before use.

In the dialing keypad, touch and hold the “**1**” key to dial the voicemail number.

You can edit the voicemail number under **Settings > Call settings > Call settings > Voicemail settings** menu.

Audio profiles

Configure how your phone rings, vibrates, or alerts you in other ways when you receive communications, etc.

Display

- **Brightness:** Adjust the brightness of the screen.
- **Wallpaper:** Adapt the **Home** screen to your own style using wallpapers from **Gallery, Live Wallpapers, or Static Wallpapers.**
- **Auto-rotate screen:** Switch orientation automatically when rotating phone.
- **Sleep:** Adjust the delay before the screen automatically turns off.

Storage

Let you check out available space on your phone’s system storage, phone internal storage and your SD card.

Copying files between a PC and your SD card, you should set the SD card as USB mass storage.

1. Connect your phone to your PC with the USB cable.
2. Drag the **Notification bar** downwards.
3. Choose **USB connected**, to turn on USB storage.

During this time, you can't access the SD card from your phone.

Safely removing the SD card

Drag down the **Notification panel** and choose **Turn off USB storage**.

Erasing the SD card

1. Touch **Launcher > Settings**.
2. Touch **Storage > Erase SD card**.

Battery

Check battery status and battery level.

Apps

Manage downloaded, SD card and running applications.

Accounts & sync

Allows you to add and manage supported accounts. Enables your phone to synchronize data with the synchronization accounts that you add.

Location services

Enable or disable **Location service**, **GPS satellites**, etc. You can let applications use data from sources such as WLAN and mobile networks to determine your approximate location, let applications use GPS to pinpoint your location, use server to assist GPS, and let Google use your location to improve search results and other services.

Security

Protect your phone by setting up different locks and passwords.

Language & input

Let you select the language for the text on your phone and for configuring the onscreen keyboard.

Backup & reset

Manage your personal data.

Data & time

You can set the format of date and time.

Schedule power on & off

Set powering on/off of the phone automatically.

Accessibility

Enable your installed accessibility services and adjust related settings.

Developer options

Set options for application development. For example, you can set the phone to enter debug mode when USB connections are active.

About phone

View information about your phone, such as **Status**, **Legal information**, etc.

Precautions and tips for the A600e

Never drop, strike, scratch, twist, knock, vibrate or push the A600e or place any heavy objects on it.

Gently touch the A600e.

Keep the A600e away from any magnetic substances, mobile phones in conversation, electrical appliances or speakers.

Avoid exposing the A600e to extreme temperatures (lower than -10°C or higher than 50°C).

Do not place the A600e in a damp environment.

Do not use corrosive detergents or solvents to clean your A600e. Just wipe the A600e screen with a damp, soft, lint-free cloth to clear fingerprints off it.

Recycling and environmental information

General recycling statement

Lenovo encourages owners of information technology (IT) equipment to responsibly recycle their equipment when it is no longer needed. Lenovo offers a variety of programs and services to assist equipment owners in recycling their IT products. For information on recycling Lenovo products, go to:

<http://www.lenovo.com/recycling>.

Important WEEE information



The WEEE marking on Lenovo products applies to countries with WEEE and e-waste regulations (for example, European Directive 2002/96/EC, India E-Waste Management & Handling Rules, 2011) . Appliances are labeled in accordance with local regulations concerning waste electrical and electronic equipment (WEEE). These regulations determine the framework for the return and recycling of used appliances as applicable within each geography. This label is applied to various products to indicate that the product is not to be thrown away, but rather put in the established collective systems for reclaiming these end of life products.

Users of electrical and electronic equipment (EEE) with the WEEE marking must not dispose of end of life EEE as unsorted municipal waste, but use the collection framework available to them for the return, recycle, and recovery of WEEE and to minimize any potential effects of EEE on the environment and human health due to the presence of hazardous substances. For additional WEEE information go to: <http://www.lenovo.com/recycling>.

Recycling information for India

Recycling and disposal information for India is available at:

http://www.lenovo.com/social_responsibility/us/en/sustainability/ptb_india.html.

Battery recycling marks



Restriction of Hazardous Substances Directive (RoHS)

India RoHS

RoHS compliant as per E-Waste (Management & Handling) Rules, 2011.

Version number: V1.0 70112729