



CE 0168

LG-A133 USER GUIDE

This manual may differ from the phone depending on the phone software version and service provider used.



Disposal of your old appliance

1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.

2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

4 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

P/N: MMB80389324 (1.2)



Turning Your Phone On and Off

1. Press and hold the End key until the power comes on.
2. Press and hold the End key until the power goes off.

Making a call

1. Enter a phone number including the area code.
2. Press the  key to call the number.
3. To end the call, press the  key.

Making an international call

1. Press and hold the  key for the international prefix. The '4' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press  [Send] key to call the number.

Answering a call

1. When you receive a call, the phone rings.
2. If the **Press any key** has been set as the **Answer mode** (Settings > Call > Answer mode), any key press will answer a call except for the  key.
3. To end the call, press the  key.

Anti Theft Mobile Tracker (ATMT)

Anti-theft mobile tracker (ATMT) allows you to track your lost phone. When someone uses your phone without your permission, the tracking service will be activated.

You are reminded by a text message sent to the default phone number you have set, without the unauthorised user's knowledge. You can always activate the ATMT and configure your personal settings.

To activate Anti-theft mobile tracker

1. From the main menu, select **Settings > Security > Anti-theft mobile tracker** and press **Select**.
2. Select **Set Anti-theft** and press **Select**.
3. Switch **On or Off** and press **Select**.
4. Input the security code to enable or disable this function.
5. Then in the Anti-theft mobile tracker menu, edit and save the name in **Sender name** and numbers in **Sending number list**.

Note

› The default ATMT code is '0000'. You have to enter the code before configuring the ATMT settings.

Call log Menu 3

Call log	You can view all lists of outgoing or incoming calls.
Missed calls	You can view the unanswered calls.
Received calls	You can view the Received calls.
Dialled numbers	You can view the outgoing call numbers.
Call duration	Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.
Packet Data counter	You can check the amount of data transferred over the network.
Call costs	View the charges applied to your dialled numbers and the call duration of all your received and dialled calls. Also you can do Cost Settings.

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

 
Important! › The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling. Inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.


Note: Fully charge the battery before using it for the first time.

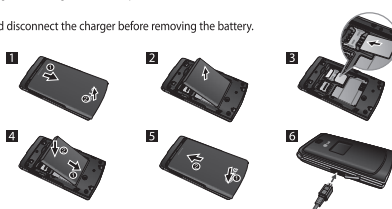

Selecting functions and options

Your phone offers a set of functions that allow you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu lets you view and alter the settings of a particular function.

 The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.

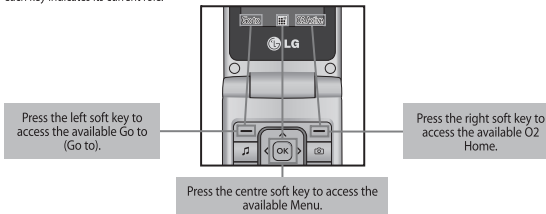

Quick feature reference

This section provides brief explanations of features on your phone.


Messaging Menu 1

Create message	This menu includes functions related to SMS (Short Message Service) and MMS (Multimedia Message Service).
Inbox	You will be alerted when you have received messages. They will be stored in Inbox.
My mailbox	My Email lets you get your favourite emails on your mobile for a fixed price each month.
Drafts	You can save the message temporarily in Drafts.
Outbox	This is a temporary storage folder for the unsent messages or messages that you have sent but fail to deliver.
Sent items	After sending out the message, the text message or multimedia message is saved in the Sent folder.
Saved items	You can access your saved messages, text templates and multimedia templates.
Emoticons	A list of useful Emoticons, already written for a quick reply.
Message settings	This menu allows you to set features of your network service provider.

Settings Menu 4

Profiles	You can adjust and customize the phone tones for different events, or environments.
Display	You can change settings for the phone display.
Data and time	You can set functions relating to the date and time.
Connectivity	You can set up the condition or data for the phone to connect with other device or network.
Call	You can set the menu relevant to a call.
Phone	Allows you to set the phone › My Navi Key: Allows you to change the preferences on the Hotkeys that are currently assigned for your navigation keys (when in standby mode). › Language: You can change the language for the display texts in your phone. This change will also affect the Language Input mode. › Power save: Choose among the following, Off/Night only/Always On, to change the factory set power saving settings. › Handset information: Shows your phone number, model number and S/W version.
Network	You can set select network and network mode settings using this menu. Also you can add a preferable network to be connected to Preferred lists.

 Phone Components

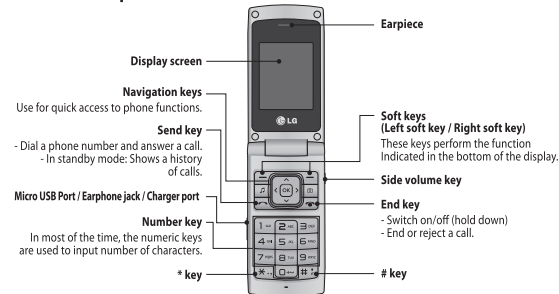

Entering Text

You can enter alphanumeric characters by using the phone's keypad.

T9 Mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary.

123 Mode (Numbers Mode)

Type numbers using pressing and holding the button keys.

Symbol Mode

 
The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options** → **Insert Symbol**. Use the navigation keys to select the desired symbol and press the OK key.

Installing a Memory Card

Lift the memory card cover and insert a microSD card with the gold contact area facing downward. Close the memory card cover so that it clicks shut.

To remove the memory card, gently push it as shown in the diagram.

Note: A memory card is an optional accessory.

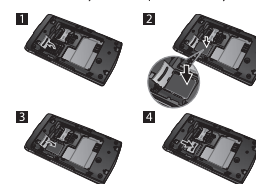

Contacts Menu 2

Names	Select Names and enter the name that you want to search from the contact list. You can register a new contact address. You can enter the name, different phone numbers, email addresses, groups and image of a new contact.
Settings	You can set the contact display option.
Groups	You can list up to the members per each group.
Service dial numbers	Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).
Own number	You can save and check your own number in SIM card.
My business card	This option allows you to create your own business card featuring name and any numbers.

Settings Menu 4 (Continued)

Internet profiles	This menu shows the Internet profiles. You can create new profiles, delete or edit them using the options menu. However, you cannot delete or edit default configurations.
Access points	This menu shows the access points list. You can create new profiles, delete or edit them by using the options menu. However, you cannot delete or edit default configurations.
Packet data conn.	If you select the 'When available' option, your phone is automatically registered to a GPRS network when you switch the phone on. If you select "When needed", the GPRS connection is established for the duration of a WAP or application connection.
Security	This menu allows you to set the phone's safety. › PIN code request: You can set the phone to ask for the PIN code of your SIM card when the phone is switched on. › Handset lock: You can use a security code to avoid unauthorised use of the phone. › Lock if SIM in changed: Set the lock function if SIM changed. › Anti-theft mobile tracker: The ATMT feature of this phone provides you with the ability to have a tracking system in place for your mobile in case you lose or misplace it. › Change codes: PIN is an abbreviation of Personal Identification Number to prevent use by unauthorised persons. You can change the access codes: Security code, PIN code, PIN2 code, ATMT code.

