 


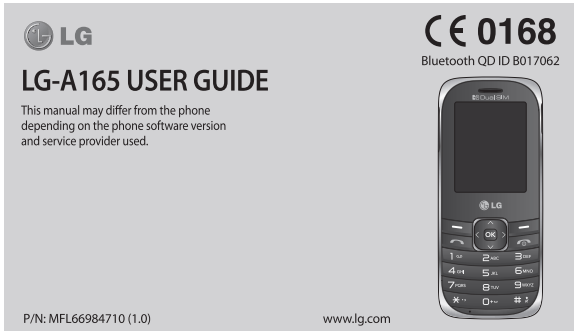

Turning Your Phone On and Off

- 1. Press and hold the End key until the power comes on.
- 2. Press and hold the End key until the power goes off.

Making a call

- 1. Enter a phone number including the area code.
- 2. Press the [Send] key or select options > select SIM1 or SIM2 to make voice call > press "ok".
- 3. To end the call, press the [End] key.

Making an international call

- 1. Press and hold the [International] key for the international prefix. The '+' character automatically selects the international access code.
- 2. Enter the country code, area code, and the phone number.
- 3. Press the [Send] key or select options > select SIM1 or SIM2 to make voice call > press "ok".

Answering a call

- 1. When you receive a call, the phone rings.
- 2. Press the [Send] key or select option > OK to answer a call.
- 3. To end the call, press the [End] key.

How to set the tone

You may set up the following different profiles to adapt to different environmental conditions.

- 1. Select Settings from the main menu, then Select Profiles.
- 2. Select a profile and press [Options - Customize] to set the ring tone.
- 3. Press the left soft key [OK] and then you can set the desired ring tone.

Your phone also provides the following options to customize tones/alert types:

- > **Tone settings:** Selects a tone type (Incoming call, Power on, Power off, Message, Keypad).
- > **Volume:** Sets desired volume (Ringtone, Key tone).
- > **Alert type:** Selects an alert type (Ring only, Vib. only, Vib. and ring, Vib. then ring) for the ringing tone.
- > **Ring type:** Selects a ring type (Single, Repeat).
- > **Extra tone:** Selects an extra tone (Warning, Error, Camp on).
- > **Answer mode:** If you select the Any key, you can receive a call by pressing any key except the [End] key and the right soft key.

Anti Theft Mobile Tracker (ATMT)

Anti-theft mobile tracker (ATMT) allows you to track your lost phone. When someone uses your phone without your permission, the tracking service will be activated.

You are reminded by a text message sent to the default phone number you have set, without the unauthorized user's knowledge. You can always activate the ATMT and configure your personal settings.

To activate Anti-theft mobile tracker

- 1. From the main menu, select **Settings > Security settings > Anti-theft mobile tracker** and press OK.
- 2. Then in the Anti-theft mobile tracker menu, edit and save the name in **Sender name** and numbers in **Sending number list**.
- 3. Select **Set Anti-theft** and press OK.
- 4. Switch **On** or **Off** and press OK.
- 5. Input the security code to enable or disable this function.

Note

> The default ATMT code is "0000". You have to enter the code before configuring the ATMT settings.

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

 
Important! > The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1. Remove the back cover.
- 2. Lift battery away.
- 3. Insert the SIM card.
- 4. Insert the battery pack.
- 5. Attach the back cover.
- 6. Charge the battery.


Note: Fully charge the battery before using it for the first time.

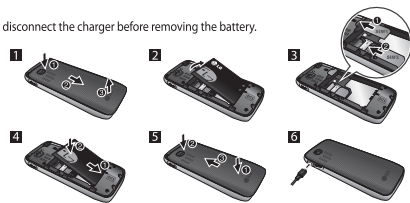

Selecting functions and options

Your phone offers a set of functions that allow you to customize the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked [Menu] and [OK]. Each menu and sub-menu lets you view and alter the settings of a particular function.

 The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.

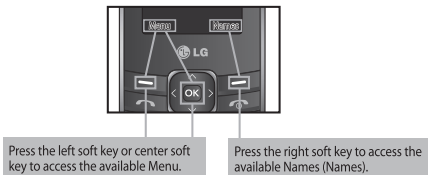


Listens to FM radio station. You can enjoy listening FM without using headset as phone supports wireless FM service.

- 1. From main menu select Media then select FM radio.
- 2. Use navigation keypad to search radio station. You can also press Options to search radio frequency for available channels and automatically store to the channel list.
- 3. Press **Options** to edit the channel list. There are 9 stations you may pre-set. Your phone provides the following options for FM radio:
 - > **Record:** Records your favorite radio programs.
 - > **Channel List:** Bookmark up to 9 radio stations by entering the channel name and frequency.
 - > **Manual input:** You can input frequency manually by using this option.
 - > **Minimize:** This function allows you to do other work on phone by minimizing FM radio.
 - > **Auto Search:** Auto search available channels and automatically store them to the channel list.
 - > **Settings:** Allows you to switch the record audio quality and the record format. You can record in AMR or WAV formats.
 - > **Schedule FM record:** You can record FM program on schedule when you set up the recording time.
 - > **Append:** Resumes a previously recorded file.

Menu Tree

1. Messaging 1.1 Create message 1.2 Inbox 1.3 Drafts 1.4 Outbox 1.5 Sent items 1.6 Saved items 1.7 Broadcast message 1.8 Templates 1.9 Message settings 1.10 SOS message	4. Settings 4.1 Dual SIM settings 4.2 Profiles 4.3 Display 4.4 Connectivity 4.5 Call 4.6 Phone 4.7 Network 4.8 Security settings 4.9 Restore factory settings	6. Media 6.1 Camera 6.2 Video recorder 6.3 Image viewer 6.4 Media player 6.5 Slide show 6.6 Photo editor 6.7 FM radio 6.8 Voice recorder	7.8 World time 7.9 Go to 7.10 File manager 7.11 SIM1 services 7.12 SIM2 services
2. Contacts 2.1 Add new contact	5. Gallery 5.1 My images 5.2 My sounds 5.3 My videos 5.4 My game & apps 5.5 Others	7. Organisr 7.1 Alarm clock 7.2 Calendar 7.3 To-do list 7.4 Notes 7.5 Calculator 7.6 Stopwatch 7.7 Converter	8. Applications 8.1 My games & apps 8.2 Settings
3. Log 3.1 Sim1 call log 3.2 Sim2 call log			9. Web 9.1 Home 9.2 Bookmarks 9.3 Last web address 9.4 Settings 9.5 Go to address 9.6 Saved pages 9.7 Open file 9.8 Recent pages

 Phone Components

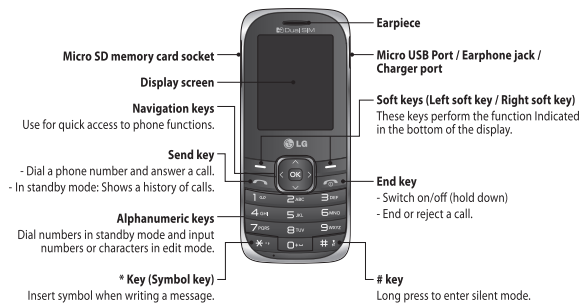

Entering Text

You can enter alphanumeric characters by using the phone's keypad.

T9 Mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary.

123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

Symbol Mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options** → **Insert Symbol** or press [Symbol] Key. Use the navigation keys to select the desired symbol and press the OK key.

Installing a Memory Card

Using a memory card can expand the available storage space of your mobile phone. To insert a memory card, insert it into the card slot until it clicks into place. Ensure that the golden contact area faces downwards, as shown in the figure.

Note: A memory card is an optional accessory.



Activating and switching SIM cards

Your phone supports the Dual SIM cards mode, enabling you to use two SIM cards at the same time without changing them. When there are two SIM cards installed, you can activate one of two or both SIM cards.

This function allows you to select the default SIM card for call or message in Contact, Call logs and Message box.

- 1. Select [Settings] from the main menu, and then select [Dual SIM settings].

Note

> If there is only one SIM card installed, this SIM card would be activated as default.

Quick feature reference

This section provides brief explanations of features on your phone.

Messaging Menu 1

Create message: This menu includes functions related to SMS (Short Message Service) and MMS (Multimedia Message Service). You can send SMS to many contacts at a time.

Tip: User can send SMS to Many recipients by selecting "Add from Contacts" from Send to option. (User can select Maximum 20 contacts from the list). User Can send SMS to groups by selecting Group icon by pressing left navigation key from "Add from Contacts" options.

Inbox: You will be alerted when you have received messages. They will be stored in Inbox.

Tip: SMS Sorting: Inbox Messages can be sorted with the given sorting options for an easy access of messages (Sender, Subject, Unread/read, Message type, Message size).

Drafts: You can save the message temporarily in Drafts.

Outbox: This is a temporary storage folder for the unsent messages or messages that you have sent but fail to deliver.

Sent items: After sending out the message, the text message or multimedia message is saved in the Sent folder.

Saved items: You can access your saved messages.

Broadcast message: Choose whether to receive, block, view or edit channels to receive information service messages (broadcast messages). Also choose the languages of information service messages.

Templates: There are pre-defined messages in the list. You can view and edit the template messages or create new messages.

Message settings: This menu allows you to set features of your network service provider.

