

LG-C195 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Product Authentication program

Dear Customers,

To protect all LG customers from counterfeit and grey market products and make sure that you receive official warranty service, LG is now running a product authentication program. To make sure your handset is a genuine product of LG, ONLY one SMS containing the IMEI No. of your purchased handset will be automatically sent to LG on the date of purchase. Once your phone is authenticated, you will receive the message "Your handset is a genuine LG product." The customer shall bear the cost of one SMS for the product authentication program. In return, you will receive one additional month of warranty for free. One additional month of warranty covers only mobile phone, not batteries and accessories. The IMEI No. sent to LG guarantees your handset to be free from manufacturing defects during the warranty period from the date of purchase without proof of purchase or warranty card.

P/N: MFL67525009(1.0) www.lg.com

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card.

Illustrations

- 1 Remove the back cover
- 2 Remove the battery
- 3 Insert the SIM card
- 4 Insert the battery
- 5 Insert the back cover
- 6 Charging your phone



WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Quick feature reference

Menu 1. Games & apps.

Press **Menu** and select **Games & apps**. You can install new games and applications on your phone to keep you amused when you have spare time. Press **Menu** and select **Games & apps**.

Menu 2. Logs

Press **Menu** and select **Logs**. You can check the record of all logs, calls only, missed, outgoing, incoming logs and messages only. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view the number of times you have called.

- **All logs:** View a complete list of all your dialled, received and missed calls and also send and received messages.
- **Calls Only:** View a list of all the numbers you have called, received calls and missed calls.
- **Messages Only:** View a list of all the numbers you have sent or received messages.

Playing a song

- 1 Press **Menu** and select **Music**, then choose **MP3 player**.
- 2 Choose **All songs** then select the song you want to play. Press **OK** key.
- 3 Select **⏸** to pause the song.
- 4 Select **⏭** to skip to the next song.
- 5 Select **⏮** to skip to the previous song.

TIP! To change the volume while listening to music, press Up/Down navigation keys.

Note: The copyright of music files can be protected in international treaties and national copyright laws. Therefore, it may be necessary to obtain a permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning the use of such material.

- **Missed logs:** View a list of any calls you have missed.
- **Outgoing logs:** View a list of all the numbers you have called.
- **Incoming logs:** View a list of all the numbers that have received.

Menu 3. Camera

• Camera

- 1 Press **Menu** and select **Camera** and choose **Camera**.
- 2 When the camera has focused on your subject, select the Capture icon on the bottom-centre of the screen and press **OK** to take a photo.

• Video camera

- 1 Press **Menu** and select **Camera** and choose **Video camera**. The video camera's viewfinder will appear on screen.
- 2 Focus the Video camera on what to record.
- 3 Select the **Rec.** icon on the bottom-centre of the screen and press **OK** to take a video. **Rec.** will appear at the bottom of the viewfinder. Press again to stop recording.

• Album

View the pictures and videos you have taken in your Album.

FM Radio

Your LG-C195 has an **FM radio** feature so you can tune into your favorite stations and listen on the move.

Note: Insert handsfree connector to listen to a FM Radio.

• Listening to the radio

- 1 Press **Menu**, select **Music** and choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

• Recording the Radio

- 1 Press **Rec.** during listening to the radio.
- 2 The recording time is displayed on your phone. If you want to stop the recording, press **Stop**. If recording is done, the recorded contents will be saved in **My stuff** -> **Sounds** as mp3 file.

Getting to know your phone

Earpiece

Main LCD

Send key

- Dials a phone number and answers a call.
- In **standby mode**: Shows the history of calls.

Alpha numeric keys

- In **standby mode**: Input numbers to dial. Hold down below keys.
 - Insert '+' symbol to make international calls.
 - Connect voice mail centre.
 - To **Speed dials**.
 - SOS Mode**.
 - Hold the key down to activate or deactivate silent mode.
- In **editing mode**: Enter numbers & characters

Soft keys (Left soft key / Right soft key)

- These keys perform the function indicated in the bottom of the display.

Confirm key / OK key

- Selects menu options and confirms actions.

Navigation key

- In **standby mode**:
 - Press Up Navigation Key**: Widget when it was set. (Menu > Settings > Display > Homescreen > Widget settings)
 - Press Down Navigation Key**: MP3 player
 - Press Right Navigation Key**: Messaging
 - Press Left Navigation Key**: My stuff
 - In **menu**: Scroll up, down, Right & left.
- **End key**
 - Switch on/off (hold down)
 - End or reject a call.
- **Lock/Customise key**
 - Short press to access customise key.
 - Long press to Lock/Unlock in any screen.

Memory card

Installing a memory card

You can expand the memory available on your phone using a memory card.

Note: A memory card is an optional accessory.

Slide the memory card into the slot until it clicks into place. Make sure that the gold contact area is facing downwards.



WARNING: External memory can not exceed 8GB.

Removing a memory card

Carefully remove the memory card by gently pulling it outside as shown in the above diagram.

Formatting the memory card

Your memory card may already be formatted. If your memory card isn't formatted, you will need to format it before you can begin using it.

- 1 From the home screen press **Menu** then select **Settings**.
- 2 Choose **Device** then **Memory info.** and select **External memory**.
- 3 Press **Format** and enter the password, which is set to 0000 as default. Your memory card will be formatted and ready to use.
- 4 To view the new formatted folders on your LG-C195 press **Menu** and select **My stuff**. Press right navigation key two times to choose memory card.

WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

WARNING: Do not remove your MicroSD card during the data transfer.

Menu 4. Internet

You can launch the internet browser and access the homepage of the activated profile on web settings. You can also manually enter a URL address and access the associated Web page.

1 In Menu mode, select **Internet** to launch your service provider's homepage.

2 Navigate web pages using the following keys:

- **Navigation** - Scroll up or down on a web page.
- **OK Key** - Select an item.
- **Back** - Return to the previous page.
- **Options** - Access a list of browser options.

Note: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Menu 5. SNS (Social network services)

Your LG-C195 has SNS that lets you enjoy and manage your social network. You can update your own SN place status and view your friend's SN updates.

Note: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Menu 6. Messaging

Your LG-C195 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) as well as the network's service messages.

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **Write message**.
- 2 A new message editor will open. Message editor combines **SMS** and **MMS** in one intuitive mode that is easy to switch between. The default setting of the message editor is **SMS** mode.

Menu 8. E-mail

Sending an email using your new account

To send/receive an email, you should set up an email account.

- 1 Press **Menu**, select E-mail and choose the account you want to use.
- 2 From Options choose **Write e-mail** and a new email window will open.
- 3 Enter address in **To** field then write a subject line and press down navigation key.
- 4 Enter your message using the keypad then Press **OK** key to send the email.

Menu 9. My stuff

View the **images, sounds, videos** and others in your **My stuff**.


Menu 10. Phonebook

Searching for a contact

- 1 Press **Menu** and select **Phonebook**.
- 2 Using the keypad, enter the first letter of the name of the contact you want to call.
- 3 To scroll through the contacts, use the up and down navigation keys. And to scroll through their different numbers, use the left and right navigation keys.

Adding a new contact

- 1 Press **Menu** and select **Phonebook**.
- 2 Press **Option** and select **New contact**.
- 3 Enter the information you want in the fields provided and select **Done**.

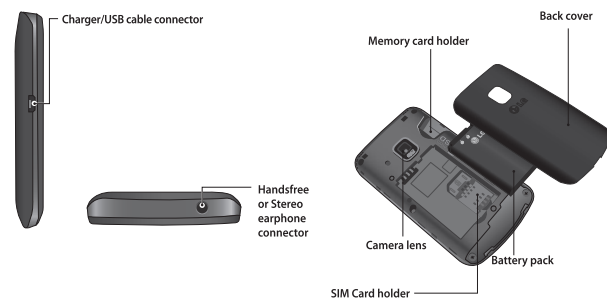

Calling

Making a call

- 1 Make sure your phone is on.
- 2 You can use the keypad. To delete a digit press back arrow.
- 3 Press **⏻** to begin the call.
- 4 To end the call, press **⏻**.

TIP! To enter + when making an international call, press and hold 0.

Making a call from your Contacts

It's easy to call anyone whose number you have stored in your **Phonebook**.

- 1 Press **Menu** to open the main menu. Select **Phonebook**.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the **Contacts**.
- 3 Press **⏻** to begin the call.

Answering and rejecting a call

When your phone rings, press **⏻** to answer the call. While your phone is ringing you can press **Silent** to mute the ringing. This is useful if you have forgotten to change your profile to silent for a meeting.

Press **⏻** or select **Reject** in order to reject an incoming call.

Note: In call when speaker is activated, the speaker icon is displayed with red colour cross, when the speaker is deactivated speaker icon is displayed without red colour cross.

Speed dialing

You can assign a speed dial number to a contact you call frequently.

Text input mode using the keypad

When you want to enter text, for example when writing a message, the keypad will default to **Abc** mode. If you are entering a number, for example when making a call, the keypad number keys will default to numbers. To change the mode press **⌨** key in editor screen.

Menu 7. Music

MP3 Player

Your LG-C195 has a built-in music player, so you can play all your favourite music.

Note: Before using music player, you will need to transfer music file onto your phone. Music player supports codec types as follows: MP3, WMA, AAC. Music player does not necessarily support all features and variations of file formats.

3 Enter your message using the keypad. See Entering text on the right for more information on how to enter text.

4 Select **Options** and choose **Insert** to add an Image, Video, Sound, Text template, Multimedia template, Emotion, Name & Number, Slide, Subject or More (Business card/Schedule/Memo/Task/My profile).

5 Choose **Send to**.

6 Choose a contact from the list of contacts or enter the phone number.

7 Select **Send**.

WARNING: Image, Sound, Video, Slide, Subject, Business card, Schedule or My profile is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: **Abc** mode, and **123** mode.

Note: Some fields may allow only one input mode (e.g. telephone number in contact fields).

Menu 11. Tools

• Quick menu

- 1 Press **Menu** and select **Tools**, then choose **Quick menu**.
- 2 Press **Add** and choose the menu you want to quickly approach.

• Organiser

You can access **Calendar, Tasks, Memo, Calculate date**.

• Alarm clock

You can set up to 5 alarm clocks to go on at a specified time.

• Calculator

This contains the standard functions such as Addition, Subtraction, Multiplication and Division.

• Voice recorder

Use your **Voice recorder** to record voice memos or other sounds.

• Stopwatch

This option allows you to use the function of a stopwatch.

• Unit converter

This converts many measurement into a unit you want.

• World clock

Allows you to determine the current time in another time zone or country.

• SIM services

This feature depends on SIM and the network services. In case the SIM card supports SAT (i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.

Menu 12. Settings

Press **Menu** and select **Settings**.

• Profiles

Choose the profile you want to edit. Using flight mode - Flight mode will not allow you to make calls, connect to the internet or send message.

• Device

> **Date and time:** In date and time settings select **Auto** update **On** and the phone will automatically update the date and time.

