

LG-C375 User Guide - English

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

P/N: MFL67264429(1.0) www.lg.com

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important: The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of reach of small children.

only 2G/2.5G SIM supported

Illustrations

- 1 Remove the back cover
- 2 Remove the battery
- 3 Insert the SIM card
- 4 Insert the battery
- 5 Insert the back cover
- 6 Charging your phone

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Answering and rejecting a call

When your phone rings, press **Accept** or press **Silent** to answer the call. While your phone is ringing you can press **Silent** to mute the ringing. This is useful if you have forgotten to change your profile to silent for a meeting.

Press **End** or select **Reject** in order to reject an incoming call.

Note: In call when speaker is activated, the speaker icon is displayed with red colour cross, when the speaker is deactivated speaker icon is displayed without red colour cross.

Speed dialling

You can assign a speed dial number to a contact you call frequently.

5 Choose **Send** to.

6 Choose a contact from the list of contacts or enter the phone number.

7 Select **Send**.

WARNING: Image, Sound, Video, Slide, Subject, Business card, Schedule or My profile is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: Abc mode, and T23 mode.

Note: Some fields may allow only one input mode (e.g. telephone number in contact fields).

Quick feature reference

Menu 1. Games & apps.

You can install new games and applications on your phone to keep you amused when you have spare time. Press **Menu** and select **Games & apps**.

Menu 2. Logs

You can check the record of all logs, calls, missed, outgoing, incoming logs and messages only. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view the number of times you have called.

- **All logs:** View a complete list of all your dialled, received and missed calls and also send and received messages.
- **Calls Only:** View a list of all the numbers you have called, received calls and missed calls.
- **Messages Only:** View a list of all the numbers you have sent or received messages.

Text input mode using the keypad

When you want to enter text, for example when writing a message, the keypad will default to Abc mode. If you are entering a number, for example when making a call, the keypad number keys will default to numbers. To change the mode press **Mode** key in editor screen.

Menu 7. Music

MP3 Player

Your LG-C375 has a built-in music player so you can play all your favourite music.

Note: Before using music player, you will need to transfer music file onto your phone. Music player supports codec types as follows: MP3, WMA, AAC. Music player does not necessarily support all features and variations of file formats.

Getting to know your phone

Earpiece

Main LCD

Send key

- Dials a phone number and answers a call.
- **In standby mode:** Shows the history of calls.

Alpha numeric keys

- **In standby mode:** Input numbers to dial. Hold down below keys.
- Insert '+' symbol to make international calls.
- Connect voice mail centre.
- To - Speed dials.
- SOS Mode.
- Hold the key down to activate or deactivate silent mode.

In editing mode: Enter numbers & characters

Wi-Fi Hot key

Keypad lock key

Message blinker

- This LED flashes up to 10 minutes if you don't check new IM, Email, Message and Missed call.

Soft keys (Left soft key / Right soft key)

- These keys perform the function indicated in the bottom of the display.

End key

- Switch on/off (hold down)
- End or reject a call.

Confirm key / OK key

- Selects menu options and confirms actions.

Navigation key

- **In standby mode:** Press **Up Navigation Key:** Widget when it was set. (Menu > Settings > Display > Homescreen > Widget settings) Press **Down Navigation Key:** My stuff Press **Right Navigation Key:** MP3 player Press **Left Navigation Key:** Camera
- **In menu:** Scroll up, down, Right & left.

Using Dual SIM-card

You can see two Network Signal icons on the left-top of the screen when you insert two SIM-Cards.

Activating and switching SIM cards

The SIM Switching key allows you to select the default SIM card for call or message in contact, call logs and message box in standby mode.

User can press SIM switching key simply on the right side of the LG-C375. Dual SIM key make it easy for you to switch SIM-Card whenever you call, send messages and so on.

Note: If there is only one SIM card installed, this SIM card would be activated as default.

TIP:

1. You can see the network signals highlighted by background colour when you switch them. It makes you easily identify the strength of your signal of the selected SIM-Card.
2. You must choose SIM1 or SIM2 to use some function. For example, Call, Messaging, Phonebook, Settings and any Options.

- **Missed logs:** View a list of any calls you have missed.
- **Outgoing logs:** View a list of all the numbers you have called.
- **Incoming logs:** View a list of all the numbers that have received.
- **Call durations:** Allows you to view the duration of your Last call, outgoing calls, Incoming calls and All calls.
- **Data volume:** Allows you to view the received data and sent data.

Menu 3. Camera

• Camera

- 1 Press **Menu** and select **Camera** and **Camera**.
- When the camera has focused on your subject, select the Capture icon on the bottom-centre of the screen and press **OK** to take a photo.

• Video Camera

- 1 Press **Menu** and select **Camera** and choose **Video Camera**. The video camera's viewfinder will appear on screen.
- 2 Focus the camera on what to record.

Playing a song

- 1 Press **Menu** and select **Music**, then choose **MP3 player**.
- 2 Choose **All songs** then select the song you want to play. Select **Play**.
- 3 Select **Pause** to pause the song.
- 4 Select **Next** to skip to the next song.
- 5 Select **Previous** to skip to the previous song.

TIP: To change the volume while listening to music, use the volume keys on the left hand side of your phone.

Note: The copyright of music files can be protected in international treaties and national copyright laws. Therefore, it may be necessary to obtain a permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Before downloading or copying the file, please check the national legislation of the applicable country concerning use of such material.

FM Radio

Your LG-C375 has an **FM radio** feature so you can tune into your favorite stations and listen on the move.

Memory card

Installing a memory card

You can expand the memory available on your phone using a memory card.

Note: A memory card is an optional accessory.

Slide the memory card into the slot until it clicks into place. Make sure that the gold contact area is facing downwards.



WARNING: External memory cannot be exceeded 8GB.

- 3 Select the Rec. icon on the bottom-centre of the screen and press **OK** to take a video. Rec. will appear at the bottom of the viewfinder. Press again to stop recording.

• Album

View the pictures and videos you have taken in your Album.

Menu 4. Internet

You can launch the internet browser and access the homepage of the activated profile on web settings. You can also manually enter a URL address and access the associated WEB page.

- 1 In **Menu** mode, select **Internet** -> **Yes** to launch your service provider's homepage.

2 Navigate web pages using the following keys:

- **Navigation** - Scroll up or down on a web page.
- **OK** - Select an item.
- **Back** - Return to the previous page.
- **Options** - Access a list of browser options.

Note: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Note: If you are in an area with bad radio reception, you may have difficulty listening to the radio. It is recommended that you insert headphone into the hands-free connector when listening to the radio to ensure good radio reception.


• Listening to the radio

- 1 Press **Menu**, select **Music** and choose **FM radio**.
- 2 Select the channel number of the station you would like to listen to.

• Recording the Radio

- 1 Press **Rec.** while listening to the radio.
 - 2 The recording time is displayed on your phone.
- If you want to stop the recording, press **Stop**. If recording is done, the recorded contents will be saved in My stuff -> Sounds as mp3 file.

TIP: To configure your recording settings such as the saved memory, recording type or pre-recording, press **Option** and select **Recording settings**.

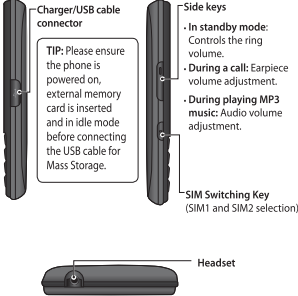

Formatting the memory card

Your memory card may already be formatted. If your memory card isn't formatted, you will need to format it before you can begin using it.

- 1 From the home screen press **Menu** then select **Settings**.
- 2 Choose **Device** and **Memory info.** and select **External memory**.
- 3 Press **Format** and enter the password, which is set to 0000 as default. Your memory card will be formatted and ready to use.
- 4 To view the new formatted folders on your LG-C375 press **Menu** and select **My stuff**. Press right navigation key two times to choose memory card.

WARNING

1. When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.
2. Do not remove your MicroSD card during the data transfer.

Menu 5. SNS (Social network services)

Your LG-C375 has SNS that lets you enjoy and manage your social network. You can update your own SN place status and view your friends' SN updates.

Note: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Facebook

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others. Select **Options** to choose **Refresh** and **main menu**.

Twitter

Twitter is a micro blogging service that enables its users to send and read messages known as tweets.

Orkut

Orkut is an online community designed to make your social life more active and stimulating.

Menu 8. E-Mail

Sending an email using your new account

- 1 Press **Menu** and select **Phonebook**.
 - 2 Using the keypad enter the first letter of the name of the contact you want to call.
 - 3 To scroll through the contacts and their different numbers use the navigation keys.
- Adding a new contact**
- 1 Press **Menu** and select **Phonebook**.
 - 2 Press **Option** and select **New contact**.
 - 3 Enter the information you want in the fields provided and select **Done**.

Menu 9. My stuff

View the images, sounds, videos and others in your **My stuff**.

Calling

Making a call

- 1 Make sure your phone is on.
- 2 You can use the keypad. To delete a digit press back arrow.
- 3 Press **End**, to begin the call.
- 4 To end the call, press **End**.

TIP: To enter + when making an international call, press and hold 0.

Making a call from your Contacts

It's easy to call anyone whose number you have stored in your **Phonebook**.

- 1 Press **Menu** to open the main menu. Select **Phonebook**.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the **Phonebook**.
- 3 Press **End**, to begin the call.

Windows Live!

This indicates the Instant Messaging Client Information such as Client Name and Version Number.

Menu 6. Messaging

Your LG-C375 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) as well as the network's service messages.

Sending a message

- 1 Press **Menu**, select **Messaging** and choose **Write message**.
- 2 A new message editor will open. Message editor combines **SMS** and **MMS** in one intuitive mode that is easy to switch between. The default setting of the message editor is **SMS** mode.
- 3 Enter your message using the keypad.
- 4 Select **Options** and choose **Insert** to add an Image, Video, Sound, Text template, Multimedia template, Emoticon, Name & Number, Slide, Subject or More (Business card/Schedule/Memo/Task/My profile).

Menu 10. Phonebook

Searching for a contact

- 1 Press **Menu** and select **Phonebook**.
 - 2 Using the keypad enter the first letter of the name of the contact you want to call.
 - 3 To scroll through the contacts and their different numbers use the navigation keys.
- Adding a new contact**
- 1 Press **Menu** and select **Phonebook**.
 - 2 Press **Option** and select **New contact**.
 - 3 Enter the information you want in the fields provided and select **Done**.

