

DM-01G

INSTRUCTION MANUAL

'15.5



Disney mobile
on ^{NTT} docomo

© Disney

Introduction

Thank you for purchasing "DM-01G".

Before or while using, read this manual thoroughly to ensure you use correctly.

References to the Operation

Download the latest information of this manual from DOCOMO website. Also you can check the latest information from this terminal.

■ Quick Start Guide (Accessories, in Japanese only)

Basic function operations are explained.

■ Instruction Manual (An application installed in this terminal, in Japanese only)

Details about functions and operations are explained.

From the Home screen, tap "Apps" ► "Instruction Manual".

* For installing "Instruction Manual" application if you uninstalled it, from the Home screen, search "DM-01G 取扱説明書 (DM-01G Instruction manual)" in "Play Store" and download "Instruction Manual" application.

■ Instruction Manual (PDF file)

Details about functions and operations are explained.

Download from DOCOMO website.

<https://www.nttdocomo.co.jp/english/support/trouble/manual/download/index.html>

* The URL, as well as the contents are subject to change without prior notice.

How to Use this Manual

- Any reprint of this manual is prohibited.
- This manual is subject to change without prior notice.
- Please note that "this terminal" indicates "DM-01G" in this manual.

Explanation of operations

The following table describes how to select the icons and items displayed on the touch screen.

Description	Operation description
From the Home screen, "Apps"	Tap  displayed on the Home screen. • The icons on the Home screen are explained below.  : "Apps"  : "Phone"  : "docomo mail"  : "Camera"  : "Internet"
From the Home screen, "Apps" ► "Settings" ► "Display"	Tap  displayed on the Home screen, and tap "Settings", "Display".


Description	Operation description
Touch and hold down 	Touch and hold down  for one or two seconds.

Note


- In this manual, the operations are described when the Home Selector is set to "Home" and when the Home screen is set to the default settings. If the contents of the Home screen are changed, the operation description such as how to open an application may differ.
- Images used in this manual may differ from the real ones displayed on this terminal.

Supplied Accessories


DM-01G This terminal
(with warranty)

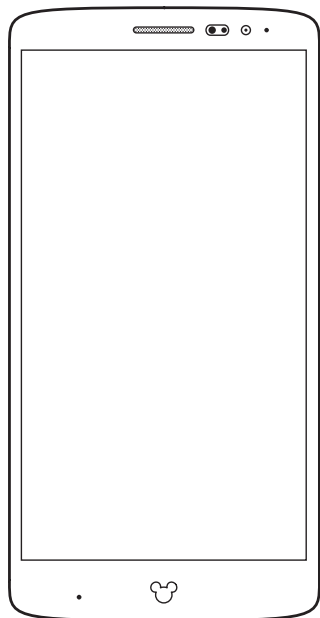


クイックスタートガイド
(Quick start guide)
(In Japanese only)

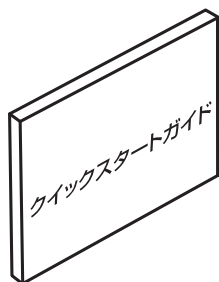


Back Cover L40

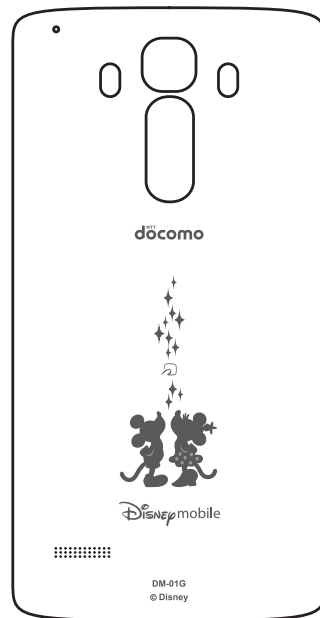

Battery Pack L24

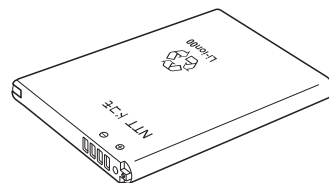

TV Antenna Cable L01

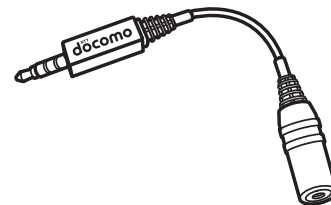

Mickey Window Cover L01



For optional accessories compatible with the terminal (optional), refer to NTT DOCOMO website.
<https://www.nttdocomo.co.jp/product/option/>
(In Japanese only)

Contents

How to Use this Manual	1
Supplied Accessories	2
Before Using this Terminal	6
Safety Precautions (ALWAYS FOLLOW THESE PRECAUTIONS)	8
Handling and Care	26
Waterproofness/Dustproofness	34

Confirmation and Settings before Using

Part Names and Functions	42
docomo nano UIM card	44
Battery Pack	46
Charging	47
Power On/Off	50
Basic Operations	52
Character Entry	57
Initial Settings	64
Notification LED	65
Screen Display/Icons	66
Home Screen	73
Apps Screen	75
Window Screen	85
Task Manager	87
Switching Home Application	87

docomo LIVE UX

Viewing Home Screen	88
Home Screen Management	89
Viewing Application Screen	93
Application Management	94
Installing an Application from "Recommends"	95
Displaying All the Applications	95
Backing up and Restoring the Home Screen	96
My Magazine	97
Home Application Information	98

Calling

Making a Call	99
Receiving a Call	104
Operations during a Call	106
Call Logs	109
Answering Memo	110
Call Settings	111
Phonebook	113

Mail/Web Browser	119
docomo mail	119
SMS	119
Email	122
Gmail	127
Early Warning "Area Mail"	128
Browser	129
 Apps	 134
dmenu	134
dmarket	134
Disney Market	135
Play Store	136
Osaifu-Keitai	138
ToruCa	141
iDアプリ (iD application)	142
TV (Full seg/1 Seg)	142
Camera	155
Gallery	160
Media Player	161
GPS/Navigation	170
Clock	174
Calendar	177
QMemo+	179
Calculator	180
docomo backup	181

Settings	184
Settings Menu	184
WIRELESS NETWORKS	184
DEVICE	198
PERSONAL	209
SYSTEM	218

File Management	224
Storage Structure	224
File Operations	227

Data Communication	230
Bluetooth® Communication	230
NFC Communication	235

External Device Connection	237
Connecting with a PC	237
Connecting with Printer	239
Connecting with Other Devices	240

Using Overseas	244
Overview of International Roaming (WORLD WING)	244
Available Service Overseas.....	245
Before Using Overseas.....	245
How to Make and Receive Calls at Your Location	248
Setting International Roaming	251
After Returning to Japan	252
 Appendix/Index	 253
Troubleshooting (FAQs)	253
Anshin Remote Support	264
Warranty and After-Sales Service	265
Software Update	268
Application Update.....	273
Main Specifications	274
Specific Absorption Rate (SAR) of Mobile Phones.....	278
Radio Frequency (RF) Signals	280
FCC Statement for the USA	282
Declaration of Conformity	283
Important Safety Information.....	284
Export Administration Regulations	286
Intellectual Property Right	286
Unlocking SIM	289
Index	290

Before Using this Terminal

- This terminal supports LTE, W-CDMA, GSM/GPRS and wireless LAN systems.
- Since this terminal uses wireless signal, it may not be able to use in a location with no signal reception such as a tunnel, underground, a building, an outdoor location with weak or poor signal reception, or a location outside of the Xi and FOMA service areas. Also this terminal may not be able to use on high upper floors of high-rise apartments or buildings, even if you can see no obstructions around you. Please note that on occasion, data communication may become disconnected even when you are in a strong-signal area with 4 signal bars displayed while you are not moving.
- Since this terminal uses wireless signal, there are possibilities that a third party may intercept your telephone call. However, LTE, W-CDMA and GSM/GPRS systems support the privacy function covering all telephone calls automatically. Therefore, even a third party intercepts your telephone call, the third party can hear nothing but the noise.
- Because this terminal conducts wireless communication by transforming sound into digital signal, the received sound may differ from the actual one if the transmitted digital signal cannot properly be restored according to conditions such as moving into a poor signal area.
- This terminal responds to FOMA Plus-Areas and FOMA HIGH-SPEED Areas.
- Regularly take a memo of the information you registered in this terminal or store it in the external memories such as microSD card or PC. DOCOMO assumes no responsibility for any loss of your data caused by malfunction, repair, change to a new model or any other reasons.
- Even though the display on this terminal applies advanced technique, part of the dots may not light up as well as those always-on light. Please note that this is a feature of the display. It is not a malfunction.
- When free space is not enough in microSD card or in this terminal, the performance of the activated applications may become improper. In that case, delete the saved data.
- Note that we do not guarantee any performances of the optional accessories you purchase at stores.

- The same as a PC, when you install an application, this terminal's performance may become unstable, or your location information and personal information registered on this terminal might be sent to outside via Internet and therefore cause fraudulent use. To avoid this, make sure to confirm the source and the operating conditions of the application before installation.
- This terminal uses only docomo nano UIM card. Bring your docomo mini UIM card, UIM card or FOMA card to a docomo Shop to exchange it.
- This terminal does not respond to i-mode website (programs) access or i-α ppli, etc.
- The terminal automatically performs communications for some functions, for example, to synchronize data, check the latest software, maintain connection with the server, etc. Additionally, when you download applications or watch video etc, a large amount of packet communication charges are executed. Therefore, it is highly recommended to use packet pack or packet flat-rate service.
- Depending on the application and the service you use, packet communication fees may charge even under Wi-Fi® data communication.

- This terminal does not support Pubic mode (driving mode).
- In this terminal, sounds other than ringtone and notification sounds (video playback sound, music playback sound, shutter sound, etc.) cannot be muted even when it is set to "Manner Mode (Vibrate only, Do not disturb)".
- You can confirm your own phone number as follows.
From the Home screen, "Apps" ► "Settings" ► "About phone" ► "Status".
- You can confirm the software version of this terminal as follows.
From the Home screen, "Apps" ► "Settings" ► "About phone" ► "Software info".
- You can update to the latest software for this terminal. For details, refer to "Software Update" (P268).
- In the terminal, functions may be added or operation steps may be changed due to upgrading Operating System (OS). For latest information of additional function or operation steps, refer to NTT DOCOMO website.
- When OS is upgraded, some applications used for former OS may not work or unintended failure may occur.
- The applications and services are subject to change without prior notice.

- Please read the terms of service of Google Inc. regarding Google services. Also, read each terms of services for other web services.
- In case of loss of the terminal, set the screen to ensure the security of the terminal. For details, refer to "Lock Screen" (P202).
- If you lose your terminal, change password of online service accounts from PC so that Google Services such as Gmail, Google Play, and service such as SNS, etc. should not be used by others.
- This terminal does not support service providers other than sp-mode, mopera U or Business mopera Internet.
- Subscription to sp-mode is required when using tethering.
- When using tethering, subscribing to a packet pack or packet flat-rate service is highly recommended.
- For details of usage charge, refer to DOCOMO website.

Safety Precautions (ALWAYS FOLLOW THESE PRECAUTIONS)

- Before using this terminal, read these "Safety Precautions" carefully so that you can use it properly. After reading the safety precautions, keep this manual in a safe place for later reference.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below indicate the levels of danger or damage that may occur if the particular precautions are not observed.

⚠DANGER	This sign indicates that incorrect handling has a high possibility of causing death or serious injury.
⚠WARNING	This sign indicates that incorrect handling poses a risk of causing death or serious injury.
⚠CAUTION	This sign indicates that incorrect handling poses a risk of causing slight injury or damage to the product or property.

- The following symbols indicate special warnings regarding product usage.

 Don't	Denotes things not to do (prohibition).
 Not disassembly	Denotes not to disassemble.
 Not liquids	Denotes not to use where it could get wet.
 No wet hands	Denotes not to use with wet hands.
 Do	Denotes mandatory instructions (matters that must be complied with).
 Unplug	Denotes that the equipment should be unplugged.

- "Safety Precautions" are explained in the following seven sections.

Handling the Terminal, Battery Pack, Adapter, TV Antenna Cable, Mickey Window Cover and docomo nano UIM card (Common)	P10
Precautions for this Terminal	P13
Precautions for Battery Pack	P17
Precautions for Adapter.....	P19
Precautions for Mickey Window Cover	P22
Precautions for docomo nano UIM card	P22
Precautions for Using near Electronic Medical Equipment	P22
Material List.....	P23

Handling the Terminal, Battery Pack, Adapter, TV Antenna Cable, Mickey Window Cover and docomo nano UIM card (Common)

DANGER



Don't

Do not use, store or leave it in places with a high temperature such as besides fire, besides a heater, inside a kotatsu, under direct sunlight or in cars under the blazing sun.

Fire, burns, or injury may result.



Don't

Do not put in heating appliances such as microwaves or high pressure containers.

Fire, burns, injury, or electric shock may result.



Not disassembly

Do not disassemble or remodel.

Fire, burns, injury, or electric shock may result.



Not liquids

Do not get wet with water, drinking water, pet urine, sweat, etc.

Fire, burns, injury, or electric shock may result.

For waterproofness, refer to the following. → P34 "Waterproofness/ Dustproofness"



Not liquids

Do not get wet on charging connector, microUSB connection terminal or earphone/microphone jack by liquids such as water, drinking water, pet urines, sweat, etc.

Fire, burns, injury, or electric shock may result.

For waterproofness, refer to the following. → P34 "Waterproofness/ Dustproofness"



Do

Use the optional accessories specified by NTT DOCOMO for this terminal.

Fire, burns, injury, or electric shock may result.

WARNING



Don't

Do not put strong force, severe shocks, or throw them.

Fire, burns, injury, or electric shock may result.



Don't

Do not let charging connector, microUSB connection terminal or earphone/microphone jack touch any conductive metal such as metal piece, pencil lead, etc. Also do not put any of them inside.

Fire, burns, injury, or electric shock may result.



Don't

Do not cover or wrap this terminal or its accessories with bedding, etc. while using or charging.

Fire or burns may result.



Do

Make sure to turn off this terminal or stop charging before going to the places like a gas station where a flammable gas fumes.

Catching fire may result.

Turn off the power when using Osaifu-Keitai at gas stations (before turning off the power, release the lock for Osaifu-Keitai if it is set).



Do

If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use, charging or in storage, immediately perform the following operations.

- Remove the power plug from the wall outlet or cigar lighter socket.
- Turn off this terminal.
- Remove the battery pack from this terminal.

Fire, burns, injury, or electric shock may result.

CAUTION



Don't

Do not place the horizontal charge adapter on unstable locations such as wobbly tables or slanted locations.

Injury may result from the terminal falling down.



Don't

Do not store the horizontal charge adapter in humid, dusty places, or in hot areas.

Fire, burns, or electric shock may result.



Do

If children use it, a guardian should explain the precautions and correct operations. Also make sure that the instructions are followed during use.

Injury may result.



Do

Keep out of reach of babies and small children.

Accidental swallowing, injuries or electric shock may result.



Do

Be careful especially when using this terminal with the adapter connected continuously for a long time.

If you use video call, watch videos, play games, watch TV, etc. while charging the battery for a long time, the terminal, battery pack and adapter may be heated.

Directly touching a hot part for a long time may cause redness, itching or rash on your skin, or low-temperature burns depending on your constitution and/or health condition.

Precautions for this Terminal

WARNING



Don't

Do not lighten the light near eyes. Especially, when you shoot photos of babies or infants, keep this terminal 1 m or more away from babies and infants.

Vision problems may result. Accidents may result from being blind or being shocked.



Don't

Do not get liquids such as water, or foreign objects such as metal pieces or flammable materials into the docomo nano UIM card slot or microSD card slot of this terminal.

Fire, burns, injury, or electric shock may result.



Don't

Do not turn on lights in front of the auto driver directly.

Accident may result from the weak vision caused by light.



Don't

Do not disassemble the terminal to prevent harmful laser beam irradiation, etc.

Exposure to harmful laser beams, etc. may result if methods other than those specified are used in disassembling, etc.



Don't

When using the camera, do not peer directly into the laser auto focus sensor.

CLASS 1	LASER PRODUCT
KLASSE 1	LASER PRODUKT
LUOKAN 1	LASER LAITE
KLASS 1	LASER APPARAT
CLASSE 1	PRODUIT LASER



Do

When boarding an airplane, turn the terminal OFF or turn airplane mode on.

As there are usage restrictions in an airplane, follow the instructions from the airline.

Failure to do so may cause airplane electronic equipment to fail or malfunction.

If you commit any prohibited acts, such as using the phone in an airplane, you will be punished in accordance with the law.



Do

When using the terminal in a medical facility, follow the instructions of the facility.

Turn the terminal OFF in areas where use is prohibited.

Electronic devices or electronic medical devices may be adversely affected.



Do

When you talk via handsfree setting or when the ringtone is ringing, keep the terminal away from your ear.

And, when connecting the earphone/microphone jack etc. to this terminal and playing a game or music, adjust the volume moderately.

Too loud volume may cause a hearing loss. And, if you cannot hear the sound around you clearly, it may cause an accident.



Do

If you have a weak heart, be careful when setting the Vibrate alert (vibration) or alert volume setting.

Harmful effect on heart may result.



Do

When you use electronic medical equipment, check with the equipment manufacturer to determine how the device is affected by radio waves before using.

Harmful effect on electronic medical equipment etc. may result.



Do

Turn off this terminal in places near high precision electronic devices or devices using weak electronic signals.

Electronic devices may be adversely affected by reasons such as malfunction.

- * Examples to pay attention to when using electronic devices
Hearing aids, implanted cardiac pacemakers, implanted defibrillator, other medical electronic devices, fire alarms, automatic doors and other automatically controlled devices.
If you are using an implanted cardiac pacemaker, implanted defibrillator or any other electronic medical device, consult the manufacturer or retailer of the device for advice regarding possible effects from radio waves.
-



Do

When the display or camera lens is accidentally broken, be careful of broken glass or exposed internal parts of this terminal.

Since the reinforced glass is used on the surface of the display and the camera lens, they are structured for the glass not to scatter. However, if you carelessly touch broken or exposed parts, you may get injured.

CAUTION



Don't

Do not swing this terminal by its strap, etc.

It may hit you or someone else and may result in an accident such as an injury.



Don't

Do not use a broken terminal.

Fire, burns, injury, or electric shock may result.



Don't

When using the motion sensor, ensure the safety of you and those around you, hold this terminal firmly, and avoid extreme movements.

Injury may result.



Don't

If the display part is accidentally broken and liquid crystal leaks out, do not make the material contact with your skin of face or hands.

It leads to blindness or skin problems. If liquid crystal gets into your eyes or mouth, rinse it with clean water and see a doctor immediately. And, if the material adheres to skin or clothing, use alcohol etc. to immediately wipe it off, and then wash with soap.



Do

If you use this terminal in a car, contact the car manufacturer or dealer to ask about the effect from radio waves.

Depending on the type of car, in-car electronic devices could be adversely affected. In this case, stop using this terminal immediately.



Do

Itching, rash or eczema may be caused depending on your physical conditions or predisposition. If an abnormality occurs, stop using this terminal immediately, and then seek medical attention.

- For the material of each part
→ P23 "Material List"



Do

When watching the display, take a certain distance from the display in a fully bright place.

Visual loss may result.

Precautions for Battery Pack

- Confirm the battery type from the label of the battery pack.

Display	Battery type
Li-ion00	Lithium-ion battery



DANGER



Don't

Do not contact the connector with metal such as wire. Also do not carry or store it with metal necklace, etc.

Fire, explosion, getting heated or liquid leak of the battery pack may result.



Don't

Check the orientation of the battery pack when inserting it into this terminal. Stop putting excessive force when any problem is found during inserting.

Fire, explosion, getting heated or liquid leak of the battery pack may result.



Don't

Do not throw this terminal into fire or heat it.

Fire, explosion, getting heated or liquid leak of the battery pack may result.



Don't

Do not put excessive force such as nailing the battery pack, hitting with a hammer or stepping on it.

Fire, explosion, getting heated or liquid leak of the battery pack may result.



Do

When the liquid from battery pack splashes into your eyes, do not rub your eyes. Wash your eyes and go to consult with a doctor immediately. Blindness may result.



WARNING



Don't

Stop using it when transformation or damage is caused by dropping.

Fire, explosion, getting heated or liquid leak of the battery pack may result.



Do

When battery pack leaks liquid or gives off odor, stop using it and keep it away from fire.

Ignition, fire, explosion may result from liquid leaking.



Do

Keep pets away from biting the battery pack.

Fire, explosion, getting heated or liquid leak of the battery pack may result.

CAUTION



Don't

Do not discard it as combustible waste.

Fire and environmental pollution may result. Tape the connector to isolate the battery pack and bring it to a docomo Shop or follow the local disposal regulations.



Don't

Do not use or charge the wet battery pack.

Fire, explosion, getting heated or liquid leak of the battery pack may result.



Do

When battery pack leaks liquid inside, do not touch your skin, such as your face or hands.

It leads to blindness or skin problems. If such liquid gets into your eyes or mouth, if it adheres to your skin or clothing, please rinse with clean water immediately. If it gets into your eyes or mouth, please seek medical attention immediately after washing.

Precautions for Adapter



WARNING



Don't

Do not use it if the adapter cord gets damaged.

Fire, burns, or electric shock may result.



Don't

Do not use the AC adapter in a highly humid area such as a bathroom.

Fire, burns, or electric shock may result.



Don't

DC adapter is only for minus earth car. Do not use it on plus earth car.

Fire, burns, or electric shock may result.



Don't

When it starts to thunder, do not touch the adapter.

Electric shock may result.



Don't

Do not make the charging terminal short out while being connected to the outlet or cigar lighter socket. Do not touch the charging terminal with a part of your body such as your hands or fingers.

Fire, burns, or electric shock may result.



Don't

Do not place heavy objects on the adapter cord.

Fire, burns, or electric shock may result.



Don't

When you insert and remove AC adapter from the power outlet, do not contact a metal strap or any other metal objects with this terminal.

Fire, burns, or electric shock may result.



Don't

When this terminal is connected with an adapter, do not subject excessive force to any direction.

Fire, burns, injury, or electric shock may result.



No wet hands

Do not touch the adapter cord, charging connector or the outlet with wet hands.

Fire, burns, or electric shock may result.



Do

Only use with the specified power source and voltage. When charging overseas, use a compatible AC adapter.

If incorrect voltage is used, this may cause fire, burns or electric shock.

- AC adapter: AC 100 V
 - DC adapter: DC 12 V/24 V (only for minus earth car)
 - Available AC adapter used overseas: AC 100 V to 240 V (connect to household AC outlet only)
-



Do

Use the specified fuse when the fuse of DC adapter blows.

Fire, burns, or electric shock may result. Refer to the manual for detailed information of the specified fuse.



Do

Wipe off any dust that accumulated on the power plug.

Fire, burns, or electric shock may result.



Do

When you connect the AC adapter to an outlet, do not fail to properly connect to the outlet.

Fire, burns, or electric shock may result.



Do

When you disconnect the power plug from the outlet or cigar lighter socket, do not pull the adapter cord with excessive force. Instead, hold the adapter to disconnect.

Fire, burns, or electric shock may result.



Do

When inserting and removing from this terminal, do not subject excessive force. Insert and remove horizontally.

Fire, burns, injury, or electric shock may result.



Unplug

Always remove the power plug from the outlet or cigar lighter socket when not using the adapter for an extended period.

Fire, burns, or electric shock may result.



Unplug

Immediately remove the power plug from the outlet or cigar lighter socket if water or other fluids get into the adapter.

Fire, burns, or electric shock may result.



Unplug

Always remove the power plug from the outlet or cigar lighter socket when cleaning the equipment.

Fire, burns, or electric shock may result.



CAUTION



Don't

Do not touch the adapter for a long time while being connected to the outlet or a cigar lighter socket.

Burns may result.

Precautions for Mickey Window Cover

CAUTION



Don't

Do not pinch your fingers when attaching the mickey window cover. Accidents like injuries may result.

Precautions for docomo nano UIM card

CAUTION



Do

Be careful of the cut surface when handling docomo nano UIM card. Injury may result.

Precautions for Using near Electronic Medical Equipment

WARNING



Do

If you use electronic medical equipment such as an implanted cardiac pacemaker or implanted defibrillator, use this terminal 15 cm or more away from the implanted cardiac pacemaker or implanted defibrillator. Operations of electronic medical equipment may be adversely affected by radio waves.



Do

Patients using electronic medical equipment other than implanted cardiac pacemakers or implanted defibrillator (using outside medical facilities for treatment at home, etc.) should check the influence of radio waves upon the equipment by consulting the manufacturer. Operations of electronic medical equipment may be adversely affected by radio waves.



Do

You may get closer than 15 cm to people around you who are incapable of moving. Set this terminal to radio signal off beforehand (Airplane mode or power off).

People who are using electronic medical equipment such as implanted cardiac pacemakers or implanted defibrillators may be around you. Operations of electronic medical equipment may be adversely affected by radio waves.



Do

Follow the instructions when using this terminal inside medical facilities.

Material List

Part	Material	Surface Treatment
Display	Tempered Glass	AF coating
Outer case (front)	PC	UV coating
Outer case (back)	PC	-
Power key/Volume key	PC	After injection spray (UV)
Earphone/microphone jack, micro USB connection terminal	Copper alloy	Nickel + Gold plating
Camera panel	Tempered Glass	AF coating
Camera lens surrounding	AL	Anodic oxidation, chemical corrosion
Flash panel	Transparent PC	-
Speaker section	PET	water-repellent mesh

Part	Material	Surface Treatment
Laser auto focus sensor	PC	-
Receiver grill	STS	Etching hole + buffing + PVD
docomo nano UIM card slot	Copper alloy (NKC286R-EH)	Nickel + Pd-Ni + Gold plating
microSD card slot	Stainless	Nickel + Gold plating
Battery pack connection terminal	Ti-Cu	Nickel + Pd-Ni + Gold plating
Nameplate	Yupo paper + Adhesive NA-34	Logo print (BLACK)
Nameplate surrounding	MG	Urethane coating
FeliCa/NFC connection terminal	Copper alloy	Nickel + Gold plating
Screw	STS	-

Part		Material	Surface Treatment
Back Cover L40	Body	PC	IMD
	Terminal section	Copper + Pi sheet	Copper + Gold coating
	Rubber gasket for water proofing	Silicone	-
	Pad	PSR	-
	Protection seal part	PC sheet	Print
Battery Pack L24	Body	PC Lupoy GN-1002FS	Etching (corrosion)
	Terminal section	Nickel 5.0 mic	Gold 0.5 mic
	Label	Gray PET 50 mic	Mat coating (0.07T)
	Waterproof seal	3M #5559	-

Part		Material	Surface Treatment
TV Antenna Cable LO1	Earphone/microphone jack (top)	Copper	Nickel plating
	Earphone/microphone jack (outer cover)	TPE_ JS400-78A	Non PVC
	Cable	TPE_ JS400-78A	Non PVC
	Connection plug (top)	Copper	Gold coating
	Connection plug (outer cover)	TPE_ JS400-78A	Non PVC

Part		Material	Surface Treatment
Mickey Window Cover LO1	Outer cover	polyurethane fiber	Logo print
	Window frame	PC	SN Deposition, laser etching
	Decoration	Glass	Glass processing
	Interior (Flip section)	MG	Die-cast
	Interior (Back cover section)	PC	Spray coating
	Terminal section	Copper + Pi sheet	Copper + Gold coating
	Rubber gasket for water proofing	Silicone	-
	Pad	PSR	-
	Protection seal part	PC sheet	Print

Handling and Care

General Usage Guidelines

- **Even though DM-01G provides with waterproofness/dustproofness function, do not let water or dust come into contact with the interior of this terminal or adhere to the optional accessories.**

The battery pack, adapter, TV antenna cable and docomo nano UIM card do not have waterproofness/dustproofness function. Do not use them in places with high humidity such as a bath or where rain may get it wet. If you carry this terminal close to your body, moisture from sweat may corrode the internal parts causing a malfunction. Note that malfunctions deemed to be caused by water are not covered by the warranty or impossible to repair. Since these malfunctions are not under warranty, even when repair is possible, it will be done at the user's expense.

- **Clean this terminal with a dry, soft cloth (lens cleaning cloth), etc.**

- Rubbing it roughly with a dry cloth may scratch the display.
- Drops of water or dirt left on the display may cause stains.
- If this terminal is wiped with alcohol, paint thinner, benzine or detergent, the printing may disappear or color may fade.

- **Keep the connector contacts clean with a dry cotton swab.**

Clean the connector contacts with a dry cotton swab to prevent contacts from getting dirty which can result in intermittent connections.

Be careful when cleaning the connector contacts.

- **Do not place the terminal near air conditioner outlets.**

Condensation may form due to rapid changes in temperature, and this may corrode internal parts and cause malfunction.

- **Do not place excessive force on this terminal, battery pack, etc.**

If this terminal is inserted to a full bag, or placed in a pocket and sat on, the display, its internal PCBs and battery pack may be damaged or malfunction.

Also, if an external connection device is connected to a microUSB connection terminal or earphone/microphone jack, damage or malfunction may result.

- **Do not rub or scratch the display with metal.**

The display may get scratched and it may cause malfunction or damage.

- **Read the individual manual attached to the Options.**

Notes about this Terminal

- **Do not press display surface forcibly, or not operate with a sharp-pointed objects such as nail, ballpoint pen, pin, etc.**

Doing so may cause damage of display.

- **Avoid using in extremely high or low temperatures.**

This terminal should be used within a temperature range from 5°C to 35°C and a humidity range from 45% to 85%.

- **This terminal may adversely affect fixed phones, televisions or radios in use nearby. Use as far as possible from such appliances.**

- **Keep a separate record of any information stored on this terminal and store the copies in a safe location.**

DOCOMO assumes no responsibility for the loss of any of your data.

- **Do not drop this terminal or subject it to shocks.**

Damage or malfunction may result.

- **Do not insert a microUSB connection terminal, earphone/microphone jack crookedly or pull them strongly.**

Damage or malfunction may result.

- It is normal for this terminal to become warm during use or charging. You can continue using without problems.
- **Do not leave the camera under direct sunlight.**
Discoloring or burn-in of materials may result.
- **Do not use this terminal without its back cover attached.**
Falling off the battery pack, damage or malfunction may result.
- **While using the microSD card, do not remove it from this terminal or turn this terminal off.**
Data loss or malfunction may result.
- **Do not bring any magnetic cards close to this terminal.**
The magnetic data in cash cards, credit cards, telephone cards, floppy disks, etc. may be erased.
- **Do not bring strong magnetic objects close to this terminal.**
Strong magnetism may cause malfunction.

Notes about Battery Pack

- **Battery pack is a consumable supply.**
Battery life varies depending on usage conditions, etc., but it is time to change battery pack when the usage time has become extremely short even though the battery pack has been fully charged. Please purchase a specified new battery pack.
- **Charge in an environment with the proper ambient temperature (5°C to 35°C).**
- **Battery life may differ depending on the use environment or degradation level of the battery pack.**
- **Depending on the usage condition, the battery pack may get swollen when the battery life is running out. Note that it is not a problem.**
- **Be careful about the following points when storing the battery pack.**
 - Keeping under fully charged state (right after the charging ends)
 - Keeping under non charged state (consumed too much to turn on this terminal)The performance and life of the battery life may deteriorate.
It is recommended that you store the internal battery with around 40% battery level.

Notes about the Adapter

- Charge in an environment with the proper ambient temperature (5°C to 35°C).
- Do not charge in the following places.
 - Places that are very humid, dusty or exposed to strong vibrations.
 - Near ordinary phone or TV/radio.
- It is normal that the adapter becomes warm while being charged. You can continue using without problems.
- Use the DC adapter only when the car engine is running.

The car battery may be exhausted.
- When using an outlet with a mechanism preventing unplugging, follow the handling instructions of the outlet.
- Do not give a strong impact to the adapter. Also, do not deform the charging terminal. Malfunction may result.

Notes about Mickey Window Cover

- Do not get it wet.

Up to a certain level, the surface of mickey window cover is waterproofed due to the water repellent finish, however, it is not complete waterproof. Do not use them in places with high humidity such as a bath or where rain may get it wet. If you carry this terminal close to your body, moisture from sweat may corrode the internal parts causing a malfunction.
- When the mickey window cover gets wet by water or sweat, wipe it with a soft cloth and dry it up.
- Depending on how much you use it, the color may fade or it may fluff.
- The usage of Osaifu-Keitai may get influenced depending on the usage environment.
- Do not put any magnetic cards close to the mickey window cover since the magnet is used inside the product.

The magnetic data in cash cards, credit cards, telephone cards, floppy disks, etc. may be erased.

Notes about the docomo nano UIM card

- Do not put excessive force on the docomo nano UIM card when inserting into or removing from this terminal.
- Note that DOCOMO assumes no responsibility for malfunctions occurring as the result of inserting and using a docomo nano UIM card with other IC card reader/writer.
- Always keep the IC portion clean.
- Clean it with a dry, soft cloth (lens cleaning cloth), etc.
- Be sure to keep a separate note of the information registered on the docomo nano UIM card.
DOCOMO assumes no responsibility for the loss of any of your data.
- Visit docomo Shop to return the docomo nano UIM card for the environmental purpose.
- Do not scratch, touch carelessly or short circuit the IC portion.
Data loss or malfunction may result.
- Do not drop or give force to the docomo nano UIM card.
Malfunction may result.

- Do not bend or put heavy things on the docomo nano UIM card.
Malfunction may result.
- Do not insert docomo nano UIM card into this terminal with labels or stickers attached on.
Malfunction may result.

Notes about the Bluetooth[®] Function

- To secure the Bluetooth[®] communication security, this terminal supports the security function compliant with Bluetooth[®] standards, but the security may not be sufficient depending on the settings. Be aware of the communication using the Bluetooth[®] function.
- Note that DOCOMO is not responsible for data or information leakage when making data communications using Bluetooth[®] function.

■ Frequency band

The frequency band that the devices with Bluetooth® function and WLAN equipped uses is written on the insertion part of the batter pack on the main unit of this terminal. It shows how to read the label below.



- 2.4 : This radio equipment uses the 2400 MHz band.
- FH/DS/OF : Indicates that modulation methods are FH-SS, DS-SS or OFDM format.
- 1 : Indicates that assumed inducing interference from distances is 10 m or less.
- 4 : Indicates that assumed inducing interference from distances is 40 m or less.
- : The full band between 2,400 MHz and 2,483.5 MHz is used and the band of the mobile identification device is avoidable.

Available channels vary by the country.
For use in an aircraft, contact the airline company beforehand.

■ Bluetooth® Device Cautions

The operating frequency band of this terminal is used by industrial, scientific, consumer and medical equipment including microwave ovens, premises radio stations for identifying mobile units used in the manufacturing lines of plants (radio stations requiring no license) and amateur radio stations (hereinafter referred to as "another station").

1. Before using this terminal, confirm that "another station" is not being operated nearby.
2. In the event of this terminal causing harmful radio wave interference with "another station", promptly change the location or stop radio wave emission by turning off the power, etc.
3. If you have further questions, contact "docomo Information Center" provided on the back cover of this manual.

Notes about Wireless LAN (WLAN)

■ **Wireless LAN (WLAN) uses radio waves to enable data communications between compatible devices, thus allowing connection to a local area network from anywhere within range. However, there is a risk of data interception by malicious third parties unless security is established. Users are advised to assess their responsibilities and accordingly configure security settings.**

■ **Wireless LAN**

Do not use wireless LAN near magnetic devices such as electrical appliances, AV/OA devices, or in radio waves.

- Magnetism or radio waves may increase noises or disable communications (especially when using a microwave oven).
- When using near TV, radio, etc., reception interference may occur, or channels on the TV screen may be disturbed.
- If there are multiple wireless LAN access points nearby and the same channel is used, search may not work correctly.
- For using WLAN overseas, spots of use etc. may be restricted depending on country. In that case, confirm conditions such as available frequency or regulations of the country to use it.

■ **2.4GHz Bandwidth Cautions**

The operating frequency band of the WLAN device is used by home electrical appliances such as microwave ovens, industrial, scientific, consumer and medical equipment including premises radio stations for identifying mobile units used in the manufacturing lines of plants stations (radio stations requiring no license) and amateur radio stations (radio stations requiring a license).

1. Before using the device, confirm that premises radio stations for identifying mobile units, specified low power radio stations and amateur radio stations are not being operated nearby.
2. If the device causes harmful radio interference to premises radio stations for identifying mobile units, immediately change the frequency band or stop use, and contact "docomo Information Center" on the back cover of this manual for crosstalk avoidance, etc. (e.g. partition setup).
3. If the device causes radio interference to specified low power radio stations or amateur radio stations, contact "docomo Information Center" on the back cover of this manual.

■ 5 GHz Bandwidth Cautions

The terminal can use 3 frequency bands of 5.2 GHz band (W52), 5.3 GHz band (W53), 5.6 GHz band (W56).

- W52 (5.2GHz bandwidth/36, 40, 44, 48 ch)
- W53 (5.3GHz bandwidth/52, 56, 60, 64 ch)
- W56 (5.6GHz bandwidth/100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140 ch)

Using outdoors in 5.2/5.3 GHz (W52, W53) outside is prohibited by the Radio Law.

Handling the FeliCa and NFC Reader/Writer

- The FeliCa and NFC reader/writer, P2P function for this terminal handle delicate signals that require no radio station license.
- The 13.56 MHz frequency band is used. If there is another reader/writer, P2P function near this terminal, keep enough distance between this terminal and the reader/writer. Also, make sure that there is no radio station using the same frequency band nearby.
- For use in an aircraft, contact the airline company beforehand. In some countries, use may be restricted. Confirm regulations etc. for the country/area before using.

Caution

- **Do not use a modified terminal. Using a modified terminal results in violating Radio law/Telecommunications Business Act.**

This terminal has been complied with the rules related to technical standard of wireless equipment stipulated by Radio law, as well as technical standard of device stipulated by Telecommunications Business Act. As a proof, "Technical standard compliance mark  " is indicated in the electric nameplate.

If this terminal is modified by turning the screw to the left to disassemble, technical standard compliance becomes invalid.

Please do not use this terminal during the time when technical standard compliance is being invalid, since you are in violation of Radio law and Telecommunications Business Act.

■ **Be careful when using this terminal while driving.**

Using this terminal in your hand while driving is subject to punishment.

However, absolutely necessary cases such as rescue of a sick person or maintaining public safety are exempted.

■ **Only use the FeliCa reader/writer function in Japan.**

The FeliCa reader/writer function for this terminal is compliant with the radio standards for Japan.

Overseas usage may be subject to punishment.

■ **Do not make unauthorized modifications to the basic software.**

Repairs may be refused if the software has been modified.

Waterproofness/ Dustproofness

DM-01G provides waterproofness of IPX7*¹ and dustproofness of IP6X*² with firmly attaching the back cover.

This terminal has the IPX7 waterproof function and IP6X dustproof function even when the mickey window cover is attached. Even if the surface of Mickey Window Cover L01 is processed with water repellent finish, when it gets wet, dry it up completely before using.

*1 IPX7 means that a phone keeps functioning after DM-01G is slowly submerged to depth of 1 m in static tap water at room temperature, left there for 30 minutes and then taken out.

*2 IP6X means a protection degree that dust cannot come in to an inside of phone and a phone maintains safety after it is placed in a device with dust in diameter 75 μ m or less for 8 hours, agitated and then taken out.

What You can Do with Waterproofness of DM-O1 G

- You can talk without an umbrella in the rain (for rainfall of 20 mm or less per hour).
- You can wash this terminal by soaking in a sink of fresh water or in tap water at room temperature (5°C to 35°C) and gently shaking it.
 - Attach the back cover/mickey window cover.
 - Do not use any brush, sponge, soap, detergent, etc to wash this terminal.
 - Wipe off moisture on the surface with dry cloth and drain the water after washing.
→ P40
- You can use it at a poolside. However, do not pour the pool water over this terminal or soak it in the pool water.

Before Using


To maintain the waterproofness/dustproofness, be sure to observe the following points.

- Make sure to firmly close the back cover/mickey window cover. Even a fine obstacle (one hair, one grain of sand, tiny fiber, etc.) which is put between contact surfaces may allow water or dust to enter.
- Make sure that the back cover/mickey window cover is closed firmly without any gap.
- Do not pull strongly towards outside when a strap is attached. The back cover/mickey window cover may rise up which may cause the waterproofness/dustproofness function to no longer be maintained.

Attaching the back cover


- 1 Confirm the orientation of the back cover and align it with the main unit, press  parts firmly to attach the back cover

- Make sure that there are not any gaps between the cover and this terminal.

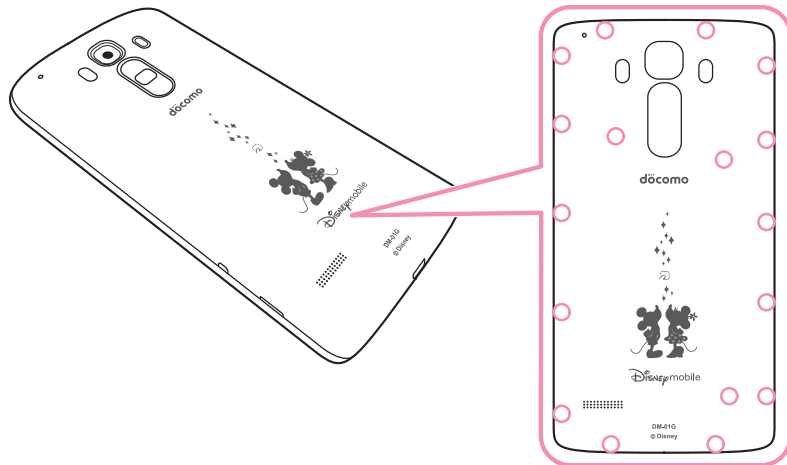

Detaching the back cover


- 1 Put your finger in the groove which is on the side of the back cover and hold it up in the direction of the arrow to detach

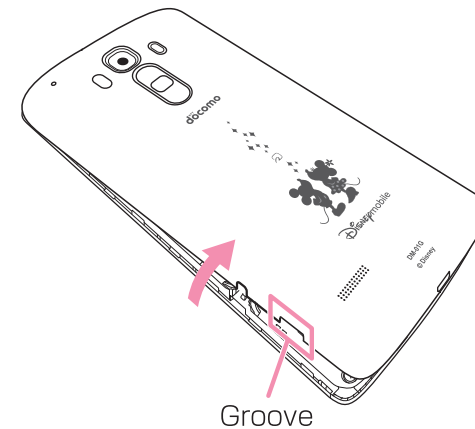

Attaching mickey window cover

- 1 Confirm the back cover section orientation of the mickey window cover and align it with the main unit, press  parts to attach the mickey window cover firmly


- Make sure that there are not any gaps between the cover and this terminal.

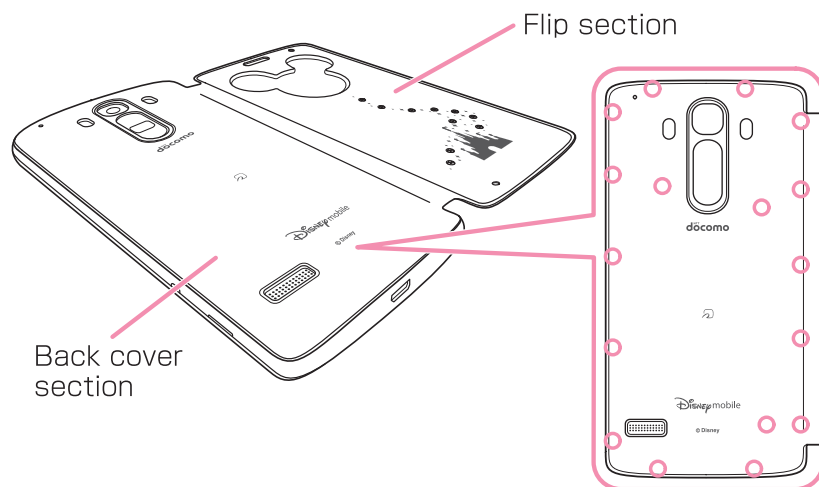

- * Do not peel off the sticker on the back of the back cover section. If the sticker is peeled off, you cannot use Osaifu-Keitai.

Detaching mickey window cover

- 1 Put your finger in the groove which is on the side of the back cover section of mickey window cover and hold it up in the direction of the arrow to detach

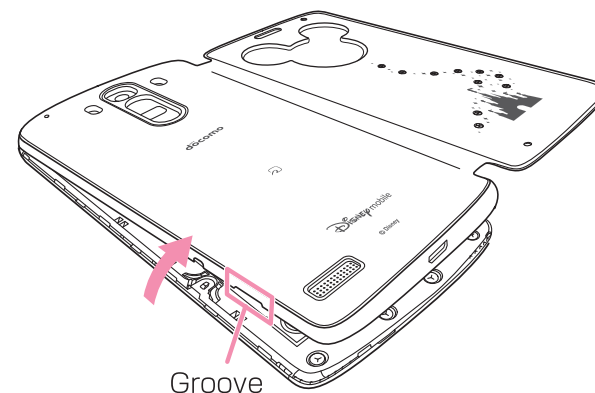

To maintain the waterproofness/dustproofness, it is recommended to change the parts once in two years regardless of malfunction. We will replace the parts by keeping this terminal, and this will be done at user's expense. Bring your terminal to a repair counter specified by DOCOMO.

Precautions

Do not pour or put in liquid etc. other than water at room temperature shown in the illustrations below.

<Example>



Soap/Detergent/
Bath powder



Seawater



Pool water



Hot spring water



Sand/Clay

Follow the following precautions to use correctly.

■ This terminal

- Do not subject this terminal to severe shocks, or drop it. Deterioration of waterproofness/dustproofness may result due to crack or flaw.
- Do not put this terminal in hot water, use it in a sauna or apply hot air from a hair dryer etc. to it.

- Do not leave water on this terminal. The external connection terminal may short out. In cold area, this terminal freezes up and may cause malfunction.
- To avoid dew condensation when you bring this terminal from a cold place to a warm place, wait until this terminal becomes room temperature.
- Do not use this terminal in the water.
- Never try to charge when this terminal is wet.
- Do not wash with washing machine etc.
- This terminal does not float on water.
- Do not put directly on beach.
 - Sand etc. may get inside of earpiece (receiver), mouthpiece (microphone), sub microphone, speaker or earphone/microphone jack. etc., and the volume may become low.
 - Sand etc. may get inside of microUSB connection terminal or the holes on earphone/microphone jack etc., and the waterproofness may not be effective.
 - Using this terminal with water drop or sand etc. may cause noise.

- Do not pick earpiece (receiver), mouthpiece (microphone), sub microphone, speaker, earphone/microphone jack or microUSB connection terminal. The waterproofness/dustproofness may not be effective.
- Do not leave water drop in the earpiece (receiver), mouthpiece (microphone), sub microphone, speaker or earphone/microphone jack. Malfunction may result.
- Do not leave water drop in microUSB connection terminal or earphone/microphone jack. This terminal may short out.

■ Back cover/Mickey window cover

- The rubber seal of back cover/mickey window cover is important to maintain the waterproofness/dustproofness. Do not peel or damage the seal. Also, avoid the seal from dust.
- In case the rubber seal of back cover/mickey window cover is damaged or deformed, bring it to a specified DOCOMO repair center to replace.

- Do not insert a sharp object into a gap of the back cover/mickey window cover. The rubber seal may get damaged, and water or dust exposure may result.
- When opening or closing the back cover/mickey window cover, do not apply excessive force on the rubber seal.
- Do not attach or detach the back cover/mickey window cover when your hands are wet or when this terminal got wet.
- Replace the back cover/mickey window cover when either of them gets damaged.
- When back cover/mickey window cover gets damaged, or when this terminal gets wet while the cover is open, liquid might come in. Electrical shock and malfunction may result. Stop using and turn off this terminal. Contact a specified DOCOMO repair center.

■ Others


- The supplied accessories and optional accessories have no waterproofness/dustproofness.
- Operation in all situation is not guaranteed for actual use. Note that malfunctions deemed to be caused by user's fault are not covered by the warranty.

Draining Water

When this terminal gets wet, make sure to drain the water in the following steps.


- Using this terminal with water drop, the volume of speaker etc. becomes low and the quality may change.

1 Wipe off moisture on the surface with a dry cloth

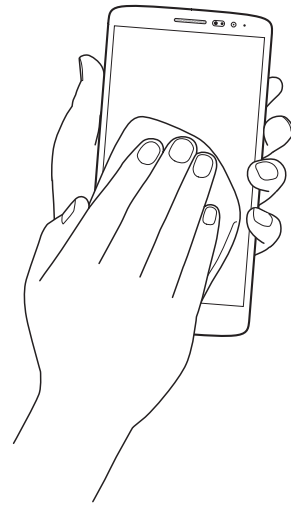


2 Shake this terminal approximately 20 times for each side, firmly holding it, until there is no more water splattering

- Visually confirm if no water drops are on this terminal.

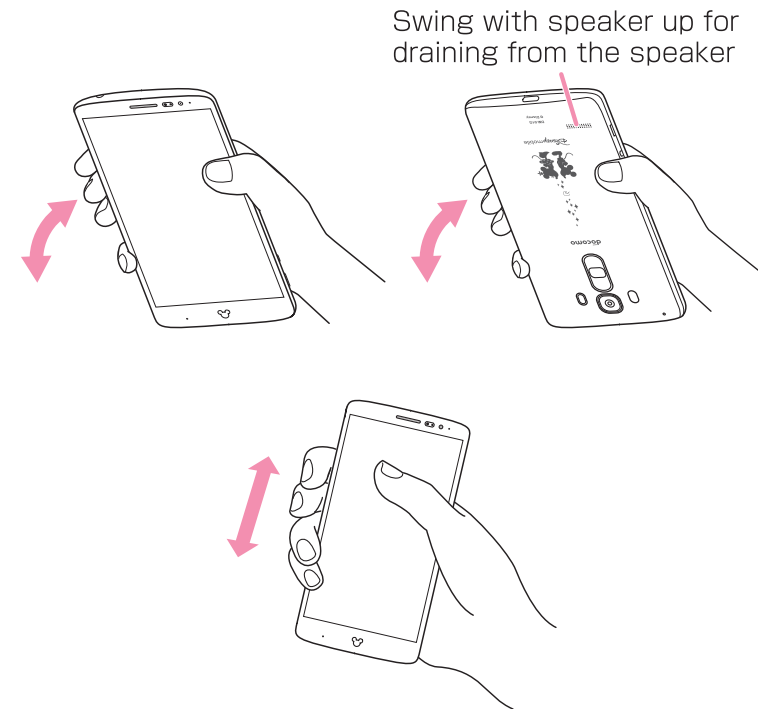

3 Gently press this terminal to a dry and clean cloth to wipe off water remaining in the gap between earpiece (receiver), mouthpiece (microphone), sub microphone, speaker, earphone/microphone jack, microUSB connection terminal, key, etc.

- Do not wipe off the remaining moisture in the gaps directly with a cotton swab etc.

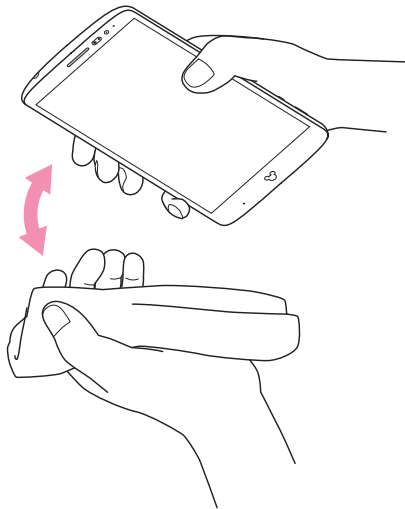

4 Wipe off water drained from the terminal with a dry, clean cloth etc., and dry naturally

- Water, if any, remaining in the terminal may ooze up after wiping off.


Charging

The supplied accessories and optional accessories have no waterproofness/dustproofness function. Check the following before and after charging.


- Check if this terminal is not wet. Never try to charge when this terminal is wet.
- Do not touch the AC adapter with wet hands. Electric shock may result.
- Do not use the AC adapter in a place near water such as bathroom, shower room, kitchen, washroom etc. Fire or electric shock may result.

Confirmation and Settings before Using

Part Names and Functions

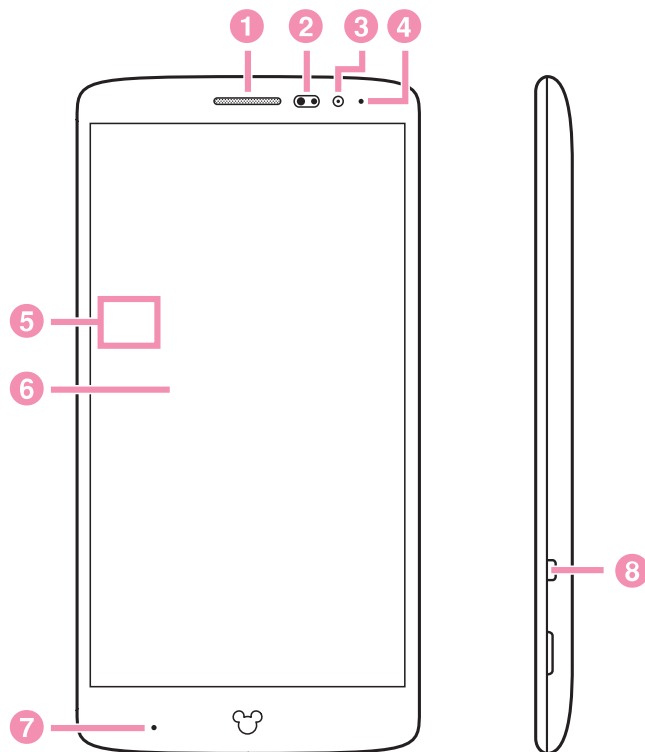

- ① Earpiece (receiver)
- ② Proximity sensor*¹/Illuminance sensor*² (all-in-one)
- ③ Front camera
- ④ Notification LED Light
- ⑤ Hall-IC sensor*³
- ⑥ Display (touch screen)
- ⑦ Mouthpiece (microphone)
- ⑧ Strap holder

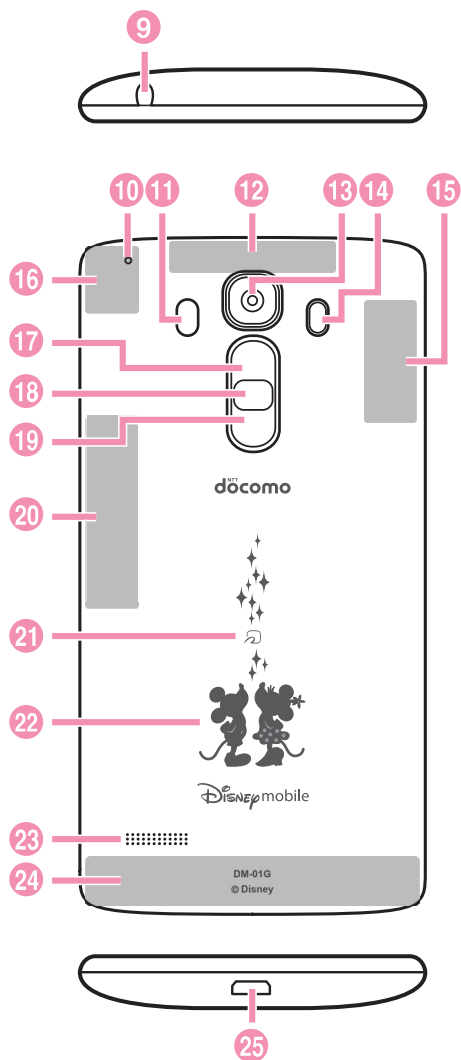

- 9 Earphone/microphone jack
- 10 Sub microphone
 - When speaker phone is in use.
- 11 Laser auto focus sensor
- 12 Sub antenna area*4
- 13 Main camera
- 14 Flash
- 15 Bluetooth®/Wi-Fi® antenna area*4
- 16 GPS/sub antenna area*4
- 17 Volume key (up)
- 18 Power key
- 19 Volume key (down)
- 20 Sub antenna area*4
- 21 ↻ mark
- 22 Back cover*5
- 23 Speaker
- 24 FOMA/Xi antenna area*4
- 25 microUSB connection terminal
 - You can use a SlimPort supported cable purchased in stores.

- *1 Set touch screen to on or off to prevent unwanted operations from happening when your face touches the screen during calling.
- *2 Sense the surrounding brightness and adjust the screen brightness automatically.
- *3 The sensor is used to recognize if the mickey window cover is open or close.
- *4 Antennas are built in this terminal. If you cover the antenna area with your hand, its quality may be affected.
- *5 Do not peel off the sticker on the back of the back cover. If the sticker is peeled off, you cannot use Osaifu-Keitai.

Note

- Do not put stickers on any sensor area.

docomo nano UIM card

docomo nano UIM card is an IC card that stores information such as your telephone number.


- This terminal uses only docomo nano UIM card. Bring your docomo mini UIM card, UIM card or FOMA card to a docomo Shop to exchange it.
- If the docomo nano UIM card is not inserted, the functions such as phone call (sending and receiving), mail (sending and receiving) and the data communication cannot be used.
- In Japan, if the docomo nano UIM card is not inserted, the emergency calls (110, 119, 118) cannot be made.
- Make sure to turn off this terminal before inserting or removing the docomo nano UIM card. When it is being charged, unplug it from AC adapter.
- For details about docomo nano UIM card, refer to the instruction manual for docomo nano UIM card.

docomo nano UIM card Security Codes

You can set the security code named PIN in docomo nano UIM card. "0000" is set at the time of subscription. Customers can change PIN afterwards. For details about PIN of docomo nano UIM card, refer to "PIN code" (P213).


Inserting docomo nano UIM card

- 1 Detach the back cover (P36)
- 2 Remove the battery pack (P47)
- 3 Insert the docomo nano UIM card into the docomo nano UIM card slot all the way to the end in the arrow direction with the IC chip facing down

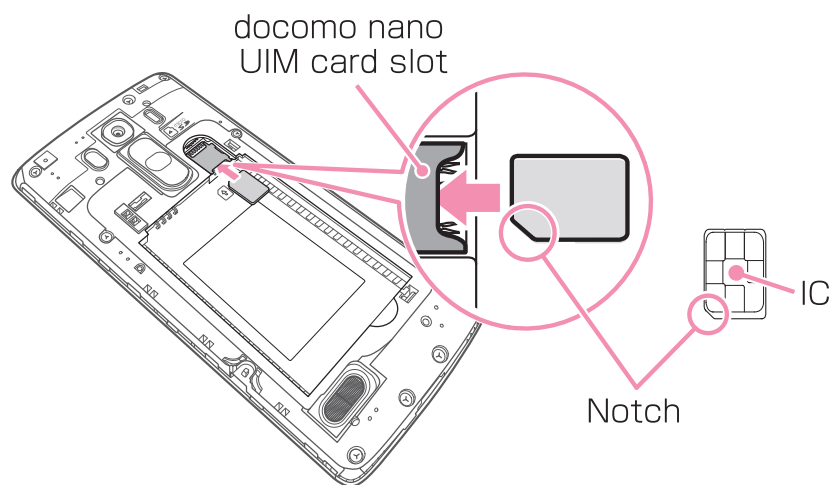

Removing docomo nano UIM card

- 1 Detach the back cover (P36)
- 2 Remove the battery pack (P47)
- 3 Remove the microSD card (P226)
- 4 Put the finger in the groove on the end on docomo nano UIM card slot, and pull the docomo nano UIM card in the arrow direction (1)
- 5 Take out the docomo nano UIM card straight in the arrow direction (2)

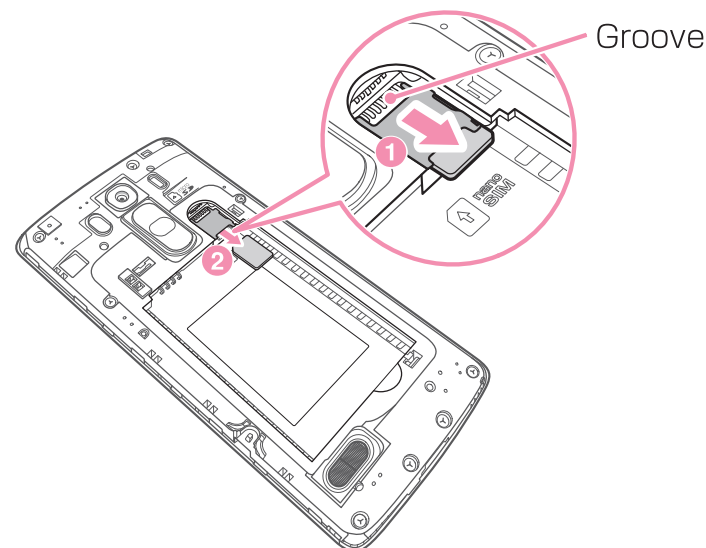

Note


- When handling the docomo nano UIM card, be careful to not touch the IC chip, or get it scratched.
- Note that the docomo nano UIM card may get damaged if you attach or remove it forcibly.
- Do not lose the docomo nano UIM card you removed.

Battery Pack

- Please use the dedicated Battery Pack L24 for this terminal.
- Make sure to turn off this terminal beforehand and hold it in your hand when attaching/removing the battery pack or the back cover so that the display does not get damaged.
- Do not bend or twist the back cover forcibly when attaching or removing it. The back cover may get damaged.


Attaching Battery Pack

- 1 Detach the back cover (P36)
- 2 With the battery pack  mark facing up, align the convex part of the terminal with concave part of the battery pack correctly, press the battery pack to the direction ① and push it to the direction ②

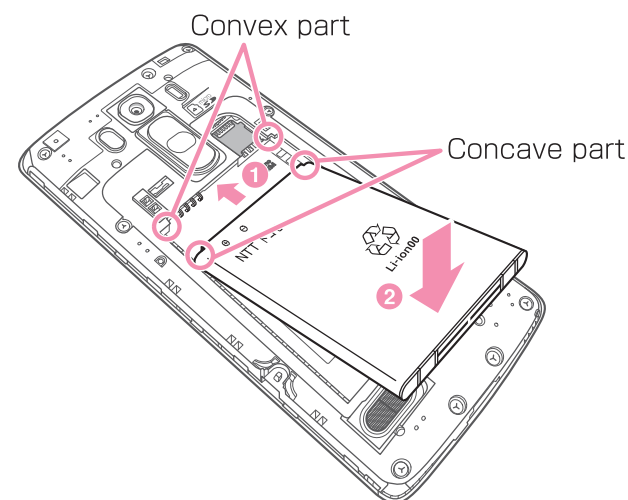

Removing Battery Pack

- 1 Detach the back cover (P36)
- 2 Hold the battery pack up in the direction of arrow mark using the concave part of the terminal with your fingertip, and then remove it

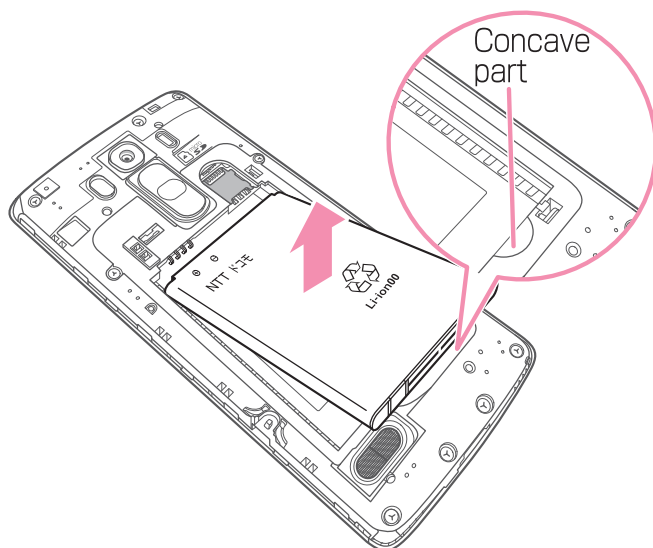

Charging

Battery Charge

- For detailed information, refer to instruction manuals for AC Adapter O5 (optional) and DC Adapter O4 (optional).
- AC Adapter O5 can be used from AC 100 V to 240 V.
- The shape of AC adapter plug is for AC 100 V (Japanese specification). A conversion plug adapter for the destination country is required when using an AC adapter compatible from AC 100 V to 240 V. Also do not use a transformer for overseas travel to charge.
- When the terminal is turned ON, you can operate the terminal even while charging. However, in that case, charging takes longer time because of reducing charging volume.
- Do not apply excessive force when inserting or pulling out the connector. Insert or pull it out slowly.
- Do not remove the battery pack while charging.
- When charging with an entirely empty battery pack, it may take a while to power on this terminal.

- Make sure to remove it from the power plug of AC adapter after finishing charging.
- When charging with unstable rated voltage, battery may not get charged or charging may fail.

Do not charge for a long time (for several days)

- If the terminal is left for a long time after being fully charged, the battery pack starts feeding the terminal when the charging is complete. For that reason, the actual battery time may shorten and the battery may be used up. If this happens, please charge it again correctly. Before recharging, remove this terminal from AC adapter and reset.

Battery Pack Life

- Battery pack is a consumable supply. The usage time decreases gradually each time the battery is charged.
- When the usage time becomes about half of a new battery, life of the battery pack is assumed to be over. We recommend you to replace the battery pack ahead of time. Also, depending on the usage condition, the battery pack may get swollen when the battery life is running out. Note that it is not a problem.
- Watching TV, etc. for along time while charging may affect battery pack life.

Charging Time (estimate)


For details about charging time, refer to "Main Specifications" (P274).

Usage Time (estimate)

For details about usage time, refer to "Main Specifications" (P274).

Charging with AC Adapter

It describes how to charge this terminal with AC Adapter 05 (optional).

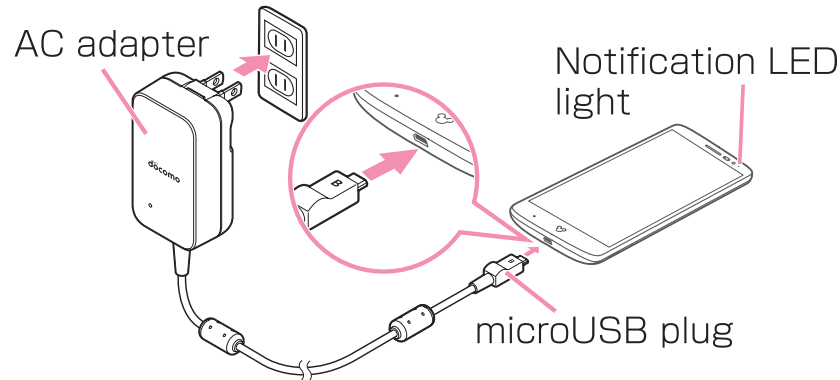

- 1** Insert the microUSB plug of AC adapter into the microUSB connection terminal of this terminal horizontally with the side of B mark facing up
- 2** Raise the AC adapter power plug and insert it into power outlet
 - During charging, Notification LED light of this terminal turns red color and blinks.
 - When charging is finished Notification LED light turns green color, a ringtone rings to notify that charging is over, and  is displayed.

- 3** When charging is completed, remove the power plug of AC adapter from the power outlet
- 4** Remove the microUSB plug of AC adapter horizontally from this terminal

■ DC Adapter 04

The DC adapter supplies power to charge this terminal through a cigar lighter socket (12 V/24 V) in a vehicle.

Charging with a PC

Connect this terminal to a PC by the microUSB Cable 01 (optional) to charge.

- 1** Insert the microUSB plug of microUSB Cable 01 into the microUSB connection terminal of this terminal
 - Insert the microUSB plug horizontally with the side of B mark facing up.
- 2** Connect the USB plug of microUSB Cable 01 to the USB port on PC
 - If a request of installing a device driver appears on your PC, cancel it.
 - If the "Install PC programs" screen is displayed on this terminal, tap "Cancel".
- 3** When charging is finished, remove the USB plug of microUSB Cable 01 from the USB port on PC
- 4** Remove the microUSB plug of microUSB Cable 01 from this terminal

Note

- Depending on the PC conditions, it may take a while to finish charging, or it may not be able to charge.

Power On/Off

Power On

- 1** Press and hold the power key for over two seconds
 - This terminal vibrates and the lock screen is displayed after a while.
 - After purchasing this terminal, when it is turned on for the first time, follow the on-screen instructions to perform the initial settings (P64).

Power Off

- 1** Press and hold the power key for over two seconds
- 2** "Power off"
- 3** "OK"

Turning on Backlight

To prevent unwanted operations and to save power, the backlight turns off after a certain time duration you set up and the screen is locked after then.

1 Press the power key

- Backlight lights on and the lock screen is displayed.
- Press power key again to black out the backlight and lock the screen.

■ KnockON/KnockOFF

Quickly tap the blacked-out screen twice to light the backlight. Quickly tap the area with no icon on the Home screen* or lock screen, or tap the status bar twice to turn off the backlight.

- * Only operates when the home application is "Home".

Note

- Set screen time-out duration and time duration till screen is locked. For detailed information, refer to "Screen timeout" (P200) in "Display" and "Lock timer" (P204) in "Lock Screen".

Unlocking Screen

When turning on the power or when displaying the display, the touch screen stays being locked.

1 Swipe the screen up, down, left or right

- You can change the method of unlocking the screen (P202).

Note

- When the screen lock is set to "Touch" or "Swipe", drag or swipe the status bar downward with the screen locked to open the notification panel.

Lock Screen



Lock screen (example)

- 1 **Date & time, current location**
- 2 **Notification information display area**
Displays the details of two latest notifications and the number of unread notifications.
- 3 **Application shortcut**
 - Swipe to start the application.
 - When you have missed calls, a number (notification number) may be displayed on the icon.

Basic Operations

This terminal adopts touch screen which allows you to operate by touching the display.

Using Touch Screen

Precautions on using touch screen

The touch screen is designed for finger touching lightly. Do not press it hard with your finger or with sharp objects (fingernail, ballpoint pen, pin etc.).


The following actions may cause the touch screen not working properly. Note that it may cause wrong operations.

- Operating the screen with gloved hands
- Operating the screen with tip of a fingernail
- Operating the screen with an object on it
- Operating the screen with a protective sheet or seal on it
- Operating when the screen is wet
- Operating when fingers get wet due to sweat or water

Touch screen operations

The following operations are available on the touch screen.


- **Tap** : Touch the screen lightly
- **Double tap** : Touch the screen lightly twice in a row
- **Touch and hold** : Touch the screen for over one second
- **Swipe** : Flick the screen lightly
 - Swipe to scroll quickly.

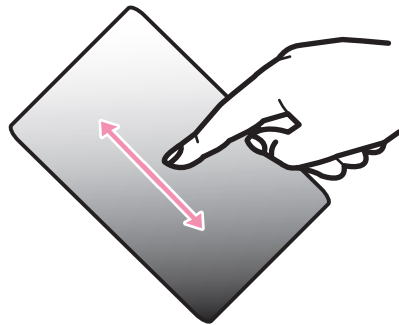

- **Drag** : Touch and hold down to flick the screen, and then release your finger
 - Icons and widgets can be moved.


■ Flick

- : Touch the screen and quickly sweep your finger
- Flick so that the screen scrolls at high speed. While scrolling, touch the screen to stop scrolling.

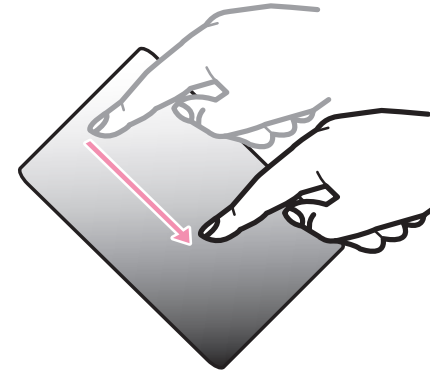


■ Pinch-out

- : Touch the screen with two fingers and then move them apart
- Pinch out to enlarge the screen.

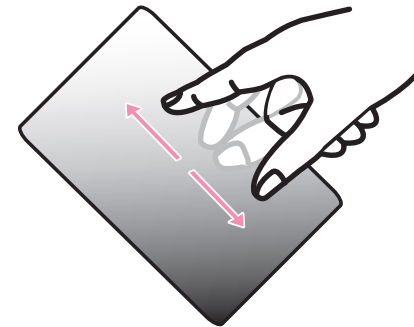

- **Pinch-in** : Touch the screen with two fingers apart and then move them together, as if pinching
- Pinch in to reduce the screen.

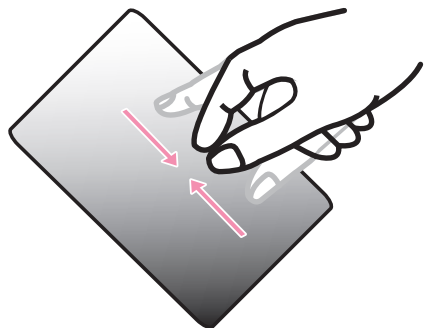

Home Touch Buttons

You can change the layout and the color of the home touch buttons, you can also display/hide the home touch buttons of the application in use.

- Up to five home touch buttons can be assigned.

1 From the Home screen, "Apps" ► "Settings" ► "Display" ► "Home touch buttons"

2 "Button combination"/"Color"/ "Hide Home touch buttons"

- Follow the on-screen instructions.

	Back key Tap to go to the previous screen. Close a dialog box, an option menu, the notification panel or the on-screen keyboard.
	Home key Tap to display the Home screen.
	History key • Touch to display the most recently used applications. • Touch and hold to display the current screen or the option menu performable in application.
	Notifications key Tap to displays/hide the notification panel.
	QMemo+ key Tap to start QMemo+ application.
	QSlide key Tap to display QSlide application selection screen at the bottom of the screen.

Auto Rotating Screen

This terminal screen automatically rotates to landscape or portrait views, depending on the direction in which it is turned.

- Depending on the display screen, the screen orientation may not change on this terminal.
- Even if this terminal is oriented close to being level in relation to the ground, the landscape/portrait view does not change.

- 1** From the Home screen, "Apps" ► "Settings" ► "Display"
- 2** Place a check mark in "Auto-rotate screen"

Capturing Screen Shot

You can capture the display and save it as an image.

- 1** Press and hold the power key and volume key (down) for over one second
 - You can see the captured screen shots in "Screenshots" of "Gallery".
 - The image may not be able to save depending on the screen, such as TV screen (Full seg/1 Seg).


QSlide Apps

While doing other operations, video, Internet, messaging, calendar and email can be used via popup.

- Up to two QSlide apps popup windows can be displayed on the same screen.

Using QSlide apps

- 1** Open the notification panel (P70)
- 2** "QSlide"
- 3** Select QSlide apps
 - The QSlide application field is displayed on the notification panel.
- 3** Select QSlide apps

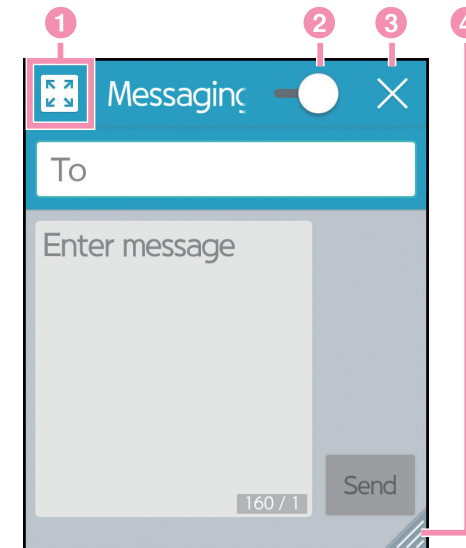

QSlide screen (example: Case of Messaging)

- 1 Go to full screen display/previous size and display it.
- 2 **Adjust background transparency.**
If this is dragged to the left, even if the QSlide apps screen is touched, it will no longer respond, but other functions can be used.
- 3 Close the QSlide apps.
- 4 Adjust the display size.

Editing QSlide apps

- 1 Open the notification panel (P70)
- 2 **Tap "Edit" in the QSlide apps field**
 - You can customize the items displayed in the QSlide apps sorting or in the notification panel.

Emergency Mode

Enable this mode to restrict the terminal settings and functions to save the battery power.

Enabling emergency mode

- 1 Press and hold the power key for over two seconds
- 2 "Emergency mode" ► confirm the contents on the screen ► "OK"
 - Restart this terminal and enable the emergency mode.

Note

- Even if the emergency mode was enabled only once, from the next time on the Home screen, tap "Apps" ► "Disaster kit" ► "SAVE" ► "OK" to enable the emergency mode.
- Even when the emergency mode has been enabled, Wi-Fi® and Bluetooth® function can also be turned on.

Disabling emergency mode

- 1 Press and hold the power key for over two seconds
- 2 "Emergency mode" ► "OK"
 - From the Home screen of the emergency mode, tap "Stop saving" ► "OK" to disable the emergency mode.
 - Restart this terminal and disable the emergency mode.

Character Entry

This terminal has an on-screen keyboard that is displayed in the touch screen for character entry.

Character Entry via On-screen Keyboard

If you tap a text box on the screen, the on-screen keyboard appears in the touch panel. This terminal provides three types of on-screen keyboards: an on-screen 10key keyboard, an on-screen QWERTY keyboard and handwriting converting keyboard. Tap  to switch the entry operation such as character mode change.

10key keyboard/QWERTY keyboard


● 10key keyboard

It is a keyboard similar to a general mobile phone keyboard (for multi-tap method). Tap a key assigned character you want to enter several times until the target character is entered.



● On-screen QWERTY keyboard

The array is the same as the PC's keyboard. Enter Japanese in Roman character.

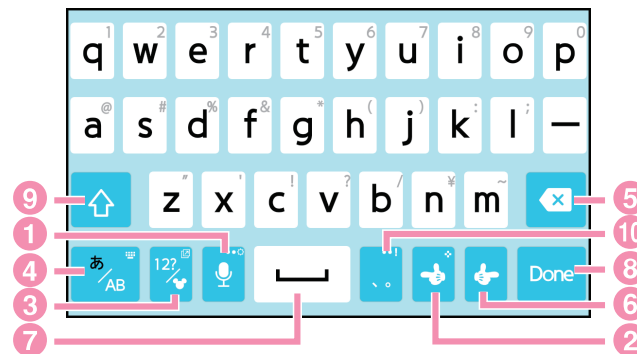

1 Voice input/Keyboard type key/Handwriting input key/Clipboard key/Setting key/Reverse order key

- Switch to Voice input mode.
- Touch and hold down to display keyboard function button panel.
 - Tap  to switch to voice input mode. It is not displayed when setting not to use voice input.
 - Tap  (QWERTY keyboard)/  (10key keyboard) to switch "10key keyboard" and "QWERTY keyboard".
 - Tap  to display handwriting input keyboard.
 - Tap  to display clipboard.
 - Tap  to display "LG Japanese keyboard" menu. The voice typing key can be hidden in the "Keyboard Settings".  /  is displayed when setting to hide.
 - * For detailed operations, refer to "Help" in "Keyboard Settings".
- If using the 10key keyboard,  is displayed when a character is entered. Tap  to display (reversed order) the previous character.

2 Left cursor key/Arrow key

- The cursor moves to the left.
- It can also narrow the conversion range to convert.
- Touch and hold down to change arrow key mode.

3 Symbol key/Alphanumeric and Kana key

- Display number keys. Tap again to display pictograph/symbol/emoticon/pictogram-D list. For 10key keyboard, right click to display pictograph/symbol/emoticon/pictogram-D list.
- Display alphanumeric characters and kana when "英数力ナ (Alphanumeric and Kana key)" is displayed.
- Touch and hold down to enable Input Extension plug-in. (P63)

4 Switch character mode

- Switch the character mode.
- Touch and hold down to select "Input language" and "Keyboard style".
 - Tap  (portrait display)/  (landscape display) to switch "One-handed operation" and "Split keyboard".
 - Tap  return to standard keyboard.

5 Delete key

- Delete the character on the left of cursor.
- Touch and hold down to delete the characters continuously.

6 Right cursor key

- The highlight moves to the right.
- Touch and hold down to move it continuously.
- It can also widen the conversion range.

7 Space key/Convert key

- Enter a space.
- "変換 (convert)" is displayed during Hiragana input and a list of conversion candidates is displayed.

8 Confirm key/Execute key/Link feed key/Search key/Next key/Finish key

- Confirm the entered characters or converted characters.
- If the entered characters or converted characters have already been confirmed, this executes the function (execute, line feed, search, next, finish) of the text box in which the characters were entered.

9 Shift key

When entering letters, tap to switch to capital letters.

⇧: Small letters


⇧: Only capital letter with the first letter

⇧: All capital letters

10 Punctuation mark key

- Input punctuation marks.
- Touch and hold down to display symbol list.

On-screen 10key keyboard (arrow key mode selected)

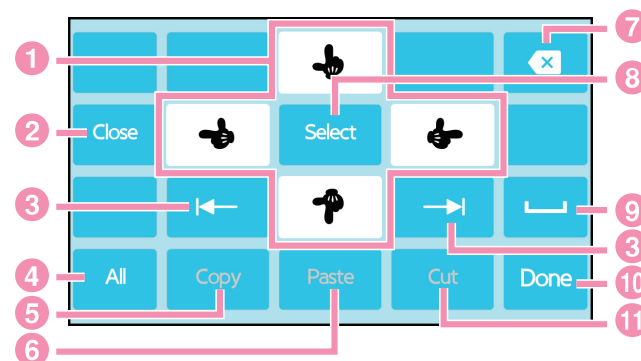

1 Arrow (up, down, right or left) key

Move the cursor to up, down, right or left.

2 Close

Switch to the on-screen keyboard that has been displayed before the arrow key mode is displayed.

3 Quick cursor key

Move the cursor to the beginning or the end of a sentence.

4 Select all

Select all the characters.

5 Copy key

Copy the selected text.

6 Paste key

Paste the copied/cut text.

7 Delete key

- Delete the character on the left of cursor.
- Touch and hold down to delete the characters continuously.

8 Select/Deselect key

- Select a target.
- You can change the area with arrow key.
- With deselect key, you can deselect the selected area.

9 Space key

Enter a space.

10 Execute key/Line feed key/ Search key/ Next key/Finish key

Execute the functions (execute, line feed, search, next, finish) of the input text box.

11 Cut key

Cut the selected characters.

Handwriting converting keyboard



1 Handwriting area

- is displayed under the characters when writing characters. Tap to display a list of recognition candidates and you can modify the character.
- is displayed on the right side of the handwriting area when writing characters. Tap to continuously input the characters by handwriting.

2 Menu key

- Select Input mode (character type) and execute mode (handwriting methods).
- Touch and hold down to set the advanced settings of handwriting input.
- Set execute mode to to display two input fields of handwriting. Enter one character after the other alternately.

3 Symbol key

Display a list of pictographs, symbols, emoticons and pictogram-D list.

4 Keyboard type key/clipboard key/setting key

- Switch to the software keyboard that was displayed prior to the handwriting converting keyboard display.
- Touch and hold down to display clipboard key and setting key.

5 Space key

Enter a half space.

6 Left cursor/Right cursor

- Move cursor position.
- Touch and hold down left cursor key to switch to arrow key mode.

7 Confirm/line feed key

- Confirm the entered characters or converted characters.
- If the entered characters or converted characters have already been confirmed, this executes the function (line feed) of the text box in which the characters were entered.

8 Delete key

- Delete the character on the left of cursor.
- Touch and hold down this to delete the characters continuously.
- When you are writing characters in handwriting input field, you can delete all the characters, one character or a line within the field.

Note

- The key display varies depending on the entry screen or character mode.
- When you no longer need the keyboard, you can close it by tapping . To display it again, tap the text box on the screen.

Changing Character Entry Settings

Touch and hold down  on a character entry screen and tap  to display "LG Japanese keyboard" menu. Tap "Keyboard Settings" to change the character entry settings.

COMMON SETTINGS	
Input language and keyboard type	Set the input language, screen orientation and the keyboard type of each input mode.
Candidate	Set the learning of input phrases, the correction of inputting mistakes, and word prediction.
Auto capitalization	Place a check mark to capitalize the first letter automatically when inputting English letters in applications supported input function.
Auto punctuation	When alphabetical characters are input, double tap the space key to enter a period.

Touch feedback	When inputting characters, set key popup, sound and vibration, etc.
Voice input	Set if enable voice input or not.
Handwriting	Set handwriting settings.
10key keyboard	Set flick input and auto cursor movement.
Fullscreen mode	Set to display the dedicated input screen or not in landscape view. Some applications may not perform properly due to the restrictions.
ADVANCED SETTINGS	
Split keyboard	Set to display keyboard in two separate fields or not in landscape view.
One-handed operation	Set if the keyboard is moved to right or left in portrait view.

EXTERNAL APPLICATION	
Input Extension plug-in	Set to use Input Extension plug-in or not. To use Input Extension plug-in, download "WnnDictionary" (search in dictionary) / "WnnBrowser" (connect to URL) / "WnnSearch" (search inside Website). For details about download, refer to "Downloads" (P273).
DICTIONARY	
User dictionary	Edit words in personal dictionary.
Clear learning dictionary	Delete all learning dictionaries.
RESET DEFAULT	
Reset to default	Reset character input settings.

ABOUT IME	
Help	Display Help of LG Japanese keyboard. In Help, you can confirm descriptions of function key usage, Split keyboard and One-handed operation mode.
Keyboard version	Detailed information on LG Japanese keyboard is displayed.

Initial Settings

First-time Settings When the Power is Turned On

After purchasing this terminal, when it is turned on for the first time, follow the on-screen instructions to select a language, set the Google account or perform the docomo service initial settings.

- Procedures differ depending on the connection with network and setting skips.

1 Tap "Next" on "Welcome" screen

- Tap "日本語 (日本) (Japanese (Japan))" to change language.
- Follow the on-screen instructions to set up the items below, and tap "Next".
 - Wi-Fi®
 - Google account
 - Google service
 - If gathering the log information to LG is allowed or not

2 On the "Software Update" screen, "OK"

3 On the "Welcome to docomo service!" screen, confirm precautions and terms of service and mark "Agree to all" ► "Start settings"

- Follow the on-screen instructions to set up the items below, and tap "Next".
 - docomo ID
 - docomo cloud
 - docomo apps password
 - docomo location information
 - Remote Initialization Service*
 - Installing applications collectively
- * Does not displayed when docomo apps password has not been set up.

4 "Start using"

- When the operation guide of Home screen is displayed, tap "Don't show this again"/"OK" to display the Home screen.

Note

- You can change the settings later.
- Before setting online service, make sure that the data can be connected (LTE/3G/GPRS), or make sure that the Wi-Fi® network is being connected.
- Even when the Google account has not been set up, you can still use this terminal except for the usage of Google service such as Gmail or Google Play.

Notification LED

About Notification LED Light

This terminal notifies you of its status via the lighting up or blinking Notification LED light. Operations of Notification LED light is shown below.

- Slowly blinking green color: Incoming call
- Quickly blinking green color twice: Missed call/SMS
- Blinking red color: Area Mail notification
- Blinking rainbow color: Alarm notification
- Lighting up red color: Charging
- Lights up green color: Charging is finished

Note

- When charging battery, tone changes while lighting up.
- The lighting up while charging or finishing charging operates regardless of whether this terminal is powered on or off.
- When receiving a notification while charging or finishing charging, notification blinking is prior.

Setting Notification LED Light

- 1 From the Home screen, "Apps"
▶ "Settings" ▶ "Display" ▶
"Notification LED"
- 2 Turn on "Notification LED"
- 3 Place a check mark in features to
get notifications

Note


- The notification display of Area Mail and alarm cannot be changed.

Screen Display/Icons

Status Bar

The status bar is displayed at the top of the screen. The status and notifications of this terminal are displayed on the status bar. On status bar, notification icons are displayed on the left side, and status icons are displayed on the right side.

Status bar

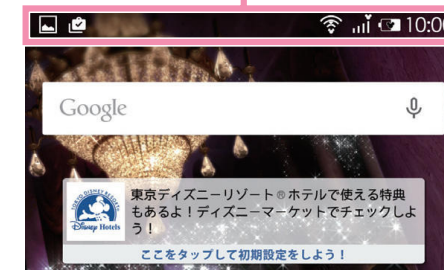

Main status icons

	Signal strength
	No service
(grey)	Bluetooth® function is on
(white)	Connecting to a Bluetooth® device
	During international roaming
	3G available/communicating (arrow is gray in standby, white while sending/receiving)
	LTE available/communicating (arrow is gray in standby, white while sending/receiving)
	FOMA HIGH-SPEED/HSDPA available/communicating (arrow is gray in standby, white while sending/receiving)
	Connecting Wi-Fi®/ communicating
	Remaining battery level
	Battery needs to be charged

	Battery is empty (blinking)
	Charging
	Airplane mode activated
	docomo nano UIM card locked or docomo nano UIM card not inserted
	Manner Mode (vibrate only)
	Manner Mode (Do not disturb)
	Alarm is set
	Reader/Writer, P2P function is on
	Calling via hands-free
	Synchronizing data
	GPS is positioning
	NFC/Osaifu-Keitai lock is set on both this terminal and docomo nano UIM card
	NFC/Osaifu-Keitai lock is set on this terminal or docomo nano UIM card

Main notification icons

	New Gmail
	New Email
	New message (SMS)
	New Area Mail
	Problem with message (SMS) delivery
	New Hangouts message
	Incoming call, making a call*, answering a call*
	Receiving a video call or talking on the phone*
	Missed call
	New answering memo
	New voicemail message
	New alarm notification
	Upcoming calendar event

	Playing music via music application
	Playing music via Media Player
	Detected an Open Network (Wi-Fi®)
	Connecting to the Wi-Fi® of unavailable Internet
	Connecting with USB
	Charging completed
	Slow charging
	Low free space of memory on this terminal
	Data upload completed
	Data download completed
	Problem with login
	Available to update
	Application installation finished
	Watching 1 Seg

	Watching Full seg
	Recording TV (Full seg/1 Seg)
	Recording TV (Full seg/1 Seg) is finished
	More notifications
	Connecting VPN
	Wi-Fi® tethering available
	USB tethering available
	Bluetooth® tethering available
	Connecting Wi-Fi Direct®
	Face is recognized via Smart screen (backlight is lit up)
	The application provided by LG Electronics Inc. needs to update
	Battery saver is on
	Omakase Lock is on
	Notification from docomo LIVE UX

	Start of docomo ID settings interlinking
	Authorization failure of docomo ID settings
	docomo backup application notification
	docomo application location information ON

* Displayed when changing to another screen such as Home screen.

Note

-  is displayed when the terminal is charged with a PC instead of the AC adapter (optional).
-  is displayed, the battery charge speed is slower than the speed when charging with AC adapter (optional).
-  is displayed when the internal storage runs out of space.
-  is displayed, you may not be able to install an application even after downloading it. Make enough free space and install the application again.

Notification Panel

You can confirm the notification icons, start an application or turn on/off a function in the notification panel.

Viewing notification panel

1 Drag or swipe the status bar downward



1 Date & time

Display date and time.

2 Quick setting icon field

Switch each function on/off.

- ON is displayed in aqua color, OFF is displayed in gray color.
- Scroll to right and left to display the hidden icons.
- Touch and hold down to display the setting menu screen of each function.
- Touch "Edit" to customize or sort icons.

3 QSlide App field

Tap and activate QSlide app (video, Internet, message, calendar, Email, file manager, calculator).

- Tap "QSlide" in the quick setting icon field to display "QSlide".

4 Screen brightness adjustment field

Adjust the screen brightness via slide bar.

- If turn on "Auto" (icon turns to aqua color), the screen brightness is automatically adjusted.

5 Incoming call volume adjustment field

- Adjust volume of an incoming call.
- Tap  to open volume setting window.

6 Notification information

Display details of notification information.

7 Telecommunications carrier name/SIM carrier name

On the left, the name of currently connected telecommunication carrier is displayed; on the right, the carrier's name read from docomo nano UIM card is displayed.

8 Setting button

The "Settings" screen is displayed.

9 Delete notification

Delete notification information and icons. Some notifications cannot be deleted.

Viewing notification details

1 Tap the notification information on the notification panel

- The notification details are displayed in an appropriate application.

Closing notification panel

1 Drag or swipe the notification panel upward

Note

- Tap  to close notification panel.

Sorting quick setting icons

1 Tap "Edit" in the quick setting icon field

2 Drag the items you want to sort to the destination

Customizing quick setting icons

1 Tap "Edit" in the quick setting icon field

2 Place a check mark in the desired item to display

Customizing icons

You can change the icon design such as shortcut to use on the Home screen.

Note

- From the Home screen, "Apps" ► "Settings" ► "Home screen" ► "Select Home" ► usable only when "Home" is selected. You cannot customize icon when using the docomo LIVE UX.

Changing home application icon

- 1** From the Home screen, touch and hold down a shortcut icon
 -  is displayed at the upper right of the icon.
- 2** Tap the shortcut icon again
 - Icon change screen is displayed.
- 3** Tap your favorite icon ► "OK"

Changing to photo icon

You can use a photo from camera and gallery as the icon for the Home screen.

- 1** From the Home screen, touch and hold down a shortcut icon
 -  is displayed at the upper right of the icon.
- 2** Tap the shortcut icon again
 - Icon change screen is displayed.
- 3** "Add new" ► drag the frame and set icon size ► "OK"
 - Gallery is activated.
- 4** From Gallery, select a picture you want to set up ► adjust its size ► "OK"

Home Screen

Viewing Home Screen



- 1 **Widget**
- 2 **Machi-chara**
- 3 **Apps**
- 4 **Current location of the Home screen**
Flick to right/left to switch the display.
- 5 **Dock**
Always displayed even when the Home screen is changed.

Note

- Pinch out the Home screen to enlarge the wallpaper till it becomes full screen. Pinch in the wallpaper enlarged till it becomes full screen to return to the Home screen.

Home Screen Management

Adding Home screen

- 1 **Pinch in on the Home screen**
 - Home screen list is displayed.
- 2 **"+"**
 - Up to seven screens can be added.

Note

- Touch and hold the Home screen you want to delete ► drag it to the "Remove" on the top of the screen and delete the Home screen.

Adding an application or widget

- 1 From the Home screen, touch and hold down an area with no application icon or widget
- 2 "Apps" or "Widgets"
- 3 Tap a desired application icon or widget to add

Moving an application or widget

- 1 From the Home screen, touch and hold down a desired application icon or widget to move
- 2 Drag the item to the destination

Note

- You can drag the icon rightward or leftward till the edge of the screen to move it to the next Home screen.

Deleting from the Home screen of an application or widget

- 1 From the Home screen, touch and hold down a desired application icon or widget to delete
- 2 Drag the item to "Remove" on the top of the screen


Changing wallpaper

- 1 From the Home screen, touch and hold down an area with no application icon or widget
- 2 "Wallpapers" ► "Gallery"/"Live wallpapers"/"Multi-photo"/"Photos" or select a wallpaper from Disney wallpaper list
 - When "Gallery"/"Live wallpapers"/"Multi-photo" is selected, edit or set the image range if necessary.

Apps Screen

Viewing Application Screen

- 1 From the Home screen, "Apps"

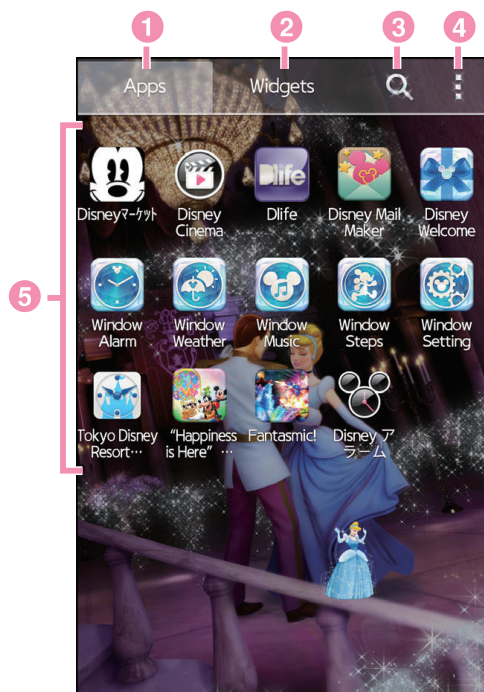

- 1 "Apps" tab
- 2 "Widgets" tab
- 3 "Search" button
- 4 "Menu" button
- 5 Application icon list

Apps List

Some applications require a separate subscription (charge).

Applications not included in the folder

	Disneyマーケット (Disney Market)	In Disney Market is a convenient portable application where you can obtain various "Disney apps" and the recommended information. (P135)
	Disney Cinema	Lines up the best video contents from popular live action movies to animation works provided by Disney! This is the premium video service only for you.

	Dlife	Enjoy dramas, movies, variety shows and news which are popular worldwide anytime and anywhere! Best-selected programs are delivered from "Dlife", a BS channel, which advises you that new styles be applied on your everyday selections.
	Disney Mail Maker	A Deco-mail [®] converter app which can be activated from docomo mail. It activates alone to create and link Deco-mail [®] as well!
	Disney Welcome	DM-01G Special welcome movies only for users! Enjoy the adorable welcome message voice from Mickey and Minnie.

	Window Alarm*	The alarm plays animation at a special time. There is a surprising performance when tilting the smartphone.
	Window Weather*	Check the weather, temperature and precipitation probability of the current location or the place you set without opening the mickey window cover.
	Window Music*	Play or pause the music without opening the mickey window cover.
	Window Steps*	Check the number of steps, distance traveled, and calories burned without opening the mickey window cover.

	Window Setting*	Select a Disney character and change the window image, live wallpaper, ringtone, etc. of the mickey window cover collectively.
	Tokyo Disney Resort[®] Machijikannabi	An app to check your present location on the map of Tokyo Disneyland/Tokyo DisneySea and get various information such as waiting time for attraction.
	"Happiness is Here" Live Wallpaper	Provides children of all generations with music, dream and friendship... Let's share superb "Happiness". This app gives you live wallpapers of "Happiness is Here", the day parade of Tokyo Disney Resort [®] .

	Fantasmic!	"Fantasmic!" is an animated wallpaper of the colossal night entertainment in which Mickey who turns into sorcerer's apprentice battles on the stage in the Mediterranean harbor.
	Disney アラーム (Disney Alarm)	A cute and convenient application which has three functions of alarm, world clock and timer with adorable characters. Also the widget functions.
	Phone	Make a call or set up call function. (P99)
	docomo phonebook	Phonebook application provided by docomo. The phonebook data of "docomo account" can be managed with cloud. (P113)

	docomo mail	It is an application for sending/receiving mails using DOCOMO mail address (@docomo.ne.jp). Sent/received mails are saved in cloud. You can view the same mail on the multiple devices or transfer mail data easily when changing model. Pictograms and Deco-mail® are available. Also it supports auto receive. (P119)
	Messaging	Available to send and receive SMS. (P119)
	Internet	Web Browser Application. (P129)
	Camera	Shoot still images (photos) and videos. (P155)
	Calculator	Four arithmetic operations are available. (P180)

	Settings	Set various settings. (P184)
	Chrome	Google web browser application.
	Maps	Check current location or search a destination with Google Maps. (P173)
	Gallery	View or sort still images (photos) and videos. (P160)
	YouTube	Play or post videos.
	TV	Watch Full seg/1 Seg. (P142)
	Media Player	Play music and videos. (P161)
	Music	Sort music files by album or artist.
	Schedule	An application for creating/managing events and the data is shared with Memo application. It supports i-concier.

	Calendar	View calendar and manage schedule. (P177)
	Clock	Set settings of alarm, timer, world clock and use stopwatch. (P174)
	Memo	Creating/managing memos and the data is shared with Schedule application. It supports i-concier.
	QMemo+	You can simply write a memo without having to launch Memo application. You can also input texts or illustrations directly on the captured screen. (P179)
	IC Tag/ Barcode Reader	An application for reading information written in IC tags and barcodes.

	Osaifu-Keitai	It allows you to pay money only by holding the terminal over an IC card reader in stores etc. (P138)
	ToruCa	An application for collecting coupons/ convenient information of your favorite shops. (P141)
	iD アプリ (iD appli)	To use the electronic money of "iD" provided by docomo. Hold the Osaifu-Keitai with the "iD" already been set against a scanner in a shop to do shopping easily.
	Visa prepaid	You can get a Visa prepaid card for network shopping. It is used for online shopping.

	dmenu	Shortcut application for "dmenu". You can easily search useful contents for smart phones as well as contents familiar in i-mode. (P134)
	dmarket	There are various contents such as music, e-books. You can purchase something that suits your needs. (P134)
	iコンシェル (i-concier)	This application is for using i-concier. i-concier is a service supports your life as "butler" or "concierge" via a mobile.

	しゃべって コンシェル (Shabette- concier)	Speak to the character about what you want to search and what you want to do and this application will read the meaning of the words and display most appropriate answer on the screen.
	docomo backup	An application for backing up and restoring to "データ保管BOX (Data Storage BOX)" or "microSD card". • Backing up to/ restoring from Data Storage BOX. → P183 • Backing up to/ restoring from microSD card. → P181

	データ保管BOX (Data Storage BOX)	An application for using データ保管BOX (Data Storage BOX). Data Storage BOX is a service which allows you to upload files to easily manage them in the cloud.
	フォトコレクション (Photo collection)	A service with which you can back up photos or videos to cloud up to 5 GB for free and access them from smartphone, tablet, PC, etc.
	File Manager	Search, edit or delete the data inside internal storage, microSD card or cloud storage. (P227)
	Downloads	Confirm, display or play the downloaded data.

	Disaster kit	An application for using Disaster Message Board, Disaster Voice Messaging Service and Early Warning "Area Mail". (P128)
	遠隔サポート (Remote support)	Available to use "あんしん遠隔サポート (Safe remote support)". "あんしん遠隔サポート (Safe remote support)" is a service allows staff from call center support your operations by confirming the screen shown on your terminal remotely. (P264)

	Anshin Scan	Ensure your smartphone by checking virus, applications which require your personal data, by alerting when you attempt to access a nonsecure website, etc.
	shoplat	Go to any member's shops and check in so that you can get credits or coupons. Then use the credits you get to exchange for gift voucher from the member's shops or credits.
	My Magazine	My magazine is a search service that shows articles of the genre that you selected. (P97)

	docomodake 30color	A simple mini game where docomodake comes on stage. Tap a piece that is laid out in the 7 x 7 grid and it will disappear.
	Email	Setup Email account to send/receive emails. (P122)
	Twitter	Official Twitter client application. Publish short message on the site to communicate with others.
	Play Store	Download the application from Google Play. (P136)

Google		
	Google	Search various information by the quick search box.
	Voice Search	Search via voice.
	Gmail	Setup a Google account and send/receive emails via Gmail. (P127)
	Google+	Use Google SNS.
	Play Movies & TV	Purchase videos from Google Play.
	Play Books	Purchase books from Google Play.
	Play Games	Purchase games from Google Play.
	Drive	Save images or videos to Google Drive or share them.

	Photos	View pictures and movies. You can also sync with Google Photos to backup images and share them with others.
	Hangouts	Chat using Google Hangouts.
	Google Settings	Make settings for Google applications.
	Docs	Create and edit a document. You can also edit with other users.
	Sheets	Create and edit a Sheets. You can also edit with other users.
	Slides	Create and edit a presentation. You can also edit with other users.

Applications not included in the folder

	Instruction Manual	Instruction manual for this terminal. Available to activate a desired function directly from the description.
---	---------------------------	---

* This application is used in the supplied Mickey Window Cover LO1.

Note

- This application list is preinstalled in this terminal at the time of purchase. Some preinstalled applications can be uninstalled. Those uninstalled applications can be downloaded again from the "Play Store", etc (P136).
- If the software is updated, application contents and icon positions may change.
- Some of the applications may not show its name fully below the icon.

Managing Applications

Adding an application to Home screen

- 1 From the Home screen, "Apps"
- 2 Touch and hold down the application icon to add it to the Home screen
- 3 Drag it to the desired position and release your finger
 - The application is added to the Home screen.

Uninstalling an application

- 1 From the Home screen, "Apps"
- 2  ► "Edit/Uninstall apps"
 - For applications that can be uninstalled,  is displayed at the upper right of the icon.
- 3 Tap the application to be uninstalled
► "Uninstall" ► "Yes"

Window Screen

Attach the Mickey Window Cover L01 to this terminal and close the flip section to display the window screen. You can use an application or answer a phone call, etc. through window screen.

- It is necessary to turn on "Mickey Window Cover" in the setting menu of this terminal (P222).
- When the screen backlight is blacked out, execute the KnockON (quickly tap the screen twice) to turn on the backlight.

Main Screen



Main screen


- 1 Date
- 2 Weather
- 3 Notification icon
- 4 Clock

Note

- The notification icon will not be displayed after two seconds.

Available Application

- 1 Swipe the main screen up, down, left or right
- 2 Tap the application that you want to use

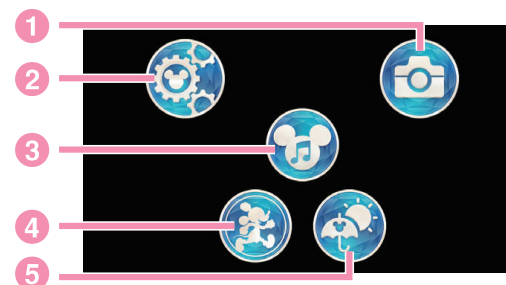

Application screen

- 1 **Camera application**
Start the camera to take photos or preview the images you took.
 - Tap the screen or press the volume key (up)/volume key (down) to take photos.
- 2 **Window setting application**
Select a Disney character and change the window image, live wallpaper, ringtone, etc. of the mickey window cover collectively.

3 Music application

Play music, pause, etc.

- Select a music to play via the music application beforehand.

4 Pedometer application

Check the number of steps, distance traveled, and calories burned.

- Set up your height, weight, step length and your objective in advance to count it even more correctly.

5 Weather application

Check the weather, temperature and precipitation probability of the current location or the place you set.

Note

- When each applications is being displayed on the window screen, swipe the screen to any direction to go back to the application screen.
- When each applications is being displayed on the window screen, open the flip section to display the operation screen or setting screen of each application.
- On the window screen, set the resolution of still image to "3210×3210 (9M)".

Available Functions

Answer a call*¹	You can answer a voice call. Also you can end/hold a call. • Although notification screen for video call is displayed, you cannot answer it. Open the flip section and follow the on-screen instructions.
Notification for miss calls*²	When there is a missed call, the notification icon will be displayed.
Notification/preview for Email and message*²	When a mail (docomo mail/email) or message is received, the notification screen or notification icon will be displayed. Tap the notification screen to display the preview. • In the mail preview (docomo mail/email), the title and sender of the received mail are displayed.

Cancel auto lock	(P222)
Stop alarm	Stop the alarm.

- *1 During voice call, the window screen backlight blacks out two seconds after the call started.
- *2 The notification icon of a missed call/new message/new Email will not be displayed after two seconds. After the window screen backlight blacks out, the notification icon will be displayed after lighting up again.

Task Manager

Confirm/end the running application.

1

- Tap an thumbnail to start the application.
- Scroll/flick the thumbnail to right or left to delete it from the list.
- Tap "Clear all" to end all the activated applications.
- Tap "X" on the thumbnail end that application.


Switching Home Application

- 1 From the Home screen, "Apps" ► "Settings" ► "Home screen"
- 2 "Select Home" ► "docomo LIVE UX"/"Home"

docomo LIVE UX

Viewing Home Screen

When the home application is switched to docomo LIVE UX, the description of how to view the Home screen is shown below.

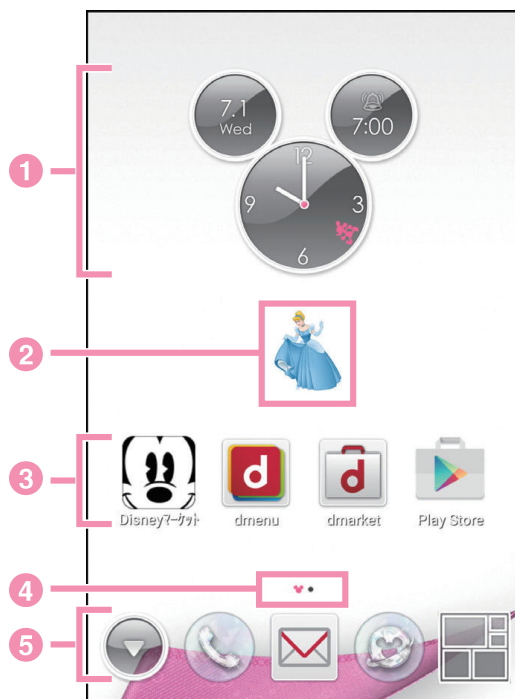

- 1 Widget**
- 2 Machi-Chara**
- 3 Application**
Start the application.
- 4 Location of current Home screen**
Flick to left/right to switch the display.
- 5 Dock**
Displayed even when the Home screen is switched.
 - Application button: Displays the application screen.
 - My Magazine button: Displays My Magazine (P97).

Home Screen Management

Adding to Home Screen

You can customize your own Home screen.

- 1 From the Home screen, touch and hold down an area with no application icon or widget

Show apps	Display application list. Touch and hold down an application you want to add to the Home screen and drag it to the bottom part of the screen to locate it on the Home screen.
Show widgets	Display widget list. Touch and hold down a widget you want to add to the Home screen to locate it on the Home screen.
Create folder	Create a folder.

Change Kisekae	The background, wallpaper, font color and the indicator image are changed.
Change wallpaper	Display wallpaper list. Set wallpaper either by tapping a wallpaper or touching and holding down a wallpaper and locating it on the Home screen.
Machi-Chara display setting	Set if display Machi-Chara and the operation settings. • Touch and hold down the Machi-Chara on the Home screen to set the settings.
Home screens	Display Home screen list. You can move/add/delete a screen.

Moving an Application

- 1 From the Home screen, touch and hold down an application icon or a widget to move
- 2 Drag it to a desired location and release your finger

Place an Application Back from Home Screen to Application Screen

- 1 From the Home screen, touch and hold down an application you want to place back to application screen
- 2 Drag it to "Back to apps list" and release your finger

Deleting a Widget, etc. from Home Screen

- 1 From the Home screen, touch and hold down a widget to delete
- 2 Drag it to "Remove from Home" and release your finger

Uninstalling an Application or Widget

- 1 From the Home screen, touch and hold down an application icon or widget to uninstall
- 2 Drag it to "Uninstall" and release your finger
- 3 "OK"

Note

- For some applications which cannot be uninstalled, in step 2, drag the application to "Disable app", then release your finger
▶ "Disable" ▶ "Yes" to disable it.

Changing Folder Name

- 1 From the Home screen, tap a folder to change its name
- 2 Tap the folder name
- 3 Enter a new folder name and tap "Done" ► tap the screen

Changing Kisekae

Change the Home screen wallpaper, and change the image.

- 1 From the Home screen, touch and hold a wallpaper in which applications or widgets, etc. are not displayed ► "Change Kisekae"
- 2 Select an item ► "SET"

Changing Wallpaper

- 1 From the Home screen, touch and hold down an area with no application icon or widget ► "Change wallpaper"
- 2 Select the wallpaper
 - Tap "See Kisekae" to change Kisekae (P91).
 - Tap "See more wallpapers" to select from "Gallery", "Photos", "Wallpaper gallery", "Multi-photo", "Live wallpapers".
 - When a popup screen asking for which screen you want to set to appears, select "For all screens"/"Just for this screen" ► "OK". Depending on the wallpaper you selected, place a check mark in "Apply the shape of current Kisekae" to apply to the shape, or tap "Adjust position" to adjust the size.

Adding a Home Screen

- 1 From the Home screen, touch and hold down an area with no application icon or widget ► "Home screens"
 - Pinch in on the Home screen to display the Home screen list.
- 2 "Add Home screen"
 - Add up to 7 pages.

Sorting Home Screens

- 1 From the Home screen, touch and hold down an area with no application icon or widget ► "Home screens"
 - Pinch in on the Home screen to display the Home screen list.
- 2 Touch and hold a thumbnail of Home screen
- 3 Drag to the position you want to move to and release it

Deleting a Home Screen

- 1 From the Home screen, touch and hold down an area with no application icon or widget ► "Home screens"
 - Pinch in on the Home screen to display the Home screen list.
- 2 Tap  of thumbnail of Home screen you want to remove

Viewing Application Screen

1 From the Home screen, "Apps"

- Drag or swipe the Home screen downward to display the application screen.



1 "Apps" tab

Among the pre-installed applications, those that are not on the Home screen are displayed here. Select an application to activate.

2 "Widgets" tab

Add a widget to the Home screen.

3 "Wallpapers" tab

Change wallpaper.

4 "Recommend" button

Install applications recommended by docomo (P95).

5 Menu

Display menu such as Search, Settings, Help, etc.

6 Application icon list

7 Current location on application screen

8 Home screen field

Application Management

Moving an Application to Home Screen

- 1 From the Home screen, "Apps"
- 2 Touch and hold down an application icon to move to the Home screen
- 3 Drag it to the Home screen field and release your finger

Moving an Application

- 1 From the Home screen, "Apps"
- 2 Touch and hold down an application icon to move
- 3 Drag it to the destination and release your finger

Uninstalling an Application

- 1 From the Home screen, "Apps"
- 2 Touch and hold down an application icon to uninstall
- 3 Drag it to "Uninstall" and release your finger
- 4 "OK"

Note

- For some applications or widgets which cannot be uninstalled, in step 3, drag the application to "Disable app", then release your finger ► "Disable" ► "Yes" to disable it.

Installing an Application from "Recommends"

The applications recommended by docomo are displayed on "Recommends" screen.

- 1 From the Home screen, "Apps"
- 2 "Recommends" button
 - When activating for the first time, tap "おすすめアプリを見る (See more applications)".
- 3 Tap an application to install
 - Follow the on-screen instructions and install the application.
 - Tap "おすすめアプリをすべて見る (See all recommended apps)" to connect the Internet and display all recommended applications in a list.

Displaying All the Applications

The function searches for the position of an application.

- 1 Touch and hold  on the Home screen ► "Display all apps"
 - All of the applications are displayed on the list page. Tap an application on that page to move to the screen where that application is, such as the Home screen, the application screen or a folder, and the icon will be focused in on and displayed.

Backing up and Restoring the Home Screen

You can restore the layout of your applications and widgets in your Home screen by using the docomo LIVE UX data backed-up in docomo cloud. At this time, the docomo service page will be added to the end of your Home screen.

Backing up Home Screen

- 1 Touch and hold  on the Home screen ► "Layout backup and Restore"
 - For the first activation, terms of use appears. Read the contents, and tap "AGREE".
 - To backup/restore the settings of your Home screen, you need to set a docomo ID (P209).

- 2  ► "BACKUP"

Restoring Home Screen

- 1 Touch and hold  on the Home screen ► "Layout backup and Restore"
- 2 "Restore the latest backup data" ► "Restore"
 - If there are multiple instances of backup data, tap "Restore from backup data list" and select the backup data.

My Magazine

My Magazine is a retrieval service to show articles from categories you selected. It learns your preference by helping to set retrieval word according to your reading history and profile information.

1 From the Home screen, "My Magazine"

- My Magazine screen is displayed.
- Flick on the Home screen to display the My Magazine screen.
- When starting for the first time, the genre setting screen is displayed. Place a check mark in a genre to display and tap "OK". Also you can set up a genre by free words.
- When "Link to Twitter" screen appears, tap "Confirm setting" to link My Magazine with Twitter.

Setting Categories

- 1 From the My Magazine screen,   "Display category setting"
- 2 Place a check mark in a desired genre to display, "OK"
 - Tap "Sort" and drag the  of the genre to sort the order of the genres.

Viewing Articles

- 1 Flick to the left/right on the My Magazine screen**
 - The genre to be displayed is switched.
 - Flick the My Magazine screen downward to display the Home screen.
 - Tap "See more info" to display more articles about this genre.
- 2 Tap a desired article to display**
 - Overview of the article is displayed.
 - Depending on the article, it may be able to access to the external link directly.
 - Tap "みんなのツイートを見る (See everyone's tweet)" to view the posts on Twitter that related to the article.
- 3 "元記事サイトへ (To the original article site)"**
 - Access to the article source.

Home Application Information

Version Information

You can view the descriptions or instructions, etc. about docomo LIVE UX.

- 1 Touch and hold  in the home screen ► "About"**

Help

You can check detailed descriptions and instructions about docomo LIVE UX.

- 1 Touch and hold  in the home screen ► "Help"**

Calling

Making a Call

- 1 From the Home screen, "Phone" ► "Dial" tab



- 1 **"Phonebook" button**
Activate "docomo phonebook" application.
- 2 **Tab**
"Dial" tab: The dial screen is displayed.
"Recent calls" tab: Recent calls screen is displayed (P109).
"Favorites" tab: Contacts list added to the Favorites is displayed.
- 3 **Phone number entry field**
Display an input phone number.
- 4 **Dialpad**
- 5 **Call button**
- 6 **Menu**
Display menu.
- 7 **Delete button**
Delete a number at the far right. To delete all numbers entered, touch and hold the key.
- 8 **"Register" button**
Register the entered phone number to phonebook.

2 Enter a phone number ►

■ When making video call

⋮ ► "Video call".

3 Tap "End call" to end a call

Note

- You can make voice calls and video calls in high quality with VoLTE. To use VoLTE, you and the other party both need to meet the following conditions.
 - The device supports VoLTE.
 - It is within the Xi area (You cannot use VoLTE outside the Xi area or during international roaming).
 - "Preferred network type" of "Mobile networks" (P192) is set to "LTE/3G/GSM(Auto)" or "LTE/3G", and "Call mode setting" (P113) is set to "VoLTE/3G".
- You can see each other's images while talking with video call. You can also switch to voice call.
 - When making video calls, there is a call charge and packet communication charge. In addition, there is also a packet communication charge for incoming video calls.

- Since it is a best effort communication (the optimum communication speed changes depending on the network traffic), the image quality differs depending on the network environment.
- When you could not switch to video call from voice call, a notification will be shown on the display indicating that the switching to video call failed, and voice call will continue.
- As the display processing is different for each phone model, your image displayed on the terminal for the video call may differ to what is displayed on the other party's device.

Entering a Pause

Use "Add 2-sec pause" or "Add wait" to dial phone number and additional code in a row when sending an additional code during a call is required for bank balance inquiries, ticket reservation services, etc.

Adding a two seconds pause ","

Automatically dial a service number two-second pause later after calling.

- 1 From the Home screen, "Phone" ► "Dial" tab
- 2 Enter a phone number ►  ► "Add 2-sec pause"
 - A comma "," is displayed behind the phone number.
- 3 Enter a menu number of a desired service ► 
 - After two seconds, the push signal will be sent automatically.

Adding a standby ";"

After calling, a message is displayed to confirm the number you dialed of a desired service.

- 1 From the Home screen, "Phone" ► "Dial" tab
- 2 Enter a phone number ►  ► "Add wait"
 - A semicolon ";" is displayed behind the phone number.
- 3 Enter a menu number of a desired service ► 
- 4 When a confirmation message is displayed, "Yes"
 - The push signal will be sent automatically.

Emergency Call

Emergency call	Phone number
Police	110
Fire department or ambulance service	119
Japan Coast Guard	118

Note

- This terminal supports "Location notification of emergency call". When dialing an emergency number such as 110, 119 or 118, information of the place where you called (location information) is automatically notified to the agency that you called (e.g. a police station). Depending on the location and the signal reception when you called, the agency may not be able to confirm your exact location. When your location information is notified, the agency name that you called is displayed on the screen of this terminal. If you dial by adding "184" in front of your number to hide your caller ID, your location information and phone number are not notified.

However, if the agency you called considers your location information and phone number necessary for important purposes such as life saving, the agency can retrieve them regardless of your mobile settings. In addition, the introduction area and introduction timing of "Location notification of emergency call" vary depending on the readiness of the agency you called.

- When you are making an emergency call (110, 119 or 118) from this terminal, be sure to notify that you are calling from a mobile phone and give both your mobile phone number and present location clearly as the police or fire department may call you back for confirmation. Stay where you are to ensure that your call will not be cut off during reporting. After making an emergency call, do not turn off your mobile phone immediately. Keep it powered on for about 10 minutes so that it can receive an incoming call.
- Depending on the area where you make an emergency call, it may not be connected to the jurisdictional fire department or police station.

- In Japan, when docomo nano UIM card is not inserted in the terminal, the emergency numbers of 110, 119 or 118 are not available on the PIN code entry screen or during PIN code lock/PUK lock.
- If you make an emergency call 110, 119, 118 with call rejection setting enabled, call rejection setting/Blocking mode will be disabled.
- You may not be able to make an emergency call on some networks.
- You can not make emergency calls with video calls.

Making an International Call (WORLD CALL)

WORLD CALL is a service enables you to make an international call in Japan via **DOCOMO** terminals.

- Contact "General Inquiries" on the back cover of this manual for detailed information about WORLD CALL.
- "Using Overseas → P244

Calling a fixed-line telephone

- 1 From the Home screen, "Phone" ► "Dial" tab
- 2 "010" ► country code ► area code ► recipient's phone number, and tap 
- 3 Tap "End call" to end a call

Calling a mobile phone

- 1 From the Home screen, "Phone" ► "Dial" tab
- 2 "010" ► country code ► recipient's mobile phone number, and tap 
- 3 Tap "End call" to end a call

Note

- If a mobile phone number or an area code of the other party begins with "0", remove the first "0". However, the first "0" is required when calling to some countries or regions such as Italy.
- "+" (touch and hold down "0" to input "+") and the former "009130010" can also be used to dial instead of "010".
- On "Dial" tab, enter a phone number ► 
 - "International call" ► select a country
 - "WORLD CALL" to add "009130010" + country code.

Receiving a Call

For Voice Calls

- 1 When there is an incoming call
 - For VoLTE, "(high-quality sound)" is displayed.
 - Answering memo recording:  ► "Play reply message"
 - Put a call on hold:  ► "Put a caller on hold"
 - Stop ring tone, vibration: press power key, or volume (up)/volume (down)
- 2  ► "Accept"
 - Declining a call: "Reject"
 - Rejecting a call: "Reject call with SMS" ► tap a message to send
- 3 Tap "End call" to end a call

For Video Calls

- 1 When there is an incoming call
 - "(high-quality sound)" is displayed.
 - Rejecting a call: ■ ▶ "Reject call with SMS"
 - Answering memo recording: ■ ▶ "Play reply message"
 - Put a call on hold: ■ ▶ "Put a caller on hold"
 - Self image is not being sent to the other party: ■ ▶ "Camera OFF response"
 - Stop ring tone, vibration: press power key, or volume (up)/volume (down)
- 2  ▶ "Accept video"
 - Answer by voice:  ▶ "Accept voice"
 - Rejecting a call: "Reject"
- 3 Tap "End call" to end a call

Note


- From the Home screen, "Phone" ▶ ■ ▶ "Call settings" ▶ "Reject SMS" to edit a reject SMS.

Incoming Call While Activating an Application


If there is an incoming call while activating an application, the popup screen will be displayed on the top screen. Tap "ACCEPT"/"ACCEPT VIDEO" to start the call.

- When the popup incoming screen is displayed, if the caller's name or the phone number area is tapped, the incoming call screen (full screen) can be displayed.

■ Incoming voice call

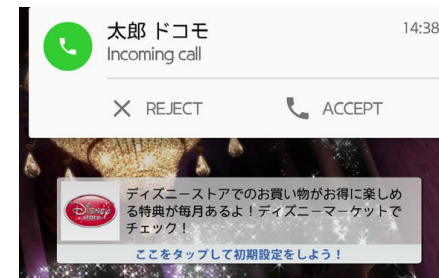

■ Incoming video call

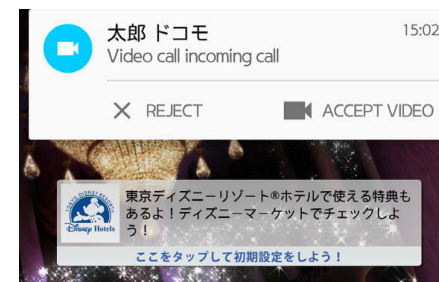

Calling/Sending an SMS to a Missed Call

When you have a missed call, you can check the notification from status bar.

1 If  appears in the status bar, drag or swipe the status bar downward

- Missed call notification appears on the notification panel.

2 "Missed call"/"CALL"/"SEND SMS"


- "Missed call": Recent calls are displayed.
- "CALL": Make a call.
- "SEND SMS": Message input screen is displayed. Compose a message and tap "Send" to send the message.

Operations during a Call

The following operations are available while talking on the phone.

- Press the volume key (up)/volume key (down) during a call to adjust the volume.

For Voice Calls

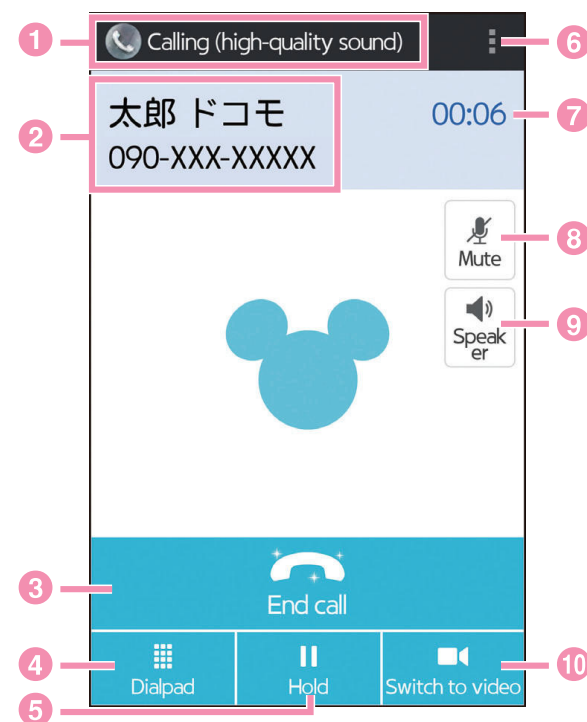

1 High-quality sound indication

Appears when using a call with high quality sound of VoLTE.

- ② **Name and phone number**
- ③ **End**
End a call.
- ④ **Dialpad**
Display dialpad and send push signal (DTMF tone).
- ⑤ **Hold**^{*1}
Put a call on hold.
- ⑥ **Add call**^{*2}
Call another party.
- ⑦ **Call duration**
- ⑧ **Mute**^{*1}
Your voice cannot be heard by the other party.
- ⑨ **Speaker**^{*1}
You can hear the other party's voice through speaker to talk hands-freely.
- ⑩ **Switch to video**
Switch to video call.

*1 Tap again to return to the previous state.

*2 Subscription is required for "Call waiting".

For Video Calls



- ① **High-quality sound indication**
Appears when using a call with high quality sound of VoLTE.
- ② **The other party's image**
Depending on the other party's setting, a substitute image may be displayed.
 - When the other party's image cannot be received,  appears.
- ③ **Your own image**

4 Switch cameras

Switch the cameras for the image to send to the other party from the front side or back side.

5 End

End a call.

6 Menu

Display the menu for calling screen.

-  tap "Switch to voice call" to switch to voice call.
-  tap "Dialpad" to turn off the camera and display the dial screen.
-  tap "Switch audio output destination" to switch audio output ports.
-  tap "Camera OFF" to stop sending video to the other party.
-  tap "Switch video area" to switch "Your own image" display area and "The other party's image" display area.

7 Call duration

8 Mute

Your voice cannot be heard by the other party.

Note

- While talking on a video call, tap the video screen to switch between display video full screen and cancel full screen.
- While talking on a video call, if the application is switched from "Phone", the video will not be sent to the other party any more.
- While talking on a voice call, if the other party switches it to the video call, a popup screen will appear to confirm that it has been switched to video call. Tap "Allow" so that it becomes video call screen.

Call Logs

On the Recent calls screen, you can check logs of dialed calls, received calls, missed calls in the list.

- Up to 500 items can be displayed.

1 From the Home screen, "Phone" ► "Recent calls" tab



1 Phonebook

Activate "docomo phonebook" application.

2 Tab

"Dial" tab: The dial screen is displayed (P99).

"Recent calls" tab: Recent calls screen is displayed.

"Favorites" tab: Contacts list added to the Favorites is displayed.

3 Switch logs

- Switch display between Incoming and Outgoing.
- Tap "All" to display all incoming/outgoing call logs.

4 Name, Phone number, Call date and time

- Tap to open the Recent calls screen. Tap an item on the Outgoing screen to make a call, send an SMS, make a video call, save in the phonebook, show profile screen, etc.
- Touch and hold an item to set "Edit number before call", "Delete from call log", "Register as blocked number", "Register to Favorites", "Search location", etc.

5 Menu

Display menu.

6 Outgoing, incoming, missed calls

The difference between voice and video calls are not shown.

7 Voice call key

Make a voice call to the number in the call log.

Deleting History

- 1 From the Home screen, "Phone" ► "Recent calls" tab
- 2 ☰ ► "Delete log"
- 3 Place a check mark in the history to be deleted or in "Select all" ► "Delete" ► "Delete"
 - The history is deleted and it goes back to "Recent calls" tab screen.

Answering Memo

When you cannot answer a call, playback reply message and record an answering memo.

- 1 From the Home screen, "Phone" ► ☰ ► "Call settings"
- 2 "Answering memo"
- 3 Place a check mark in "Answering memo"
 - "Answer time": Available to set from 0 to 120 seconds.
 - "Reply message": Set a reply message during an incoming call.

Note

- You can record a piece of answering memo up to 60 seconds with total 20 pieces of answering memos. However, if there are answering memos which have been played, when saving the next answering memo, those which have been played are deleted from the oldest one so that the new one can be saved.
- If you answer a video call by answering memo, the call automatically switches to a voice call and the message is recorded.

- To check the answering memo you recorded, drag or swipe the status bar downward with  displayed on the status bar ► "New answering memo", or from the Home screen tap "Phone" ►  ► "Call settings" ► "Answering memo" ► "Play answering memo". Tap a answering memo to playback and tap again to stop playback.
- To delete the recorded answering memo, from the Home screen, "Phone" ►  ► "Call settings" ► "Answering memo" ► "Play answering memo" ►  ► "Select all" or place a check mark in a answering memo you want to delete ► "Delete" ► "Yes".

Call Settings

Set call settings.

- 1 From the Home screen, "Phone" ►  ► "Call settings"

Network service	Voice mail service*	Set to activate/deactivate this service.
	Call forwarding service*	Set to activate/deactivate this service, or change forwarding number.
	Call waiting*	Set to activate/deactivate this service, or confirm settings.
	Caller ID notification	Set caller ID notification or confirm settings.
	Nuisance call blocking service	Register, delete or confirm number of registrations.
	Caller ID display request service	Playback a guidance to inform the caller to show his phone number, then end the call automatically.
	Second call settings*	Set to activate/deactivate this service, or confirm settings.

Network service	Call notification	A missed call is notified by SMS when the power is off, when you are out of service or when it is unavailable to receive a call.
	English guidance	Guidance such as voice guidance or Network service guidance is played back in English.
	Remote operation settings	Set remote operation settings to operate remotely from a docomo mobile phone, a fixed line telephone or an NTT pay phone.
	Public mode (power OFF) settings	While the terminal is OFF or in Airplane mode, a guidance message indicating that the receiver is in a place where power should be turned off is heard on the caller's terminal and then the call ends.
Roaming settings		(P251)

SOUND & VIBRATION SETTINGS	
Phone ringtone	Set phone ringtone.
Vibrate on ring	Set to vibrate or not with an incoming call.
Dialpad touch tones	Set to turn on dialpad touch tone or not when tapping dial pad.
INCOMING CALL SETTINGS	
Answering memo	(P110)
Reject call setting	Reject unregistered incoming calls.
Reject SMS	Reject an incoming call and edit reject SMS message.
OUTGOING CALL SETTINGS	
Sub address settings	Set delimiter when calling with a sub address. "*" is a separator for sub address.
Prefix settings	Edit, add or delete a prefix. Register an international number to add before calling.

OTHER SETTINGS	
Call mode setting	Set whether to use VoLTE when VoLTE calling is available.
Call time	Display or reset the cumulated call time. Set whether to reset the cumulated call time on the first day of each month.
Contact docomo	Inquire DOCOMO about malfunctions, loss/theft while overseas. Also you can call General inquiries to DOCOMO.
Open source licenses	Open source license is displayed.

* Not available for video call.

Phonebook

Manage various contact information such as names, phone numbers or mail addresses using "docomo phonebook" application provided by DOCOMO.

- For using the cloud service on phonebook, docomo phonebook application is required.
- When you activate "docomo phonebook" for the first time (including after resetting the application), "Use of Cloud" screen appears and set to use Cloud.

Registering to Phonebook

Register a new contact.

- 1 From the Home screen, "Apps" ► "docomo phonebook" ► "Contacts" tab
- 2 "Register"

The screenshot shows the 'Edit profile' screen with the following elements and callouts:

- 1**: Points to the 'Account' field showing 'docomo' with a 'Set' button.
- 2**: Points to the 'Image field' showing a Mickey Mouse icon with a 'Set' button.
- 3**: Points to the 'First name' input field.
- 4**: Points to the 'Phone' section header.
- 5**: Points to the 'Mobile' dropdown menu under the 'Phone' section.
- 6**: Points to the 'Preset ringtone' field under the 'Ringtone' section, with a 'Set' button.
- 7**: Points to the 'Add other items' button under the 'Others' section.

At the bottom are 'Cancel' and 'Save' buttons.

1 Account

A saving account appears.

- Tap "Set" to select an account.

2 Image field

Tap "Set" to register an image. To take a photo, tap "Take photo". To select a saved image, tap "Select picture".

3 Last name, first name

4 Label key

Select a content label (item).

5 Input field

Input phone number, mail address, address, etc.

6 Ring tone setting button

7 Add other items


Input the address, nickname, memo, etc.

3 "Save"

Confirming/Using Contacts

1 From the Home screen, "Apps" ► "docomo phonebook"

- A contact list screen appears.

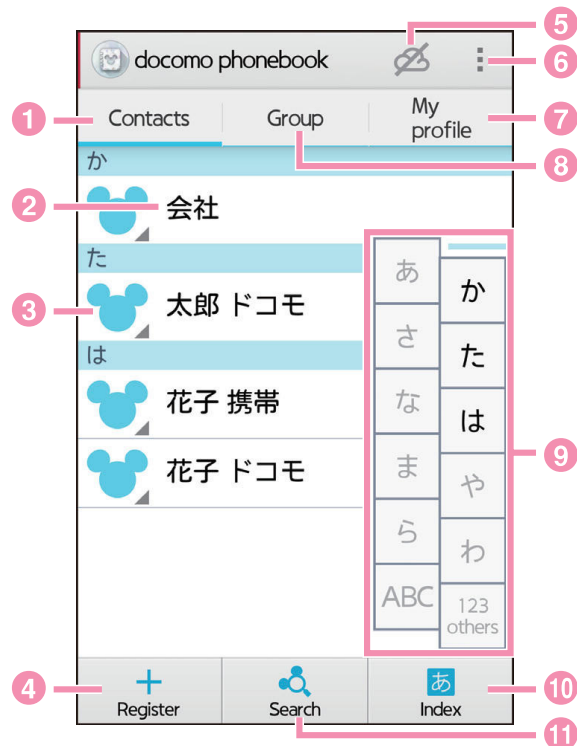

1 "Contacts" tab

Display the contact list screen.

2 Name registered in the phonebook

3 Photo set in the phonebook

By tapping the other party's image registered in the phonebook and then tapping the icon, you can make a call, create SMS or email, etc.

4 Register (P113)

Add new contacts.

- If you have registered more than one account, select one to add a new contact to and complete the required items.

5 Start/Stop synchronize cloud

6 Menu

Display menu.

7 "My profile" tab (P118)

Profile screen appears. You can check the phone number, edit/manage your own profile information.

8 "Group" tab (P117)

Tap to select a group and display the contacts in groups.

9 Index character display area

Tap "Index" to display index characters by which you can search a name in the order of the Japanese syllabary, alphabet, etc.

10 Index

Display the index character display area.

11 Search

Search contacts.

2 Tap a contact to confirm or use

- Profile screen is displayed.
- Tap "Edit" to edit contacts.
- Tap  in phone number field to make a call. Or tap the phone number to create SMS or make video call.
- To create a mail, tap a mail address and select an application.

Change Displayed Account on Phonebook

You can set to display or to hide the contacts included in a group of a specific account or a Google account.

- 1 From the Home screen, "Apps" ► "docomo phonebook" ► "Contacts" tab
- 2  ► "Settings" ► "Accounts to display"
- 3 Set an account to display

Deleting Contact

- 1 From the Home screen, "Apps" ► "docomo phonebook" ► "Contacts" tab
- 2 Tap a contact
- 3  ► "Delete" ► "OK"

Note

- On "Contacts" tab,  ► "Delete" ► "Select all" or place a check mark in the contact you want to delete ► "OK" ► "OK".

Adding/Editing a Group

- 1 From the Home screen, "Apps" ► "docomo phonebook" ► "Group" tab
- 2 "Add group"
 - To edit a saved group
Tap a group you want to edit ► "Edit" ► Edit and then tap "OK".
 - To delete groups
⋮ ► "Delete group" ► place check marks in the groups you want to delete ► "OK" ► "OK".
 - To change display order of groups
"Sort" ► Tap a group ► Drag the group to a desired place ► "OK".
- 3 Select an account ► Enter a group name ► Select an icon and color
- 4 "OK"

Note

- You can set color or icon to a created group or change order in the group list only for the groups saved in docomo account.

Adding contacts to group

- 1 From the Home screen, "Apps" ► "docomo phonebook" ► "Group" tab
- 2 Tap a group ► "Add member" ► place check marks in the contacts to add ► "OK" ► "OK"

Note

- Only contacts saved in docomo account or Google account can be added to the group.

Deleting contact from group

- 1 From the Home screen, "Apps" ► "docomo phonebook" ► "Group" tab
- 2 Tap a group ► "Delete member" ► place check marks in the contacts to delete ► "OK" ► "OK"

Registering My Profile

You can confirm your phone number, and add, edit or delete your profile information.

- 1 From the Home screen, "Apps" ► "docomo phonebook" ► "My profile" tab
- 2 "Edit" ► Enter the required items ► "Save"

Importing/Exporting Contacts

Import contacts or send the contacts as the contact data (vCard) between docomo nano UIM card and this terminal.

- 1 From the Home screen, "Apps" ► "docomo phonebook" ► "Contacts" tab
- 2  ► "Import/Export"
- 3 Perform the following operations
 - To import contacts
 - "Import from SIM card"/"Import from SD card" ► Select a location to save
 - If "Import from SD card" is selected, import contacts from microSD card.

- If you do not set up Google account, a saving location selection screen does not appear. It is saved to docomo account.
- When multiple contacts data (vCard) are saved in the microSD card, a phonebook selection screen appears. Follow the on-screen instructions to select import method.

■ To export contacts

Tap "Export to SD card" ► Select export method ► "OK" ► Operate following the on-screen instructions.

■ To send as contact data (vCard)

"Share phonebook data" ► Select a sending method.

Mail/Web Browser

docomo mail

You can send and receive emails using an i-mode mail address (@docomo.ne.jp).

You can use pictogram and Deco-mail®. Mails can be received automatically.

Since sent/received mails are stored to docomo mail server, your mails can be transferred easily in case the terminal is lost or you change the model. With docomo ID, you can use mail with PC, tablet, etc.

For details, see NTT DOCOMO Website.

- 1 From the Home screen, "docomo mail"
 - After that, follow the on-screen instructions.

Note

- Follow the procedures below to change the docomo mail screen theme to "Disney Window Fantasy" theme.
From the Home screen, "docomo mail"
▶ "More" ▶ "Mail settings" ▶ "Display settings" ▶ "Theme" ▶ "Disney Window Fantasy" ▶ "OK" ▶ "OK".

SMS

You can send/receive text message to/from mobile phone number as a recipient.

- * For details of available number of characters, etc, refer to "Short Message Service (SMS)" on NTT DOCOMO website.

Sending SMS

- 1 From the Home screen, "Apps" ▶ "Messaging"
 - The "Messaging" screen is displayed.
- 2 
- 3 Tap "To" box to enter a recipient's phone number
 - A list of contacts beginning with the entered number or name is displayed.
 - Tap  to display phonebook and select a recipient.
- 4 Enter a message in "Enter message" box

5 "Send"

- The message is sent.

Note

- Default message application can be changed to Hangouts. → P209
- While entering a message,  ► "Insert smiley" to insert a smiley.
- To notify whether messages (SMS) are received, from "Messaging" screen  ► "Settings" ► "Notification settings" and place a check mark in "Notifications".
- You can also send/receive text messages to/from customers using overseas network operators. For available countries/overseas network operators, see NTT DOCOMO website.
- To send SMS to users of overseas network operators, enter "+" ► "Country code" ► "Recipient's mobile phone number". If the mobile phone number begins with "0", enter the number excluding the first "0". You can also send an SMS by entering "010", "Country code" and "the recipient mobile phone number".

Receiving/Viewing SMS

1 From the Home screen, "Apps" ► "Messaging"

- The thread (recipient who send or receive messages) list is displayed on the "Messaging" screen.

2 Tap a thread

- A message appears.

Changing SMS Settings

- 1 From the Home screen, "Apps" ► "Messaging"
 - "Messaging" screen is displayed.
- 2  ► "Settings"
- 3 Change the settings if necessary

Notification settings	Notifications	Set to display the notification of new messages or not.
	Message pop-up*	When sending/receiving a message, set to display a new message as a popup or not. On the popup screen, you can reply, display the sender and message contents, and clear the popup screen.
	Preview*	Set to display the message text or not when receiving a message.

Notification settings	Notification sound*	Set ring tone when receiving a message.
	Vibrate*	When receiving a message, set to notify by vibration or not.
	Repeat alert*	Set to notify repeatedly or not.
Storage		Set to delete the old messages or not when the received messages reached maximum settings in "Text message limit".
Text message		Set to request a delivered confirmation report for all messages that are sent or not, and set the message center.

Conversation theme	Set thread wallpaper and bubble style. • Tap "Gallery"/"Camera" in "Wallpaper" tab to set a still image saved on this terminal or taken by the camera as the thread wallpaper.
Quick message	Add/edit a phrase.
Connect to URL	Set to open a web page by tapping a URL in a message or not.
Send message with Enter key	When it is not connected to Bluetooth® keyboard, set to send a message via Enter key or not.

* Only available to set up when placing a check mark in "Notifications".

Email

You can set a POP3- or IMAP-compatible Email account provided by a general service provider to send/receive email.

Setting Email Account

Get the necessary information for settings beforehand from your service provider.

- 1** From the Home screen, "Apps" ► "Email"
 - The "Select email provider" screen is displayed.
- 2** Select a provider
- 3** Input an Email address and its password, etc.
- 4** "Manual setup"/"Next"
 - Follow the on-screen instructions.
 - Select account type when tapping "Manual setup". Follow the on-screen instructions to make the settings. For information about the settings, contact your service provider.

Note

- You can change the settings later. For details, refer to "Setting account" (P125).

Displaying Received Email

- 1 From the Home screen, "Apps" ► "Email"
 - New emails are received automatically.
- 2 On "Inbox" screen, tap an email
 - The message is displayed on email screen.

Note

- When the acquisition interval of "Update schedule" is set to "Manual", new messages will not be received automatically (P125).
 - * To receive mails with "Inbox" screen being displayed,  ► "Refresh".
- If you have registered more than one account, on "Inbox" screen, "Inbox" ► tap a registered account and change it.

Creating and Sending Email

- 1 From the Home screen, "Apps" ► "Email"
 - "Inbox" screen is displayed.
- 2 
- 3 Tap "To" box to enter a recipient's email address
 - A list of address beginning with the entered number or name is displayed.
 - Tap  to display phonebook and select a recipient.
- 4 Enter a subject in the "Subject" box
 - Tap  (Importance: normal)/  (Importance: high)/  (Importance: low) to set the importance order of mail.
- 5 Enter a message in the message box
- 6 
 - The email is sent.

Note

-  appears on the right side of "To" box if an invalid email address is entered. Check the email address and correct it.

Adding an Account

You can add more than one account on "Email" application.

- 1** From the Home screen, "Apps" ► "Email"
 - The "Inbox" screen is displayed.
- 2**  ► "Settings"
- 3** "Add account"
- 4** Select an email provider
- 5** Enter an email address
- 6** "Manual setup"/"Next"
 - Follow the on-screen instructions.
 - Select an account type when tapping "Manual setup". Follow the on-screen instructions to make the settings. For information about the settings, contact your service provider.

Changing Email Settings

Basic settings

- 1** From the Home screen, "Apps" ► "Email"
 - The "Inbox" screen is displayed.
- 2**  ► "Settings" ► "General settings"
- 3** Change the settings if necessary

Set default account	Set the default account settings.
Select download storage	Select a download destination for the attached files.
Email preview	Set the number of lines to show an email preview.
Conversation view	Set to display the sent/received mails of the same subject on one thread or not.
Split view	Set to split view or not when displaying by landscape screen.

Load linked images	Set to display the image which is linked to an email or not.
Ask before deleting	Set to display the confirmation screen or not when deleting an email.
Auto-advance	Select a screen to display after deleting/moving an Email.
Resize image	Set the file size of an image attached to an Email.
VIP settings	Even when the Email notification is set to OFF, the received mails are notified from the senders that have been registered on the VIP list.
Trusted certificates	A trusted certificate is displayed.

Setting account

- 1 From the Home screen, "Apps" ► "Email"
 - The "Inbox" screen is displayed.
- 2 ⓘ ► "Settings" ► tap an email account
- 3 Change the settings if necessary

DISPLAY NAMES	
Account name	Set account name.
Your name	Set user name.
Use signature	Set to use signature or not.
Signature	Edit signature contents.
SYNC, SEND & RECEIVE	
Update schedule	Set retrieve interval for inbox.
Number of emails to show^{*1}	Set the number of emails to display.

Days to sync email*2	Set the number of days to synchronize the Emails.
Message size limit	Set message size.
Delete from server*1	Set the timing to delete from server.
Download over Wi-Fi*2	Set to download the attached file or not when Wi-Fi® is connected.
File size for Wi-Fi download*2	When "Download over Wi-Fi" is ON, set file size for files downloaded via Wi-Fi®.
Account & sync	Synchronize data with other accounts or delete accounts.
Auto resend times	Set the number of times for auto sending.
Always Cc/Bcc me	Set to always add yourself to Cc/Bcc or not.
Security settings	To protect Emails, set a digital signature or encryption.

NOTIFICATION SETTINGS	
Notifications	Set to show the notification or not with an incoming email.
Notification sound	Set notification sound.
Vibrate	Set to vibrate or not with an incoming email.
SERVER SETTINGS	
Incoming server settings	Confirm the incoming server settings.
Outgoing server settings	Confirm the outgoing server settings.
REMOVE	
Remove account	Delete an account.

*1 Displayed only with POP3 account.

*2 Not displayed with POP3.

Gmail

Gmail is an online email service of Google. You can send and receive emails by using Gmail preinstalled in this terminal.

- To use Gmail, you need to set up the mail address. When the mail address setting screen is displayed, follow the on-screen instructions to set up before implement the Gmail.
- For details on Gmail, from Gmail screen,  ► Tap "Help & feedback" to refer.

Opening Gmail

- 1** From the Home screen, "Google" ► "Gmail"
 - When a screen which shows new functions of Gmail is displayed, follow the on-screen instructions to operate it.
- 2** Tap an email you want to read
 - Content of the selected email appears.

Creating and Sending Gmail

- 1** From the Home screen, "Google" ► "Gmail"
- 2** 
- 3** Enter email address in "To" box
- 4** Enter a subject in the "Subject" box
- 5** Enter a message in the "Compose email" box
- 6** 
 - The mail is sent.

Early Warning "Area Mail"

Area Mail is a service with which you can receive emergency earthquake flash reports delivered by the Meteorological Agency etc.

- Area Mail is a free service that does not require application.
- You can save up to 50 mails.
- Area Mails cannot be received when the power OFF, in Airplane mode, during International roaming, while displaying the PIN code entry screen, etc. Also if the terminal is low on memory, receiving Area Mail may fail.
- Unreceived Area Mail cannot be received later.

Receiving Early Warning "Area Mail"

When Area Mail is received, the Area Mail buzzer or ringtone sounds, a notification icon appears on the status bar, and receiving screen opens.

- The Area Mail buzzer or ringtone sounds in maximum volume. The setting cannot be changed.
- The Area Mail buzzer or ringtone sounds even in manner mode (Vibrate only, Do not disturb) at the time of purchase. Setting not to sound in manner mode is available. (P129)

Viewing Area Mail

- 1 From the Home screen, "Apps" ► "Disaster Kit" ► "Early Warning 'Area Mail'"
 - For the first activation, "Using this application" appears. Read the contents and then tap "Agree".

2 Tap an Area Mail

Deleting Area Mail

- 1 From the Home screen, "Apps" ► "Disaster Kit" ► "Early Warning 'Area Mail'"
- 2 Place a check mark in the desired area mail to delete ► "Delete" ► "OK"
 - To select all, tap "Select all".

Setting Early Warning "Area Mail"

You can set whether to receive Area Mail or behavior when Area Mail is received.

- 1 From the Home screen, "Apps" ► "Disaster Kit" ► "Early Warning 'Area Mail'"
- 2  ► "Settings"
- 3 Change the settings if necessary

Receive setting	Set whether to receive Area Mail.
Beep tone	Set the buzzer sound, ring time of beep tone and the performance of manner mode (Vibrate only, Do not disturb).
Check screen image and beep tone	Check receiving screen and buzzer or ringtone for Earthquake Early Warning, Tsunami Warning and Disaster/Evacuation information.

Browser

Browser allows you to view web pages in the same way that you do on a PC.

On the terminal, web browser can be used via a packet communication or Wi-Fi® connection.

Opening Browser

- 1 From the Home screen, "Internet"
 - A web page is displayed.



- 1 **Search box**

Tap to display the search box. Enter the text or URL to search, and a list of web pages or search candidates that match the entered characters are displayed.

Tap one from the list or entering the entire URL, and tap "Go" to display the web page.
- 2 **Maximum/minimum screen**

Tap  to change to minimum window display.

Then tap  to change it to full screen display.

3 Switch windows

It switches to the window you selected to access to a web page in case of multiple windows. Tap  to close the window.

4 Menu

Display browser menu (P132).

Note

- When search box and icon are not displayed on the top of the screen, scroll the browser screen downward to show them.
- Pinch out or pinch in a web page to zoom in or zoom out the display.
- Even the web page is made for a PC, you can also zoom in, zoom out or scroll the display. For detailed information, refer to "Touch screen operations" (P53).
- Depending on the format and content of a web page, the operations can be different.
- Touch and hold down the text of a web page to select.
The following menus are displayed when the text is selected.
 - "Select all": Select the entire text inside a web page.
 - "Copy": Copy text.

- "Scrap": The text and web page link are saved in QMemo+ (P179).
- "Share": Send text through application or service.
- "Find": Search text inside web page.
- "Web search": Search the text in websites.
- For details about file formats available to display and play back on this terminal, refer to "File format" (P277).

Searching a web page by voice

- 1** From the Home screen, "Internet" ► tap the search box
- 2** 
 - "Speak now" is displayed.
- 3** **Speak the keyword(s) clearly to the microphone**
 - The search keyword result list is displayed.
- 4** **Tap a search keyword result or "Go"**
 - The keyword is input in the search box, and the web pages with the keyword in it are listed.
- 5** **Tap a web page**
 - The selected web page opens.

Opening incognito tab

You can browse web pages without leaving any browsing history or searching history.

- 1** From the Home screen, "Internet" ►  ► 
 - A new tab opens and the description of secret mode is displayed.
- 2** **Input the search words or URL in the search box and display the web pages**

Note

-  is displayed in Search box.
- It does not leave any history with the web page opened in secret tab. Cookie record is deleted when closing the tab. The downloaded files and the web pages added to bookmark can be saved.

Using Browser Menu

- 1 From the Home screen, "Internet" ►
⋮

Forward	The next web page is displayed.
New tab	A new window opens and the most frequently used websites are displayed.
Bookmarks	"Bookmarks" tab is displayed.
Add to bookmarks	Add a web page to bookmarks.
Homepage	Home page is displayed.
Share	Use an application or service to share web page.
Find on page	Enter a keyword to search strings inside the web page.
Desktop view	Website of PC version is displayed.

Save for offline reading	Save a webpage. Tap  ►  ► "Saved pages" tab to display the saved web page.
Capture plus	Capture the entire web page. You can check the captured image from "Capture plus" in "Gallery".
Print	Print out a web page, or save it as a PDF file (P239).
Settings	The setting screen is displayed (P133).
Exit	Exit a web page.

Using Bookmark and History

Add a web page to bookmarks to quickly access to the web page.
You can display browsing history to view web pages your visited previously.

Adding bookmark

- 1 From the Home screen, "Internet" ► display the web pages to be added to the bookmark
- 2  ► "Add to bookmarks"
- 3 Edit name, URL or other items if necessary, and tap "OK"

Opening a web page added to bookmarks

- 1 From the Home screen, "Internet" ►  ► "Bookmarks"
- 2 Tap a bookmark to display

Changing Browser Settings

- 1 From the Home screen, "Internet" ►  ► "Settings"
- 2 Change the settings if necessary

General	Set home page, tool bar and form auto input.
Privacy and security	Set to display/hide the warning screen, clear cache or browser histories, Cookies, etc.
Screen and text	Adjust the screen or font size.
Advanced	Set JavaScript validation, popup block, download storage selection, etc. or return to the initial settings.
Bandwidth management	Set image reading.

Apps

dmenu

This allows you to access easily to docomo's recommended sites or convenient applications.

1 From the Home screen, "dmenu"

- Select a browser and then select "Always" or "Just once".
- The browser launches, and dmenu is displayed.

Note

- Internet via packet communication (LTE/3G/GPRS) or Wi-Fi® is necessary to use dmenu.
- Packet communication fees are charged to connect to dmenu or download the recommended applications. Also, depending on the downloaded application, the packet communication starts automatically.
- There are some paid applications in the recommended applications on dmenu.

dmarket

dmarket sells digital contents such as music, videos, books, and it provides shopping sites and travel booking sites.

- For details of dmarket, refer to the DOCOMO website.

1 From the Home screen, "dmarket"

- When activating dmarket for the first time, the application privacy policy and software license agreement is displayed. Read the contents and place a check mark in "START".

Disney Market

With Disney Market, you can download various contents for free such as "Disneyアプリ (Disney apps)" or Deco-mails®, or view recommended Disney information.

- 1 From the Home screen, "Disneyマーケット (Disney Market)"
- 2 Follow the on-screen instructions to operate

Note

- Contents provided in Disney Market are service provided by The Walt Disney Company (Japan) Ltd.
- Subscription to sp-mode is required to use Disney Market.
- Packet communication charges are incurred separately.
- Part of the contents are charged in the Disney Market.

- If you subscribe charged mobile services on a monthly basis such as Disney official mobile website or smartphone contents provided by Disney, you are charged separately unless you cancel the subscription by yourself.

To cancel, from the Home screen, "Disneyマーケット (Disney Market)" ▶ ≡ ▶ "マイページ (My page)" ▶ "マイメニュー (My menu)" ▶ "退会 (Cancel)" and follow the on-screen instructions to operate.

- Charges may be incurred for using part of options for games in some apps.
- Subscription to the membership for Disney Market is required to use apps provided by Disney (including pre-installed apps).

■ Signing up for Disney Market and inquiring about Disney apps or content

- Disney Internet Service Customer Center: 0570-00-1937
- Business hours: 10:00 to 17:00 (Monday through Friday excluding national holidays, new years holidays)
- * Contact 045-522-1098 from a PHS/part of IP phones/outside of Japan or refer to (<http://disney.jp/dmd/faq/>) (in Japanese only).

Play Store

Google Play enables you to access applications and games you like and download them to install into this terminal.

- To use Google Play, Google account is required (P215).

Installing an Application

- 1 From the Home screen, "Play Store"
- 2 Search application ► tap the application that you want to download
- 3 Tap "INSTALL" (for free applications), or Amount field (for paid applications)
 - The displayed content differs depending on the application.
 - If the application needs to access data and functions on this terminal, the functions used by the application are displayed.
- 4 "ACCEPT"
 - For paid applications, if you have not registered a payment method with your account, additional screen for payment method is displayed. Tap it and follow the on-screen instructions.

- You are taking responsibility when using applications on this terminal starting from downloading and purchasing the applications. Pay special attention to application that is accessing multiple functions or large amount of data.
- If download or installation is finished normally, the notification icon will be displayed in the status bar. Display the notification panel and tap the application name. The installed application opens.

Purchasing an application

- Payment for application is only once. After downloading, you do not need to pay every time when you uninstall or download again.
- If you have another Android device that is using the same Google account, you can download for free on that device once you purchased the application.
- After purchasing application, you can request a refund within a specified time. The application is deleted, and it will not be charged. Requesting a refund is available only once for the first time of purchasing each applications. After requesting a refund to a purchased application, and purchasing the same application again, you cannot request a refund.

- If you need more information about Google Play,  ► "Help & Feedback" when Google Play screen is open.

Note

- Be sure to check the security of application, and then install it at your own risk. This terminal may be infected with a virus and the data may be damaged.
- NTT DOCOMO is not liable for malfunctions, if any, caused by the application you installed. In that case, you need to pay for repair even when it is within guarantee period.
- NTT DOCOMO is not liable for any disadvantage brought to you or any third party due to an application you installed.
- Some applications automatically perform packet communications. Packet communication is kept active unless you disconnect or it is timed out.
- If you need more information about Google Play,  ► "Help & Feedback" when Google Play screen is open.

Uninstalling an Application

- 1 From the Home screen, "Play Store"
- 2  ► "My apps" ► tap the application that you want to uninstall
- 3 "UNINSTALL"
- 4 "OK"
 - When the "REFUND" is not displayed on paid application, the trial period is expired.

Osaifu-Keitai

You can use "Osaifu-Keitai compatible service" for payment or coupon by just holding this terminal and against a store reader, or " かざしてリンク対応サービス (Kazashite-Link services)" for accessing information by holding it against home electrical appliances, smart poster, etc.

Electronic money and point values can be stored on IC cards, or on docomo nano UIM card.

Additionally, you can check credit, balance or points of your electronic money, as well as lock Osaifu-Keitai to prevent any loss.

For details about Osaifu-Keitai, refer to **DOCOMO website**.

- To use Osaifu-Keitai compatible services, it is necessary to make settings through sites or applications.
- If this terminal has a problem, data^{*1} in the IC card and data^{*2} in the docomo nano UIM card may be lost or changed (if this terminal needs repair, terminals with data cannot be accepted, so principally the user needs to delete the data). For more information about reissuing and restoring data, and support for saving and transferring data, contact the Osaifu-Keitai compatible service provider. Please use Osaifu-Keitai compatible services

that provide backup services to save you important data.

- We are not responsible for damages such as lost or changed data in the IC card and in the docomo nano UIM card, or other damages related to Osaifu-Keitai compatible services in any cases including terminal malfunction or terminal replacement.
 - If a terminal is stolen or lost, please immediately contact your Osaifu-Keitai compatible providers for what to do.
 - Attach the Back Cover L40 or the Mickey Window Cover L01. NFC/FeliCa antenna is equipped on the back cover or mickey window cover.
- *1 Data which is stored on the IC cards that Osaifu-Keitai compatible terminals are equipped with
- *2 Data which is stored on docomo nano UIM card

Using "Osaifu-Keitai Compatible Service"

To use Osaifu-Keitai compatible services, from the Osaifu-Keitai compatible site, download the application for Osaifu-Keitai and then configure settings. Some services do not require downloading of an Osaifu-Keitai compatible application.

1 From the Home screen, "Apps" ► "Osaifu-Keitai"

- Obtain service information and update a service list.
- Initial settings may be required at the first startup. Follow the on-screen instructions.

2 Tap a service that you want to use

3 Set service settings

4 Hold mark over the reader

- Communication with the reader is performed.

Note

- You can read/write data with reader without activating Osaifu-Keitai compatible application.
- It is available even when you turn off power of this terminal. It may become unavailable if you have not turned on this terminal for a long period of time or the battery level is low.
- Osaifu-Keitai compatible services can be used even if the docomo nano UIM card PIN code cannot be unlocked, or if the PIN code is locked.
- If sp-mode was not subscribed to, please note that some of the functions of Osaifu-Keitai compatible services might no longer be able to be used.


Using "かざしてリンク対応サービス (Kazashite-Link services)"

Activate "Reader/Writer, P2P" in advance. → P195

- ### 1 Skim a device with NFC module inside or a smart poster over the mark on the terminal

Notes on Holding over Device

Notes when holding over reader, NFC Modules built-in device, etc.

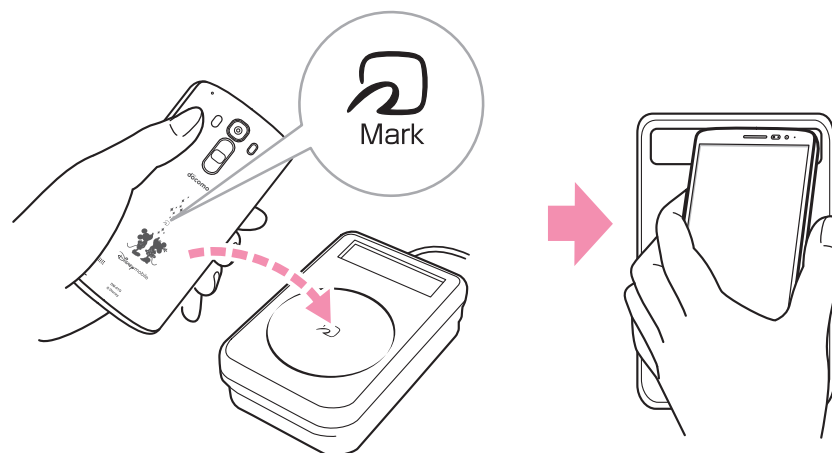

- When holding over  mark, bring it close to the device slowly.
- Hold the  mark parallel to the center of reader. If it cannot be scanned even with it held in front of the center scanner, slightly lift up this terminal, or move it backwards/forwards or to the left/right.
- When there is a metal object between the  mark and the device, reading may fail. Note that putting this terminal into a case or cover may affect communication performance, take it out from case or cover.

Locking Osaifu-Keitai

Use "NFC/Osaifu-Keitai lock" to lock the Osaifu-Keitai service from being used. Locking of Osaifu-Keitai is different from screen lock and UIM card lock.

- 1 From the Home screen, "Apps" ► "Osaifu-Keitai"
- 2 "Lock Settings" ► Enter a password ► "OK"

- Setting password is required for the first activation. Follow the on-screen instructions to set password.

■ To unlock

"Lock Settings" ► Enter the password ► "OK".

■ To change password

From the Home screen, "Apps" ► "Settings" ► "More..." ► "NFC/Osaifu-Keitai settings" ► "Lock password change" ► input the current lock password ► input a new lock password ► "OK" ► input the new lock password again ► "OK".

Note

- While configuring "NFC/Osaifu-Keitai lock",  or  are displayed on the status bar.
- This cannot be unlocked even if the power is shut off.
- If the battery runs down during the configuring of "NFC/Osaifu-Keitai lock", "NFC/Osaifu-Keitai lock" can no longer be unlocked. Be careful of the battery level. Make sure to unlock "NFC/Osaifu-Keitai lock" after charging this terminal. When the power is off, cancel "NFC/Osaifu-Keitai lock" after finishing charging.
- In order to be able to use the Osaifu-Keitai menu during the configuring of "NFC/Osaifu-Keitai lock", the lock needs to be unlocked.
- The password for "NFC/Osaifu-Keitai lock" is not deleted even if the terminal is initialized.
- Since the lock might need to be unlocked and the password might need to be changed, please write down and store the password for "NFC/Osaifu-Keitai lock".

ToruCa

ToruCa is an application that can be used to collect coupon tickets, useful information etc. from your favorite stores. It can be obtained by many ways such as mail, website download, Bluetooth® and IC tag. Update the obtained ToruCa to the latest information simply.

- For details of ToruCa, refer to DOCOMO website.

1 From the Home screen, "Apps" ► "ToruCa"

Note

- Packet communication fee may incur when acquiring, displaying or updating ToruCa.
- When obtaining ToruCa via Bluetooth®, it is required to turn on the Bluetooth® of ToruCa application.
- When obtaining ToruCa via IC tag, you need to place a check mark in "Reader/Writer, P2P" of this terminal. → P195
- Depending on the settings of contents provider, the following functions may not be able to use.
Update, ToruCa sharing, Viewing maps, Acquiring from readers
- ToruCa may not be acquired from readers when Osaifu-Keitai is not initialized.

iDアプリ (iD application)

"iD" is electric money provided by docomo. You can enjoy shopping simply and conveniently only by holding Osaifu-Keitai set with "iD" over the IC card reader in stores. Since up to two types of card information can be set, you can use them separately according to the benefits, etc.

- To use iD with Osaifu-Keitai, setting iD application is required.
- The charges required for iD service (including the annual charge) vary by card issuer.
- The packet communication charge for overseas use differs from the one in Japan.
- For details on iD, refer to iD website (<http://id-credit.com/>). (In Japanese only)

TV (Full seg/1 Seg)

TV is an application that allows you to view Full seg or 1 Seg, switching depending on the reception of the airwaves. Also, interactive service using communication function of mobile devices and receiving detailed information are available.

With Full seg, you can view Digital Terrestrial TV Broadcasting service in high-vision quality. With 1 Seg, you can view Digital Terrestrial TV Broadcasting service for mobile devices.

For details on Full seg/1 Seg service, refer to the website below.

The Association for Promotion of Digital Broadcasting Website:

<http://www.dpa.or.jp/english>

Before Using Full seg/1 Seg

Full seg/1 Seg is a service provided by TV broadcast companies (broadcast stations). Receiving video and audio is free. For more information about NHK reception fees, contact NHK.

There are two types of information displayed in the data broadcasting area: "Data broadcasts" and "Data broadcast sites".

"Data broadcasts" are displayed by broadcast wave for both video and audio, and "Data broadcast sites" are displayed by connecting to the site provided by the TV broadcasting company (broadcast station) through the data broadcast information.

To view "Data broadcast sites", etc. packet communication fees are charged.

Information fees may be required to access some sites.

Broadcast Wave

Full seg/1 Seg is one of broadcast services, and receives radio waves (broadcast waves) that are different from Xi service and FOMA service. Therefore, it is not possible to receive at locations where broadcast waves do not reach or during time zones where broadcasting is off regardless of whether you are in an area with Xi service or FOMA service.

In addition, in areas with digital terrestrial TV broadcast service, reception may be poor or may not be available in the following locations.

- Locations far from the broadcasting tower where the broadcast wave is sent
- Locations where waves are blocked by landscape or buildings such as in the mountains and or near buildings
- Locations where waves are weak such as tunnels, underground, and building basements


Changing the direction of included TV Antenna Cable LO1 or moving to other location may improve signal reception.

TV Antenna Cable L01

When watching TV (Full seg/1Seg), connect the TV Antenna Cable L01 included in this package with this terminal.

1 Insert the connection plug of the TV Antenna Cable L01 into the Earphone/microphone jack of this terminal

- Insert the plug all the way till the end. You may not be able to hear the click if it is not inserted till the end.
- Insert an earphone/microphone plug of 3.5 mm diameter into the earphone/microphone jack of the TV Antenna Cable L01.
- Insert an earphone/microphone plug into the earphone/microphone jack of the TV Antenna Cable L01, and then connect the TV Antenna Cable L01 into this terminal.
- Remove the TV Antenna Cable L01 from this terminal when it is not being used.

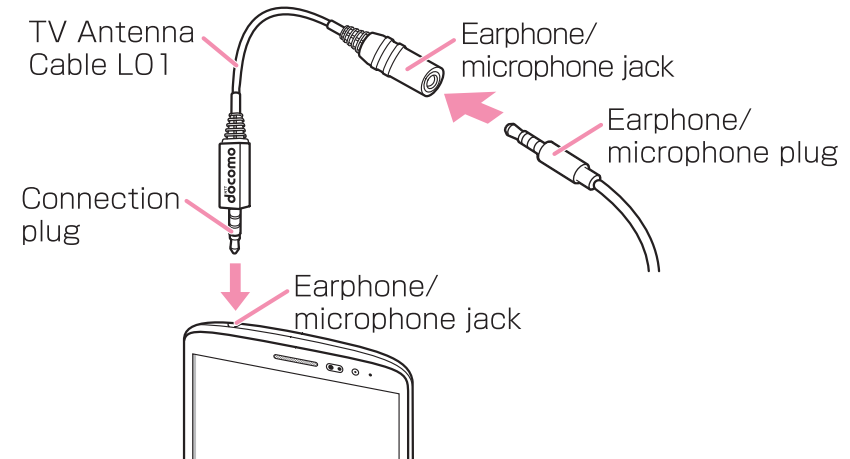

Note

- The TV (Full seg/1Seg) sound is not output on the Bluetooth® devices that do not support SCMS-T format.
- When the TV Antenna Cable L01 alone is connected, the sound will not be output. Output the sound by any of the following methods.
 - When using a Bluetooth® device, first connect the TV Antenna Cable L01 to this terminal and then connect the Bluetooth® device. For details, refer to "Pairing/Connecting with Other Bluetooth® Device" (P232).
 - When using the speaker of this terminal, first connect the TV Antenna Cable L01 to this terminal, and tap  and then .


- When both of the earphone/microphone and Bluetooth® device are connected to this terminal, the sound is output from the device that has been connected later.
- TV (Full seg/1 Seg) is not compatible with the following functions due to copyright protection.
 - Video output via SlimPort supported cable or SlimPort supported accessory
 - Video output via Wi-Fi®-display
 - Screenshot
 - QMemo+
 - QSlide apps

Watching TV (Full seg/1 Seg)


1 From the Home screen, "Apps" ► "TV"

- The TV (Full seg/1 Seg) watching screen is displayed.
- When launching for the first time, you need to select your viewing area.

How to use the watching screen

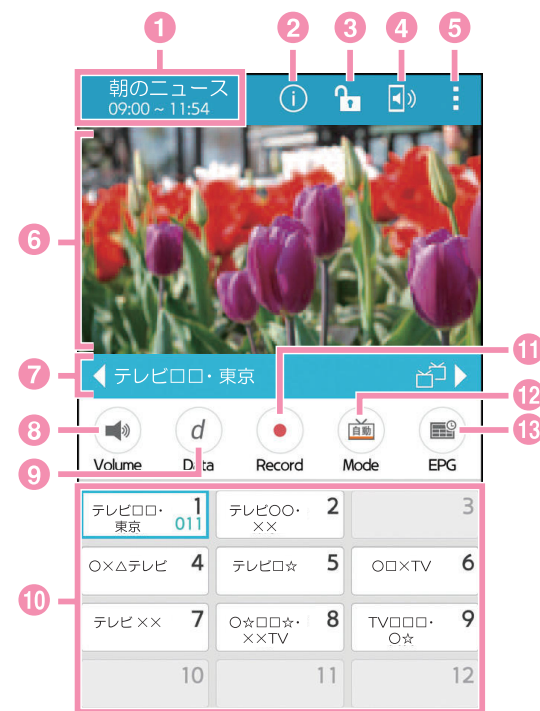

Example of the watching screen (portrait)

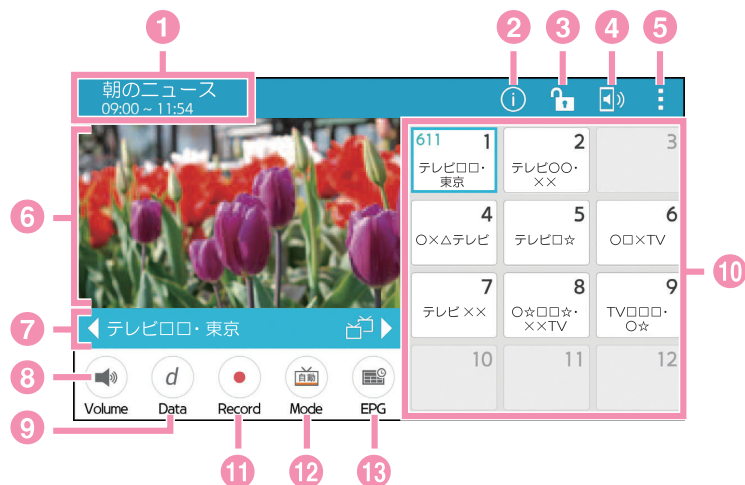

Example of the watching screen
(landscape)



Example of the watching screen
(landscape full-screen)

- 1 Program title and broadcast time**
- 2 Program details**
Tap it to display the program title, channel, broadcast time and the overview.
- 3 Screen lock button**
Lock the TV watching screen when it is full screen display. And then tap to unlock it.
- 4 Speaker ON/OFF button**
- 5 Menu**
A menu is displayed.
- 6 TV broadcast area**
 - Swipe upward/downward on the right part to change the volume.
 - Swipe upward/downward on the left part to change screen brightness.
 - Swipe leftward/rightward to switch channels.
 - Tap the watching screen (horizontal) to change to the watching screen (horizontal full screen).
 - Tap the watching screen (horizontal full screen) to change to the watching screen (horizontal).

7 Channel area

- When watching a channel that supports multiservice, tap  to select a service.
- Tap  /  to switch channel.
- Touch and hold  /  to search the available channels.

8 Volume button

9 Data broadcast button

Tap to display the data broadcast area (P148).

10 Channel list/program list area

Tap the channel list/program list switch button to display the channel list/program list.

■ Channel list

- Tap a channel to switch it.
- Touch and hold a channel to select the its channel services.

■ Program list

-  is displayed in the program you are watching.
- Tap a program to display its details. "Reservation" ► "Record" / "Watch" to reserve recording/watching.  /  is displayed in the program you reserved for recording/watching.

11 Record/Stop button

Tap to start/stop recording.

- Stop button does not function for the first five seconds after starting recording.

12 Receiving mode button

Tap the button to switch "Auto" / "Full seg" / "1 seg".

13 Channel list/program list switch button


"Using Program Schedule" → P149

14 Subtitles

Display caption when viewing a close-captioned program.

Viewing the data broadcast screen

Tap data broadcast button on the TV (Full seg/1Seg) watching screen to display the data broadcast screen.

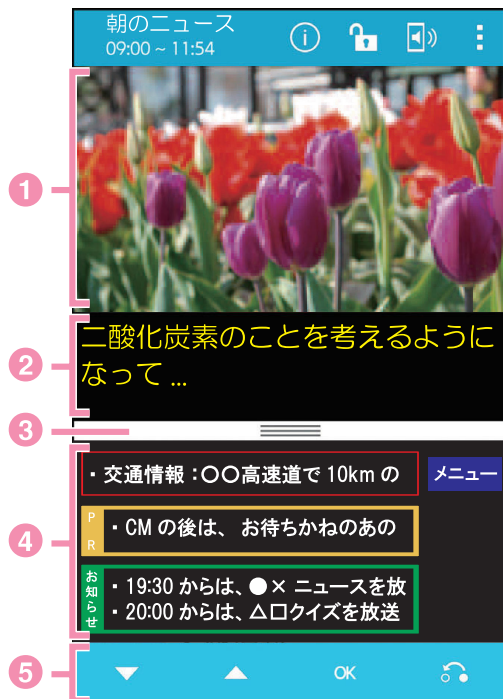

Data broadcast screen
(1Seg) example



Data broadcast screen
(Full seg) example

- 1 TV broadcast area**
Tap to display the TV (Full seg/1Seg) watching screen.
- 2 Subtitles**
Display caption when viewing a close-captioned program.
- 3 Scroll bar**
Swipe or drag up to display the data broadcast in full screen mode.
- 4 Data broadcast area**
Tapping directly on the content of the data broadcast may allow you to operate.

5 Data broadcast operation button

■ 1Seg

- Adjust the cursor with "▲"/"▼" and tap "OK" to select an item. The broadcast data of the link displays.
- Tap  to return to the link.

■ Full seg

- Align the cursor with an item via "^"/"v"/"<"/">", and tap "OK" to select an item. The data broadcast of the link will be displayed.
- Tap  to display Num. To go back to the previous display, tap .
- Tap  to decrease the data broadcast operation button and display it. To go back to the previous display, tap .
- Tap  to return to the link source.
- Tap  to end the data broadcast screen.
- Tap  (blue/red/green/yellow) to operate the corresponding color.

Using Program Schedule

You can view a TV guide of both terrestrial TV programs and BS digital broadcast programs. You can make reservations for recording and viewing.

- 1 From the Home screen, "Apps" ► "TV"
- 2 Tap the button to switch channel list/program list
 - Program list is displayed.
- 3 Tap a program
 - Program information is displayed.
 - "Reservation" ► "Record" / "Watch" to reserve recording/watching.

Watching Recorded Programs

Recorded programs can be watched and deleted by using the Television box.

- 1 From the Home screen, "Apps" ► "TV"
- 2  ► "TV box"
- 3 Tap the program being watched

Deleting recorded programs

- 1 From the "TV box" screen, tap 
- 2 Place a check mark to the program to be deleted
- 3 "Delete" ► "Yes"

Note

- From the "TV box" screen,  ► place a check mark in "Select all" ► "Delete" ► "Yes" is tapped, all recorded programs can be deleted.
- From the "TV box" screen,  ► "Title"/"Date"/"Size" is tapped, the recorded programs can be rearranged.
- Tap  on the "TV box" screen to check the used space and free space of the internal storage, and the estimate recording time.

Reserving Recording/ Watching

Choose start time/end time and a channel and reserve a program to record/watch, then follow the settings to start recording/watching.

- 1 From the Home screen, "Apps" ► "TV"
- 2  ► "Reservation list"
- 3  ► set the settings if necessary

Reservation type	The record and watch presets can be switched.
Mode	Select a mode to receive data.
Available recording time	Check the estimate recording time.
Channel	Select channel.
Start Time	Set the start date/time.
End Time	The ending date and time can be set. • Can only be set when the presetting recording.

Program name	Enter the program name.
Repeat	Set a recording/viewing reservation repeatedly at the same time period on a specific day of the week.

4 "Save"

Note

- If the device is not ON when the preset time is achieved, recording/viewing cannot begin, nor can notifications of the beginning of programs be given.
- TV (Full seg/1 Seg) recordings can only be saved in the internal storage. Recorded images can only be watched on the device.
- Be aware that redundant presetting cannot be done.

Confirming/editing reservation contents

- 1 From the "Reservation list" screen, tap a viewing reservation
 - Edit reservation contents and tap "Save".

Deleting reservation contents

- 1 From the "Reservation list" screen,

- 2 Place a check mark in "Select all" or the recording/viewing reservation that you want to delete
- 3 "Delete" ► "Yes"

Using TV Link

Some data broadcasts may show link information (TV link) to related sites. By registering a TV link, it is possible to connect to related sites later.

- To register a TV link, tap the item that can be registered for the TV link that is displayed in the data broadcast area.
- The TV link can only be used with 1 Seg.

- 1 From the Home screen, "Apps" ► "TV"
- 2  ► "TV link"
- 3 Tap a TV link
 - Connect to the registered site.

Note

- From the "TV link" list screen, touch and hold down a TV link ► "Delete" ► "Yes" to delete.
- From the "TV link" list screen,  ► place a check mark in "Select all" ► "Delete" ► "Yes" to delete all TV links.

Switching Viewing Area

- 1 From the Home screen, "Apps" ► "TV"
- 2  ► "Change area"
 - When adding new area, .
- 3 Select an area
 - The viewing area changes.

TV (Full seg/1Seg) Settings

- 1 From the Home screen, "Apps" ► "TV"
- 2  ► change settings if necessary

Scan	Scan the channel and obtain the data again.
G guide	The G guide program schedule screen is displayed.
TV box	Watch or manage the recorded programs.

Reservation list	Choose a channel and time and reserve a program to record/watch.
TV link	The registered TV link list is displayed.
Change area	Add or change the watching area.
Auto-off	Set the time to end TV automatically.
Subtitles	Set on/off for subtitles. • Subtitle display is only available for full screen display or data broadcast screen.
Multiple sounds	Change sound.

TV settings	Brightness	Set screen brightness. • Place a check mark in "Automatic brightness" so that screen brightness changes automatically as the environment changes.
	Screen size	Set screen size.
	Superimpose	Set whether to use Telop or not. The information such as emergency bulletins or news bulletins are displayed together.

TV settings	CAS Information	While watching Full seg, the required device information of this terminal and the received device information based on each channel are displayed. • Tap "Reset" to receive the channel information again.
	Reset broadcast memory	Delete data registered with the data broadcast and TV links.
	Zip code	Set post code. • Shown in the area information such as whether during Full seg data broadcast.

Camera

This terminal has a built-in camera that can shoot photos and videos. The device is equipped with a laser auto focus which measures the distance between the lens and the subject with a laser so it can focus quickly, and can precisely focus even in dark areas.

Before Shooting

All photos and videos shot on your terminal are saved to the internal storage.

Copyrights and portrait rights

Avoid copyright infringements when copying or editing photos and videos that have been shot on this terminal. You should also avoid infringing the portrait rights of other people by using or modifying their portraits without their consent. Note that the shooting or recording of stage performances, shows or exhibitions may be prohibited, even for personal use.

You may get fined according to law, regulation (nuisance prevention ordinance, etc.) if other people get disturbed or hurt by any improper behavior when using this terminal.

Please be considerate of the privacy of individuals around you when shooting and sending photos using camera-equipped mobile phones.

Notes for capturing images

- Though the camera is manufactured using extremely accurate technology, some dots and lines may always be displayed to be lighter or darker than you expect. Images shot under very low light intensity contain increased noise such as white lines or random dots, but it is not a malfunction.
- This is normal. Clean the lens with a soft cloth before shooting. If the lens is stained with fingerprints or oil, the shot photo may appear out of focus or blurred.
- Do not leave this terminal in a warm place or under a direct sunlight for a long period of time. The quality of shot photos or video may deteriorate.
- If you shoot under a fluorescent light, mercury lamp or sodium lamp flickering at high speed, flickering such as stripes may appear. The color tone of photos or videos may vary depending on the shooting timing.

- Do not expose the lens to direct sunlight for a long period of time and do not point at the sun or a bright light directly. The image may become discolored or the camera may fail to operate properly.
- Do not cover the lens with your fingers or hair when shooting.
- Shooting a fast moving object may result in an image slightly distorted from the image displayed on the screen at the time of shooting, or the image may be blurred.
- When the battery level is low, you may not be able to save shot photos or videos. Check the battery level before using the camera.
- Shot photos or videos may differ from the actual subjects in brightness or color tone.
- You hear shutter sound even when manner mode is set to "Vibrate only" or "Do not disturb".

Viewing Shooting Screen

This camera can take pictures with both horizontal display and portrait display. The meaning of marks (icons, etc.) displayed on the shooting screen are shown below.



(Still image/video screen before shooting)



(Video shooting screen)

1 Display/Hide icons

Display/Hide the icons (2, 3, 4, 5, 8, 9) on the camera screen.

2 Flash on/off/auto switch

Set flash switch.

- Depending on the shooting mode, flash may not be able to be set.

3 Switch cameras

Switch between the front and main cameras.

4 Shooting mode (setting)

Set to Auto/Panorama/Dual.

5 Settings

Set up Dynamic tone (HDR)/Resolution/Voice shutter/Self-timer/Grid display/Invert left and right part of an image and save/Saving location/Gesture view. Also you can check Help of the settings.

- Depending on the shooting mode, there are items that may not be able to set up.
- There are items that only are displayed in the front camera, and also the ones that are not displayed in the front camera.

6 Auto focus frame

The frame is white when adjusting focus. It changes to blue when focus is done.

When the icons (2, 3, 4, 5, 8, 9) on the camera screen are not displayed, tap the screen to put the focus on the tapped place and then take the still image.

7 Thumbnail

- Tap to select an application to use and confirm the still image you took. Also you can edit the still image (P160).
- Touch and hold to display the quick preview screen. Confirm the still images you took, or drag one to  and release your finger to delete it without activating applications such as "Gallery".

8 Recording button

9 Shutter

10 End button

- Tap it on the screen before taking still image/video to end the camera application.
- Tap it while recording a video to stop recording the video.

11 Recording elapsed time

12 Cancel auto focus button

Tap the screen while recording the video to display the button.

Tap the displayed button to cancel the auto focus.

13 Still image button

It is displayed during recording the video. Tap it to capture the moment as a still image.

14 Stop recording button

Stop recording the video.

15 Pause button

Stop the recording temporarily.

Shooting a Photo

1 From the Home screen, "Camera"

2 Point the camera at the subject

- Pinch out/pinch in the touch screen while displaying the recording screen to zoom in/zoom out.

3

- The shutter clicks and a still image was taken.
- You can press volume key (up) or volume key (down) to take pictures.
- View the data you have taken from "Camera" in "Gallery".

Note

- Touch and hold  on the still image shooting screen, or press the volume key (up)/volume key (down) for over one second to take still images continuously.
- When the shooting mode is "Dual", the main camera and front camera can take still images at the same time.
 - Drag the small window to move it.
 - Touch and hold down the small window till it turns to aqua color to adjust the frame size.
 - Tap the small window to switch it to the big window.

Shooting a Video

1 From the Home screen, "Camera"

2 Point the camera at the subject

3 

- The recording start sound plays and Camera starts shooting.
- When the recording starts, the recording elapsed time will be displayed on the recording screen.
- Press the volume key (up)/volume key (down) while recording to take a still image of that moment.
- You can zoom in/out by pinching out/in the touch screen during video shooting.
- Tap  while shooting a video to pause. Tap  to start shooting again.

4 

- The recording stop sound plays and recording stops.
- You can view the videos you recorded from "Camera" in "Gallery".

Note

- When the video resolution is set to "1920x1080 (FHD)"/"1280x720 (HD)"/"Slow Motion (120HD)", a video will be recorded with the preview screen being enlarged. The actual recorded screen size is the same as the screen size during recording.

Gallery

You can display photos or play back videos stored in the terminal that have been obtained by shooting with the camera or downloading from the Internet.

Viewing Photos and Videos

1 From the Home screen, "Apps" ► "Gallery"

2 Tap an album

- Both photos and videos are displayed by thumbnail.
- To view photos or videos shot by this terminal, tap "Camera".
- In album list, tap  to activate camera, then you can take photos or record videos.

3 Tap one of the thumbnails

- Display photos and play back videos.
- You can zoomed in or zoom out a photo by double-tapping or pinching out or in on the touch screen.

Note

- The following operations are available on the photos/video list screen.
 -  : Launch camera to shoot photos or videos.
 -  : Select a photo or a video to share/send.
 -  : Select a photo or a video to delete.
- The following operations are available on the photo display screen.
 -  : Edit the displayed still image.
 -  : Launch camera to shoot photos or videos.
 -  : Select the displayed photo to share/send.
 -  : Delete the displayed photo.
 -  /  : Add to/remove from Favorites.
 -  : Displayed when location information is added. Tap it to display the map, and edit or delete the location information.
- The following operations are available from the photo display screen by tapping .
 - "SmartShare": Use SmartShare Beam to send or receive the still images.
 - "Set image as": Set a photo as a picture in the Phonebook or the wallpaper of the Home screen.

- "Move": Move a photo to another album.
- "Copy": Copy a photo to another album.
- "Copy to Clip Tray": Copy a photo to Clip board.
- "Lock"*: Lock a still image.
- "Slideshow": Display the saved photos by slide show.
- "Rotate left": Rotate a photo to the left.
- "Rotate right": Rotate a photo to the right.
- "Crop": Trim a photo.
- "Add location"/"Remove location": Add or remove location information to a photo.
- "Show on map": When location information is added, confirm the place when this photo is taken.
- "Rename": Edit a photo name.
- "Print": Print a photo by printer.
- "Details": Confirm detailed information of a photo.
- * On the album list screen,  ► "Settings" ► "Set lock" ► follow the on-screen instructions to set the contents lock beforehand.
- For operations when playing back a video, refer to "Playing Videos" (P166).

Media Player

The "Media Player" application plays music files and video files saved in the internal storage or a microSD card. Media Player supports the following file formats.

■ Available file formats

Music files	AAC/AAC+/eAAC+, AMR-NB/WB, FLAC, MP3, MIDI, Vorbis, PCM/WAVE, OPUS, WMA, EVRC, MP2, AC3
Video files	H.263, H.264, H.265(HEVC), MPEG-1/2, MPEG-4, VP8/9, VC-1, Motion JPEG, Theora, XviD

Note

- Some files may not be played even with the supported file format. Also the file list of Media Player may not be able to display.
- Some files are protected by copyright and may not be played.


Copying Music Files and Videos to this Terminal

From Media Player, you can play music files and video files of your own after copying them to the internal storage.

- 1** Connect this terminal with a PC via the microUSB Cable 01 (optional) (P238)
- 2** Set USB PC connection mode to "Media device (MTP)" (P238)
- 3** On PC, open "コンピューター (Computer)" and select phone name of this terminal
 - The driver (Internal storage) in this terminal is displayed.
 - The screen displayed when connecting with a PC may differ depending on the operation environment (OS).
- 4** Create a folder in the root folder of "Internal storage"
 - You can also create a sub folder to manage the files.
- 5** Copy files to the created folder
- 6** Removing this terminal from PC

Opening Media Player

- 1** From the Home screen, "Apps" ► "Media Player"
 - The "Media Player" screen is displayed.
 - For initial activation, the application privacy policy and the software license agreement appears. Read the contents, place a check mark and then tap "Start". Subsequently, the introduction screen for Media Player appears. Tap "使い方の説明を読む (Read how to use)" to check how to use it. If you do not want to read description, tap "説明を読まず使用する (Use anyway)".

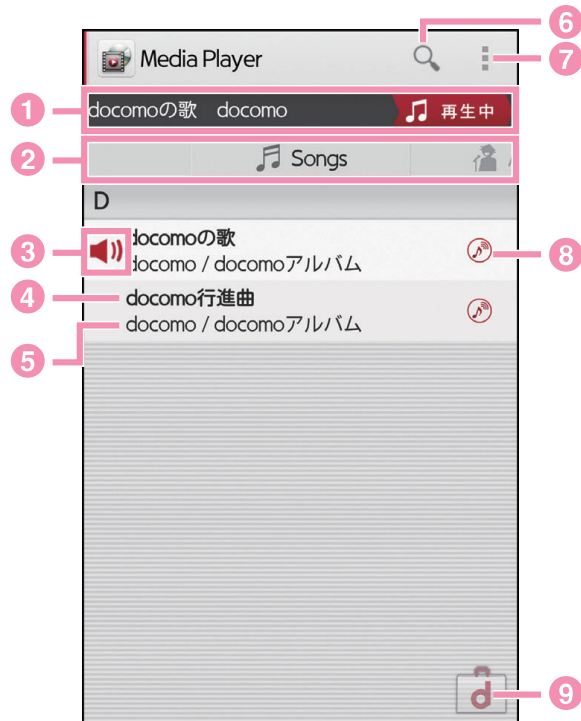

1 Quick play bar

This is displayed when there is music playing/paused. Tap this to display the Music screen.

2 Tabs

Drag or swipe to left or right to display the hidden tabs.

3 Playing/Pausing icon

The music that is being played/paused is displayed.

4 Title

5 Artist name/Album name

6 Search icon

Search contents.

7 Menu

A menu is displayed.

8 Ringtone shortcut menu button

When the music is available to set for ringtone, shortcut menu including ringtone is displayed.

9 dmarket button

Access to d music of dmarket, dTV and d anime store and view TOP, New arrivals, Ranking.

Note


- From the "Media Player" screen, ☰ ► "Sort" to switch the list display between ascending and descending order.
- From the "Media Player" screen, ☰ ► "Search" to access to dmenu and purchase songs.
- From the "Media Player" screen, when a list of albums/videos is displayed, ☰ ► "Thumbnail"/"Playlist" to switch the list display format between thumbnail display and list display.
- From the "Media Player" screen/Music screen/Video screen, ☰ ► "Exit" to close the Media Player.

Playing Music

1 From the Home screen, "Apps" ► "Media Player"

2 "Songs" tab ► tap a song to play back

- The Music screen is displayed and the song is played.

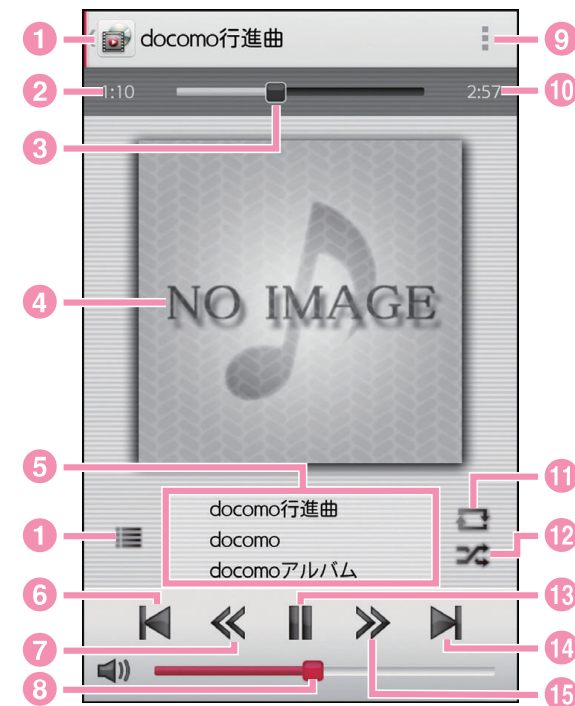

- 1 Return to list**
Return to the song list.
- 2 Elapsed time**
- 3 Play progress bar**
Drag to play a song from a desired point within the song.
- 4 Cover flow**
Tap to display the album information.
- 5 Contents information**
Title/Artist name/Album title are displayed.
- 6 Backward button**
Start playing from the beginning of the current song. Double-tap to start playing from the beginning of the previous song.
- 7 Fast-rewind button**
Rewind a song.
- 8 Volume bar**
Adjust the volume by dragging it.
- 9 Menu**
Menu is displayed.
- 10 Song length**
- 11 Repeat/repeat one song button**
Switch between Repeat all/1 repeat/Repeat OFF.
- 12 Shuffle button**
Turn shuffle play ON/OFF.


- 13 Play/Pause button**
- 14 Next song button**
- 15 Fast-forward button**
Forward a song.

Note

- While a song is playing  is displayed in the status bar.
- While a song is playing, display the notification panel to operate the song.
- From the Music screen,  ► "Settings" ► tap "This song: Ringtone settings" to set the current song to Voice call ringtone, Mail ringtone, docomo/sp-mode mail ringtone settings.

Playing Videos

- 1 From the Home screen, "Apps" ► "Media Player"**
- 2 "Movie" tab**
 - A list of playable videos saved on the internal storage and the microSD card is displayed.
- 3 Tap a video you want to play**
 - The Video screen appears and the video is played.

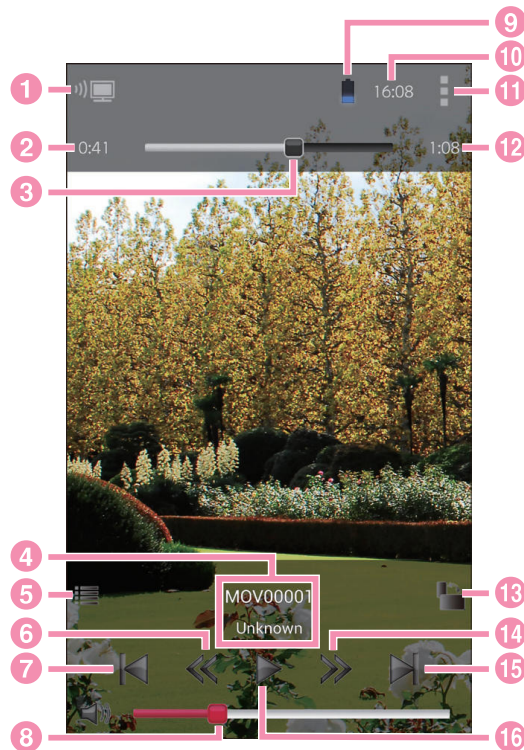

- 1 Miracast settings**
Set Miracast and output the screens and sounds of this terminal to a TV.
- 2 Elapsed time**
- 3 Play progress bar**
Drag to play a video from a desired point of the video.
- 4 Video information**
Display titles/artist names.
- 5 Return to list**
Return to the video list screen.
- 6 Fast-rewind button**
Rewind a video.
- 7 Button for going back to previous video**
Play from the beginning of the current video. Double-tap to play from the beginning of the previous video.
- 8 Volume bar**
Adjust the volume by dragging it.
- 9 Remaining battery**
- 10 Current time**
- 11 Menu**
- 12 Video length**
- 13 Rotation lock button**
Lock/unlock screen rotation.

- 14 **Fast-forward button**
Forward a video.
- 15 **Button for skipping to next video**
- 16 **Play/Pause button**

Note

- When "Background-movie settings" is ON,  is displayed on the status bar while playing a video on the background. Display the notification panel to operate a video (P70).
- Rotate this terminal to change to horizontal screen display while the video playback screen is being displayed. Tap the screen to display/hide the buttons, etc.

Using Playlists

Playlists allow you to play your favorite songs in a desired order.

Displaying playlists

- 1 From the Home screen, "Apps" ► "Media Player"
- 2 "Playlist" tab
 - Playlists are displayed.
 - The following quick playlists are available.

Recently added songs	Display songs that were added in the last two weeks in the order you add them.
Recently played songs	Display songs that were played in the last two weeks with the most recent date on top.
Most played songs	Display songs that were played with the most frequently played song on top.

- 3 Tap a playlist/quick playlist
 - The songs contained in the playlist are displayed. Tap a song to play back.

Creating a playlist

- 1 From the Home screen, "Apps" ► "Media Player"
- 2 "Playlist" tab ► "Add"
- 3 Enter a playlist name ► "OK"
- 4 Tap a song you want to add
 - Tap the "All songs", "Artists", and "Albums" tabs to switch the display list.
 - Tap "Add all songs" to add all songs in the list.
- 5 "Apply" ► "Save" ► "OK"

Editing playlists

- 1 From the Home screen, "Apps" ► "Media Player"
- 2 "Playlist" tab ► tap a playlist to edit
 - The songs contained in the playlist are displayed.
- 3 "Edit"
 - Tap "Edit title" to edit the title.
 - Tap "Add songs to playlist" to add a song to the playlist.
 -  becomes deletable when it turns to red after tapping a song. Tap "Delete selected songs" to delete.
 - Drag  upward and downward to change the song order.
- 4 After finishing editing, "Save" ► "OK"

Deleting/Sorting a playlist

- 1 From the Home screen, "Apps" ► "Media Player"
- 2 "Playlist" tab ► "Reorder/Delete"
 -  becomes deletable when it turns to red after tapping a playlist.
 - Tap "Select all playlists" to delete all playlists.
 - Drag  upward and downward to change the playlist/quick playlist order.
- 3 After finishing editing, "Save" ► "OK"

Note

- Quick playlists ("Recently added songs", "Recently played songs", "Most played songs") cannot be deleted.

Setting Media Player

- 1 From the Home screen, "Apps" ► "Media Player"
- 2  ► "Settings"
- 3 Change settings if necessary

Audio effect settings	Set effects for when playing music.
Ringtone settings	Set a song as a Voice call ringtone, Mail ringtone, and docomo/sp-mode mail ringtone. • Some songs cannot be set as ringtones.
Movie sort settings	Select the order of the video list from "Saved date and time" and "Title".
Movie title display settings	Set how to display the title of video contents.

Background-movie settings	Set whether to go back to the Home screen while playing a video, or whether to continue playing as background when changing to another application.
Arrange tabs	Change the order of the tabs on the "Media Player" screen.
Global data communication	Set whether to allow data communications when using the device overseas.
Update database	Update the Media Player database.
Reset settings	Return the Media Player to its initial settings.
Delete license information	Delete the license information of all the contents played via Media Player.

GPS/Navigation

By using applications that supports GPS function on this terminal, you can confirm the present location or search route to a destination.

In Using GPS

- NTT DOCOMO is not liable for any damage caused by failure of GPS system etc.
- It cannot be used as navigation devices for aircraft, vehicles and people or as a high precision GPS for measurement. Please note that DOCOMO shall not bear responsibility for damages which are pure economic losses which are generated by opportunities missed to confirm positioning results and missed communications due to external factors (including exhausted batteries) such as malfunctions, improper operations and power outages of this terminal if it is used for these purposes or even if it is not used for these purposes.

- Since GPS is governed by the United States Department of Defense, the GPS signals might be controlled (degradation of accuracy, signal blackouts, etc.) according to national security reasons of the US. Also even if positioning is done in the same locations and environments, identical results may not be obtained due to the differences in signal conditions caused by the locations of the satellites.
- Wireless communication products (mobile phone or data detector etc.) may intercept satellite signal and signal reception may not be stable.
- Depending on the legal system of the country and area, the displayed map based on the received location information (lat/long information) may not be accurate.
- Since GPS uses signals from satellites, in the following environments there are locations where signals cannot be received or reception is poor. Thus, the range of error of location information may be over 300 m.
 - In the midst of or underneath dense tree growth, in areas lined with buildings or dense residential areas
 - Inside or underneath buildings
 - Inside of underground tunnels, underground and underwater

- Near high-voltage lines
- Inside of cars and trains
- In poor weather such as heavy rainfall and snow
- Inside of bags and boxes
- Hindrances (people and things) around this terminal

Enabling Location Information

For applications requires access to location information, set if allow to use location information gained from GPS function, Wi-Fi® function and mobile network.

- 1 From the Home screen, "Apps" ► "Settings" ► "Location"
- 2 Turn on "Location"
- 3 "Agree" ► "AGREE"
- 4 "Mode" ► select a location mode

High accuracy (GPS and networks)

Uses GPS, Wi-Fi® and mobile networks to identify current location. Although current location can be detected more accurately, the terminal consumes much power of battery.

Battery saving (Networks only)	Uses Wi-Fi® and mobile networks to identify current location.
Device sensors only (GPS only)	Uses GPS to identify current location.

Note

- It may take up to several minutes to determine current locations when the GPS functions are used for the first time.
- This terminal is equipped with a GPS receiver that uses satellite signals to calculate current locations. Some GPS service functions use the Internet. Data communication fee may occur when transferring data via GPS service functions.
- To use a function which requires a GPS receiver for positioning of your current location, check for an unimpeded view of the sky. Move to another location if your current location is not determined after a few minutes.

- In order to calculate the current location faster, do not move or cover GPS/sub antenna with other objects.
- Select "Device sensors only (GPS only)" to gather the anonymous data while using GPS. To transfer data, note that the packet communication fee may occur.
- Select "High accuracy (GPS and networks)" or "Battery saving (Networks only)" to allow the anonymous location data in Google location information service to be gathered. The data may be gathered even when the application is not activated.

Using Maps

You can display present location, search another place, or search route by using Google map.

- Before getting the current location, set to "Enabling Location Information" (P171).
- To use Google map, you need to connect LTE/3G/GPRS network or Wi-Fi®, and set data communication available to use.
- Google Maps does not work for all nations or regions.

Opening Maps

- 1 From the Home screen, "Apps" ► "Maps"**
 - Tap "ACCEPT & CONTINUE" when "Welcome to Google Maps" screen is displayed.
 - When Google account has been logged in, the "Get the most from Google Maps" screen is displayed. Confirm the details and tap "YES, I'M IN"/"SKIP".
 - When Google account has not been logged in, the "Make it your map" screen is displayed. You can either log in to Google account or tap "SKIP".

2 Input a place in search box

Searching a route

Use the "Directions" function of Google Maps to search the route by car, by train or on foot.

1 From the Home screen, "Google" ► "Maps"

2 ► select from (vehicle) / (mass transit agency) / (walk)

3 Enter starting point in "Choose starting point" box* ► enter destination in "Choose destination" box

- Vehicle: Route is displayed.
- Mass transit agency: Selections are displayed. Tap a selection to display its route.
- Walk: Route is displayed.
- Tap  to switch starting point and destination.

* "Your location" may be entered in "Choose starting point" box.

4 Tap one of the routes displayed at the bottom screen

- Detailed route is displayed.
- Swipe routes at the bottom screen to left or right to show other routes.
- For vehicle and walk, tap "START NAVIGATION" to start navigation.

Note

- Any operation during driving should be performed by a passenger.
- If you have logged in Google account, you can choose a starting point or destination from home, work and history.

Searching spots in the area

You can search stores and facilities in the current location area using Google maps.

1 From the Home screen, "Google" ► "Maps"

2 Tap search box ► After that, follow the on-screen instructions

Clock

You can use Alarm, Timer, World clock or Stopwatch.

1 From the Home screen, "Apps" ► "Clock"

2 Tap a tab at top of the screen

- Tapping switches screen of each function.

Setting Alarm

1 From the Home screen, "Apps" ► "Clock" ► "Alarms" tab

2

3 Change the settings if necessary

Hour/Minute	Change the alarm time setting.
Repeat	Set the alarm to repeat on certain days of the week at the same time.
Snooze duration	Set snooze duration.

Alarm with vibration	Set if vibrate or not while alarm is ringing.
Alarm sound	Set alarm sound.
Alarm volume	Set alarm volume.
ADVANCED SETTINGS	
Auto app starter	Set the application to launch when the alarm is stopped.
Puzzle lock	Set if to undo a puzzle to stop alarm.
Memo	Add memos to alarms that are set.

4 "Save"

- The Alarm list screen is displayed and set alarm is added to the list.
- Tap  /  to set alarm ON/OFF.
- Tap list to display "Set alarm" and edit items. Tap "Save" to overwrite changes and return to Alarm list screen.

Note

- The alarm functions at the time set for the alarm. Tap "Dismiss" to stop the alarm.  is displayed on the status bar when tapping "Snooze". Alarm functions again based on the time duration set in "Snooze duration".
- On the "Alarm list" screen,  ► "Select all" or place a check mark in the alarm to delete ► "Delete" ► "Yes" to delete alarm. When there is only one alarm that has been set,  ► "Yes".

Setting Timer

- 1 From the Home screen, "Apps" ► "Clock" ► "Timer" tab
- 2 Set Hour/Minute/Second
 -  ► Tap "Settings" to set the following settings.

Alarm with vibration	Set if vibrate or not while alarm is ringing.
Alert sound	Set alarm sound.
Alert volume	Set alarm volume.

- 3 "Start"
 - The timer starts.

Note

- The alarm functions at the time set for the alarm. Tap "Stop" to stop the alarm.
- Tap "Stop" while timer is running to stop it. Tap "Resume" to restart. Tap "Reset" to reset timer.

Setting World Clock

You can confirm the date and time for registered cities in a list.

- 1 From the Home screen, "Apps" ► "Clock" ► "World clock" tab
- 2 
- 3 Input a city name in search box ► tap a city
 - City name, current time and date of the selected city are displayed in World clock list screen.

Note

- Touch and hold down the added city ► "Set daylight saving" ► tap settings to set summer time.  is displayed besides the city with summer time set.
- From the World clock screen,  ► "Select all" or place a check mark in the city to delete ► "Delete" ► "Yes" to delete a city. When there is only one world clock that has been set,  ► "Yes".

Setting Stopwatch


- 1 From the Home screen, "Apps" ► "Clock" ► "Stopwatch" tab
- 2 "Start"
 - The stopwatch starts. Tap "Lap" to count lap times.
 - To stop the stopwatch, tap "Stop".
 - Tap "Resume" to restart the stopwatch, and tap "Reset" to reset it.

Calendar

This terminal has a calendar for managing your schedule. If you have a Google account, synchronize data with Google calendar.

Opening Calendar

- 1 From the Home screen, "Apps" ► "Calendar"

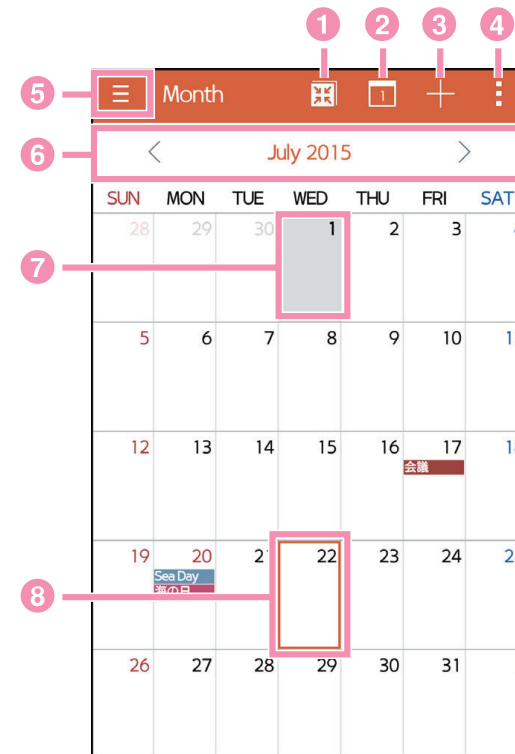

- 1 **Switch QSlide application mode**
- 2 **Icon of today**
Move cursor to today's date (date of icon is changed).
- 3 **Icon to create new**
Create a schedule.
- 4 **Menu**
The menu is displayed.
- 5 **Switch calendar display**
Change the calendar display format to Day/Week/Month/Year/Agenda, display/hide the Japanese holidays or display the schedules of each account.
- 6 **Switch display**
Tap "<"/">" in Day view/Week view/Month view/Year view to display the previous/next day, week, month or year.
- 7 **Date of today**
- 8 **Selected date**

Switching Calendar Display

- 1 From the Home screen, "Apps" ► "Calendar"
- 2  ► "Day"/"Week"/"Month"/"Year"/"Agenda"
 - Tap "Agenda" to display a list of events.
Tap each list to display the content.

Creating a Schedule

- 1 From the Home screen, "Apps" ► "Calendar"
- 2 Tap date/time ►  ► set each item ► "Save"

Note

- When it turns to the time set in "REMINDERS" screen  on schedule making screen, is displayed on the status bar. Drag or swipe the status bar downward to open the notification panel then tap the calendar notification, the Calendar notifications screen is displayed. Tap "Dismiss" to clear notification. Set snooze duration and tap "Snooze" to notify again after it passes the set time.

Changing/Deleting a Schedule

- 1 From the Home screen, "Apps" ► "Calendar"
- 2  ► "Agenda"
- 3 Tap a schedule to change/delete ►  (edit)/  (delete)
 - Tap  to edit contents and then "Save".
 - Tap  and "Yes".
 - On the Calendar screen, tap  ► "Delete" ► "Select all" or place a check mark in schedules you want to delete ► "Delete" ► "Yes" to delete.

Changing Calendar Settings

- 1 From the Home screen, "Apps" ► "Calendar"
- 2  ► "Settings"
- 3 Change settings if necessary
 - Set the calendar display, schedule notification, check the built version or set up an account.

QMemo+

Simply take a memo without activating the memo application. Write characters or draw illustrations directly on a captured screen.

- 1 Open the notification panel (P70) ► "QMemo+"
 - From the Home screen, "Apps" ► "QMemo+" ► "+" to activate it. The tool bar contents are different depending on if it is activated from the notification panel or from an application screen.
- 2 Create a memo



QMemo+ screen (displayed example of activating from notification panel)

- 1 Undo/Redo.
- 2 Edit font, or select a color.
- 3 Select a pen type and a color.
- 4 Use an eraser.
- 5 Display/hide the tool bar.
- 6 Save the memo you created.
- 7 Change the paper style of the created memo, and use an application or service to send it.

Calculator

1 From the Home screen, "Apps" ► "Calculator"

- From the Calculator screen, ► "Scientific calculator"/"Basic calculator" to change functions. If it is landscape display, both basic calculator and scientific calculator are displayed.
- Touch and hold the value or formula displayed in formula display field to cut/copy/paste it or display it on clipboard.
- Tap to delete input numbers or operators one by one.
- Tap ► "Calculation history" to display formula history. When history is displayed, tap ► "Yes" to clear all history.
- Tap to move to QSlide application mode.

docomo backup

Backing up to/Restoring from microSD card

You can move and back up phonebook entries, docomo mails, etc. using external media such as microSD card.

- Do not remove the battery pack or microSD card from the terminal while backing up or restoring data. Data may be damaged.
- When item names in phonebook entry of another terminal (phone number etc.) is different from the terminal, the item names may be changed or deleted. And registered characters may be removed on the copying destination because available characters vary by terminal.
- Phonebook data available to back up is phonebook saved in docomo account and the terminal.
- When backing up phonebook entries to microSD card, data without a name registered cannot be copied.
- Backup may not be performed if the microSD card does not have enough memory. In this case, delete unnecessary files to make available memory.

- Backup or restoration may not be performed if the battery level is low. In that case, charge the terminal then try to back up or restore again.
- When a microSD card is not inserted, data such as still images and videos are stored on the terminal. With this application, image data only stored on the terminal can be backed up. Data stored in microSD card cannot be backed up.

Backing up data

You can back up data such as phonebook entries, docomo mails media files.

- 1 From the Home screen, "Apps" ► "docomo backup" ► "Backup/restore to microSD"**
 - For the first activation, the application privacy policy and terms of use appears. Read the contents, mark the check for "Agree", and tap "Start".
- 2 "Backup" ► place a check mark in the data to be backed up ► "Start backup" ► "Backup"**
- 3 Enter docomo apps password ► "OK"**
 - Selected data is stored in microSD card.
- 4 "Back to top"**

Restoring

Restore data such as phonebook entries, docomo mails, images/videos, etc. to the terminal.

- 1 From the Home screen, "Apps" ► "docomo backup" ► "Backup/restore to microSD"
- 2 "Restore" ► "Select" type of data to restore ► place a check mark in the data to restore ► "Select"
- 3 Select restoration method ► "Start restore" ► "Restore"
 - Selecting restoration method is not necessary for some data types.
- 4 Enter docomo apps password ► "OK"
 - Selected data is restored to the terminal.
- 5 "Back to top"

Copying the contacts from Google account to docomo account

- 1 From the Home screen, "Apps" ► "docomo backup" ► "Backup/restore to microSD"
- 2 "Phonebook account copy" ► "Select" on the phonebook entry to be copied ► "Overwrite"/"Add"
 - Copied data is saved to docomo account.
- 3 "OK"

Backing up Data Storage BOX

Use the data storage BOX to move or back up the call history, music, user dictionary and bookmark.

Backing up

- 1 From the Home screen, "Apps" ► "docomo backup" ► "Backup/restore to docomo cloud"
- 2 "Backup"
 - If you are not logged in, a confirmation screen appears. Log in following the directions shown on the screen.
- 3 Mark data to be backed up ► "Start backup" ► "Backup"
- 4 Enter docomo apps password ► "OK"
- 5 "Back to top"

Note

- With the Scheduled backup setting, you can automatically backup data that you selected in advance to the data storage box, every month.
- When using the Scheduled backup setting, note that packet communication fee may become high.

Restoring

- 1 From the Home screen, "Apps" ► "docomo backup" ► "Backup/restore to docomo cloud"
- 2 "Restore" ► "Select" of data type to be restored ► place a check mark in the data to be restored ► "Select"
- 3 Select restoration method ► "Start restore" ► "Restore"
- 4 Enter docomo apps password ► "OK"
- 5 "Back to top"

Note

- When restoring data from the data storage box, it will be restored to the same location as at the time of backup. Data may be restored to a different location as at the time of backup if you change terminals.

Settings

Settings Menu

From the Home screen of this terminal, "Apps" ► "Settings" to display the "Settings" screen to set different settings.

WIRELESS NETWORKS	(P184)
DEVICE	(P198)
PERSONAL	(P209)
SYSTEM	(P218)

WIRELESS NETWORKS

Set to enable/disable networks and set the network connection settings.

Wi-Fi	(P185)
Bluetooth	(P230)
Mobile data	(P191)
Call settings	(P111)
More...	(P192)

Wi-Fi®

This terminal connects to the Internet via access points for Wi-Fi® networks or public wireless LAN services. To connect, you must configure the access point connection settings on this terminal.

■ Reception interference caused by Bluetooth® devices

- As wireless LAN (IEEE802.11 b/g/n) and Bluetooth® device use the same frequency (2.4 GHz), reception interference may occur or the communications speed may lower. Also, you may hear noise or have a connection problem. In these cases, do the following:
 - Keep the wireless LAN device over 10 m away from the Bluetooth® device.
 - When using within 10 m, turn off the Bluetooth® device.

Note

- Packet communication can be connected, even when Wi-Fi® function is ON. However, while Wi-Fi® is available, Wi-Fi® is prioritized. When the Wi-Fi® network is disconnected, this terminal automatically connects to the LTE/3G/GSM network. Note that if you keep connecting via the LTE/3G/GSM network, you may incur packet communication charges.
- You can reduce battery consumption by turning OFF Wi-Fi® when you are not using it.

Connecting to a Wi-Fi® network

- 1 From the Home screen, "Apps" ► "Settings" ► "Wi-Fi"**
 - When "Wi-Fi tutorial" screen is displayed, tap "Continue" to start a tutorial, or tap "Close tutorial" to display "Wi-Fi" screen.
- 2 Turn on "Wi-Fi"**
- 3 Tap the Wi-Fi® network that you want to connect to**
 - If you try to connect to a protected Wi-Fi® network, you will be prompted to enter the security key for that Wi-Fi® network. Tap the "Password" box, enter the network password and tap "Connect".
 - Usually, when you enter a password, the last character entered is displayed and as many "·" as the number of characters appear instead of previously entered characters. All characters can be displayed when you place a check mark in "Show password".
 - To connect to the access point which supports WPS, on the "Wi-Fi" screen tap  ► "Advanced Wi-Fi" ► "Connect by WPS button"/"Connect by WPS PIN" ► operate on the access point side.

Note

- Open network and protected network are two types networks that are available. The network type is indicated by an icon to the network name.  represents an open network and  represents a protected network. The icon also indicates the signal strength.

Strong signal: 	Weak signal: 
---	---

- To search Wi-Fi® network again, tap "Search" on the "Wi-Fi" screen.
- Network name is not displayed depending on the settings for the access point even if the network is connectable. If this happens, you can still connect to the network. Refer to "Adding a Wi-Fi® network" (P187).
- When establishing a Wi-Fi® network connection, the required information is generally obtained from a DHCP server automatically. However, it is possible to specify these items separately.

- When "Switch to mobile data" has a check mark, if the mobile network icon is displayed on the status bar, it indicates that the mobile network is being used and note that the packet communication fee will occur.

When the popup screen of switching mobile data is displayed, select "Don't show this again" and tap "OK" so that the popup screen is not displayed anymore.

From then on, if the Internet is connected to an unavailable wireless LAN, it switches to the mobile network and note that the packet communication fee will occur.

- If the access point which is not being connected to the Internet is being connected,  is displayed and the mobile network may be used to communicate instead of Wi-Fi®.
- If the docomo service is being used via Wi-Fi® when using Wi-Fi®, "docomo ID" needs to be set.

From the Home screen, "Apps" ► "Settings" ► "docomo service/cloud" ► "docomo ID設定 (docomo ID setting)" to set.

Adding a Wi-Fi® network

- 1 From the Home screen, "Apps" ► "Settings" ► "Wi-Fi"
- 2 Turn on "Wi-Fi"
- 3  ► "Add Wi-Fi"
- 4 Enter network SSID in the "Wi-Fi name (SSID)" box
- 5 Tap "Security" box
 - Select the appropriate type from "None", "WEP", "WPA/WPA2 PSK", and "802.1x EAP".
 - The setting method differs depending on the security settings.
- 6 "Connect"

Disconnecting a Wi-Fi® network

- 1 From the Home screen, "Apps" ► "Settings" ► "Wi-Fi"
- 2 Tap the name of Wi-Fi® network that you want to disconnect
- 3 "Disconnect"

Setting mobile data switch

Set whether to check availability of the connected Wi-Fi® network and change to the mobile network automatically if it is unavailable.

- 1 From the Home screen, "Apps" ► "Settings" ► "Wi-Fi"
- 2 Turn on "Wi-Fi"
- 3 Place a check mark in "Switch to mobile data"

Note

- When the Wi-Fi® which is connected to an access point that is not connected to the Internet, such as wireless LAN internal memory card, is disconnected with a check mark in "Switch to mobile data", remove the check mark in "Switch to mobile data".

Using static IP address

You can set the terminal to connect to Wi-Fi® network using the static IP address.

- 1 From the Home screen, "Apps" ► "Settings" ► "Wi-Fi"
- 2 Turn on "Wi-Fi"
- 3 Tap a Wi-Fi® network to connect ► place a check mark in "Show advanced options"
- 4 Tap "IP settings" field ► "Static"
- 5 Set required items
 - To use static IP address, enter the following items.
 - IP address
 - Gateway
 - Network prefix length
 - DNS 1
 - DNS 2
- 6 "Connect"

Confirming/Deleting the saved Wi-Fi® network

- 1 From the Home screen, "Apps" ► "Settings" ► "Wi-Fi"
- 2 Turn on "Wi-Fi"
- 3  ► "Saved Wi-Fi"
 - The Wi-Fi® network list that was connected to is displayed.
- 4 Tap a Wi-Fi® network name
 - The network security information is displayed.
- 5 "Forget"

Note

- On the "Wi-Fi" screen, tap a Wi-Fi® network name to delete ► "Forget" to delete from the Wi-Fi® network list that was saved.

Using Wi-Fi Direct®

Devices support Wi-Fi Direct® are connected without using access point.

- Asking for connecting with another Wi-Fi Direct® supported device

- 1 From the Home screen, "Apps" ► "Settings" ► "Wi-Fi"
 - 2 Turn on "Wi-Fi"
 - 3  ► "Advanced Wi-Fi" ► "Wi-Fi Direct"
 - Tap "Search" when the Wi-Fi Direct® supported device you want to connect is not displayed.
 - 4 Tap the detected Wi-Fi Direct® supported device
 - Send a request to connect another party's Wi-Fi Direct® supported device.
- Disconnecting with another Wi-Fi Direct® supported device

- 1 Tap the connected Wi-Fi Direct® supported device ► "OK"

- Accepting request for connecting with another Wi-Fi Direct® supported device

- 1 From the "Invitation to connect" screen, "Accept"

Setting advanced Wi-Fi® settings

- 1 From the Home screen, "Apps" ► "Settings" ► "Wi-Fi"
- 2 Turn on "Wi-Fi"
- 3  ► "Advanced Wi-Fi"
- 4 Change the settings in necessary

NOTIFICATIONS	
Wi-Fi notification* ¹	You will be automatically notified when an open network with no security protection is detected.
USEFUL SETTINGS	
Keep Wi-Fi on when screen is off	When the screen display of this terminal is black out, set to either disconnecting Wi-Fi® or always maintaining connection during charging.
Allow Wi-Fi scanning	When Wi-Fi® is OFF, set to allow the Google position information service and other applications scanning the networks or not.

Passpoint	When Wi-Fi® is ON, set to connect to the available Passpoint supported access point or not.
CONNECTION	
Wi-Fi Direct* ¹	(P189)
Connect by WPS button* ¹	Connect to WPS (Wi-Fi® Protected Setup) supported access point.
Connect by WPS PIN* ¹	
PERSONAL	
Install certificates	Install the network certificate from the internal storage.
INFORMATION	
MAC address	MAC address is displayed.
IP address* ²	IP address is displayed.

*1 When "Wi-Fi" is set to ON beforehand.

*2 When Wi-Fi® network is connected beforehand.

Mobile Data

Items such as whether or not use mobile data communication, limit mobile data usage, data usage cycle and the services being used are displayed.

Displaying mobile data screen

Mobile data usage (rough number) is displayed either term by term or application by application.

- 1 From the Home screen, "Apps" ► "Settings" ► "Mobile data"

Note

- When "Mobile data" is set to ON, Internet access via mobile network is enabled.
- On the graph, you can set limit mobile data usage and a warning for top usage amount. Only when you place a check mark in "Limit mobile data usage".

Setting mobile data

- 1 From the Home screen, "Apps" ► "Settings" ► "Mobile data" ► 

Restrict background data	Restrict auto mobile data communication.
Show Wi-Fi usage	Set if display Wi-Fi [®] usage or not.
Mobile hotspots	Set to disable specialized Wi-Fi [®] network on background applications.
Mobile networks	(P192)

More...

Set other network settings.

Airplane mode		Turn ON/OFF radio wave emitting.
Tethering	USB tethering	(P193)
	Wi-Fi tethering	(P194)
	Configure Wi-Fi hotspot	(P194)
	Timeout	Set the time duration until Wi-Fi® tethering turns off automatically.
	Bluetooth tethering	(P195)
	Help	Display Help.

Miracast	Set to share screen display and sound on video equipment that supports Miracast via Wi-Fi Direct®. When available devices are not found, tap "Search for devices".
SmartShare Beam	(P240)
Media server	Use DLNA to share the peripheral device and media contents.
NFC/Osaifu-Keitai settings	(P195)
VPN	(P196)
Mobile networks	Set if enable data communication and if enable data roaming. Also set access point names, network mode and network operators.

Using Tethering

Tethering is a function which uses a mobile device such as a smart phone as a modem to connect wireless LAN devices, USB compatible devices and Bluetooth[®] compatible devices to Internet.

Enabling USB tethering

Use microUSB Cable 01 (optional) to connect this terminal and a PC to access to the Internet by using this terminal as a modem.

- 1** Use a microUSB cable to connect this terminal and a PC (P238)
- 2** From the Home screen, "Apps" ► "Settings" ► "More..." ► "Tethering"
- 3** "USB tethering"

Note

- The operating environment on PC side during USB tethering is as follows:
 - OS*: Windows 8.1 /Windows 8/ Windows 7/Windows Vista
 - * We do not guarantee operations conducted in environment with upgraded OS or in added/changed environment.
- A driver for USB tethering is required. For details, refer to the following website.
<http://www.lg.com/jp/support/software-manuals> (In Japanese only)
- You can install the driver through the "Install PC programs" screen displayed when this terminal is connected to a PC.
- USB tethering can be used together with Wi-Fi[®] tethering and Bluetooth[®] tethering.

Enabling Wi-Fi® tethering

Up to eight wireless LAN compatible devices can access to the Internet simultaneously by using this terminal as a Wi-Fi® access point.

- 1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "Tethering"
- 2 "Wi-Fi tethering"

Note

- Wi-Fi® tethering can be used together with USB tethering and Bluetooth® tethering.

Setting Wi-Fi® tethering

■ Setting Wi-Fi® access point

- 1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "Tethering"
- 2 "Configure Wi-Fi hotspot"
- 3 Enter network SSID in "Wi-Fi name (SSID)" box
- 4 Tap "Security" box
 - Select an appropriate one from "Open", "WPA PSK" and "WPA2 PSK".
 - A password is necessary when setting to "WPA PSK" or "WPA2 PSK".
- 5 "Save"

Note

- At the time of purchase, network SSID is set to "DM-01G_xxxx", and security is set to "WPA2 PSK". Set security settings if necessary.

Enabling Bluetooth® tethering

Up to five Bluetooth® devices can access to the Internet simultaneously by using this terminal as a modem.

- 1 From the Home screen, "Apps" ▶ "Settings" ▶ "More..." ▶ "Tethering"
- 2 "Bluetooth tethering"

Note

- Pairing with this terminal is required to use Bluetooth®.
For details, refer to "Pairing/Connecting with Other Bluetooth® Device" (P232).
- Bluetooth® tethering can be used together with USB tethering and Wi-Fi® tethering.

Setting NFC/Osaifu-Keitai

Set and manage NFC/Osaifu-Keitai settings.

- 1 From the Home screen, "Apps" ▶ "Settings" ▶ "More..." ▶ "NFC/Osaifu-Keitai settings"

NFC/Osaifu-Keitai lock	Restrict Osaifu-Keitai functions and its usage services.
Reader/Writer, P2P	Turn ON/OFF NFC reader/writer and P2P functions.
Android Beam	When "Reader/Writer, P2P" is turned on, set to beam app contents to other NFC compatible terminals or not. For setting details, refer to "Android Beam" (P235).
NFC Type setting	Select an NFC Type to use.
LOCK PASSWORD SETTINGS	
Lock password change	Change the lock password for NFC/Osaifu-Keitai.

Connecting to VPN (Virtual Private Network)

VPN (Virtual Private Network) is a technique to access to the information protected in local network from other networks. VPN is generally equipped in companies, schools or other facilities. Users can access the local network and view information outside the premise. To set VPN access from this terminal, security information from network administrator is required.

Adding VPN

- 1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "VPN"
 - If an attention screen appears, tap "Settings" and set screen unlock method following the on-screen instructions.
- 2 "Add VPN network"
- 3 Follow instructions given by the network administrator and set each item ► "Save"

Connecting to VPN

- 1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "VPN"
- 2 Tap a VPN name to connect to
- 3 Enter the required authentication information ► "Connect"

Editing VPN

- 1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "VPN"
- 2 Touch and hold down a VPN name to edit
- 3 "Edit" ► Add, delete or edit the information ► "Save"

Deleting VPN

- 1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "VPN"
- 2 Touch and hold down a VPN name to delete
- 3 "Delete" ► "OK"

Always use VPN

- 1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "VPN"
- 2 ⓘ ► "Always-on VPS"
- 3 Select a VPN profile ► "OK"

Setting Access Point

Access point for connecting the Internet (sp-mode) is already registered. You can add or change it if necessary.

For details about sp-mode, refer to DOCOMO website.

When using mopera U or Business mopera Internet, add access point manually.

For details on mopera U, refer to mopera U website.

Checking the access point in use

- 1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "Mobile networks" ► "Access Point Names"

Setting an additional access point <New APN>

- 1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "Mobile networks" ► "Access Point Names"
- 2 ⓘ ► "New APN"
- 3 "Name" ► enter the network profile name you want to create ► "OK"
- 4 "APN" ► enter the access point name ► "OK"
- 5 Enter other items required by the network operator
- 6 ⓘ ► "Save"

Note

- Do not change MCC to any value other than 440, or change MNC to any value other than 10. It may not be displayed.
- When MCC and MNC settings are not displayed on the screen after being changed, reset it to the initial settings or set the access point manually.

Initializing access point

When initializing an access point, it returns to the default settings.

1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "Mobile networks" ► "Access Point Names"

2  ► "Reset to default" ► "Yes"

DEVICE

Sound

Set sound settings such as phone ringtone, volumes and vibrate.

BASIC	
Manner Mode	Select from "Sound & Vibrate", "Vibrate only" or "Do not disturb".
Volume	Set the volumes for "Ringtone", "Notification sound", "Touch feedback & system", and "Music, video, games & other media".
RINGTONES & VIBRATIONS	
Ringtone	Set a phone ringtone.
Notification sound	Set up a notification sound.
Vibrate	Set to notify an incoming call by vibration.
Vibration type	Select a vibrate type.

NOTIFICATIONS	
Do not disturb	Set whether to ring when there is an important notification such as an incoming call, a new message. • The alarm always rings.
Lock screen	Set whether to display contents (contents of a received mail, etc.) or notifications when the screen is locked.
Apps	Allow/block the notifications from each application.
ADVANCED SETTINGS	
Vibrate on tap	Set whether to vibrate when tapping any home touch button or dialpad (P54).
Sound effects	Set whether to enable "Dialpad touch sounds", "Touch sound" or "Screen unlock sound".

Voice notifications	Set whether to read out the sender's information and the message contents of a received message (SMS) automatically. • In "Voice notifications language", set preferred engine, speech rate and listen to an example.
----------------------------	--

Display

Set display settings such as screen brightness or animations.

SCREEN	
Brightness	Set screen brightness. If you place a check mark in "Automatic brightness", the screen brightness changes automatically according to the environment.
Screen timeout	Set time duration before screen turns off automatically.
Screen-off effect	Set effect when turning off screen.
Auto-rotate screen	Set to switch the screen to horizontal/portrait according to the orientation of this terminal.
Daydream	Set Daydream. - Tap "Start now" to activate Daydream. - Set the timing to activate the Daydream when tapping "Startup settings".

FONT

Font type	Set the font displayed on the screen.
Font size	Select from "Minimum", "Small", "Medium", "Large", "Very large", "Maximum".

ADVANCED SETTINGS

Smart screen	Set if screen stays on when you are watching the screen.
Home touch buttons	Select a layout and a color for home touch buttons, or set whether to display the home touch buttons while using an application.
Notification LED	Set whether to turn on the Notification LED light while receiving calls or during notification. When receiving an Area Mail, always notify by Notification LED light.

Home Screen

Set the Home screen settings.

- You cannot change items except for "Select Home" and "Wallpaper" on docomo LIVE UX.

Select Home	Switch home applications. Choose "docomo LIVE UX" or "Home" (P87).
SCREEN	
Wallpaper	Set a wallpaper.
Screen swipe effect	Select a screen effect.
Allow Home screen looping	Set to go to the initial screen or not when scrolling the Home screen.
DATA	
Home backup & restore	Back up or restore the layout and wallpaper of the applications.
TIPS	
Help	Read Home screen related Help.

Disney Character Settings

Select a Disney character to change the window image, live wallpaper, ring tone, etc. of the mickey window cover collectively or individually.

- To use it, you need to download/update "Disneyマーケット (Disney Market)" application, and set up an Google account (P135, P215).

Collective settings

- 1 From the Home screen, "Apps" ► "Settings" ► "Disney character settings"
- 2 Tap a Disney character ► "一括設定 (Collective settings)" ► "OK"
 - The settings of live wallpaper or ring tone are changed collectively.

Individual settings

- 1 From the Home screen, "Apps" ► "Settings" ► "Disney character settings"
- 2 Tap a Disney character ► swipe the screen to left/right to display the items to be changed ► "個別設定 (Individual settings)" ► "OK"
 - The settings of the selected items are changed.

Lock Screen

Set to lock screen or not. Set settings if necessary.

- The display and setting items vary depending on your selection from "None", "Touch", "Swipe", "Knock Code", "Pattern", "PIN", "Password" to unlock the screen.

SCREEN SECURITY		
Select screen lock	None	Disable the security of unlocking screen.
	Touch	Tap to unlock screen.
	Swipe	Swipe to unlock screen.
	Knock Code	Tap the pattern that you set when the screen is OFF to unlock it.
	Pattern	Draw pattern to unlock screen. You can set your favorite pattern.
	PIN	Enter a PIN to unlock screen. Follow the on-screen instructions to enter a 4 to 16-digit number.

Select screen lock	Password	Enter a password to unlock screen. Follow the on-screen instructions to enter a 4 to 16-digit password including alphabets.
Smart Lock		Set to unlock the touch screen automatically by a trusted terminal, location or face that you have set up.
Screen swipe effect		Set the screen effect when swiping the screen to unlock.
Pattern effect		Set pattern input screen effect.
Hidden pattern		When tapping lock screen, set if show pattern dots or not.
Make pattern visible		Set to show pattern line or not.
Hidden PIN		Set whether to display the PIN input area when tapping the screen.

Randomize PIN entry	Set whether the number layout on keyboard is random when inputting PIN.
Hidden password	Set whether to display the password input area when tapping the screen.
CUSTOMIZE	
Wallpaper	Set wallpaper when locking screen.
Shortcuts	Customize the shortcut displayed on the lock screen.
Weather animation	Set if update weather information for current location or primary city and display it by animation.
Contact info for lost phone	Set whether to display contact information on the lock screen when this terminal is missing.

LOCK TIME	
Lock timer	Set time duration from the screen turns off till it is locked.
Power button instantly locks	Set to lock the screen immediately or not after pressing the power key.

Note

<On-Screen Unlock>

- If you entered an incorrect screen-unlock patterns for five times, a message is displayed to remind you to re-input the pattern after 30 seconds. If you forgot the screen-unlock pattern, tap "Forgot pattern?" on the reentry screen and enter your backup PIN or log in with your Google account set up on your terminal to unlock screen.
- If you entered an incorrect PIN for five times, a message is displayed to remind you to re-input the PIN after 30 seconds. If you forgot the PIN, tap "Forgot PIN?" on the reentry screen and log in with your Google account set up on your terminal to unlock screen.

- If you entered an incorrect password for five times, a message is displayed to remind you to re-input the password after 30 seconds. If you forget the password, tap "Forgot password?" on the reentry screen and log in with your Google account set up on your terminal to unlock screen.
- Note that you cannot unlock the screen if you forgot the PIN or the password when Google account has not set up yet.

<Lock screen notification>

- When the screen lock is set to "Knock Code"/"Pattern"/"PIN"/"Password", a screen appears so that you can select the notification displayed on the lock screen.

When "Hide sensitive only"/"Hide all notifications" is selected, note that the notification icons, caller's name, phone number, the number of missed calls/voicemails may not be displayed on the lock screen anymore.

Gestures

Enable or disable each gesture.

ANSWER ME	
Silence incoming calls	When this terminal is ringing or vibrating, flip the terminal over to make the display face downwards to stop ringtone or vibration.
OTHERS	
Snooze or stop alarm	Flip the terminal over to make the display face downwards to stop alarm. • Snooze function works if you have set "Snooze duration" to "Off" in Alarm/Clock application.
Cinderella Moment*	Shake this terminal twice with the Home screen being displayed to play the special animation.
Help	Display how to use the Gestures functions.

SENSOR

Motion sensor calibration

Calibrate the accuracy of sensor (the tilt and speed of the sensor).

- Operate it when Gesture does not work properly.

* Operate only when the Home selection is "Home".

Storage

Display free space in internal storage and microSD card, operate mount and format.

INTERNAL STORAGE	
Total space	Total space of the internal storage is displayed.
Available	Available space of the internal storage is displayed.
Apps, Audio etc.	Used space of the internal storage is displayed.
SD CARD	
Total space	Total space of the microSD card is displayed.
Available	Available space of the microSD card is displayed.
Unmount SD card/ Mount SD card	• Unmount the microSD card to remove it safely. • Mount the microSD card to enable to use it.
Erase SD card	Clean up all the data (music, photos, etc.) inside the microSD card.

Battery

Confirm the remaining battery, set to restrict the usage of each function when the battery is getting less.

BATTERY INFORMATION	
Remaining battery icon	Battery levels are displayed in percentages. It displays whether the battery is being charged, the expected time to charge fully/the usable total time.
Battery usage	Confirm the details of battery consumption.
Battery percentage on status bar	Set whether to display the remaining battery on the status bar in percentage.
BATTERY SAVER	
Battery saver	(P207)
Help	Description related to battery saver is displayed.

Turn on battery saver

When the remaining battery is less than the set value, etc. set the battery saver to restrict the battery consumption by reducing the screen brightness, etc.

- Confirm the description related to battery saver in Help.

- 1 From the Home screen, "Apps" ► "Settings" ► "Battery" ► "Battery saver"
- 2 Turn on "Battery saver"
- 3 "Immediately"/"5% battery"/"15% battery"

Apps

Manage or delete the installed applications.

Confirming downloaded application/ all applications

- 1 From the Home screen, "Apps" ► "Settings" ► "Apps" ► tap an application in "DOWNLOADED" tab/"ALL" tab/"DISABLED"tab

Force stop	Force-quit an application being activated.
Disable/ Enable/ Uninstall	Disable/enable application or uninstall application.
Show notifications	Set if show notification of update or important warning.
Clear data	Delete application data.
Clear cache	Clear application cache.
Clear defaults	Start Initializing when it is set to start activating in default.

Deleting an application

- Some preinstalled applications may not be able to be deleted (uninstalled). Part of the applications can be disabled (P208).
- It is recommended that the applications purchased from Play Store be delete (P137) from Google Play screen.

- 1** From the Home screen, "Apps" ► "Settings" ► "Apps" ► "ALL" tab
- 2** Tap an application to delete
- 3** "Uninstall" ► "OK"

Disabling an application

Disabled application stops its operation and it is not displayed on the Apps screen.

- It will not be uninstalled.
- It is available for some applications or services that cannot be uninstalled.

- 1** From the Home screen, "Apps" ► "Settings" ► "Apps" ► "ALL" tab
- 2** Tap an application to disable
- 3** "Disable" ► "Yes"

Note

- When an application is disabled, the linked applications may not run properly. In such case, enable it again to run properly.

Enable an application again

- 1 From the Home screen, "Apps" ► "Settings" ► "Apps" ► "DISABLED" tab
- 2 Tap the application you want to enable again
- 3 "Enable"

Default Message App

Select a message application which is used normally from "messaging" and "Hangouts".

- 1 From the Home screen, "Apps" ► "Settings" ► "Default message app"
- 2 "Messaging"/"Hangouts"

PERSONAL

docomo service/cloud

Set the docomo services/cloud.

docomo ID設定 (docomo ID setting)	Set docomo ID for using in docomo apps.
docomo cloud	Make settings for docomo cloud compatible services.
docomo apps management	Set the settings for regular update confirmation, etc.
docomo apps password	Set a password for docomo applications. • By default, "0000" is set.
AUTO-GPS	Set auto GPS function, view history of the positioned place and set the performance with low power.
docomo location information	Set settings for imadoco search/imadocokantan search/Keitai-Osagashi Service.

Remote Initialization Service	Set for using the service by remote operations such as initializing all data etc. in the terminal.
Profile setting	Confirm/change the customer's profile information which is being used in each of the docomo service.
Switch USB debugging	Make settings for using dedicated devices such as those for docomo Shops.
Open source licenses	Open source licenses are displayed.

Note

- There are some applications can be disabled in the applications displayed in docomo service/cloud. Those applications may not be displayed in docomo service/cloud list.
- If you download new applications provided by docomo, those items may be added and displayed in docomo service/cloud list.

Location

Set GPS settings, etc.

Mode	(P171)
RECENT LOCATION REQUEST	
When there are applications that request the latest location information, the list is displayed.	
LOCATION SERVICES	
Camera	Set whether to record the location information in the photos or videos taken by the camera.
Google Location Reporting	Set whether to use Google location information service so that the application can get the user location quicker. Gather the anonymous location information and send it to Google. • To use it, setting Google account is required (P215).
GPS notification	Set if play back audio and vibrate while GPS is searching for location information.

Security

Set password settings.

Content lock	Select a lock type when locking a file in gallery.
ENCRYPTION	
Encrypt phone	Encrypt the system data saved in the internal storage. After that, PIN or password is required every time when the power is turned on to decode. • To cancel the encryption, from the Home screen "Apps" ► "Settings" ► "Security" ► "Encrypt phone" and follow the on-screen instructions. • Reset this terminal to the state after the purchase to cancel the encryption (P217).
SIM CARD LOCK	
Set up SIM card lock	(P214)

PASSWORDS

Password typing visible	Set if show the last character of a hidden password or not as you type.
--------------------------------	---

PHONE ADMINISTRATION

Phone administrators	Select a device administrator to activate in this terminal.
Unknown sources	Set if allow installation of applications from sources other than Google Play.
Verify apps	Disallow or warn before installation of applications that may cause harm.

CREDENTIAL STORAGE

Storage type	Show the location for credential storage backup.
Trusted credentials	Trusted CA credential is displayed.
Install from storage	Install certificates from storage.

Clear credentials	Delete credential information of all contents and VPN in credential storage. • To delete an installed certificate, you need to delete credential storage.
ADVANCED SETTINGS	
Trust agents	Set whether to execute the selected operation when a trusted terminal is connected.
Screen pin	Set whether to fix a certain application on the screen of this terminal or not.
App usage access	Set whether to access to a certain application or not. • When the home selection is "docomo LIVE UX", the Machi-Chara runs even when "しゃべってコンシェル (Shabette-concier)" is OFF.

Security code on this terminal

Some functions provided for convenient use of the terminal require the security code to use them. Besides a password for screen lock of the terminal, a network security code necessary for the network services etc. are available.

Make use of the terminal using an appropriate security code according to the purpose.

- Entered PIN/password for screen lock, network security code, PIN code and PUK code are shown as "•".

■ Cautions on using security codes

- Avoid using a number that is easy to guess, such as "birth date", "part of your phone number", "street address number or room number", "1111", and "1234". Make sure to make a note of the security code you set lest you should forget it.
- Do not reveal your security codes to others. DOCOMO is not responsible for damage caused by misuse of your security codes by others.
- If you forget security codes, you should bring your official identification (such as driver's license), the terminal, and docomo nano UIM card with you to the nearest docomo Shop. For details, contact the "docomo Information Center" on the last page of this manual.

- The PUK code is written on the subscription form (copy for customer) handed at the subscription in the docomo Shop. If you have subscribed at other than docomo Shop, you should bring your official identification (such as driver's license), the docomo nano UIM card with you to the nearest docomo Shop or contact "docomo Information Center" on the last page of this manual.

■ PIN/password for screen lock

The security code is used for lock function of the terminal.

■ Network security code

The network security code is a 4-digit number necessary for using the docomo Network Services or identification at reception of your request in docomo Shop or at docomo Information Center, or when using "お客様サポート (customer support)". It can be set to any number at the subscription and also changed later by yourself.

For details on Network security code, refer to NTT DOCOMO website.

■ PIN code

The docomo nano UIM card can set security code named PIN code. This code is set to "0000" at the time of subscription, but you can subsequently change it.

PIN is a 4- to 8-digit number (code) that must be entered for user confirmation to prevent unauthorized use of docomo nano UIM card by a third party every time you insert the docomo nano UIM card into the terminal or when the terminal is powered on. You can set entering the PIN code enables making/receiving calls and terminal operations.

- If you use a docomo nano UIM card that has been currently used when you buy a new terminal, use the same PIN code that had been set on the current terminal. The code is "0000" if the default setting has not been changed.
- If you enter incorrect PIN code three times in a row, the code will be locked. In that case, unlock with "PIN unblocking key".

■ PIN unblocking key (PUK)

The PIN unblocking key is an 8-digit number used to unblock the PIN code. You cannot change it by yourself.

- If you enter the PIN unblocking key incorrectly ten times in a row, the docomo nano UIM card will be locked. If this happens, please contact a docomo Shop.

Setting PIN code

You can set to require the PIN code entry for using the terminal when the power is turned on.

- 1 From the Home screen, "Apps" ► "Settings" ► "Security"
- 2 "Set up SIM card lock"
- 3 "Lock SIM card"
- 4 Enter PIN and tap "OK"
 - Place a check mark in "Lock SIM card".

Changing PIN

Enable PIN beforehand.

- 1 From the Home screen, "Apps" ► "Settings" ► "Security"
- 2 "Set up SIM card lock"
- 3 "Change SIM PIN"
- 4 Enter the current PIN, and tap "OK"
- 5 Enter a new PIN and tap "OK"
- 6 Enter the same PIN that you entered in step 5 and tap "OK"

Entering PIN

Follow the operations below if you are asked to enter the PIN when turning on this terminal.

- 1 Enter the PIN of the docomo nano UIM card, and tap "OK"

Unlocking PIN

Follow the operations below to unlock PIN when you have entered PIN incorrectly for 3 times in a row.

- 1 From the PUK input screen, enter PUK code and tap "OK"
- 2 Enter a new PIN and tap "OK"
- 3 Enter the same PIN as you entered in step 2 and tap "OK"

Accounts & sync

Add or delete an account used in this terminal, such as Google account. Set synchronization settings.

Setting account

- 1 From the Home screen, "Apps" ► "Settings" ► "Accounts & sync"
- 2 "Add account"
- 3 Tap an account type you want to add
- 4 Set according to the on-screen instructions

Note

- The application automatically synchronizes data if "Auto-sync data" is turned on. Packet communication fee may be charged when operating the above operations. Also it consumes more battery than when "Auto-sync data" is turned off.
- When synchronizing manually, from the Home screen "Apps" ► "Settings" ► "Accounts & sync" ► select an account type ► tap an account to synchronize ► tap the items to synchronize, or  ► "Sync now".

Removing account

- 1 From the Home screen, "Apps" ► "Settings" ► "Accounts & sync"
- 2 Tap an account type to delete
- 3 Tap the account name to delete
- 4  ► "Remove account" ► "OK"

Note

- docomo account cannot be added or deleted.

Language & input

Set language and keyboard settings in this terminal. You can also set voice input and output settings.

Language	Select a language you use in this terminal.
KEYBOARD & INPUT METHODS	
Default	Select default keyboard and input method.
Google voice typing	Tap to place a check mark to use. Also tap  to set the settings.
LG Japanese keyboard	Tap  to set settings (P62).
Moji-Henshu	Tap  to confirm the application information and open source license information.
SPEECH	
Voice Search	Set up a language to use in voice recognition.
Text-to-speech output	Set speech settings. You can set preferred engine, speech rate and listen to an example.

MOUSE/TRACKPAD

Pointer speed	Set pointer speed when this terminal is connected a with mouse or a trackpad.
---------------	---

Backup & reset

Initialize settings.

BACKUP & RESTORE

Backup my data	Set to backup on the Google server or not.
Backup account	Set an account for backup. Add an account to use as a backup in "Add account".
Automatic restore	Restore the backed up settings and data when installing an application again.

PERSONAL DATA

Factory data reset	Delete all the data inside this terminal.
--------------------	---

Initializing this terminal

- 1 From the Home screen, "Apps" "Settings" ► "Backup & reset"
- 2 "Factory data reset" ► "Reset phone" ► "Delete all" ► "OK"

- When deleting the data saved in microSD card, place a check mark in "Erase SD card".

Note

- The battery level should be more than 30% for initializing this terminal.
- Backup your data such as images, videos and music on PC. For details about connection method, refer to "File Management" (P224) and "External Device Connection" (P237).

SYSTEM

Set shortcut keys, date and time, accessibility, mickey window cover, print and terminal information.

Shortcut Key

Set whether to quickly access to QMemo+ or camera when the screen is turned off or when pressing and holding the volume key on the lock screen.

Date & time

Set settings about date and time.

Auto-date & time	Set the automatic retrieval of date and time information via the network.
Auto-time zone	Set the automatic retrieval of time zone information via the network.
Set date	Set date manually. • Set up the settings after turn off "Auto-date & time".

Set time	Set time manually. • Set up the settings after turn off "Auto-date & time".
Select time zone	Set time zone manually. • Set up the settings after turn off "Auto-time zone".
Use 24-hour format	Set to display the time in 24-hour or 12-hour format.
Select date format	Set the date format.

Accessibility

Set application settings related to accessibility.

VISION	
TalkBack	Enable user assistance services such as responding to user operations via audio and vibrations, reading out text . Also set settings of speech, other feedback, touch exploration, etc.
Font size	Select from "Minimum", "Small", "Medium", "Large", "Very large", "Maximum".
Invert colors	The colors of screen and contents are inverted.
Color adjustment	Adjust the display color of screen and contents.
Touch zoom	Zoom in or zoom out by triple-tapping the screen.

Voice notifications	Set whether to read out the sender's information and the message contents of a received message (SMS) automatically. • Set preferred engine, adjust speech rate and listen to an example demonstration in "Voice notifications language".
Screen shade	Set the brightness to the minimum to save battery.
Accessibility shortcut	Set whether to enable the start of accessibility function from each of the screens.
Text-to-speech output	Set speech settings. You can set preferred engine, speech rate and listen to an example.
HEARING	
Audio type	Select an audio type from "Mono"/"Stereo".
Sound balance	Adjust the volume balance by sliding to left or right.

Notification LED	Set to turning on the LED light during an incoming call or a notification.
Flash alerts	Set the camera flash to blink during an incoming call or a notification.
Turn off all sounds	Set whether to turn off all the sounds.
Captions	Customize the subtitle settings for hard-of-hearing people.
PHYSICAL AND MOTOR	
Touch feedback time	Select a touch response sensitivity from "Short", "Medium" and "Long".
Touch assistant	Display the touch board to access to the physical button functions or a gesture quickly.
Screen timeout	Set time duration before screen turns off automatically.

RECOGNITION	
Touch control areas	Set the screen area where the touch operation is not allowed.
SYSTEM	
Auto-rotate screen	Automatically switch the screen to portrait display/ landscape display when this terminal is rotated.
Password voice confirmation	Use TalkBack to read the input password out loud.
Power key ends call	Press the power button to end a call. • With a check mark, when the backlight is black out during talking on the phone and the screen is locked, press the power key twice to end the call.

Accessibility settings shortcut	Triple-tap the home key to toggle "TalkBack", "Invert colors" and "Touch assistant". You can also jump to "Accessibility settings". When you choose "Show all", you can select functions to set at any time.
SERVICES	
Switch Access	The operations when the back key, or home key, etc. is pressed set whether controlling is to be substituted by physical key combinations such as the power key, etc.

Note

- You can download and set applications compatible with user assistance services from Google Play.
- If you authorize the usage of TalkBack, be careful since personal information such as credit card numbers, etc. might also be recorded in exchanges via user interfaces. If perchance, data and information which were registered happen to be leaked, please be forewarned that DOCOMO shall not bear any responsibility.
- If TalkBack is allowed to use, the Touch guide function also becomes valid. The Touch guide is a function which can read aloud and display explanations of the items where your finger is positioned. After you once turn on the Touch guide functions, tap items once to select them, after they are selected, then double tapping and scrolling become a two finger operation.
To turn off the Touch guide individually, from the Home screen, "Apps" ► "Settings" ► "Accessibility" ► "TalkBack" ► "Settings" ► remove check mark from "Explore by touch".
- When the Home screen is set to docomo LIVE UX, TalkBack may not function normally.

Mickey Window Cover

Set up the Mickey Window Cover L01 which is in the package.

Select apps	Select applications used on the Mickey Window Cover L01.
Preview emails & messages	When a mail (docomo mail / Email) or a message is received, set whether to display the notification on the mickey window cover screen. When the screen lock is set to "Knock Code"/"Pattern"/"PIN"/"Password", the check mark will be canceled automatically. Even when the screen lock is set to "Knock Code"/"Pattern"/"PIN"/"Password", you need to place a check mark manually to display the mail (docomo mail/Email) and message notification on window screen.

Auto-unlock	When the screen lock is set to "Touch" or "Swipe", the screen lock is canceled automatically when the flip section is opened.
Help	Help is displayed.

Printing

Set or manage the printer which uses Google cloud print.

1 From the Home screen, "Apps" ► "Settings" ► "Printing" ► "Cloud Print"

2 Turn on "Cloud Print"

- Available printers are listed.
- Tap  to add a printer or change the settings.

Note

- To use cloud print, setting Google account is required (P215).

About Phone

Information related to this terminal is displayed.

Phone name		Set phone name for Bluetooth®, Wi-Fi Direct®, etc.
Update Center	App Updates	(P273)
	Software Update	(P268)
Network		Network, mobile network type, service state, roaming, mobile network state and IP address are displayed.
Status		Your phone number and IMEI are displayed.
Battery		The battery status, remaining power and the usage state are displayed.

Hardware info	Model number (model name), up time, Wi-Fi® MAC address and Bluetooth® address are displayed.
Software info	Android version, baseband version, kernel version, build number and software version being used in this terminal are displayed.
Legal info	Legal documents for LG software, open source license, Google legal are displayed.

Checking your own phone number

1 From the Home screen, "Apps"
▶ "Settings" ▶ "About phone" ▶
"Status"

- Your phone number is displayed in "My phone number".

File Management

Storage Structure

This Terminal (Internal Storage)

Main created folders in the phone (internal storage) at the time of purchase are as follows.

- Depending on operations on the terminal, displayed folders may differ.

Alarms	Save music data etc. for alarm sound.
Android	Save setting data or temporary files for the system or applications.
DCIM	Save still image/video data shot by the camera (when the saving location is set to the terminal).

Download	Save data downloaded by the browser.
Movies	Save video data.
Music	Save music data.
Notifications	Saves music data etc. to be set as notification sound.
Pictures	The still image data is saved.
Podcasts	Podcast data is saved.
Preload	The data saved beforehand after purchasing is saved.
Ringtones	Save music data etc. for ringtone or alarm sound.

microSD card (External Storage)


You can attach microSD card (including microSDHC card and microSDXC card) to the terminal and use it.

- This terminal supports a microSD card of up to 2 GB, a microSDHC card of up to 32 GB, and a microSDXC card of up to 128 GB (as of May 2015).
- A microSDXC card can only be used with SDXC compatible devices. Do not insert a microSDXC card into a device incompatible with SDXC since it may cause damage to the data stored in the microSDXC card.
- To use microSDXC card again with damaged data inside, you need to initialize the microSDXC card with an SDXC compatible device (all data will be deleted).
- To data copy with an SDXC incompatible device, please use a card that meets the standard of a copy destination/copy source device such as microSDHC card or microSD card.
- Consult each microSD card manufacturer for information about the compatible microSD card.

- The UHS speed class of microSD card supported by this terminal is class 1.
- The speed class of microSD card supported by this terminal is up to class 10.

Inserting microSD card


- 1 Detach the back cover (P36)**
- 2 Remove the battery pack (P47)**
- 3 With the metal contacts facing down, insert the microSD card into the microSD card slot in the direction of arrow mark until it is fixed**

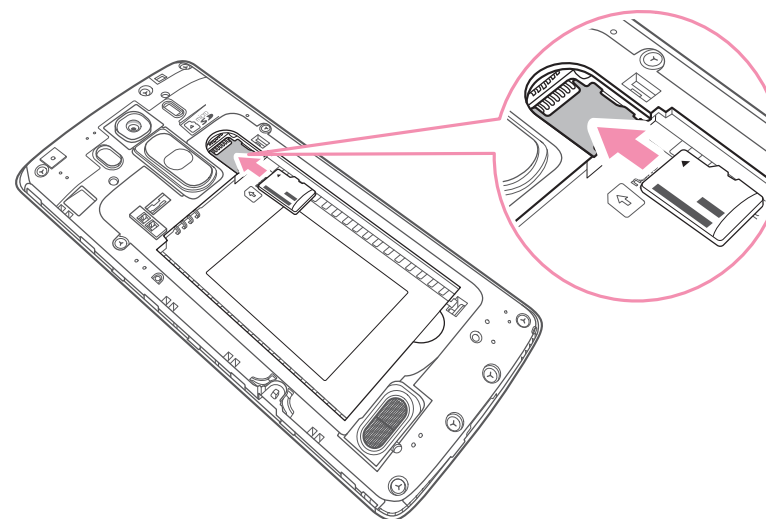

Removing microSD card

When removing the microSD card, make sure to unlock the SD card mount (safely remove) before removing it (P206).

- 1 Detach the back cover (P36)
- 2 Remove the battery pack (P47)
- 3 Pull microSD card straight out in direction of arrow mark

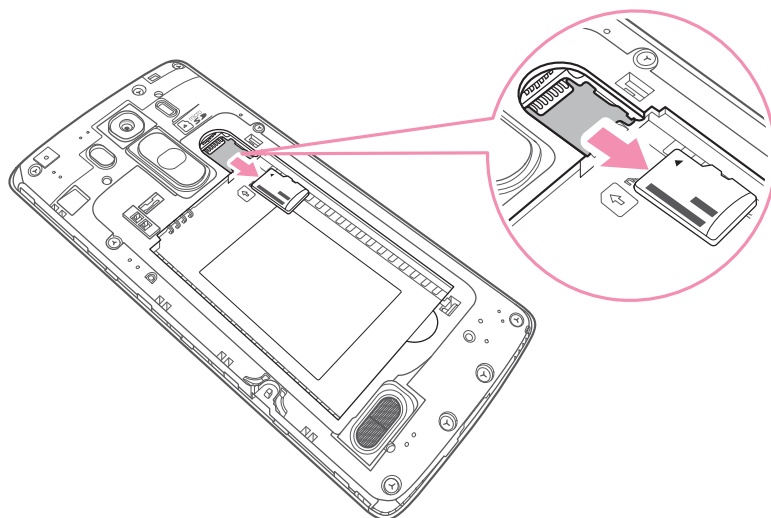

Formatting microSD card

Note that formatting microSD card erases all data in the microSD card.

- 1 From the Home screen, "Apps" ► "Settings" ► "Storage"
- 2 "Erase SD card" ► "Erase SD card" ► "Erase everything"
 - When the unlock screen appears, perform unlocking method and then tap "Erase everything".

File Operations

File or Folder Operations

Use "File Manager" to display or manage the data, such as the still images, videos, music or documents, which were saved in this terminal or in cloud storage.

Storage in this terminal

- 1 From the Home screen, "Apps" ► "File Manager"
- 2 "All files"/"Music"/"Image"/"Video"/"Document"
- 3 Tap a folder or file
- 4 When the application selection screen is displayed, select an application to use ► "OK"
 - The file is displayed/played.

Cloud storage

- 1 From the Home screen, "Apps" ► "File Manager"
- 2 "Dropbox"
 - To use Dropbox, you need to have a Dropbox account. Follow the on-screen instructions.

Creating a folder

- 1 From the Home screen, "Apps" ► "File Manager"
- 2 "All files" ► "Internal storage"/"SD card" ► tap the folder if necessary
- 3  ► enter a folder name ► "Save"

Note

- A folder can only be created in "Internal storage" or "SD card" of "All files", or inside "Dropbox".

Renaming a file or folder

- 1 From the Home screen, "Apps" ► "File Manager"
- 2 "All files"/"Music"/"Image"/"Video"/"Document" ► tap a folder if necessary
- 3 Touch and hold a folder/file ► "Rename" ► Enter a name ► "Save"

Note

- When purchasing, some folders such as "Android" or "DCIM" which were created in this main unit (internal storage) cannot be moved or copied.

Deleting a file or folder

- 1 From the Home screen, "Apps" ► "File Manager"
- 2 "All files"/"Music"/"Image"/"Video"/"Document" ► tap a folder if necessary
- 3 Touch and hold a folder/file ► "Delete" ► "Yes"

Note

- When purchasing, some folders such as "Android" or "DCIM" which were created in this main unit (internal storage) cannot be moved or copied.

Moving/Copying a file or folder

- 1 From the Home screen, "Apps" ► "File Manager"
- 2 "All files" ► tap the folder if necessary
- 3 Touch and hold a folder/file ► "Move"/"Copy"
- 4 Display the moving destination/copy destination folder ► "OK"

Note

- When purchasing, some folders such as "Android" or "DCIM" which were created in this main unit (internal storage) cannot be moved or copied.

Searching Data

- 1 From the Home screen, "Apps" ► "File Manager"
- 2 "All files"/"Music"/"Image"/"Video"/"Document"
- 3  ► enter keyword(s) you want to search

Data Communication

Bluetooth® Communication

Connect this terminal to Bluetooth® devices wirelessly, to exchange data.

- For Bluetooth® compatible version or profile, refer to "Main Specifications" (P274).
- For Bluetooth® setting and operation procedure, refer to the manual of the Bluetooth® devices being connected.
- We do not guarantee that this terminal can be connected to all Bluetooth® devices wirelessly.

■ Notes on using Bluetooth® function

- The distance between this terminal and another Bluetooth® device should be kept within approximately 10 m with no obstructions in sight. The detectable distance may be shorter than 10 m when there are obstructions between this terminal and a Bluetooth® device, or depending on the conditions of the surroundings (such as walls or furniture) and the structure of a building. Especially when there is a wall or floor of reinforced

concrete between them, they may be unable to connect with each other. Note the above mentioned distance is not guaranteed.

- Make sure to keep this terminal 2 m or more away from another device such as home electric appliances, AV devices, OA devices, etc. Microwave oven can easily affect Bluetooth® function, so keep this terminal 3 m or more away from the microwave oven. Otherwise, normal connection cannot be performed when nearby electric devices are powered on. TVs and radios may receive noise or video interference.
- Move the Bluetooth® device to a place where connection is available when there is a broadcast station or radio near the Bluetooth® device or else this terminal cannot be connected to the device. Strong radio waves may prevent from connection between this terminal and the Bluetooth® device.

- Wireless connection is available when Bluetooth® device is put in a bag or pocket. However, lowering of communication speed or noise may result when you are in between the Bluetooth® device and this terminal.
- The radio wave from Bluetooth® may affect the operation of medical electronics etc. Bluetooth® communication in some cases may result in an accident, so turn off this terminal and other Bluetooth® devices in the following places.
 - On trains
 - On airplanes
 - In hospitals
 - Near automatic doors or fire alarms
 - In places such as gas stations where flammable gas is generated

■ Reception interference caused by wireless LAN devices

- As this terminal's Bluetooth® device and wireless LAN devices use the same frequency (2.4 GHz), reception interference may occur or the communications speed may lower if you use the Bluetooth® device near the wireless LAN devices. Also, you may hear noise or have a connection problem. In these cases, do the following:
 - Keep the Bluetooth® device over 10 m away from a wireless LAN device.
 - Within 10 m, turn off either the Bluetooth® device or the wireless LAN device.

■ Pass code (PIN) of Bluetooth® function

- Pass code (PIN) is an authentication code to enter when accessing Bluetooth® devices for the first time to recognize and permit the connection each other. Entering the same pass code (PIN) (up to 16 single byte alphanumeric characters) on each sending/receiving device is required.
- On this terminal, pass code may sometimes be displayed as "PIN".

Turning ON Bluetooth[®] Function to Make this Terminal Discoverable

- 1 From the Home screen, "Apps" ► "Settings" ► "Bluetooth"
- 2 Turn on "Bluetooth"

Note

- When you do not use Bluetooth[®] function, turn it off to save the battery.
- The setting of the Bluetooth[®] ON/OFF is not changed even when the power is turned off.

Changing the name of this terminal

You can change the name of this terminal displayed on another device when communicating via Bluetooth[®] communication.

- 1 From the Home screen, "Apps" ► "Settings" ► "Bluetooth"
- 2 Turn on "Bluetooth"
- 3  ► "Edit phone name"
- 4 Enter a name ► "Save"

Pairing/Connecting with Other Bluetooth[®] Device

To transfer data by Bluetooth[®] communication, perform pairing (pairing setting) with another device in advance, and then register it to this terminal.

- Depending on Bluetooth[®] devices, there are devices with only pairing and those conduct till connection.

- 1 From the Home screen, "Apps" ► "Settings" ► "Bluetooth"

- 2 Turn on "Bluetooth"

- Detected Bluetooth[®] devices are displayed by list.
- If no Bluetooth[®] devices are displayed, tap "Search" to re-search.

- 3 Tap a desired device to connect with ► "Pair"

- Pass key (PIN) may be required depending on the Bluetooth[®] device to be connected to.

Note

- Even for devices requiring pass code (PIN) when pairing, once pairing is performed, it is not necessary to enter the pass code (PIN) to reconnect after disconnected as long as the pairing is not canceled.
- You can set pairing even if it is a device unable to connect such as an incompatible profile. However, it cannot be connected even if you tap the device.
- Tap  on the paired device ► "Connection access" to select whether to always confirm automatic connection or not.
- Devices that are not compatible with SCMS-T cannot play data such as music data despite the types of audio related data.

When answering pairing request from another device

When a screen asking for pairing when connecting Bluetooth[®] communication is displayed, tap "Pair" or enter pass code (PIN) if required, then tap "OK".

Disconnecting

- 1 Tap the device you want to disconnect from "PAIRED DEVICES" list ► "OK"

Canceling pairing

- 1 Tap  beside the device that you want to unpair from the "PAIRED DEVICES" list ► "Unpair"

Sending/Receiving Data via Bluetooth® Function

- Turn on Bluetooth® function beforehand to make this terminal detectable.

Sending data via Bluetooth® function

You can send data of phonebook (name card data in vcf format), files such as photos or videos, etc. to another Bluetooth® device (PC etc.).

- For sending, perform the operation from the menu such as "Share"/"Send" of each application.

Example: Sending a photo from Gallery

- 1** Pairing/connecting this terminal with another Bluetooth® device (P232)
- 2** From the Home screen, "Apps" ► "Gallery" ► select and display the photo you want to send
- 3**  ► "Bluetooth" ► select a Bluetooth® device
- 4** Receive the data by following the on-screen instructions on the device of the recipient

Receiving data via Bluetooth® function

- 1** Pair/connect (P232) this terminal with another Bluetooth® device
- 2** The data is sent from the other Bluetooth® device
- 3** Tap "Accept" when Bluetooth® authorization request screen is displayed on this terminal
 -  appears in the status bar, and data reception starts.
 - You can confirm data reception on the notification panel.
 - Message screen appears at the bottom screen after receiving data.

NFC Communication

NFC is short for Near Field Communication. It is an international standard proximity wireless communication system determined by ISO (International Organization for Standardization). This terminal enables non-contact IC card function, Reader/writer function, P2P function, etc.

Use NFC function to transfer data with other compatible devices.

- For holding over the other device, see P140.

Android Beam

You can transmit and receive data with a device equipped with Reader/Writer, P2P functions.

- Enable the Reader/Writer, P2P function and place a check mark in "Android Beam".
- If NFC/Osaifu-Keitai is set to lock, Android beam cannot be used.
- Depending on the application, Android beam may not be used.
- We do not guarantee any communication with a terminal equipped with Reader/Writer, P2P functions.
- If terms of use screen is displayed when sending or receiving data, confirm the contents and follow the on-screen instructions.

Transmitting data

Transmit files of browser webpages, contacts, images and video to other NFC compatible terminals.

Example: To transmit images from Gallery

- 1** Enable the Android beam function on the receiving end terminal
- 2** Enable the Reader/Writer, P2P function on this terminal and place a check mark in "Android Beam" (P195)
- 3** From the Home screen, "Apps" ► "Gallery" ► select an image to transmit
- 4** Align the  mark on this terminal and the receiving end terminal, and bring them close together
 - The beam share screen is displayed.
- 5** Tap beam share screen
 - The beam receiving starts on the receiving end terminal.

Sending data

- 1** Enable the Android beam function on the receiving end terminal
- 2** Enable the Reader/Writer, P2P function on this terminal and place a check mark in "Android Beam" (P195)
- 3** Align the  mark on this terminal and the transmitting end terminal, and bring them close together
 - The beam receiving starts.
 -  is displayed in the status bar.
 - Reception status can be confirmed via the notification panel.
 - After reception ends, a message is displayed on the status bar.

External Device Connection

Connecting with a PC

You can synchronize data, such as music, with "Windows Media Player" on your PC by connecting this terminal with your PC via the microUSB Cable 01 (optional), and drag and drop the data to transfer it between the PC and this terminal.

- To recognize this terminal on your PC, a dedicated driver and Windows Media Player 11 or later are required.
 - For details about how to download and operate the dedicated driver, refer to the homepage below.
<http://www.lg.com/jp/support/software-manuals> (In Japanese only)
 - You can download the latest Windows Media Player on Microsoft website.
<http://windows.microsoft.com/en-us/windows/download-windows-media-player>
- Some functions such as shooting and playing a video may not work while this terminal is being connected with a PC.
- Some data may not be available due to copyright.


Note

- To operate a file, operating environment on PC side is shown as follows:
 - OS*: Windows 8.1/Windows 8/Windows 7/Windows Vista
 - Windows Media Player: Windows Media Player 11 or later
 - * We do not guarantee operations conducted in environment with upgraded OS or in added/changed environment.
- Use a PC to back up the client's data saved in the internal storage of this terminal and microSD card.
- The data saved in the internal storage of this terminal or microSD card from other devices such as PCs may not be able to display on this terminal. Also, the data saved in the PC from this terminal may not be able to display on other devices.

Connecting this Terminal with a PC

- 1 Insert the microUSB plug of microUSB Cable 01 (optional) in the microUSB connection terminal of this terminal

- Insert the microUSB plug horizontally with USB mark facing up.

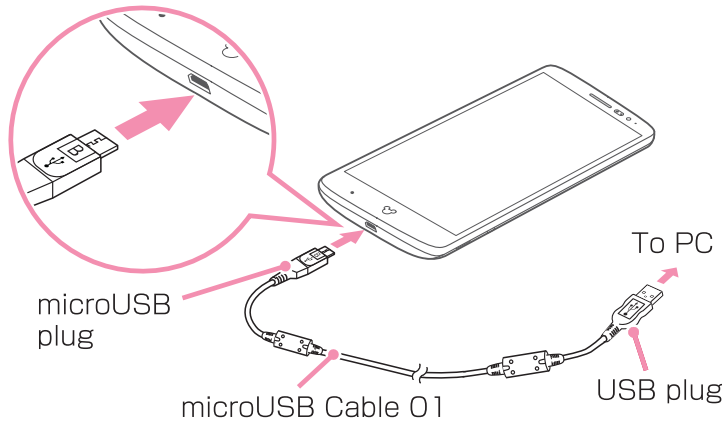

- 2 Insert the USB plug of microUSB Cable 01 in the USB port on PC

- This terminal is recognized automatically on a PC.

Note

- While reading or writing the data, do not disconnect the power.
- Do not unplug microUSB cable during reading or writing data. Loss of data may cause.

Using as Media Device

Connect this terminal and a PC with microUSB Cable 01 (optional). This terminal is recognized as a media device (MTP) and you can transfer media files such as images, music or videos.

- 1 Connect this terminal to PC via microUSB Cable 01 (P238)

- 2 Open the Notification panel ► Confirm "Media device (MTP)" is displayed

- When "Send images (PTP)" is displayed, "Send images (PTP)" ► "Media device (MTP)".
- If the "Install PC programs" screen is displayed on this terminal, tap "Cancel".

- 3 Operate the PC to transfer data between the terminal and the PC

Using as Camera Device

Connect this terminal and a PC with microUSB cable 01 (optional) and turn to Send images (PTP) mode. You can transfer still images and videos to the PC.

- Use the Send images (PTP) mode to transfer the data to the PCs which do not support MTP.

- 1** Connect this terminal to PC via microUSB cable 01 (P238)
- 2** Open the Notification panel ► "Media device (MTP)" ► place a check mark in "Send images (PTP)"
 - When "Install PC programs" screen is displayed on this terminal, tap "Cancel".
- 3** Operate PC to transfer data between the terminal and the PC

Connecting with Printer

You can print browser images or pictures with a Wi-Fi® supported printer.

- For operation method about Wi-Fi® supported printer, check the instruction manual.
- This terminal and the printer need to be connected with either the same Wi-Fi® network or the same Wi-Fi Direct®.
- The following file formats are compatible to a Wi-Fi® supported printer.

■ File formats available to print out

Image file	jpeg, jpg, png, tiff, gif, bmp, x-ms-bmp, webp, wbmp
------------	--

Wireless Print

Example: Printing out pictures from Gallery

- 1** From the Home screen, "Apps" ► "Gallery"
- 2** Select a picture you want to print out
- 3**  ► "Print"
- 4** Follow the on-screen instructions

Connecting with Other Devices

Using SmartShare Beam

Use SmartShare Beam to send or receive contents.

Setting SmartShare Beam

Set to publish the contents on this terminal on other client devices.

1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "SmartShare Beam"

2 Turn on "SmartShare Beam"

(Device name)	Change the name of this terminal which is displayed on another device.
Storage	Set a destination to save the received data.
Auto-accept requests	When there is an request from other clients, set to allow automatically or not.

Timeout	When SmartShare Beam is not being used, set the time duration before it turns off automatically.
File transfer history	Display the list of all the files which were sent/received by SmartShare Beam.
Help	Display Help.

Sending files to client device via SmartShare Beam

You can send contents in this terminal to other client devices.

Example: Sending pictures from Gallery

- 1** From the Home screen, "Apps" ► "Gallery"
- 2** Select a picture you want to send
- 3**  ► "SmartShare Beam"
- 4** Tap a device to send the picture
 - When it is sent by Wi-Fi Direct[®], turn on the SmartShare Beam on the client receiving device in advance.
 - When it is sent by Bluetooth[®], pair with the client receiving device in advance.
 - When the device is not displayed, tap "Rescan" to scan the device.

Receiving files to client device via SmartShare Beam

You can receive contents from other client devices.

- 1** When "File transfer" screen is displayed, "Yes"/"Accept"
 -  is displayed on the status bar. Data reception starts.
 - You can confirm the reception condition from notification panel.
 - When data is received, a message screen is displayed at the bottom of the screen.

Connecting with TV

You can connect this terminal with a TV to display videos and pictures.

- To connect this terminal with a TV, use a commercially available SlimPort supported cable or SlimPort supported accessory.
- HDMI terminal, HDTV terminal, VGA terminal or DisplayPort terminal is necessary on the TV being connected with.
- Depending on TV, the required SlimPort supported cable or SlimPort supported accessory may differ.
- We do not guarantee any operations with SlimPort supported cables and SlimPort supported accessories.
- Connect from TV side in order.
- To connect with a TV, refer to the instruction manual of TV or SlimPort supported cable, or the instruction manual of SlimPort supported accessories.
- To connect a SlimPort supported accessory, refer to the instruction manual of SlimPort supported accessories.
- When connecting this terminal with a SlimPort supported accessory, confirm the direction of the microUSB plug and insert it horizontally.

Note

<Usage of SlimPort supported cable or SlimPort supported accessory>

- Video or audio may not be output properly when connecting with a TV which does not support HDCP. Depending on the contents, some may not allowed to output from the content provider, some may be checked on due to the functional issues.
- When starting outputting, images may not be displayed properly due to output mode switch problem depending on the TV being connected with. In that case, switch input mode by TV remote.
- Depending on the TV being connected with, data output from this terminal may not be able to show full size. Change the TV display setting to adjust it.
- When connecting with a SlimPort supported cable, hold the SlimPort supported cable and do not lift this terminal.
- When not displaying on TV, remove the SlimPort supported cable or SlimPort supported accessory.
- When connecting a cable, signal may get influenced by your using environment.

Displaying on Wi-Fi[®] Miracast Supported Device via Wi-Fi[®] Connection

Connect this terminal and a Wi-Fi[®] Miracast supported device via Wi-Fi[®] connection to show videos and pictures on TV or on a display.

- Turn on Wi-Fi[®] function beforehand.

1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "Miracast"

2 Turn on "Miracast"

- Tap "Search for devices" if the Wi-Fi[®] Miracast supported device you want to connect is not displayed.

3 Tap a Wi-Fi[®] Miracast supported device

Disconnecting Wi-Fi[®] Miracast supported device

1 Tap a device to disconnect ► "OK"

Note

- Video or audio may not be output properly when connecting with a device that does not support HDCP. Depending on the contents, some may not be allowed to output from the content provider, some may be checked on due to the functional issues.
- When you have an incoming call during connection, the incoming call screen is also displayed in the connected device.
- For some applications, contents are displayed in the connected device. Operations such as playback in this terminal are available.

Using Overseas

Overview of International Roaming (WORLD WING)

The international roaming service (WORLD WING) allows you to use your terminal in the service areas of overseas operators affiliated with DOCOMO, with the same phone number and email address. Calls and SMS can be used without changing settings.

● Available network

This terminal is placed in class 5. You can use it in LTE network, 3G network and GSM/GPRS network service areas. It can also be used in countries/regions supporting 3G 850MHz/GSM 850MHz networks. Please check the information about the available areas.

● Before using this terminal overseas, read the following item.

- NTT DOCOMO's website.

Note

- For country codes/international call access codes/universal number international prefix, supported countries/areas and network operators, refer to NTT DOCOMO's website.

Available Service Overseas

Main communication service	3G	3G850	GSM (GPRS)	LTE
Calls	○	○	○	× ^{*2}
SMS	○	○	○	○
Email ^{*1}	○	○	○	○
Browser ^{*1}	○	○	○	○

(○: Available ×: Unavailable)

*1 To use data communication when roaming, turn ON the data roaming settings (P246).

*2 Calls via 3G.

Note

- Some services are not available depending on the overseas network operator or network.
- Confirm the name of the network operator being connected on the notification panel (P70).

Before Using Overseas

Confirming before Departure

Before using this terminal overseas, check the following information in Japan.

● Contract

- Check whether you have applied for WORLD WING. For more details, contact "General Inquiries" on the back cover of this instruction manual.

● Battery Charge

- About charging, see DOCOMO website.

● Charges

- Fees are charged differently (call fee, packet communication fee) for overseas use from the charge in Japan. For details, see DOCOMO website.
- Auto communication may start depending on the applications you use, therefore packet communication fees may become high. Ask the supplier for operating conditions of each application.

Pre-configuring

● Network service configuration

If you have subscribed Network service, voice mail service, call forwarding service, number notification service, etc. are available overseas. However, some network services are unavailable.

- Starting "Remote operation settings" service is required when using networks service overseas. You also can set "Remote operation settings" after arriving abroad.
 - From Japan (P112)
 - From overseas (P252)
- Network service may not be available to use depending on the network operator you are using abroad even if you can set or cancel the settings.

Confirming Overseas

When you arrive at overseas, this terminal automatically connects to an available network operator when it is powered on.

● About connections

Place a check mark in "Choose automatically" of "Network operators" to select the optimum network automatically.

Settings for Using Overseas

Setting data roaming

To perform packet communication overseas, you need to turn on data roaming.

- 1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "Mobile networks"
- 2 "Data roaming" ► confirm notes screen and tap "OK"

Setting a network operator

While purchasing, this terminal is set to detect the available networks automatically and switch to it. When setting up manually, set the following settings.

- 1 From the Home screen, "Apps" ► "Settings" ► "More..." ► "Mobile networks" ► "Network operators" ► "Search networks"
 - Search and display available networks.
 - When an error occurs during the network search, turn off "Data enabled" and perform it again (P192).
- 2 Select a network of network operators

Setting network mode

- 1** From the Home screen, "Apps", ► "Settings" ► "More..." ► "Mobile networks" ► "Preferred network type"
- 2** "LTE/3G/GSM(Auto)"/"LTE/3G"/"3G/GSM"/"3G"/"GSM"

About date & time

If you place a check mark in "Auto-date & time" and "Auto-time zone" in "Date & time", the time and time zone of this terminal's clock will be automatically changed when information about the local time and time zone is received from the network of the overseas operator to which you are connected.

- The automatic time/time zone setting may not work properly depending on the overseas operator. In that case, set the time zone manually.
- The timing of these changes may differ depending on the overseas operators.
- "Date & time" → P218

Inquiries

- If your terminal or docomo nano UIM card is lost or stolen overseas, contact DOCOMO immediately from your current location and carry out the procedure to suspend usage. For contact information, refer to the back cover of this manual. Please note that you are liable for any call or communication charges incurred after the loss or theft of this terminal.
- You will need the country's "international call access code" or "universal number international prefix" if calling from a land-line phone overseas.

How to Make and Receive Calls at Your Location

Making Calls to Other Countries (including Japan)

You can use the international roaming service to make calls to other countries while overseas.

- For information of available countries or network operators, see NTT DOCOMO's website.

- 1** From the Home screen, "Phone" ► "Dial" tab
- 2** Enter "+" (touch and hold down "0") ► country code ► area code ► other party's phone number in order
 - If the area code begins with "0", remove the first "0" when entering the number. However, "0" may be required in some countries and regions such as Italy.

3 ► "Call to <country name>"/"Call without int'l prefix"

- The country name set in "Country code" of "International dial assist" is displayed in the above <country name>. For example, in case of "Japan" (+81), "Call to Japan" is displayed.

4 Tap "End call" to end the call

Note

- When placing a check mark in "Automatic conversion function" of "International dial assist", enter a number starts from area code the same as when you call in Japan
►  ► tap "Converted number".

Making a Call Domestically

You can make a call to the other party's land-line phone or a mobile phone in the same way as in Japan.

- 1 From the Home screen, "Phone" ► "Dial" tab
- 2 Enter the other party's phone number
 - To make a call to a land-line phone, enter the area code and the other party's phone number.
- 3 
- 4 Tap "End call" to end the call

Making a Call to WORLD WING Users

When the other party that you are making a call to is a WORLD WING user, make a call as if you are making an international call to Japan even if the other party is in the country in which you are staying.

- Dial "+" and "81" (country code of Japan) first and then dial the phone number omitting the "0" at the beginning as if you are making a call to Japan because the call is routed through Japan regardless of the destination.

Receiving Calls Overseas

You can receive calls in the same way as in Japan.

Note

- When you receive a call while using the international roaming service, the call is forwarded internationally from Japan, regardless of the country from which the call is made. The call is charged the same as the call to Japan, and the receiver is charged the incoming call charge.
- Even if the other party has made a call with notification of the Caller ID set, you may not be notified of the Caller ID depending on the overseas operator. Also, the number you are notified of may differ from the other party's Caller ID depending on the network that the other party is using.
- "Reject call setting" may not be declined during use overseas (P112).

Making a Call from Other Parties

● Having the other party call you overseas from Japan

Have the other party call you by dialing your phone number in the same way as you do when you are in Japan.

● Having the other party call you overseas from a country outside Japan

You need to have the other party dial the international call access code and "81" regardless of the destination because the call is routed through Japan.

International call access code of the country in which the caller is staying is -81- 90 (or 80, 70) -XXXX-XXXX

Setting International Roaming

Setup to use the international roaming service or international phone calls.

- Depending on the overseas network operator, roaming cannot be setup in some cases.

1 From the Home screen, "Phone"
 ►  ► "Call settings" ► "Roaming settings"

2 Change the settings if necessary

Restricting incoming calls	During the international roaming, set to restrict the incoming calls or not.
Incoming notification while roaming	During the international roaming, set to notify the incoming calls via SMS or not when in places out of service, etc.
Roaming guidance	During the international roaming, the notification that you are being overseas will be sent to the caller.

International dial assist	Automatic conversion function	Set ON/OFF of Automatic conversions. • When it is turned on, an international dial assist screen appears for calls with "+" entered at the beginning of the phone number. Tap "International call" to convert "+" to an international access code registered in "International prefix".
	Country code	Add country code for international call.
	International prefix	Add prefix international access code for international call.

Network service	Remote operation (charged)	Set network services such as voicemail from overseas. • Activate "Remote operation settings" beforehand. • For operations from overseas, international call fee to Japan in the country you use is charged. • Depending on overseas network operators, you cannot make the settings.
	Caller ID notification request service (charged)	
	Roaming call notification (charged)	
	Roaming guidance (charged)	
	Voice mail (charged)	
	Call forwarding (charged)	

After Returning to Japan

When you return to Japan, this terminal automatically connects to the docomo network. If it is unable to connect, change the following settings.

- Set "Preferred network type" to "LTE/3G/GSM (Auto)" (P247).
- Place a check mark in "Choose automatically" of "Network operators" (P246).

Appendix/Index

Troubleshooting (FAQs)

Troubleshooting

- First, check whether software update is required. If so, update the software (Software Update → P268).
- If it does not improve after confirming the check items, contact "Repairs" (in Japanese only) on the back cover of this manual or a repair counter specified by DOCOMO.

■ Power supply

Symptom	Check item
Power does not turn on	• Is the battery pack installed correctly? → P46 • Is the battery dead? → P47

■ Charging

Symptom	Check item
Cannot charge notification LED light does not light up or blink	• Is the battery pack installed correctly? → P46 • Is the adapter plug and cigar lighter plug properly inserted into power outlet or cigar lighter socket? • Are the adapter and this terminal set properly? • When using the AC adapter (optional), is the AC adapter firmly connected to this terminal? • Any call or data communication while charging, or using other functions for a long time may result in this terminal getting hot and Notification LED light may blink. In this case, charge again after this terminal cools down.

■ Terminal operations

Symptom	Check item
Becomes hot during operation or charging	While operating or charging, or if you operate applications or watch TV for a long time while charging, the terminal, battery pack or adapter may become hot. There is no operation problems and you can continue to use it.
Battery life is short	- This terminal, internal battery or adapter may become hot during operations or charging, or when shooting videos or using 1 Seg for a long time while charging. This is not an operation hazard, so you can continue using them. - The operating time of the battery pack varies depending on the operating environment and the secular degradation of the battery pack.

Symptom	Check item
Battery life is short	The battery pack is a consumable accessory. The usage duration of the battery per 1 charge decreases gradually each time the battery is recharged. When the operation time is too short even if the terminal is fully charged, purchase a new battery pack of the specified type.
Power is automatically turned off or the terminal is automatically restarted.	If the contacts of battery pack are dirty, the contact may become poor and the power may shut off. When it is dirty, clean the battery pack with a dry cotton swab etc.
No reaction when tapping the touch screen or pressing the keys	- Has the screen been locked? → P202 - Is the power off? → P50

Symptom	Check item
Slow reaction when tapping the touch screen or pressing the keys	It might occur if a large amount of data is saved in terminal or data with extremely large size are processed between this terminal and microSD card.
The docomo nano UIM card is not recognized	Is the docomo nano UIM card inserted in the right direction? → P45
Clock is wrong	Clock may become wrong if the power has been turned on for a long time. Check if it is set to "Auto-date & time", move to a place with better reception and power it on. → P218

Symptom	Check item
Terminal operation is unstable	- It may be caused by applications installed to the terminal after purchase. If problems improve when you start in Safe mode (a function to activate the terminal in a mode similar to default), problems may be improved by uninstalling the application. - How to activate Safe mode - While in the power OFF status, press and hold the power key for over two seconds. - After the docomo logo appears, press and hold the volume key (down) until the Home screen appears. * Press the power key for over two seconds with the power turned on ► touch and hold down "Power off" ► "OK" to activate.

Symptom	Check item
Terminal operation is unstable	* When Safe mode starts, "Safe mode" appears on the bottom left of the screen. * To stop Safe mode, turn the power OFF once and restart it. - Before starting Safe mode, backup necessary data. - Widgets that you have created may be gone. - Safe mode is not the normal starting condition, so stop Safe mode before normal usage.
Application does not work properly (cannot be activated or an error occurs)	• Is there a disabled application? Try again after enabling the disabled application. → P209

■ Calls

Symptom	Check item
Cannot make a call even if the call key has been tapped	• Is this terminal in Airplane mode? → P192
The ringtone does not sound	• Is the ringtone volume set to minimum? → P198 • Is it set to public mode (power OFF) or manner mode (Vibrate only, Do not disturb)? → P112, P198 • Has the unregistered call reject been set? → P112 • Is the ring time for the Voice Mail Service or Call Forwarding Service set to "0 sec."? → P111

Symptom	Check item
Calls are not connected (📶 does not disappear when you move, or calls cannot be made or received even when the radio wave is strong enough)	• Turn the power off and on, or remove and attach the battery pack or docomo nano UIM card. • Due to the radio wave types, making/receiving calls may be unavailable even with state of "in the service area" and even when radio wave is indicated as 📶. Move to the other place and call again. • Has the unregistered call reject been set? → P112 • Due to the crossing of radio waves, at the crowded public places, calls/emails are crossed and the connection status may not be good. In that case, "Please wait for a while(Voice service)" appears and calling sound is played. Move to other place or call again at other time.

■ Screen

Symptom	Check item
The display is dim	• Has the screen backlight timeout been set? → P200 • Has the screen brightness been adjusted? → P200 • Is the battery level low? → P47 • Has power save been set? → P207

■ Sound

Symptom	Check item
During a voice call, the other party's voice is difficult to hear or is too loud	• Has the call volume been adjusted with the volume key? → P106

■ Mail

Symptom	Check item
Email is not received automatically	- Is there a check mark in "Email" of "Account & sync"? Place a check mark in it. → P126 - Do you set "Update schedule" to "Manual"? Set Sync schedule. → P125

■ Camera

Symptom	Check item
Photos and videos shot with the camera are blurred	Check whether the lens are cloudy or have dirt on it.

■ TV (Full seg/1Seg)

Symptom	Check item
Cannot watch TV (Full seg/1Seg)	- Are you at a location that is outside of the digital terrestrial broadcast service area, or where the broadcast wave is weak? - Are the channels configured? → P153
Can be viewed images, but there is no audio	For devices that do not support SCMS-T, the TV sound cannot be heard (Full seg/1Seg).
- Cannot obtain screenshots on TV (Full seg/1Seg) - QMemo+ background does not show up in the TV	To protect the TV (Full seg/1Seg) copyright, the screenshot and QMemo+ function are restricted. It is not an abnormal performance.

■ Osaifu-Keitai

Symptom	Check item
Osaifu-Keitai cannot be used	• If you remove the battery pack or activate Omakase Lock, Osaifu-Keitai function cannot be used regardless of NFC/Osaifu-Keitai lock settings. • Is NFC/Osaifu-Keitai set to lock? → P140 • Did you swipe the  mark of this terminal over the reader? → P140

■ Overseas use

Symptom	Check item
This terminal is not available to use overseas	■ Antenna mark appears • Have you applied for WORLD WING? Check whether you have applied for WORLD WING. ■ Icon which indicates out of service area appears • Are you at a location that is outside of the international roaming service area, or where the signal is weak? See DOCOMO website for whether it is an available service areas or overseas network operator. • Try to change the settings of network or overseas network operator. - Set "Preferred network type" to "LTE/3G/GSM (Auto)" → P247 - Place a check mark in "Choose automatically" of "Network operators". → P246 • Turn off this terminal and then turn it on again. → P50

Symptom	Check item
Data communication is not available overseas	Set Data roaming to ON. → P246
This terminal has become unusable suddenly while using overseas	Has the approximate limit of usage fee been exceeded? For "International roaming service (WORLD WING)", the approximate limit of usage fee is set in advance. If the limit is exceeded, pay off the usage fee to resume services.

Symptom	Check item
The other party's number is not displayed/ A different number is displayed/ The registered Phonebook or Caller ID notification does not operate properly	Even if the other party has made a call with notification of the Caller ID set, you may not be notified of the Caller ID depending on the network or network operator. Also, the number you are notified may differ from the other party's Caller ID depending on the network or network operator you use.

■ Data management

Symptom	Check item
Data transfer is not working	Are you using a USB HUB? If you use a USB HUB, data transfer may not work properly.
The data saved on a microSD card is not displayed	Remove and attach microSD card. → P225
When trying to view an image,  appears or  appears in preview	 may appear if image data has been destroyed.

■ Bluetooth® function

Symptom	Check item
This terminal cannot find/be connected to a Bluetooth® compatible device	Put the Bluetooth® compatible device (commercial) on standby and register it on this terminal. If you want to delete a registered device and register it again as a new device, you must delete the registered device from both the Bluetooth® compatible device (commercial) and this terminal before you register it again. → P232
Cannot make calls from this terminal when connected to an external device, such as a car navigation or hands free device	If you attempt to call somebody several times when he or she does not answer or is out of the service area, calls to that number may be disabled. In this case, turn off this terminal and then turn it back on again.

■ Map and GPS Function

Symptom	Check item
AUTO-GPS service information cannot be set.	• Check if the AUTO-GPS function is deactivated due to low battery power. • Check if the AUTO-GPS function is deactivated due to low battery power. If the AUTO-GPS function is deactivated by the "Low-power operation settings", the AUTO-GPS service information cannot be set. In that case, change the "Low-power operation settings" to "Not suspend" or charge the battery to set it. → P209 • Check if the AUTO-GPS operation setting is turned OFF. → P209

Error Message

Error Message	Description
No SIM card	The docomo nano UIM card is not working properly. If the problem is not resolved by removing and reinserting the docomo nano UIM card, contact "Repairs" (in Japanese only) on the back cover of this manual.
No service	You cannot use this terminal because it is out of the service area or it is in a place where there is no signal reception. Move to a location where you can get signal reception.
PIN1 code blocked Enter PUK	Enter your PIN unblocking key correctly. → P215

Error Message	Description
- Not enough space on all storage. To free up space, delete some files. - If you keep using, some functions and applications may not be operated. Try to free space by deleting items, such as apps or media content.	It is displayed when there is not enough space to save a file, application or media contents, or to operation part function or application. You can delete files or media contents or uninstall applications to ensure the enough space. → P137, P228
- Please wait for a while(Voice service) - Please wait for a while(Data service)	This is displayed when audio/data services are restricted due to heavy traffic. Re-operate after the restrictions have been cancelled.

Error Message	Description
Invalid recipient	The phone number or contact entered in SMS recipient is invalid. The phone number unavailable to use as a recipient or a contact has not been registered in Contacts is entered. Enter the correct phone number or contact.
Cannot enter more recipients.	You cannot add more than one recipient in SMS. Only enter one recipient to send messages.
Cannot enter more letters.	The message is over the character number limit. Unavailable to input anymore. keep it within the limit number.
Cannot send message	Cannot send SMS due to network problem. Confirm network first.

Error Message	Description
Login information incorrect. Try again	When setting up Email account, an incorrect Email address or password has been input. Input the correct Email address or password.
Network unavailable	When setting up Email account, it cannot access to the server due to the abnormality of the network. Confirm the network state.
Optimizing app XX of XX . This may take longer depending on apps. Please do not remove the battery until complete.	This will display when you are notified of the application formats up to kitkat being converted into the Lollipop application format. Do not remove the battery pack before the work is finished.

Anshin Remote Support

Supports on operation settings of this terminal, application usages and the connection with peripheral devices such as a PC are available by sharing your terminal's screen with DOCOMO.(in Japanese only)

- This support is not available when the docomo nano UIM card of the docomo is not inserted, when using the international roaming, or in the Airplane mode.
- This support is a paid service that requires subscription.
- There are unsupported operations and settings.
- For details of this support, refer to the DOCOMO website.

1 Call Support center for Anshin Remote

 0120-783-360

Business hours: 9:00 a.m. to 8:00 p.m., (Open all year round)

- When using this terminal to call Support center for anshin remote support Call, from the Home screen, tap "Apps" ► "遠隔サポート (Remote support)" ► "このスマートフォンから発信する (call from this smart phone)" ►  .

2 From the Home screen, "Apps" ► "遠隔サポート (Remote support)"

- For the first time of using this support, you are required to accept the "アプリケーション・プライバシーポリシー (application privacy policy)".

3 "遠隔サポートの接続画面に進む (move to remote support connection screen)" ► "同意する (agree)"

4 Input the connecting number that is announced by DOCOMO

5 Start remote support after connecting

Warranty and After-Sales Service

Warranty

- Be sure to receive a warranty at the time of purchase of this terminal. Read contents of the warranty and confirm information such as "販売店名・お買い上げ日 (shop name and date of purchase)" and keep it in a safe place. If necessary items are not described, immediately contact the shop of purchase. The warranty for free repair is valid for one year from the date of purchase.
 - * Back Cover L40, Battery Pack L24, TV Antenna Cable L01 and Mickey Window Cover L01 are excluded in the free repair warranty.
- The specifications and appearance of this terminal, including the accessories in this package are subject to change for better without notice.
- Data saved in Phonebook, etc. may be modified or lost due to the malfunction, repair or other handling of this terminal. You should therefore make a copy of the Phonebook data, etc. as a precautionary measure.

- * Phonebook data can be saved on microSD card in this terminal.
- * Data such as phonebook entries can be backed up using docomo cloud.

After-Sales Service

When this terminal breaks down

Before repair, read "Troubleshooting" in this manual for detailed information. If the problem still persists, contact "Repairs" (in Japanese only) on the back of this manual.

Repairs

Bring your terminal to a repair counter specified by DOCOMO. Repairs are accepted during business hours of a repair counter. Also, you must bring the warranty. Note that it may take some days to repair this terminal depending on the malfunction state.

■ During the warranty period

- This terminal is repaired at no charge under the conditions of the warranty.
- Make sure to bring the warranty for repair. You will be charged even during the warranty period if the warranty is not presented or the trouble or damage is

caused by your inappropriate handling (such as damage to external connection terminals, earphone/microphone jack, LCD, etc.), or when it is not repaired by a repair counter specified by DOCOMO.

- You will be charged even during the warranty period if malfunction is caused by the use of devices and consumables other than those specified by DOCOMO.

■ Repair may not be possible in the following cases

- When, as the result of inspection, corrosion is found due to exposure to water, condensation or sweat, or any of the internal boards are damaged or deformed (damage to the external connection terminals, earphone/microphone jack, LCD, or cracked body could be the case as well).
- When it is not repaired by a repair counter specified by DOCOMO.
- * Since these conditions are outside the scope of the warranty, any repairs, if at all possible, will be charged.

■ After expiration of the warranty

All repairs that are requested are charged.

■ Replacement parts

Replacement parts (parts required to maintain functions) will in principle be kept in stock for 4 years after termination of production. However, depending on the malfunctioning part, repair may not be possible due to a lack of replacement parts. Even after the stock period has expired, the repair of some malfunctioning parts may be possible. Therefore contact "Repairs" (in Japanese only) on the back of this manual.

Precautions

- Never modify this terminal or accessories.
 - Doing so may result in fire, injuries or malfunctions.
 - The modified terminal may be repaired only if the owner agrees on that all the modified parts are restored to the original conditions. However, repairs may be refused depending on the modifications.
The following cases may be considered as modifications.
 - Put sticker on display or key
 - Decorate this terminal by adhesive agent
 - Exchange to parts such as cover other than those specified by docomo
 - Malfunction and damage due to modifications will be repaired at the owner's expense even during the warranty period.

- Do not remove the sticker attached on the terminal. The nameplate has the role of certificate that meets the technical standards. Therefore, please note that if the contents of the sticker cannot be identified by removing or replacing the sticker intentionally and it is impossible to judge the technical standards, repairs of the terminal may not be accepted.
- Note that the settings and other information may be cleared (reset) as a result of malfunction, repair or other handling. In this case, make the settings again.
- When the repair is executed, MAC address of Wi-Fi[®]/Bluetooth[®] address in this terminal may be changed regardless of repaired part.
- Magnetic components are used in the parts that are described below. Do not allow cash cards or other devices that are vulnerable to magnetism to come into contact with the phone.
Place: speaker, mouthpiece (receiver), vibrator (left side of power key)
- Although this terminal is waterproofed, if the inside of this terminal has gotten wet or moist, immediately power off this terminal and remove the battery pack, and bring it to the DOCOMO-specified repair office as soon as possible. However, note that it may not be repaired depending on the extent of the damage.

Memory dial (Phonebook function) and downloaded data

When you change the model or repair this terminal, data that has been imported, downloaded or created by you may be changed or lost. DOCOMO shall have no liability for any change or loss of any kind. Under some circumstances, DOCOMO may replace your terminal with its equivalent instead of repairing it. In this case, most data from the old terminal cannot be transferred to the replacement terminal.

Software Update

About Software Update

The software update is a function which you can connect to the network and confirm if an update is required. It downloads the update file as required and installs it.

When the update is necessary, follow the instructions from  (software update) on the status bar, or visit DOCOMO website.

The following contents are included in the software update. In order to use this terminal safely and comfortably, please make sure to update to the latest version.

- Function improvement, new functions
- Easier to operate
- Quality improvement
- New security patch

Note

- The update can be run with the data saved in this terminal. However, the data may not be protected depending on your terminal conditions (malfunction, damage, getting wet, etc.). It is recommended to back up necessary data beforehand. Please note that some data cannot be backed up.

Precautions

- Once updating your terminal, you cannot downgrade to any former software.
- When updating, the original information about this terminal (type, built number, etc.) will be sent to our server automatically. We do not use the sent information for purposes other than Android upgrade.
- When the packet communication is used via FOMA/Xi, communication fee does not occur while downloading.
- To update via packet communication, a contracted docomo nano UIM card is necessary. Also depending on the update contents, when packet communication is used, subscription to sp-mode is required.
- During the installation, you cannot make a phone call, receive an incoming call, use communication functions or other functions.
- All key operations are disabled during the update. The update cannot be stopped either.
- After finishing the update, it will be restarted.
- Part of the settings may be initialized after the update, set them up again.
- If a PIN has been set, the PIN entry screen appears during the restart after rewriting and you are required to enter your PIN.
- Consult a repair counter specified by DOCOMO when update fails and all operations are disabled.
- SMS sent during a software update are stored at an SMS center.
- It may take time to update.
- The following situations make it unavailable to update.
 - When you are on a call
 - When out of the service area is displayed
 - When it is tethering as a main device
 - When the date or time has not been set correctly
 - Remained battery is not enough
 - Free space in this memory is not enough
 - When the basic software is being changed to an unauthorized one

- Exit all applications before updating.
- Make sure to upgrade with battery fully remained.
- Do not power off or remove the battery pack during update.
- It is recommended that this terminal be put in a place with good reception and not be moved while downloading. The update may stop when it is put in a place with bad reception.
- When the download via Wi-Fi® starts, finish the download without moving it out of the Wi-Fi® environment. If the download is discontinued due to the Wi-Fi® disconnection, "Download stopped 【Reason】 · No Service" may be displayed on the screen even when the communication via Xi/FOMA has been connected. In that case, download it again with Wi-Fi® environment.
- When it does not need to update, "No upgrade is needed. Use it as it is." is displayed.

Updating Software

When this terminal needs to update, the update file will be downloaded automatically, and the installation will then be reserved.  (Software Update) is displayed on the status bar.

When it is purchased, the setting of automatically reserving installation is set to "ON".

- Depending on the update contents, it needs you to install it without installation being reserved.
Drag or swipe the status bar downward to open the notification panel ► tap a notification ► "Install".
- When changing the auto update settings, from the Home screen "Apps" ► "Settings" ► "About phone" ► "Update Center" ► "Software Update" ► "ON"/"OFF" in "Auto Update".
- When "Auto Update" is "OFF", operate "When the icon is not displayed on status bar" (P271).

Changing installation reservation time

You can change the reserved time yourself.

■ Install immediately

1 Drag or swipe the status bar downward to open the notification panel ► tap a notification

2 "Start Update" ► "OK"

■ Changing the reserved time

1 Drag or swipe the status bar downward to open the notification panel ► tap a notification

2 "Change start time" ► enter the time ► "OK"

- When you do not change the reserved time, tap "OK" to go back to the Home screen.

When the icon is not displayed on status bar

Follow the procedures below to update.

1 From the Home screen, "Apps" ► "Settings" ► "About phone" ► "Update Center" ► "Software Update" ► "Start Update"

- When there is a update file, the update starts.

2 After the download finished, "Start installing" ► "OK"

- The installation starts.
- If the "OK" was not tapped, the installation starts after 10 seconds.
- Depending on the update contents, a confirmation screen about the update appears after tapping "Start Update".
- After the confirmation screen appears, follow the step **1** and **2**.

1 Select an update method

- "Perform now(only via Wi-Fi)": Download the update file immediately via Wi-Fi®.
- "Perform at scheduled time(via Wi-Fi/Xi)": Download the update file at the reserved time automatically via Wi-F® or Xi/FOMA.
- * When it cannot be downloaded via Xi/FOMA, "Perform at scheduled time(only via Wi-Fi)" appears.

2 Select "Download and install" or "Download"

- "Download and install": After the download is finished, the installation is implemented automatically.
- "Download": Even after the update file has been downloaded, the installation is not implemented automatically. To install, you need to implement the installation yourself.

Note

- When the software in this terminal is the latest one, "No upgrade is needed. Use it as it is." appears.
- If the download is discontinued, the downloaded data till then will be stored for up to 14 days. To continue to download, tap  (Downloading update file stopped) on the notification panel.
- When "Perform at scheduled time" is selected, the download time is set up automatically. The start time cannot be changed. When you do not want to download at the time automatically set, "Software Update" ► "Back" and select "Perform now(only via Wi-Fi)" to download the update file.

Application Update

■ After the update, check if there are any application updates. If the applications are not updated, the performance will not be stable, or the functions are improper. Please make sure to update to the latest version.

- Update from the notification icon
After the update is finished, restart this terminal and the notification icon  (Updating has been completed) will appear. Drag or swipe the status bar downward to open the notification panel ► "Updating has been completed" ► "OK", update the applications from the update list.
- Update from Play Store
From the Home screen, "Play Store" ►  ► "My apps" to update each application.

■ About OS version information of each application, confirm where the application is provided.

Application Update

Configures settings for download of applications, update notification cycles, and automatic updates provided by LG Electronics Inc. Application can be updated via LTE/3G connections or via Wi-Fi® connections.

- For precautions on application update, refer to "Precautions" (P269) of software update.
- For the latest software information, refer to LG Electronics website.
<http://www.lg.com/jp/support/software-manuals> (In Japanese only)

Downloads

- 1** From the Home screen, "Apps" ► "Settings" ► "About phone" ► "Update Center" ► "App Updates"
 - When "Legal Documents for LG Software" screen is displayed, "Next" ► confirm "Terms of Use for LG Software" and "LG Software Privacy Policy", then place a check mark ► "Agree".
- 2** "Download"

Setting Updates

- 1** From the Home screen, "Apps" ► "Settings" ► "About phone" ► "Update Center" ► "App Updates"
- 2**  ► "Settings"
- 3** Change settings if necessary

Update notification cycle	Set to automatically check whether there are updatable apps, and set the notification cycles.
Auto-update apps	Set to automatically update upgradeable apps or not.

Main Specifications

Terminal

Model name		DM-01G
Size (H×W×D)		Approx. 144 mm× Approx. 74 mm× Approx. 9.6 mm (Max. thickness: Approx. 10.8 mm)
Weight		Approx. 149 g
Memory		ROM 16 GB* ¹ RAM 2 GB
Continuous standby time	LTE	Stationary (Automatic): Approx. 460 hours
	FOMA/3G	Stationary (Automatic): Approx. 550 hours
	GSM	Stationary (Automatic): Approx. 400 hours
Continuous call time	FOMA/3G	Approx. 950 minutes
	GSM	Approx. 770 minutes
	VoLTE voice call	Approx. 990 minutes

Charging time	AC adapter 05 (optional)	Approx. 140 minutes
	DC adapter 04 (optional)	Approx. 140 minutes
1 Seg	Watch time	Approx. 340 minutes
	Record time* ²	Approx. 2640 minutes (saved in the internal storage)
Full seg	Watch time	Approx. 300 minutes
	Record time	Approx. 70 minutes (saved in the internal storage)
Display	Type	TFT (Full HD IPS)
	The number of produced colors	16,777,216 colors
	Size	Approx. 5.2 inch
	Resolution	Side 1080 pixels × Line 1920 pixels (Full HD)

Image pickup device	Type	CMOS with flash on the back side
	Size	Main camera: 1/3.0 inch Front camera: 1/6.9 inch
Effective pixels		Main camera: Approx. 13.2 million pixels Front camera: Approx. 2.4 million pixels
Recorded pixels (maximum)		Main camera: Approx. 13.1 million pixels Front camera: Approx. 2.4 million pixels
Zoom (Digital)		Up to approx. 8.0x (90 levels) (main camera only)
Wireless LAN		IEEE802.11 a/b/g/n standard (IEEE802.11n frequency band: 2.4 GHz/5 GHz)
Bluetooth®	Compatible version*3	Bluetooth® standard Ver.4.0
	Output	Bluetooth® standard version Power Class 1

Bluetooth®	Line-of-sight communication distance*4	Within approx. 10 meters
	Compatible file*5	HFP, HSP, OPP, SPP, HID, A2DP, AVRCP, PBAP, PAN (PAN-NAP), PAN (PANU), aptX, SBC
Earphone/microphone jack	Terminal diameter	3.5 ϕ
	Pole number	4 poles

- *1 Since saving Android OS and preinstalled applications requires memory space, the amount does not indicate actual available memory space.
- *2 For 1Seg, up to approximate 5 hours per video can be recorded.
- *3 We confirm that all Bluetooth® compatible devices including this terminal are compliant with Bluetooth® standards designated by Bluetooth® SIG and are certified. However, procedures may vary and data transfer may not be possible, depending on the characteristics and specifications of the device that you connect to.

- *4 This varies depending on the obstacles between the communicating devices and the reception quality.
 - *5 These are Bluetooth® standards that provide specifications for communications between Bluetooth® compatible device.
- Continuous call time is an estimate of the battery life during a continuous call with normal signal reception.
 - Continuous standby time is an estimate of the battery life during a continuous standby with normal signal reception. In certain circumstances, the standby time may drop to as low as half the time shown due to the battery charge, function settings, temperature, or radio wave reception in the area (no reception or weak).
 - A use of the Internet reduces the actual call (communication)/standby time. Even if you do not perform communication or use the Internet, composing emails, activating application, using camera also reduces call (communication)/standby time.
 - Stationary continuous standby time is the average battery life when you are stationary with normal signal reception.

- Charging time is an estimate for charging an empty battery pack with the terminal power off. For charging with the terminal power on, it takes longer.

Battery Pack L24

Battery type	Lithium-ion battery
Nominal voltage	3.8 V
Nominal capacity	2,920 mAh

TV Antenna Cable L01

Length	Approx. 140 mm
Weight	Approx. 8 g

Mickey Window Cover L01

Size	Flip section	Vertical: Approx. 141 mm Horizontal: Approx. 73 mm
	Back cover section	Vertical: Approx. 144 mm Horizontal: Approx. 74 mm
Weight		Approx. 48 g

Languages compatible

■ Display languages

Japanese/English

* Azerbaijani/Indonesian/Malay/Bosnian/
Catalan/Czech/Danish/German/Estonian/
Spanish/Basque/French/Arabic/Croatian/
Icelandic/Italian/Swahili/Kurdish/Latvian/
Lithuanian/Hungarian/Dutch/Norwegian/
Uzbek/Polish/Portuguese/Romanian/
Slovak/Slovenian/Finnish/Swedish/
Vietnamese/Turkish/Greek/Bulgarian/
Kazakh/Serbian/Ukrainian/Georgian/
Armenian/Farsi/Nepalese/Marathi/Hindi/
Bengali/Punjabi/Gujarati/Tamil/Telugu/
Kannada/Malayalam/Sinhalese/Thai/
Burmese/Cambodian/Korean/Chinese

■ Input languages (enter a character)

Japanese/English/Korean

File format

This terminal supports the display or playback of the following file formats.

Type	File formats
Audio	mp3, m4a, wav, ogg, amr, wma, aac, mka, mid, flac, isma, 3ga, xmf
Image	bmp, gif, jpeg, png, wbmp, webp
Video	mp4, 3gp, m4v, mkv, wmv, avi, ts, ogm, webm, ismv, asf

Photos and videos are saved in the following file formats.

Type	File formats
Photo	JPEG
Video	MP4

Estimate number of photos and video

■ Number of shooting photos (estimate)

Resolution	DM-01G (main unit)*	microSD card (1GB)
3120×3120 (9M)	Approx. 1,900	Max. approx. 250

The number of images when the file size is 4 MB.

* The number of saved images at the time of purchase.

■ Video recording time (estimate)

Resolution	DM-01G (main unit)*	microSD card (1GB)
1920×1080 (FHD)	Max. approx. 28 minutes (per video) Max. approx. 54 minutes (total)	Max. approx. 7 minutes

* Estimate recording time at the time of purchase.

* The file size is restricted to 4 GB.

File size restriction is an auto support function without being set by a customer.

Specific Absorption Rate (SAR) of Mobile Phones

This model [DM-01G] mobile phone complies with Japanese technical regulations and international guidelines regarding exposure to radio waves.

This mobile phone was designed in observance of Japanese technical regulations regarding exposure to radio waves(*1) and limits to exposure to radio waves recommended by a set of equivalent international guidelines. This set of international guidelines was set out by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is in collaboration with the World Health Organization (WHO), and the permissible limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health condition.

The technical regulations and international guidelines set out limits for radio waves as the Specific Absorption Rate, or SAR, which is the value of absorbed energy in any 10 grams of tissue over a 6-minute period. The SAR limit for mobile phones is 2.0 W/kg. The highest SAR value for this mobile phone when tested for use at the ear is 0.293 W/kg and when worn on the

body is 0.376 W/kg(*2). There may be slight differences between the SAR levels for each product, but they all satisfy the limit.

The actual SAR of this mobile phone while operating can be well below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum required to reach the network. Therefore in general, the closer you are to a base station, the lower the power output of the device.

This mobile phone can be used in positions other than against your ear. Please keep the mobile phone farther than 1.5 cm away from your body by using such as a carrying case or a wearable accessory without including any metals. This mobile phone satisfies the technical regulations and international guidelines.

The World Health Organization has stated that "a large number of studies have been performed over the last two decades to assess whether mobile phones pose a potential health risk. To date, no adverse health effects have been established as being caused by mobile phone use."

Please refer to the WHO website if you would like more detailed information.

http://www.who.int/docstore/peh-emf/publications/facts_press/fact_english.htm

Please refer to the websites listed below if you would like more detailed information regarding SAR.

Ministry of Internal Affairs and Communications Website:

<http://www.tele.soumu.go.jp/e/sys/ele/index.htm>

Association of Radio Industries and Businesses Website:

<http://www.arib-emf.org/O1denpa/denpa02-02.html> (in Japanese only)

NTT DOCOMO, INC. Website:

<https://www.nttdocomo.co.jp/english/product/sar/>

LG Electronics Inc. Website (Check the Specifications page for this terminal.)

<http://www.lg.com/jp/mobile-phones/all-phones/index.jsp> (in Japanese only)

(the above URLs are subject to change for without notice.)

-
- *1 Technical regulations are defined by the Ministerial Ordinance Related to Radio Law (Article 14-2 of Radio Equipment Regulations).
 - *2 Not including other radio systems that can be simultaneously used with Xi/FOMA.

Radio Frequency (RF) Signals

THIS MODEL PHONE MEETS THE U.S. GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone contains a radio transmitter and receiver.

Your phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/kg.* Tests for SAR are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified

power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the U.S. government-adopted requirement for safe exposure. The tests are performed on position and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC when tested for use at the ear is 0.55 W/kg, and when worn on the body is 0.89 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section at <http://transition.fcc.gov/oet/ea/fccid/> after search on FCC ID ZNFDM01G. For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines. Please use an accessory designated for this product or an accessory which contains no metal and which positions the handset a minimum of 1.5 cm from the body.

-
- * In the United States, the SAR limit for wireless mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.

Wi-Fi® Caution

This device is capable of operating in 802.11a/n mode. For 802.11a/n devices operating in the frequency range of 5.15 - 5.25 GHz, they are restricted for indoor operations to reduce any potential harmful interference for Mobile Satellite Services (MSS) in the US.

WIFI Access Points that are capable of allowing your device to operate in 802.11a/n mode(5.15 - 5.25 GHz band) are optimized for indoor use only.

If your WIFI network is capable of operating in this mode, please restrict your WIFI use indoors to not violate federal regulations to protect Mobile Satellite Services.

FCC Statement for the USA

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:



- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Part 15.21 statement

Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Part 15.19 statement

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Declaration of Conformity

The product "DM-01G" is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1 (a), 3.1 (b) and 3.2.

This mobile phone complies with the EU requirements for exposure to radio waves. Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR* limits** for exposure to radio-frequency (RF) energy, which SAR* value, when tested for compliance against the standard was 0.203 W/kg at the ear, and 0.174 W/kg when worn on the body. To comply with the RF Exposure limits a distance of greater than 1.5 cm must be maintained from the user's body.

While there may be differences between the SAR* levels of various phones and at various positions, they all meet*** the EU requirements for RF exposure.

* The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.

** The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

*** Tests for SAR have been conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

European Union Directives Conformance Statement

CE0168!

Hereby, LG Electronics Inc. declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

The above gives an example of a typical Product Approval Number.

Wi-Fi® (WLAN)

This device is intended for sale in Japan only.

This equipment may be operated in all European countries.

The 5150 - 5350 Mhz band is restricted to indoor use only.

Important Safety Information

AIRCRAFT

Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers a 'flight mode' or similar feature consult airline staff as to whether it can be used on board.

DRIVING

Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

HOSPITALS

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

PETROL STATIONS

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

INTERFERENCE

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15cm be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and do not carry it in a breast pocket.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

NOTE : Excessive sound pressure from earphones and headphones can cause hearing loss.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

For other Medical Devices:

Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Export Administration Regulations

Japan Export Control Regulations ("Foreign Exchange and Foreign Trade Law" and relevant laws and regulations) may apply to this product and its accessories. U.S. Re-export Regulations (Export Administration Regulations) applies to this product and its accessories. If you export or re-export this product or its accessories, please follow the necessary procedures at your own risk and expense. For details on the procedures, contact the Ministry of Economy, Trade and Industry or the U.S. Department of Commerce.

Intellectual Property Right

Copyrights and Portrait Rights

You have no right to copy, modify, or distribute contents such as text, images, music, map data, or software downloaded from websites on the Internet, or photos shot by the camera of this product without permission from the copyright holder except when the copy or quote is for personal use that is allowed under Copyright Law. Note that it may be prohibited to shoot or record live performances or exhibitions even for personal use.

Refrain from taking portraits of other people and uploading such portraits to websites using this product without their consent, as this violates portrait rights.

Trademarks

- "FOMA", "i-mode", "i-α ppli", "sp-mode", "Deco-mail", "WORLD CALL", "WORLD WING", "mopera U", "ToruCa", "iD" and "ToruCa" logo are the trademarks or registered trademarks of NTT DOCOMO, INC.
- "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- The microSD Logo, microSDHC Logo, and microSDXC Logos are the trademarks of SD-3C, LLC.



- The Bluetooth word mark and logos are owned by the Bluetooth SIG, INC. and any use of such marks by NTT DOCOMO, INC. is under license. Other trademarks and trade names are those of their respective owners.



- Wi-Fi Certified® and logos are trademarks or registered trademarks of Wi-Fi Alliance.



- Microsoft®, Windows®, Windows Vista®, and Windows Media® are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Google and Google logo, Android, Google Play and Google Play logo, Google Map, Google Calendar, Google+ and Google+ logo, Gmail and Gmail logo, YouTube and YouTube logo are trademarks or registered trademarks of Google, Inc.
- HDMI (High-Definition Multimedia Interface) is trademarks or registered trademarks of HDMI Licensing LLC.
- Analogix and SlimPort® are trademarks or registered trademarks of Analogix Semiconductor, Inc. All other trademarks and trade names are the property of their respective owners.
-  is a registered trademark of FeliCa Networks, Inc.
- FeliCa is a contactless IC card technology developed by Sony Corporation. FeliCa is a registered trademark of Sony Corporation.
- iWnn of OMRON SOFTWARE Co., Ltd. is used for conversion methods for Japanese language.
iWnn © OMRON SOFTWARE Co., Ltd. 2008-2015 All Rights Reserved.

- Disney elements: © Disney
The terminal, accessories and the packages may contain designs, contents and other works that Walt Disney Company (Japan) Ltd., its parent or their affiliates (collectively, "Disney") own, co-own or license copyright and other intellectual property rights. Please read the applicable Terms of Use before use. "Disney Mobile" is the registered trademark of Disney.
- This terminal contains NetFront Browser, NetFront Document Viewer and NetFront Sync Client of ACCESS CO., LTD. ACCESS, the ACCESS logo, and NetFront are registered trademarks or trademarks of ACCESS CO., LTD. in the United States, Japan and/or other countries.
Copyright © 2015 ACCESS CO., LTD. All rights reserved.
The module developed by Independent JPEG Group is included in a part of this terminal.

ACCESS™ NetFront®

- Other company names or product names described in this manual are trademarks or registered trademarks of those companies.

Others

- The abbreviations of operating systems (Japanese versions) below are used in this manual.
 - Windows 8 stands for Microsoft® Windows® 8, Microsoft® Windows® 8 Pro, Microsoft® Windows® 8 Enterprise.
 - Windows 7 stands for Microsoft® Windows® 7 (Starter, Home Basic, Home Premium, Professional, Enterprise and Ultimate).
 - Windows Vista stands for Windows Vista® (Home Basic, Home Premium, Business, Enterprise and Ultimate).
- This product is licensed complying with the MPEG-4 Patent Portfolio License. If you use it for private purpose without any profits, you are allowed to use them only when:
 - Recording videos that are compliant with the standard of MPEG-4 Visual (hereinafter referred to as MPEG-4 Video)
 - Playing MPEG-4 Videos recorded personally by consumers not engaged in profit activities
 - Playing MPEG-4 Video supplied from the provider licensed from MPEG-LA
 For details, contact MPEG LA, LLC of the U.S.
-  T-1520095
The Walt Disney Company (Japan) Ltd.

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Unlocking SIM

Unlocking SIM is available on this terminal. Unlocking SIM enables a SIM card from other makers to be used.

- The service and function may be limited. DOCOMO shall not be liable for performance.
- For details on unlocking SIM lock, refer to NTT DOCOMO website.

- 1 Insert a SIM card of other manufacturers**
- 2 Press the power key for 2 seconds or longer**
 - "Network locked" appears on the lock screen.
- 3 When the screen is locked, set a method to unlock it**
- 4 Input SIM unlock code in "SIM network unlock PIN" field ► "UNLOCK"**
 - After "SIM Network unlock successful." appears, the Home screen will be displayed in a while.
 - After the SIM is unlocked, a SIM of other manufacturers can be used.

Index

Number

1 Seg 142

A

About phone 223
Accessibility 219
Access Point 197
 Checking 197
 Initializing 198
 Setting an additional 197
Accounts 215
 Removing 216
 Setting 215
Anshin Remote Support 264
Application Update 273
Apps Screen 75
 Adding an application to Home screen 84
 Apps List 75
 Uninstalling 84
 Viewing the Application Screen 75
Auto Rotating Screen 55

B

Back cover 36
 Attaching 36
 Detaching 36
Backlight 51
Backup & reset 217
Battery 206
Battery Pack 46
 Attaching 46
 Life 48
 Removing 47
Before Using this Terminal 6
Bluetooth® 230
Bluetooth® tethering 195
Bookmark 133
Browser 129
 Changing Browser Settings 133
 Opening 129
 Opening incognito tab 131
 Searching a web page by voice 131
 Using Bookmark and History 133
 Using Browser Menu 132

C

Calculator	180	Camera.....	155
Calendar	177	Copyrights and portrait rights	155
Changing Calendar Settings	179	Notes for capturing images	155
Changing/Deleting a Schedule.....	179	Shooting a Photo	158
Creating a Schedule	178	Shooting a Video.....	159
Opening	177	Viewing Shooting Screen	156
Switching Calendar Display	178	Character Entry	57
Call.....	104	Charging	47
For Video Calls	105	Battery Charge.....	47
For Voice Calls	104	Charging Time (estimate)	48
Incoming Call While Activating an Application	105	Charging with AC Adapter	49
Calling	99	Charging with a PC.....	50
Answering Memo.....	110	Usage Time (estimate).....	48
Calling/Sending an SMS to a Missed Call	106	Clock	174
Call Logs	109	Setting Alarm	174
Emergency Call	102	Setting Stopwatch	177
Entering a Pause.....	101	Setting Timer	176
Making a Call.....	99	Setting World Clock	176
Making an International Call	103	Connecting with a PC	237
Operations during a Call	106	Connecting with Printer	239
Phonebook	113	Contacts	115
Receiving a Call	104	Copyrights and Portrait Rights	286
Call Logs	109	Customizing icons	72
Call Settings	111		

D

Data roaming	246
Data Storage BOX	183
Backing up	183
Restoring	183
Date & time	218
Declaration of Conformity	283
DEVICE	198
Disney Character Settings	201
Disney Market	135
Display	42, 200
dmarket	134
dmenu	134
docomo backup	181
Data Storage BOX	183
microSD card	181
docomo LIVE UX	88
Application Management	94
Backing up and Restoring the Home Screen	96
Displaying All the Applications	95
Home Application Information	98
Home Screen Management	89
Installing an Application from "Recommends"	95
Viewing Application Screen	93
Viewing Home Screen	88

docomo mail	119
docomo nano UIM card	44
Inserting	45
Removing	45
docomo phonebook	113
Adding/Editing a Group	117
Change Displayed Account	116
Confirming/Using Contacts	115
Deleting	116
Importing/Exporting Contacts	118
Registering	113
Registering My Profile	118
docomo service/cloud	209

E

Early Warning "Area Mail"	128
Deleting	128
Receiving	128
Setting	129
Viewing	128
Email	122
Adding an Account	124
Changing Email Settings	124
Creating and Sending Email	123
Displaying Received Email	123
Setting Email Account	122
Emergency Call	102
Emergency Mode	56

Error Message	262
European Union Directives Conformance Statement	284
Export Administration Regulations	286
External Device Connection	237
Connecting with a PC	237
Connecting with Other Devices	240
Connecting with Printer	239

F

FAQ	253
FCC Statement for the USA	282
File format	277
File Management	224
File or Folder Operations	227
Full seg	142

G

Gallery	160
Gestures	205
Gmail	127
GPS	170

H

Hall-IC sensor	42
Home Screen	73, 201
Adding an application or widget	74
Adding Home screen	73
Changing wallpaper	74
Deleting from the Home screen of an application or widget	74
Moving an application or widget	74
Viewing Home Screen	73
Home Touch Buttons	54
How to Use this Manual	1

I

Important Safety Information	284
Initializing this terminal	217
Initial Settings	64
Intellectual Property Right	286
International Roaming (WORLD WING)	244

L

Language & input	216
Laser auto focus sensor	43
Location	210
Lock Screen	202

M

Main Specifications	274
Making an International Call	103
Calling a fixed-line telephone	103
Calling a mobile phone	104
Maps	173
Opening	173
Searching a route	173
Searching spots in the area	174
Material List	23
Media Player	161
Available file formats	161
Copying Music Files and Videos to this Terminal	162
Opening	162
Playing Music	164
Playing Videos	166
Setting	169
Using Playlists	167
Messaging	119
Mickey Window Cover	222
Attaching	37
Detaching	37
microSD card	225
Backing up	181
Copying the contacts from Google account to docomo account	182

Formatting	226
Inserting	225
Removing	226
Restoring	182
Mobile Data	191
My Magazine	97

N

Network mode	247
Network security code	213
NFC Communication	235
NFC/Osaifu-Keitai	195
Notification icons	68
Notification LED Light	65
Notification Panel	70
Closing	71
Customizing quick setting icons	71
Sorting quick setting icons	71
Viewing notification details	71

O

On-screen Keyboard	57
10key keyboard	57
Arrow key mode	59
Changing Character Entry Settings	62
Handwriting converting keyboard	60
QWERTY keyboard	57

Operations during a Call	106
For Video Calls	107
For Voice Calls	106
Osaifu-Keitai	138

P

Part Names and Functions	42
Pass code (PIN)	231
Pause	101
PERSONAL	209
PIN code	213
Changing	214
Entering	215
Setting	214
PIN unblocking key	214
Play Store	136
Installing an Application	136
Purchasing an application	136
Uninstalling an Application	137
Power Off	50
Power On	50
Printing	222
Public mode (power OFF) settings	112

Q

QMemo+	179
QSlide Apps	55

R

Radio Frequency (RF) Signals	280
Roaming settings	251

S

Safe mode	255
Screen Display/Icons	66
Screen Shot	55
Security	211
Security code	212
Settings	184
Settings Menu	184
Shortcut Key	218
SmartShare Beam	240
Receiving files	241
Sending files	241
Setting	240
SMS	119
Receiving/Viewing	120
Sending	119
Software Update	268
Sound	198
Specific Absorption Rate (SAR) of Mobile Phones	278
Status Bar	66
Status icons	67
Storage	206

Supplied Accessories	2
Switching Home Application	87
SYSTEM	218

T

Task Manager	87
Tethering.....	193
ToruCa	141
Touch Screen	52
Operations	53
Precautions on using	52
Trademarks	287
Troubleshooting	253
TV (Full seg/1 Seg).....	142
How to use the watching screen.....	145
Reserving Recording/Watching	151
Settings	153
Switching Viewing Area	153
Using Program Schedule.....	149
Using TV Link	152
Viewing the data broadcast screen	148
Watching.....	145
Watching Recorded Programs	150

U

Unlocking SIM	289
Using Overseas	244
After Returning to Japan.....	252
Available Service	245
Confirming before Departure	245
Confirming Overseas	246
International Roaming (WORLD WING) ...	244
Making a Call Domestically.....	249
Making a Call from Other Parties	250
Making a Call to WORLD WING Users ...	249
Making Calls to Other Countries (including Japan)	248
Pre-configuring.....	246
Receiving Calls Overseas	250
Setting a network operator.....	246
Setting data roaming	246
Setting International Roaming	251
Setting network mode	247
Using Tethering	193

V

VPN	196
Adding	196
Always use.....	197
Connecting to	196
Deleting	196
Editing	196

W

Wallpaper	74
Waterproofness/Dustproofness	34
Before Using	35
Charging	41
Draining Water	40
Precautions	38
What You can Do with Waterproofness ...	35
Wi-Fi®	185
Adding	187
Connecting to	186
Disconnecting	187
Setting advanced	190
Wi-Fi Direct®	189
Wi-Fi® Miracast supported device	243
Wi-Fi® tethering	194
Windows Media Player	237
Wireless LAN	185
WIRELESS NETWORKS	184
WORLD CALL	103

Using mobile phones with your manners!

Please be considerate of others around you when using this terminal.

Always turn OFF your terminal in the following situations

■ **In a place where the use of mobile phones is prohibited**

Inside airplane or hospital, follow instructions of the airline company or medical facility. Power off this terminal in places banning the use of it.

Set your terminal to Public mode in the following situations

■ **While driving**

Using this terminal in your hand while driving is subject to punishment.

However, this excludes situations when the use of a mobile phone is unavoidable, such as the rescue of the sick and injured or the maintenance of public safety.

■ **When you are in a public place such as a theater, movie theater, or museum**

Using this terminal in a public place, where you need to be quiet, annoys people around you.

Be considerate of where you use your terminal and keep your voice and ringtone down

■ **Keep your voice down when using this terminal in a quiet place such as a restaurant and hotel lobby.**

■ **If you are in an outdoor public place, make sure you do not disturb others.**

Respect privacy

■ **Please be considerate of the privacy of individuals around you when shooting and sending photos using camera-equipped mobile phones.**

Do not use smartphone while walking

■ **Use of smartphone while walking on station platform or road makes your eyesight extremely narrow. It may cause accident.**

■ **Stop in a safe place and then use smartphone.**

Functions for maintaining good manners in public places

This terminal is equipped with functions that allow you not to answer an incoming call or to mute the sound.

■ Manner Mode (Vibrate only, Do not disturb) → P198

Manner mode mutes this terminal's sounds, such as operation sounds and the ringtone.

* However, shutter sound is not available to set to mute.

■ Public mode (power OFF) → P112

A message plays notifying callers that you are where you have to power off the phone and cannot answer, and the phone automatically hangs up.

■ Vibrate → P198

Notifies incoming calls by vibration.

You can also use optional services such as the Voice mail service (P111) and the Call forwarding service (P111).



We collect mobile phones and related equipment that you no longer need even if it is not a docomo product. Please bring them to your local docomo Shop.

* Acceptable Products: Mobile phones, PHS terminals, battery packs, battery chargers, and desktop holders (regardless of the provider)

Checking various procedures and contract details online

■ From the terminal

dmenu ► "お客様サポート (Customer support)" ► "ドコモオンライン手続き (docomo online procedures)"
(In Japanese only)

■ From PC

My docomo (<https://www.nttdocomo.co.jp/mydocomo/>) ► "住所や契約内容の変更手続きがしたい
(Changing address or subscription items)" (In Japanese only)

- There are cases where the site may not be available due to system maintenance, etc.
- "Network security code" or "docomo ID/Password" is required to use "docomo online procedures".

For loss, theft, malfunction, and inquiries while overseas (24-hour reception)

■ From DOCOMO mobile phones

International call access code for the
country you stay

-81-3-6832-6600* (toll free)

* You are charged a call fee to Japan when calling from a land-line phone, etc.

* If you dial by DM-01G, you should dial +81-3-6832-6600 (to enter '+', touch and hold the '0' key).

■ From land-line phones 〈Universal number〉

Universal number international prefix

-8000120-0151*

* You might be charged a domestic call fee according to the call rate for the country you stay.

* For international call access codes for major countries and universal number international prefix, refer to NTT DOCOMO website.

- If you lose your terminal or have it stolen, immediately take the steps necessary for suspending the use of this terminal.
- If this terminal you purchased is damaged, bring your terminal to a repair counter specified by DOCOMO after returning to Japan.

General Inquiries <docomo Information Center>



0120-005-250 (toll free)

* Service available in: English, Portuguese, Chinese, Spanish

* Unavailable from part of IP phones.

Business hours: 9:00 a.m. to 8:00 p.m.

■ From DOCOMO mobile phones (In Japanese only)



(No prefix) **151** (toll free)

* Unavailable from land-line phones, etc.

■ From land-line phones (In Japanese only)



0120-800-000

* Unavailable from part of IP phones.

Business hours: 9:00 a.m. to 8:00 p.m.

(open all year round)

● Please confirm the phone number before you dial.

● For Applications or Repairs and After-Sales Service, please contact the above-mentioned information center or the docomo Shop etc. near you on the NTT DOCOMO website.

NTT DOCOMO website <https://www.nttdocomo.co.jp/english/>



**Don't forget your mobile phone...
or your manners!**

When using your mobile phone in a public place,
don't forget to show common courtesy
and consideration to others around you.



**危険です、
歩きスマホ。**



Li-ion00

Sales: NTT DOCOMO, INC.

Manufacturer: LG Electronics Inc.

'15.5 (1st Edition)
MFL69099802

Repairs

■ From DOCOMO mobile phones (In Japanese only)



(No prefix) **113** (toll free)

* Unavailable from land-line phones, etc.

■ From land-line phones (In Japanese only)



0120-800-000

* Unavailable from part of IP phones.

Business hours: 24 hours (open all year round)