 


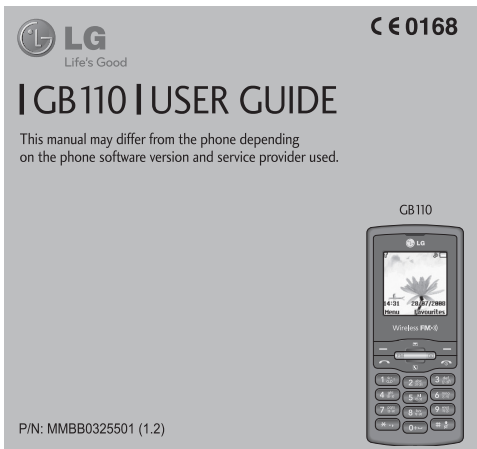

Turning Your Phone On and Off

1. Hold down the [END] key until the phone switches on.
2. To switch the phone off, hold down the [END] key until the power-off image displays.

Making a call

1. Enter a phone number including the area code.
2. Press the [SEND] key to call the number.
3. When finished, press the [END] key.

Answering a call

1. When the phone rings and the phone icon flashes on the screen, press the [SEND] key or the left soft key to answer.
 2. If the Any Key menu option (Menu 5.5.2.1), has been set, any key press will answer a call except for the [END] key or the right soft key.
 3. End the call by pressing the [END] key.
- Note: After the call ends, the phone will go back to standby mode.

Making an international call

1. Press and hold the [key] key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press [SEND] key to call the number.

How to set the tone

Ring tones

1. Press the left soft key [Menu] and select [Settings - Profiles] using the up/down navigation keys.
2. Select [General - Personalise] and choose Ring tones menu.
3. Press the left soft key [OK] and then you can set the desired ringtone.

Tip

➤ If you want to change your ringer to vibrate, select Vibrate mode or press and hold the [key] key.

Call alert type, Ring tones, Ring volume, Message alert type, Message tones, Message volume, Keypad tones, Keypad volume, Effect sound volume, Power on/off volume

You can select Call alert type, Ring tones, Ring volume, Message alert type, Message tones, Message volume, Keypad tones, Keypad volume, Effect sound volume, Power on/off volume.

You can change the sound that will occur when a key is pressed, or volume level.

[Menu - Settings - Profiles - General - Personalise]

Installing the SIM Card and Charging the Battery

 
Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

➤ The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

➤ USIM is not supported in this phone.

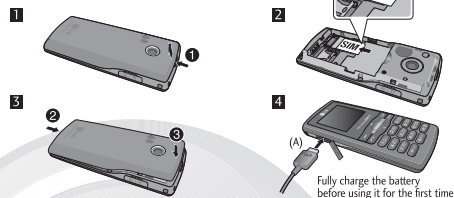

Charging the battery

1. Connect the lead from the travel adapter to the socket on the side of your phone (A).
2. Connect the charger to an AC wall outlet.

Illustrations

1. Open battery cover and remove the battery
2. Insert your SIM
3. Insert battery and close the battery cover
4. Charge your battery

Entering Text

You can enter alphanumeric characters by using the phone's keypad. To change modes, press the [key] key.

T9 Mode

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

 
123 Mode (Numbers Mode)

Type numbers using one keystroke per number.

Symbol Mode

This mode allows you to enter special characters by short pressing [key] key.

Phone Components

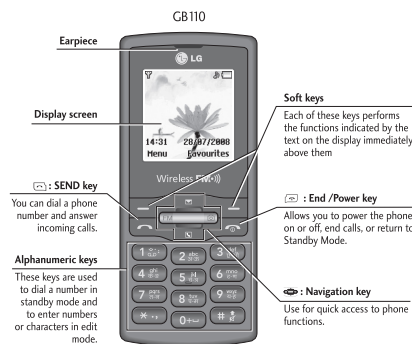


FM Radio (This function may be different in different regions.)

1. Press the corresponding number key of a channel to store the selected radio station.
2. After presetting radio channels, you can listen to another channel by pressing the corresponding number key.
3. You can access the following option menus by pressing the left soft key [Options].
 - **Edit channel:** You can adjust frequency and channel 0.1 MHz at a time using the Left/Right navigation keys and number keys.
 - **Auto scan:** If you turn "Auto Scan Now?" on, this automatically sets the radio channel. When "Save this Station?" message pops up and you select Yes, the selected frequency will be stored.
 - **Reset channels:** You can delete all channels you saved.
 - **Listen via speaker:** You can listen to the FM radio via built-in speaker. When you select [Options - Listen via wired headset] and connect the ear-mic then you can listen via headset.

Note

➤ **Wireless FM:** In weak FM radio signal area the sensitivity can degrade with wireless antenna mode. So it is advisable to insert the ear-mic for better & enhanced FM quality.

 Display Information

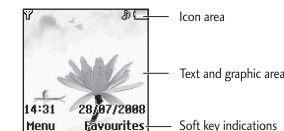

On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

	Tells you the strength of the network signal.		Storage (Only when external memory is inserted)
	Call is connected.		
	Shows that you are using a roaming service.		
	The alarm has been set and is on.		
	Tells you the status of the battery.		
	You have received a text message.		
	You have received a voice message.		
	Vibrate only menu in profile.		
	General menu in profile.		
	Outdoor menu in profile.		
	Silent menu in profile.		
	Headset menu in profile.		
	You can view your schedule.		

Anti-theft Mobile Tracker (ATMT)

1. The ATMT feature of this phone provides you with the ability to have a tracking system in place for your Mobile in case you lose or misplace it.
2. The moment an un-authorized user uses your phone, a SMS is triggered from your phone and the Message is sent to your pre-defined number.
3. Setting the ATMT ON [Menu - Settings - Security]
 - Select Anti-theft Mobile Tracker
 - Set ATMT and Select ON
 - Press OK and enter default ATMT code

Note

- In case you want to use your phone with some other SIM card, make sure to set the ATMT OFF
- It is recommended to enter the Number for ATMT with the country code (e.g. for INDIA +91 followed by mobile number)
- Default ATMT code is "0000".

Quick feature reference

This section provides brief explanations of features on your phone.

Contacts Menu 1

- Search** You can Search for contacts.
Note: Instant searching is available by inputting the initial letter of the name you want to search.
- New contact** You can add phonebook entries by using this menu.
- Speed dials** Assign contacts to any of keys between [key] and [key].
- Copy all** You can copy all entries from SIM card memory to Phone memory and also from Phone memory to SIM card memory.
- Delete all** You can delete all entries from SIM card memory or Phone memory.
- Memory status** You can check free space and memory usage.
- Information**
 - **Service dial numbers:** Access the list of service numbers assigned by service provider safely.
 - **Own number:** You can save and check your own numbers in SIM card.
 - **Business card:** This option allows you to create your own business card featuring your name, mobile phone number and so on.

Messaging Menu 2

This menu includes functions related to SMS (Short Message Services).

- New message** This menu allows you to type a new message up to 459 characters.
- Inbox** You will be alerted when you have received a message.

Messaging Menu 2 (Continued)

- Drafts** This menu shows the saved message.
- Outbox** This menu allows to view the message which is about to be sent or has failed to be sent.
- Sent** This menu allows you to view the messages which have already been sent, including time and content.
- Listen voice mail** This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).
- Info messages** Info service messages are text messages delivered by the network to your handset.
- Templates** There are pre-defined messages in the list. You can view and edit the template messages or create new messages.
- Settings** This menu allows you to set features of your network service provider.

Call history Menu 3

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area. The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call durations.

- All calls** Displays all the lists of three types (Received/Dialled/Missed calls) by time.
- Missed calls** This option lets you view the last 20 unanswered calls.
- Dialled calls** This option lets you view the last 20 outgoing calls (called or attempted).
- Received calls** This option lets you view the last 20 incoming calls.
- Call duration** Allows you to view the duration of your incoming and outgoing calls.

