



P/N: MMB0385620 (1.0)

GU200 User Guide

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone. Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Technical data

Ambient Temperatures

Max : +55°C (discharging)
+45°C (charging)
Min : -10°C



Getting to know your phone

Earpiece

Display screen

Soft keys

Each of these keys perform the functions indicated by the text on the display immediately above them.

Send key

You can dial a phone number and answer incoming calls.



Navigation keys

Allows you to access your phone's menu. And allows you to accept the choices offered when navigating through a menu. In Menu mode, scrolls through the phone's menus.

End/Power key

Allows you to power the phone on or off, end calls, or return to Standby Mode.

Special function keys allow you activate unique features while in Idle mode.

- Press and hold , you can turn on the Silent mode.
- Press and hold to access to Listen voice mail mode. Please note that Voice mail is a network feature.

Installing a memory card

Remove the battery cover and push the memory card slot and flip up the slot. Put the microSD card on the card tray. Make sure that the gold contact area is facing downwards. To remove the microSD card, pull it gently in the opposite direction. Your phone will support a memory card of up to 2 GB.

Note: If the phone won't turn on, or if the display freezes or doesn't respond, follow the instructions for installing the battery again.



Installing the SIM Card and Charging the Battery

Installing the SIM Card


When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- 1 Open battery cover.
- 2 Remove the battery.
- 3 Insert your SIM.
- 4 Insert the battery
- 5 Close the battery cover.
- 6 Charge your battery.

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

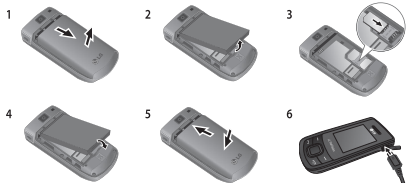

Switching the Phone On or Off

- 1 Press and hold the key until the phone switches on.
- 1 If the phone asks you to enter the phone password, use the keypad to enter this password and press OK soft key.
- 3 If the phone asks for a PIN, use the keypad to enter the PIN and press OK soft key.

Making and Answering Calls

Making a call

- 1 Key in the number using the keypad. To delete a digit press the **Clear** soft key.
- 2 Press to initiate the call.

- 3 To end the call, press .

TIPI To enter + when making an international call, press and hold .

Making a call from your contacts

- 1 Press **Contacts** > **Search** using soft key to open the address book.
- 2 Using the keypad, enter the first letter of the contact you want to call. For example, for Office, press three times to type "O".
- 3 To scroll through the contacts and their different numbers use the Up or Down Navigation key.
- 4 Press to initiate the call.

Answering and rejecting a call

When your phone rings, press **Accept** soft key or press to answer the call. While your phone is ringing. Press or **Reject** to reject the incoming call.

TIPI You can change the settings on your phone to answer your calls in different ways. Press the Center Navigation key and select **Settings** > **Call** > **Answer mode** using the Navigation key.

Changing the call settings

You can set the menu relevant to a call. Press the Center Navigation key and select **Settings** > **Security**.

- **Call barring:** Select when you would like calls to be barred.
- **Fixed dial number:** Choose a list of numbers that can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in Contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: T9 predictive mode, ABC manual mode and 123 mode.

Note: Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 predictive mode

T9 is a predictive text input mode that allows you to key in any character using single key strokes. This text input mode is based on a built-in dictionary.

Example: To enter "Hello" in T9 mode, press the 4, 3, 5, 5, and

Tools

The Tools allows you to set a fake call, perform simple math calculations, check world time, perform unit conversions and use a stopwatch.

Press the Center Navigation key and select **Tools**.

Organiser

The Organiser allows you to set alarms, view the calendar and add memos.

Press the Center Navigation key and select **Organiser**.

Settings

It allows you to set and change the settings such as: display, security, memory, and any extra settings associated with your phone.

Profiles: Allows to customise your phone's Sound Profiles.

Date & Time: Allows to customise your phone's Date and Time settings.

Language: Allows you to select a display language according to your preference.

Display: Allows you to customise your phone's Display.

Call: Allows you to configure the settings for calls.

6 keys. The word that you type displays on the screen. It may change with each consecutive key that you press.

ABC manual mode

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 mode

Type numbers using one keystroke per number. You can also add numbers while remaining in letter modes by pressing and holding the desired key.

Navigating Through the Menus

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys.

Accessing a Menu Function by Scrolling

- 1 From Idle mode, press the Center Navigation key to access the Menu screen.
- 2 Scroll using the Navigation keys to reach a main menu (for example: **Settings**), and then press OK soft key .

Auto keylock: You can make the key pad locked automatically after some time.

Security: Allows you to change your security settings to keep your phone and the important information it holds protected.

Power save: If you set **Always on**, you can save the battery power when you don't use the phone. Choose to switch the power save settings **Always on**, **Night only** or **Off**.

USB connection: Allows you to select USB connection on your phone. (Mass storage, PC suite or Always ask. (Default Always ask will be selected))

Network selection: Allows you to select a network manually and set a network.

Reset settings: Allows you to reset all the settings to their factory definitions. You need the security code to activate this function. The default number is "0000".

Memory status: Allows you to check free space and memory usage of phone, SIM card and external memory (if inserted).

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

WARNING

- Mobile Phones must be switched off at all times in an aircraft.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations; fuel depots, chemical plants or blasting operations.
- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.
- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.

CAUTION

- Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls.

- Only use ORIGINAL accessories to avoid damage to your phone.
- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.
- Batteries should be disposed off in accordance with relevant legislation.
- Do not dismantle the phone or battery.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model GU200 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all use frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2 W/Kg averaged over ten (10) gram of tissue.

- **Dialled calls:** You can view the outgoing calls (called or attempted).
- **Received calls:** You can view the Received calls.
- **Call duration:** Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.

Games

Your phone comes with preloaded game to keep you amused when you have time to spare.

My stuff

You can store multimedia files into your phone's memory. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory. All your multimedia files will be saved in **My stuff**. Your phone supports JPEG images, MP3 & MIDI sound files.

Media

Camera

Using the camera module built in your phone, you can take pictures of people. Additionally, you can select photos as wallpaper.

- 1 Press the Center Navigation key and select **Media** > **Camera**.

- The highest SAR value for this model phone tested by DASy4 for use at the ear is 0.444 W/Kg (10g) and when worn on the body is 0.512 W/Kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/Kg averaged over one (1) gram of tissue.

Product care and maintenance

WARNING

- Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.
- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.

- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not press the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas where you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can fail or cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the aircraft without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.