



LG GU292

User Guide



at&t

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider. AT&T marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies. © 2010 AT&T Intellectual Property. All rights reserved.

Actual color of the phone may vary.

Your phone is designed to make it easy for you to access a wide variety of content. For your protection, we want you to be aware that some applications that you enable may involve the location of your phone being shared. For applications available through AT&T, we offer privacy controls that let you decide how an application may use the location of your phone and other phones on your account. However, the AT&T privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected. In addition, your AT&T phone may be used to access the Internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS :

LG offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship, according to the following terms and conditions:

1. The limited warranty for the product extends for TWELVE (12) MONTHS beginning on the date of purchase of the product with valid proof of purchase, or absent valid proof of purchase, FIFTEEN (15) MONTHS from date of manufacture as determined by the unit's manufacture date code.
2. The limited warranty extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user.
3. This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S, including Alaska, Hawaii, U.S. Territories and Canada.
4. The external housing and cosmetic parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
5. Upon request from LG, the consumer must provide information to reasonably prove the date of purchase.
6. The customer shall bear the cost of shipping the product to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.

2. WHAT THIS WARRANTY DOES NOT COVER :

1. Defects or damages resulting from use of the product in other than its normal and customary manner.
2. Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorized modifications, unauthorized connections, unauthorized repair, misuse, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.
3. Breakage or damage to antennas unless caused directly by defects in material or workmanship.
4. That the Customer Service Department at LG was not notified by consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
5. Products which have had the serial number removed or made illegible.
6. This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
7. Damage resulting from use of non-LG approved accessories.
8. All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.

- 9. Products operated outside published maximum ratings.
- 10. Products used or obtained in a rental program..
- 11. Consumables (such as fuses).

3. WHAT LG WILL DO :

LG will, at its sole option, either repair, replace or refund the purchase price of any unit that does not conform to this limited warranty. LG may choose at its option to use functionally equivalent reconditioned, refurbished or new units or parts or any units. In addition, LG will not re-install or back-up any data, applications or software that you have added to your phone. It is therefore recommended that you back-up any such data or information prior to sending the unit to LG to avoid the permanent loss of such information.

4. STATE LAW RIGHTS :

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG INFOCOMM INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some states do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

5. HOW TO GET WARRANTY SERVICE :

To obtain warranty service, please call or fax to the following telephone numbers from anywhere in the continental United States:

Tel. 1-800-793-8896 or Fax. 1-800-448-4026

Or visit www.lgeservice.com.

Correspondence may also be mailed to:

LG Electronics MobileComm U.S.A., Inc.

201 James Record Road Huntsville, AL 35824

DO NOT RETURN YOUR PRODUCT TO THE ABOVE ADDRESS.

Please call or write for the location of the LG authorized service center nearest you and for the procedures for obtaining warranty claims.



LG GU292

User Guide

Table of Contents

Your Phone	6
Phone Components	6
Rear view	8

Getting Started	10
Installing the SIM card and battery	10
Charging your phone	12
Installing a memory card.	13

General Functions	15
Making a Call	15
Answering a Call	16
Adjusting the Volume.	17
Entering Text.	17

In-Call Menu	22
During a Call.	22
Making a Second Call	22
Swapping Between Two Calls	22
Answering an Incoming Call	22
Rejecting an Incoming Call	22
Muting the Microphone	23
Using the Speakerphone	23

Conference Calls	23
Making a Second Call	24
Setting Up a Conference Call	24
Place the Conference Call on Hold	24
Adding Calls to the Conference Call	24
Private Call in a Conference Call	24
Ending a Conference Call	24

Menu Tree	25
------------------------	-----------

AT&T GPS	28
---------------------------	-----------

Messaging	30
Create Message	30
Inbox	32
IM	33
Offline Menu	34
IM Information	34
Online Menu / 1-to-1 conversation	34
Conversations List	35
Conversation	35
Contact List	36
Contact	36
Menu options available in the Conversation screen	37

Mobile Email	38
Outbox	39
Drafts	40
Voicemail	40
Message Settings	40
Message Alert	40
Save To	40
Signature	40
Text Message	40
Multimedia Message	41
Voicemail Number	42
Service Message	42
 YPmobile	 43
 Mobile Web	 44
 Push to Talk	 45
 My Stuff	 46
AT&T Music	46
Music Player	46
Adding Music To Your Handset	47
Mobile Video	52
Audio	53

Games	53
Picture	53
Video	54
Applications	54
Tools	54
Voice Command	54
Recent Calls	56
Alarm Clock	56
Calendar	57
Notepad	58
Calculator	58
World Clock	58
Tasks	59
StopWatch	59
Tip Calculator	60
Unit Converter	60
Other Files	60
File Manager	61
 AT&T Address Book	 62
Contact List	62
New Contact	62
Caller Groups	63
Speed Dial List	63

SIM Management	63
Service Dial Numbers	63
My Numbers	64
About	64

Settings

Audio & Ringtones

Shop Tones	65
Ringtone	65
Message Tone	65
Alert Tone	66
Keypad Tone	66
Multimedia	66
Call	66
Power On/Off Tones	66

Phone Settings

Date & Time	66
Languages	67
Set Hotkeys	67
Auto Key Lock	67
Set Flight Mode	67
Security	67
Reset Settings	68

Display

Shop Wallpapers	69
-----------------------	----

Wallpapers	69
------------------	----

Fonts	69
-------------	----

Clocks & Calendar	69
-------------------------	----

Brightness	69
------------------	----

Backlight Timer	69
-----------------------	----

Color Schemes	69
---------------------	----

Menu Styles	69
-------------------	----

Call

Call Forwarding	69
-----------------------	----

Send My Number	70
----------------------	----

Auto Redial	70
-------------------	----

Answer Mode	70
-------------------	----

Minute Minder	70
---------------------	----

Call Waiting	71
--------------------	----

Call Reject	71
-------------------	----

Send DTMF Tones	71
-----------------------	----

TTY	71
-----------	----

Time & Cost	71
-------------------	----

Connection

Bluetooth	72
-----------------	----

Bluetooth Menu Options	73
------------------------------	----

USB Connection Mode	73
---------------------------	----

Internet Profiles	74
-------------------------	----

Access Points	74
---------------------	----

Memory	74
Used Space	74
Set Storage Defaults	74
Application Settings	75
Messaging	75
Browser	75
Voice Command	77
Software Update	78
Phone Information	78
 Q&A	 79
 Accessories	 80
 For Your Safety	 81
 Safety Guidelines	 85
 Glossary	 106
 Index	 108

 
Your Phone

Phone Components



Press and hold
to access Voice
Recorder.

Press and hold
to activate/deactivate
Vibration Mode.

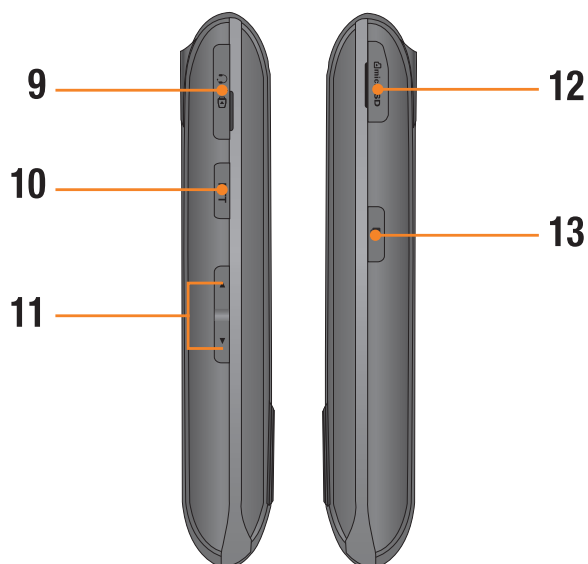

1. Earpiece: Lets you hear the caller during a call.

2. Main LCD: Displays phone status icons, menu items, web items, web information, pictures and more, in full color.

3. Left soft key/Right soft key: Each of these keys perform the functions indicated by the text on the display immediately above them.

4. Navigation keys

Standby Mode Hotkeys:

 Contact List

 New Message

 IM

 My Stuff

- In a menu: Navigates between menus.

5. Send key: Press this key in standby mode to quickly access the most recent missed, dialed, and received calls.

6. Clear key: Allows you to return to the previous screen. Press and hold to activate the Voice Command function.

7. OK key

8. End/Power key: Allows you to power the phone on or off, end calls, or return to standby mode.

9. Charger/USB port

10. Push to Talk(PTT) key: Use for quick access to the PTT function.

- Pressing and releasing this key while idle displays your PTT contacts.
- Pressing and holding this key while idle displays your PTT history.
- Pressing and holding this key while in a PTT call allows you to speak to the other call participants.

 
11. Volume keys: Allows you to control the Master Volume while in standby mode and the earpiece volume during a call.

12. microSD™ card slot

13. Multitasking key: Press to open the multitasking menu.

Your Phone

Rear view

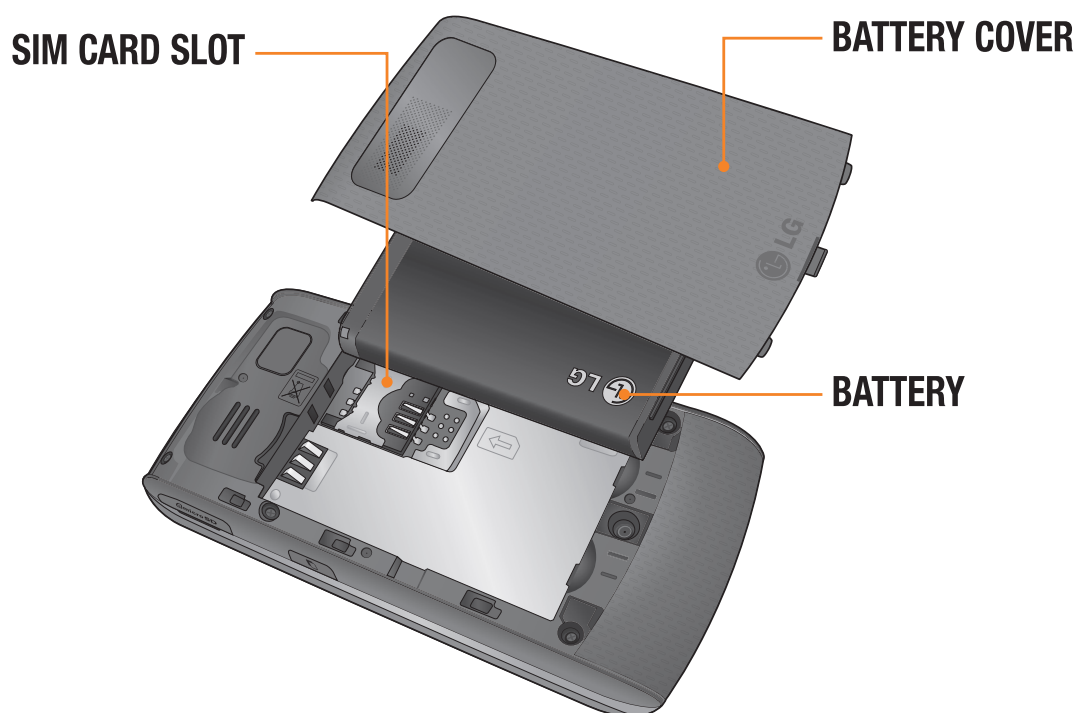

Advice

In order to improve antenna sensitivity, please do not cover the antenna area with your hand during a call and when using a Bluetooth® connection. It may degrade speech quality. LG suggests that you hold the handset as shown below.

 


Getting Started

Installing the SIM card and battery


1. Remove the battery cover

Use your right thumb to press on the bottom center of the battery cover, then slide the cover upwards (as depicted below). Then, lift the cover to remove it.

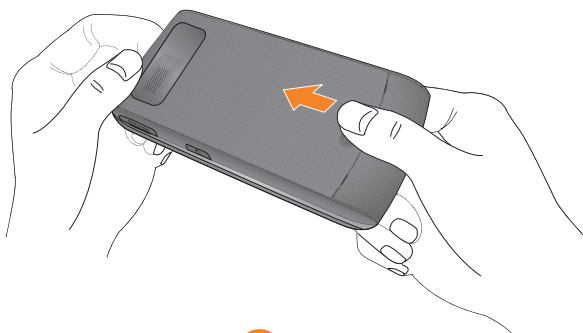

2. Remove the battery

 Hold the top edge of the phone and use the fingernail cutouts near the bottom of the battery to lift the battery from the phone.

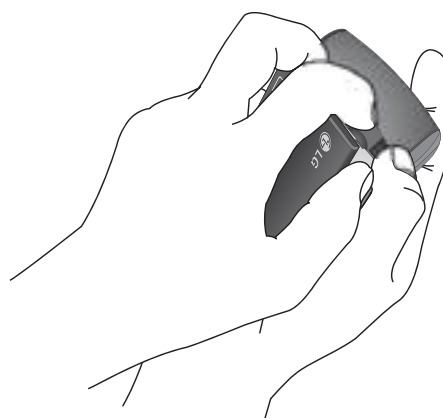

! Warning

Do not remove the battery when the phone is turned on; this can damage the phone.

 
3. Install the SIM card

Slide the SIM card into the SIM card slot (as shown below). Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the opposite direction.



4. Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure that the battery contacts align with the terminals on the phone. Press the bottom of the battery down until it snaps into place.

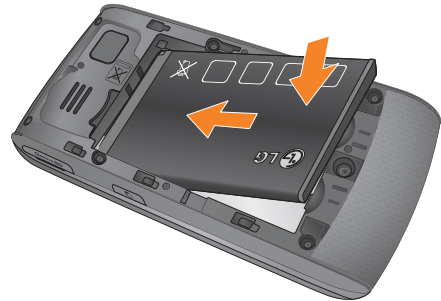

Getting Started

Charging your phone

Unfasten the cover of the Charger/USB port on the left side of your phone. Insert the charger connector to the phone (the 'LG' side of the connector has to be facing up when connecting to the phone) and then plug into the wall socket. Your LG GU292 will need to be charged until the Full Battery message appears on the screen.

Important!

You must insert the battery before charging.



! Warning

Use of unauthorized accessories could damage your phone and void your warranty.

Installing a memory card

You can expand the memory available on your phone by using a microSD™ memory card.

! Tip

A memory card is an optional accessory.

1. Locate the microSD™ card slot on the right side of the phone. Then, use your fingernail to gently lift the cover.
The cover will remain attached to the phone, so that it does not become lost.
2. With the microSD™ card facing up, slide it into the microSD™ card slot (as demonstrated in the following image).
Push the memory card in until it locks into place.
3. Replace the slot cover on the phone.



! Note

If your memory card has existing content, it will automatically be filed in the correct folder. For example, videos will be accessible from the Videos folder.

Getting Started

On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

ICON/ INDICATOR	DESCRIPTION
	Multitasking
	Network signal strength (number of bars will vary)
	No network signal
	Low Battery
	New text message
	New email
	An alarm is set
	Ring profile in use
	Silent All profile in use
	EDGE network available
	Bluetooth is active

ICON/ INDICATOR	DESCRIPTION
	3G network available
	The browser is active
	Vibrating Mode On
	Speakerphone
	Call in Progress
	Voicemail
	Battery Full
	Battery Charging
	Flight Mode On

General Functions

Making a Call

1. Make sure your phone is powered on.
2. Enter a phone number, including the area code. To edit a number on the display screen, simply press the  key to erase one digit at a time.
 - ▶ Press and hold the  key to erase the entire number.
3. Press the  [SEND] key to call the number.
4. To end the call, press the  [END] key.

Making a Call with the Send Key

1. Press the  [SEND] key, and the most recent missed, dialed and received calls will be displayed.
2. Highlight the desired number by using the navigation keys.
3. Press the  [SEND] key.

Making International Calls

1. Press and hold the  key and the international access character '+' will appear.
2. Enter the country code, area code, and the phone number.
3. Press the  [SEND] key to call the number.

General Functions

Ending a Call

To end a call, press the  [END] key.

Making a Call from the Contacts

You can store frequently called names and phone numbers in the SIM card as well as in the phone memory known as the Contacts.

You can dial a number by simply highlighting a name in the Contacts List and pressing the  [SEND] key.

1. Press the  [Down] key to access the Contact List.
2. Highlight the Contact and press the  [SEND] key.

Answering a Call

When you receive a call, the phone displays a notification on the screen and rings and/or vibrates. If the caller can be identified, the caller's phone number (or name, if stored in your Address Book) is displayed.

1. Press the  [SEND] key or the left soft key  **Accept** to answer an incoming call.

If the **Answer Mode** has been set as **Any Key** ( **Menu** >  **Settings** >  **Call** >  **Answer Mode**), any key press will answer a call, except for the  [END] key, the right soft key , the PTT key , or the volume keys .

2. End the call by pressing the  [END] key.

Note

You can answer a call while using other functions or features.

Adjusting the Volume

Use the side volume keys during a call to adjust the earpiece volume.

While in standby mode, you can adjust the Master Volume using the side volume keys.

Vibrating Mode (Quick)

Vibrating Mode can be activated by pressing and holding down the  key.

Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator on your phone's display screen.

Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Address Book, writing a message, or scheduling events in the calendar all require text to be entered.

Changing the Text Input Mode

Change the text input mode by holding down  when in a text entry field.

You can check the current text input mode in the upper right corner of the screen.

The following text input modes are available on the phone.

ABC Mode

This mode allows you to enter letters by pressing the key labeled with the required letter one, two, three, or four times until the letter is displayed.

General Functions

T9 Mode

The T9 mode allows you to enter words easily with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode.

Note

You can select a different T9 language from the **Options** menu ( **Options** >  **Text Entry Settings** >  **Text Entry Language**).

123 Mode (Numbers Mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed in the upper right corner.

Symbol Mode

The Symbol Mode enables you to enter various symbols or special characters. To enter a symbol, press the  key. Use the navigation keys to highlight the desired symbol and press the  key.

Using the T9 Mode

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, begin entering a word by pressing keys  to . Press one key per letter.

- ▶ The word changes as letters are typed
 - ignore what is displayed on the screen until the word is typed completely.
- ▶ If the word is still incorrect after typing completely, press the  key or the right soft key  **Next** once (or more if needed), to cycle through the other word options.
- ▶ If the desired word is missing from the word choices list, press the right soft key  **Add** to add the word.

2. Enter the whole word before editing or deleting any keystrokes.

3. Complete each word with a space by pressing the  key or the right navigation key .

To delete letters, press . Press and hold down  to erase all of the entered text.

Using the ABC Mode

Use the alphanumeric keypad to enter your text.

1. Press the key labeled with the required letter:

- ▶ Once for the first letter.
- ▶ Twice for the second letter.
- ▶ And so on.

2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to erase all of the entered text.

! Note

Refer to the table below for more information on the characters available using the keys.

General Functions

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	. , ' @ ? ! - : / 1	. , ' @ ? ! - : / 1
2	A B C 2	a b c 2
3	D E F 3	d e f 3
4	G H I 4	g h i 4
5	J K L 5	j k l 5
6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8
9	W X Y Z 9	w x y z 9
0	Space Key, 0 (Long press)	Space Key, 0 (Long press)

Using the 123 (Numbers) Mode

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example) more quickly. Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

T9 Dictionary

The T9 Dictionary is a feature that allows the user to add any unique or personal words to the T9 standard language database. The T9 Dictionary function can be found in the

Options menu ( **Options** >  **Text Entry Settings** >  **T9 Dictionary**).

Within the T9 Dictionary function, the user can add, modify, delete, or reset personal words.

Using the Korean Mode

Allows you to type in Korean when you set the language to Korean.

Keys	Characters in the Order Displayed
ㄱ	1 a.o
ㅋ	1 a.o ▶ * * #
ㆁ	1 a.o ▶ # * #
ㄴ	2 abc
ㄷ	2 abc ▶ * * #
ㄹ	2 abc ▶ * * # ▶ * * #
ㄷ	2 abc ▶ * * # ▶ # * #
ㄷ	3 def
ㅌ	3 def ▶ * * #
ㄴ	3 def ▶ 3 def
ㄷ	3 def ▶ 3 def ▶ * * #
ㄴ	3 def ▶ 9 wxyz
ㄴ	3 def ▶ * * # ▶ 9 wxyz
ㄴ	3 def ▶ 3 def ▶ 9 wxyz
ㄴ	3 def ▶ 3 def ▶ * * # ▶ 9 wxyz
ㄴ	4 ghi
ㅇ	5 jkl
ㅈ	5 jkl ▶ * * #
ㅊ	5 jkl ▶ * * # ▶ * * #

Keys	Characters in the Order Displayed
ㅊ	5 jkl ▶ * * # ▶ # * #
ㅊ	6 mno
ㅊ	6 mno ▶ * * #
ㅊ	6 mno ▶ 6 mno
ㅊ	6 mno ▶ 6 mno ▶ * * #
ㅊ	6 mno ▶ 3 def ▶ 9 wxyz
ㅊ	6 mno ▶ 9 wxyz
ㅊ	6 mno ▶ 6 mno ▶ 3 def
ㅊ	6 mno ▶ 6 mno ▶ 3 def ▶ 9 wxyz
ㅊ	6 mno ▶ 6 mno ▶ 9 wxyz
ㅊ	7 pqrs
ㅊ	7 pqrs ▶ * * #
ㅊ	7 pqrs ▶ * * # ▶ * * #
ㅊ	7 pqrs ▶ # * #
ㅊ	7 pqrs ▶ * * # ▶ # * #
ㅊ	8 tuv
ㅊ	8 tuv ▶ * * #
ㅊ	9 wxyz
ㅊ	0 +, =
ㅊ	0 +, = ▶ 9 wxyz

In-Call Menu

During a Call

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the right soft key  **Options**.

Making a Second Call

You can select a number you wish to dial from the Address Book to make a second call.

1. Press the right soft key  **Options**, then select **Address Book**.
2. Highlight the contact, then press the  [SEND] key to make a second call.

Swapping Between Two Calls

Once the second call has been dialed (or answered), you can switch between the calls by using one of the following three methods:

- ▶ Press the  [SEND] key.
- ▶ Press the right soft key  **Options** and then select “**Swap Calls**”.
- ▶ Press Up/Down on the navigation key.

Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the  [SEND] key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece and the display will show that a second call is waiting. This feature, known as **Call Waiting**, is only available if your network supports it.

If Call Waiting is turned on, you can put the first call on hold and answer the second call by pressing the  [SEND] key.

Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the  [END] key.

! Note

Push to Talk

Push to Talk (PTT) from AT&T lets you see whether your family, friends, and co-workers are available to talk before you call. You can reach them individually or all at once via a group call, all in an instant.

Muting the Microphone

You can mute the microphone during a call by pressing the left soft key  **Mute**. The handset can be unmuted by pressing the left soft key  **Unmute**. When the handset is muted, the caller cannot hear you, but you can still hear the caller.

Using the Speakerphone

You can use the integrated Speakerphone during a call by pressing the  key. The loudspeaker is automatically deactivated when you end the call.

Warning

Due to increased volume levels, do not place the phone near your ear while the speakerphone is enabled.

Conference Calls

The conference call feature provides you with the ability to have a simultaneous conversation with more than one caller. The conference call feature can be used only if your network service provider supports this feature.

Once a conference call is set up, calls may be added, disconnected (**Exclude Call** option allows you to select a call to disconnect from the conference call), or separated (**Private Call** option allows you to separate a call from the conference call, but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu.

In-Call Menu

The maximum number of callers in a conference call is five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

Making a Second Call

You can make a second call while currently on a call simply by entering the second number with the keypad and pressing the  [SEND] key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the  [SEND] key.

Setting Up a Conference Call

To set up a conference call, place the first call. Once that is connected, follow the steps above to make a second call. You can then join the two separate calls by pressing the right soft key  **Options**, selecting **Conference Call**, and then **Join Calls**.

Place the Conference Call on Hold

To place a conference call on hold, press the  [SEND] key.

Adding Calls to the Conference Call

To add a call to an existing conference call, press the right soft key  **Options**, select **Conference Call**, and then select **Join Calls**.

Private Call in a Conference Call

To have a private call with one of the callers in the conference call, press the right soft key  **Options**, select **Conference Call**, and then **Private Call**. When the numbers of the callers are displayed, select the one with which you wish to speak in private.

Ending a Conference Call

An active conference call can be disconnected by pressing the  [END] key.

Menu Tree

1. AT&T GPS (see page 28)

1.1 AT&T Navigator

1.2 Shop GPS

1.3 Where

1.4 AllSport GPS

1.5 Loopt

2. Messaging (see page 30)

2.1 Create Message

2.2 Inbox

2.3 IM

2.4 Mobile Email

2.5 Outbox

2.6 Drafts

2.7 Voicemail

2.8 Message Settings

3. YPmobile (see page 43)

4. Mobile Web (see page 44)

5. AppCenter

6. Push to Talk (see page 45)

7. My Stuff (see page 46)

7.1 AT&T Music

7.2 Mobile Video

7.3 Audio

7.4 Games

7.5 Picture

7.6 Video

7.7 Applications

7.8 Tools

7.9 Other Files

7.0 File Manager



Menu Tree

8. AT&T Address Book (see page 62)

- 8.1 Contact List**
- 8.2 New Contact**
- 8.3 Caller Groups**
- 8.4 Speed Dial List**
- 8.5 SIM Management**
- 8.6 Service Dial Numbers**
- 8.7 My Numbers**
- 8.8 About**

9. Settings (see page 65)

9.1 Audio & Ringtones

- 9.1.1 Shop Tones
- 9.1.2 Ringtone
- 9.1.3 Message Tone
- 9.1.4 Alert Tone
- 9.1.5 Keypad Tone
- 9.1.6 Multimedia
- 9.1.7 Call
- 9.1.8 Power On/Off Tones

9. Settings (continued)

9.2 Phone Settings

- 9.2.1 Date & Time
- 9.2.2 Languages
- 9.2.3 Set Hotkeys
- 9.2.4 Auto Key Lock
- 9.2.5 Set Flight Mode
- 9.2.6 Security
- 9.2.7 Reset Settings

9.3 Display

- 9.3.1 Shop Wallpapers
- 9.3.2 Wallpapers
- 9.3.3 Fonts
- 9.3.4 Clocks & Calendar
- 9.3.5 Brightness
- 9.3.6 Backlight Timer
- 9.3.7 Color Schemes
- 9.3.8 Menu Styles



9. Settings (continued)

9.4 Call

- 9.4.1 Call Forwarding
- 9.4.2 Send My Number
- 9.4.3 Auto Redial
- 9.4.4 Answer Mode
- 9.4.5 Minute Minder
- 9.4.6 Call Waiting
- 9.4.7 Call Reject
- 9.4.8 Send DTMF Tones
- 9.4.9 TTY
- 9.4.0 Time & Cost

9.5 Connection

- 9.5.1 Bluetooth
- 9.5.2 USB Connection Mode
- 9.5.3 Internet Profiles
- 9.5.4 Access Points

9. Settings (continued)

9.6 Memory

- 9.6.1 Used Space
- 9.6.2 Set Storage Defaults

9.7 Application Settings

- 9.7.1 Messaging
- 9.7.2 Browser
- 9.7.3 Voice Command

9.8 Software Update

- 9.8.1 Check for Update

9.9 Phone Information

AT&T GPS

The AT&T Navigator application on your device uses GPS position determination technology and access to your carrier's data network to provide you with driving directions and a host of other services, including:

- ▶ GPS navigation that gives you turn-by-turn directions to any destination address in the continental United States. If you miss a turn or get off-track, AT&T Navigator will calculate a new route for you. You can enter a destination address by using AT&T Navigator's automatic voice recognition system or by typing on the device's keypad.
- ▶ Audio and visual traffic alerts while driving or viewing maps, as well as traffic re-routing capabilities to minimize delays on your trip.
- ▶ A Search feature that allows you to find businesses or points of interest near your current location, an airport, a waypoint, or any other entered address. You can read ratings and reviews for businesses and easily call the business that you have found to check on the availability of an item or to make a reservation. You can navigate to the business location now or save the address for later use.
- ▶ Maps of the area around your current location, around a marked waypoint, or around an address that you had previously entered. You can pan the map (adjust left, right, up, or down) and zoom in or out. You can also mark a point under the cursor as a waypoint.
- ▶ A compass-like indicator presenting your direction of travel, location, and speed.

- ▶ The ability to personalize your application preferences by selecting U.S. customary or metric distance units, the language for audible guidance, and more.

You can also use many of AT&T Navigator's features on the TeleNav website, such as getting driving directions (Route Planning) and using the Search function to find businesses, churches, schools, and government offices. You can also use the TeleNav website to add an address to your My Favorites list, manage your My Favorites and Recent Places lists, and shop at the TeleNav Store.

To access AT&T GPS, from the standby screen, press the left soft key  **Menu**,  **AT&T GPS**, and  **AT&T Navigator**.

! Note

For best GPS performance.

- ▶ In order to improve GPS antenna sensitivity, do not cover the GPS antenna area of the device.
- ▶ Your GPS antenna sensitivity might be weakened if you are in a high rise building, underground, or location surrounded by metal or concrete.
- ▶ Use near the window indoors for better GPS antenna sensitivity.
- ▶ For battery durability, please use a vehicle power adapter in your car.
- ▶ It could take 2~3 minutes to get your GPS position depending on the condition of the environment or network.

Messaging

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), Voicemail as well as the network's service messages.

Create Message

1. From the standby screen, press the left soft key  **Menu**.
2. Press  **Messaging**.
3. Press  **Create Message**.

OR

You can simply press  [Up] from the standby screen.

Note

If you insert a Picture, Audio, or Video file while writing a multimedia message, the file loading time will take about 5 seconds. You will not be able to activate any key during the file loading time. When the file loading is complete, you will be able to write a multimedia message.

Editing a message

The following options are available when editing a message.

Using Insert

While entering text, press the left soft key

 **Insert**.

- ▶ **Symbol:** You can insert various symbols into your message. Pressing the left and right soft keys  /  scrolls through the pages.
- ▶ **Picture:** You can select a picture to insert by using the navigation keys. You can preview the selected picture by pressing the left soft key  **View**.
- ▶ **Audio:** You can insert an audio file from your saved audio files.
- ▶ **Video:** You can insert a video clip from your saved video clips.
- ▶ **Record New Audio:** You can record a new audio clip by pressing  **Record**. Press the right soft key  **Options** before you begin recording to set the options (below). After recording a new audio clip, you can delete it by pressing the left soft key  **Delete**.

- **Quality:** Set the audio's quality to Fine, Normal, or Economy.
- **Select Storage Defaults:** You can assign the default storage to **Phone Memory** or **Memory Card**.

► Template

- **Text:** Allows you to easily insert frequently used sentences in the text message.
- **Multimedia:** Preset multimedia templates can be created ( **Menu** >  **Messaging** >  **Message Settings** >  **Multimedia Message** >  **Multimedia Templates** >  **New**).
- **Signature:** Allows you to insert your own created signature. For further details, see page 40.

- **More:** Allows you to insert Subject, vCard, vCalendar, vNote, vTask or Contact.

! Note

vCard, vCalendar, vNote and vTask are created by the Address Book, Calendar, Notepad, and Tasks functions, respectively. Go to the Tools and Address Book sections in this Manual for more detailed information.

Using Options

While entering text, press the right soft key  **Options**.

- **Text Entry Mode:** Sets the text input mode. For more details, refer to Entering Text (page 17).

• Text Entry Settings:

- **Text Entry Language** allows you to set the text entry language to English, Spanish, French, or Korean.
- **T9 Word Candidate List** displays the word candidates as you type.
- **T9 Next Word Prediction** allows the phone to predict the next word when typing in T9 mode.
- **T9 Dictionary** allows you to add, delete, reset, and modify words.

• Delivery Options

- **Delivery Receipt:** Allows you to receive notification that your message was sent successfully. Delivery Receipt may not be compatible with all carriers.
- **Request Read Receipt:** Allows you to receive notification that your message was read by the recipient.

Messaging

- **Save to Drafts:** Saves the message to Drafts.
- **Cancel Message:** Allows you to exit the text input mode without saving your message.

Sending a Message

After completing a message, using **Insert** and/or **Options**, press  **Send To** to select a recipient.

- Enter the recipient(s). For more options, press the right soft key  **Options**. In this menu, you can choose from the following options:
 - **Enter Number:** Allows you to enter the phone number using the keypad.
 - **Enter Email:** Allows you to enter an email address instead of a phone number.
 - **Insert Symbol:** Allows you to enter symbols.
 - **Caller Groups:** Displays Contacts Groups.
 - **Recent Messages:** Choose a Contact from Recent Messages.
 - **Recent Calls:** Choose a Contact from Recent Calls.
 - **Delivery Options:** Allows you to set the options for Delivery Receipt, Request Read Receipt, Add Cc, and Add Bcc.

- **Edit Message:** Go back to the message editing mode.
- **Save to Draft:** Saves the selected message to Drafts.
- **Text Entry Mode:** Allows you to change the text entry mode.
- **Text Entry Settings:** Allows you to set the options for Text Entry Language, T9 Word Candidate List, T9 Next Word Prediction, and T9 Dictionary.
- **Cancel Message:** Allows you to cancel the message.

Inbox

You will be alerted when you receive a message. New messages are stored in the Inbox. In the Inbox, you can identify each message by icons. If you are notified that you have received a multimedia message, you can download the whole multimedia message by selecting it in the Inbox menu.

To access the Inbox, from the standby screen, press the left soft key  **Menu**,  **Messaging**,  **Inbox**.

The following options are available in the Inbox and vary depending on the View mode set (Conversation or Standard).

- ▶ **Add to Address Book:** You can save the sender's phone number in the Contact List.
- ▶ **Delete:** You can delete the selected message.
- ▶ **Standard view:** Switches the Inbox view mode to Standard view.
- ▶ **Forward:** You can forward the selected message to another person.
- ▶ **Copy to Phone/Copy to SIM:** You can copy to Phone or SIM depending on where the text message is stored.
- ▶ **Select Multiple:** You can select multiple messages.
- ▶ **Message Details:** You can view the following information about received messages: message Type, Subject, From, and message Time.
- ▶ **Delete All Read Messages:** You can delete all read messages.

- ▶ **Conversation view:** Switches the Inbox view mode to Conversation view.

IM

The Instant Messaging feature can only be used with the support of the network operator or communities such as AIM, Windows Live, and Yahoo! Messenger. For Instant Messaging users, a valid User ID and Password will be required in order to login and exchange messages as well as checking the online status.

To access the IM feature

1. Press the left soft key  **Menu**,  **Messaging**, and  **IM**.

You can also access IM from standby mode by using the IM hotkey (the right navigation key ). Quickly pressing the hotkey from the standby screen will bring up the available IM clients.

Messaging

The menu items below might not appear as not all IM communities support the same options. In addition, the menu strings may appear differently. This depends on the selected IM communities. The keywords such as User ID, Login and Contact will be used as general terms in IM menus according to the currently selected communities such as AIM, Windows Live, and Yahoo! Messenger.

Offline Menu

Sign In

This allows users to login by entering the User ID and Password.

Note

Once the User ID and Password are saved, you will not be required to enter them in again during the Login process. This feature is optional.

Saved Conversations

Allows you to view your saved conversations in this menu.

Offline Conversations

Allows you to view offline conversations.

Settings/Preferences

- ▶ **Set Sound:** Allows you to turn **On/Off** an alert for the Contact when they have activity on their session.
- ▶ **Network:** Allows you to view your Network Profiles or Server Address information.

IM Information

This displays the Instant Messaging Client Information such as Client Name and Version Number.

Online Menu / 1-to-1 conversation

After a successful Login, a list of your contact's Screen Names will appear on screen. Depending on what is highlighted within your Buddy List, the following menu options will be available.

Conversations List

- ▶ **My Status:** Allows you to set your status so your contacts can see if you are available to chat.
- ▶ **Send Message to:** Allows you to send a message to someone by inputting a User ID.
- ▶ **Saved Conversations:** Allows you to view your saved conversations in this menu.
- ▶ **Settings:**
 - **My Status:** Allows you to set your status so your contacts can see if you are available to chat.
 - **Set Sound:** Allows you to turn **On/Off** an alert for the Contact when they have activity on their session.
- ▶ **Sign Out:** Logs you out from the current session.

Conversation

- ▶ **My Status:** Allows you to set your status so your contacts can see if you are available to chat.
- ▶ **End Conversation:** Allows you to close the selected conversation.
- ▶ **Block/Unblock Contact:** This allows you to block/unblock the selected Contact.
- ▶ **Contact Info:** This allows you to view the User ID and Status information.
- ▶ **Settings:**
 - **Display Name**
 - **My Status:** Allows you to set your status so your contacts can see if you are available to chat.
 - **Offline Contacts**
 - **Set Sound:** Allows you to turn **On/Off** an alert for the Contact when they have activity on their session.
 - **Auto Sign In**
- ▶ **Sign Out:** Logs you out from the current session.

Messaging

Contact List

- ▶ **My Status:** Allows you to set your status so your contacts can see if you are available to chat.
- ▶ **Add a Contact:** Allows you to add a new contact to the selected Contact List.
- ▶ **Send Message to:** Allows you to send a message to someone by inputting a User ID.
- ▶ **Refresh Contact List:** This refreshes the current information on the Contact List.
- ▶ **Block List:** Displays the list of all blocked Contacts.
- ▶ **Saved Conversations:** Allows you to view your saved conversations in this menu.
- ▶ **Settings:**
 - **Display Name**
 - **My Status:** Allows you to set your status so your contacts can see if you are available to chat.
 - **Offline Contacts**
 - **Set Sound:** Allows you to turn **On/Off** an alert for the Contact when they have activity on their session.

- **Auto Sign In**

- ▶ **Sign Out:** Logs you out from the current session.

Contact

- ▶ **My Status:** Allows you to set your status so your contacts can see if you are available to chat.
- ▶ **Add a Contact:** Allows you to add a new contact to the selected Contact List.
- ▶ **Delete Contact:** Allows you to delete the selected Contact.
- ▶ **Move Contact:** Allows you to move a Contact to another Contact List.
- ▶ **Block/Unblock Contact:** This allows you to block/unblock the selected Contact.
- ▶ **Contact Info:** This allows you to view the User ID and Status information.
- ▶ **Settings:**
 - **Display Name**
 - **My Status:** Allows you to set your status so your contacts can see if you are available to chat.
 - **Offline Contacts**

- **Set Sound:** Allows you to turn **On/Off** an alert for the Contact when they have activity on their session.
- **Auto Sign In**
- ▶ **Sign Out:** Logs you out from the current session.

Menu options available in the Conversation screen

- ▶ **Insert:** Allows you to insert a Symbol, Text Template, or Emoticon in the conversation screen. This feature is accessed by pressing the left soft key .
- ▶ **Back to Contacts:** This brings the screen back to the contacts.
- ▶ **Block/Unblock Contact:** This allows you to block/unblock the selected Contact.
- ▶ **Add to Contact List:** Allows you to add the person you are currently having a conversation with to a Contact List.

- ▶ **Save Conversation:** Stores the currently active conversation.
- ▶ **End Conversation:** Allows you to close the current conversation.
- ▶ **Settings:**
 - **Display Name**
 - **My Status:** Allows you to set your status so your contacts can see if you are available to chat.
 - **Offline Contacts**
 - **Set Sound:** Allows you to turn **On/Off** an alert for the Contact when they have activity on their session.
 - **Auto Sign In**
- ▶ **Text Entry Mode:** Allows you to set the text input mode to Abc Mode, T9 Mode, or 123 Mode.
- ▶ **Text Entry Mode Settings:** Allows you to configure the Text Entry Language, T9 Word Candidate List, T9 Next Word Prediction, and T9 Dictionary.

Messaging

- ▶ **Minimize:** Minimizes the IM window and returns to the standby screen.
- ▶ **Sign Out:** Logs you out from the current session.

! Note

- You can use the Up/Down Navigation Key for scrolling through the conversation.
- The maximum number of characters supported by a message is 800 characters, for receiving, and 127 characters for sending.
- The current information might not update in real time so the “Refresh List”/“Refresh Contact” option can be used for the most up to date status.

Mobile Email

Mobile Email allows you to access your Yahoo! Mail, AOL Mail, AIM Mail, Windows Live Hotmail, AT&T Mail, Gmail and Other Providers accounts on your phone. So, now you can quickly and easily check your email while you are away from your computer.

To Set Up Mobile Email:

1. Open Mobile Email: From the standby screen, press the left soft key  **Menu**,  **Messaging**, and  **Mobile Email**.

2. Select an Email Provider: Use the navigation key to highlight the email provider you wish to use and press  **Select**.

3. Log In:

- ▶ Highlight the email address field, press , and enter your existing email address.
- ▶ Scroll down and highlight the Password field, then enter your password.

Quick Tip: Your password is case sensitive. Press the  button on the keypad to change to lower case or upper case.

- ▶ To save your password scroll down to Remember Me and press  to check the box.
- ▶ Highlight the **Sign In** button and press  **Sign In**.

- ▶ **Opening an Email:** Scroll down and highlight the email subject line you want to open and press  **Read**. When the email is open, press the left soft key  **Options** to Reply, Forward, Delete, Reply to All, or Mark Unread.
- ▶ **Deleting an Email:** Scroll down and highlight the email you want to delete, press the left soft key  **Options**, then select **Delete**.

Outbox

Outbox is the storage place for recently sent messages. When you press the  [SEND] key, you can call the recipient of the selected message.

If the message is not sent from the Outbox, you will receive a sound alert along with a Message Sending Failure notice on the screen. Another attempt will be made to send the failed message and after two unsuccessful attempts, the message will no longer be sent automatically. In order to send the message that has failed, you must press the left soft key  **Resend** to resend the message.

To access the Outbox, from the standby screen, press the left soft key  **Menu**,  **Messaging**, and  **Outbox**.

The following options are available for the Outbox folder:

- ▶ **View Status:** Shows the status of each message.
- ▶ **Delete:** Deletes the selected message.
- ▶ **Edit:** Allows you to edit the selected message.
- ▶ **Select Multiple:** Allows you to select multiple messages to delete.
- ▶ **Message Details:** Allows you to view the details of the message.

Messaging

Drafts

Allows you to view and edit the messages saved as drafts.

To access Drafts, from the standby screen, press the left soft key  **Menu**,  **Messaging**, and  **Drafts**. The following options are available for the Drafts folder:

- ▶ **Select Multiple:** Allows you to select multiple messages to delete.
- ▶ **Message Details:** Allows you to view the details of the message.

Voicemail

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).

A shortcut for checking your voicemail is available. To quickly check your voicemail when in standby mode, press and hold the  key.

! Note

Please check with your network service provider for details of their service in order to configure the handset accordingly.

Message Settings

To access and configure your Message Settings, from the standby screen, press the left soft key  **Menu**,  **Messaging**, and  **Message Settings**.

Message Alert

Allows you to set the Sounds, Volume, and Alert Type.

Save To

Allows you to choose whether to save to the SIM Card or the Phone.

Signature

Allows you to create, edit, and delete your signature, which can be configured to be sent out with your outgoing messages.

Text Message

Allows you to set preferences for text messages.

The following options are available:

- ▶ **Text Templates:** Predefined messages that can quickly be sent. Press the right soft key  **Options** to access the following available options:
 - **Send:** Allows you to send the selected template via Message.
 - **Delete:** Allows you to delete the selected template message.
 - **Edit:** Allows you to edit the selected template message.
 - **Delete All:** Deletes all messages in the folder.
- ▶ **Message Center Number:** Allows you to view and edit the phone number for the Message Center. Do not edit unless instructed to do so by your service provider.
- ▶ **Email Gateway:** Allows you to view and edit the Email Gateway. Do not edit unless instructed to do so by your service provider.
- ▶ **Message Subject:** Allows you to enable or disable the Subject field in an SMS.
- ▶ **Insert Signature:** Allows you to insert your signature in outgoing messages.

Multimedia Message

Allows you to set your preferences for multimedia messages.

The following options are available:

- ▶ **Multimedia Templates:** Allows you to add, edit, and delete multimedia templates. Press the right soft key  **Options** to access the following available options:
 - **Send:** Allows you to send the selected message via Multimedia Message.
 - **Delete:** Allows you to delete the selected template message.
 - **Edit:** Allows you to edit the selected template message.
 - **Rename:** Allows you to rename the selected template message.
 - **Delete All:** Allows you to delete all the messages at one time.
- ▶ **Priority:** Allows you to set the priority of the message.
- ▶ **Message Subject:** Allows you to enable or disable the Subject field in an MMS.

Messaging

- ▶ **Validity Period:** This network service allows you to decide how long your multimedia messages will be stored at the Message Center.
- ▶ **Send Delivery Receipt:** Allows you to send a delivery confirmation notification for a Multimedia Message.
- ▶ **Send Read Receipt:** Allows you to send a message read confirmation notification for a Multimedia Message.
- ▶ **Download Options**
 - **Download Without Ask:** Allows Multimedia Messages to be downloaded automatically.
 - **Ask Always:** You are prompted to download when a Multimedia Message is received.
 - **Discard:** Enabling this option will block incoming Multimedia Messages from being received.
- ▶ **Message Center:** Allows you to view and edit the phone number for the Message Center. Do not edit unless instructed to do so by your service provider.

Voicemail Number

This menu allows you to set the Voicemail Center Number if this feature is supported by AT&T. Please check with AT&T for details of their service in order to configure the handset correctly.

Service Message

Allows you to configure your settings to determine if you would like to receive service messages.

YPmobile

Unleash the power of YELLOWPAGES.COM local search on your mobile phone.

Find a business, get maps and directions, and save your favorites: our mobile app gives you what you need, whenever and wherever you need it.

- ▶ Search for local businesses.
- ▶ View ratings and call businesses.
- ▶ Save businesses for future access.
- ▶ Get maps and view step-by-step directions.

* For more information, refer to the www.yellowpage.com

To access YPmobile, from the standby screen, press the left soft key  **Menu** and then  **YPmobile**.

Mobile Web

Mobile Web is one of the services provided by AT&T and it gives you access to all the cool things you can do with your wireless phone.

❗ Note

Check the availability of services, pricing, and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Please contact your service provider to open an Internet account.

Launch the Browser

To launch the browser from the standby screen, press . You can also press the left soft key  **Menu** and  **Mobile Web**.

Once connected, the homepage is displayed.

To exit the browser at any time, press the  [END] key.

Using the Browser

Once you are connected to the Internet, the following menu options are available when you press the left soft key  **Options**:

- ▶ **Home:** Directs you to the homepage.
- ▶ **History:** Allows you to view your history of recently viewed web sites.
- ▶ **Go to Bookmarks:** You can add or save the current page to Bookmarks or view the list saved under Bookmarks.
- ▶ **Reload:** Allows you to reload the current web page so that you can view the newest content.
- ▶ **Find in Page:** Allows you to search for text in the current web page.
- ▶ **Settings:** Allows you to set options for web pages, appearance, and network.
- ▶ **Help:** Connects you to AT&T's Help web page.
- ▶ **Exit:** Exits the browser.

Menus for the Browser

You can surf the Internet using either the phone keys or the Browser menu.

Using the Navigation Keys

When surfing the Internet, the navigation keys function similarly from when the phone is on standby mode.

Push to Talk

Welcome to PTT

Push to Talk (PTT) from AT&T lets you check whether your family, friends, and co-workers are available to talk before you call. You can reach them individually or all at once via a group call, all in an instant. Read on to hear about all of the features AT&T Push to Talk has to offer.

Initialize your PTT Service

Begin initializing your PTT service by pressing the PTT Key (on left side of phone) or by pressing the left soft key  **Menu** and  **Push to Talk**.

You will then register your name and, once initialization completes, begin adding your family, friends, and co-workers who are also AT&T PTT subscribers.

PTT Tips

PTT is a great way of communicating instantly with the people who are important to you. Here are a few tips to help you.

1. Make sure you are holding the PTT Key down while you talk.
2. Make sure you don't start talking until AFTER you hear the tone.
3. Note the location of the speakerphone and microphone to make sure you aren't covering either with your grip.
4. PTT calls can be easily started with the slide closed. During a PTT call with the slide open and speaker OFF, the call will be terminated when the slide is closed. When the speaker is ON, closing the slide will not terminate the call.
5. Turn the volume up high to hear your PTT calls more clearly.

My Stuff

AT&T Music

You can access AT&T Music by pressing the left soft key  **Menu**,  **My Stuff**, and  **AT&T Music**.

Music Player

- ▶ **All Songs:** Allows you to view all the songs in your music library.
- ▶ **Playlists:** Allows you to create your own playlists.
- ▶ **Artists:** Shows the list of artists of all the songs in your music library, and shows all the songs by a chosen artist.
- ▶ **Albums:** Shows the list of albums of all the songs in your music library, and shows all the songs on a chosen album.
- ▶ **Genres:** Shows the list of genres of all the songs in your music library, and shows all songs of a specific genre.
- ▶ **Shuffle Songs:** Allows you to play all the songs in your music library in random order.

Tip!

The music player plays formats such as MP3, AAC, AAC+, and WMA.

! Note

Copyrights of music files may be protected by copyright and intellectual property laws. Please ensure that you adhere to the applicable Terms of Use of materials laws prior to downloading or copying files.

To play songs from or transfer songs to SD card, the SD card should have some empty space.

Up to 512MB card: Require 3MB empty space

Up to 4GB card: Require 6MB empty space

Up to 16GB card: Require 20MB empty space
(Up to 1000 songs)

Playing Music

To listen to music that you have transferred to your phone, follow these quick easy steps:

Playing Music with the Slide Open

1. Press the left soft key  **Menu** to open the Main Menu.
2. Press  **My Stuff** and select **AT&T Music**.
3. Press  **Music Player** to view your options. You can select from Now Playing, All Songs, Playlists, Artists, Albums and Genres to select your Music or you can just select Shuffle Songs to shuffle your collection.
 - Press  to **Play/Pause** a selected song. While playing, press the up or down navigation keys to change the volume and the left or right navigation keys to go to the previous or next song.
 - While playing music, press the left soft key  **Minimize** to minimize the music player and access other phone functions while music is playing.

Note

Files under 300kb are stored as ringtone files.

Adding Music To Your Handset

Music files can be added to your handset by using one or more of the following methods:

- Download music and ringtones over the AT&T network directly to your device via the **Shop Music** link in the AT&T Music Folder or the **Shop Tones** link in the Audio folder.
- From your existing digital media collection on your PC via Windows Media® Player and/or Windows Explorer.
- From your PC using other music subscription services, such as eMusic.

My Stuff

Purchasing and downloading Music directly to your Device

1. With Slide open, press left soft key  **Menu** to open the Main Menu.
2. Press  **My Stuff** and select **AT&T Music**.
3. Press  **Shop Music**.
4. Navigate the **Shop Music** page to download today's hottest music, ringtones, and other personalized content directly to your phone.

Note

Some sites are data intensive (i.e. previews via streaming) so the user should be enrolled in an unlimited data plan before using these services to avoid per-use data charges.

Additional charges may apply when downloading music, ringtones etc.

Transferring Music using your PC

Before You Get Started

To transfer music from your PC to your device, you will need the following:

- Windows Media® Player 10 (or above) or other digital music management software, such as eMusic.
- Music on your PC in one of these formats: MP3, .AAC, AAC+ or WMA
- A MicroSD™ card* (supports up to 16GB cards)
- USB data cable*

* MicroSD™ card and USB data cable sold separately; go to att.com/wireless for details.

Note

This device is not compatible with iTunes and/or iTunes files.

Transferring Music from the Digital Music Service (such as eMusic)

1. Using your computer, open your preferred PC music management client.
2. Download the selected song to your library.
3. Make sure the microSD™ card is inserted properly into the handset.
4. Use the USB adapter cable to connect the handset to the PC.
5. Once the USB connection has been established, the handset displays “Do not disconnect during transfer”. The PC screen will display a pop-up message announcing the detection of the LG GU292 device. If the detection does not occur, the USB connection settings may need to be changed. For more information, go to the **Changing USB Connection Settings** section on page 51.

6. Follow the music service instructions to transfer music to your handset.

Note

If you have a USB hub, connect the handset directly to your computer rather than through the hub.

Transferring Music using Windows Media Player

1. Open Windows Media® Player on your computer (version 10.0 or higher).
2. Use the USB adapter cable to connect the handset to the PC.
3. Once the USB connection has been established, the handset displays “Do not disconnect during transfer”. The PC screen will display a pop-up message announcing the detection of the LG GU292 device.

My Stuff

Note

If you have a USB hub, connect the handset directly to your computer rather than through the hub. If the target computer does not detect the newly connected handset or provide an MTP Player dialog window on the PC screen, or if the detection does not occur, skip to **Changing USB Connection Settings** section on page 51.

4. From within the Windows Media® Player application, click on the Sync tab.
5. Choose the destination location for the media files. The LG GU292 Music Sync Player appears on the right side of the screen.

Note

If there are no items present in the playlist, click the Edit Playlist button and begin adding the music files from among the various media categories.

6. Drag the songs you wish to synchronize to your LG GU292 to the Sync List column on the right side of the screen.

7. Click the **Start Sync** button at the lower right corner of the application to download the selected songs to your handset. Do not unplug the handset during this process.
8. Once synchronization is complete, it will be safe to unplug the USB connector from the handset.

Drag and Drop Music Using LG GU292 As A Mass Storage Device

1. Insert a microSD™ memory card into the phone and make sure it is powered on.
2. Connect the device to a PC using a LG GU292 USB data cable.
3. Access My Computer on the PC.
4. Locate the phone and double-click it to open.

Note

The PC will automatically assign a drive letter.

5. Browse the files in a new window for desired music files.
6. Drag and drop the desired music content from the PC window to the “Storage Card” window.
7. Disconnect the device from the cable.
8. Access the Music Player on the phone.

Note

If the target computer does not detect the newly connected handset as Mass Storage, skip to the **Changing USB Connection Settings** section below.

Changing USB Connection Settings

1. From the standby screen, press the left soft key  **Menu**.
2. Press  **Settings**.
3. Press  **Connection**.
4. Press  **USB Connection Mode**.

5. Use the **Up** or **Down** Navigation key to highlight Music Sync (if using Windows Media® Player or other Digital Music Services) or Mass Storage (if you are going to drag or drop files) and press  **Select**.
6. Reconnect the device to a PC.

Deleting Music Files

When you have transferred files with the Music Sync feature and you want to delete them from your phone, you should connect the phone to your PC and delete using the method with which you first added the music. The following are the four options available to delete Music from your Phone:

- A.** Delete a file using Mass Storage, but not using Music Sync function.
- B.** Delete a file by directly inserting the microSD™ external memory onto the PC.
- C.** Delete a file using the delete function on the phone.
- D.** Delete the files by using the Master Clear option on your Memory Card.

My Stuff

! Note

Be aware that all of the existing data will be erased on microSD™ card if you use the Master Clear option.

Access the **Master Clear** function in the Settings menu (see page 68).

Additional Music Services

There may be other AT&T music applications preloaded or available for your phone that allow you to:

- Identify the name, artist, and album to a song from a song sample.
- Listen to the latest Hip Hop, R&B, Rock, Jazz, or Country streaming commercial-free radio channels, anywhere you go.
- View the latest music videos.
- View music news and information.
- Cut custom-made ringtones from the favorite parts of your favorite songs, etc.

! Note

Some sites are data intensive (i.e. previews via streaming) so the user should be enrolled in an unlimited data plan before using these services to avoid per-use data charges.

Additional charges may apply for downloading content or use of these services.

Mobile Video

Mobile Video brings you quick, on-demand access to news, sports, weather and entertainment video clips. Catch up on TV's hottest shows, funniest comedians, biggest headlines, and latest sports scores. You can even personalize your homepage for quick access to your favorites. In addition, the Mobile Video service automatically displays localized weather information to your personalized "News & Weather" page each and every day.

To access Mobile Video, from the standby screen, press the left soft key  **Menu**,  **My Stuff**, and  **Mobile Video**.

Audio

To access Audio, from the standby screen, press the left soft key  **Menu**,  **My Stuff**, and  **Audio**.

- ▶ **Shop Tones:** This menu option connects to AT&T's Ringtones download site.
- ▶ **Answer Tones:** This menu option allows to manage your Answer Tones.
- ▶ **Record Voice:** Allows you to record voice notes.
- ▶ Saved audio files are displayed in the list.

Games

To access Games, from the standby screen, press the left soft key  **Menu**,  **My Stuff**, and  **Games**.

- ▶ **Shop Games:** This menu option connects to AT&T's Games download site.
- ▶ Downloaded games are displayed in the list.

! Note

The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.

! Warning

Only J2ME (Java 2 Micro Edition) based programs will run on a phone.

J2SE (Java 2 Standard Edition) based programs will only run on a PC.

Picture

To access Picture, from the standby screen, press the left soft key  **Menu**,  **My Stuff**, and  **Picture**.

- ▶ **Shop Wallpapers:** Connects to AT&T's Color Graphics download site.
- ▶ **Make Animated GIF:** Allows you to create an animated GIF file with the images in your phone.
- ▶ The picture files saved on your phone and memory card (if inserted) are displayed.

My Stuff

Video

To access Video, from the standby screen, press the left soft key  **Menu**,  **My Stuff**, and  **Video**.

- ▶ **Shop Videos:** Connects you to AT&T's Videos download site.
- ▶ The video files saved on your phone and memory card (if inserted) are displayed.

❗ Note

DRM sometimes restricts some functions, such as send and edit.

Applications

To access Applications, from the standby screen, press the left soft key  **Menu**,  **My Stuff**, and  **Applications**.

This menu displays the list of Java programs on your phone. All previously downloaded programs can be selected, deleted, or viewed in detail within the Applications menu.

- ▶ **Shop Applications:** Connects you to AT&T's Cool Tools/Apps download site.
- ▶ The applications on your phone will be displayed in the list.

Tools

Voice Command

Voice Command is the function whereby your phone's voice recognition engine identifies the voice of the user and carries out the requested commands. When the user operates the Voice Command function, there are five possible commands, Call <Name or Number>, Listen Voicemail, Missed Calls, Messages, and Time & Date. To activate the Voice Command function, hold down the  **Clear Key** while the phone is in standby mode or press the left soft key  **Menu**,  **My Stuff**,  **Tools**, and  **Voice Command**.

- 1. Call <Name or Number>:** This function is activated only when the user says the command "Call" followed by the name stored in the address book or say the phone number. Please note that interfering noise might cause a problem displaying candidates. Additionally, the user has the option to select a number type at the end, such as "mobile", "home", or "work".

2. Listen Voicemail: This command is activated when the user says “Listen Voicemail”. The user will then be automatically connected to voicemail.

3. Missed Calls: This command is activated when the user says the words “Missed Calls”. The mobile phone presents the missed call list.

- **Follow-up Commands Available**

- **Yes:** Make the phone call.
- **No:** Moves to the next result.
- **Cancel:** Go back to the main Voice Command menu.
- **Exit:** Terminate Voice Command.
- **Next:** Moves to the next result.

4. Messages: This command is activated when the user says “Messages”. The phone displays details of unread SMS or MMS messages.

5. Time & Date: This command is activated when the user says “Time & Date”. The phone displays the current local time and date.

Voice Command Options

When the Voice Command option is activated, you can press the right soft key  **Options** for the following options:

- **Mode**

- **Speed:** Voice Command is abbreviated.
- **Normal:** Voice Command is played normally with prompts.

- **Best Match**

- **1 Match:** The most likely match will be displayed when finding a number from the address book.
- **4 Matches:** The four most likely matched names will be displayed when finding a name from the address book.

- **Sensitivity**

- **High:** Operation and performance of the voice recognition engine is rarely affected by the user's voice command and surrounding sound.

My Stuff

- **Medium:** Operation of the voice recognition engine is normally affected by user's voice command and surrounding sound.
- **Low:** Operation of the voice recognition engine is strongly affected by user's voice command and surrounding sound.

• Speakerphone Mode

- **Automatic On:** When this option is selected, sound is loud enough so you can hear the output when the phone is away from the ear, at a distance
- **Off:** When this option is selected, sound is quieter and cannot be heard when the phone is away from the ear, at a distance

• Call Alert

- **Ring Only:** The phone rings repeatedly during an incoming call.
- **Ring After Name:** The phone announces the name or number of the incoming call, then rings repeatedly.
- **Name Repeat:** The phone announces an incoming call by repeating the name or number of the caller.

Recent Calls

This menu displays recent calls categorized by tab as **All/Missed/Dialed/Received**.

To access Recent Calls, from the standby screen, press the left soft key  **Menu**,  **My Stuff**,  **Tools**, and  **Recent Calls**.

Alarm Clock

The alarm function allows you to set up multiple separate alarms. You can also set the time, repetition interval, and alarm tone. If there is no alarm setting, press the left soft key  **New** to add a new alarm.

To access Alarm Clock, from the standby screen, press the left soft key  **Menu**,  **My Stuff**,  **Tools**, and  **Alarm Clock**.

Alarm Options

- ▶ **Time:** Input your desired alarm time by specifying the hour and minutes. You can also choose a predefined amount of time (15 Minutes Later, 30 Minutes Later, 45 Minutes Later, 1 Hour Later, Off).
- ▶ **Repeat:** Select the desired repeat mode (Once, Daily, Mon ~ Fri, Sat ~ Sun, Except Holiday, Select Weekday).
- ▶ **Alarm Tone:** Press  **List** to access the list of available Alarm Tones.
- ▶ **Memo:** Input alarm name.

Press the left soft key  **Save** to save your new Alarm.

Calendar

When you enter this menu, a calendar will be displayed. The red square cursor is used to locate a particular day. The bottom bar on the calendar indicates saved schedules (if any) for that day. This function helps you keep track of your schedule. The phone can sound an alarm tone if it has been set for a specific schedule item.

The chart below shows the keys that can be used to navigate the Calendar:

Key	Description
 key /  key	Weekly
 key /  key	Daily
 key /  key	Annually
 key /  key	Monthly

To access Calendar, from the standby screen, press the left soft key  **Menu**,  **My Stuff**,  **Tools**, and  **Calendar**.

The following options are available when a Calendar event is selected from the Calendar menu.

- ▶ **Search:** Allows you to search the saved schedule(s).
- ▶ **Delete:** Allows you to delete the selected schedule.
- ▶ **Send Schedule Via:** Sends the selected schedule by Text Message, Multimedia Message, or Bluetooth.
- ▶ **Set Holiday:** Allows you to set specific dates to display as Holidays on your calendar.
- ▶ **Selective Delete:** Allows you to delete Old Schedules or All Schedules selectively.

My Stuff

- ▶ **View All:** Allows you to view all saved schedules.
- ▶ **Go to Date:** Allows you to jump to a specific date.
- ▶ **Select Multiple:** Allows you to select multiple schedules in the same day to delete or send to another person.
- ▶ **Cancel:** Allows you to cancel the edition of the selected schedule.

Notepad

You can create up to a maximum of 30 memos.

To access Notepad, from the standby screen, press the left soft key  **Menu**,  **My Stuff**,  **Tools**, and  **Notepad**.

1. Press the left soft key  **New** to create a new memo.
2. Input the memo and press  **Save** to save.

Calculator

The Calculator function allows you to calculate simple mathematical equations.

To access Calculator, from the standby screen, press the left soft key  **Menu**,  **My Stuff**,  **Tools**, and  **Calculator**.

World Clock

The World clock function provides time information for major cities worldwide.

To access World Clock, from the standby screen, press the left soft key  **Menu**,  **My Stuff**,  **Tools**, and  **World Clock**.

1. You will be asked to enter the name of your current city. Enter the name, then press the left soft key  **Save**.
2. To view the time in another city, press the left soft key  **New**, find the city, and set the Daylight Savings Time.
3. Press the left soft key  **Save** to save the new city.

You will then see the new city's time and date information.

Tasks

This feature allows you to save and manage a task.

To access Tasks, from the standby screen, press the left soft key  **Menu**,  **My Stuff**,  **Tools**, and  **Tasks**.

1. To add a new task item, press the left soft key  **New**.
2. Input the Due Date, Note, Priority, and Status information for the new Task.
3. Press the left soft key  **Save** to save the Task item.

The following options are available in the Task list:

- ▶ **Mark 'Complete':** Allows you to change the status of the selected task as Completed.
- ▶ **Edit:** Allows you to edit a saved task.
- ▶ **Delete:** Deletes the selected task.
- ▶ **Selective Delete:** Allows you to delete All Completed/All Past Tasks selectively.
- ▶ **Send Task Via:** Enables the selected task to be sent via Text Message, Multimedia Message, or Bluetooth.

- ▶ **Select Multiple:** Allows you to select multiple Tasks.
- ▶ **View Calendar:** Allows you to view the Calendar.
- ▶ **Cancel:** Cancels the task editing and returns to the Tools menu.

Stopwatch

This menu allows you to record the elapsed time of an event. The duration of an individual lap time (up to 20 laps) and the total time can also be displayed.

To access Stopwatch, from the standby screen, press the left soft key  **Menu**,  **My Stuff**,  **Tools**, and  **Stopwatch**.

▶ New Time

1. To start timing, press  **Start**. The running time is displayed as HH.MM.SS.hh (hours, minutes, seconds, hundredths of a second).
2. During the timing, you can record an individual lap time by pressing the right soft key  **Lap**. Up to 20 lap times can be recorded.
3. You can stop or restart timing by pressing  again.

My Stuff

4. To reset the stop watch, press  **Stop** to stop the time, then press the left soft key  **Reset**.

- **Saved Times:** You can see the saved recorded times.

Tip Calculator

This feature allows you to quickly and easily calculate the tip amount based on the total bill as well as the split of the total bill based on the number of people.

To access Tip Calculator, from the standby screen, press the left soft key  **Menu**,  **My Stuff**,  **Tools**, and  **Tip Calculator**.

Unit Converter

This function allows you to convert units of measurement.

There are 6 types of units that can be converted: Area, Length, Weight, Temperature, Volume, and Velocity.

To access Unit Converter, from the standby screen, press the left soft key  **Menu**,  **My Stuff**,  **Tools**, and  **Unit Converter**.

Note

You can input a decimal by pressing the  key.

Other Files

When you receive files of an undefined format (such as .vcs, .vcf, etc.) via email, the files are saved in this folder.

To access Other Files, from the standby screen, press the left soft key  **Menu**,  **My Stuff**, and  **Other Files**.

The following options are available:

- **Send Via:** Send the selected file via Bluetooth or MMS.
- **Delete:** Allows you to delete the selected file.
- **Move:** Allows you to move the selected file to another folder.
- **Copy:** Allows you to copy the selected file to another folder.
- **Rename:** Allows you to edit the name of the selected file.



- ▶ **Select Multiple:** Allows you to select multiple files at once to perform various functions.
- ▶ **Sort By:** Allows you to sort the files by Name, Date, and Type.
- ▶ **Information:** Allows you to view information about the selected file or used memory space on your phone or memory card.

File Manager

This function allows you to view the content in your internal phone memory and the external memory card.

To access File Manager, from the standby screen, press the left soft key  **Menu**,  **My Stuff**, and  **File Manager**.

AT&T Address Book

Contact List

This menu allows you to save and manage contact address information. The Contact List's functions allow you to add a new address or search saved contact addresses by name.

To access Contact List, from the standby screen, press the left soft key  **Menu**,  **AT&T Address Book**, and  **Contact List**.

AT&T Address Book Native Sync (AAB)

AT&T Address Book Native Sync (AAB) is a service application for the synchronization of phone Contact List information with the AAB server. When you turn on the phone or change your SIM card, the AAB Start UP application is displayed after copying the SIM card information.

After checking the membership identification for this service, you can find the menu for the synchronization with the AAB server, from the standby screen, by pressing the left soft key  **Menu**,  **AT&T Address Book**,  **Contact List**, right soft key  **Options**, and  **Sync Settings**.

- ▶ **Auto Sync On/Off:** This menu allows you to synchronize your contact information with AAB automatically.
- ▶ **Sync Now:** Synchronize your contact information with AAB now.
- ▶ **Sync Log:** Shows recently synchronized information.

Note

This  indicator is displayed during the AAB synchronization.

New Contact

This menu allows you to add a new contact to the Contact List. You can enter contact address information including name, phone numbers, email addresses, group information items, memos, ring tones, and a contact Picture ID.

To access New Contact, from the standby screen, press the left soft key  **Menu**,  **AT&T Address Book**, and  **New Contact**.

Caller Groups

This menu allows you to manage group information. You can also configure a ring tone for a group so that the group ring tone sounds when a call from a specific contact address within that group is received and there is no ring tone configured for the specific contact address.

To access Caller Groups, from the standby screen, press the left soft key  **Menu**,  **AT&T Address Book**, and  **Caller Groups**.

Speed Dial List

This menu allows you to assign a frequently-called contact to the Speed Dial List. You can select a number from 2 to 9 as a speed dial.

To access Speed Dial List, from the standby screen, press the left soft key  **Menu**,  **AT&T Address Book**, and  **Speed Dial List**.

SIM Management

This menu allows you to copy information from your SIM card to your handset and vice versa. If a name is duplicated during the copying operation, the information is also duplicated. You can also delete information from the SIM card.

To access SIM Management, from the standby screen, press the left soft key  **Menu**,  **AT&T Address Book**, and  **SIM Management**.

Service Dial Numbers

You can view the list of Service Dialing Numbers (SDN) assigned by your network provider. Such numbers could include the emergency services, directory assistance and voice mail numbers.

To access Service Dial Numbers, from the standby screen, press the left soft key  **Menu**,  **AT&T Address Book**, and  **Service Dial Numbers**.

AT&T Address Book

My Numbers

This displays your phone numbers stored in the SIM card.

To access My Numbers, from the standby screen, press the left soft key  **Menu**,  **AT&T Address Book**, and  **My Numbers**.

About

Allows you to view the software version and last update for AT&T Address Book.

To access About, from the standby screen, press the left soft key  **Menu**,  **AT&T Address Book**, and  **About**.

Settings

Audio & Ringtones

This menu allows you to configure the audio and ringtone settings for your phone.

To access Audio & Ringtones, from the standby screen, press the left soft key 

Menu,  **Settings**, and  **Audio & Ringtones**.

Shop Tones

Connects to the AT&T Ringtones download site.

Ringtone

- ▶ **Sounds:** Allows you to set a sound as the ringtone for your phone.
- ▶ **Volume:** Allows you to control your Ringtone volume.
- ▶ **Alert Type:** Supports 3 ring alert types: Ring, Ring and Vibration, and Ring after Vibration.
- ▶ **Increasing Ringtone:** Allows you to enable or disable the Increasing Ringtone function, which is played when you receive an incoming call.

! Note

Full length music tracks cannot be set as either ringtones or message tones.

Message Tone

- ▶ **Sounds:** Allows you to set a sound as your message tone.
- ▶ **Volume:** Allows you to control your Message Tone volume.
- ▶ **Alert Type:** Supports 6 message alert types: Ring Once, Ring Every 2 Min., Ring Every 15 Min., Ring & Vibrate, Vibrate, and Silent.

Settings

Alert Tone

- ▶ **Sounds:** Allows you to select a set of alert tones. Supports 2 alert tone types: Alert Tone 1 and Alert Tone 2.
- ▶ **Volume:** This menu allows you to control your Alert Tone volume.
- ▶ **Alert Type:** You can select to turn Alert Tones to Ring or Silent.

Keypad Tone

This menu option allows you to select a tone that the phone sounds when a key is pressed on the dialpad. You can select an option from **Beep** and **Voice** and set the volume.

Multimedia

This menu allows you to control your Multimedia volume.

Call

This menu allows you to control your Call volume.

Power On/Off Tones

You can select to turn Power On/Off Tones to **Ring** or **Silent**.

Phone Settings

This menu allows you to configure the Phone Settings.

To access Phone Settings, from the standby screen, press the left soft key  **Menu**,  **Settings**, and  **Phone Settings**.

Date & Time

- ▶ **Set Date:** This allows you to enter the day, month, and year. You can set to Auto Update with the Auto Update menu.
- ▶ **Date Format:**
 - ddd, MMM DD (day, month date)
 - MM/DD/YYYY (month/date/year)
 - DD/MM/YYYY (date/month/year)
 - YYYY/MM/DD (year/month/date)
- ▶ **Set Time:** This allows you to enter the current time. You can choose the time format via the Time Format menu option.
- ▶ **Time Format:** 12 Hours/24 Hours
- ▶ **Auto Update:** Allows you to set the phone to automatically update the time and date according to the current local time zone.

Languages

Allows you to change the language for the display text on your phone. This change will also affect the Language Input mode.

Set Hotkeys

Allows you to change the preferences on the Hotkeys that are currently assigned for your navigation keys (when in standby mode).

Auto Key Lock

This allows you to set the amount of time before your keys lock automatically.

Set Flight Mode

This allows you to only use the phone's features that do not require the use of the wireless network when you are in an airplane or in places where the wireless network is prohibited. If you set the flight mode on, the flight mode icon will be displayed on the screen instead of the network signal icon.

- ▶ **On:** You cannot make (or receive) any calls, including emergency calls, or use other features that require network coverage.

- ▶ **Off:** You can deactivate the flight mode to access the network.

Security

Various codes and passwords are used to protect the features and settings of your phone.

- ▶ **Phone Lock:** You can use a security code to avoid unauthorized use of the phone. If you set the Phone Lock to **When Power On**, the phone will request a security code whenever you switch the phone on. If you set the Phone Lock to **When SIM Card changed**, your phone will request a security code only when you change your SIM Card. If you set the Phone Lock to **Lock Phone Now**, your phone will lock immediately.
- ▶ **PIN Code Request:** When the PIN Code Request feature is turned on, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

! Note

Before setting the PIN Code Request feature off, you must enter your PIN.

Settings

- ▶ **Fixed Dial Number:** This feature allows you to restrict your outgoing calls to selected phone numbers, if supported by your SIM Card. The PIN2 code is required.

- **FDN On/Off**

- **On:** You can only call phone numbers stored in the FDN List. You must enter your PIN2 code.
- **Off:** You can call any number.

- **FDN List:** Allows you to enter a new FDN entry.

- ▶ **Change Codes:** The Change Codes feature allows you to change your current password to a new one. You must enter the current password before you can specify a new one. You can change the access codes for: **Security Code, PIN Code, PIN2 Code.**

- ! **Note**

Not all SIM Cards have a PIN2 Code. If your SIM Card does not, this menu option is not displayed.

- ▶ **PTT Key Lock:** Allows you to enable or disable the PTT Key Lock.

Reset Settings

This function allows you to restore factory settings. To do this, you need the security code.

- ▶ **Master Reset:** Restores the phone settings (e.g.: Audio, Display, Language, Date & Time, Bluetooth Settings) to default values.

- ▶ **Master Clear:** Deletes downloaded/user created contents (e.g.: images and videos) from the phone and the external memory card.

- **Phone**

- Deletes all downloaded/user created images and audios from the phone memory.
- Deletes personal information stored in the phone memory (e.g.: AT&T Address Book, Messages, Tasks, Alarm, Calendar Schedules).
- Restores the settings stored in the phone memory to the default values.

- **Memory Card:** Deletes all contents from the external memory card.

Display

This menu allows you to configure your Display settings.

To access Display, from the standby screen, press the left soft key  **Menu**,  **Settings**, and  **Display**.

Shop Wallpapers

Connects to AT&T's Color Graphics download site.

Wallpapers

This menu allows you to set a picture or color as your background.

Fonts

You can configure the font size and color of the font that your phone uses.

Clocks & Calendar

This feature allows you to select a Clock or Calendar to display on the standby screen.

Brightness

You can set the brightness of the display screen and the keypad.

Backlight Timer

Use this to set the duration of the display backlight and keypad.

Color Schemes

Allows you to change the whole look of your phone display to a Black or White scheme.

Menu Styles

You can set the main menu style to Icon or List view.

Call

This menu allows you to configure your Call settings.

To access Call, from the standby screen, press the left soft key  **Menu**,  **Settings**, and  **Call**.

Call Forwarding

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact AT&T.

Settings

The following options are available:

- ▶ **All Voice Calls:** Diverts voice calls unconditionally.
- ▶ **If Busy:** Diverts voice calls when the phone is in use.
- ▶ **If No Answer:** Diverts voice calls which you do not answer.
- ▶ **If Out of Reach:** Diverts voice calls when the phone is switched off or out of coverage.

Send My Number

This network service allows you to set your phone number to be displayed or hidden from the person you are calling. You can select **Set by Network** if you prefer to have different settings for different service providers.

Auto Redial

If set to On, your phone redials the number you're trying to call up to 10 times after you hear a quick, busy signal. Press  [END] to stop the call attempts.

This feature attempts to redial numbers that are engaged due to the wireless network. It does not redial numbers to an engaged party.

! Note

There will be no alert indicating the call has been connected. You must stay on the line to hear when the call is connected.

Answer Mode

This allows you to determine how to answer the phone.

- ▶ **Any Key:** Allows you to answer an incoming call by pressing any key, except the  [END] key, side volume keys, Push to Talk(PTT) key, or the right soft key  **Silent.**
- ▶ **Send Key Only:** Allows you to only answer an incoming call by pressing the  [SEND] key or left soft key  **Accept.**
- ▶ **Slide Up:** Allows you to slide open the phone to answer an incoming call.

Minute Minder

This option allows you to specify whether the phone will beep every minute during an outgoing call to keep you informed of the length of the call.

Call Waiting

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Deactivate** to request the network to deactivate call waiting, or **View Status** to check if the function is active or not.

Call Reject

This menu allows you to enable or disable call reject for all numbers or just the numbers on the Call Reject List.

- ▶ **Call Reject On/Off:** Allows you to activate or deactivate Call Reject. When the **Reject All Calls** option is set, all incoming calls are routed directly to Voicemail. **Reject on List** allows you to enable Call Reject for the numbers saved on your Call Reject List.
- ▶ **Call Reject List:** Allows you to view a list of the numbers you wish to reject and add new numbers to the list. You have the option of choosing numbers from your Contact List or adding a new number.

Send DTMF Tones

Select from **On/Off**.

TTY

Allows you to enable TTY Mode in order to contact other TTY devices. Select from **TTY Full/TTY Talk/TTY Hear/TTY Off**.

Time & Cost

Allows you to view information about Call Duration and Data Counter.

Connection

This menu allows you to configure your Connection settings.

To access Connection, from the standby screen, press the left soft key  **Menu**,  **Settings**, and  **Connection**.

Settings

Bluetooth

Your phone has built-in Bluetooth wireless technology, which makes it possible for you to connect your phone wirelessly to other Bluetooth devices such as a hands-free device, PC, PDA, or other phones. The devices registered in your phone can only be connected one at a time (To make a connection to the same type of device or change Bluetooth preferences, disconnect the existing device first).

You can also exchange, for example, business cards, calendar items, and pictures.

To access Bluetooth, from the standby screen, press the left soft key  **Menu**,  **Settings**,  **Connection**, and  **Bluetooth**.

Hands-free profile

This  appears when the hands-free profile is used between the hands-free device and the phone. This allows you to call using a Bluetooth connection.

A2DP profile

This  appears when the A2DP profile is used between the stereo headset device and the phone. This allows you to listen to an audio clip. A2DP is the Advanced Audio Distribution Profile, which provides support for streaming either mono or stereo audio using Bluetooth.

Hands-free + A2DP profile

This  appears when both profiles of the hands-free and the A2DP are used between the compatible device and the phone. This allows you to call and listen to an audio clip using a Bluetooth connection.

When using each device, see the manual that comes with the device.

Note

We recommend that your phone and the Bluetooth device you are communicating with should be no more than 10 meters apart. The connection may be improved if there are no solid objects between your phone and the other Bluetooth device.

Bluetooth Menu Options

- ▶ **Turn On/Off:** Allows you to turn your Bluetooth functionality on or off.
- ▶ **My Visibility On/Off**
 - **On:** This option makes your phone visible to other Bluetooth devices.
 - **Off:** This option hides your phone from other Bluetooth devices except those already paired with yours.
- ▶ **Search New Device:** This function allows you to search for and add new devices.

To pair with another device

1. From the standby screen, press the left soft key  **Menu**,  **Settings**,  **Connection**,  **Bluetooth**, and  **Search New Device**.
 2. If you want to stop searching, press the left soft key  **Stop**.
 3. All of the devices found are displayed.
 4. Select the desired device by pressing  **Add** and entering the password.
- ▶ **My Devices:** This function allows you to view the list of all devices that are paired with your phone.

- ▶ **My Bluetooth Info:** This menu allows you to configure the profile for Bluetooth.

- **My Device Name:** Allows you to change the handset's name which can be seen by other Bluetooth devices.
- **Supported Services:** Shows you all services that the handset supports.
- **Primary Storage:** Allows you to assign the default storage to Handset or Memory Card for files received via Bluetooth.

USB Connection Mode

You can transfer files from a compatible PC to the memory in your phone using the Mass Storage Mode. When you connect the phone to a PC using the USB cable, your phone will be displayed as a removable disk through Windows Explorer.

The USB Connection Mode determines how your phone will communicate with other USB devices when they are connected with a USB cable.

Settings

Internet Profiles

This menu shows the Internet Profiles. You can add, delete, and edit Internet Profiles by pressing the right soft key  **Options**. However, you cannot delete or edit default configurations provided by AT&T.

Access Points

This menu shows the Access Points. You can register, delete, and edit by pressing the right soft key  **Options**. However, you cannot delete or edit default configurations provided by AT&T.

Memory

This menu allows you to configure your Memory settings.

To access Memory, from the standby screen, press the left soft key  **Menu**,  **Settings**, and  **Memory**.

Used Space

This function shows the memory status of the handset and memory card (if inserted).

▶ Phone Common

This function shows the Memory Status of the phone and the memory being used by Audio, Image, Video, Multimedia Message, Java, and Others types of files.

▶ Phone Reserved

This function shows the status of the reserved memory used by Text Messages, Contacts, Calendar items, Tasks, and the Notepad.

▶ Memory Card

If your phone has a memory card in the card slot, you can save images, sounds, and videos onto it. You can check the current status of the external memory card in this memory status menu.

▶ SIM Card

This function shows the status of the SIM Card memory.

Set Storage Defaults

This menu allows you to set the storage default location for internet downloads, Bluetooth transfers, and voice recordings. You can set each case separately or choose to set all of them at once.

Application Settings

This Menu allows you to configure Application Settings.

To access Application Settings, from the standby screen, press the left soft key

 **Menu**,  **Settings**, and  **Application Settings**.

Messaging

For more details, refer to Message Settings on page 40.

Browser

This menu allows you to configure the Browser settings.

Accounts

This includes the network information used to connect the Browser to the Internet. Select the desired account by highlighting it and pressing the left soft key  **Activate**. This will activate the account that will be used for future connections.

- ▶ **Activate:** Select the account among the list of accounts, so it can be used for future connections.

- ▶ **View:** Allows you to see the specific account information.

The following options will be available when you press on the right soft key  **Options:**

- ▶ **Edit:** Allows you to change the account information. This option is not available for the default Account.
- ▶ **Delete:** Allows you to delete the account.
- ▶ **New:** Allows you to create new account.

Note

- You cannot edit and delete pre-installed accounts.
- In order to create a new account, please fill in the network information.
 1. Account Name: Name associated with new account.
 2. Homepage: Homepage URL.
 3. Internet Profile: You can choose one from the Internet profiles.
- AT&T has provided default settings regarding account information.
- Creating or editing an account requires caution. The Browser cannot connect to the Internet if the account information is incorrect.

Settings

Appearance

You can choose the settings of the Browser appearance (Text size, Character Encoding, Scrolling Control, Show Image, JavaScript).

Cache

The web pages you have accessed are stored in the phone memory. This menu allows you to manage that function.

- ▶ **Clear Cache:** Remove all cached data in the memory.
- ▶ **Allow Cache:** Allows you to turn the memory cache on or off.

! Note

Cache is a type of buffer memory, which is used to store data temporarily, especially when it is online.

Cookies

The information of services you have accessed are stored in what is called a Cookie. From this menu, you can choose to Allow Cookies or to Delete Cookies that are already on your phone.

Clear Login Info

Allows you to clear all of your login info from your phone.

Screen Settings

You can change the settings of the Browser screen (Rendering mode, Zoom, Mini-Map).

Security

A list of the available certificates is shown.

- ▶ **Certificates:** You can see the list of certificates and view them in detail.
- ▶ **Clear Session:** Removes the secure session.

Navigation Mode

You can change the methods of Browser navigation.

- ▶ **4 Way Navigation:** The cursor of the browser moves scroll amounts or follows hyperlinks.
- ▶ **Mouse Pointer:** You can move the cursor like a mouse pointer.

Secure Pop-up

You can activate or deactivate the pop-up which indicates a secure page.

Browser Shortcut

If set to On, you can use the browser more quickly and conveniently with the key pad in the phone. If Browser Shortcut is on, the following shortcuts are available:

- | | |
|-------------------|------------------|
| 1. Enter URL | 2. Recent Pages |
| 3. Add This Page | 4. Page Up |
| 5. Full Screen | 6. Page Overview |
| 7. Page Down | 8. New Window |
| 9. Search Text | 0. Zoom In |
| *. View Bookmarks | #. Zoom Out |

Voice Command

• Mode

- **Speed:** Voice command is abbreviated.
- **Normal:** Voice Command is played normally with prompts.

• Best Match

- **1 Match:** The most likely match will be displayed when finding a number from the address book.

- **4 Matches:** The four most likely matched names will be displayed when finding a name from the address book.

• Sensitivity

- **High:** Operation and performance of the voice recognition engine is rarely affected by the user's voice command and surrounding sound.
- **Medium:** Operation of the the voice recognition engine is normally affected by user's voice command and surrounding sound.
- **Low:** Operation of the the voice recognition engine is strongly affected by user's voice command and surrounding sound.

• Speakerphone Mode

- **Automatic On:** When this option is selected, sound is loud enough so you can hear the output when the phone is away from the ear, at a distance.
- **Off:** When this option is selected, sound is quieter and cannot be heard when the phone is away from the ear, at a distance.

Settings

• Call Alert

- **Ring Only:** The phone rings repeatedly during an incoming call.
- **Ring After Name:** The phone announces the name and number of the incoming call, then rings repeatedly.
- **Name Repeat:** The phone announces an incoming call by repeating the name or number of the caller.

Software Update

If new software exists, the AT&T server notifies devices using a push message.

The user can also check for the software update using the menu “Check for Update”.

If the new software does not exist the user can not use this feature in 24 hours.

Before updating new software after downloading it from the AT&T server, users can decide whether they would like to postpone the operation. Reminder times can be set to 30 minutes, 1 hour, and 4 hours. When the time is up, users are prompted again or users can resume the postponed operation using this menu at any time.

The software update can only be postponed three times and will automatically start after the third postpone period expires.

To access Software Update, from the standby screen, press the left soft key  **Menu**,  **Settings**, and  **Software Update**.

Phone Information

This menu is used to view My Numbers, Manufacturer, Model Name, Device ID, Hardware Version, Software Version, Language, and DM Client Version.

To access Phone Information, from the standby screen, press the left soft key  **Menu**,  **Settings**, and  **Phone Information**.

Q&A

Please check to see if any problems you have encountered with the phone are described in this section before taking the phone in for a service or calling a service engineer.

Q How do I view the list of outgoing calls, incoming calls, and missed calls?

A Press the  [SEND] key.

Q Why is the connection inconsistent or not audible in certain areas?

A When the frequency environment is unstable in a certain area, connection may be inconsistent and inaudible. Relocate to another area and try again.

Q Why is the connection inconsistent or abruptly disconnects even when established?

A When frequency is unstable or weak, or if there are too many users, a connection may be cut off even after it was established. Please try again later or attempt again after relocating to other areas.

Q Why won't the LCD turn on?

A Remove the battery, then replace it. Then turn on the power. If there is no change, fully charge the battery and try again.

Q Why does the phone heat up?

A The phone may get hot when there is a very long call duration, when games are played, or even when surfing the Internet for a long time. This has no effect upon the life of the product or performance.

Q Why does the battery run out so quickly during normal use?

A This may be due to the user environment, a large number of calls, or a weak signal.

Q Why is no number dialed when an Address Book entry is recalled?

A Check that the number has been stored correctly by using the Address book Search feature. Re-store them, if necessary.

Accessories

There are a variety of accessories available for your mobile phone, some of which may be sold separately. You can select these options according to your personal communication requirements. Consult your local dealer for availability.

Travel Adapter

This adapter allows you to charge the battery.



Battery

Standard battery is available.



! Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

For Your Safety

Important Information

This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user guide could void your warranty for this equipment. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Before You Start

Safety Instructions

WARNING! To reduce the possibility of electric shock, do not expose your phone to high humidity areas, such as the bathroom, swimming pool, etc.

Always store your phone away from heat.

Never store your phone in settings that may expose it to temperatures less than 32°F or greater than 104°F, such as outside during extreme weather conditions or in your car on a hot day. Exposure to excessive cold or heat will result in malfunction, damage and/or catastrophic failure.

Be careful when using your phone near other electronic devices. RF emissions from your mobile phone may affect nearby in adequately shielded electronic equipment. You should consult with manufacturers of any personal medical devices such as pacemakers and hearing aides to determine if they are susceptible to interference from your mobile phone. Turn off your phone in a medical facility or at a gas station. Never place your phone in a microwave oven as this will cause the battery to explode.

IMPORTANT! Please read the TIA SAFETY INFORMATION on page 87 before using your phone.

Safety Information

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this user guide.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as TVs, radios, and personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.

For Your Safety

- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.

Memory card information and care

- ▶ The memory card cannot be used for recording copyright-protected data.

- ▶ Keep the memory card out of the small children's reach.
- ▶ Do not leave the memory card in extremely hot location.
- ▶ Do not disassemble or modify the memory card.

FCC RF Exposure Information

WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards.

CAUTION

Use only the supplied and approved antenna. Use of unauthorized antennas or modifications could impair call quality, damage the phone, void your warranty and/or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with skin, a minor burn may result. Contact your local dealer for a replacement antenna.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 2cm (0.79 inches) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 2cm (0.79 inches) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components should not be used. Body-worn accessories that cannot maintain 2cm (0.79 inches) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

FCC Part 15 Class B Compliance

This device and its accessories comply with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device and its accessories may not cause harmful interference, and (2) this device and its accessories must accept any interference received, including interference that may cause undesired operation.

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

For Your Safety

If this equipment does cause harmful interference or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ▶ Reorient or relocate the receiving antenna.
- ▶ Increase the separation between the equipment and receiver.
- ▶ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ▶ Consult the dealer or an experienced radio/TV technician for help.

Cautions for Battery

- ▶ Do not disassemble.
- ▶ Do not short-circuit.
- ▶ Do not expose to high temperature: 60°C (140°F).
- ▶ Do not incinerate.

Battery Disposal

- ▶ Please dispose of your battery properly or bring to your local wireless carrier for recycling.

- ▶ Do not dispose in fire or with hazardous or flammable materials.

Adapter (Charger) Cautions

- ▶ Using the wrong battery charger could damage your phone and void your warranty.
- ▶ The adapter or battery charger is intended for indoor use only.

Do not expose the adapter or battery charger to direct sunlight or use it in places with high humidity, such as the bathroom.

Avoid damage to your hearing

- ▶ Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.
- ▶ If you are listening to music while out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when attempting to cross the street.

Safety Guidelines

TIA Safety Information

Provided herein is the complete TIA Safety Information for Wireless Handheld phones. Inclusion of the text covering Pacemakers, Hearing Aids, and Other Medical Devices is required in the owner's manual for CTIA Certification. Use of the remaining TIA language is encouraged when appropriate.

Exposure to Radio Frequency Signal

Your wireless handheld portable telephone is a lowpower radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1).

* American National Standards Institute;
National Council on Radiation Protection and Measurements; International Commission on Non-Ionizing Radiation Protection

The design of your phone complies with the FCC guidelines (and those standards).

Safety Guidelines

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Phone Operation

NORMAL POSITION: Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

Tips on Efficient Operation

For your phone to operate most efficiently:

- ▶ Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Driving

Check the laws and regulations on the use of wireless phones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- ▶ Give full attention to driving - driving safely is your first responsibility;
- ▶ Use hands-free operation, if available;
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.

Electronic Devices

Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 15cm (6 inches) be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Persons with pacemakers:

- ▶ Should ALWAYS keep the phone more than 15cm (6 inches) from their pacemaker when the phone is turned ON;
- ▶ Should not carry the phone in a breast pocket.
- ▶ Should use the ear opposite the pacemaker to minimize the potential for interference.
- ▶ If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult AT&T.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Health Care Facilities

Turn your phone OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.



Safety Guidelines

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Turn your phone OFF in any facility where posted notices so require.

Aircraft

FCC regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft.

Blasting Areas

To avoid interfering with blasting operations, turn your phone OFF when in a 'blasting areas or in areas posted: 'Turn off two-way radio'. Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, marked clearly. Potential areas may include: fueling areas (such as gasoline stations); below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles (such as grain, dust, or metal powders); and any other area where you would normally be advised to turn off your vehicle engine.

For Vehicles Equipped with an Air Bag

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Safety Information

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

- ▶ Do not disassemble or open crush, bend or deform, puncture or shred.
- ▶ Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- ▶ Only use the battery for the system for which it is specified.
- ▶ Only use the battery with a charging system that has been qualified with the system per IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- ▶ Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.

Safety Guidelines

- ▶ Replace the battery only with another battery that has been qualified with the system per IEEE-Std-1725-2006. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- ▶ Promptly dispose of used batteries in accordance with local regulations.
- ▶ Battery usage by children should be supervised.
- ▶ Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- ▶ Improper battery use may result in a fire, explosion or other hazard.
- ▶ The phone shall only be connected to USB products that bear the USB-IF logo or have completed the USB-IF compliance program.

Charger and Adapter Safety

- ▶ The charger and adapter are intended for indoor use only.

Battery Information and Care

- ▶ Please dispose of your battery properly or take it to your local wireless carrier for recycling.
- ▶ The battery does not need to be fully discharged before recharging.
- ▶ Use only LG-approved chargers specific to your phone model since they are designed to maximize battery life.
- ▶ Do not disassemble or impact the battery as it may cause electric shock, short-circuit, and fire. Store the battery in a place out of reach of children.
- ▶ Keep the battery's metal contacts clean.

- ▶ Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- ▶ Recharge the battery after long periods of non-use to maximize battery life.
- ▶ Battery life will vary due to usage patterns and environmental conditions.
- ▶ Use of extended backlighting, Mobile Web Browsing, and data connectivity kits affect battery life and talk/standby times.
- ▶ The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn the phone on.

Explosion, Shock, and Fire Hazards

- ▶ Do not put your phone in a place subject to excessive dust and keep the minimum required distance between the power cord and heat sources.
- ▶ Unplug the power cord prior to cleaning your phone, and clean the power plug pin when it is dirty.
- ▶ When using the power plug, ensure that it is firmly connected. If it is not, it may cause excessive heat or fire.
- ▶ If you put your phone in a pocket or bag without covering the receptacle of the phone (power plug pin), metallic articles (such as a coin, paperclip or pen) may short-circuit the phone. Always cover the receptacle when not in use.

Safety Guidelines

- ▶ Do not short-circuit the battery. Metallic articles such as a coin, paperclip or pen in your pocket or bag may short-circuit the + and – terminals of the battery (metal strips on the battery) upon moving. Short-circuit of the terminal may damage the battery and cause an explosion.

General Notice

- ▶ Using a damaged battery or placing a battery in your mouth may cause serious injury.
- ▶ Do not place items containing magnetic components such as a credit card, phone card, bank book or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- ▶ Talking on your phone for a long period of time may reduce call quality due to heat generated during use.
- ▶ When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- ▶ Using the phone in proximity to receiving equipment (i.e., TV or radio) may cause interference to the phone.
- ▶ Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight burn. Please contact an LG Authorized Service Centre to replace the damaged antenna.
- ▶ Do not immerse your phone in water. If this happens, turn it off immediately and remove the battery. If the phone does not work, take it to an LG Authorized Service Centre.
- ▶ Do not paint your phone.
- ▶ The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, pictures, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- ▶ When you use the phone in public places, set the ring tone to vibration so as not to disturb others.
- ▶ Do not turn your phone on or off when putting it in your ear.

FDA Consumer Update

The U.S. Food and Drug Administration Centre for Devices and Radiological Health Consumer Update on Mobile Phones.

1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the standby mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

2. What is the FDA's role concerning the safety of wireless phones?

Under the law, the FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, the FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace, or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, the FDA has urged the wireless phone industry to take a number of steps, including the following:

- ▶ Support needed research into possible biological effects of RF of the type emitted by wireless phones;

Safety Guidelines

- ▶ Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- ▶ Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

The FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- ▶ National Institute for Occupational Safety and Health
- ▶ Environmental Protection Agency
- ▶ Occupational Safety and Health Administration.
- ▶ National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

The FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. The FCC relies on the FDA and other health agencies for safety questions about wireless phones.

The FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

3. What kinds of phones are the subject of this update?

The term 'wireless phone' refers here to handheld wireless phones with built-in antennas, often called 'cell', 'mobile', or 'PCS' phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by FCC safety guidelines that were developed with the advice of the FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called 'cordless phones', which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

4. What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer causing chemicals so as to be pre-disposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day.

Safety Guidelines

These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do- may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

6. What is the FDA doing to find out more about the possible health effects of wireless phone RF?

The FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). The FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The project has also helped develop a series of public information documents on EMF issues. The FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. The FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded

research is conducted through contracts with independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

7. How can I find out how much radio frequency energy exposure I can get by using my wireless phone?

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radio frequency energy (RF) exposures. The FCC established these guidelines in consultation with the FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 1.6 watts per kilogram (1.6 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb

Safety Guidelines

energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fcc.gov/>) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

8. What has the FDA done to measure the radio frequency energy coming from wireless phones?

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radio frequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, 'Recommended Practice for Determining the Spatial- Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques', sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissuesimulating model of the human

head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure. If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure

level drops off dramatically with distance. For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

10. What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets

containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

11. What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, the FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by the FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. The FDA has tested hearing aids for interference from

Safety Guidelines

handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a 'compatible' phone and a 'compatible' hearing aid at the same time. This standard was approved by the IEEE in 2000. The FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, the FDA will conduct testing to assess the interference and work to resolve the problem.

12. Where can I find additional information?

For additional information, please refer to the following resources:

FDA web page on wireless phones
(<http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm>)

Federal Communications Commission (FCC) RF Safety Program
(<http://www.fcc.gov/oet/rfsafety>)

International Commission on Non-Ionizing Radiation Protection
(<http://www.icnirp.de>)

World Health Organization (WHO) International EMF Project
(<http://www.who.int/peh-emf/project/es>)

National Radiological Protection Board (UK)
(<http://www.nrpb.org.uk/radiation>)

10 Driver Safety Tips

Your wireless phone gives you the powerful ability to communicate by voice almost anywhere, anytime. An important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When operating a car, driving is your first responsibility.

When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- 1.** Get to know your wireless phone and its features such as speed dial and redial. Carefully read your instruction manual and learn to take advantage of valuable features most phones offer, including automatic redial and memory. Also, work to memorize the phone keypad so you can use the speed dial function without taking your attention off the road.
- 2.** When available, use a hands-free device. A number of hands-free wireless phone accessories are readily available today. Whether you choose an installed mounted device for your wireless phone or a speaker phone accessory, take advantage of these devices if available to you.
- 3.** Position your wireless phone within easy reach. Make sure you place your wireless phone within easy reach and where you can reach it without removing your eyes from the road. If you get an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.
- 4.** Suspend conversations during hazardous driving conditions or situations. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow and ice can be hazardous, but so is heavy traffic. As a driver, your first responsibility is to pay attention to the road.

Safety Guidelines

- 5.** Do not take notes or look up phone numbers while driving. If you are reading an address book or business card, or writing a “to-do” list while driving a car, you are not watching where you are going. It is common sense. Don’t get caught in a dangerous situation because you are reading or writing and not paying attention to the road or nearby vehicles.
- 6.** Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan your calls before you begin your trip or attempt to coincide your calls with times you may be stopped at a stop sign, red light or otherwise stationary. But if you need to dial while driving, follow this simple tip— dial only a few numbers, check the road and your mirrors, then continue.
- 7.** Do not engage in stressful or emotional conversations that may be distracting. Stressful or emotional conversations and driving do not mix; they are distracting and even dangerous when you are behind the wheel of a car. Make people you are talking with aware you are driving and if necessary, suspend conversations which have the potential to divert your attention from the road.
- 8.** Use your wireless phone to call for help. Your wireless phone is one of the greatest tools you can own to protect yourself and your family in dangerous situations — with your phone at your side, help is only three numbers away. Dial 911 or other local emergency number in the case of fire, traffic accident, road hazard or medical emergency. Remember, it is a free call on your wireless phone!

9. Use your wireless phone to help others in emergencies. Your wireless phone provides you a perfect opportunity to be a “Good Samaritan” in your community. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.
10. Call roadside assistance or a special wireless non-emergency assistance number when necessary. Certain situations you encounter while driving may require attention, but are not urgent enough to merit a call for emergency services. But you can still use your wireless phone to lend a hand. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

For more information, please call to 888-901-SAFE, or visit our website www.ctia.org.

Consumer Information on SAR (Specific Absorption Rate)

This Model Phone Meets the Government's Requirements for Exposure to Radio Waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

Safety Guidelines

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. * Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. Because the phone is designed to operate at multiple power levels to use only the power required to reach the network, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.16 W/kg and when worn on the body, as described in this user's manual, is 0.86 W/kg. (Body-worn measurements differ among phones models, depending upon available accessories and FCC requirements.) While there may be differences between SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/> after searching on FCC ID BEJGU295.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) website at <http://www.ctia.org>.

* In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Glossary

To help you understand the main technical terms and abbreviations used in this booklet and to take full advantage of the features on your mobile phone, here are a few definitions.

Call Forwarding

The ability to reroute calls to another number.

Call Waiting

The ability to inform users that they have an incoming call when engaged on another call.

GPRS (General Packet Radio Service)

GPRS guarantees continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM) circuit-switched cellular phone connections and the Short Message Service (SMS).

GSM (Global System for Mobile Communication)

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

Java

Programming language generating applications that can run on all hardware platforms, whether small, medium, or large, without modification.

It has been promoted for and geared heavily towards the Web, both for public Web sites and Intranets. When a Java program runs from a Web page, it is called a Java applet. When it is run on a mobile phone or pager, it is called a MIDlet.

Line Identification Services (Caller ID)

Service allowing subscribers to view or block the telephone numbers of callers.

Conference Calls

Ability to establish a conference call involving up to five additional parties.

Phone Password

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

Roaming

Use of your phone when you are outside your home area (for example, when traveling).

SDN (Service Dial Number)

Telephone numbers supplied by your network provider and giving access to special services such as voice mail, directory inquiries, customer support, and emergency services.

SIM Card

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.

SMS (Short Message Service)

Network service sending and receiving text messages to and from another subscriber, without the need to speak to the correspondent. The message created or received (up to 160 characters long) can be displayed, received, edited, or sent.

Patent Information

This product was manufactured under one or more of the following US patents:
5276765, 5749067, 6061647

Index

A

AT&T GPS	28
About	64
Access Points	74
Adding Music To Your Handset	47
Alarm Clock	56
Alert Tone	66
Answer Mode	70
Application Settings	75
Applications	54
AT&T Address Book	62
AT&T Music	46
Audio	53
Audio & Ringtones	65
Auto Key Lock	67
Auto Redial	70

B

Backlight Timer	69
Bluetooth	72
Bluetooth Menu Options	73
Brightness	69
Browser	75

C

Calculator	58
Calendar	57
Call	66, 69
Call Forwarding	69
Call Reject	71
Call Waiting	71
Caller Groups	63
Clocks & Calendar	69
Color Schemes	69
Connection	71
Contact	36
Contact List	36, 62
Conversation	35
Conversations List	35
Create Message	30

D

Date & Time	66
Display	69
Drafts	40

F

File Manager	61
Fonts	69

G

Games	53
-------------	----

I

IM	33
IM Information	34
Inbox	32
Internet Profiles	74

K

Keypad Tone	66
-------------------	----

L

Languages	67
-----------------	----

M

Memory	74
Menu options available in the Conversation screen	37
Menu Styles	69
Message Alert	40
Message Settings	40
Message Tone	65
Messaging	30, 75
Minute Minder	70
Mobile Email	38
Mobile Video	52
Mobile Web	44
Multimedia	66
Multimedia Message	41
Music Player	46
My Numbers	64
My Stuff	46

Index

N

New Contact.....	62
Notepad	58

O

Offline Menu	34
Online Menu / 1-to-1 conversation.....	34
Other Files.....	60
Outbox	39

P

Phone Information	78
Phone Settings	66
Picture	53
Power On/Off Tones.....	66
Push to Talk.....	45

R

Recent Calls	56
Reset Settings	68
Ringtone.....	65

S

Save To	40
Security.....	67
Send DTMF Tones.....	71
Send My Number.....	70
Service Dial Numbers	63
Service Message	42
Set Flight Mode	67
Set Hotkeys	67
Set Storage Defaults	74
Settings.....	65
Shop Tones	65
Shop Wallpapers.....	69
Signature	40
SIM Management	63
Software Update	78
Speed Dial List	63
StopWatch.....	59

**T**

Tasks	59
Text Message	40
Time & Cost	71
Tip Calculator	60
Tools	54
TTY	71

U

Unit Converter	60
USB Connection Mode	73
Used Space	74

V

Video	54
Voice Command	54, 77
Voicemail	40
Voicemail Number	42

W

Wallpapers	69
World Clock	58

Y

YPmobile	43
----------------	----

