

KF300 | USER GUIDE |

www.lgmobile.com

P/N : MMBB022265(1.1) 

LG Electronics Inc.

| KF300 | USER GUIDE



ENGLISH



| KF300 | USER GUIDE

CE 0168

Bluetooth QD ID B013568

KF300 USER GUIDE

- English

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Table of Contents

Introduction	6	Games & Apps	38
For Your Safety	7	Games	
Guidelines for safe and efficient use	8	Applications	39
KF300 features	13	Network profiles	
Parts of the phone			
Display Information	17		
On-Screen Icons			
Getting started	19	Call history	40
Installing the SIM card and the handset battery		All calls	
Charging the Battery	20	Missed calls	
Disconnecting the adapter	21	Dialled calls	
How to use a microSD memory card	22	Received calls	
General Functions	26	Call duration	
Making and answering calls		Call costs	41
Entering text	28	Data information	
Changing the text input mode	29		
Selecting functions and options	32	Organiser	42
In-call menu	33	Calendar	
Menu Tree	36	Memo	
		To do	43

Multimedia 44**MP3 player**

All songs 45

My playlist

Settings

Camera 46**Video camera 48****FM Radio 49****Voice recorder 50****Messaging 51****New message**

Message

Email 53

Inbox 54**Email box 55**

Drafts

Outbox 56**Sent 57****Listen to voicemail****Info message**

Read 58

Topics

Templates 59

Text templates

Multimedia templates 60

Settings

Text message

Multimedia message 61

Email 62

Voicemail number 64

Service message

Info message 65

My stuff 66

Images

Sounds 67**Videos 68****Others 69**

External memory

Profiles 70

Activate

Personalise

Table of Contents

Phonebook 72

Search

New contact 73

Speed dials

Groups

Copy all 74

Delete all

Settings

View options

Backup Contacts 75

Restore Contacts

Information

Service dial number

Own number

My business card

Tools 76

Alarm clock

Calculator

Stopwatch 77

Unit converter

World clock

Orange Plus

Browser 78

Home 79

Bookmarks

Enter address 80

History

Saved pages

Settings

Network profiles

Rendering mode

Cache 81

Cookies

Security certificates

Show image

Java script

Information

Connectivity 82

Bluetooth

Network 84

Network selection

GPRS attach 85

Access Point

USB connection mode 87

Settings 88**Date & Time**

Set date

Date format

Set time

Time format

Auto update

Languages**Display**

Wallpaper

Clock

Backlight timer

Brightness 89

Home screen shortcut

Font size

Theme

Menu style

Dialling

Standby text

Network name

Shortcut**Call**

Call divert 90

Call barring 91

Fixed dial number 92

Answer mode

Send my number

Call waiting 93

Minute minder

Auto redial

Select line

Send DTMF tones

Security 94

PIN code request

Phone lock

Change codes

Flight mode 95**Power save****Reset****Memory status**

Accessories 96

Technical data 97

Introduction

Congratulations on your purchase of the advanced and compact KF300 mobile phone, designed to operate with the latest digital mobile communication technology.

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.



For Your Safety

WARNING!

- Mobile Phones must be switched off at all times in aircrafts.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which, if detached, may cause a choking hazard.
- Don't charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Do not charge the phone when it is on soft furnishings. The phone should be charged in a well ventilated area.

CAUTION!

- Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls.
- Only use ORIGINAL accessories to avoid damage to your phone.
- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.
- Batteries should be disposed of in accordance with relevant legislation.
- Do not dismantle the phone or battery.
- Risk of explosion if battery is replaced by an incorrect type.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KF300 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- ▶ The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.
- ▶ The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.833 W/kg (10g) and when worn on the body is 0.594 W/kg (10g).
- ▶ SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.

Product care and maintenance

WARNING

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as TVs, radios, and personal computers.
- ▶ The unit should be kept away from heat sources such as radiators or cookers.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- ▶ Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- ▶ Do not to charge a handset near flammable material as the handset can become hot and create a fire hazard.
- ▶ Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).
- ▶ Do not charge the phone when it is on soft furnishings.
- ▶ The phone should be charged in a well ventilated area.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.

Guidelines for safe and efficient use

- ▶ Use accessories like earphones cautiously.

Efficient phone operation

Electronic devices

All mobile phones can get interference, which can affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example in your breast pocket.
- ▶ Some hearing aids might be disturbed by mobile phones.
- ▶ Minor interference may affect TVs, radios, PCs, etc.
- ▶ Do not use a hand-held phone while driving.
- ▶ Give your full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- ▶ When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the airbag to fail or cause serious injury due to improper performance.
- ▶ If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn the handset on or off when it is close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- ▶ Do not use the phone at a refueling point.
- ▶ Do not use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn your mobile phone off before boarding any aircraft.
- ▶ Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Guidelines for safe and efficient use

Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times before it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximize usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- ▶ There is risk of explosion if the battery is replaced by an incorrect type.
- ▶ Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose of as household waste.
- ▶ If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- ▶ Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary energy consumption.

KF300 features

Parts of the phone

1. Earpiece

2. Main LCD

3. Send key

- ▶ Dials a phone number and answers a call.
- ▶ **In standby mode:** Shows a history of calls.

4. Alpha numeric keys

- ▶ **In standby mode:**
Input numbers to dial
Hold down
0 $\pm$ – International calls
1 $\alpha\omega$ – Activate Voice mail centre menu
2 abc to **9** $wxyz$ – Speed dials
- ▶ **In editing mode:**
Enter numbers & characters

5. Clear key

- ▶ Clears a character with each press. Hold the key down to clear all input.

 
6. End key

- ▶ Switch on/off (hold down)
- ▶ End or reject a call.

7. Microphone



KF300 features

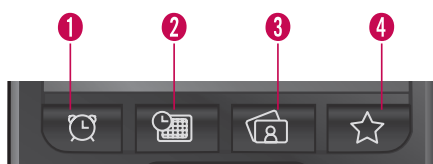

1. Alarm Hot key

- ▶ Go to Alarm Menu

2. Schedule Hot key

 
- ▶ Go to Schedule Menu

3. Image Hotkey

- ▶ Go to Image Menu

4. Favorites Hot key

- ▶ Go to Favorites Menu

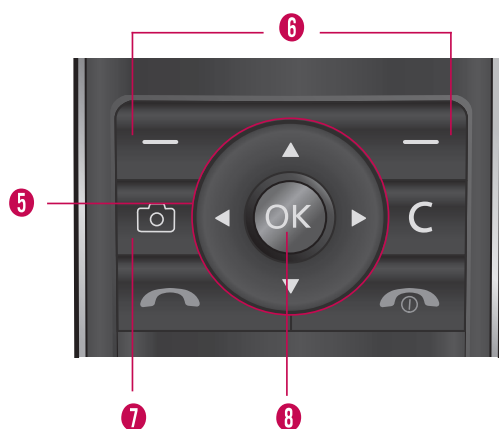

5. Navigation key

- ▶ In standby mode:

Shortcut: Write Text message

Shortcut: Go to Contacts list

Shortcut: Go to Profiles Menu

Shortcut: Go to MP3 Player Menu

- ▶ In menu: Scroll up & down

6. Soft keys (Left soft key / Right soft key)

 
- ▶ These keys perform the function Indicated in the bottom of the display.

7. Camera hot key

- ▶ Go to Camera preview.

8. Confirm key / OK key

- ▶ Selects menu options and confirms actions.

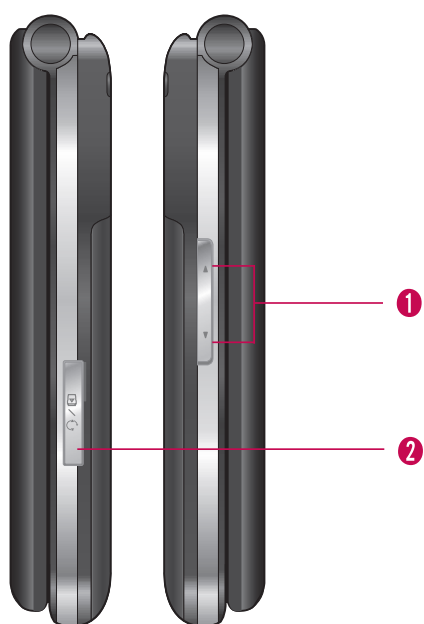

1. Side keys

- ▶ **In standby mode (opened):**
Keypad tones volume adjustment
- ▶ **In standby mode (closed):**
Show Date & Time by each press
- ▶ **During a call:** Earpiece volume adjustment
- ▶ **During MP3 music playing:**
Audio volume adjustment

2. Headset/Charger/USB cable connector

Note

 
Please ensure phone is powered on and in idle mode before connecting the USB cable.




3. Camera lens

4. Sub LCD

KF300 features

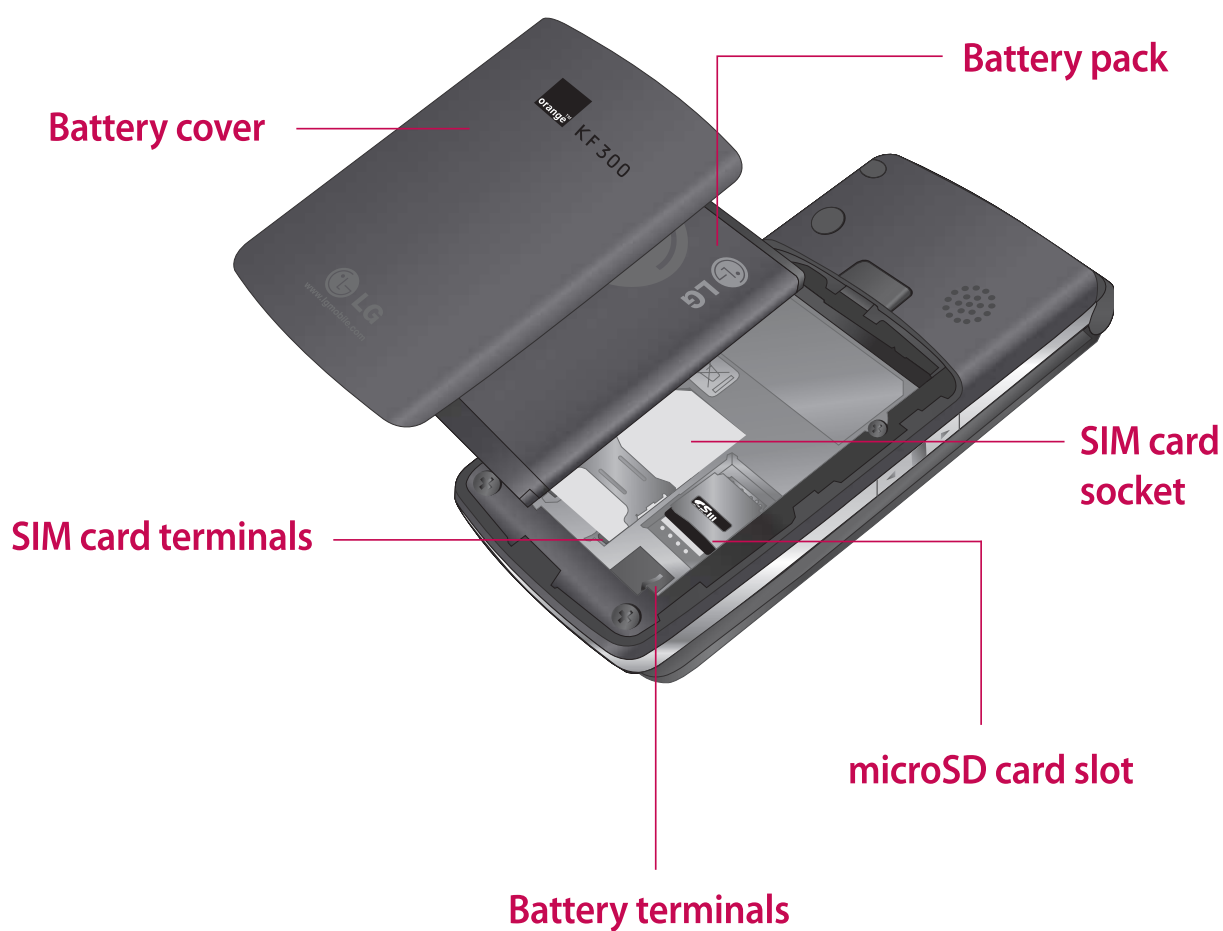

Display Information

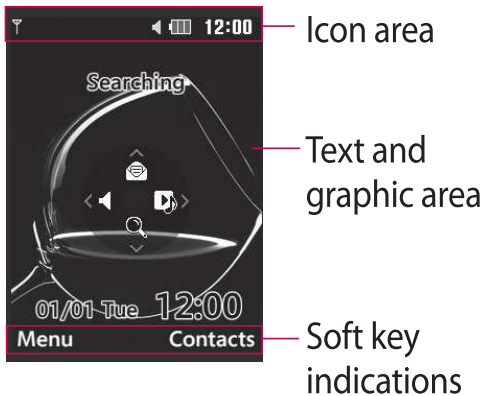 

Area	Description
First line	Displays various icons.
Middle lines	Displays messages, instructions and any information that you enter, such as the number to be dialled.
Last line	Shows the functions currently assigned to the two soft keys.

On-Screen Icons

The screen displays several icons as described below.

Icon	Description
	Indicates the strength of the network signal.*

Note

* The quality of the conversation may change depending on network coverage. When the signal strength is below 2 bars, you may experience muting, call drop and bad audio. Please take the network bars as an indicator for your calls. When there are no bars there is no network coverage. In this case, you won't be able to access the network for any service (call, messages etc.).

KF300 features

Icon	Description
	Indicates that GPRS service is available.
	Indicates that flight mode has been activated.
	Indicates that a call is in progress.
	All calls are diverted.
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.
	Shows that you are using a roaming service.
	The alarm has been set and is on.
	Indicates that you have a schedule.

Icon	Description
	Indicates that external memory is installed.
	You have received a message.
	You have received a voice mail.
	General menu in profile.
	Silent menu in profile.
	Vibrate only menu in profile.
	Outdoor menu in profile.
	Headset menu in profile.
	Tells you the status of the battery.
	Indicates that external memory either unformatted or is unsupported by the phone.

Getting started

Installing the SIM card and the handset battery

Make sure the power is off before you remove the battery.

1. Remove the battery cover.

Press the battery release latch and slide the battery cover toward the bottom of the phone before lifting it off.



Note

Removing the battery from the phone when the power is on may cause the phone to malfunction.

2. Remove the battery.

Hold the top edge of the battery and lift the battery from the battery compartment.



3. Install the SIM card.

Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and slide it in the reverse direction.



Install the SIM card



Remove the SIM card

Getting started

Caution!

The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling.

Follow the instructions supplied with the SIM card.

4. Install the battery.

Insert the bottom of the battery first into the bottom edge of the battery compartment. Push down the top of the battery until it clicks into place.


**5. Replace the battery cover.**

Lay the battery cover in place on the phone and slide it in until the latch clicks.



Charging the Battery

To connect the mains adapter to the phone, you must have first installed the battery.

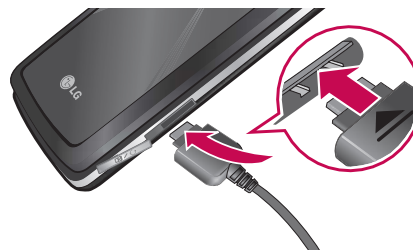

1. With the battery in position in the phone, connect the lead from the mains adapter to the socket on the left side of the phone. Check that the arrow on the lead connector is facing towards the front of the phone.

2. Connect the mains adapter to the mains socket. Use only the supplied adapter.
3. The moving bars of the battery icon will stop to show when charging is complete.

Caution!


- Do not force the connector as this may damage the phone and/or the mains adapter.
- If you use the charger abroad, use the correct plug adapter for the country.
- Do not remove your battery or the SIM card while charging.

WARNING!

- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal teeth or nails, come into contact with the battery. There is a risk of this causing a fire.
- Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.

Disconnecting the adapter

1. When charging is finished, the moving bars of the battery icon stop and 'Battery Full' is displayed on the screen.
2. Unplug the adapter from the power outlet.

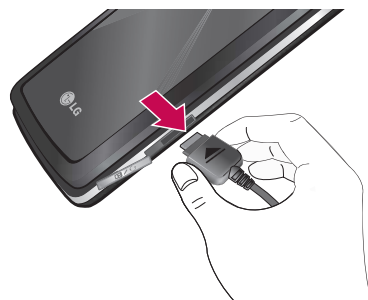**Note**

- ▶ Ensure the battery is fully charged before first using the phone.
- ▶ Do not remove the battery or SIM card while charging.
- ▶ If the battery is not properly charged, please turn the phone off and on using the power key, then recharge the battery.

Getting started

How to use a microSD memory card



microSD memory card

< How to insert a microSD memory card >

1. Turn the phone off. Inserting or removing the memory card whilst the phone is on may damage the files stored in the memory card.
2. Open the slot protection cover.



3. Insert the memory card into the slot. Make sure that the gold contact area is facing downwards.

If the memory card doesn't go into the slot easily, check that you are not trying to insert it in the wrong way and that there is not a foreign object in the slot.



4. Close the slot protection cover.
5. To remove the memory card, turn the phone off. Open the slot protection cover and carefully remove the memory card.

Note

- ▶ Avoid using the memory card when the battery is low.
- ▶ When writing to the card, wait for the operation to complete before removing the card.
- ▶ The card is designed to fit easily into the system in one direction only.

Note

- ▶ Do not bend the card or force it into the slot.
- ▶ Do not insert any memory cards other than those made by microSD.
- ▶ If the microSD has been formatted using FAT32, format the microSD using FAT16 again.
- ▶ After you insert microSD card into your phone, please check the icon area on your screen.
- ▶ If the memory error icon  is displayed, your memory card is not formatted or is unsupported by the phone.
In this case, you should try to format your memory card.
- ▶ If the memory error icon is still displayed in the icon area, please contact a service center.

Memory card formatting

Before you start to use the memory card you have to format it. After you insert the memory card, select **Menu** → **Settings** → **Memory status** → **External memory**, then press the OK key.

This operation should only be done when you insert the memory card for the first time. During formatting various folders will be created for different data types.

Turning your handset on

Ensure that your SIM card is in your handset and the battery is charged. Press and hold the end key until the power comes on. If the PIN code request is set to On enter the SIM PIN code that was supplied with your SIM card. After a few seconds you will be registered on the network.

Getting started

Turning your handset off

Press and hold the end key until the power goes off. There may be a few seconds delay while the handset powers down. Do not turn the handset on again during this time.

Access Codes

You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using Change codes feature of Settings menu.

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. When the PIN code request is set to On, your phone will request the PIN code every time the phone is switched on.

When the PIN code request is set to Off, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access functions such as information on **Call costs and Fixed dial number**. These functions are only available if supported by your SIM card. Check with your network for further information.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, also contact your network operator.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, contact your network operator.

Security code (4 to 8 digits)

The security code protects against unauthorized use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the Reset settings menu. The security code is also required to enable or disable the phone lock function to prevent unauthorized use of the phone. The security code default setting can be modified from the Security menu.

General Functions

Making and answering calls

Making a call

1. Make sure your phone is powered on.
2. Enter a phone number including the area code.
 - ▶ Press and hold the  key to erase the entire number.
3. Press the  key to make the call.
4. To end the call, press the  key.

Making a call from the call history list

1. In standby mode, press the  key, and the the most recent incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation key.
3. Press the  key.

Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press the  key.

Ending a call

When you have finished your call, press the  key to end the call.

Making a call from the Contacts

You can save the names and phone numbers that you dial frequently both in the SIM card as well as in the phone memory (known as the contacts list). You can then dial a number by simply looking up the desired name in the contacts.

Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or their name if it has been saved in Contacts) is displayed.

1. To answer an incoming call, simply open the phone (when Flip open has been set as the answer mode). You can change the answer mode to what you want by using the Answer mode feature.

Note

If the **Any key** has been set as the answer mode, any key press will answer a call, except for the  key or the right soft key.

- ▶ To reject an incoming call when in Silent mode, press and hold the down key on the left hand side of the phone without opening the phone.

Two steps are required to reject an incoming call when in other profile modes without opening the phone.

After you first press and hold the down key on the left hand side during an incoming call, the current profile will be changed to Silent mode.

Press and hold the down key again, and the incoming call is rejected.

- ▶ You can answer a call even while using the Contacts or other menu features.
2. To end a call, close the phone or press the  key.

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving nearer to a window may improve reception.

General Functions

Entering text

You can enter alphanumeric characters by using the phone's keypad.

For example, storing names in the contacts, writing a message or creating a personal greeting. The following text input methods are available on the phone.

T9 (T9 Abc) mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is also known as predictive text.

ABC mode

This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 mode (Number mode)

This allows you to type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.

Changing the text input mode

1. When you are in a field that allows characters to be entered you will notice the text input mode indicator showing in the upper right corner of the LCD screen.
2. Change the text input mode by pressing the  key.

Using the T9 mode

The T9 predictive text input mode lets you enter words easily and with the minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on its built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
 - ▶ The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
 - ▶ If the word is still incorrect after typing completely, press the key once or more to cycle through the other word options.

Example

Press 4663 to type **Good**

- ▶ If the desired word is missing from the word choice list, add it using the ABC mode.
- ▶ You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.

General Functions

2. Enter the whole word before editing or deleting any keystrokes.
3. Complete each word with a space by pressing the **0±** key. To delete letters, press the **⌫** key once. Press and hold down the **⌫** key to erase entire words.

Using the ABC mode

Use the **2_{abc}** to **9_{wxyz}** keys to enter your text.

1. Press the key labelled with the required letter:

- ▶ Once for the first letter
- ▶ Twice for the second letter
- ▶ And so on

2. To insert a space, press the right navigation key **➡** once.

To delete letters, press the **⌫** key once.

Press and hold down the **⌫** key to clear the whole text.

Note

Refer to the table below for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper case	Lower Case
1_{q.o}	.,?!'"1-()@/_:_	.,?!'"1-()@/_:_
2_{abc}	A B C 2 Â Ã Ä Ç	a b c 2 â ã ä ç
3_{def}	D E F 3 É Ê Ë Ì	d e f 3 é ê ë ì
4_{ghi}	G H I 4 Î Ï	g h i 4 î ï
5_{jkl}	J K L 5	j k l 5
6_{mno}	M N O 6 Ñ Ò Ó Ô	m n o 6 ñ ò ó ô
7_{pqrs}	P Q R S 7	p q r s 7
8_{tuv}	T U V 8 Ù	t u v 8 ù
9_{wxyz}	W X Y Z 9 Û Ü	w x y z 9 û ü
0_±	Space, 0	Space, 0

Note

The characters assigned to the keys and their order of appearance depends on the language selected using the option Input method. The table provides the characters set for English language.

Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example). Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.


Using the symbol mode

The symbol mode enables you to enter various symbols or special characters. To enter a symbol, select **Options** → **Insert** → **Symbol**. Use the navigation and numeric keys to select the desired symbol and press the OK key.

Selecting functions and options

Your phone offers a set of functions that allow you to customise your phone. These functions are arranged in menus and sub-menus all accessed via the two soft keys indicated. Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates the key's current role.

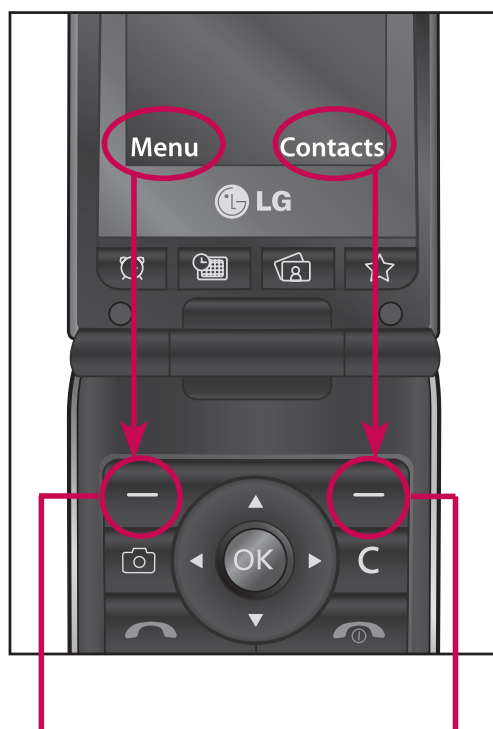

Press the left soft key to access the available Menu.

Press the right soft key to access the Contacts.

In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

During a call

The menu displayed on the handset screen during a call is different to the default main menu displayed when in idle screen. The options are described below.

Making a Second Call

(Network Dependent)

You can search and dial a number from **Contacts** to make a second call.

Swapping Between Two Calls

To switch between two calls, press the  key, or the left soft key, and then select **Swap Call**.

Answering an Incoming Call

To answer an incoming call when the handset is ringing, simply press the  key. The handset can also alert you to an incoming call while you are already on a call.

A tone will sound in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see Call waiting feature.

If **Call waiting** is on, you can put the first call on hold and answer the second, by pressing either the left soft key or the send key.

Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the  key.

In-call menu

Muting the Microphone

You can mute the microphone during a call by pressing the right soft key [Mute]. The handset can be unmuted by pressing the right soft key [Unmute]. When the handset is muted, the caller cannot hear you, but you can still hear them.

DTMF tones while calling

To switch on DTMF tones while calling (e.g. to use the phone with an automatic switchboard) press the left soft key [Options] followed by Enable DTMF. Select Disable DTMF to disable DTMF tones. DTMF tones are normally on.

Conference Calls

The conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature.

A conference call can only be set up when you have one active call and one call on hold, both calls having been answered.

Once a conference call is set up, calls may be added, disconnected or separated (that is, removed from the conference call but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu. The maximum callers in a conference call are five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

Making a Second Call

You can make a second call while currently in a call. Enter the second number and press the  key.

When the second call is connected, the first call is automatically placed on hold. You can swap between calls, by pressing the  key.

Setting Up a Conference Call

To set up a conference call, place one call on hold and while the active call is on, press the left soft key and then select the Join menu of Conference call.

Activate the Conference Call on Hold

To activate a conference call on hold, press the  key. Alternatively press the left soft key [Options] and select Join all/Hold all calls. Other users on hold will stay connected. To return to conference call mode, press the left soft key [Options] followed by Conference call.

Adding Calls to the Conference Call

To add a call to an existing conference call, press the left soft key, and then select the Join menu of Conference call.

Private Call in a Conference Call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the Private menu of Conference call to put all the other callers on hold.

Ending a Conference Call

The currently displayed caller in a conference call can be disconnected by pressing the  key.

Menu Tree

The menu in this phone can be displayed in two ways. One is by grid view and secondly by list view.

Please note that menu number options are different in each view.

The default setting on the phone is set to show the menu in grid view, so therefore all the menu number selections throughout this manual are shown according to that setting.

You can go to your desired menu by using the left soft key [Menu], navigation keys and the OK key. And you can also take a shortcut by pressing the corresponding number key of the desired menu after pressing the left soft key [Menu].

1. Games & Apps

1.1 Games

1.2 Applications

1.3 Network profiles

2. Call history

2.1 All calls

2.2 Missed calls

2.3 Dialed calls

2.4 Received calls

2.5 Call duration

2.6 Call costs

2.7 Data information

3. Organiser

3.1 Calendar

3.2 Memo

3.3 To do

4. Multimedia

4.1 MP3 player

4.2 Camera

4.3 Video camera

4.4 FM radio

4.5 Voice recorder

5. Messaging	8. Phonebook	*. Browser
5.1 New message	8.1 Search	*.1 Home
5.2 Inbox	8.2 New contact	*.2 Bookmarks
5.3 Email box	8.3 Speed dials	*.3 Enter address
5.4 Drafts	8.4 Groups	*.4 History
5.5 Outbox	8.5 Copy all	*.5 Saved pages
5.6 Sent	8.6 Delete all	*.6 Settings
5.7 Listen to voicemail	8.7 Settings	*.7 Information
5.8 Info message	8.8 Information	0. Connectivity
5.9 Templates		0.1 Bluetooth
5.0 Settings		0.2 Network
6. My stuff	9. Tools	0.3 USB connection mode
6.1 Images	9.1 Alarm clock	#. Settings
6.2 Sounds	9.2 Calculator	#.1 Date & Time
6.3 Videos	9.3 Stopwatch	#.2 Languages
6.4 Others	9.4 Unit converter	#.3 Display
6.5 External memory	9.5 World clock	#.4 Shortcut
7. Profiles	9.6 Orange Plus	#.5 Call
7.1 General		#.6 Security
7.2 Silent		#.7 Flight mode
7.3 Vibrate only		#.8 Power save
7.4 Outdoor		#.9 Reset
7.5 Headset		#.0 Memory status

Games & Apps

Games

Menu 1.1

You can access a great selection of games on your phone.

Note

Java™ is a technology developed by Sun Microsystems. There are two methods to install the Java Applet. The first method is similar to the way you would download the Java Applet using the standard MS Internet Explorer browsers and the Java MIDlet can be downloaded using your WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on the phone. Once downloaded, the Java program can be viewed in the Games or Applications menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD or .JAR format.

Note

The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.

Go to My stuff -> External memory -> Others, and then select either .jad or .jar file of the Java Applet you want to install on your phone.

Caution

Only J2ME (Java 2 Micro Edition) based programs will run in the phone environment. The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.

Applications Menu 1.2

When the Applications menu is selected, the Java loading screen is displayed.

You can select and easily access other applications in this menu. For further details, please contact your service provider.

Network profiles Menu 1.3

The Network profiles menu allows you to see the network information used to connect to the Internet. You can activate or add new profiles.

Call history

You can check the record of Missed, Received, and Last dialled calls only if the network supports the Calling Line Identification (CLI) within your service area.

The number and name (if available) are displayed, together with the date and time at which the call was made. You can also view the number of times you have called.

All calls Menu 2.1

You can view lists of outgoing or incoming calls.

Missed calls Menu 2.2

Allows you to view missed call records, make a call, send a message, and save a missed number in the contacts.

Dialled calls Menu 2.3

Allows you to view dialled call records, make a call, send a message, and save a dialled number in the contacts.

Received calls Menu 2.4

Allows you to view received call records, make a call, send a message, and save the number in the contacts.

Call duration Menu 2.5

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call timers.

The following timers are available:

- ▶ **Last call:** Length of the last call.
- ▶ **All calls:** Total length of all calls made and incoming calls received since the timer was last reset.
- ▶ **Dialed calls:** Length of the outgoing calls.
- ▶ **Received calls:** Length of the incoming calls.

Call costs

Menu 2.6

Allows you to check the cost of your last call and all calls.

To check Cost settings, you should check the following menus.

- ▶ **Set credit:** This network service allows you to limit the cost of your calls by selected charging units. If you select Read, the number of remaining units is shown. If you select Change, you can change your change limit.
- ▶ **Set tariff:** You can set the currency type and the unit price. Contact your service provider to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.
- ▶ **Auto display:** This network service allows you to automatically see the cost of your last calls. If set to On, you can see the last cost when the call is ended.

Data information

Menu 2.7

You can check the amount of data transferred over the network through the GPRS information option.

In addition, you can also view how much time you have been online.

Organiser

Calendar

Menu 3.1

You can refer to your schedule by months. The cursor is always on the current date and the registered date is marked.

Each press of	 	skips back a year.
	 	skips forward a year.
	 	moves to today.
	 	skips back a month.
	 	skips forward a month.

You can view the schedule note or memo for the chosen day by pressing the OK key.

- ▶ **View:** You can view the schedule note or memo for the chosen day.
- ▶ **New schedule:** Select this to enter a new schedule or memo.
- ▶ **Scheduler tone:** You can set the scheduler alert tone.
- ▶ **All schedules:** You can display all schedules.

- ▶ **Go to date:** You can go the chosen date directly.
- ▶ **Delete old:** Select this to delete expired schedule notes that you have already been notified of.
- ▶ **Delete all:** Select this to delete all the schedule notes and memos.

Memo

Menu 3.2

You can add a new memo, as well as view and manage your saved memos.

1. If the entry is empty, press the left soft key [New] and enter the contents of the memo. You can save the memo to the list by the left soft key [Options] then choose [Save].
2. If you have saved memos, you can access the following options with the left soft key [Options] : **View, Delete, New memo, Send via, Edit, Multi delete, Delete all.**

Note

If you want to change the text input mode, press the   key in sequence.

To do

Menu 3.3

You can view, edit and add tasks to do. Tasks are displayed in time order. Tasks that have been completed or not completed are displayed in different ways.

1. If the entry is empty, press the left soft key [New].
2. Input the **Due date**, **Note**, **Priority**, and **Status**.
3. When you have finished entering the data, press the left soft key [Save].
4. You can manage saved 'to do' notes by pressing the left soft key [Options].

Multimedia

MP3 player

Menu 4.1

The KF300 has an integrated MP3 player built-in. You can enjoy listening to MP3 music files on your phone using a compatible headset or via the internal loudspeaker.

Note

Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you use the stereo headset in order to appreciate the high quality of your music.

The music player supports:

- **MPEG-2 Layer III, MPEG-2.5 Layer III:** Sampling frequency up from 8KHz to 48KHz. Bit rate up to 320Kbps, stereo.

- **AAC:** ADIF, ADTS formats (Sampling frequency from 8KHz to 48KHz)
- **AAC+:** V1: (Bit rate 16~128Kbps)
V2 : (Bit rate 16~48Kbps)
(Sampling frequency from 8KHz to 48KHz)

Note

KF300 doesn't support the variable bit rate of all mentioned file types. Therefore, you can't change the file from MP3 format to AAC.

You can transfer MP3 files from a compatible PC to the memory in your phone using the **Mass Storage**.

When you connect the phone to a PC using the USB cable you can see the phone as a removable disk in Windows Explorer. After you have copied your songs, you should execute safe remove before unplugging the phone from your PC.

Note

- ▶ You should copy MP3s to Sounds/MP3 folder. If you copy to another folder, you won't be able to see your MP3 files.

All songs (Menu 4.1.1)

You can see the all of music files.

My playlist (Menu 4.1.2)

You can choose the music files you prefer.

Settings (Menu 4.1.3)

- ▶ **Shuffle:** If you select **On**, you can listen to your music in random order.
- ▶ **Repeat:** This menu allows you to set the play mode: **Off, On, All**.

- ▶ **Equalizer:** This menu helps you to adjust sound levels when listening to your music.
- ▶ **Player skin:** This menu allows you to change the background of the main LCD when playing an MP3 file.

Note

Music is copyright protected by international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

Multimedia

Camera

Menu 4.2

Using the camera module built in to your phone, you can easily take pictures and places of people. Additionally, you can send photos to other people and select photos to be your wallpaper.

Note

When using the camera, power consumption increases. If the battery is too low, you may not be able to use the **Camera** feature, please recharge the battery before trying again.

• To take a picture

- To take sharp pictures, press the camera  key gently while holding the camera as steadily as possible.
- Do not try to take pictures of subjects closer than 50cm.
- Handle the phone carefully as the camera is vulnerable to shock. Always use a soft cloth when cleaning the camera lens.

- Do not disassemble or modify the camera as this may lead to fire or malfunctioning.

1. Press the camera  key while in standby mode.
2. Frame your picture on screen and then press the camera  key or the OK key.
3. The photo is automatically saved in the **Images** folder of **My stuff**. After taking a photo, you can select the submenus by pressing the left soft key [Options].

Before taking a photo, you can set the following options by pressing the left soft key [Options].

- ▶ **Resolution:** Allows you to set the image size. (320*240/640*480/1280*1024/1600*1200)
- ▶ **Quality:** Allows you to set the image quality from **Normal**, **Fine** and **Super fine**.

- ▶ **Self timer:** Allows you to select the delay time (Off/3 Secs/5 Secs/10 Secs). The phone will take a photo after the specified time.
- ▶ **View option:** You can set the view mode. (Full image/Full screen)
- ▶ **Save to:** You can set the save option for a picture. (Phone/External)
- ▶ **Multi shot:** Allows you to take multishot-photos successively. (1shot/3shots/6shots)
- ▶ **Effects:** 4 settings are available. (Off/Sepia/Mono/Negative)
- ▶ **White balance:** Allows you to change the settings according to the environment. (Auto/Daylight/Incandescent/Cloudy/Fluorescent/Nightmode)
- ▶ **Shutter tone:** You can set the sound to be used when taking a picture.
- ▶ **Reset settings:** Allows you to reset the settings.

Note

- ▶ You can adjust the brightness by using the .
- ▶ The zoom function varies according to the resolution the camera is set to. For example, if the camera resolution is set to the highest setting zoom is disabled.

3. The photo you taken is automatically saved in the Images folder of My stuff. After taking a photo, you can select the submenus by pressing the left soft key [Options].
- ▶ **New photo:** You can take a new photo.
 - ▶ **Set as:** You can set the photo to be a **Wallpaper/Picture ID**.
 - ▶ **Send via:** You can send the photo via Message/ Bluetooth/Email
 - ▶ **Album:** You can access the **Images** folder of **My stuff**.

Multimedia

Video camera Menu 4.3

You can easily record and save a video clip.

1. To start recording press the OK key.
As soon as the camera starts to record a timer will be displayed.

Before recording a video clip, you can set the following options by pressing the left soft key [Options].

- ▶ **Video mode:** Allows you to send video file through **MMS** or **General**.
- ▶ **Resolution:** Allows you to set the size. (176x144/320x240)
- ▶ **Quality:** Allows you to set the image quality from **Normal**, **Fine** and **Super fine**.
- ▶ **Save to:** You can set the save option for a video clip. (Phone/External)
- ▶ **Effects:** 4 settings are available. (Off/Sepia/Mono/Negative)
- ▶ **White balance:** Allows you to change the settings according to the environment. (Auto/Daylight/Incandescent/Cloudy/Fluorescent)
- ▶ **Reset settings:** Allows you to reset the settings.

2. Press the left soft key[Stop]/confirm key/ camera hot key to end the recording.
3. The video clip you recorded is automatically saved in the **Videos** folder of **My stuff**. After recording a video, you can select the submenus by pressing the left soft key [Options].

- ▶ **New video:** You can record a new video.
- ▶ **Play:** You can play the recorded video clip.
- ▶ **Send via:** You can send the video clip via **Message/Bluetooth/Email**.
- ▶ **Album:** You can access the **Videos** folder of **My stuff**.

FM Radio

Menu 4.4

1. Connect the headset to your phone.
 2. After presetting radio channels, you can listen to your channels by pressing the corresponding number key (short press).
 3. You can access the following option menus by pressing the left soft key: [Options].
- ▶ **Edit channel:** You can adjust the frequency and change the radio station in your selected channel. You can change the frequency using the Left/Right navigation keys and number keys.
 - ▶ **Auto scan:** If you select "Auto scan Now?" the phone will automatically set the radio channel. When "Save this station?" message appears choose Yes and, the selected frequency will be stored.
 - ▶ **Reset channels:** You can delete all channels you have saved.
 - ▶ **Listen via:** Select this to listen to the radio through Speaker/Wired headset/Bluetooth in the [Options].

Multimedia

Voice recorder Menu 4.5

You can record a voice memo.

1. Press the OK key to start recording. Once recording has started, the message "REC" and the recording time will displayed. To record a memo talk into the microphone.
2. If you want to finish recording, press the right soft key [Stop]. The recorded file is automatically saved in **Sounds** folder of **My stuff**.
3. If you press the left soft key [Options], you can select the following submenus:
 - ▶ **New voice record:** You can start a new voice recording.
 - ▶ **Play:** You can play the recorded voice memo.
 - ▶ **Send via:** You can send the photo via Message/Bluetooth/Email
 - ▶ **Album:** You can access the **Sounds** folder of **My stuff**.

Messaging

New message Menu 5.1

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), Email, as well as the network service messages.

Message (Menu 5.1.1)

You can write and edit a message.

1. Enter the **New message** menu by pressing the left soft key [OK].
2. If you want to write a new message, select **Message**.
3. To make text input easier, use T9.
4. Press the left soft key [Options] to access the following options.

Options

- ▶ **Send to:** Sends text messages.
1. Enter the number of your recipient.
 2. Press the down the navigation key to add more recipients.

3. You can add phone numbers from the contacts list.
4. Press the left soft key [Options] and then select **Send** after entering numbers. The message will automatically be saved in the **Sent** folder. If the message has not been sent, it will remain in the **Outbox** with a failed status.

▶ Insert

You can add the following: **Image, Sound, Video, Symbol, Text template, Emoticon, Name & number, New slide, Subject, More** (contact, my business card, schedule, memo, To do).

Messaging

- ▶ **Save to:** Stores messages in **Drafts**.
- ▶ **Preview:** You can preview the multimedia messages you have created.
- ▶ **View attachment:** (Dynamic menu) you can see a list of attachments.
- ▶ **Slide duration:** You can set the time the slide is displayed in a multimedia message.
- ▶ **Remove:** You can delete slide, subject , and attached media(image, video, sound , and attachment)
- ▶ **Set T9:** Activate/Deactivate T9 input mode by selecting ON/OFF.
- ▶ **Writing language:** Select the language for T9 input mode.
- ▶ **New T9 word:** Select the **New T9 word** to enter a new word into your dictionary.
- ▶ **Clear text:** You can delete text while writing SMS.
- ▶ **Exit:** If you select **Exit** while writing a message, you can end the writing message and go back to the New message menu. The message you have written will not be not saved.

Note

If you select the picture (200K) on writing multimedia message, loading duration will take around 3 seconds at least. Furthermore, you can't use any key during loading time. After 3 seconds, it is possible to write your multimedia message.

Email (Menu 5.1.2)

To send/receive an email, you should first set up the email account.

1. Key in the subject of your mail and press the OK key.
2. After writing your email message, press the left soft key [Options]. You can then access the following option menus.

- ▶ **Send to:** Enter the email address or select the email address from your contacts list.
- ▶ **Insert:** You can add **Symbol/Text template/Name & Number**.
- ▶ **Attachments:** You can add the following: **Image/Video/Sound/New photo/New video/New voice record/Contact/My business card/Schedule/Memo/To do/Others**.
- ▶ **Save to drafts:** Select this to save the message in **Drafts**.

- ▶ **Edit subject:** You can edit the subject.
 - ▶ **Preview:** You can preview email you have written.
 - ▶ **Set T9:** Activate/Deactivate T9 input mode by selecting **ON/OFF**.
 - ▶ **Writing language:** Select the language for T9 input mode.
 - ▶ **New T9 word:** Select the **New T9 word** for inputting into word into the dictionary.
 - ▶ **Clear text:** Allows you to delete all the text within the email.
 - ▶ **Exit:** If you select **Exit** while writing a message, you stop writing your message and go back to the **Messaging** menu. The message you were writing is not saved.
3. When you have finished writing an email, press the left soft key and select **Send to**.

Messaging

4. Enter the email address of the recipients in the To, Cc, Bcc fields. You can search in your contacts by pressing the left soft key [Options].
5. Press the left soft key [Options] and select Send to send the email.

Note

- ▶ Enter the email address to forward the email to in the Cc (Carbon copy) field.
- ▶ Enter a hidden reference email address to forward the email without showing any further information in Bcc (Blind Carbon Copy) field.
- ▶ Only valid email addresses are allowed for the recipient (To), reference address (Cc) and hidden reference address (Bcc) fields. When an email address has been specified, another field where you can specify another address appears. You can specify up to 20 recipients for the To, Cc, Bcc address fields.

Inbox

Menu 5.2

You will be alerted when you have received messages. They will be stored in Inbox.

If the phone shows '**No space for SIM message**', you should delete some SIM messages from your phone's Inbox.

* SIM message

SIM message means the message is stored only in the SIM card.

To view a notified multimedia message, you must first wait for the message to be downloaded and processed.

To read a message, select it by pressing the left soft key [Options].

The following options are available.

- ▶ **View:** You can view your received messages.
- ▶ **Reply:** You can reply to the sender.
- ▶ **Delete:** You can delete the current message.
- ▶ **Forward:** You can forward the selected message to another person.
- ▶ **Return call:** You can call the sender back.
- ▶ **Save number:** You can save the sender's phone number in the contacts.
- ▶ **Information:** You can view information about received messages.
- ▶ **Multi delete:** After choosing the messages you want to remove, you can delete them all at once.

▶ **Delete all read:** You can delete all messages read.

▶ **Delete all:** You can delete all messages.

Email box

Menu 5.3

From this menu you can either connect to your remote mailbox to retrieve your new mail messages, or you can view your previously retrieved email messages without logging in to the email server.

Drafts

Menu 5.4

Using this menu you can preset the multimedia messages that you use most frequently. This menu shows the preset multimedia messages to choose from.

The following options are available.

Messaging

- ▶ **View:** You can see your multimedia messages.
- ▶ **Edit:** Modifies the message you select.
- ▶ **Delete:** Deletes the message you select.
- ▶ **Information:** You can view information about the message you select.
- ▶ **Multi delete:** After selecting the messages you want to remove, press the OK key and they will be deleted.
- ▶ **Delete all:** Deletes all of the messages in the folder.

Outbox

Menu 5.5

You can view the list and contents of sending/resending/waiting/send fail in this menu and can also verify if the transmission was successful.

After sending the message successfully, the message will be moved to sent box.

The following options are available.

- ▶ **View:** You can view the message.
- ▶ **Delete:** You can delete the message.
- ▶ **Resend:** You can resend the selected message.
- ▶ **Edit:** Modifies the message you choose.

- ▶ **Information:** You can check information about each message.
- ▶ **Multi delete:** Select and delete the selected messages.
- ▶ **Delete all:** You can delete all messages in the folder.

Sent

Menu 5.6

This menu allows you to view the messages which have been already sent. You can check both the time and the contents of message.

Once this menu has been chosen simply press the left soft key [OK] to access your voice mail. You can also hold down the **1** key in standby mode to access your voicemail.

Note

When you receive a voicemail, your phone displays the  icon and you will hear an alert. Please check with your network provider for details of their service in order to configure your handset correctly.

Listen to voicemail

Menu 5.7

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network). Before using this feature, you must enter the voice server number obtained from your network operator.

Info message

Menu 5.8

(Dependent on network and subscription)

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, chemists, and stock prices.

Messaging

You can contact your service provider as long as you have entered the correct number.

When you have received an info service message, either a popup message will appear to show you that you have received a message or the info service message is displayed directly .

To view the message again when not in standby mode, follow the sequence shown below;

Read (Menu 5.8.1)

1. When you have received an info service message and selected **Read** to view the message, it will be displayed on the screen. You can read another message by scrolling using the left or right navigation key.
2. The message will be shown until another message is received.

Topics (Menu 5.8.2)

(Dependent on network and subscription)

You can see the info service message numbers which you added. Press the left soft key [Options], to edit and delete an info message category which you have added.

You can select info service message numbers in the active list. if you activate an info service number, you can then receive messages sent from that number.

Templates

Menu 5.9

Text templates (Menu 5.9.1)

You have 6 text templates available;

- Please, call me back .
- I'm late. I will be there at
- Where are you now?
- I am on the way.
- Urgent! Please, contact.
- I love you!

The following options are available.

- ▶ **View:** You can see the selected template.
- ▶ **Edit:** Use this to write a new message or edit a selected template message from the text template list.

▶ Send via

- **Message:** Use this to send the selected template message by Message.
- **Email:** Use this to send the selected template message by email.

▶ Delete: Deletes the template.

▶ New template: Use this to create a new template.

▶ Delete all: Allows you to delete all template messages.

Messaging

Multimedia templates

(Menu 5.9.2)

You can save a new multimedia template and also edit the saved multimedia templates.

After saving your new template, you have the following options.

- ▶ **View:** You can see multimedia templates.
- ▶ **Edit:** Use this to write a new message or edit the selected multimedia template message from the multimedia template list.
- ▶ **Send:** Use this to send the multimedia template message by MMS.
- ▶ **Delete:** Deletes the multimedia template.
- ▶ **New template:** Use this to create a new template.
- ▶ **Delete all:** Allows you to delete all multimedia messages.

Settings

Menu 5.0

Text message (Menu 5.0.1)

- ▶ **Message types:**
Text, Voice, Fax, Paging, X.400, Email, ERMES
The type of message is normally already set to Text. You may be able to convert your text into alternative formats. Contact your service provider for the availability of this function.
- ▶ **Validity period:** This network service allows you to set how long your messages will be stored at the message centre.
- ▶ **Delivery report:** If you set this to ON, you can check whether your message was sent successfully.
- ▶ **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill.

- ▶ **Message center number:** If you want to send and receive text messages, the address of the SMS centre needs to be entered. Normally, this address is automatically read from your SIM card.
- ▶ **Character encoding:** Full support/
Reduced support
 - **Full support:** A message with single byte character is normally encoded in Default alphabet(GSM7). A message with double-byte character is automatically encoded in unicode(UCS2).
 - **Reduced support:** A message with double byte characters is encoded in single byte. Please note that double byte characters with accents may be converted into single byte characters without accents.

Multimedia message

(Menu 5.0.2)

- ▶ **Slide duration:** Displays the duration of each page on screen when writing a message.
- ▶ **Delivery time:** Delivers your message at a specific time.
- ▶ **Priority:** You can set the priority of the selected message.
- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery reports:** You can set either ON/OFF in these menus.
 - **Request report:** Request reports to determine whether your messages have been sent to the recipients successfully.
 - **Allow report:** When the senders request delivery reports, you can decide whether the report is delivered or not.

Messaging

- ▶ **Read report:** You can choose either ON/OFF in these menus.
 - **Request report:** Request reports to determine whether your messages have been read by the recipients
 - **Allow report:** When the senders request read reports, you can decide whether the report is delivered or not.
- ▶ **Auto download:** You can receive multimedia messages automatically from Home network / Roaming network when you select 'Automatic' in this menu. If you select 'Manual', you will receive only notification messages in the inbox. You can then choose to receive multimedia messages in the option menu of Notifications.
- ▶ **Network profiles:** Here you can select a multimedia message server. Enter the URL for your multimedia message server.
- ▶ **Permitted message types**
 - **Personal:** Personal message.
 - **Advertisements:** Commercial message.
 - **Information:** Necessary information.

Email (Menu 5.0.3)

Here you can configure your settings for receiving and transmitting emails.

Email accounts (Menu 5.0.3.1)

1. Select **New** from the **Email account** menu options.
2. The following items need to be configured.

- **Account name:** You can edit the email account name.
- **Email address:** Enter the email address given to you by your service provider.
- **My name:** Enter your user name.
- **Incoming mail server:** Enter the POP3 or IMAP4 address that receives your email.
- **User name:** Enter the user ID of the POP3 or IMAP4 server.
- **Password:** Enter your user password for the POP3 or IMAP4 server.
- **Outgoing mail server:** Enter the SMTP address.
- **Outgoing mail authentication:** To send mail, you may need to set up authentication.

- **Outgoing server ID:** Enter the user ID of your SMTP server.
- **Outgoing server password:** Enter the user password of your SMTP server.

Using the left soft key [Options], you can set the advanced settings.

- **Reply email address:** You can set up your reply email address.
- **Incoming port number:** Enter the POP3 or IMAP4 port number that receives your email.
- **Outgoing port number:** Enter the Port number of the server that sends your email.
- **Protocol type:** Choose your protocol type.(POP3/IMAP4)
- **APOP secure login:** Decide whether to activate APOP secure login or not. When the mailbox type is **IMAP4**, APOP secure login is always set to **OFF**.

Messaging

- **Maximum receive size:** Decide the biggest file size you wish to receive. (50KB/100KB/200KB/300KB)
- **Save to server:** Select **On** to save emails on the server.
- **Insert signature:** Select **On** to automatically add your signature to your email messages.
- **Retrieve download:** You can select your preferred download option.(All/Headers only)
- **Auto retrieving:** You can set up the auto retrieving setting.

Access point (Menu 5.0.3.2)

You can select a configured access point to connect to the Internet.

Retrieve interval (Menu 5.0.3.3)

Select the time between auto retrieves.

Signature (Menu 5.0.3.4)

You can create your signature.

Voicemail number (Menu 5.0.4)

You can receive voicemail if your network service provider supports this feature. When a new voicemail has arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

Service message (Menu 5.0.5)

You can decide whether you will receive service messages or not.

Info message (Menu 5.0.6)

► Receive

- **On:** If you select this option, your phone will receive Info service messages.
- **Off:** If you select this option, your phone will not receive Info service messages any more.

► Alerts

- **On:** Your phone will beep when you have received Info service message numbers.
- **Off:** Your phone will not beep even though you have received info service messages.

► Languages

You can select the language you prefer by pressing the OK key. The info service message will be shown in the language that you have selected.

My stuff

Images

Menu 6.1

To view your image details, press the OK key.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **View:** View the selected file.
- ▶ **Delete:** Delete the selected file.
- ▶ **Set as**
 - **Wallpaper:** The currently selected image will be used as **Wallpaper**.
 - **Picture ID:** The currently selected image can be used as a **Picture ID**.
- ▶ **Send via:** Send the selected file to another device via **Message, Bluetooth, or Email**.

▶ File

- **Rename:** Change the file name of selected file. You cannot change the file name extension, i.e. jpg.
- **Move to folder:** Move the selected file to the folder.
- **Move to external memory / Move to phone memory:** Move the selected file to the external memory (if installed) or to the multimedia memory in your phone.
- **Copy to external memory / Copy to phone memory:** Copy the selected file to the external memory or multimedia memory in your phone.
- **Information:** Show the file information.

- ▶ **Print via Bluetooth:** Most of the pictures that you have taken in camera mode or downloaded through WAP can be transmitted via Bluetooth to a printer.
- ▶ **Slide show:** You can view a slide show of the files you have stored.
- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove a number of files you select.
- ▶ **Delete all:** Delete all files in the list.
- ▶ **Sort by:** You can arrange the files by **Date**, **Type** and **Name**.
- ▶ **Thumbnail view/List view:** Allows you to set the view type.

Sounds

Menu 6.2

The Sounds folder contain the default sounds and voice recordings.

When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **Play:** You can play the selected file.
- ▶ **Delete:** Delete a selected file.
- ▶ **Set as:** The currently selected sound can be set as a **Ringtone/ Ringtone ID/Message tone**.
- ▶ **Send via:** Send the selected file to another device via **Message, Bluetooth** or **Email**.
- ▶ **File**
 - **Rename:** Changes the name of the selected file.
 - **Move to folder:** Moves the selected file to the folder.

My stuff

- **Move to external memory / Move to phone memory:** Moves the selected file to external memory (if inserted) or to the multimedia memory on your phone.
- **Copy to external memory / Copies to phone memory:** Copy the selected file to the external memory (if inserted) or to the multimedia memory on your phone.
- **Information:** Shows the selected file's information.
- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove a number of files you select.
- ▶ **Delete all:** Delete all the files in the list.
- ▶ **Sort by:** You can arrange the files by **Date**, **Type** and **Name**.

Videos

Menu 6.3

Shows a list of all 3GP, 3G2 files in My media/Videos in Multimedia memory. Supports only .3gp files, that are encoded with MPEG4 and h.263 videocodecs and the AMR audio-codec.

Here you can manage or send saved video clips. When a file is selected, the following options will be displayed by pressing the left soft key [Options].

- ▶ **Open:** You can open the selected file.
- ▶ **Delete:** Delete a selected file.
- ▶ **Send via:** Send the selected file to another device via **Message**, **Bluetooth** or **Email**.
- ▶ **File**
 - **Rename:** Change the name of the selected file. The maximum length of characters is 59.

Warning!

*You can't use the following characters: \ / : * ? < > |*

- **Move to folder:** Move the selected file to a folder.
- **Move to external memory / Move to phone memory:** Move the selected file to the external memory (if inserted) or multimedia memory in your phone.
- **Copy to external memory / Copy to phone memory:** Copy the selected file to the external memory (if inserted) or to the multimedia memory on your phone.
- **Information:** Show the selected file's information.

- ▶ **New folder:** You can create a new folder.
- ▶ **Multi delete:** You can remove a number of files you have selected.
- ▶ **Delete all:** Delete all files in the list.
- ▶ **Sort by:** You can arrange the files by **Date, Type** and **Name**.

Others

Menu 6.4

Other files except images, sounds, videos are stored in this folder.

External memory

Menu 6.5

If you purchase an optional external microSD memory card, you can manage more content.

Profiles

In Profiles you can adjust and customise your phone tones for different events, environments, or caller groups.

There are five preset profiles: **General**, **Silent**, **Vibrate only**, **Outdoor** and **Headset**.

Activate (Menu 7.X.1)

1. A list of profiles is displayed.
2. In the Profiles list, scroll to the profile you want to activate and press the left soft key [OK] or the OK key.
3. Then, select **Activate**.

Personalise (Menu 7.X.2)

Scroll to the desired profile in the Profiles list. After pressing the left soft key or the OK key, select **Personalize**.

The profile setting option opens. Set the option you require.

- ▶ **Call alert type:** Set the alert type for incoming calls.
- ▶ **Ring tones:** Select the desired ring tone from the list.
- ▶ **Ring volume:** Set the volume of the ring tone.
- ▶ **Message alert type:** Set the alert type for messages.
- ▶ **Message tones:** Select the alert tone for messages.
- ▶ **Message volume:** Set the volume of the Message tone.
- ▶ **Keypad tones:** Select the desired keypad tone.
- ▶ **Keypad volume:** Set the volume of the keypad tone.

- ▶ **Flip tones:** Lets you to choose the flip tone.
- ▶ **Effect sound volume:** Set the volume of the sound effect.
- ▶ **Power on/off volume:** Set the volume of the tone played when switching the phone on/off.

Note

The profiles cannot be renamed.

Phonebook

Search

Menu 8.1

1. Select **Search** and enter the name of the contact that you want to search for.

Note

- ▶ You can access the Phonebook directly by pressing the right soft key [Phonebook] when in standby mode.
- ▶ Instant searching is available by inputting the initial letter of the name.

2. After finding the desired contact, you can call the number by pressing the send key.
3. If you want to edit, delete, copy an entry, or to add the voice to one, select the left soft key [Options].

The following menu will be displayed.

- ▶ **View:** You can view each entry in detail.
- ▶ **Edit:** You can edit a selected contact.
- ▶ **New message:** After you have found the number you want, you can send a **New message** to the selected number.
- ▶ **Send via:** You can send the contact data via **Message/Bluetooth/Email**.
- ▶ **Delete:** You can delete an entry.
- ▶ **New Contact:** After selecting the place (SIM/Phone) you want to save, you can add your new contact .
- ▶ **Add to speed dial:** Allows you to set a selected number to add to the speed dial list.
- ▶ **Multi delete:** Allows you to remove a number of selected files.
- ▶ **Copy to SIM / Copy to phone:** Copy an entry from phone to SIM or from SIM to phone.
- ▶ **Main number:** If a contact has more than one number stored, select the one that you use most often. This is the number that number will be displayed first.

New contact Menu 8.2

Here you can enter a new contact address. You can also enter the name, different phone numbers and email addresses of the new contact. You can also assign the contact to groups, include a picture, assign a specific ringtone and enter an anniversary/birthday for the contact. You can also enter and manage your contact addresses depending on the memory available.

Note

- ▶ The contact entry fields may differ when you register a contact address in the SIM.
- ▶ Maximum stored name and number length depends on SIM card type.

Speed dials Menu 8.3

Using this menu you can manage your speed dials.

You can assign any of the keys **2 abc** to **9 wxyz** to a contact entry. You can then call that name directly by pressing this key.

1. First open the **Phonebook** by pressing the right soft key [Phonebook] in standby mode.
2. Scroll to **Speed dial**, then press the left soft key [OK].
3. If you want to add speed dial, select <Empty> by pressing the left soft key [Assign]. Then you can search for the name in the contacts.
4. After assigning the number as a speed dial, you can change or delete the entry. You can also make a call or send a message using this number.

Groups Menu 8.4

In the handset memory, there are 7 default groups: **Family, Friends, Colleagues, VIP, Group 1, Group 2, and Group 3.**

Select the group name that you want to manage by pressing the left soft key [Option]. The following submenus will be displayed.

Phonebook

- ▶ **View members:** Shows the members of the group you have selected.
- ▶ **Group ringtone:** Allows you to specify a ring tone for when group members call you.
- ▶ **Group icon:** Allows you to select an icon for the group.
- ▶ **Add member:** You can add member to the group.
- ▶ **Remove member:** You can remove the member from the group member list. The name and the number will be retained in **Contacts**.
- ▶ **Rename:** You can change a group name.
- ▶ **Reset all:** Allows you to reset all contacts.

Copy all

Menu 8.5

You can copy entries from SIM card memory to phone memory and vice versa.

- ▶ **SIM to phone:** You can copy an entry from SIM card to phone memory.
- ▶ **Phone to SIM:** You can copy the entry from phone memory to SIM card.

Delete all

Menu 8.6

You can delete all entries from SIM card or phone memory. This function requires the security code.

Settings

Menu 8.7

View options (Menu 8.7.1)

You can set the contact display option.

- ▶ **Name only:** Display the contact information by name.
- ▶ **Name & Number:** Display the contact information with both name and number.
- ▶ **With picture:** Display the contact information with a picture.

Backup Contacts (Menu 8.7.2) (External Memory dependent)

You can save your Phonebook data to the Others folder in your external memory.

Restore Contacts (Menu 8.7.3) (External Memory dependent)

You can save Vcard format (*.vcf) data in My stuff -> External memory -> Others to the Phonebook.

Information Menu 8.8

Service dial number (Menu 8.8.1)

You can view the list of Service Dialling Numbers (SDN) assigned by your service provider (if supported by the SIM card).

Own number (Menu 8.8.2) (SIM dependent)

You can save and check your own number in the SIM card.

My business card (Menu 8.8.3)

This option allows you to create your own business card featuring name, numbers and your email. To create a new business card, press the left soft key [New] and enter the information into the fields. If you want to edit, delete or to send a business card, select the left soft key [Options].

Tools

Alarm clock

Menu 9.1

You can set the alarm clock to go off at a specified time.

1. If there is no alarm set, press the left soft key [New] to add a new alarm.
2. Set or cancel the alarm, using the options for specifying whether the alarm is on or off, by first choosing the alarm time.
3. Select the repeat period: **Once**, **Daily**, **Mon~Fri**, **Mon~Sat**, **Sat~Sun**.
4. Select the alarm tone by using **Options** → **Sounds**. You can press the up/down navigation keys and select the sound you want, then press the left soft key [OK].
5. Edit the title and press the left soft key [Save].

Calculator

Menu 9.2

The calculator module allows you to perform basic arithmetic functions such as addition, subtraction, multiplication, and division, as well as some scientific functions.

1. You can enter numbers by using the number keys, and operators by using the navigation key.

Note

- ▶ To erase any mistake or clear the display, use the  key.
- ▶ To insert a decimal point, press the  key.
- ▶ To insert parentheses, press the  key.

2. To calculate the result, press the OK key.
3. After calculation, press the right soft key to return to the initial state.

Stopwatch

Menu 9.3

This menu allows you to record the elapsed time of an event.

1. Press the left soft key [Start] to start. To record a lap time press the right soft key [Lap].
2. Press the left soft key [Stop] to show the stored lap time.
3. Press the right soft key [Reset] to return to 0.

Unit converter

Menu 9.4

This converts any measurement into the units you require. There are 7 types of measurement: **Currency, Area, Length, Weight, Temperature, Volume and Velocity.**

World clock

Menu 9.5

The World clock function provides time information for major cities worldwide.

You can select the following options by pressing the left soft key [Options].

- ▶ **Change time zone:** You can change your time zone by selecting a different city.
- ▶ **New city:** You can add a new city.
- ▶ **Daylight saving:** You can apply daylight saving time.

Orange Plus

Menu 9.6

(SIM dependent)

With the SIM services menu your phone is future-proof and will support additions to your service provider's service. For more information contact your service provider.

Browser

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser at any time, press the  key. The phone will return to the idle menu.

Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP browser menu.

Using the phone keys

When surfing the Internet, the phone keys function differently to when in phone mode.

Icon	Description
	Scrolls each line of the content area
	Returns to the previous page
	Select options and confirm actions

Using the WAP browser menu

There are various menu options available when surfing the Mobile Web.

Note

The WAP browser menus may vary, depending on your browser version.

Home

Menu *.1

Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not already defined it in the activated profile.

Bookmarks

Menu *.2

This menu allows you to store the URL of your favourite web pages for easy access later.

To create a bookmark

1. Press the left soft key [Options].
2. Select **New bookmark** and press the OK key.
3. After entering the desired name and URL, press the OK key.

After selecting a desired bookmark, the following options are available.

- ▶ **Connect:** Connects to the selected bookmark.
- ▶ **View:** You can see the selected bookmark.
- ▶ **Edit:** You can edit the selected bookmark.
- ▶ **Delete:** You can delete the selected bookmark.
- ▶ **New bookmark:** Select this to create a new bookmark.
- ▶ **New folder:** Select this to create a new folder.
- ▶ **Move:** You can move the selected bookmark to sub folder.
- ▶ **Copy:** You can copy the selected bookmark.
- ▶ **Send URL via:** Sends the selected bookmark via **SMS/MMS/Email**.
- ▶ **Multi delete:** Allows you to select and delete saved bookmarks.
- ▶ **Delete all:** Deletes all the bookmarks.

Browser

Enter address Menu *.3

You can connect directly to the site you want. After entering a specific URL, press the left soft key [Options] and select **Connect**.

History Menu *.4

This menu shows the recently browsed pages.

Saved pages Menu *.5

The phone can save the page currently on display as an offline file.

Settings Menu *.6

You can set the profile, cache and security related to internet service.

Network profiles (Menu *.6.1)

A profile is the network information used to connect to the Internet.

There are default profiles for some operators stored in phone memory. It's not possible to rename default profiles.

Each profile has submenus as follows:

- ▶ **Activate:** Activates the selected profile.
- ▶ **View:** You can see the selected profile.
- ▶ **Edit:** You can edit the selected profile.
- ▶ **New profile:** You can add a new profile.
- ▶ **Delete:** Deletes the selected profile from the list.

Rendering mode (Menu *.6.2)

You can adjust the size of a web page when the page is larger than phone screen.

Cache (Menu *.6.3)

The information or services you have accessed are saved in the cache memory of the phone.

Note

A cache is a buffer memory used to save data temporarily.

Cookies (Menu *.6.4)

Enabling cookies allows you to store cookies sent from the server. Disabling this function will prevent cookies from being stored on your phone.

Security certificates (Menu *.6.5)

You can see the list of personal certificates that have been stored in your phone.

Show image (Menu *.6.6)

You can select whether to display images or not during WAP browsing. Turning images off may speed up browsing.

Java script (Menu *.6.7)

Select this to turn Java script on or off.

Information Menu *.7

You can view information on the WAP browser version.

Connectivity

Bluetooth

Menu 0.1

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires.

This handset supports built-in Bluetooth connectivity, which makes it possible to connect with compatible Bluetooth headsets, computer applications and so on.

Note

- ▶ If you use LG PC Sync via Bluetooth, you can exchange the data only within phonebook
- ▶ When you receive data from another Bluetooth device, the phone requests confirmation. After confirming the transfer, the file will be copied on to your phone.
- ▶ Depending on the file type, it will be stored in the following folders:
 - **Video (.3gp, mp4):** Videos folder
 - **Image (.bmp, gif, jpg, png):** Images folder
 - **Sound (.amr, wav, aac):** Sounds folder
 - **MP3 (.mp3):** Sounds/MP3 folder
 - **Other files (.txt, html):** Others folder

► **Bluetooth on/off**

You can activate or cancel the Bluetooth function.

► **Device list**

You can view all devices which your KF300 is already paired to. If you enter Paired devices, you can view the following options.

- **Connect /Disconnect:** After pairing with headset or stereo headset, you should connect with those devices. You can then use them.
- **New:** Search for new Bluetooth devices and adds them to your phone's list of paired devices. When you select New your handset will start to search for Bluetooth devices within range. Scroll to the desired device and press the left soft key [Pair]. You will then be asked to enter a passcode.

The passcode can be any code you wish to use (the same passcode must be used by both devices) or is one that is pre-determined by the manufacturer of the device you are trying to pair with. Please check the User Manual of the device you are initiating the pair with to see if it already has a predetermined passcode in place.

- **Set as authorized /Set as unauthorized:** Allows you to set an unauthorized connection between each Bluetooth device. For example if you regularly use a Bluetooth headset with your phone then setting the connection as unauthorized will mean the headset will automatically connect to the handset each time the headset is powered on.
- **All services:** Allows to view all services which are supported by Bluetooth device.
- **Delete:** Deletes a paired Bluetooth device.

Connectivity

- **Rename:** Allows you to change the name of the paired Bluetooth device and how it is displayed on the handset.

- **Delete all:** Delete all the paired Bluetooth devices.

▶ **Bluetooth settings**

- **My visibility:** This indicates whether or not your handset will be visible to other Bluetooth devices.

- **My name:** You can set the name of your Bluetooth device. The default name is LG KF300.

- **My address:** You can view the address of your Bluetooth device.

- **Primary storage:** You can choose the primary storage you want to use.

Network

Menu 0.2

You can select a network which will be registered either automatically or manually.

Network selection (Menu 0.2.1)

Usually, the network selection is set to **Automatic**.

▶ **Automatic:** If you select **Automatic** mode, the phone will automatically search for and select a network for you. Once you have selected **Automatic**, the phone will be set to **Automatic** even powered off and on.

▶ **Manual:** The phone will find the list of available networks and show you them. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone lets you select another network if the phone fails to access the selected network.

- ▶ **Preferred:** You can set a list of preferred networks that the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

GPRS attach (Menu 0.2.2)

You can set GPRS service in various ways.

- ▶ **Power on**

If you select this menu, the phone is automatically registered to a GPRS network when you switch the phone on. Starting a WAP or PC dial-up application creates a connection between phone and network and data transfer is then possible. When you end the application, GPRS connection is ended but registration to the GPRS network continues.

- ▶ **When needed**

If you select this menu, the GPRS connection is established when you connect a WAP or application service and closed when you end the WAP or application connection.

Access Point (Menu 0.2.3)

- ▶ **View:** You can see the selected profile.
- ▶ **Edit:** You can edit the selected profile.
- ▶ **New access point**
 - **Name:** You can type the network name.
 - **Bearer:** You can set the bearer data service. Data/GPRS.

Connectivity

<Data settings>

Appear only if you select Data Settings as a Bearer/service.

- **Dial number:** Enter the telephone number to dial to access your WAP gateway.
- **User ID:** The user's identity for your dial-up server (NOT the WAP gateway).
- **Password:** The password required by your dial-up server (and NOT the WAP gateway) to identify you.
- **Call type:** Select the type of data call; Analogue or Digital (ISDN).
- **Linger time:** You need to enter timeout period.

After entering linger time the WAP navigation service will be unavailable if any data is not input or transferred.

- **Primary server:** Input the IP address of the primary DNS server you use.
- **Secondary Server:** Input the IP address of the secondary DNS server you use.

The service settings are only available when GPRS is chosen as a bearer service.

- **APN:** Input the APN of the GPRS.
- **User ID:** The user identity for your APN server.
- **Password:** The password required by your APN server.
- **Primary Server:** Input the IP address of the primary DNS server you use.
- **Secondary server:** Input the IP address of the secondary DNS server you use.

USB connection mode

Menu 0.3

You can choose one mode of Data service and USB Mass storage.

► Mass storage

You can connect your phone to your PC as a USB storage device, using the cable in three ways. Either:

1. Connect the phone to the PC when the idle screen is displayed.
2. Connect the phone while it is performing an operation or menu function, and then move to the idle screen.
3. Connect the phone while it is performing an operation or menu function, and then select the **USB Mass Storage** menu.

When you have finished using the the microSD memory, click Exit and take the following steps.

Caution!

Before you remove the cable, it is necessary that you click Exit. If you do not do this the integrity of transferred data cannot be guaranteed.

1. Click on the notification area.
[Unplug or Eject Hardware]
2. Select **USB mass Storage Device**, click on **Stop**. The following message will appear: **The USB mass Storage Device can now be safely removed from the system.**
3. Then remove the cable.

► Data service

Select the **Data service** menu to use the LG Mobile Sync program.

Settings

Date & Time

Menu #.1

You can set functions relating to the date and time.

Set date (Menu #.1.1)

You can enter the current date.

Date format (Menu #.1.2)

You can set the Date format such as YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY. (D: Day / M: Month / Y: Year)

Set time (Menu #.1.3)

You can enter the current time.

Time format (Menu #.1.4)

You can set the time format as either 24 hours or 12 hours.

Auto update (Menu #.1.5)

Select **On**, the phone will automatically update the date and time.

Languages

Menu #.2

You can change the language for the display texts in your phone. This change will also affect the language input mode.

Display

Menu #.3

Wallpaper (Menu #.3.1)

You can select the background pictures in standby mode.

Clock (Menu #.3.2)

You can select the type of clock.

Backlight timer (Menu #.3.3)

You can set the light-up duration of the display.

Brightness (Menu #.3.4)

You can adjust the brightness of the LCD.

Home screen shortcut

(Menu #.3.5)

You can set the functions of 4 navigation keys to use as shortcuts in idle mode.

Font size (Menu #.3.6)

You can change the font size for the display text in your phone.

Theme (Menu #.3.7)

You can set the screen theme to be displayed on the main screen.

Menu style (Menu #.3.8)

Your phone provides you with **Grid view** and **List view** menu themes. Choose your menu style by scrolling and pressing the left soft key [OK].

Dialling (Menu #.3.9)

You can set the font style/font size of the numbers which appear in the home screen when you make a call.

Standby text (Menu #.3.0)

If you select **On**, you can edit the text which is displayed when in standby mode.

Network name (Menu #.3.*)

If this function is activated, the network name will be displayed on LCD.

Shortcut Menu #.4

You can change the Shortcut function which is displayed in standby mode.

Call Menu #.5

You can set the menu relevant to a call by pressing the left soft key [Select] in the **Setting** menu.

Settings

Call divert (Menu #.5.1)

The **Call divert** service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

- ▶ **All voice calls:** Diverts all voice calls.
- ▶ **If busy:** Diverts voice calls when the phone is in use.
- ▶ **If no reply:** Diverts voice calls which you do not answer.
- ▶ **If out of reach:** Diverts voice calls when the phone is switched off or out of coverage.
- ▶ **All data calls:** Diverts to a number with a PC connection.
- ▶ **All fax calls:** Diverts to a number with a fax connection.
- ▶ **Cancel all:** Cancels all call diverts.

The submenus

Call divert menus have the submenus shown below.

- **Activate:** Activate the corresponding service.

To voicemail number: Forwards calls to message centre. This function is not shown on **All data calls** and **All fax calls** menus.

To other number: Inputs the number for diverting.

To favourite number: You can choose from 5 recent diverted numbers.

- **Cancel:** Deactivate the corresponding service.

- **View status:** View the status of the corresponding service.

Call barring (Menu #.5.2)

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

▶ All outgoing

The barring service for all outgoing calls.

▶ Outgoing international

The barring service for all outgoing international calls.

▶ O/G international except home country

The barring service for all international outgoing calls when roaming

▶ All incoming

The barring service for all incoming calls.

▶ Incoming when abroad

The barring service for all incoming calls when roaming.

▶ Cancel all barrings

You can cancel all barring services.

▶ Change password

You can change the password for Call Barring Service.

The submenus:

- Activate

Allows the request for the network to set call restriction on.

- Cancel

Set the selected call restriction off.

- View status

View status of whether the calls are barred or not.

Settings

Fixed dial number (Menu #.5.3) (SIM dependent)

- ▶ You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.
- ▶ **On**
You can restrict your outgoing calls to selected phone numbers.
- ▶ **Off**
You can cancel the fixed dialling function.
- ▶ **Number list**
You can view the number list saved as Fixed dial number

Answer mode (Menu #.5.4)

- ▶ **Flip open:** If you select this option, you can receive an incoming call when you open the flip.
- ▶ **Any key:** If you select this option, you can receive a call by pressing any key except the end key and the right soft key.
- ▶ **Send key only:** If you select this option, you can receive a call only by pressing the send key.

Send my number (Menu #.5.5) (network and subscription dependent)

- ▶ **Set by network:** If you select this, you can send your phone number, depending on two line service such as line 1 or line 2.
- ▶ **On:** You can send your phone number to another party. Your phone number will be shown on the receiver's phone.

- ▶ **Off:** Your phone number will not be shown.

Call waiting (Menu #.5.6) (network dependent)

- ▶ **Activate:** If you select **Activate**, you can accept a waiting (incoming) call.
- ▶ **Cancel:** If you select **Cancel**, you cannot recognize the waiting (receiving) call.
- ▶ **View status:** Shows the status of **Call waiting**.

Minute minder (Menu #.5.7)

If you select **On**, you can check the call duration. A beep will sound every minute during a call.

Auto redial (Menu #.5.8)

- ▶ **On:** When this function is activated, the phone will automatically try to redial in the case of a failure to connect a call.
- ▶ **Off:** Your phone will not make any attempts to redial when the original call has not connected.

Select line (Menu #.5.9) (SIM dependent)

Depending on the support or not of 2 line services on your SIM card, you can select the line you want.

Send DTMF tones (Menu #.5.0)

You can send touch tones during an active call to control your voice mailbox or other automated phone services.

Settings

Security

Menu #.6

PIN code request (Menu #.6.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on.

If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press the left soft key [OK].
2. Set **On/Off**.
3. If you want to change the setting, you need to enter the PIN code when you switch on the phone.
4. If you enter the wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in the PUK code.
5. You can enter your PUK code up to 10 times. If you enter the wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

Phone lock (Menu #.6.2)

You can use a security code to avoid unauthorized use of your phone.

Whenever you switch on the phone, the phone will request the security code if you set phone lock to **When switch on**.

If you set phone lock to **When SIM changed**, your phone will request the security code only when you change your SIM card.

Change codes (Menu #.6.3)

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized persons.

You can change the access codes:
Security code, PIN2 code.

1. If you want to change the **Security code/PIN2 code** input your original code, and then press the left soft key [OK].
2. Input new **Security code/PIN2 code** and verify them.

Flight mode

Menu #.7

This allows you to use only those phone features that do not require the use of the wireless network, for example when you are in an airplane or in places where the wireless network is prevented.

If you set the flight mode on, the icon will be displayed on the screen instead of the usual network signal icon.

- ▶ **On:** You cannot make (or receive) any calls, including emergency calls, or use other features that require network coverage.
- ▶ **Off:** You can deactivate the flight mode and then restart your handset to access the network.

Power save

Menu #.8

Choose to switch the factory set power saving settings on or off.

Reset

Menu #.9

You can clear all factory defaults. You will need the **Security code** to activate this function.

Memory status

Menu #.0

You can check free space and memory usage of phone, SIM card and external memory (if inserted).


Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Standard Battery



Hands free earmicrophone

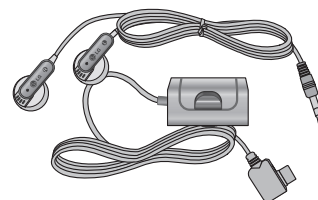

Travel Adapter

This charger allows you to charge the battery while away from home or your office.



Note

- ▶ Always use genuine LG accessories.
- ▶ Failure to do so may invalidate your warranty.
- ▶ Accessories may vary in different regions: please check with our regional service company or agent for further information.

Technical data

General

Product name: KF300

System: E-GSM 900/DCS 1800/ PCS 1900

Ambient Temperatures

Max: +55°C (discharging)
+45°C (charging)

Min: -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KF300, KF300c

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2
EN 300 328 V1.6.1

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob@lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

11. January. 2008

Signature of representative

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS :

LG offers you a limited warranty that the enclosed phone and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The limited warranty for the product extends the warranty period beginning on the date of purchase of the product.
- (2) The limited warranty applies for 1 year from the original date of purchase and extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user. It shall neither exclude nor limit any mandatory statutory rights of the customer or any of the customer rights against the seller/dealer of the product.
- (3) This warranty is good only to the original purchaser during the warranty period, but limited to certain country if specified.
- (4) The external housing and cosmetics parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG. or their designated service agent the consumer must provide information to reasonably prove the date of purchase.
- (6) Unless other service arrangements have been specified the customer shall bear the cost of shipping a defective product back to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.
- (7) During the warranty period LG or its authorised service agent will repair or replace at LG's sole discretion a defective product. A repaired or replaced product will not be given a prolonged or renewed warranty period.

2. WHAT THIS WARRANTY DOES NOT COVER :

- (1) Defects OR Damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) A warranty repair if the Customer Service Department at LG or other agreed service agent was not notified by the consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number or IMEI number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).
- (12) Suspected defects caused by a failure of the cellular network.

3. CONDITIONS:

No other express warranty is applicable to this product.

The DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.



Memo

[illegible]

Memo

[illegible]

Memo

[illegible]

Memo

[illegible]