



ENGLISH

KF600

KF600 User Guide

LG ELECTRONICS INC.

CE 0168

www.lgmobile.com

MMBB0271122 (1.0) H



Some of contents in this manual may differ from your phone depending on the software of the phone or your service provider.

KF600 User Guide

Congratulations on your purchase of the advanced and compact KF600 phone by LG, designed to operate with the latest digital mobile communication technology.



Disposal of your old appliance

- 1** When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- 2** All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3** The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4** For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

SET UP	01
YOUR STANDBY SCREEN	02
THE BASICS	03
GET CREATIVE	04
GET ORGANISED	05
THE WEB	06
SETTINGS	07
ACCESSORIES	08

Contents

SET UP

Getting to know your phone	8
Installing the SIM and battery	10
Memory card	12
Menu map	13

YOUR STANDBY SCREEN

InteractPad tips	14
The quick keys	15
The main menu	15
The status bar	16

WEB'N'WALK

THE BASICS

Calls

Making a call or video call	20
Making a call from your contacts	20
Answering and rejecting a call	20
In-call options	21
Adjusting the call volume	21
Speed dialling	22

Viewing your call logs	22
Using call divert	23
Using call barring	23
Changing the call setting	23
Searching for a contact	24
Adding a new contact	24
Contact options	24

Contacts

Adding a contact to a group	25
Renaming a group	25
Adding a picture to a contact	25
Copying your contacts to your SIM	26
Deleting all your contacts	26
Viewing information	26

Messaging

Messaging	27
Sending a message	27
Entering text	27
Setting up your email	28
Retrieving your email	29
Sending an email using your new account	29
Changing your email settings	30
Message folders	30

Managing your messages	31
Using templates.....	31
Changing your text message settings....	32
Changing your multimedia message settings	32
Changing your other settings.....	33

GET CREATIVE

Camera 34

Taking a quick photo.....	34
After you've taken your photo	34
Getting to know the viewfinder.....	34
Using your toolbar of options	35
Choosing a shot mode	36
Changing the image size	37
Viewing your saved photos	37
Using zoom when viewing a photo	37
Setting a photo as wallpaper or Picture ID ..	37

Video camera.....38

Shooting a quick video	38
After you've shot your video	38
Getting to know the viewfinder.....	38
Using your toolbar of options	39

Watching your saved videos	40
Adjusting the volume when viewing a video.....	40

My stuff 41

Images.....	41
Images option menus.....	41
Sending a photo	42
Organising your images	42
Deleting an image	42
Deleting multiple images.....	42
Creating a slide show.....	43
Sounds	43
Using a sound	43
Videos	43
Watching a video	43
Using options while video is paused	44
Sending a video clip	44
Using the video options menu	44
Documents.....	44
Games and Apps	44
Using the games options menu.....	44
Others	45
External memory	45

Contents

Using your phone as a Mass storage device.....	45
Transferring a file to your phone	46
Viewing a file.....	46
Multimedia	47
Music	47
Transferring music onto your phone	47
Using options while playing music.....	47
Creating a playlist.....	48
Playing a playlist.....	48
Editing a playlist	48
Multimedia	49
Deleting a playlist	49
Voice recorder	49
Sending the voice recording	49
Using the radio	49
Searching for stations	50
Listening to the radio	51
Listening to the radio	51

GET ORGANISED

Organiser.....	52
Adding an event to your calendar.....	52
Editing a calendar event.....	52
Setting your alarm	53
Adding a memo.....	53
Adding a city to your world clock	54
Converting a unit	54
Using the stopwatch	54

THE WEB

The web.....	56
Accessing the web.....	55
Adding and accessing your bookmarks	55
Saving a page	56
Accessing a saved page.....	56
Viewing your browser history.....	56
Changing the web browser settings	56

SETTINGS

Settings 58

Changing your screen settings.....	57
Personalising your profiles.....	57
Changing your connectivity settings	58
Using memory manager	59
Sending and receiving your files using Bluetooth	60
Pairing with another Bluetooth device ...	61
Using a Bluetooth headset.....	61
Changing your security settings.....	62

ACCESSORIES

Accessories	64
Network service.....	66
Technical data	66
General.....	66
Ambient Temperatures	66

GUIDELINES

Guidelines for safe and efficient use	68
---	----

Getting to know your phone

End/Power key

Ends or rejects a call.
Turns the phone on/off.
Press once to return to the standby screen.

Clear key

Deletes a character with each press. Use this key to go back to the previous screen.

Main screen

InteractPad™

Call key


Dials a phone number and answers incoming calls.


Charger, Cable, Handsfree connector

Volume

MP3 Player

Capture button

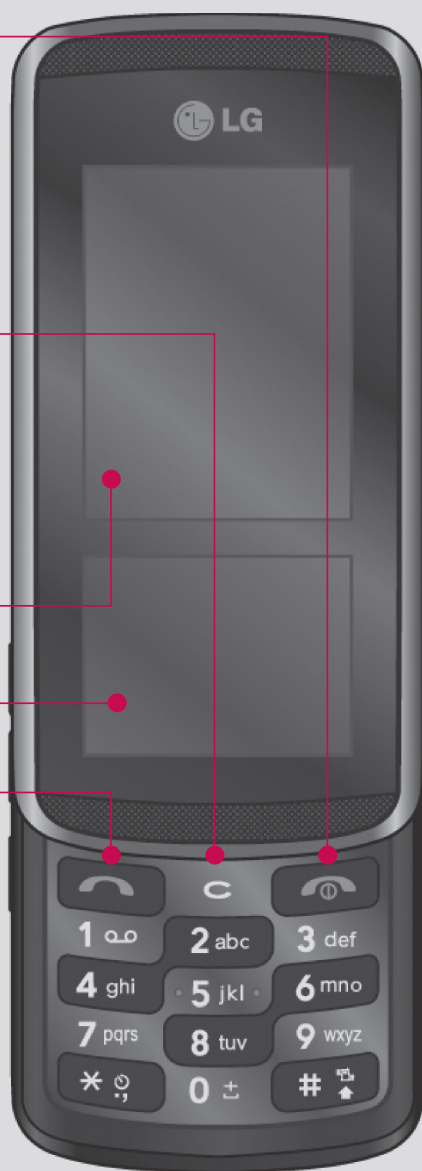

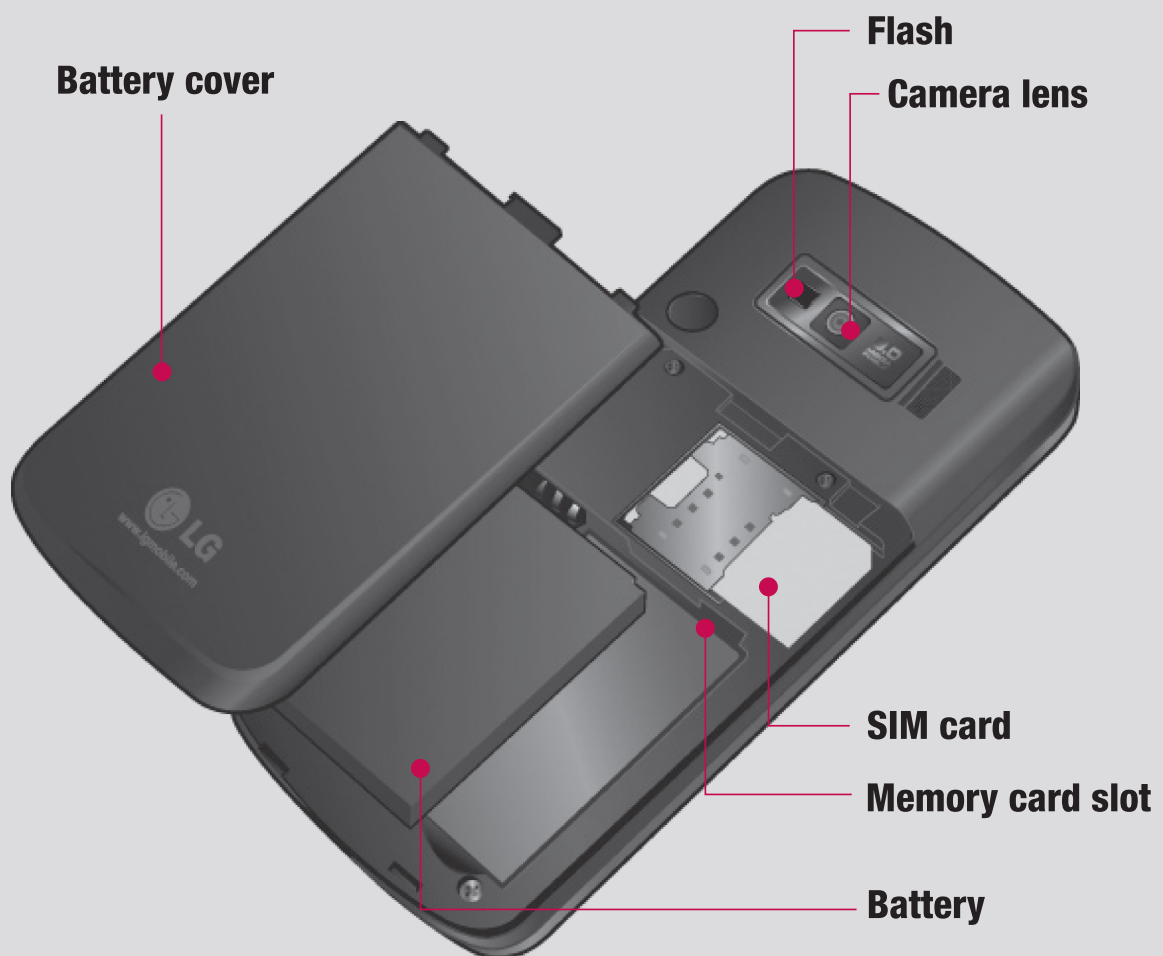

01

02

03

04

05

06

07

08

09

10

11

12

13

Installing the SIM and battery



1 Remove the battery cover

Slide the battery cover towards the bottom of the phone and away from it.

WARNING: Do not use your fingernail when removing the battery

WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.



2 Remove the battery

Lever the bottom edge of the battery and remove it carefully from the battery compartment.




5 Replace the battery cover

Slide the battery cover towards the top of the phone until it clicks into place.



3 Install the SIM card

Slide the SIM card into the SIM card holder. Make sure that the gold contact area on the card is facing downwards. To remove the SIM card, pull it gently in the reverse direction.

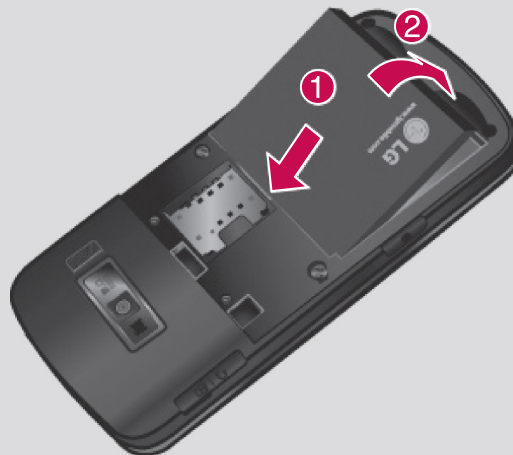

4 Install the battery

Insert the top of the battery first into the top edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Press down the bottom of the battery until it clips into place.



6 Charging your phone

Pull open the cover of the charger socket on the side of your KF600. Insert the charger and plug into a mains electricity socket. Your KF600 will need to be charged until a message reading Fully Charged appears on screen.

01

02

03

04

05

06

07

08

09

10

11

12

13

Set up

11

Memory card

Installing a memory card

Expand the memory space available on your phone using a memory card. The KF600 will support up to a 2 GB memory card.

- 1 Remove the battery cover and battery as before.
- 2 Insert the memory card. Slide the memory card into the slot at the top, until it clicks into place. Make sure that the gold contact area is facing upwards.



- 3 Replace the battery cover as before.

Formatting the memory card

If your memory card is already formatted, you can begin using it. If your card isn't formatted you will need to do so.

- 1 From the standby screen touch  and select .

- 2 Choose **Memory manager** and select **External memory**.
- 3 Touch Format and enter the password, which is set to 0000 as default. Your card will be formatted and ready to use.
- 4 To view the new formatted folders on your KF600 touch  and select . Choose **External Memory**. You'll see five folders: Images, Sounds, Videos, Documents and Others.

For more details on using a memory card, see page 43.



WARNING: When you format your memory card, all the content will be wiped. If you do not want to lose the data on your memory card, back it up first.

Transferring your contacts

To transfer your contacts from your SIM to your phone:

- 1 From the standby screen touch , and choose .
- 2 Select **Copy all**.
- 3 Choose **Phone to SIM** then **Keep original** or **Delete original**.
- 4 Touch **Yes** to confirm.

Menu map



web'n'walk



CALL LOGS

- 1 All calls
- 2 Missed calls
- 3 Dialed calls
- 4 Received calls
- 5 Call duration
- 6 Call costs
- 7 Data information



TOOLS

- 1 Alarm clock
- 2 Calendar
- 3 Browser
- 4 Calculator
- 5 Memo
- 6 Stop watch
- 7 Unit converter
- 8 World clock
- 8 SIM services



MULTIMEDIA

- 1 MP3 player
- 2 Camera
- 3 Video camera
- 4 FM radio
- 5 Voice recorder



MESSAGING

- 1 New message
- 2 Inbox
- 3 Mailbox
- 4 Drafts
- 5 Outbox
- 6 Sent items
- 7 Listen to voicemail
- 8 Info messages
- 9 Templates
- 0 Settings



MY STUFF

- 1 Images
- 2 Sounds
- 3 Videos
- 4 Documents
- 5 Others
- 6 Games & Apps
- 7 External memory



PROFILES

- 1 General
- 2 Silent
- 3 Vibrate only
- 4 Outdoor
- 5 Headset



CONTACTS

- 1 Search
- 2 New contact
- 3 Speed dials
- 4 Groups
- 5 Copy all
- 6 Delete all
- 7 Settings
- 8 Information



SETTINGS

- 1 Date & Time
- 2 Language
- 3 Screen
- 4 Connectivity
- 5 Call
- 6 Security
- 7 Flight mode
- 8 Power save
- 9 Reset
- 0 Memory manager

01

02

03

04

05

06

07

08

09

10

11

12

13

Set up

13

Your standby screen

Whenever your KF600 isn't in use it'll return to your standby screen. From here you access menu options, make a quick call and change your profile - as well as many other things. Your KF600 has two screens, a InteractPad and a main screen. You can determine what you see on the main screen using the smaller InteractPad beneath it.

InteractPad tips

The standby screen is also a great place to get accustomed to the InteractPad.


To select an item touch the icon on the touch screen accurately. Your KF600 will vibrate slightly when it recognises you've touched an option.

- ▶ There's no need to press too hard, the InteractPad is sensitive enough to pick up on a light yet firm touch.
- ▶ Use the tip of your finger to touch the option you require. Be careful not to touch any other keys around it.
- ▶ When the screen light is off, press the camera key on the right hand side of the phone to restore the standby screen.
- ▶ Don't cover the phone with a case or cover as the InteractPad will not work with any material covering it.

- ▶ When you enter an options menu, the touch screen will provide a four way arrow pad. Either touch the arrows to move through a menu one item at a time, or slide your finger across the InteractPad in the direction you want to move.



▲ main menu

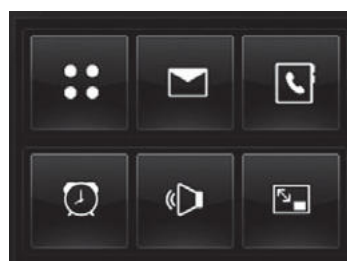

▲ InteractPad™

The quick keys

The quick keys provide easy, one-touch access to your most used functions.



Touch to open the main menu.



Touch to create and send an SMS message. See page 29 for details.



Touch to open your address book. Your contacts are displayed as a alphabetical list. You can also create new contacts and edit existing ones. See page 24 for details.



Touch to set alarm function.



Touch to choose a sound profile for your phone.



Touch to close the quick keys and lock the InteractPad. Press the camera key once to unlock.

The main menu

The main menu provides nine menu options. To open the menu:

- 1 Touch .
- 2 The main menu will appear on the main screen. The InteractPad will display four directional arrows.
- 3 Touch the arrows to move around the main menu one icon at a time.
- 4 When the option you require is circled, touch **OK** to open.



▲ main menu

01

02

03

04

05

06

07

08

09

10

11

12

13

Your standby screen

Your standby screen

The status bar

The status bar indicates, using various icons, things like signal strength, new messages and battery life as well as telling you whether your Bluetooth is active.

Below is a table which explains the meaning of icons you're likely to see in the status bar.

Icon	Description
	Network signal strength (number of bars will vary)
	No network signal
	Remaining battery life
	Battery empty
	New text message
	New voice message
	Message inbox is full
	An alarm is set
	Vibrate profile in use

Icon	Description
	General profile in use
	Outdoor profile in use
	Silent profile in use
	Headset profile in use
	Calls are diverted
	GPRS available
	EDGE available
	Roaming
	Flight mode is selected
	Bluetooth

web'n'walk

TIP! You can also access all T-Mobile services by using shortcut menu(see page 14). An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

You want to place a bid on Ebay? Get some information via Google?

Enjoy the unlimited internet access without worrying about costs. Surf the net wherever you are as comfortable as from your PC.

Normal-sized web pages will be loaded in a few seconds.

- 1 From the standby screen select , then touch web'n'walk.
- 2 Touch  to activate the landscape mode.
- 3 Select  to switch to the fullscreen mode.
- 4 To enter a new URL select .
- 5 By selecting  gives you an overview of whole web page allowing you to instantly navigate to the part of the page you wish to view by moving the red square.
- 6 Select  and you will be given various options.

Home will take you back to the welcome page move.

Add to bookmark you wish to save your current web page to your bookmarks.

View bookmarks to view your stored bookmarks.

New Window opens a new browser window.

Send link via Message or Email.

History gives you an overview of the last visited homepages.

Save this page save your current page. Enter a name for the web page, so you can easily recognise it and touch OK.

View saved pages allows you to view your saved pages. Select the required page and touch **Open**.

Settings where you can adjust the settings to your personal preferences: With the Rendering Mode you can change the depiction of the webpage.

01

02

03

04

05

06

07

08

09

10

11

12

13

web'n'walk

Select to view Mini map as a **Thumbnail** or **Page overview**. By selecting  and activating **Thumbnail** the overview of the whole web page and the webpage you are navigating are placed together, allowing you to instantly navigate to the part of the page you wish to view by moving the red square. By selecting  and activating **Page overview** the overview of the whole web page is visible in a separate window.

The cache and the cookies can be deactivated or activated and also cleared
The javascript can be turned on and off.

Use **Security** to adapt the security police to your personal needs.

You will also find quick explanations of the icons in **Help**.

Press **Exit** to come out of the browser.

7 To go back to the previous page, touch 

8 To move to the next page, touch 

9 To reload your current web page touch 

See page 82 for more details on **accessing the web**

Mobile TV

With Mobile TV, you never have to worry about missing your favourite shows.

Mobile TV channels include live channels, full episodes and pre-recorded shows.

By selecting  and touching  you'll be taken through to the Mobile TV electronic programme guide.

Select the channel you wish to watch. You'll then be taken through to a screen where you either select to the 24 hour or 31 day pass. Select the option you want and click 'Accept'

Note: An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

See page 63 for more details on **watching a video**

Jukebox

Download your current catchy song en-route. You have once bought the song via your mobile phone you can download it as well to your PC and burn it on CD without additional costs.

From the standby screen select, then touch **Jukebox**. Move through the Jukebox as you do through web'n'walk

Note: An additional cost is incurred when connecting to this service. Check your data charges with your network provider.

t-zones

t-zones is your download portal. Access t-zones from the standby screen by selecting  and then touching t-zones.

- 1 To access the t-zones homepage directly select **Home**.
- 2 Select **Enter address** to enter a new URL.
- 3 Select **Bookmarks** and a list of your bookmarks will appear on the screen.

- 4 In order to access a saved page select **Saved pages**.

- 5 View your browser history by selecting **History**.

- 6 Select **Settings** to adapt the t-zones settings to your personal requirements

There, with **Profiles** you can pick the required profile for the used network. With **Character encoding** you can choose the character encoding of a web page.

Cache and **Cookies** can be activated or deactivated and cleared.

Javascript can be turned on and off. Use **Security** to adapt the security police to your personal needs, the settings can be set back to default with **Reset settings**.

Google Maps

From the standby screen select , choose  and then touch "Google". For GoogleMaps touch "Maps"

Note: To view maps you will be required to connect to the internet which will incur charges.

01

02

03

04

05

06

07

08

09

10

11

12

13

web'n'walk

YouTube

If it's widespread fame you're after, the KU990 is one of the first YouTube-enabled phones. So not only can you watch YouTube videos, this means you can also submit videos to YouTube wherever you are, using your phone. No computer, no fuss.

From the standby screen select , choose  and then touch "Google".

For YouTube touch "Youtube"

Watch YouTube

Touch YouTube and you will automatically connect to the YouTube homepage. From there you can use YouTube as you would on your computer.

Post a video to YouTube

- 1 Record your video as normal.
- 2 Touch [message] and select YouTube.
- 3 Enter your username and password.
- 4 You will see **Blog post published**. Touch **OK**.
- 5 Choose to
Go to URL - to post the photo to your blog. **Add to bookmark** - save the URL of your post.
Send message - send an SMS, MMS or email containing your URL.

You can also post videos from your My videos folder.

- 1 Highlight the video you want to post to YouTube.
- 2 Touch [option icon] and select **Send**.
- 3 Choose **YouTube** and follow step 5 above.

Calls

Making a call or video call

- 1 Key in the number using the keypad.
To delete a digit press **C**.
- 2 Press the  hard key or touch  to initiate the call.
- 3 To end the call, press the  hard key or touch **End**.

TIP! To enter + for making an international call, press and hold **0**.

Making a call from your contacts

- 1 Bring up the InteractPad menu by sliding your handset open or holding the camera key on the side of your handset down.
- 2 Touch  to open the address book.
- 3 Using the keypad enter the first letter of the contact you want to call. So, for Office, press **6** three times.
- 4 To scroll through the contacts and their different numbers use the arrows on the InteractPad.
- 5 Touch **Call** or press the  hard key to initiate the call.

Answering and rejecting a call

When your phone rings touch **Accept** or press the  hard key to answer the call.

While your phone is ringing, activate the InteractPad by opening your handset or pressing the camera key, then touch **Silent** to mute the ringing. This is great if you've forgotten to change your profile to Silent for a meeting.

Press the  hard key or **Reject** to reject the incoming call.

TIP! You can change the settings on your phone to answer your calls in different ways. Touch , select  and choose **Call**. Select **Answer mode** and choose from **Slide open**, **Any key** or **Accept key only**.

01

02

03

04

05

06

07

08

09

10


11

12

13

Calls

In-call options

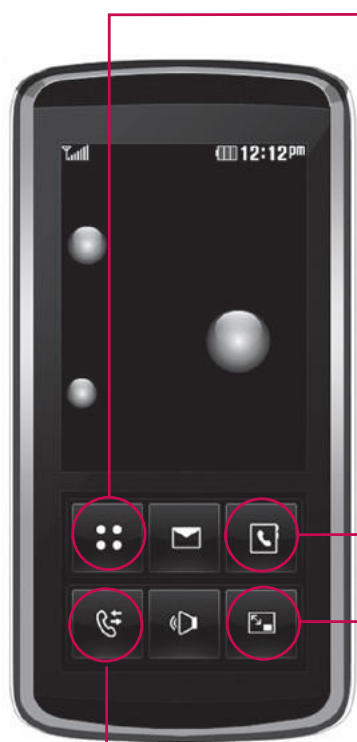

Options - Choose from a list of further in-call options, including **Contacts** and **Messaging** so you can check your messages and add contacts during a call.

End - Touch to end the call.

Mute - Touch **Mute** to turn off the microphone so the person you are talking to cannot hear you.

Speaker - Touch  to turn on the speaker phone.

Adjusting the call volume

To adjust the volume during a call, press the volume keys on the left-hand side of your phone and then use the arrow keys on the InteractPad.

Speed dialling

You can assign a frequently-called contact to a speed dial number.

- 1 Touch  and select  using the InteractPad arrows.
- 2 Select **Speed dials**.
- 3 Your voicemail is already set to speed dial 1. You cannot change this. Select any other number either by using the InteractPad arrows and touching **Assign** or by pressing the hard key number.
- 4 Your address book will open. Select the contact you'd like to assign to that number using the InteractPad arrows, then touch **OK**.

To call a speed dial number, press and hold the assigned number until the contact appears on screen. The call will initiate automatically; there's no need to press .

Viewing your call logs

Touch . Choose to view:

All calls - View the complete list of all your dialled, received and missed calls.

Missed calls - View the list of any calls you have missed.

Dialled calls - View the list of all the numbers you have called.

Received calls - View the list of all the numbers that have called you.

Call duration - View details of how long you have spent on your calls.

Call costs - View the charges applied to your dialled numbers (this service is network dependent, some operators are unable to support this) and the call duration of all your calls; received and dialled.

Data information - View the amount in kilobytes of all your received and sent data.

01

02

03

04

05

06

07

08

09

10

11

12

13

Calls

TIP! From any call log touch  to delete selected or all the recorded items.

TIP! Using the InteractPad arrows highlight any single call entry to view the date and time of the call. To view the call duration touch  and select **View**.

Using call divert

- 1 Touch , select  and choose **Call**.
- 2 Select **Call divert**.
- 3 Choose whether to divert all calls, when the line is busy, when there is no answer or when you are not reachable.
- 4 Choose whether to divert to voicemail, another number or your favourite number.
- 5 Enter your divert number or touch **Search** to browse for your divert number.

Note: Charges are incurred for diverting calls. Please contact your network provider for details.

TIP! To turn off all call diverts, choose **Cancel** from the **Call divert** menu.

Using call barring

- 1 Touch , select  and choose **Security**.
- 2 Select **Call Barring**.
- 3 Choose any or all of the six options:
 - All outgoing**
 - Outgoing international**
 - Outgoing international except home country**
 - All incoming**
 - Incoming when abroad**
 - Cancel all barrings**
 - Change password**
- 4 Select **Activate** and enter the call barring password. Please check with your network operator for this service.

TIP! Select **Fixed dial number** from the **Security** menu to turn on and compile a list of numbers which can be called from your phone. You'll need your PIN2 code from your operator. Only numbers included in the fixed dial list can be called from your phone.

Changing the call setting

- 1 Touch , select  and choose **Call**.
- 2 From here you can amend the settings for:
Call divert— Choose whether to divert your calls.

Answer mode— Choose whether to answer the phone using the accept key, any key or by sliding your handset open.

Send my number — Choose whether your number will be displayed when you call someone.

Call waiting- Be alerted when you have a call waiting.

Minute minder— Select **On** to hear a tone every minute during a call.

Auto redial — Choose **On** or **Off**.

Send DTMF tones — Choose **On** or **Off**

Searching for a contact

- 1 Touch , select  and choose **Search**.
Or, using the slightly quicker method...

- 1 Touch .
- 2 Using the keypad enter the first letter of the contact you want to call. So, for Office, press **6** three times.
- 3 To scroll through the contacts and their different numbers use the arrows on the InteractPad.

Adding a new contact

- 1 Touch , select  and choose **New Contact**.
- 2 Choose whether to store your new contact on your **Phone** or **SIM** card.
- 3 Enter all the information you have and touch **Save**.

Or, using the slightly quicker method...

- 1 Enter the number you wish to store and touch .
- 2 Select **Save as new contact** or **Add to existing contact**.
- 3 Enter the relevant information as above and touch **Save**.

01

02

03

04

05

06

07

08

09

10

11

12

13

Calls

Note: When it comes to storing a contact's email address, an option will appear on the InteractPad to enter a symbol. Touch **Symbol** and scroll with the InteractPad arrows until you see @.

Contact options

There are many things you can do when viewing a contact. Here's how to access and use the options menu:

- 1 Open the contact you'd like to use.
See **Searching for a contact** above.
- 2 Touch  to open the list of options.
From here you can:
View - Browse the details you hold for this contact.
Edit - Change any of the contact's details.

New message- Send a message to the contact. If the contact has an email address, select whether you'd like to send a **Text, Multimedia** or **Email** message. See page 27 for details on how to send messages.

Send via- Send the contact's details to another person as a business card. Choose to send as a **Text message, Multimedia message**, via **Bluetooth** or **Email**.

Delete - Delete the contact. Touch **Yes** if you are sure.

New contact - Add a new contact.

Multi delete - Mark multiple contacts to delete.

Copy to SIM/Phone- Choose to move or copy to the SIM card or phone (depending on where you originally saved the contact).

Main number – If more than one is listed, select which of the contact's numbers is preferred.

Adding a contact to a group

You can collect your contacts into groups, keeping your work colleagues and family separate, for example. There are a number of groups including **Family**, **Friends** and **Colleagues** already set up on the phone.

- 1 Touch , select  and choose **Groups**.
- 2 Scroll to the group you wish to add a contact to and touch **Add member**.
- 3 Your contacts will open. Scroll to any contacts you would like to add to the group and touch , then **Done**.

TIP! You can assign a ringtone or icon to a group. Select the group you wish to assign the ringtone or icon to and touch .

Renaming a group

You can rename any of the groups to fit your lifestyle.

- 1 Touch , select  and choose **Groups**.
- 2 Highlight the one you want to rename.
- 3 Touch , select **Rename** and enter your new group name.
- 4 Touch **Save**.

Note: You can only assign a contact to a group or add a picture to a contact that is saved on your Phone (not SIM) memory.

Adding a picture to a contact

You can change the appearance of your contacts in your address book to include a picture.

- 1 Touch , select  and choose **Settings**.
- 2 Select **View Options** and choose **With picture**.
- 3 Then return to the address book and select the contact you want to add a picture to.

01

02

03

04

05

06

07

08

09

10

11

12

13

Calls

- 4 Touch  and select **Edit**.
- 5 Scroll down to the Photo section.
Touch  and select **New Picture**.
Your camera viewfinder will open, so you can take a picture of your contact

Copying your contacts to your SIM

You can also choose to copy your contacts from your SIM to your handset or from your handset to your SIM.

- 1 Touch , select  and choose **Copy All**.
- 2 Select to copy the contacts from **SIM to phone** or **Phone to SIM**.
- 3 Choose whether to keep the original records or delete them.

Deleting all your contacts

- 1 Touch , select  and choose **Delete All**.
- 2 Select to delete contacts from **SIM** or **Phone**.
- 3 Touch **Yes** if you are sure.

Viewing information

- 1 Touch , select  and choose **Information**.

From here you can view your **Service dial numbers**, your **Own number** and **My business card**.

TIP! If you haven't yet created a business card, the **My business card** screen will give you the option to create one. Touch **New** and enter your details as you would for any contact. Touch **Save**.

Messaging

Messaging

Your KF600 combines SMS, MMS and email into one intuitive and easy to use menu. Simply touch  and select .

Sending a message

The quick way to begin sending an SMS message is to touch  and go straight to step 4 below. Otherwise:

- 1 Touch , select  and then **New message**.
- 2 Choose to send a **Text** or **Multimedia**.
(If you want to send an **Email** see page 28-29 or if you want to send something using **Bluetooth**, see page 60).
- 3 A new message will open.
- 4 Enter your message using T9 predictive, Abc manual or Handwriting recognition. See **Entering text** below to see how to switch between the different text entry modes.
- 5 Touch **Insert** to add an image, video, sound or symbol.
- 6 Touch **Send to**.

- 7 Enter the phone number or touch **Contacts** to open your contacts list.
You can add multiple contacts.

- 8 Touch **Send**.

Entering text

There are three ways to enter text: T9 predictive, Abc manual and Handwriting recognition.

To turn on T9 predictive text, begin a new message, press , select **T9 languages** and choose **T9 on**. With T9 on, you can switch between T9 predictive, Abc manual and numbers by pressing #.

To turn on Handwriting recognition, begin a new message, press  and select **Handwriting**.

T9 predictive

T9 mode uses a built-in dictionary to recognise words you're writing based on the key sequences you touch. Simply touch the number key associated with the letter you want to enter, and the dictionary will recognise the word once all the letters are entered. For example, press 8, 3, 5, 3, 7, 4, 6, 6, 3 to write 'telephone'.

01

02

03

04

05

06

07

08

09

10

11

12

13

Messaging

If the word you want doesn't appear, touch  and select **New T9 word**. Enter the word using Abc manual mode and your word or name will be added to the dictionary.

Abc manual

In Abc mode you must touch the key repeatedly to enter a letter. For example, to write 'hello', touch 4 twice, 3 twice, 5 three times, 5 three times again, then 6 three times.

Handwriting recognition

In Handwriting mode you simply write on the InteractPad and your KF600 will convert your handwriting into your message.



WARNING: You will be charged per 160 character text message for each person that you send the message to.

Setting up your email

You can stay in touch on the move using email on your KF600. It's quick and simple to set up a POP3 or IMAP4 email account.

1 Touch , select  and then **Settings**.

2 Select **Email** then **Email accounts**.

3 Touch **New**.

4 You can now choose how your account works:

Account name - Enter a name for this account.

Email address - Enter the account's email address

My name - Enter your name.

Incoming mail server - Enter the account's details

Username - Enter the account's username.

Password - Enter the account's password.

Outgoing mail server - Enter the account's details.

Outgoing mail authentication - Select on or off.

Outgoing server ID - Enter the account's details.

Outgoing server password - Enter the account's details

To enter the following information, touch  and select **Advanced settings**.

Protocol type - Enter the mailbox type, POP3 or IMAP4

Maximum receive size - Choose the size limit of your emails, the maximum is 300KB.

Save to server - Choose whether to save your emails to the server. For IMAP4 accounts copies are always saved.

Insert signature - Choose whether to automatically insert a signature in your emails.

Reply email address - Enter the “reply to” email address.

Incoming port number - Normally, this is 110 for POP3 accounts and 143 for IMAP4 accounts.

Outgoing port number - Normally this is 25.

Auto retrieving - Select to automatically retrieve your emails.

Retrieve download - Select **Headers only** or **All**.

Now your account is set up, it will appear in the list of accounts in your Email folder.

Retrieving your email

You can automatically or manually check your account for new email. See **Change your email settings** to check automatically.

To check manually:

- 1 Touch  , select **Messaging** and then **Email**.
- 2 Highlight the account you want to use then touch .
- 3 Choose **Retrieve** and your KF600 will connect to your email account and retrieve your new messages.

01

02

03

04

05

06

07

08

09

10

11

12

13

Messaging

Sending an email using your new account

To send/receive an email, you should set up the email New account.

- 1 Make a subject and write your message
Press  to attach images, videos, sounds or other file types
- 2  press Send to then enter the recipients address
- 3 Touch Send and your email will be sent.
- 4 Use the tabs and to enter the recipients address and write your message. Use the Files tab to attach images, videos, sounds or other file types.
- 5 Touch Send and your email will be sent.

TIP! You can email Word, Excel, PowerPoint and PDF documents to your KF600 so you can review them on the move.

Changing your email settings

You can adapt your email settings so that it works in the way you prefer.

- 1 Touch , select **Messaging** and then **Settings**.
- 2 Select **Email** then **Email accounts** and then you can adapt the following settings:
 - Allow reply email**- Choose to allow the sending of 'read confirmation' messages.
 - Request reply email**- Choose whether to request 'read confirmation' messages.
 - Retrieve interval** - Choose how often your KF600 checks for new email messages.
 - Include message in Fwd.& Reply**
 - Choose to include the original message or not.
 - Include attachment** - Choose to include the original attachment.
 - Auto Retrieval in Roaming**- Choose to auto retrieve your messages when abroad, or stop auto retrieval.
 - New Email noti. Info** - Choose whether to be alerted to new emails.
 - Signature**- Create an email signature and switch this feature on.
 - Priority** - Choose the priority level of your email messages.

Message folders

Touch , select . You'll recognise the folder structure used on your KF600, it's fairly self-explanatory.

Inbox - All the messages you receive are placed into your inbox. From here you can reply, forward and more, see below for details.

Mailbox - The mailbox folder contains your email folders.

Drafts - If you don't have time to finish writing a message, you can save what you've done so far here.

Outbox - This is a temporary storage folder while messages are being sent.

Sent items - All the messages you send are placed into your Sent items folder.

Info messages - All info messages and updates received from your operator

Templates - A list of useful messages, already written for a quick reply.

You can also access your voicemail from here by selecting **Listen to voicemail** and your messaging settings by selecting **Settings**.

Managing your messages

You can use your Inbox to manage your messages.

1 Touch , select **Messaging** and then **Inbox**.

2 Touch  and then choose to:

Reply - Send a reply to the selected message.

Forward - Send the selected message on to another person.

Return call - Call the person who sent you the message.

Information - View the details of a message, for example, the time it was sent.

Multi Delete - Delete selected messages.

Delete all read - All opened messages will be deleted.

Delete all - You can select whether to delete all of certain types of messages.

If you see the message **No space for SIM message** you should delete some messages from your inbox.

If you see the message **No space for messages** you can delete either messages or saved files to create space.

01

02

03

04

05

06

07

08

09

10

11

12

13

Messaging

Using templates

You can create templates for the SMS and MMS messages you send most frequently. You'll find some templates already on your phone, you can edit these if you wish.

- 1 Touch , select **Messaging** and then **Templates**.
- 2 Choose **Text templates** or **Multimedia templates**. You can then touch **Edit** to change existing templates or touch  to add **New** or **Delete** templates.
- 3 To send a template, select the one you want to send, touch  and select **Send via**.
- 4 Choose how you'd like to send the template; as an SMS, MMS or email.
- 5 Select a contact and touch **Send**.

Changing your text message settings

Your KF600 message settings are pre-defined so that you can send messages immediately.

If you'd like to change the settings, see below for more information.

Touch , select **Messaging**, then choose **Settings** and **Text message**. You can make changes to:

Message types - Convert your text into Voice, Fax, Paging, X.400 Email or ERMES.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to receive confirmation that your message was delivered.

Reply charging - Choose to be billed for your message recipient's reply.

Message centre number - Enter the details for your message centre.

Character encoding - Choose how your characters are encoded, this impacts the size of your message and therefore data charges.

Bearer setting - Choose whether to send your messages via GSM or GPRS.

Changing your multimedia message settings

Your KF600 message settings are pre-defined so that you can send messages immediately.

If you'd like to change the settings, see below for more information.

Touch , select **Messaging**, then choose **Settings** and **Multimedia message**.

You can make changes to:

Subject - Include a subject field in your Multimedia messages.

Slide duration - Choose how long your slides appear on screen.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Delivery report - Choose to allow and/or request a delivery report.

Read report - Choose to allow and/or send a read report.

Auto download - Choose to automatically or manually download multimedia messages depending on whether you are at home or roaming.

Network profile - Select a operator specific network profile for the sending of multimedia messages.

Permitted messages - Select which type of senders to allow multimedia messages from.

Note: See page 30 for details on how to change your email settings.

Changing your other settings

Touch , select **Messaging**, choose **Settings** then:

Voicemail number - Your voicemail number is stored here. Contact your network operator for more information on the service they provide.

Service message - Here you can switch off Push message, which means your messages will no longer be pushed directly to your device as they are received, only when you check for new messages.

Info message - Choose the reception status, alerts and language of your info messages.

01

02

03

04

05

06

07

08

09

10

11

12

13

Camera

Taking a quick photo

- 1 Press the  key on the right hand side of the handset and the camera's viewfinder will appear on screen.
- 2 Holding the phone horizontally, point the lens towards the subject of the photo.
- 3 Touch **Capture** or press the  key on the right side of the handset to take a photo. A focus box will appear in the centre of the viewfinder screen, position the phone so you can see the subject of your photo in the focus box. When the focus box turns green, the camera has focused on your subject and will take the photo.

The file name of captured picture means the current date and time.

ex) YYMMDDhhmmss (Y : Year / M : Month / D : Day / h : Hour / m : Minute / s : Second)

After you've taken your photo

Your captured photo will appear on screen. The name of the image runs along the bottom of the screen and you'll see four options displayed on the InteractPad.

 - Touch to open a sub menu where you can choose to take a New Photo, set your image as **Wallpaper** or **Picture ID**, or look at the other photos in your Album.

Back - Touch to take another photo straightaway. Your current photo will be saved.

Delete - Touch to delete the photo you have just taken. The viewfinder will reappear.

Send via - Touch to send the photo as an MMS or Email attachment. See page 27 for sending a message.

Getting to know the viewfinder

When you open the viewfinder, you'll see five options displayed on the InteractPad.

 - Touch here to bring up a toolbar of advanced options.

 - Touch here to return to the standby screen.

Capture - Touch here to take a photo.

 - Touch here to adjust the brightness.

Use the controls that appear on the InteractPad and touch **OK** when you're happy with the settings.


 - Touch here to adjust the zoom.

Use the controls that appear on the InteractPad and touch **OK** when you're happy with the settings.

Note: The zoom function is only available when the resolution is set to 640 x 480 or below. See Changing the image size on page 37 for details.

Using your toolbar of options

Touching  will display a new toolbar of options across the bottom of the viewfinder screen. Use the arrows on the InteractPad to navigate through the options.

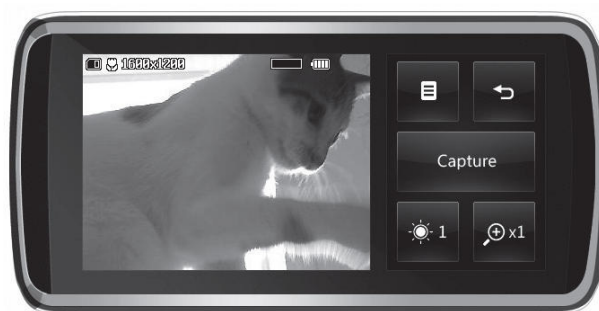

 **Go to** – Choose to view the photos in your **Album** or to switch to **Video camera** mode.

 **Shot mode** – See Choosing a shot mode on page 36.

 **Resolution** – See Changing the image size on page 37.

 **Quality** - Choose between **Normal**, **Fine** and **Super fine**. The finer the quality the sharper a photo will be but the file size will increase as a result, which means you'll be able to store fewer photos in your memory.

 **Portrait enhancer** – Select **On** for a better portrait.

01

02

03

04

05

06

07

08

09

10

11

12

13

Camera

 **Flash** – Turn the flash **On** or **Off**.

The flash is set to **Off** as default, saving battery power. Whenever you exit the camera it will return to the default Off setting.

 **Shake reduction** – Select **On** to compensate for unsteady hands.

 **Self timer** - The self-timer allows you to set a delay after the capture button is pressed. Choose from **3 seconds**, **5 seconds** or **10 seconds**. Great for that group photo you want to be part of.

 **Save to** - Choose whether to save your photos to the **Phone** memory or to the **External** memory.

 **Multi shot** - This enables you to take up to six shots automatically in very quick succession, great for taking photos of moving objects or at sporting events.

 **Auto focus** – Turn Auto focus **On** or **Off**. Alternatively select **Macro** to take extreme close-ups - If you are trying to take a close-up shot but the focus box remains red, try turning the macro mode on.

 **Colour effect** – Choose from four colour tone options: **Off** (normal/colour), **Sepia**, **Mono** (black and white) or **Negative**.

 **White balance** - The white balance ensures that any white in your photos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy** or **Fluorescent**.

 **Shutter tone** - Select one of the three shutter sounds.

 **Reset settings** – Choose **Yes** to restart your phone to its original camera settings.

Choosing a shot mode

- 1 From the view finder touch  and select  from the toolbar to open the list of available shot types.
- 2 Choose from the five options:
 - Auto** - This is the default shot type, the photo will be taken in the normal way, as outlined in taking a quick photo.
 - Portrait** - Choose this option when photographing people or pets.
 - Scene** - This shot type is great for taking a photo of a large group of people or for capturing a panoramic view.
 - Sports** - This shot mode is ideal for photographing moving subjects.
 - Night** - Select this mode when taking photos at night.

- 3 Select the shot mode you'd like to use and touch **OK** to implement your changes. The settings menu will automatically close, ready for you to take your picture.

Changing the image size

Change the size of the photo to save on memory space. The more pixels, the larger the file size, which in turn means they take up more of your memory. If you want to fit more pictures on to your phone you can alter the pixel number to make the file size smaller.

- 1 Touch  and select  from the toolbar.
- 2 Select a pixel value from the six numerical options (QQ: 160X120, QV: 320X240, V: 640X480, 1M: 1280X960, 2M: 1600X1200, 3M: 2048X1536).
- 3 Select the size option you'd like to use and touch **OK** to implement your changes. The settings menu will automatically close, ready for you to take your picture.

.Viewing your saved photos

- 1 You can access your saved photos from within the camera mode and from the standby screen. From the viewfinder, simply touch  and select **Album** from the **Go to menu**. From the standby screen you should touch , then select  and Images.
- 2 Your gallery will appear on screen.
- 3 Use the arrows to select the photo you want to view and touch **View** to enlarge it.

Using zoom when viewing a photo

Touch  and use the thumbnail and options on the InteractPad to move the focus area and zoom in and out.

Setting a photo as wallpaper or Picture ID

Set the image to appear at certain times. From your image gallery, use the arrows on the InteractPad to select an image and touch Set as to use the selected image as wallpaper or Picture ID for one of your contacts.

Note: Picture ID can only be added to contacts saved to your phone, not your SIM.

01

02

03

04

05

06

07

08

09

10

11

12

13

Video camera

Shooting a quick video

- 1 Press the  key on the right hand side of the handset and the camera's viewfinder will appear on screen.
- 2 Touch  and select **Video camera** from the **Go to menu**. The video camera's viewfinder will appear on screen.
- 3 Point the camera lens towards the subject of the video.
- 4 Touch **Capture** once or press the  key on the right side of the handset to start recording.
- 5 **REC** will appear in the bottom left corner of the viewfinder and a timer will show the length of your video.
- 6 To pause the video touch **Pause** and resume by selecting **Resume**.
- 7 Touch **Stop** to stop recording.

Note: You can also access the Video camera from the standby screen. Touch  and select , scroll down to and select **Video camera** to open the viewfinder.

After you've shot your video

A still image representing your captured video will appear on screen. The name of the image runs along the bottom of the screen and three options will be displayed on the InteractPad.

Back Touch to shoot another video straight away. Your current video will be saved.

Delete Touch to delete the video you have just made and the viewfinder will reappear.

Send via Touch to send the video as an MMS or Email attachment. See page 27 for Sending a message.

Getting to know the viewfinder

When you open the viewfinder, you'll see five options displayed on the InteractPad.



- Touch here to bring up a toolbar of advanced options.



- Touch here to return to the standby screen.

Capture - Touch here to start recording.



- Touch here to adjust the brightness.

Use the controls that appear on the InteractPad and touch **OK** when you're happy with the settings.



- Touch here to adjust the zoom.

Use the controls that appear on the InteractPad and touch **OK** when you're happy with the settings.

Using your toolbar of options

Touching  will display a new toolbar of options across the bottom of the viewfinder screen. Use the arrows on the InteractPad to navigate the options.

 **Go to** – Choose to view the videos in



your Album or to switch to Camera mode.

 **Video mode** – To shoot a video you want to send in a multimedia message, select MMS.

 **Resolution** – If you want to fit more videos onto your phone you can alter the pixel number to make the file size smaller. Choose between two options for your video, 320 x 240 or 176 x 144.

 **Image quality** - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality the sharper a video will be, but the file size will increase as a result, which means you'll be able to store fewer videos in the phone's memory.

 **Flash** – Turn the flash **On** or **Off**. The flash is set to **Off** as default, saving battery power.

 **Save to** - Choose whether to save your videos to the **Phone** memory or to the **External** memory.

 **Colour tone** - Choose a colour tone to apply to the video you're taking. Choose from four colour tone options: **Off** (normal/ colour), **Sepia**, **Mono** (black and white) or **Negative**.

 **White balance** - The white balance ensures that any white in your videos is realistic. In order for your camera to correctly adjust the white balance you may need to determine the light conditions. Choose from **Auto**, **Daylight**, **Incandescent**, **Cloudy** or **Fluorescent**.

01

02

03

04

05

06

07

08

09

10

11

12

13

Video camera



Reset settings – Choose **Yes** to restart your phone with it's original video camera settings.

TIP! The settings menu is superimposed over the viewfinder, so when you change elements of the image colour or quality you'll be able to see the image change in preview behind the settings menu.

Adjusting the volume when viewing a video

To adjust the volume of the audio on a video whilst it is playing, use the keys on the left side of the handset.

Watching your saved videos

- 1 You can access your saved videos either from within video camera mode or from the standby screen. From the viewfinder, simply touch  and select **Album** from the **Go to** menu. From the standby screen you should touch , then select  and **Videos**.
- 2 Your gallery will appear on screen.
- 3 Use the arrows to select the video you want to view and touch  to watch it.

My stuff

You can store any multimedia files into your phone's memory so that you have easy access to all of your pictures, sounds, videos and games. You can also save your files to a memory card. The advantage of using a memory card is that you can free up space on your phone's memory.

All your multimedia files will be saved in My Stuff. To access my stuff, touch  then  to open a list of folders storing all of your multimedia files.

Images

Images contains a folder of default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

Images option menus

The options which are available to you in **images** depend on what type of image you have selected. All of the options will be available for pictures you have taken on the phone's camera, but only the **File info**, **Print via**, **Slide show**, **Sort by** and **Thumbnail / List view** options are available for default images.

In the images folder, touch  to bring up your list of options.

Delete - Delete the selected image.

Send via - Send the selected image to a friend via MMS, Bluetooth or Email.

Note: The image may need to be resized before it can be sent by MMS.

File - Rotate, rename or view the information (Name, Size, Date, Resolution, Type and Copyright) of the selected image. If you have an external memory card inserted two additional options will show: **Move to external memory** and **Copy to external memory**.

01

02

03

04

05

06

07

08

09

10

11

12

13

My stuff

Print via - Print an image file via PictBridge or Bluetooth®.

Slide show - See Creating a slide show on page 44.

New folder - Create a new folder within the main Images folder.

Multi-delete - Select more than one image before touching **Delete**.

Delete all - Delete all the photos in your Images folder.

Sort by - Arrange your images by Date, Type or Name.

List view / Thumbnail View - Change the way you view your photos.

Sending a photo

- 1 Touch  then select .
- 2 Scroll to and select **Images**.
- 3 Select a photo and touch .
- 4 Touch **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**.
- 5 If you choose **Multimedia message** or **Email**, your photo will be attached to the message and you can write and send the message as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on and your phone will search for a device to send the picture to.

Organising your images

- 1 Touch  then select .
- 2 Scroll to and select **Images**.
- 3 Touch  then **Sort by**.
- 4 Choose from **Date**, **Type** or **Name**.

Deleting an image

- 1 Touch  then select .
- 2 Scroll to and select **Images**.
- 3 Select an image and touch .
- 4 Touch **Delete**.

Deleting multiple images

- 1 Touch  then select .
- 2 Scroll to and select **Images**.
- 3 Touch  and select **Multi delete**.
- 4 A box will appear next to each image. Select the image and touch  to mark it. To unmark an image, touch the  again so that the tick disappears from the box.
- 5 Once you have marked all of the appropriate boxes, touch **Delete** and confirm you want to delete all of the marked images.

Creating a slide show

If you want to look at all of the images on your phone or scan through what you've got, you can create a slide show to save you from having to open and close each individual image.

- 1 Touch  then select .
- 2 Scroll to and select **Images**.
- 3 Select the photo you would like to begin the slideshow and touch .
- 4 Select **Slide show** and it will begin.
- 5 Touch **Pause** to pause the slide show and **Quit** to end the slide show and return to the Images folder.

Touching  during the slide show presents further options:

View - Choose between **Full image** and **Full Screen**. Select **Landscape** to change the orientation of the image.

Repeat on / off - Decide whether you want the slide show on repeat or not.

Sounds

The **Sounds** folder contains the **Default sounds** and your voice recordings. From here you can manage, send or set sounds as ringtones.

Using a sound

- 1 Touch  then select .
- 2 Scroll to and select **Images**.
- 3 Select **Default sounds** or choose from the list of voice recording files.
- 4 Select a sound and touch  to listen to it.
- 5 Touch **Set as** and choose from **Ringtone** and **Ringtone ID**.

Videos

The My videos folder shows the list of downloaded videos and videos you have recorded on your phone.

Watching a video

- 1 Touch  then select .
- 2 Scroll to and select **Videos**.
- 3 Select a video and touch .

01

02

03

04

05

06

07

08

09

10

11

12

13

My stuff

Using the video options menu

In the Videos folder, touch  to bring up the following list of options.

Delete - Delete the selected video.

File - Rename the video, move it to another folder or view the information (Name, Size, Date, Resolution, Type and Copyright).

New folder - Create a new folder within the main Videos folder.

Multi-delete - Select more than one video clip before touching **Delete**.

Delete all - Delete all the clips in your Videos folder.

Sort by - Arrange your videos by Date, Type or Name.

List view / Thumbnail View - Change the way you view your videos.

Documents

From the Documents menu, you can view all of your document files. From here you can view Excel, PowerPoint, Word, Text and PDF files.

Games and Apps

Your KF600 comes with preloaded games to keep you amused when you have time to spare. If you choose to download any additional games or applications they will be saved into this folder.

Playing a game

- 1 Touch  then select .
- 2 Scroll to and select **Games & Apps**.
- 3 Select **Games**.
- 4 Select the game of your choice and touch **Play**.

Using the games options menu

In the Games folder, touch  to bring up the following list of options.

Play – Select this to play the game.

Information - View the Name, Version, Vendor, Jar-size and Domain of the file.

Others

The **Others** folder is used to store files which are not pictures, sounds, videos, games or applications. It is used in the same way as the **Documents** folder.

You may find that when you transfer files from your computer to your phone that they appear in the **Others** folder rather than the **Documents** folder. If this happens you can move them.

To Move a file from Others to Documents:

- 1 Touch , then  followed by **Others**.
- 3 Select a file and touch .
- 4 Touch **Move**, then touch **Move** again.

External memory

If you've inserted a memory card it will be displayed as a folder within My stuff. Your external memory folder will be divided into five further folders: Images, Sounds, Videos, Documents and Others. Each folder will contain all the files of that type which are saved to your memory card rather than your handset.

Using your phone as a Mass storage device

Your KF600 can be used as a mass storage device, just like a USB stick. This is a great way of moving your files from your computer to your phone. If you've inserted a memory card, when connecting as Mass storage, it will be displayed as two drives on your computer. The handset memory and external memory.

- 1 Touch , select  then **Connectivity**.
- 2 Select **USB Connection**.
- 3 Scroll to **Mass storage** and touch **OK**.
- 4 Insert the smaller end of the USB cable into the USB cable connector on the edge of the KF600. Plug the larger end into the USB port of your computer.
- 5 A removable disk folder will open automatically, two if you have a memory card inserted, showing all the folders on your phone or memory card.
- 6 Drag and drop your images, videos, music or documents into the correct folders.

01

02

03

04

05

06

07

08

09

10

11

12

13

My stuff

- 7 Safely remove your phone by clicking on the **Safely remove hardware** icon in your desktop toolbar.
- 8 To access your images, for example touch , then select  followed by **External memory** then **Images**. All the images you just transferred will be contained

Transferring a file to your phone

You can also transfer files from your computer to your phone using Bluetooth.

- 1 Make sure your phone and computer have Bluetooth switched on and are visible to one another.
- 2 Use your computer to send the file via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file will be saved within the appropriate folder depending on its type. So for example, photographs will be saved in the Image folder and music in the Sounds folder. If your phone cannot identify the file type, the file will be saved in the Others folder.

Note: Files sent using Bluetooth will be saved to the phone memory.

Viewing a file

- 1 Touch , then .
- 2 Select **Documents**.
- 3 Select a document and touch **View**.

Multimedia

MP3 player

Your LG KF600 has a built-in MP3 player so you can play all your favourite music. To access the MP3 player, touch  and select  then **MP3 Player**. From here you have access to:

All songs - Contains all of the songs you have on your phone.

My playlist - Contains any playlists you have created as well as **On the go list**, **Recent songs**, and **Favourite songs**.

Settings - Adjust your music settings.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or your sync cable. To transfer using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are visible to one another.
- 2 Select the music file on the other device and choose to send it via Bluetooth.
- 3 When the file is sent you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **MP3 Player** > **All songs**.

Playing a song

- 1 Touch  and select .
- 2 Choose **MP3 Player**.
- 3 Select All songs and then the song you want to play. Touch .
- 4 Touch  to pause the song.
- 5 Touch  to skip to the next song.
- 6 Touch  to skip to the previous song.
- 7 Touch  to hide the music player screen so that you can continue using your phone as normal while music is playing.
- 8 Touch  to stop the music and return to the music menu.

Using options while playing music

Touch  and choose from:

View playlist - Look at the playlist you are currently listening to.

Settings - Change the **Equalizer** or **Play mode** or **Set shuffle** on to mix up the music.

TIP! To change the volume while listening to music, use the volume keys on the side of your phone.

01

02

03

04

05

06

07

08

09

10

11

12

13

Multimedia

Creating a playlist

You can create your own playlists by choosing a selection of songs from the **All songs** folder.

- 1 Touch  and select .
- 2 Choose **MP3 Player**, then **My playlist**.
- 3 Touch **New**, enter the playlist name and touch **Save**.
- 4 The **All songs** folder will show. Select all of the songs that you would like to include in your playlist by scrolling to the ones you want and touching ; a tick will show next to their name. If you accidentally add a song you don't want, select it and touch  again to untick it.
- 5 Touch **Save** to store the playlist.

Playing a playlist

- 1 Touch  and select .
- 2 Touch **MP3 Player**, then **My playlist**.
- 3 Select the playlist you would like to play and touch View, then .

Editing a playlist

From time to time, you may want to add new songs or delete songs from a playlist. You may also want to organise your playlists. When you want to do this, you can edit the playlist.

- 1 Touch  and select .
- 2 Choose **MP3 Player**, then **My playlist**.
- 3 Scroll to the playlist you want to edit and touch **View**, then . Choose from:
 - Play** – Play the playlist.
 - Add** – You can add or delete songs from the playlist using this option.
 - Remove** – Remove a song from the playlist. Touch **Yes** to confirm.
 - Move up/Move down** – Move the song up or down the list to change the playing order.
 - Multi delete** – Delete songs from the playlist.
 - Remove all** – Remove all of the songs from the playlist.
 - Information** – View the playlist information.

Deleting a playlist

- 1 Touch  and select .
- 2 Choose **MP3 Player**, then **My playlist**.
- 3 Scroll to the playlist you want to delete and touch .
- 4 Select **Delete** and touch **Yes** to confirm.

Voice recorder

Use your **voice recorder** to record voice memos or other sounds.

- 1 Touch  and select .
- 2 Choose **Voice recorder**.
- 3 Touch  to begin recording.
- 4 Touch **Pause** to pause the recording.
- 5 Touch **Stop** to end the recording.
- 6 Touch  and select **Play** to listen to the recording or touch **Delete** to delete it.

Note: You can listen to all of the voice recordings you have saved by touching **Album**.

Sending the voice recording

- 1 Once you have finished recording, touch .
- 2 Select **Send via** and choose from **Multimedia message**, **Bluetooth** or **Email**. If you choose **Message** or **Email**, the recording will be added to the message and you can write and send it as normal. If you choose **Bluetooth**, you will be prompted to turn Bluetooth on.

TIP! If you plan to send your recording as a message, before you start recording, touch [options] and select **Recording mode**. Choose **MMS**. This will ensure that the recording fits into a message.

Using the radio

Your LG KF600 has an FM radio feature so you can tune into your favourite stations to listen to on the move.

Note: You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket (this is the same socket that you plug your charger into).

01

02

03

04

05

06

07

08

09

10

11

12

13

Multimedia

Searching for stations

You can tune radio stations into your phone by searching for them either manually or automatically. They will then be saved to specific channel numbers so you don't have to keep re-tuning. You can save up to 12 channels in your phone.

To auto tune:

- 1 Touch  and select .
- 2 Choose **FM radio**.
- 3 Touch **Auto scan** then **Yes**.
- 3 Each time a station is found, your KF600 will ask if you want to save it. Touch **Yes** if you want to store the channel and **No** if you don't. Any stations you choose to save will automatically be allocated to a channel number in your phone.

To manually tune:

- 1 Touch  and select .
- 2 Choose **FM radio**.
- 3 Select a channel number that you want to save a station to and touch **Edit**.
- 4 To enter your station, you can either use the arrows on the InteractPad to search for the frequency, or you can enter the frequency using the keypad.
- 5 Touch **Save**.

Note: You can also edit the stations you have saved in a channel number by using the same **Edit** feature you use to manually tune in stations.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

Resetting channels

- 1 Touch  and select .
- 2 Choose **FM radio**.
- 3 Touch  and select **Reset channels**.
Touch **Yes** to confirm the reset. Each channel will return to the starting 87.5Mhz frequency.

Listening to the radio

- 1 Touch  and select .
- 2 Choose **FM radio**.
- 3 Select the channel number of the station you would like to listen to.

01

02

03

04

05

06

07

08

09

10

11

12

13

Organiser

Adding an event to your calendar

- 1 From the standby screen touch , and select , then **Calendar**.
- 2 Select the date you would like to add an event to. You can choose a date either by scrolling to it using the InteractPad arrows or by touching  and manually entering the date.

Note: Once you've already got an event saved in your calendar, you will need to select **Go to date** after touching  in order to enter a date to set your event to.

- 3 Touch **New** and enter the time you would like your event to begin. Scroll down using the InteractPad arrows and enter the end time of your event.
- 4 Scroll down again and choose whether you would like to set an **Alarm** for the event. Scroll left or right to see the available options. You can select for the alarm to go off at the starting time of the event or at a set period of time before the event starts to remind you the event is coming up.
- 5 Scroll down and enter a **Subject** for the event. Use the keypad to type letters and numbers.

- 6 Scroll down once more to select whether the event is a one-off or if it is to be repeated at **Daily**, **Monthly** or **Yearly** intervals. If the event is repeated, you can also scroll down to enter an **Expiration date** for when the events will stop completely.
- 7 Touch **Save** and your event will be saved in the calendar. A triangular cursor will mark the days that any events have been saved to.

Editing a calendar event

- 1 From the standby screen touch , and select , then **Calendar**.
- 2 Press  and select **All schedules** to see a list of all your events. Scroll to the event you would like to edit and touch **View**. Alternatively select the day of the event in the calendar and touch **View**.
- 3 Touch **Edit** and scroll to the event detail you want to change. Make your modifications and touch **Save** to store the edited event.

Note: You can delete an event from your calendar by selecting to view the event and then touching **Delete**.

Sharing a calendar event

- 1 From the standby screen touch , and select , then **Calendar**.
- 2 Select the event you would like to share and touch .
- 3 Choose **Send via** and select from **Text message**, **Multimedia message**, **Bluetooth** or **Email**.

Setting your alarm

- 1 From the standby screen touch , and select , then **Alarm clock**.
- 2 Touch **New**.
- 3 Scroll down and enter the time you would like the alarm to sound at.
- 4 Choose whether you would like your alarm to sound **Once**, **Daily**, **Mon - Fri**, **Mon - Sat** or **Sat - Sun**.
- 5 Scroll down and choose whether you would like the alarm to **Follow profile**, **Always sound** or **Always vibrate**.
- 6 Scroll down to choose the alarm sound. Touch **Search** to select a new sound.
- 7 Scroll down and enter a name for the alarm or keep the suggested name.
- 8 Touch **Save**.

Note: You can set up to 5 alarms.

Adding a memo

- 1 From the standby screen touch , and select , then **Memo**.
- 2 Touch **New** and type your memo.
- 3 Touch **Save**.
- 4 Your memo will appear on screen the next time you open the **Memo** application.

Tip! You can edit an existing memo. Select the one you want to edit, touch , and select **Edit**.

Using your calculator

- 1 From the standby screen touch , and select , then **Calculator**.
- 2 Touch the numeric keys to input numbers.
- 3 For simple calculations, touch the function you require (+, -, *, /), followed by =.
- 4 For more complex calculations, touch  to select a command.
- 5 Touch **AC** to clear the screen to start a new calculation.

01

02

03

04

05

06

07

08

09

10

11

12

13

Organiser

Adding a city to your world clock

- 1 From the standby screen touch , and select , then **World clock**.
- 2 Scroll up, down, left or right to navigate the globe and choose a continent.
- 3 Touch  to zoom into an area and choose from the cities in that area.
- 4 Touch **Set**.

Converting a unit

- 1 From the standby screen touch , and select , then **Unit converter**.
- 2 Choose whether you would like to convert **Currency, Area, Length, Weight, Temperature, Volume** or **Velocity**.
- 3 Scroll up to choose from the unit of measurement you want to enter. Scroll left and right to select a unit, then scroll down and enter the unit quantity.
- 4 Scroll down to the unit conversion box and choose the unit measurement you want to convert into. The conversion will show automatically in the line below.

Using the stopwatch

- 1 From the standby screen touch , and select , then **Stop watch**.
- 2 Touch **Start** to begin the timer.
- 3 Touch **Lap** if want to record a lap time.
- 4 Touch **Stop** to end the timer.
- 5 Touch **Resume** to restart the stopwatch at the time you stopped it at or touch **Reset** to begin the time again.

Browser

With browser at the tip of your fingers, you can get the up to date news and weather forecast as well as information on sports or traffic whenever you need it. In addition, browser allows you to download the latest music, ringtones, wallpapers and games.

Accessing the web

- 1 From the standby screen select  then Browser.
- 2 To access the browser homepage directly, select **Home**. Alternately select **Enter address** and type in your desired URL, followed by **Connect**.

Note: An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network provider.

Adding and accessing your bookmarks

For easy and fast access to your favourite websites, you can add bookmarks and save web pages.

- 1 From the standby screen select  then Browser.
- 2 Select **Bookmarks**. A list of your Bookmarks will appear on the screen.
- 3 To add a new bookmark, select  and touch **New bookmark**. Enter a name for your bookmark followed by the URL.
- 4 Touch **Save**. Your Bookmark will now appear in the list of bookmarks.
- 5 To access the bookmark simply scroll to the required bookmark and touch **Connect**. You will be connected to your bookmarked page.

01

02

03

04

05

06

07

08

09

10

11

12

13

Browser

Saving a page

- 1 Access your required web page as described above.
- 2 Touch  and scroll to **Save**, select **This page**.
- 3 Touch **OK**.

TIP! This menu will also allow you to edit titles of saved pages, protect or unprotect the screen memo, and delete saved pages.

Accessing a saved page

- 1 From the standby screen select  then Browser.
- 2 Select **Saved pages**.
- 3 Select the required page and touch **Connect**.

Viewing your browser history

- 1 From the standby screen select  then Browser.
- 2 Select **History** and touch **OK**.
- 3 A list of web page titles you have accessed recently will be displayed. To access one of these pages, scroll to the required page and touch **Connect**.

Changing the web browser settings

- 1 From the standby screen select  then Browser. Select **Settings**.
- 2 You can choose the way your mobile handles, displays and uses information when browsing the internet. You can amend settings within **Network Profiles**, **Rendering mode**, **Cache**, **Cookie**, **Java script**, **Security certificates**, **show image**, **Java script** and **Storage location**.
- 3 Once you have changed your settings, select **OK**.

Settings

Within this folder you can adapt your settings to make your KF600 personal to you.

Note: For information on call settings see page 23.

Changing your screen settings

- 1 Touch  and select .
- 2 Select **Screen** and choose from:
 - Wallpaper** - Choose a wallpaper to appear on your screen display.
 - Backlight timer** - Choose how long the backlight remains on for.
 - Brightness** - Adjust the screen's brightness.
 - Home screen shortcut** - Change your standby screen shortcuts.
 - Theme** - Quickly change the whole look of your screen.
 - Menu style** - Change the menu view from **Grid view** to **List view** or vice versa.
 - Main font style** - Adjust the font type.

Dialling font style - Adjust the font style for when you are typing a phone number.

Standby text - Choose to add a message to your standby screen.

Network name - Choose to show or hide the network name.

Touchpad calibration - Reset your InteractPad for ease of use

Note: The longer the backlight is on for, the more battery power is used and you may need to charge your phone more often.

Personalising your profiles

You can quickly change your profile from the standby screen. Simply touch  then the profile you would like to activate. Choose from:

-  General
-  Silent
-  Vibrate only
-  Outdoor
-  Headset

01

02

03

04

05

06

07

08

09

10

11

12

13

Settings

Using the Settings menu you can personalise each profile setting.

- 1 Press  and select .
- 2 Choose the profile setting you want to edit and touch **Personalise**.
- 3 For the **Silent** and **Vibrate only** profiles, you can adapt the vibration. For the other profiles, you can change all of the sounds and alert options available in the list, including your **Ring tones** and **Ring Volume**, **Message alert type** and **Message tones**.

Changing your phone settings

Enjoy the freedom of adapting your KF600 so that it works in a way which suits you best.

Touch  and select . Choose from the list below:

Date & time - Adjust your date and time settings or choose to auto update the time when you travel.

Language - Change the language of your KF600's display.

Screen - Change your screen settings.

Connectivity - See Changing your connectivity settings for more information.

Call - See Call settings on page 23 for more information.

Security - See Changing your security settings on page 62 for more information.

Flight mode- Switch the flight mode **On** or **Off**. You will not be able to make calls, connect to the Internet, send messages or use Bluetooth when Flight mode is switched on.

Power save - Choose to set the power saving option **Always on**, on for **Night only** or **Off**.

Reset - Reset all the settings to their factory definitions.

Memory manager - See Using memory manager on page 60 for more information

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone from the off. If you want to change any settings, use this menu.

Touch  and select . Choose **Connectivity**. Your options are:

Bluetooth - Setup your KF600 for Bluetooth use. You can adapt your visibility to other devices or search through devices you're paired with.

Network - Your KF600 connects automatically to your preferred network. To change these settings use this menu. You can also add new access points using this menu.

USB connection - Choose **Data service** and synchronise your KF600 using the LG PC Suite software to copy files from your phone. If you have a memory card inserted select **Mass storage** to use your phone in the same way as you would a USB stick. Connect to your computer and drag and drop files to the KF600 removable device folder. See page 46 for further details.

Using memory manager

Your KF600 has three memories available: the phone, the SIM card and an external memory card (you may need to purchase the memory card separately).

You can use memory manager to determine how each memory is used and see how much space is available.

Touch  and select . Choose **Memory Manager**. Your options are:

Common - View the memory available on your KF600 for Images, Sounds, Videos, Games, MMS, Email and others.

Reserved - View the memory available on your handset for Text messages, Contacts, Calendar, and Memo.

SIM card - View the memory available on your SIM Card.

External memory - View the memory available on your external memory card (you may need to purchase the memory card separately).

Tip! See page 14 for information on **inserting a memory card**.

01

02

03

04

05

06

07

08

09

10

11

12

13

Settings

Sending and receiving your files using Bluetooth

Bluetooth is a great way to send and receive files as no wires are needed and connection is quick and easy. You can also connect to a Bluetooth headset to make and receive calls.

Before you can start sharing files with Bluetooth, you will need to pair your device with another Bluetooth device. For information on pairing devices, see **Pairing with another Bluetooth device**.

To switch Bluetooth on:

- 1 Touch  and select . Choose **Connectivity**, then **Bluetooth**.
- 2 Select **Bluetooth on/off** and choose **On**.
- 3 Select **Off** to switch Bluetooth off.

To send a file:

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Touch  and choose **Send via**, then **Bluetooth**.
- 3 Touch **Yes** to turn Bluetooth on if it is not already activated.
- 4 Your KF600 will automatically search for other Bluetooth enabled devices within range.
- 5 Choose the device you want to send the file to and touch **Send**.
- 6 Your file will be sent.

To receive a file:

- 1 To receive files, your Bluetooth must be both **On** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2 A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.

Tip! Keep an eye on the progress bar to make sure your file is sent.

Changing your Bluetooth settings:

- 1 Touch  and select . Choose **Connectivity**, then **Bluetooth**.
- 2 Choose **Bluetooth settings**. Make your changes to:
My visibility - Choose whether to **Show** or **Hide** your device to others.
My name - Enter a name for your KF600.
My address - Change your Bluetooth address.

Pairing with another Bluetooth device

By pairing your KF600 and another device, you can set up a passcode protected connection. This means your pairing is more secure.

- 1 Check your Bluetooth is **On** and **Visible**. You can change your visibility in the **Bluetooth Settings** menu, by selecting **My visibility**, then **Show**.
- 2 Select **Device list** from the Bluetooth menu and touch **New**.

- 3 Your KF600 will search for devices. When the search is completed **Pair** and **Refresh** will appear on screen.
- 4 Choose the device you want to pair with, touch **Pair** and enter the passcode then touch **OK**.
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.
- 6 You passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

- 1 Check your Bluetooth is **On** and **Visible**.
- 2 Follow the instructions that came with your headset to place your headset in pairing mode and pair your devices.
- 3 Touch **Yes** to **Connect now**. Your KF600 will automatically switch to Headset profile.

Tip! Supported profile: HSP, HFP, OPP, BPP, FTP, SPP, A2DP, AVRCP, DUN, SAP, PBAP

Tip! When you receive data from another Bluetooth device, the phone requests confirmation. After confirming the transfer, the file will be copied on to your phone.

01

02

03

04

05

06

07

08

09

10

11

12

13

Settings

Tip! Depending on the file type, it will be stored in the following folders:

- **Video (.3gp, mp4):** Videos folder
- **Image (.bmp, gif, jpg, png):** Images folder
- **Sound (.amr, wav, aac):** Sounds folder
- **MP3 (.mp3):** Sounds folder
- **Documents (.txt):** Documents folder

Tip! A document(txt) with up to 160 characters is saved in Inbox(menu 5-2).

Changing your security settings

Change your security settings to keep your KF600 and the important information it holds protected.

Touch  and select . Choose from the list below:

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Phone lock - Choose a security code to lock your phone, **When power on**, **When SIM changed** or **Immediately**.

Touchpad lock - Choose to lock the InteractPad.

Call barring - Choose to bar certain types of calls including **Outgoing** or **Incoming** or calls when you are abroad.

Fixed dial number - Set a fixed dial list which allows your KF600 to only make calls to certain numbers.

Change codes - Change your **Security code**, **PIN1 code** or **PIN2 code**.

Accessories


These accessories were supplied with your KF600.

Charger



Data cable and CD

Connect and synchronise your KF600 and PC.

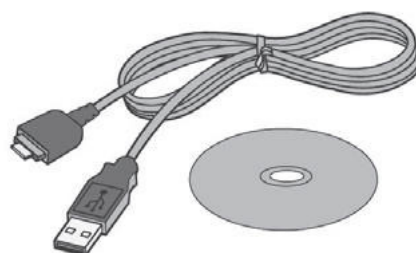


Battery



User Guide

Learn more about your KF600.

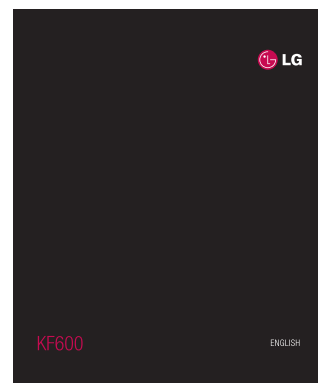

Stereo headset



01

02

03

04

05

06

07

08

09

10

11

12

13

Network service

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800 and PCS1900 networks.

A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

Technical data

General

Product name : KF600

System : GSM 900 / DCS 1800 /
PCS 1900

Ambient Temperatures

Max : +55°C (discharging), +45°C (charging)

Min : -10°C

Declaration of Conformity



Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 Tri Band Terminal Equipment

Model Name

KF600

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v.1.2.1
EN 300 328 V 1.6.1
EN 60950-1 : 2001
EN 50360/EN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

European Standard Center
LG Electronics Logistics and Services B.V.
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, Fax : +31 - 36 - 547 - 8794
e-mail : jacob @ lge.com

Name

Seung Hyoun, Ji / Director

Issued Date

21. Nov. 2007

Signature of representative

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

WARNING

- Mobile Phones must be switched off at all times in an aircraft.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which if detached.
- Not to charge a handset near flammable material as the handset can get hot and smoulder the Material, hence possible house fire.

CAUTION

- Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls.
- Only use ORIGINAL accessories to avoid damage to your phone.
- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.
- Batteries should be disposed of in accordance with relevant legislation.
- Do not charge the phone when it is on soft furnishings. The phone should be charged in a well ventilated area.
- Do not dismantle the phone or battery.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information.

This mobile phone model KF600 has been designed to comply with applicable safety requirement for exposure to radio waves.

This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.

- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.471 W/kg (10g) and when worn on the body is 0.743 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 0.631 W/kg averaged over one (1) gram of tissue.

01

02

03

04

05

06

07

08

09

10

11

12

13

Guidelines for safe and efficient use

Product care and maintenance

WARNING!

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can fail or cause serious injury due to improper performance.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle which contains your mobile phone and accessories.

01

02

03

04

05

06

07

08

09

10

11

12

13

Guidelines for safe and efficient use

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.

- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- Dispose of used batteries according to the manufacturer's instructions.

01

02

03

04

05

06

07

08

09

10

11

12

13

LIMITED WARRANTY STATEMENT

1. WHAT THIS WARRANTY COVERS :

LG offers you a limited warranty that the enclosed phone and its enclosed accessories will be free from defects in material and workmanship according to the following terms and conditions:

- (1) The limited warranty for the product extends the warranty period beginning on the date of purchase of the product.
- (2) The limited warranty applies for 1 year from the original date of purchase and extends only to the original purchaser of the product and is not assignable or transferable to any subsequent purchaser/end user. It shall neither exclude nor limit any mandatory statutory rights of the customer or any of the customer rights against the seller/dealer of the product.
- (3) This warranty is good only to the original purchaser during the warranty period, but limited to certain country if specified.
- (4) The external housing and cosmetics parts shall be free of defects at the time of shipment and, therefore, shall not be covered under these limited warranty terms.
- (5) Upon request from LG. or their designated service agent the consumer must provide information to reasonably prove the date of purchase.
- (6) Unless other service arrangements have been specified the customer shall bear the cost of shipping a defective product back to the Customer Service Department of LG. LG shall bear the cost of shipping the product back to the consumer after the completion of service under this limited warranty.
- (7) During the warranty period LG or its authorised service agent will repair or replace at LG's sole discretion a defective product. A repaired or replaced product will not be given a prolonged or renewed warranty period.

2. WHAT THIS WARRANTY DOES NOT COVER :

- (1) Defects OR Damages resulting from use of the product in other than its normal and customary manner.
- (2) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, unauthorised modifications, unauthorised connections, unauthorised repair, neglect, abuse, accident, alteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid.

- (3) Breakage or damage to antennas unless caused directly by defects in material or workmanship.
- (4) A warranty repair if the Customer Service Department at LG or other agreed service agent was not notified by the consumer of the alleged defect or malfunction of the product during the applicable limited warranty period.
- (5) Products which have had the serial number or IMEI number removed or made illegible.
- (6) This limited warranty is in lieu of all other warranties, express or implied either in fact or by operations of law, statutory or otherwise, including, but not limited to any implied warranty of marketability or fitness for a particular use.
- (7) Damage resulting from use of non-LG approved accessories.
- (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal customer use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.
- (11) Consumables (such as fuses).
- (12) Suspected defects caused by a failure of the cellular network.

3. CONDITIONS:

No other express warranty is applicable to this product.

The DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MARKETABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS INC. SHALL NOT BE LIABLE FOR THE LOSS OF THE USE OF THE PRODUCT, INCONVENIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF, OR INABILITY TO USE, THIS PRODUCT OR FOR ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED MARKETABILITY APPLICABLE TO THIS PRODUCT.

Some do not allow the exclusive of limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.



Memo

[illegible]

Memo

[illegible]

Memo

[illegible]

Memo

[illegible]

Bluetooth QD ID B012723