 


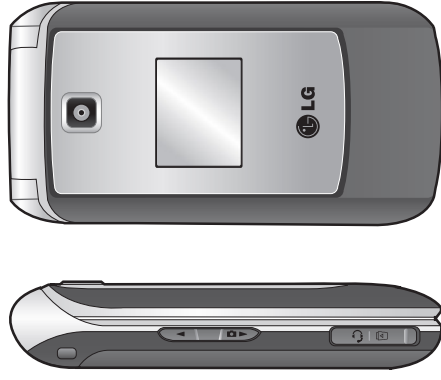

KP235 USER GUIDE



KP235 USER GUIDE

KP235 USER GUIDE



LG Electronics Inc.
<http://www.lgmobile.com>

P/N : MMB0272711 (1.0)




CE0168

ENGLISH

  LG Electronics Inc.



Bluetooth QD ID B013550

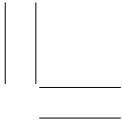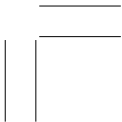   

ENGLISH

KP235 USER GUIDE

Please read this manual carefully
before operating your mobile phone.
Retain it for future reference.



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Table of Contents

Guidelines for safe and efficient use	4	Settings	31
KP235 Features	9	Date & Time	
Getting started	13	Languages	
General functions	18	Call	
Making and answering calls		Connectivity	33
Entering text	20	Security	37
Selecting functions and options	23	Power save	39
Menu tree	24	Flight mode	
Profiles	26	Reset	40
Normal		Memory status	
Silent		Call history	41
Vibrate only		All calls	
Outdoor		Missed calls	
Headset		Dialled calls	
Address book	27	Received calls	
Search		Call duration	
Add contact	28	Call costs	42
Speed dialling		Data information	43
Group		Messaging	44
Copy all	29	New message	
Delete all		Inbox	45
Settings		Drafts	46
Information	30	Outbox	47
		Sent	
		Listen voicemail	
		Info messages	
		Templates	48
		Settings	49

31

33

37

39

40

41

42

43

44

45

46

47

48

49

Orange World 52

Orange World
Web search
TV & Video
Music & Tones
Your account
Bookmarks
Enter address
History 53
Saved pages
Settings
Information 54
Orange Plus

Media album 55

Images
Sounds 56
Others

Camera 57

Take picture

Games & Apps 58

Games
Applications
More games
Network profiles

Display 60

Wallpaper
Backlight timer
Brightness
Orange homescreen
Home screen shortcut
Theme
Menu style
Standby text
Colourful dial font

Organiser 61

Calendar
Memo
To do
Voice memo 62

More 63

Alarm clock
Calculator
Stopwatch
Unit converter 64
World clock

Accessories 65

Technical data 66

Guidelines for safe and efficient use

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KP235 has been designed to comply with applicable safety requirements for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- ▶ The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands.

- ▶ While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- ▶ The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over ten grams of tissue.
- ▶ The highest SAR value for this phone model tested by DASY4 for use at the ear is 0.929 W/kg (10g) and when worn on the body is 0.890 W/kg (10g).
- ▶ SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE) is 1.6 W/kg averaged over 1g of tissue (for example USA, Canada, Australia and Taiwan).

Pro
mai

War
charg
use w
The u
invali
apply
dang

- ▶ Do n
to a
wher
- ▶ Keep
such
comp
- ▶ The
heat
cook
- ▶ Neve
micro
batte
- ▶ Do n
- ▶ Do n
mech
- ▶ The
dama
vinyl

Product care and maintenance

Warning! Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- ▶ Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- ▶ Keep away from electrical appliances such as TV's, radios or personal computers.
- ▶ The unit should be kept away from heat sources, including radiators and cookers.
- ▶ Never place your phone in a microwave oven as it can cause the battery to explode.
- ▶ Do not drop.
- ▶ Do not subject this unit to mechanical vibration or shock.
- ▶ The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- ▶ Do not use harsh chemicals (such as alcohol, benzene, thinners, etc.) or detergents to clean your phone.
- ▶ Do not subject this unit to excessive smoke or dust.
- ▶ Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- ▶ Do not tap the screen with a sharp object as it may damage the phone.
- ▶ Do not expose the phone to liquid or moisture.
- ▶ Use accessories, such as earphones and headsets, with caution. Ensure that cables are tucked away safely and do not touch the antenna unnecessarily.
- ▶ Please remove the data cable before powering on the handset.
- ▶ Do not charge the phone when it is on soft furnishings.
- ▶ The phone should be charged in a well ventilated area.

Guidelines for safe and efficient use

Guidelines for safe and efficient use

Efficient phone operation

To enjoy optimum performance with minimum power consumption please:

- ▶ Do not hold the antenna when the phone is in use, as this can affect call quality. It may also cause the phone to operate at a higher power level than needed and shorten talk and standby times.

Electronic devices

All mobile phones may get interference, which could affect performance.

- ▶ Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers (for example, in your breast pocket).
- ▶ Some hearing aids might be disturbed by mobile phones.

- ▶ Minor interference may affect TVs, radios, personal computers, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- ▶ Do not use a hand-held phone while driving.
- ▶ Give full attention to driving.
- ▶ Use a hands-free kit, if available.
- ▶ Pull off the road and park before making or answering a call if driving conditions so require.
- ▶ RF energy may affect some electronic systems in your motor vehicle such as a car stereo or safety equipment.
- ▶ If your vehicle is equipped with an air bag, do not obstruct it with installed or portable wireless equipment. It can cause serious injury due to improper performance.

If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off close to your ear. We also recommend that music and call volumes are set to a reasonable level.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- ▶ Do not use the phone at a refuelling point.
- ▶ Do not use near fuel or chemicals.
- ▶ Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- ▶ Turn off your mobile phone before boarding any aircraft.
- ▶ Do not use the phone on the ground without permission from the aircraft crew.

Guidelines for safe and efficient use

Guidelines for safe and efficient use

Children

Keep the phone in a safe place out of the reach of small children. It includes small parts which, if detached, may be a choking hazard.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on your mobile phone for emergency calls. Check with your local service provider.

 
Battery information and care

- ▶ You do not need to completely discharge the battery before recharging. Unlike other battery systems, this will not compromise the battery's performance.
- ▶ Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- ▶ Do not disassemble or short-circuit the battery pack.
- ▶ Keep the metal contacts of the battery pack clean.
- ▶ Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times before it needs replacing.
- ▶ Recharge the battery if it has not been used for a long time to maximise usability.
- ▶ Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- ▶ Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

[Open](#)

KP235 Features

Open view

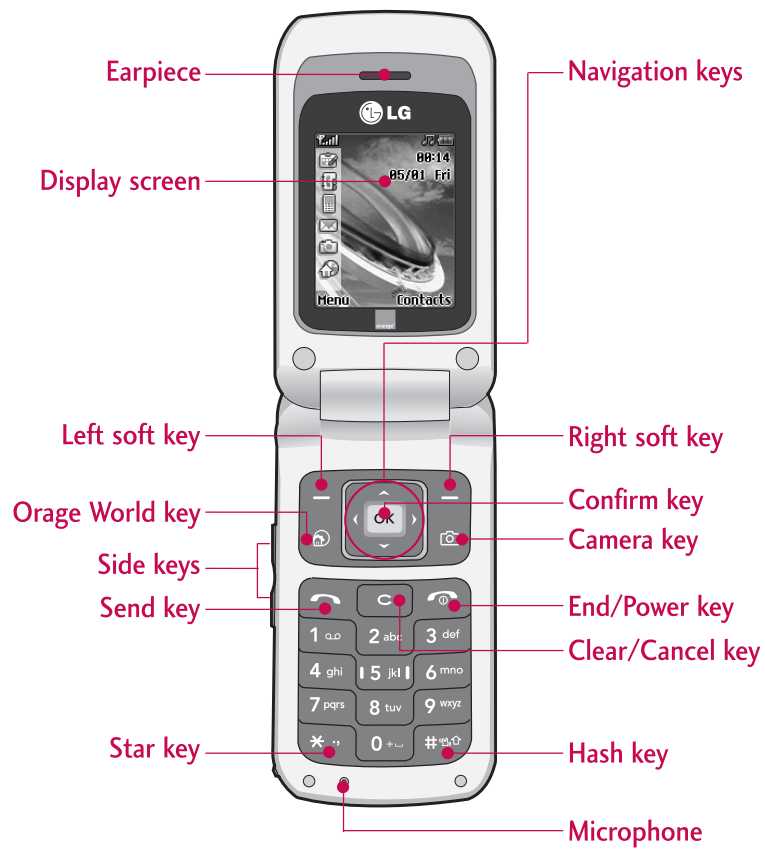

KP235 Features

Rear view

KP235 Features



Key description

The following shows key components of the phone.

Keypad description

Key	Description
	Left soft key / Right soft key Each of these keys performs the function indicated by the text on the display immediately above it.
	Navigation keys Use to scroll through menus and move the cursor. You can also use these keys for quick access to the following functions. • Left navigation key (): Messaging • Right navigation key (): List of profiles • Up navigation key ()/ Down navigation key (): Calendar, Contacts, Call history, Messaging, Camera, Orange World

Key	Description
	Send key You can dial a phone number and answer a call. If you press this key without entering a number, your phone shows the most recently dialed, received and missed calls.
	Numeric keys These keys are used mainly to dial in standby mode and enter numbers or characters in editing mode. When you press these keys for a long time: • Used to call your voicemail box  . • Used to add the international prefix  . • Used to call Speed dials from  to  . • Used to enter a pause when dialling, or switch to vibrating mode  .
	END/PWR key Used to end or reject a call. This key is also used as the Power key by pressing and holding this key for a few seconds.
	Clear/Cancel Key Deletes a character with each press. Hold the key down to clear all input. Also use this key to go back to the previous screen.

KP235 Features

KP235 Features

Side keys

Key	Description
	Up/Down side keys When you open the flip, you can control the volume of key tone in the standby mode and the volume during a call.

Display information

The table below describes various display indicators or icons that appear on the phone's display screen.

On screen icons



Icon/Indicator	Description
	All audible signals are turned off.
	Normal profile is activated.
	Outdoor profile is activated.
	Silent profile is activated.
	Headset profile is activated.
	You can divert a call.

Icon/Indicator	Description
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.
	Tells you the strength of the network signal.
	Call is connected.
	You can use GPRS service.
	Shows that you are using a roaming service.
	Line 1/2 is in use for outgoing calls – if you subscribe to the Two Line Service.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a message.
	You have received a voice message.

Insta card

Make s
remove

  1. Rem
Press d
cover a
lift the



Note

► Remo
when
phone

 
Getting started

Installing the SIM card and the battery

Make sure the power is off before you remove the battery.

1. Remove the battery.

Press down on the tabs on the battery cover and slide the cover down. Now lift the battery from its compartment.

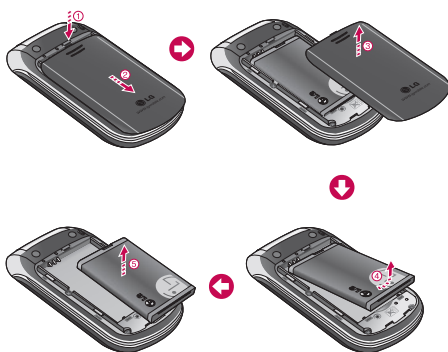


Note

- ▶ Removing the battery from the phone when the power is on may cause the phone to malfunction.

2. Install the SIM card.

 Insert and slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

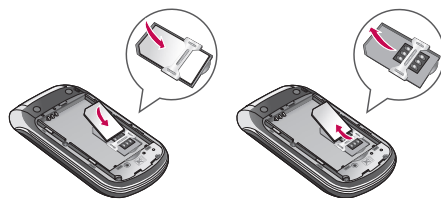

To insert the SIM card

To remove the SIM card

 
Caution

- ▶ The metal contact of the SIM card can easily be damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

Getting started


Getting started

3. Install the battery.

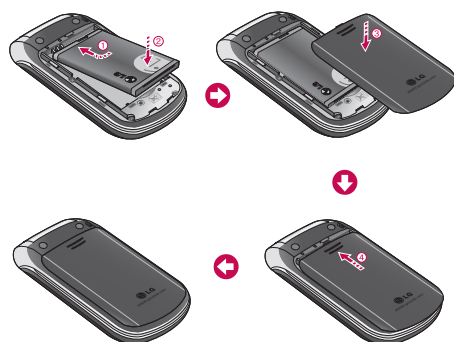

Charging the battery

 To connect the charger to the phone, you must first install the battery.

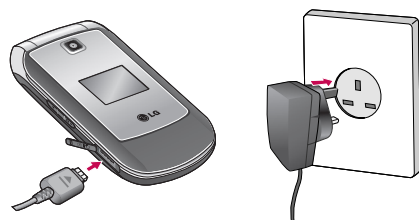

1. With the arrow facing you as shown in the diagram, push the plug on the charger into the connector on the bottom of the phone until it clicks into place.

2. Connect the other end of the charger to the mains socket. Only use the charger included in the box.
3. The moving bars on the battery icon will stop once charging is complete.

Caution

- ▶ Do not force the connector as this may damage the phone and/or the charger.
- ▶ If you use the charger out of your own country, use an attachment plug adapter for the proper configuration.
- ▶ Do not remove your battery or the SIM card while charging.

Warning

- ▶ Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
- ▶ Make sure that no sharp-edged items such as animal teeth or nails come into contact with the battery. This may cause a fire.

Discharge

Discharge phone

Note

- ▶ Ensure using
- ▶ If the please the po the bu

Disconnecting the charger

Disconnect the charger from the phone as shown in the diagram below.



Note

- ▶ Ensure the battery is fully charged before using the phone for the first time.
- ▶ If the battery is not properly charged, please turn the phone off and on using the power key. Then detach and reattach the battery, and recharge the phone.

Turning your phone on and off

Turning your phone on

1. Install a battery to the handset and connect the phone to an external power source such as the charger, or cigarette lighter adapter. Or install a charged battery pack to the handset.
2. Press and hold  for a few seconds until the LCD screen is turned on.
3. Depending on the status of the PIN code request setting you may need to enter your PIN code.

Turning your phone off

Press and hold  for a few seconds until the LCD screen is turned off.

Getting started

Getting started

Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature (Menu 3.5.5).

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. When the **PIN code request** is set to **On**, your phone will request the PIN code every time the phone is switched on. When the **PIN code request** is set to **Off**, your phone connects to the network directly without the PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access functions such as Advice of call charges and Fixed dial number. These functions are only available if supported by your service provider. Check with your service provider for further information.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to unlock a PIN blocked phone. The PUK code may be supplied with the SIM card. If not, contact your service provider for the code. If you lose the code, also contact your service provider.

PUK2

The PUK2 code is required to unlock a SIM card blocked by a PUK code, provided by your service provider.

Security

The security features of the phone allow you to set a default lock screen and the Res Lock screen. You can also set a security code to prevent the phone from being used without the security code. You can also set a security code to prevent the phone from being used without the security code.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to unlock a blocked PIN2 code. If you lose the code, please contact your service provider.

Security code (4 to 8 digits)

The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the Reset settings menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the Security settings menu.

Barring password

The barring password is required when you use the Call barring function. You can obtain the password from your service provider when you subscribe to this function.

General functions

General functions

Making and answering calls

Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code.
 - ▶ To delete numbers press  key. Press and hold the  key to erase the entire number.
3. Press  to call the number.
4. To end the call, press  or the right soft key.

Making a call from the call history list

1. In standby mode, press  and the latest incoming, outgoing and missed calls will be displayed.
2. Select the desired number by using the up/down navigation keys.
3. Press  to call the number.

Making an international call

1. Press and hold  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press  to call the number.

Ending a call

When you have finished your call, press  key.

Making a call from the contacts list

You can save the names and phone numbers dialled regularly in the SIM card and/or phone memory. You can dial a number by simply looking up the desired name in the contacts and pressing  key.

Adjusting volume

If you want to adjust the volume (ringtone, call tone, etc.), press and hold the volume keys.

Note

▶ In standby mode, pressing the volume keys will adjust the ringtone volume.

Answering a call

When you receive a call, the phone rings and the screen displays the caller's name and number. To answer the call, press the call key or the right soft key.

1. To answer a call, press the call key or the right soft key. See the chapter on calls.

Adjusting the volume

If you want to adjust the earpiece volume during a call, use the side keys (). Press the up side key to increase and down side key to decrease the volume.

Note

- ▶ In standby mode with the phone open, pressing the side keys adjusts the key tone volume.

Answering a call

When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name/photo if saved in the contacts) is displayed.

1. To answer an incoming call, open the phone. (When **Flip open** has been set as the answer mode. See page 32 (Menu 3.3.2).)

Note

- ▶ If **Any key** has been set as the answer mode (see page 32), pressing any key will answer a call except for the  or the right soft key.
 - ▶ To reject an incoming call, press and hold one of the side keys on the left side of the phone without opening the phone.
 - ▶ You can answer a call whilst using the phonebook or other menu features.
2. To end the call, close the phone or press the  key.

Signal strength

You can check the strength of your signal by the signal indicator () on the display. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

General functions

General functions

Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting.

The following text input methods are available in the phone.

T9 Mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.

ABC Mode

This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

123 Mode (Numbers Mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.

Changing the text input mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the top right corner of the LCD screen.
2. Change the text input mode by pressing . You can check the current text input mode in the top right corner of the LCD screen.

Using the T9 mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses.

As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.

- ▶ If the desired word is missing from the word choice list, add it using the ABC mode.
- ▶ You can select the language of the T9 mode. Press the left soft key [Options], then select T9 languages. Select the desired language for T9 mode. You can also turn off the T9 mode by selecting T9 off. The default setting on the phone is T9 enabled mode.

1. Enter the whole word before editing or deleting any keystrokes.
2. Complete each word with a space by pressing **0 +** key. To delete letters, press **C**. Press and hold down **C** to erase entire words.

Note

- ▶ To exit the text input mode without saving your input, press **END**. The phone goes back to standby mode.

Using the ABC mode

Use **2 abc** to **9 wxyz** keys to enter your text.

1. Press the key labeled with the required letter:
 - ▶ Once for the first letter.
 - ▶ Twice for the second letter and so on.
2. To insert a space, press **0 +** key once. To delete letters, press **C**. Press and hold down **C** to clear the whole display.

General functions

General functions

Key	Characters in the order display	
	Upper Case	Lower Case
1	., / ? ! - : ' " 1	., / ? ! - : ' " 1
2	A B C 2 Å Ä Æ Ç	a b c 2 à â æ ç
3	D E F 3 É Ê Ë Ë	d e f 3 é ê ë ë
4	G H I 4 Î Ï	g h i 4 î ï
5	J K L 5	j k l 5
6	M N O 6 Ñ Ò Ò Æ	m n o 6 ñ ô õ æ
7	P Q R S 7	p q r s 7
8	T U V 8 Û	t u v 8 û
9	W X Y Z 9 Ŵ Ŷ	w x y z 9 ŵ ŷ
0	Space 0	Space 0

Using the 123 (Number) mode

 
The 123 mode enables you to enter numbers in a text message (for example, a telephone number).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Selecting functions and options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context or the label on the bottom line of the screen just above each key.

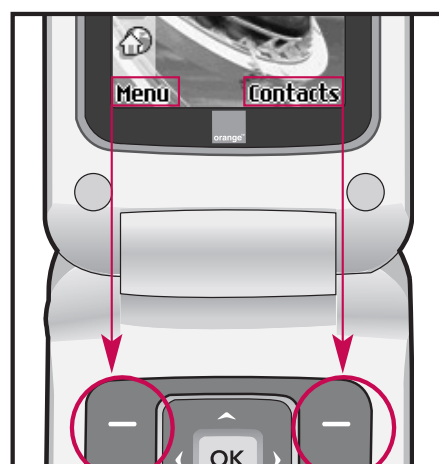

Press the left soft key to access the available menu.

Press the right soft key to activate the corresponding action.

Selecting functions and options

Menu tree

Menu tree

1. Profiles

- 1.1 Normal
- 1.2 Silent
- 1.3 Vibrate only
- 1.4 Outdoor
- 1.5 Headset

2. Address book

- 2.1 Search
- 2.2 Add contact
- 2.3 Speed dialling
- 2.4 Group
- 2.5 Copy all
- 2.6 Delete all
- 2.7 Settings
- 2.8 Information

3. Settings

- 3.1 Date & Time
- 3.2 Languages
- 3.3 Call
- 3.4 Connectivity
- 3.5 Security
- 3.6 Power save
- 3.7 Flight mode
- 3.8 Reset
- 3.9 Memory status

4. Call history

- 4.1 All calls
- 4.2 Missed calls
- 4.3 Dialed calls
- 4.4 Received calls
- 4.5 Call duration
- 4.6 Call costs
- 4.7 Data information

5. Messaging

- 5.1 New message
- 5.2 Inbox
- 5.3 Drafts
- 5.4 Outbox
- 5.5 Sent
- 5.6 Listen voicemail
- 5.7 Info messages
- 5.8 Templates
- 5.9 Settings

6. Orange World

- 6.1 Orange World
- 6.2 Web search
- 6.3 TV & Video
- 6.4 Music & Tones
- 6.5 Your account
- 6.6 Bookmarks
- 6.7 Enter address
- 6.8 History
- 6.9 Saved pages
- 6.0 Settings
- 6.* Information
- 6.# Orange Plus

7. Me

- 7.1
- 7.2
- 7.3

8. Ca

- 8.1

9. Ga

- 9.1
- 9.2
- 9.3
- 9.4

ge
email
ges
d
orld
h
o
ones
unt
;
ess
es
on
us

7. Media album 7.1 Images 7.2 Sounds 7.3 Others	*. Display *.1 Wallpaper *.2 Backlight timer *.3 Brightness *.4 Orange homescreen *.5 Home screen shortcut *.6 Theme *.7 Menu style *.8 Standby text *.9 Colourful dial font	0. Organiser 0.1 Calendar 0.2 Memo 0.3 To do 0.4 Voice memo
8. Camera 8.1 Take picture		#. More #.1 Alarm clock #.2 Calculator #.3 Stopwatch #.4 Unit converter #.5 World clock
9. Games & Apps 9.1 Games 9.2 Applications 9.3 More games 9.4 Network profiles		

Menu tree

Profiles

Profiles

You can adjust and customise the phone tones for different events, environments, or caller groups. There are five preset profiles: **Normal**, **Silent**, **Vibrate only**, **Outdoor** and **Headset**.

Activate

Menu 1.1

1. A list of profiles are displayed.
2. In the Profiles list, scroll to the profile you want to activate and press the left soft key [OK] or OK key.
3. Then, select Activate.

Note

- ▶ When a headset is connected to the phone the Headset profile is automatically activated.

Personalise

Menu 1.2

You can customise profiles except Vibrate only (and Silent menu). Scroll to the desired profile in the Profile list. After pressing the left soft key or the OK key, select Personalise.

- ▶ **Call alert type:** Set the alert type for incoming calls.
- ▶ **Ring tones:** Select the desired ring tone from the list.
- ▶ **Ring volume:** Set the volume of the ring tone.
- ▶ **Message alert type:** Set the alert type for message receipt.
- ▶ **Message tones:** Select the alert tone for message receipt.
- ▶ **Message volume:** Set the volume of message tone.
- ▶ **Keypad tones:** Select the desired keypad tone.
- ▶ **Keypad volume:** Set the volume of keypad tone.
- ▶ **Sound effect volume:** Set the volume of sound effects.
- ▶ **Power on/off volume:** Set the volume of the tone when switching the phone on/off.

You can correspond the phone. Press the standby book. Y book b [Conta

Search

1. Select ente
2. Enter wish
3. After you by p the l follo

Address book

Address book

You can save phone numbers and their corresponding names in the memory of the phone or SIM card.

Press the left soft key [Menu] in standby mode, then select Address book. You can also access Address book by pressing the right soft key [Contacts].

Search

Menu 2.1

1. Select Search. You are asked to enter a name.
2. Enter the start of the name that you wish to find.
3. After finding the desired contact, you can make a call to the number by pressing the  key. Or press the left soft key [Option] to use the following options.

- ▶ **View:** You can view name and number.
- ▶ **Edit:** You can edit the name and number.
- ▶ **Make call:** You can call the contact.
- ▶ **Message:** Use this to write a message to the contact.
- ▶ **Send via:** You can send the contact data via Messaging or Bluetooth.
- ▶ **Delete:** Deletes the contact.
- ▶ **Assign speed dial:** You can assign the number for speed dial.
- ▶ **Add contact:** You can register a new contact.
- ▶ **Multi delete:** You can check the list and delete several contacts at once.
- ▶ **Copy to phone/SIM:** You can copy an entry from SIM to phone or from phone to SIM.

Address book

Add contact

Menu 2.2

You can add a contact entry using this function.

There are 2 memories: Phone memory and SIM memory. The phone memory capacity is 1000 entries. You can enter up to 20 characters in each name in the phone memory. The SIM card memory capacity depends on the SIM card.

Speed dialling

Menu 2.3

Assign contacts to any of the keys **2 abc** to **9 wxyz**. You can then call that contact by pressing and holding the corresponding number key.

1. Scroll to Speed dial, then press [OK].
2. To add a number to Speed dial, select (Empty). Then, you can search for the name in Contacts.
3. You can change or delete a speed dial number, make a call or send a message by pressing the left soft key [Options].

Group

Menu 2.4

You can manage group information.

1. Select Groups. All group lists will be displayed: Family, Friends, Colleagues, Key contacts, Group 1, Group 2, Group 3.
2. Select the group name that you want to manage by pressing the left soft key [Options].

The following submenus will be displayed.

- ▶ **View members:** Displays the member list in the group.
- ▶ **Group ringtone:** Use this to select the ringtone to be used when you receive a phone call from a person in the group.
- ▶ **Group icon:** Use this to select the graphic icon to be displayed when you receive a call from a person in the group.
- ▶ **Add member:** Add a member to the group. You can add up to 20 members per group.

- ▶ **Remove member:** Removes the member from the group member list. The contact entry still remains in Contacts.
- ▶ **Remove all members:** Remove all the members.
- ▶ **Rename:** Assigns a new name to the group.
- ▶ **Reset all:** Allows you to reset all.

Copy all Menu 2.5

You can copy/move entries from the SIM card memory to the phone memory and vice versa.

- ▶ **SIM to Phone:** Use this to copy the entry from the SIM Card to the Phone memory.
- ▶ **Phone to SIM:** Use this to copy the entry from the Phone memory to the SIM Card.

The following options are available.

- **Keep original:** When copying, the original dial numbers are kept.

- **Delete original:** When copying, the original dial numbers will be erased.

Delete all Menu 2.6

You can delete all entries in the SIM and/or phone. This function requires the security code.

Press  to return to standby mode.

Settings Menu 2.7

View options

You can set the Contact display option.

- ▶ **Name only:** When you search Contacts, the list displays the names only.
- ▶ **Name & number:** When you search Contacts, the list displays the names and numbers.
- ▶ **With picture:** When you search Contacts, the list displays names and corresponding pictures.

Address book

Address book

Information

Menu 2.8

► Service dial number (SIM dependent):

Use this to view the list of Service Dialling Numbers (SDN) assigned by your service provider (if supported by the SIM card). Such numbers include traffic news, directory enquiries and voice mail numbers.

1. Select the Service dial number option.
2. The names of the available services will be shown.
3. Use the up/down navigation keys to select a service. Press .

► Own number (SIM dependent):

Use this to display your phone number in the SIM card.

- **My business card:** This option allows you to create your own business card featuring name, phone numbers and an email address. To create a new business card, press the left soft key  [New] and enter the information into the fields.

Settings

You can set the following menus for your convenience and preferences.

Date & Time Menu 3.1

You can set functions relating to the date and time.

Set date (Menu 3.1.1)

You can enter the current date.

Date format (Menu 3.1.2)

You can set the Date format such as DD/MM/YYYY, MM/DD/YYYY, YYYY/MM/DD. (D: Day / M: Month / Y: Year)

Set time (Menu 3.1.3)

You can enter the current time.

Time format (Menu 3.1.4)

You can set the time format to either 24 hours or 12 hours.

Auto update (Menu 3.1.5)

When Auto Update is configured the time and date are automatically updated according to the current time zone.

Languages Menu 3.2

You can select the display language.

When the language option is set to Automatic, the language is

automatically selected according to the language of the SIM card used.

English will be set if the language on the SIM card is not supported by the phone.

Call Menu 3.3

You can set the options relevant to calls.

Call divert (Menu 3.3.1)

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

- ▶ **All voice calls:** Diverts voice calls unconditionally.
- ▶ **If busy:** Diverts voice calls when the phone is in use.
- ▶ **If no reply:** Diverts voice calls which you do not answer.

Settings

Settings

- ▶ **If out of reach:** Diverts voice calls when the phone is switched off or out of coverage.
- ▶ **All data calls:** Diverts to a number with a PC connection unconditionally.
- ▶ **Cancel all:** Cancels all call divert services.

The submenus

Call divert menus have the submenus shown below.

- ▶ **Activate:** Activate the corresponding service.
 - To voice mailbox: Forwards to message centre. This function is not shown at All data calls and All fax calls menus.
 - To other number: Input the number for diverting.
 - To favourite number: You can check back to the last five diverted numbers.

- ▶ **Cancel:** Deactivate the corresponding service.
- ▶ **View status:** View the status of the corresponding service.

Answer mode (Menu 3.3.2)

- ▶ **Flip open**
If you select this menu, you can answer an incoming call by opening the flip.
- ▶ **Any key**
If you select this menu, you can receive a call by pressing any key except  [End] key and .
- ▶ **Send key only**
If you select this menu, you can receive a call only by pressing  [Send] key.

Send my number (Menu 3.3.3) (network and subscription dependent)

- ▶ **Set by network**
If you select this, you can send your phone number depending on two line service such as line 1 or line 2.

- ▶ **On**
You can answer another call while the phone is in use.
- ▶ **Off**
Your phone will not answer another call while the phone is in use.

Call waiting (network dependent)

The network determines whether you can receive an incoming call while you are on a call. Cancel deactivates the call waiting function to check the status.

Minute timer

When the minute timer is set, every minute the phone will beep to keep track of the call time.

► **On**

You can send your phone number to another party. Your phone number will be shown on the receiver's phone.

► **Off**

Your phone number will not be shown.

Call waiting (Menu 3.3.4)
(network dependent)

The network will notify you of a new incoming call while you have a call in progress. Select Activate to request the network to activate call waiting, Cancel to request the network to deactivate call waiting, or View status, to check if the function is active or not.

Minute minder (Menu 3.3.5)

When set to On, the phone will beep every minute during an outgoing call to keep you informed of the length of the call.

Auto redial (Menu 3.3.6)

Select On, and your phone will make a maximum of five attempts to connect the call after an unsuccessful call attempt.

Send DTMF tones (Menu 3.3.7)

DTMF tones allow your phone to make use of an automated switchboard.

Connectivity Menu 3.4

Bluetooth (Menu 3.4.1)

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires.

This handset supports built-in Bluetooth connectivity, which makes it possible to connect it with compatible Bluetooth headsets, computer applications and so on.

Settings

Settings

Note

- ▶ If you use LG PC Sync via Bluetooth, you can exchange the data only within phonebook.
- ▶ When you receive data from another Bluetooth device, the phone requests confirmation. After confirming the transfer, the file will be copied on to your phone.
- ▶ Depending on the file type, it will be stored in the following folders:
 - Image (.bmp, gif, jpg, png): Pictures folder
 - Other files (.txt, html): Others folder

Bluetooth on/off

You can activate or cancel the Bluetooth function.

Device list

You can view all devices which your KP235 is already paired to. If you enter Select a device, you can access the Options:

- **Connect /Disconnect:** After pairing with a headset you can connect with the device to use it.

- **New:** Allows to search for new Bluetooth devices and add them to your list of paired devices. When you select New your handset will start to search for Bluetooth devices within range. Once the device you wish to pair appears on the list press the Right soft key [Stop]. Scroll to the desired device and press the left soft key [OK]. You will then be asked to enter a passcode. The passcode can be any code you wish to use (the same passcode must be used by both devices) or is one that is pre-determined by the manufacturer of the device you are trying to pair with. Please check the User Manual of the device you are initiating the pair with to see if it already has a predetermined passcode in place.

- **Set as authorized/unauthorized:** Allows you to set an authorised connection between each Bluetooth device. If a paired device is set to authorised the paired device will automatically connect to the handset each time it is powered on.

- All se
service
Bluet
- Renai
name
and h
hands
- Delet
Bluet
- Delet
paired
- Bluet
- My vi
or no
other
- My n:
the Bl
name
- My a:
addre

Note
▶ Doe

- **All services:** Allows you to view all services which are supported by Bluetooth device.
- **Rename :** Allows you to change the name of the paired Bluetooth device and how it is displayed on the handset.
- **Delete:** Allows to delete a paired Bluetooth device.
- **Delete all:** Allows to delete all the paired Bluetooth devices.

Bluetooth settings

- **My visibility:** This indicates whether or not your handset will be visible to other Bluetooth devices.
- **My name:** You can set the name of the Bluetooth device. The default name is LG KP235.
- **My address:** You can view the address of your Bluetooth device.

Note

- ▶ *Does not support voice dialling.*

Network (Menu 3.4.2)

You can select a network which will be registered either automatically or manually.

Network selection

Usually, the network selection is set to Automatic.

- ▶ **Automatic:** If you select Automatic mode, the phone will automatically search for and select a network for you. Once you have selected Automatic, the phone will be set to Automatic even when the power is switched off and on.
- ▶ **Manual:** The phone will find the list of available networks and show you them. Then you can select the network you want to use if this network has a roaming agreement with your home network operator. The phone lets you select another network if it fails to access the selected network.

Settings

Settings

- ▶ **Preferred:** You can set a list of preferred networks and the phone attempts to register with these first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

GPRS attach

You can set GPRS service depending on various situations.

- ▶ **Power on**
If you select this menu, the phone is automatically registered to a GPRS network when you switch the phone on. Starting a WAP or PC dial-up application creates the connection between phone and network and data transfer is possible. When you end the application, GPRS connection is ended but the registration to the GPRS network remains.

When needed

If you select this menu, the GPRS connection is established when you connect a WAP or application service and closed when you end the WAP or application connection.

Access point

- ▶ **View:** You can see the selected profile.
- ▶ **Edit:** You can edit the selected profile.
- ▶ **New access point**
 - **Name:** You can type the network name.
 - **Bearer:** You can set the bearer data service. - GPRS

<GPRS settings>

The service settings are only available when GPRS is chosen as a bearer service.

- **APN:** Input the APN of the GPRS.
- **User ID:** The user identification for your APN server.
- **Password:** The password required by your APN server.
- **Primary server:** Input the IP address of the primary DNS server you access.
- **Secondary server:** Input the IP address of the secondary DNS server you access.

► **Delete:** You can delete the selected profile.

Security

Menu 3.5

PIN code request (Menu 3.5.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on. If this function is activated, you'll be requested to enter the PIN code.

1. Select PIN code request in the security settings menu, and then press  [OK].
2. Set On/Off.
3. If you want to change the settings, you need to enter PIN code when you switch on the phone.
4. If you enter the wrong PIN code more than 3 times, the phone will lock out. If the PIN is blocked, you will need to key in the PUK code.
5. You can enter your PUK code up to 10 times. If you enter the wrong PUK code more than 10 times, you cannot unlock your phone. You will need to contact your service provider.

Settings

Settings

Phone lock (Menu 3.5.2)

You can use a security code to avoid unauthorised use of the phone. You can choose to have the phone request the security code when the power is switched on, when the SIM card is changed, or Immediately. You can also switch this function to Off.

Call barring (Menu 3.5.3)

The Call barring service prevents your phone from making or receiving certain categories of calls. This function requires the call barring password. You can view the following submenus.

► All outgoing

The barring service for all outgoing calls.

► Outgoing international

The barring service for all outgoing international calls.

► Outgoing international except home country

The barring service for all international outgoing calls except home network.

► All incoming

The barring service for all incoming calls.

► Incoming when abroad

The barring service for all incoming calls when roaming.

► Cancel all barrings

You can cancel all barring services.

► Change password

You can change the password for Call barring service.

The submenus:

- Activate
Allows to request that the network set the call restriction on.
- Cancel
Set the selected call restriction off.
- View status
View whether the calls are barred or not.

Fixed (SIM d

You can select a fixed number for incoming calls. The selected number is programmed into the phone.

► On

You can select a fixed number for incoming calls. The selected number is programmed into the phone.

► Off

You can select a fixed number for incoming calls. The selected number is programmed into the phone.

► Number

You can select a fixed number for incoming calls. The selected number is programmed into the phone.

Change

PIN is a Personal Identification Number. It is used to identify you by an unique number. You can change the Security PIN.

1. If you enter the code your phone will present the

Fixed dial number (Menu 3.5.4) (SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

► On

You can restrict your outgoing calls to selected phone numbers only.

► Off

You can cancel fixed dialling function.

► Number list

You can view the number list saved as Fixed dial numbers.

Change codes (Menu 3.5.5)

PIN is an abbreviation of Personal Identification Number to prevent use by an unauthorised person.

You can change the access codes: Security code, PIN code or PIN2 code.

1. If you want to change the Security code / PIN code / PIN2 code input your original code, and then press  [OK].

2. Input new Security code / PIN code / PIN2 code and verify.

Power save Menu 3.6

Decide whether to activate the power save mode or not.

Flight mode Menu 3.7

This allows you to use only the phone's features that do not require the use of a wireless network when you are in an airplane or in places where a wireless network is prevented.

If you set the flight mode on, the icon will be displayed on the screen instead of the network signal icon.

- **On:** You cannot make (or receive) any calls, including emergency calls, or use other features that require network coverage.
- **Off:** You can deactivate the flight mode and restart your handset to access the network.

Settings

Settings

Reset

Menu 3.8

You can initialise all factory defaults.
You will need the Security code to
activate this function.

Memory status

Menu 3.9

You can check the status of memory in
use on the SIM card or the phone.

You can
receive
network
Identifi
area.

The nu
display
time at
can also

All c

Allows
receive
can ma
the nur
records
in Cont

Miss

Allows
make a
the nur

Call history

You can check the records of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

All calls Menu 4.1

Allows you to view the missed, received, and dialled call records. You can make a call or send a message to the number you have selected from the records. You can also save the number in Contacts.

Missed calls Menu 4.2

Allows you to view missed call records, make a call, send a message, and save the number in Contacts.

Dialled calls Menu 4.3

Allows you to view dialled call records, make a call, send a message, and save the number in Contacts.

Received calls Menu 4.4

Allows you to view received call records, make a call, send a message, and save the number in Contacts.

Call duration Menu 4.5

You can view call times by type.

- ▶ **Last call:** Shows the latest call time in units of minutes/seconds.
- ▶ **All calls:** Shows the total call time. You can reset the timer by pressing the left soft key [Reset].
- ▶ **Dialled calls:** Shows outgoing call time.
- ▶ **Received calls:** Shows incoming call time.

Call history

Call history

Call costs

Menu 4.6

This network service allows you to check the last call cost and the total call cost.

Note

- *The actual cost invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, taxes, etc.*

Cost settings

Set credit

This network service allows you to limit the cost of your calls to the selected charging units. You can make or receive a call up to the specified cost limit.

- **Read:** You can check the remaining units.
- **Change:** You can change your charging limit.

Set tariff

You can set the currency type and the unit price. Contact your service provider to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code. If you want to input @, £, \$ symbols, clear all currency strings and then press  key. If you want to change the symbol, press  key again.

Note

- *When all units have been used, no calls can be made except emergency calls. Depending on the SIM card, you need the PIN2 code to set a call cost limit.*

Auto display

This network service allows you to automatically see the cost of your last call. If you select **On**, you can see the cost of the last call when the call is released.

Data

Data

You can
All data
pressing

Data

You can
session
pressing

Data information Menu 4.7

Data volume (Menu 4.7.1)

You can check the Sent, Received or All data volumes. You can reset by pressing the left soft key [Reset].

Data time (Menu 4.7.2)

You can check the Last session and All session times. You can reset by pressing the left soft key [Reset].

Call history

Messaging

Messaging

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), voice mail, as well as the network's service messages. Sending of SMS and MMS leads to costs. For details please contact your service provider.

New message Menu 5.1

You can write and edit a message containing a combination of text, image, and sound (up to 10 pages).

1. Enter your message in the message field.
2. Press the left soft key [Options].
The following options are available.
 - ▶ **Send to:** Sends the message you have created. You can add recipients from your contacts list using [Options] or enter the phone number directly. You can enter up to 10 numbers.
 - ▶ **Insert:** You can insert images, sounds, symbols, text templates, or emoticons.

- ▶ **Save to:** You can save the message to drafts or as a picture template.
- ▶ **Preview:** You can preview the created multimedia message before sending it. (Shown when you add a sound, image, or slide.)
- ▶ **View attachments:** Shows any attached files. (Shown when files have been attached.)
- ▶ **Slide duration:** You can configure the duration of each page. (Shown when files have been attached.)
- ▶ **Remove:** You can remove attached items. (Shown when files have been attached.)
- ▶ **Set T9:** Select whether to activate T9 text mode or not.

- ▶ **W** lar fur rei
 - ▶ **N** fin yo di ty ke
 - ▶ **CI** ha
 - ▶ **Ex** Th sa
- Note**
- ▶ When you u, find t, will ne action loadin

- ▶ **Writing language:** Select the language for T9 mode. (For further details on the T9 mode, refer to pages 20-21.)
- ▶ **New T9 word:** When you can't find a desired word in T9 mode, you can add a word in the T9 dictionary using this option. After typing a word, press the left soft key [Save].
- ▶ **Clear text:** Clears any text you have entered.
- ▶ **Exit:** Select this to cancel editing. The written message will not be saved.

Note

- ▶ *When creating a multimedia message, if you upload a picture (50K) you may find that whilst the picture is loading you will not be able to carry out any other actions until the picture has completed loading.*

Inbox

Menu 5.2

You will be alerted when you have received messages. They will be stored in the Inbox.

When you are notified that you have received a multimedia message, you have to wait for the message to be downloaded before you can view it. For notification settings, see Menu 5.9.2.

To read a message, select one of the messages by pressing .

- ▶ **View:** You can view the selected message.
- ▶ **Reply:** You can reply to the sender.
- ▶ **Delete:** You can delete the current message.
- ▶ **Forward:** You can forward the selected message to another party.
- ▶ **Return call:** You can call the sender back.

Messaging

Messaging

- ▶ **Save number:** You can save the number of the sender.
- ▶ **Information:** You can view information about received messages: Sender's address, Subject (only for Multimedia message), Message date & time, Message size.
- ▶ **Multi delete:** You can delete multiple messages using the Mark/Unmark option.
- ▶ **Delete all read:** You can delete all of the read messages.
- ▶ **Delete all:** Cancels all the message transmissions and deletes all of them.

Drafts

Menu 5.3

You can view the messages saved as drafts. The draft messages are listed with the date and time when they were saved. Scroll through the list using up/down navigation keys.

Each draft has the following options. Press  [Options].

- ▶ **View:** You can view the selected message.
- ▶ **Edit:** You can edit the selected message.
- ▶ **Delete:** Deletes the selected message from the drafts folder.
- ▶ **Information:** You can view information about selected message: subject (only for multimedia message), the date and time when saved, message type and size, the priority (only for multimedia message).

- ▶ **Multi delete:** You can delete multiple messages using the Mark/Unmark option.
- ▶ **Delete all:** Deletes all the messages from drafts folder.

Outbox

Menu 5.4

This is a temporary storage place for messages waiting to be sent. Failed messages are also placed in Outbox.

Sent

Menu 5.5

All the messages you send are placed into this folder.

Listen voicemail

Menu 5.6

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network). Before using this feature, you must enter the voice mail number obtained from your service provider.

When a new voice message is received, the  symbol will be displayed on the screen. A long press of the  key will take you directly into your voicemail. Please check with your service operator for details of their service in order to configure the handset correctly.

Info messages

Menu 5.7

(Dependant on network and subscription)

Info service messages are text messages delivered by the network to your handset. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly. In standby mode, the following options are available when viewing info service messages.

Messaging

Messaging

Read (Menu 5.7.1)

When you have received an Info service message and select Read to view the message, it will be displayed on the screen.

Topics (Menu 5.7.2)

- ▶ **View list:** You can see Info service message numbers you have added. If you press [Options], you can edit and delete info message categories.
- ▶ **Active list:** You can select Info service message numbers in the active list. If you activate an Info service number, you can receive messages sent from the number.

Templates Menu 5.8

There are pre-defined messages in a list. You can view and edit the template messages or create new messages. Two types of templates are available: Text and Multimedia.

Text templates (Menu 5.8.1)

The following options are available.

- ▶ **View:** Select this to view the selected template.
- ▶ **Edit:** Use this to edit the selected template.
- ▶ **Send via > Message:** You can create a message with the selected template.
- ▶ **Delete:** Deletes the selected template from the text template list.
- ▶ **New template:** Use this to create a new template.
- ▶ **Delete all:** Deletes all templates.

Picture

You can press, The available one

Settings

Text n

- ▶ **Mes:**
- Text, Ema**
- Usua
- to Te
- into
- your
- availa
- ▶ **Valid**
- servi
- your
- the r
- ▶ **Deliv**
- you c
- mess

Menu 5.8

in a
template
s. Two
Text

5.8.1)

ole.

cted

create

te list.

reate a

es.

Picture templates (Menu 5.8.2)

You can create a picture template after pressing the left soft key [New]. The available options are the same as the ones for text templates above.

Settings Menu 5.9

Text message (Menu 5.9.1)

► Message types:

Text, Voice, Fax, Paging, X.400, Email, ERMES

Usually, the type of message is set to Text. You can convert your text into alternative formats. Contact your service provider for the availability of this function.

- **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- **Delivery report:** If you select On, you can check whether your message was delivered successfully.

- **Reply charging:** When a message is sent, it allows the recipient to reply and charge the cost of the reply to your telephone bill. This feature is dependent on your service provider.

- **Message centre number:** Saves or changes the number of your SMS centre when sending text messages. You must obtain this number from your service provider.

- **Character encoding:** You can set the type of character encoding.

Multimedia message (Menu 5.9.2)

- **Slide duration:** Allows you to configure the duration of each page when writing a message.
- **Delivery time:** Allows you to set how long before the message is sent.
- **Priority:** You can send the message after setting the level of priority: Low, Normal and High.

Messaging

Messaging

- ▶ **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- ▶ **Delivery report:** If it is set to On in this menu, you can check whether your message was delivered successfully.
- ▶ **Read report:** Check whether your message was read. You can choose Yes or No to Request reports for messages, and to Allow reports.
- ▶ **Auto download:** You can set the retrieval mode using Home network and Roaming network respectively. If you select **Automatic**, you will receive multimedia messages automatically. If you select **Manual**, you will only receive a notification message in the inbox and then you can decide whether to download multimedia messages or not.
- ▶ **Network profiles:** In order to download MMS from the server, you need to set up the URL for the multimedia message server.

▶ Permitted message type

- Personal: Personal messages.
- Advertisements: Commercial messages.
- Information: Necessary information.

Voicemail number (Menu 5.9.3)

You can receive voicemail if this feature is supported by your network service provider. When a new voicemail has arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

1. Hold down  key in standby mode.
2. You can check the following submenus.

- ▶ **Home:** You can listen to voice mails by selecting Home.
- ▶ **Roaming:** When you are abroad, you can listen to voice mails if a roaming service is supported.

Service message (Menu 5.9.4)

Receive

You can configure the service message receipt option.

Service loading

You can set to download the service message automatically.

Info message (Menu 5.9.5) (Dependent to network and subscription)

► Receive

- On: If you select this option, your phone will receive Info service messages.
- Off: If you select this option, your phone will not receive Info service messages any more.

► Alert

- On: Your phone will beep when you have received Info service messages.
- Off: Your phone will not beep even though you have received info service messages.

► Languages

- You can select the language you want by pressing [On/Off].
The Info service message will be shown in the language that you have selected.

Orange World

Orange World

Orange World Menu 6.1

Accesses the browser homepage directly.

Web search Menu 6.2

Use the Orange search engine to find almost anything.

TV & Video Menu 6.3

TV listings and gossip, download video clips.

Music & Tones Menu 6.4

Latest news from the Music scene and also download the latest ringtones.

Your account Menu 6.5

You can see your tariff, sign up for text or browsing bundles.

Note

- An additional cost is incurred when connecting to this service and downloading content. Check your data charges with your network operator.

Bookmarks Menu 6.6

This menu allows you to store the URL of favourite web pages for easy access at a later time. Your phone has several pre-installed bookmarks. These preinstalled bookmarks cannot be deleted.

To create a bookmark

1. Press the left soft key [Options].
2. Select New bookmark and press the OK key.
3. After entering the desired URL and title, press the OK key.

Tip

- Use the  key and  key to enter symbols. To enter ".", press .

Enter address Menu 6.7

You can connect directly to the site you want. After entering a specific URL, press the OK key.

Hist

Shows
accesse
these w

Save

The ph
display
pages c

Sett

Netwo

Select
pressin
the pro
launch.

Note

- In cas
SIM A
menu
name
the Si
servic

Menu 6.6

the URL
access
several

the

ns].

ess the

L and

to enter

Menu 6.7

site
ic

History

Menu 6.8

Shows the list of web page titles accessed recently. You can access these web pages again easily.

Saved pages

Menu 6.9

The phone can save the page on display as an offline file. Up to 20 pages can be saved.

Settings

Menu 6.0

Network profiles (Menu 6.0.1)

Select the appropriate profile by pressing the OK key. This will activate the profile to initiate the browser launch.

Note

- In case the SIM card supports SAT(i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card. In case the SIM card does not support SAT services, this menu will be Profiles.

Rendering mode (Menu 6.0.2)

Select between Normal and Optimised.

Cache (Menu 6.0.3)

Clear cache

Removes all context saved in cache.

Allow cache

Set a value whether a connection attempt is made through cache or not.

Cookies (Menu 6.0.4)

Clear cookies

Removes all cookies.

Allow cookies

Check whether a cookie is used or not.

Security Certificates (Menu 6.0.5)

You can see the list of personal certificates that have been stored in your phone.

Orange World

Orange World

Show image (Menu 6.0.6)

Allows you to enable or disable the image display during browsing.

JavaScript (Menu 6.0.7)

Select whether to turn Java script on or off.

Information Menu 6.*

You can view the information for the WAP browser version.

Orange Plus Menu 6.#

My Account (Menu 6.#.1)

View your account balance.

Call Orange (Menu 6.#.2)

Allows you fast access to Orange numbers including Customer Service and Voicemail.

Information (Menu 6.#.3)

Quick links to information on Sport, Lifestyle and Finance.

You can
your ph
easy ac
sounds

Image

Images
downlo
Interne
default
phone,
images
The op
depend
have se

► View
imag

► Dele

► Set a
imag

► Senc
imag

Media album

You can store any multimedia files into your phone's memory so that you have easy access to all of your images and sounds.

Images

Menu 7.1

Images contains an embedded link for downloading images through the Internet and a list of images including default images pre-loaded onto your phone, images downloaded by you and images taken on your phone's camera.

The options which are available to you depend on what type of image you have selected.

- ▶ **View:** You can view the selected image.
- ▶ **Delete:** Deletes the selected image.
- ▶ **Set as:** You can set the selected image as a Wallpaper or Picture ID.
- ▶ **Send via:** You can send the selected image via MMS or Bluetooth.

▶ File

- **Rename:** You can rename the image.
- **Move to folder:** Enables the file to be moved to another folder.
- **Information:** Shows information on the selected image file.

- ▶ **Print via Bluetooth:** Most pictures that you've taken in the camera mode and downloaded through WAP can be transmitted via Bluetooth/Pictbridge to a printer.

- ▶ **Slide show:** You can view a slide show of the files you have stored.

- ▶ **New folder:** You can create a new folder.

- ▶ **Multi delete:** You can remove a number of selected files.

- ▶ **Delete all:** Delete all files in the list.

- ▶ **Sort by:** You can arrange the files under the date, type or name.

- ▶ **List view/Thumbnail view:** You can view the images as a list or as thumbnails.

Media album

Media album

Sounds

Menu 7.2

Sounds contains an embedded link for downloading sounds through the Internet and a list of sounds including default sounds pre-loaded onto your phone, sounds downloaded by you and sounds recorded on your phone.

Others

Menu 7.3

Other files that are not pictures or sounds are stored in this folder.

Your m
easy-to
allows y
share p
family.

Note

► If the
able t

Take

Press tl
> Take p
open th
the Car
camera
the vie

Before
followir

- 1. Res
- 2. Qu
- 3. Sel
5 S
- 4. Vie

Camera

Camera

Your multimedia phone comes with an easy-to-use built-in camera, which allows you to instantly take, view and share pictures with your friends and family.

Note

► If the battery is too low, you may not be able to use the Camera feature.

- 5. Multi shot:** 1 shot, 3 shots
- 6. Effect:** Off, Sepia, Mono, Negative
- 7. White balance:** Auto, Daylight, Incandescent, Cloudy, Fluorescent
- 8. Shutter tone:** Off, Tone1, Tone2, Tone3
- 9. Reset setting:** Yes, No

Take picture

Menu 8.1

Press the Menu key and select Camera > Take picture. Or you can directly open the camera module by a press of the Camera key in standby mode. The camera module opens and you'll see the view finder.

Before shooting, you can set the following options.

- 1. Resolution:** 320x240, 640x480
- 2. Quality:** Normal / Fine / Super fine
- 3. Self timer:** off, 3 Seconds, 5 Seconds, 10 Seconds
- 4. View option:** Full image, Full screen

1. Centre the desired option menu using the left/right navigation keys.
2. Select the desired value with the up/down navigation keys.
3. After setting all the values, focus on the subject to capture and press the Camera key or OK key. With a click, the image is captured and a further menu bar appears.

You can send the image via multimedia message or Bluetooth. Press the left soft key [Options] and select Send via.

Games & Apps

Games & Apps

Games

Menu 9.1

In this menu, you can manage the Java applications installed in your phone.

Applications

Menu 9.2

You can play or delete downloaded applications, or set the connect option.

More games

Menu 9.3

More games is an embedded link for easily downloading games and other applications through the mobile Internet. Please note that additional cost may occur when using download services.

Note

► This service is not available in all countries. Please contact your service provider for further information.

Network profiles

Menu 9.4

Activating a profile

1. Move the cursor to the profile you would like to activate.
2. Press OK key or select Activate from the Options menu.

Adding a new profile

1. Select New profile from the Options menu.
2. Press the left soft key [Save] to save any configuration changes.

nu 9.4

e you

te from

ptions

to save

Java™, is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard MS Internet Explorer browsers, Java MIDlet can be downloaded using a WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed in the Games & Apps menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD or .JAR format.

Games & Apps

Display

Display

Wallpaper

Menu ✕.1

Use this to set up the display on the LCD screen in standby mode.

Backlight timer

Menu ✕.2

You can set the light-up duration of the display.

Brightness

Menu ✕.3

The screen brightness can be adjusted from 25% to 100%.

Orange homescreen

Menu ✕.4

Select whether to display the Orange shortcut menus in home screen or not.

Home screen shortcut

Menu ✕.5

Select whether to display the shortcut icons or not in standby mode.

Theme

Menu ✕.6

You can select which themes to display on the screen.

Menu style

Menu ✕.7

You can select the desired menu style from Grid view and List view.

Standby text

Menu ✕.8

After selecting On, you can write a message on the screen.

Colourful dial font

Menu ✕.9

Select whether to use the colourful dial font or not.

Calendar

When y
appear:
the cur
cursor
navigat
can use

Each pres

You can
the sch
key [O]

► View
mem

► New
a nev

► Sche
Sche

► All s
sche

Organiser

Calendar

Menu 0.1

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using the navigation keys. On the calendar, you can use the following keys.

Each press of	1	skips back a year.
	3	skips forward a year.
	*	skips back a month.
	#	skips forward a month.

You can enter a schedule or memo in the scheduler by pressing the left soft key [Options].

- ▶ **View:** Shows the schedule note or memo for the chosen day.
- ▶ **New schedule:** Select this to enter a new schedule or memo.
- ▶ **Scheduler tone:** You can set the Scheduler tone of each chosen date.
- ▶ **All schedules:** You can display all schedules.

- ▶ **Go to date:** You can go to the chosen date directly.
- ▶ **Delete old:** Select this to delete the expired schedule notes that you have already been notified of.
- ▶ **Delete all:** Select this to delete all the schedule notes and memos.

Memo

Menu 0.2

1. Select the Memo by pressing the left soft key or OK key.
2. If the entry is empty, press the left soft key [New].
3. Input the memo and then press the OK key.

To do

Menu 0.3

You can view, edit and add lists to do. To do lists are displayed in time order. To do lists that have been in progress or completed are displayed. You can send via text/multimedia message or Bluetooth.

Organiser

Organiser

Voice memo

Menu 0.4

You can record voice memos or other sounds.

1. Press the left soft key [Options].
You can set the recording duration.
 - ▶ **General:** 10 minutes
 - ▶ **MMS:** 2 minutes and 30 seconds.
2. Press the OK key to begin recording.
3. Press the OK key to end recording.

Alarm

You can set an alarm to ring off at a specified time.

1. Select [Alarm] from the menu.
2. Select [Daily], [Daily Sat & Sun], or [Once].
3. Select [Set] to set the alarm time.
4. Edit the alarm time and press [Set].

Calculator

The calculator can perform arithmetic operations such as addition, subtraction, multiplication, and division.

1. Enter the number.
2. Press the key for the function you want to perform.

More

Alarm clock

Menu #.1

You can set up to 5 alarm clocks to go off at a specified time.

1. Select On and enter the alarm time you want.
2. Select the repeat period : Once, Daily, Mon ~ Fri, Mon ~ Sat and Sat ~ Sun.
3. Select the alarm tone you want and press OK key.
4. Edit the alarm name and press  [Save].

Calculator

Menu #.2

The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

1. Enter the first number using the numeric keys.
2. Press the corresponding navigation key to select a mathematical function.

Note

- ▶ To erase any mistake or clear the display, use the  key.
 - ▶ To include a plus/minus sign, press the  key [Function].
3. To calculate the result, press OK key.
 4. After calculation, press the left soft key [OK] to return to the initial state.

Stopwatch

Menu #.3

1. Press [Start] to start the timer and record the lap time by pressing [Lap].
2. Press [Stop] to ascertain the record of the lap times.
3. Press [Reset] to return to zero.

More

More

More

Unit converter Menu #.4

This converts any measurement into a unit you want. There are 7 types that can be converted into units: Currency, Area, Length, Weight, Temperature, Volume, Velocity.

1. In the Current unit section select the unit you want to convert using the left/right navigation keys.
2. Move to the Convert unit section by pressing the down navigation key.
3. Select the unit you want to convert to, using the left/right navigation keys.
4. Input numbers using the numeric keys. Conversion is calculated automatically.

Note

- You can input a decimal number by pressing the  key.

World clock Menu #.5

You can view the time in the world's major cities.

There a
accordi

Stand

Person

This co
your ph
allowing
handsfr
operati

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Accessories

Standard Battery



Travel Adapter

This charger allows you to charge the battery whilst away from home or your office.



Personal Handsfree

This connects to your phone, allowing handsfree operation.



Note

- ▶ Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- ▶ Accessories may be different in different regions; please check with our regional service company or agent with any inquiries.
- ▶ If you use data service, we recommend you that you use LG Internet Cube. LG Internet Cube is a more powerful and safer data service(modem). Please do not use the Windows modem provided by Windows OS.

Technical data

Technical data

General

Product name : KP235

System : GSM 900 / DCS 1800

Ambient temperatures

Max : +55°C

Min : -10°C

Declaration of Conformity LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 Terminal Equipment

Model Name

KP235

Trade Name

LG

CE0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1(2005) / EN 301 489-07 v1.3.1(2005) / EN 301 489-17 v.1.2.1(2002)
 EN 60950-1 : 2001
 EN 50360/EN 50361 : 2001
 EN 301 511 V9.0.2
 EN 300 328 V1.6.1 (2004-11)

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

 
Name




Issued Date

Seung Hyoun, Ji / Director

04. DEC. 2007

LG Electronics Logistics and Services B.V.
 Veluwezoom 15, 1327 AE Almere, The Netherlands
 Tel : +31-36-547-8940, e-mail : seokim @ lge.com


 Signature of representative

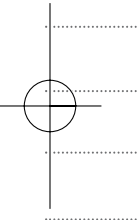   

MEMO

