



ENGLISH



User Guide LG-T320

www.lg.com

P/N : MFL66986701 (1.1)



C€0168

Bluetooth QD ID B016856

LG-T320 User Guide - English

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

This handset has a touch screen keypad and is not recommended for people with impaired vision.



Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-T320 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardised methods with the phone

transmitting at its highest certified power level in all used frequency bands.

- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2 W/kg averaged over 10g of tissue.
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over 1g of tissue.
- The highest SAR value for this model phone tested by

DASY4 for use at the ear is 1.23 W/kg (10g) and when worn on the body is 1.21 W/kg (10g).

Product care and maintenance

WARNING:

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may void any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- Switch off the phone in any area where you are required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock and can seriously damage your phone.
- Do not charge a handset near flammable material as the handset can become hot and create a fire hazard.
- Use a dry cloth to clean the exterior of the unit (do not use solvents such as benzene, thinner or alcohol).

Guidelines for safe and efficient use

- Do not charge the phone when it is on soft furnishings.
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object as it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road safety

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving.

- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause the air bag to fail or cause serious injury due to improper performance.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative when near roads.

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level.

NOTE: Excessive sound and pressure from earphones can causing hearing loss.

Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

Guidelines for safe and efficient use

Potentially explosive atmospheres

- Do not use the phone at a refueling point.
- Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew.

Children

Keep the phone in a safe place out of the reach of small

children. It includes small parts which may cause a choking hazard if detached.

Emergency calls

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

Use your wireless phone to call emergency services for yourself or others in the case of fire, traffic accident or medical emergencies;

- Australia Dial (0-0-0)
- New Zealand Dial (1-1-1)
- International Dial (1-1-2)
- other local emergency number.

Remember, it is a free call on your wireless phone for emergency services.

Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximise the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack maybe recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximise usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.
- If you need to replace the battery, take it to the nearest authorised LG Electronics service point or dealer for assistance.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Guidelines for safe and efficient use

- Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental conditions.

Driver Safety Tips

Your wireless telephone gives you the powerful ability to communicate by voice - almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- Use a hands free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands

free accessories available today.

- Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Jotting down a “to do” list or flipping through your address book takes attention away from your primary responsibility, driving safely.
- If possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when you will not be driving.

- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
- Use your wireless phone to call emergency services for yourself or others. Dial 0-0-0 for local emergency services in the case of fire, traffic accident or medical emergencies in Australia. Dial 1-1-1 for local emergency number in New Zealand. Dial 1-1-2 any where in the world to reach emergency services. Remember, it is a free call on your wireless phone!
- Call roadside assistance or a special nonemergency wireless assistance number when necessary. If you see a broken down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.

Installing the SIM card and the handset battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

 
The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all

SIM cards out of the reach of small children.



Illustrations

Always switch the device off and disconnect the charger before removing the battery.

- 1 Remove the back cover.
- 2 Lift battery away.
- 3 Insert the SIM card.
- 4 Insert the battery pack.
- 5 Attach the back cover.
- 6 Charge the battery.

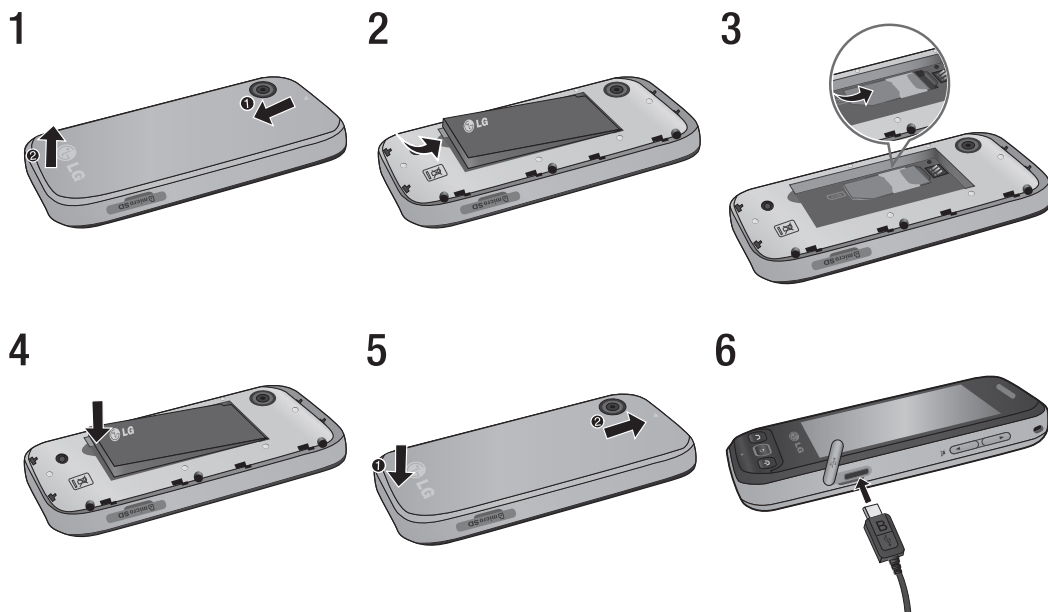

Phone Components

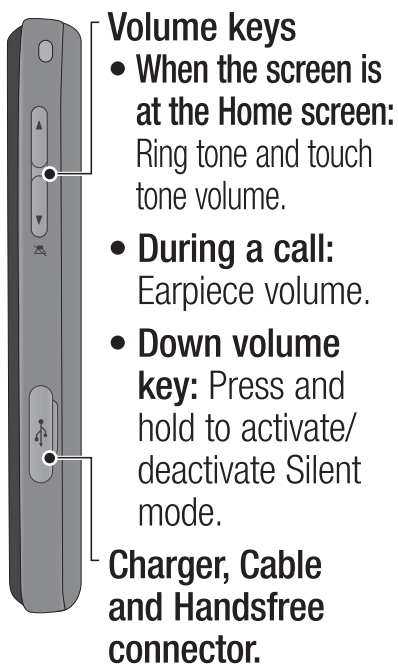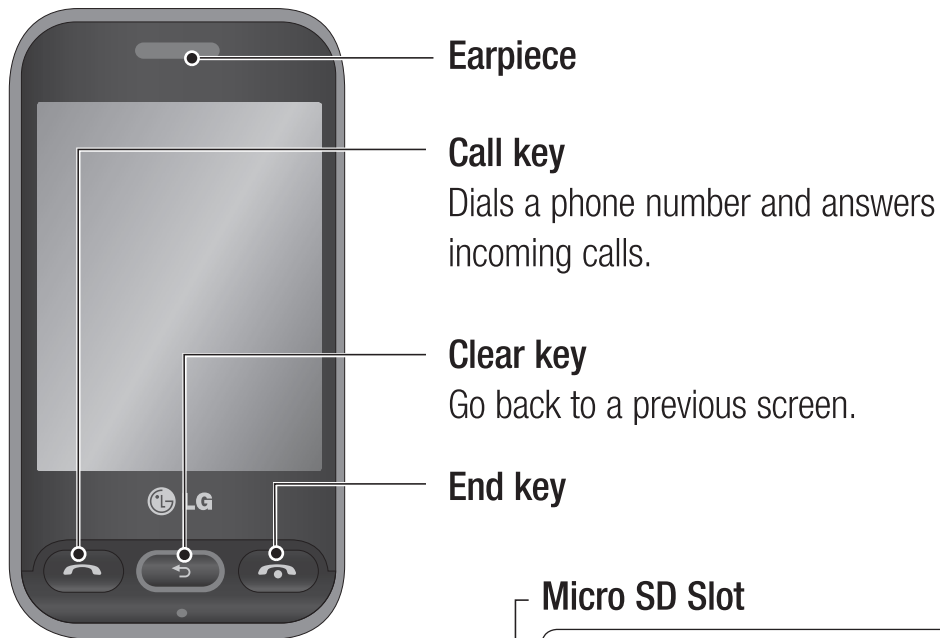  


Micro SD Slot

Note: the Maximum Micro SD card supported by the LG-T320 is 16GB

Power/Lock key

 - Short press to turn on/off the screen.
- Long press for power on/off.




Handsfree or Stereo earphone connector

Using your touch screen

Touch screen tips

 - To select an item, touch the centre of the icon.
- Do not press too hard. The touchscreen is sensitive enough to pick up a light, firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T320 is not in use, it will return to the lock screen.

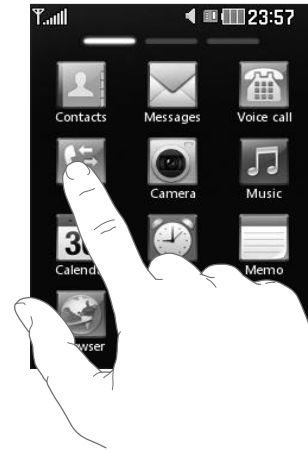

Scrolling

 
Drag from side to side to scroll. On some screens, such as the Logs list, you can also scroll up or down.

Control the touch screen

The controls on the LG-T320 touch screen change dynamically depending on the task you are carrying out.

Opening Applications

To open any application, simply touch its icon.

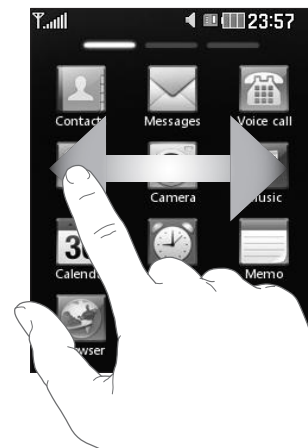

Your home screen

You can drag and click what you need right away in all home screen types.

Active



Widget home screen - When you touch  on the bottom left of the screen, the mobile widget panel appears. When you register widget by dragging it, the widget is created in the spot.

Active

 


Speed dial home screen - When you touch , the speed dial list appears. You can call, send a message or edit the contact directly in this home screen.

Your menu screen

To swap between the menu screens just wipe quickly over the display from left to right, or right to left.


1

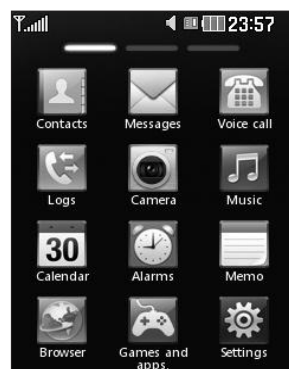

3



 2

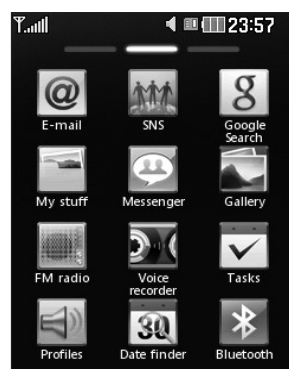

Calls

Making a Call

- 1 Touch  to open the keypad.
- 2 Key in the number using the keypad.
- 3 Touch  to initiate the call.

TIP! To enter + for making an international call, press and hold .

Press the power key to lock the touchscreen to prevent calls being made by mistake.

Making a call from your contacts

- 1 From the home screen touch  to open the **Contacts**.
- 2 Tap the Name field box on the top of the screen and enter the first few letters of the contact you would like to call.

- 3 From the filtered list, touch the Call icon next to the contact you want to call. The call will use the default number if there is more than one for that contact.
- 4 Or, you can touch the contact name and select the number to use if there is more than one for that contact to use. You can also touch  to initiate the call to the default number.

Changing the common call setting

To access Common call settings go to the main menu, then select Settings, chose call settings, and select Common settings.

- **Call reject** - Slide the switch left for ON. You can touch the Reject list to choose All calls, Contacts, Groups, All unknown callers, All unknown numbers.

- **Send my number** - Choose whether to display your number on an outgoing call.
- **Auto-redial** - Slide the switch left for ON or right for OFF.
- **Answer mode**
Press send key: Allows you to only answer an incoming call by pressing the  key.
Press any key: Allows you to answer an incoming call by pressing any key, except the  key.
- **Minute minder** - Slide the switch left to ON to hear a tone every minute during a call.
- **BT answer mode** - Select Handsfree to be able to answer a call using a Bluetooth headset, or select Handset to press a handset key to answer a call.
- **Save new number** - Select ON or OFF to save a new number.

Contacts

Searching for a contact

- 1 Touch **Contacts**.
- 2 You see a list of contacts. Typing in the first letter of a contact's name in the Name field will jump the menu to that alphabetical area of the list.

Adding a new contact

- 1 Touch **Contacts** and touch **Add**.
- 2 Choose whether to save the contact to your **Internal memory** or **SIM**.
- 3 Enter your first and last name.
- 4 You can enter up to five different numbers per contact.
- 5 Add up to two email addresses. You can enter up to two different email addresses per contact.

- 6 Assign the contact to one or more groups. You can assign up to three groups per contact. Choose between **No group, Family, Friends, Colleagues, School** or **VIP**.
- 7 You can also add a **Ringtone, Homepage, Home address, Company name, Job title, Company address, Birthday, Anniversaty** and **Memo**.
- 8 Touch **Save** to save the contact.

Changing your contact settings

You can adapt your contact settings so that your **Contacts** suit your own preferences.

Touch **Options key**  and touch **Settings**.

- **Display name** - Choose whether to display the first or last name of a contact first.
- **Copy** - Copy your contacts from your SIM to Internal memory, or vice versa.
- **Move** - This works in the same way as Copy, but the contact is stored at the new location only. Therefore, once a contact is moved from the SIM to the Internal memory it will be deleted from the SIM memory.
- **Send all contacts via Bluetooth** - Sends all contacts to other handset via Bluetooth.
- **Back up contacts/ Restore contacts** - Save or restore the contacts data to external storage.
- **Delete all contacts** - Delete all your contacts. Touch Yes if you are sure you want to delete all your contacts from internal memory or SIM.

Messaging

Your LG-T320 combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

- 1 Touch **Messages** in the main menu and select **Write message** to begin composing a new message.
- 2 Touch **Insert** to add an image, video, sound, template and so on.
- 3 Touch **To** at the top of the screen to enter the recipients. Then enter the number or touch  to select a contact. You can even add multiple contacts.
- 4 Touch **Send** when ready.



WARNING: If an image, video or sound is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

Entering Text

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method.

Touch to  change between numbers, symbols and text input.

Use **Shift** key to change between capital or lowercase input.

Handwriting recognition

In Handwriting mode you simply write on the screen and your LG-T320 will convert your handwriting into your message.

Setting up your email

Touch **E-mail** in the main menu.

If the email account is not set up, start the email set up wizard and finish it.

You can check and edit settings also you can check the additional settings that were filled in automatically when you created the account.

Changing your text message settings

Touch **Messages** and touch **Settings**. Select **Text message**.

Text message centre - Enter the details of your message centre.

Delivery report - Slide the switch left to receive confirmation that your messages have been delivered.

Validity period - Choose how long your messages are stored at the message centre.

Message types - Convert your text into **Text**, **Voice**, **Fax**, **X.400** or **E-mail**.

Character encoding - Choose how your characters are encoded. This impacts the size of your messages and therefore data charges.

Send long text as - Choose to send long messages as **Multiple SMS** or as an **MMS**.

Changing your multimedia message settings

Touch **Messages** and, touch **Settings** and **Multimedia message**.

Retrieval mode - Choose between **Home network** or **Roaming network**. If you then choose **Manual** you will receive only notifications of MMS and you can then decide whether to download them in full.

Delivery report - Choose to request and/or allow a delivery report.

Read receipt - Choose to request and/or allow a reply.

Priority - Choose the priority level of your MMS.

Validity period - Choose how long your message is stored at the message centre.

Slide duration - Choose how long your slides appear on the screen.

Unsupported attachment - Choose whether the unsupported attachment is restricted or not.

Delivery time - Choose how long to wait before a message is delivered.

MMS centre - Choose one from the list or add a new message centre.

Social network services (SNS)

Your LG-T320 has SNS that lets you enjoy and manage your social network.

TIP: Facebook, Twitter and Myspace are java applications based on java technology.

NOTE: SNS feature is a data intensive application. An additional costs may be incurred when connecting and using online services. Check your data charges with your network provider.

Facebook (Continued SNS)

Home: Log in and you will see your friend's updated status. Input your comment about new status or check others.

Profile: You can select the **Wall > Status updates** and write the current status. See your info detail and upload the photo by touching **Photos > Upload Photo**.

Friends: Search your friends in facebook by selecting Search tap.

Inbox: You can see the Inbox/Sent folder, and write a SN message.

Camera

Taking a quick photo

- 1 Touch **Camera** menu.
- 2 Point the camera to the subject of your photo, touch the  on the right-center of the screen to take a photo.

TIP: To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen.

Touch .

Send - Touch to send the photo as a **Message**, **E-mail** or via **Bluetooth**.

Set as - Touch to set a screen image (Homescreen wallpaper, Lockscreen wallpaper, Contacts image, Incoming call image, Outgoing call image, Startup image and Shut down image).

Rename - Touch to rename the photo.

Edit - Touch to edit the photo.



Touch to delete the image.



Touch to take another photo immediately.



Touch to view a gallery of your saved photos.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

Size - Change the size of the photo to save memory

White balance - Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Colour effect - Choose a color tone for your new photo.

Continuous shot - Position the subject in the viewfinder, then press the capture button as if taking a normal photo. The camera will take shots in quick succession.

Self-timer - The self-timer allows you to set a delay after the shutter is pressed. Select **Off**, **3 seconds**, **5 seconds**, or **10 seconds**. This is ideal if you want to be included in a photo.

Night mode - Useful to use in dark places.

Image quality - Choose between **Super fine**, **Fine**, and **Normal**. The finer the quality, the sharper the photo. However, the file size will increase as a result, which means you'll be able to store fewer photos in the memory.

Select storage - Choose whether to save your photos to the Handset memory or to the External memory.

Hide icons - Choose the camera setting icons to hide manually or automatically.

Show captured image - Choose On to check the picture you took right away.

Shutter sound - Select one of the three shutter sounds.

Grid screen - Choose between **Off**, **Simple cross**, or **Trisection**.

Reset settings - Restore all camera default settings.

Video camera

Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

- 1 Holding the phone horizontally, point the lens towards the subject of the video.
- 2 Press the red dot .
- 3 ● **Rec** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
- 4 To pause the video, touch  and resume by selecting .
- 5 Touch  on screen to stop video recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video runs along the bottom of the screen together with icons down the left and right sides .



Touch to play the video.

Touch .

Send - Touch to send the video as a **Message**, **E-mail** or via **Bluetooth**.

Rename - Touch to rename the video.



Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.



Touch to shoot another video immediately. Your current video will be saved.



Touch to view a gallery of saved videos and images.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. You can change the video camera setting after selecting the option, touch the OK button.

Video size - Change the size of the video to save memory.

Colour effect - Choose a color tone to use for your new view.

White balance - The white balance ensures any the white areas in your video are realistic. To enable your camera to adjust the white balance correctly, you may need to determine the light conditions. Choose between **Auto**, **Incandescent**, **Sunny**, **Fluorescent**, and **Cloudy**.

Quality - Choose between **Super fine**, **Fine** and **Normal**. The finer the quality, the sharper a video will be, but the file size will increase. As a

result, you will be able to store fewer videos in the phone's memory.

Duration - Set a duration limit for your video. Choose between Normal and MMS to limit the maximum size to send as an MMS message.

Select storage - Choose whether to save your videos to the Handset memory or to the External memory.

Audio recording - Choose Mute to record a video without sound.

Hide icons - Select whether to hide the icons in the camera menu automatically or manually.

Reset settings - Reset all the video camera settings.

Music

To access the music player, touch **Music**. From here, you can access a number of folders:

Recently played - Plays the songs you have played recently.

All tracks - Contains the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Transferring music onto your phone

The easiest way to transfer music onto your phone is via Bluetooth or the data cable.

To transfer music using Bluetooth:

- 1 Make sure both devices have Bluetooth switched on and are connected to each other.
- 2 Select the music file on the other device and select send via Bluetooth.
- 3 When the file is sent, you will have to accept it on your phone by touching **Yes**.
- 4 The file should appear in **Music > All tracks**.

Managing files

You can store multimedia files in your phone's memory so you have easy access to all your pictures, sounds, videos and games. You can also save your files to a memory card. Using a memory card allows you to free up space in your phone's memory.

By touching **My stuff**, you can open a list of the folders that store all your multimedia files.

Games and Applications

You can download new games and applications to your phone to keep you entertained.

Application

Adding an event to your calendar

- 1 From the main menu touch **Calendar**.
- 2 Select the date you would like to add an event to.
- 3 Touch **Add**.

Setting your alarm

- 1 Touch **Alarms**.
- 2 Touch **Add**, then you can set and save your alarm in this menu.

Voice recorder

Use your voice recorder to record voice memos or other audio files.

Using your calculator

- 1 Touch **Calculator**.
- 2 Touch the number keys to enter numbers.

Converting a unit

- 1 Touch **Unit converter**.
- 2 Choose whether you want to convert **Currency, Area, Length, Weight, Temperature, Volume or Velocity**.
- 3 Then select the unit and enter the value you would like to convert from.

Using your FM radio

- 1 Touch **FM radio**
- 2 Touch **FM radio** then touch the channel number of the station you would like to listen to.

NOTE: You will need to insert your headphones in order to listen to the radio. Insert them into the headphone socket.

TIP! To improve the radio reception, extend the headset cord, which functions as the radio antenna.

PC Suite

You can synchronise your PC with your phone to make sure all your important details and dates match. You can also backup your files to put your mind at ease.

Installing the LG PC Suite on your computer

- 1 Touch **Settings** and select **Connectivity**.
- 2 Select **USB connection mode** and click **PC Suite**.
- 3 Connect handset and PC via USB cable and wait for a while. Installation guide message will be displayed.
- 4 Follow the instructions on the screen to complete the LG PC Suite Installer wizard.
- 5 Once installation is complete, the LG PC Suite icon will appear on your desktop.



WARNING: Do not disconnect your phone during the transfer.

The web

Browser gives you a fast, full-colour world of games, music, news, sport, entertainment and loads more, straight to your mobile phone. Wherever you are and whatever you're into.

Accessing the web

- 1 Touch the **Browser**.
- 2 To go straight to the browser home page, select **Home**. Alternately, select **Enter address** and type in the URL, followed by **Connect**.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Access to Google Search

To launch Google Search from the main menu, select **Google Search**.

Settings

Personalising your profiles

You can quickly change your profile through the main menu.

- 1 Touch **Profiles**.
- 2 Choose the profile you want to edit.
- 3 You can then change all the sounds and alert options available in the list, including your Ringtone and Volume, Message tone settings and more.

Changing your display settings

From the home screen, touch  then select **Settings** and choose **Display settings**.

Wallpaper - Choose the theme for your home screen or lock screen.

Font - Adjust the font style & size.

There are two style options:
Default and Mint style.

There are four size options:
Small, Medium, Large and Very large.

Brightness - Adjust the screen brightness.

TIP! The longer the backlight is on for the more battery power is used and you may need to charge your phone more often.

Theme - Choose the theme for menus. You can also adjust the style.

Greeting message - Choose ON or OFF and fill in the greeting message in the text field.

Incoming / Outgoing call image - Choose an image for Incoming or Outgoing a call.

Startup / shutdown image - Choose an image for switching on/off the phone.

Network name - Choose ON or OFF.

Changing your device settings

Use the freedom of adapting the LG-T320 to your own preferences.

From the home screen, touch  then select **Settings** and choose **Device settings**.

Date and time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving options.

Power save - Choose to switch the factory set power saving setting of/off.

Languages - Change the language of your LG-T320 display.

Auto-lock - Lock the keypad automatically in the home screen.

Security - Adjust your security settings, including PIN codes and handset lock.

NOTE: The default Security code is "0000".

Memory info - See using memory manager for more information.

Reset settings - Restores all settings to their factory defaults.

Information - View the technical information for your LG-T320.

Using memory manager

From the home screen select  then scroll to Settings, then touch Device settings, and select Memory info. This menu allows you to see the status of different memory types (Internal memory, external memory if inserted and Usim memory), as well as being able to set the default memory location, choose between Internal memory or External memory. Select **Memory info**.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings Touch **Connectivity**.

From the Main menu, touch Settings, then select Connectivity.

From here you can check the different connectivity settings.

The options available are:

Network settings: allows access to select your network (either manually or automatically), change your Network mode (choose between Automatic or GSM only), and you can view your preferred network list (if supported on the SIM).

Internet profiles: you can view the different Internet profiles preloaded on your handset and add new ones if required.

Access points: here you can view the preloaded access points preloaded on your handset and add new ones if required.

Packet data conn.: allows you to set how your phone should be connecting to data (choose from When available or When needed). Check with your service provider before changing.

USB connection mode: Select what mode your handset should enter when you connect it to USB.

(Select from PC internet, Mass storage, PC Suite, and Always ask)

Java settings: from here you can check your certificates list and change the active java profile. Check with your service provider before making changes

Streaming settings: allows you to select a different streaming profile or add a new one. Check with your service provider before changing these settings.

Sending and receiving your files using Bluetooth

To send a file:

- 1** Open the file you want to send, typically this will be a photo, video or music file.
- 2** Choose **Send via**. Choose **Bluetooth**.
- 3** If you have already paired the **Bluetooth** device, your LG-T320 will not automatically search for other **Bluetooth** devices. If not, your LG-

T320 will search for other **Bluetooth** enabled devices within range.

- 4** Choose the device you want to send the file to.
- 5** Your file will be sent.

To receive a file:

- 1** To receive files, your Bluetooth must be both **ON** and **Visible**. See **Changing your Bluetooth settings** below for more information.
- 2** A message will prompt you to accept the file from the sender. Touch Yes to receive the file.
- 3** You will see where the file has been saved. For image files, you can choose to **View** the file. Files will usually be saved to the appropriate folder in **My stuff**.

Changing your Bluetooth settings:

From the main menu, select Bluetooth.

From here you can turn Bluetooth on or off, you can also see a list of paired devices. To edit your Bluetooth settings, select  and choose Settings. From here you can check My device visibility (choose from Visible, Hidden, or Visible for 1 min), My device name (enter a new name for your handset), Supported services (check what services are supported by the LG-T320), My Bluetooth address (views your Bluetooth address).

Pairing with another Bluetooth device

By pairing your LG-T320 and another device, you can set up a passcode protected connection.

1 Check that your Bluetooth is **ON** and **Visible**. You can change your visibility in the **Settings** menu.

2 Touch **Search**.

3 Your LG-T320 will search for devices. When the search is completed, **Retry** will appear on screen.

4 Choose the device you want to pair with and enter the passcode, then touch **OK**.

5 Your phone will then connect to the other device, on which you will need to enter the same passcode.

6 Your passcode protected Bluetooth connection is now ready.

7 Select how you want to connect to the device (select ask always or allow without ask).

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> → select country → Support.

 
This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you mobile phone.

Accessories

These accessories are available for use with your LG-T320.

Charger

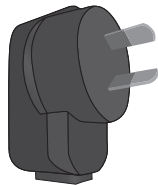


Stereo headset



Battery



 Data cable

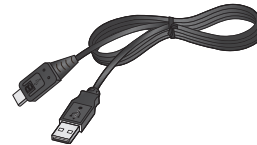

NOTE

- Always use genuine LG accessories.
- Failure to do this may void your warranty.
- Accessories may vary in different regions.

Technical data

Ambient Temperatures

Max.: +55°C (discharging) +45°C (charging)

Min.: -10°C

Declaration of Conformity LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

LG Twin Tower 20, Yeouido-dong, Yeongdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

GSM 850 / E-GSM 900 / DCS 1800 / PCS 1900 Quad Band and WCDMA Terminal Equipment

Model Name

LG-T320

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.8.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v2.1.1 / EN 301 489-24 v1.4.1
EN 300 328 v1.7.1
EN 60950-1:2006
EN 50360:2001 / EN62209-1:2006
EN 301 511 v9.0.2
EN 301 908-1 v3.2.1 / EN 301 908-2 v3.2.1

Supplementary Information

The conformity to above standards is verified by the following Notified Body(BABT)

BABT, Forsyth House, Churchfield Road, Walton-on-Thames, Surrey, KT12 2TD, United Kingdom
Notified Body Identification Number : 0168

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Doo Haeng Lee / Director

Issued Date

06. Sep. 2010

LG Electronics Inc. - EU Representative
Veluwezoom 15, 1327 AE Almere, The Netherlands


Signature of representative

Troubleshooting

This chapter lists some problems you might encounter while using your phone. Some problems require you to call your service provider, but most are easy to correct yourself.

Message	Possible Causes	Possible Corrective Measures
USIM error	There is no USIM card in the phone or it is inserted incorrectly.	Make sure that the SIM card is correctly inserted.
No network connection/ Loosing network	Weak Signal outside of GSM network area Operator applied new services	Move towards a window or into an open area. Check the network operator coverage map. See if the SIM card is older than 6~12 month. If so, change your SIM at the office of your network provider.
Codes do not match	To change a security code, you will need to confirm the new code by entering it again. The two codes you have entered do not match.	The default code is [0000]. If you forget the code, contact your service provider.
Any application cannot be set	Not supported by service provider or registration required	Contact your service provider.

Message	Possible Causes	Possible Corrective Measures
Calls not available	Dialing error	New network not authorised.
	New SIM card inserted	Check for new restrictions.
	Prepaid charge limit reached	Contact your service provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed long enough	Press the On/Off key down for at least two seconds.
	Battery is not charged	Keep charger attached for a longer time Clean the contacts.
	Battery contacts are dirty	Take out the battery and insert again.
Charging error	Battery is not charged	Charge battery.
	Outside temperature is too hot or cold	Make sure phone is charging under normal temperatures.
	Contact problem	Check the charger and connection to the phone. Check the battery contacts and clean them if necessary.
	No voltage	Plug into a different socket.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Touch function doesn't work or is abnormal	Touchpad calibration fault	Perform the touchpad calibration via phone setting menu.

Troubleshooting

Message	Possible Causes	Possible Corrective Measures
Number not permitted	The Fixed Dial Number function is on.	Check settings.
Impossible to receive/send SMS & Picture	Memory full	Delete some existing messages in the phone.
Files not open	Unsupported file format	Check the file format that can be supported
SD Card not working	FAT 16 file system supported only	Check SD card file system via card reader or format SD card using phone
The screen does not turn on when I receive a call.	Proximity sensor problem	If you use any protection tape or case, check it is covered the area around proximity sensor Make sure that the area around the proximity sensor is clean.
No sound	Vibration or manner mode	Check the setting status of sound menu to make sure you are not in vibrate or silent mode.
Hang up or freeze	Intermittent software problem	Take out the battery and insert battery. Turn on the phone. Try to do software update service via web site

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]

[illegible]