

User Guide

1. Welcome

Congratulations on your purchase of GC222, the compact and multi functional handset from Micromax. Your GC222 handset supports both GSM as well as CDMA networks. This beautiful handset comes with the following features:

- **Camera:** - It has a camera which helps you capture images on the go.
- **Wireless FM Radio:** - You can tune in to your favorite FM stations with this feature.
- **LED Flashlight:** - The powerful flashlight comes handy and useful.
- **Bluetooth:** - You can send and receive files, images etc, using this feature.
- **GSM+CDMA Support:** - This handset is equipped to support two SIM cards
- **WAP:** - You can browse the internet using WAP settings.
- **MMS:** - Send and receive multimedia messages using this feature.
- **Memory Card Support:** - This handset can support memory card.

Table of Contents

1.	WELCOME	1
2.	PHONE LAYOUT	4
3.	GETTING STARTED	5
3.1	Insert SIM	5
3.2	Insert Memory Card	6
4.	HOW TO USE YOUR PHONE	7
4.1	Switch On/OFF	7
4.2	Lock/Unlock the phone	7
4.3	Make a Call	7
4.4	Answer/Reject a call	8
4.5	Make an International call	8
4.6	Send Messages	8
4.7	Add contacts to Phonebook	8
4.8	Browse the Net	8
4.9	Use Multimedia Features	9
5.	NOTABLE FEATURES	9
5.1	LED Flashlight	9
5.2	Bluetooth	9
5.3	Blacklist	10
5.4	Auto Redial	10

User Guide

5.5	Auto Quick End	10
5.6	Auto Record	10
5.7	Privacy Protection	11
5.8	Phone Language	11
5.9	Phone Security	11
5.10	Text reader	11
5.11	Useful Tips	12
6.	SAFETY PRECAUTIONS	12
7.	TAKING CARE OF YOUR DEVICE	13

2. Phone Layout



1	Receiver	8	OK Key
2	Screen	9	Keypad
3	Call Key 'G/C'	10	Camera
4	Call Key 'G'	11	Speaker
5	Right Selection Key	12	USB jack

User Guide

6 End/Power Key

13

* Key

7 Navigation keys

14


Key

3. Getting Started

3.1 Insert SIM



1. Switch off the mobile phone and remove the rear cover and battery.
2. Insert the SIM card correctly in the card slot(s) as shown below.

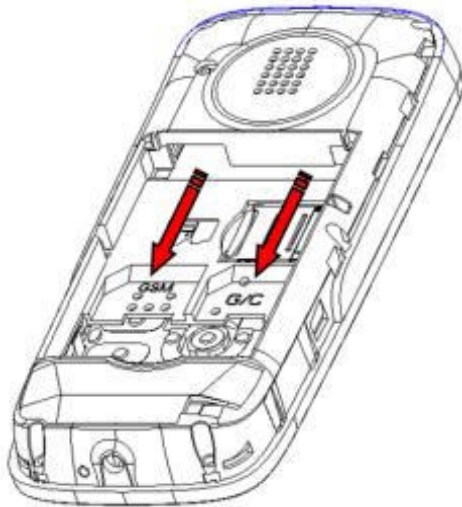

3. Finally, insert the battery and replace the rear cover of the mobile phone.




Please charge the battery before you use the newly purchased phone. We suggest you to charge the battery for at least 4 hours continuously for the first time.

3.2 Insert Memory Card



1. Switch off the phone and remove the rear cover and the battery.
2. Open the memory card slot, and insert the memory card into the slot.

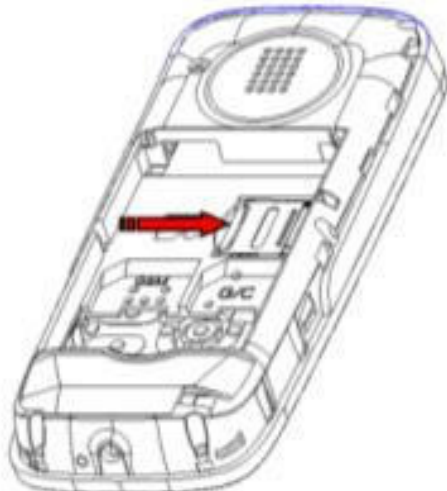

3. Close the memory card slot.
4. Finally, insert the battery and the rear cover of the mobile phone.



The Memory Card gives you extra storage capacity for content such as pictures, music and video clips.



Do not remove the memory card while reading or writing to the card. Doing so may cause data corruption on the card or on the phone.

User Guide



Use only compatible memory cards approved by Micromax. Incompatible cards may damage the slot or corrupt the data stored in the card.

4. How to use Your Phone

4.1 Switch On/OFF

Long Press the End/Power key to switch on and off your phone.

4.2 Lock/Unlock the phone



From the home screen Press Call key 'G/C' and then immediately press *key to lock the keypad.

To unlock, press Call key 'G/C' and then immediately press *.

4.3 Make a Call



Dial a number and press either call key 'C' or 'G' to make a call. You can also call a number from the phonebook or dialed or missed call list in the same way.

4.4 Answer/Reject a call



To answer, press call key 'G/C' or 'G'. To reject, press End/Power key.

4.5 Make an International call



From the home screen, long press the * key till + displays on screen. Enter the desired international code and then complete the phone number and make the call.

4.6 Send Messages



You can compose a new message or reply to existing messages in the list.

You can also send and receive multimedia messages.

4.7 Add contacts to Phonebook



Menu>Phonebook>Add new contact

This feature enables you to add new contacts.

4.8 Browse the Net



You can use WAP for browsing your favorite websites.

You can connect to the Internet via GPRS connection. For this you need to set up a data account.

1. Go to **Menu>Connectivity>Data account**

User Guide

2. Select the desired data account from the list of data accounts listed by your network provider's SIM.

By default, your network provider sends the data account and WAP settings via SMS, or it comes with your SIM card. You can thus choose from the listed data accounts. If the Data accounts are not listed by default, please contact your network provider for the same.

After this you can browse your favorite websites.

4.9 Use Multimedia Features

Menu>Multimedia

You can use Camera, Image viewer, Video recorder, Video player, Music, Sound recorder, FM radio and File Manager.

5. Notable Features

5.1 LED Flashlight



Long press the 0 key to turn on/off the flashlight.

5.2 Bluetooth



Menu> Connectivity>Bluetooth

Turn on Bluetooth to exchange data with other Bluetooth enabled devices.

5.3 Blacklist

Menu>Settings>Call Settings>Blacklist

This feature will allow you to stop receiving calls from the blacklisted numbers.

5.4 Auto Redial

Menu>Settings>Call Settings>Auto Redial

Switching this feature on will automatically redial a dialed number.

5.5 Auto Quick End

Menu>Settings>Call Settings>Auto quick end

You can set the time limit after which the call will get automatically disconnected.

5.6 Auto Record

Menu>Settings>Call Settings>Auto Record

You can automatically record calls by turning on this feature.

User Guide

5.7 Privacy Protection

Menu>Settings>Security Settings>Privacy Protection

You can protect the data stored in the folders of Call log, Phonebook, Message, Multimedia and File manager. The default password is 0000.

5.8 Phone Language



Menu>Settings>Phone Settings>Language

You can change the phone language according to your preference.

5.9 Phone Security



Menu>Settings>Security settings> Phone security

You can set the password to lock the phone. Default password is 0000.

5.10 Text reader



Menu>Organizer>Text reader

This feature allows you to read electronic content.

5.11 Useful Tips

Tips	Description
IMEI Number	You can find the IMEI Number of your phone by pressing *#06#.
Msg. Templates	To save time writing messages, you can use message template.
Timed ON/OFF	You can set time to automatically switch ON/OFF your phone.
SAR Value	You can find the SAR values by pressing *#07# (applicable to India only).

6. Safety Precautions

Please read these simple guidelines. Not following them may be dangerous or illegal.



Safe Driving

- Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.
- Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.



During Flight

Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.

User Guide



In Hospitals

- Your Phone's radio waves may interfere with the function of inadequately shielded medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so.
- To avoid potential interference with implanted medical devices such as a pacemaker or cardioverter defibrillator:
- Always keep your phone at least 15.3 centimeters (6 inches) from the medical device.
- Do not carry the wireless device in a breast pocket.
- Turn off the phone if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.
- If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.



Unsafe Areas

Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.

7. Taking Care of Your Device



- Keep the device dry. Precipitation, humidity, and all types of liquids or

moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery without turning on the device, wipe it with a dry cloth and take it to the service center.

- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide. Repairing this phone by yourself other than our authorized service agents/centers goes against the warranty rules.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time.
- Use manufacturer approved batteries, chargers, accessories and supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.



Battery Recommendations

- Please put the battery in a cool and well-ventilated place out of direct sunlight. We recommend you to charge the battery at room temperature range.
- Batteries have life cycles. If the time that the battery powers equipment becomes much shorter than usual, the battery life is at an end. Replace the battery with a new battery of the same make and specification.
- Use manufacturer approved batteries, chargers, accessories and

User Guide

supplies. Micromax will not be held responsible for user's safety when using unapproved accessories or supplies.

- Do not discard the battery with household trash. Please dispose of used battery according to your local environmental laws and guidelines.
- Warnings on Battery:
 - Please use appointed battery in case of explosion risk.
 - Please dispose of lifeless battery under guidance.



Recycle Your Phone



The WEEE logo (shown at the left) appears on the product (battery, handset, and charger) to indicate that this product must not be disposed off or dumped with your other household wastes. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste.

Collection and proper recovery of your electronic waste equipments at the time of disposal will allow us to help preserve the environment. Recycling of the electronic waste equipment will ensure safety of human health and environment. For more information on best practices for disposal of electronic and electrical waste, please visit to our web site: www.micromaxinfo.com/weee.php.



Disclaimers

- The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation

purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.

- Micromax keeps the right to make modifications to the content in this user guide without any prior notice.
- The functions explained or listed in this manual may differ from the actual functions appearing in the mobile phone. In such a case, the latter shall govern. We do not guarantee the absolute accuracy of the User Guide Vis-a vis the actual handset.



Copyright

This manual may not be reproduced, distributed or translated in part or in whole in any form or any means without the prior written permission of Micromax Informatics Ltd.